

# Assembly Instructions


**Caution : You must read this before you proceed**

## **Care & Maintenance**








- ∅  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ∅  • Do not put hot items directly on furniture surface.
- ∅  • Do not clean furniture with harsh cleansers or polish.
- ∅  • Do not place furniture under direct sunlight.
- ∅  • Do not place furniture near heating or cooling vents.
- ∅  • Do not write on furniture without a padded barrier to protect the surface.
- ∅  • Do not place furniture outside . For indoor use only.
- ∅  • Stains may be removed with mild soap solution and damp cloth.
- ∅  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in small carton for hardware packs and legs.  
Sets often ship in multiple boxes and may arrive a day or two apart.

# SOFA

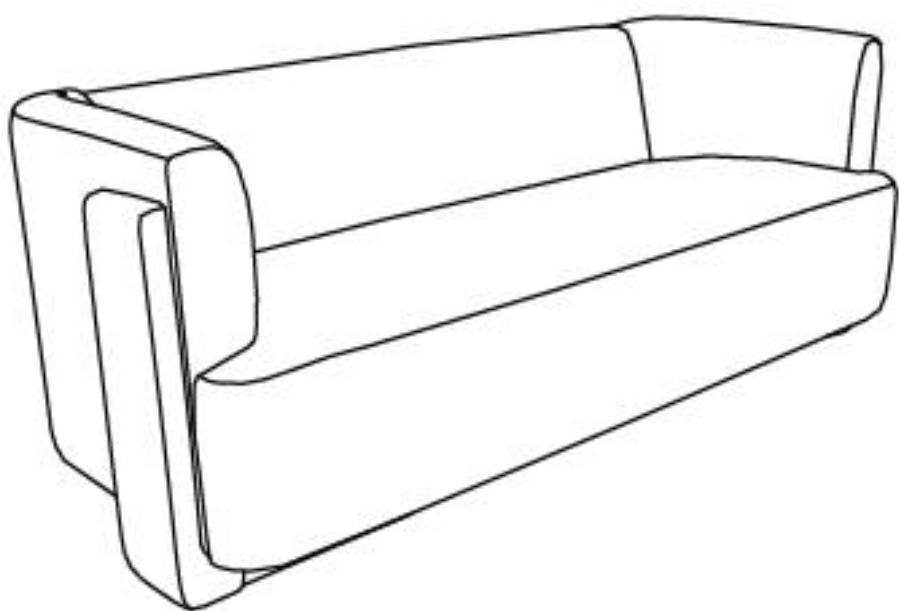

## Parts List

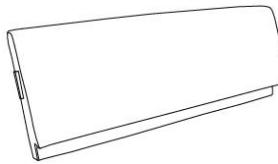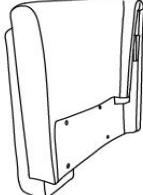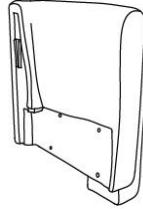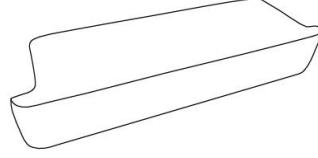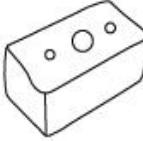Label	Picture	Description	QTY
A		Backrest	1
B		Left Armrest	1
C		Right Armrest	1
D		Seat	1
E		Front Crossbar	1
F		Back Crossbar	1
G		Back Leg	2
Carton A N771P418614	A*1,D*1,E*1,F*1,G*2,Hardwares		
Carton B N771P418615	B*1,C*1		

# Hardwares


Label	Picture	Description	QTY
①		Bolt (M8*70 MM)	17
②		Washer(M8*22)	13
③		Spring Washer(M8)	13
④		Allen Wrench	1
⑤		Bolt (M8*50 MM)	3
⑥		Washer(M8*16)	7

## Assembly Preparation

Before Beginning Assembly:	Ax1	Bx1	Cx1	①	x17	④	x1
	Dx1	Ex1	Fx1	②	x13	⑤	x3
	Gx2			③	x13	⑥	x7

	• Read instructions, cover to cover-
	• Have 2 adults on hand for assembly-
	• Do not assemble on flooring or carpet-
	• Assemble on a clean non-marring surface (packing foam)-
	• Save all packaging until finished-

# Assembly Steps

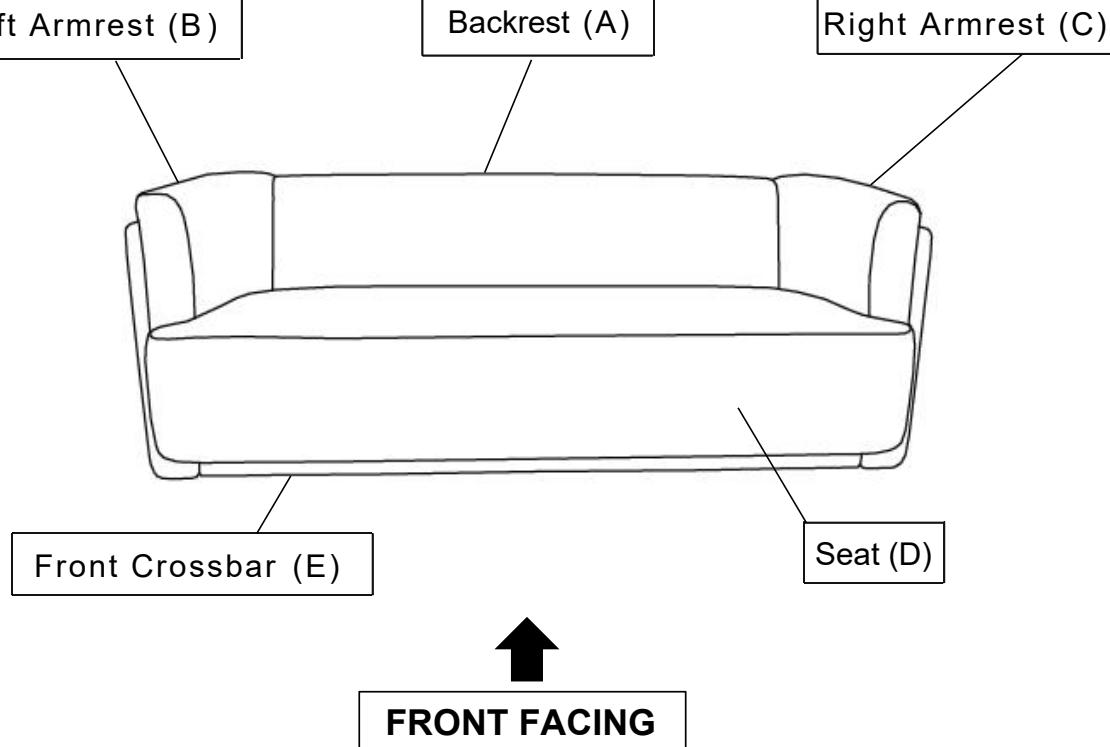

This Sofa has multiple parts and may require up to 30 minutes to assemble.


To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.

## Step 1

Carton A-N771P418614

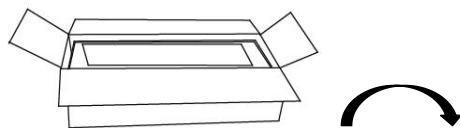

A





D

E

F

G


Hardwares box

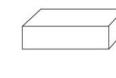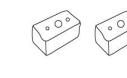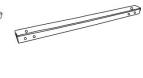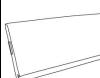

Take out the Backrest(A),Seat(D),Front Crossbar(E),Back Crossbar(F),Back Legs(G) and Hardware box from the Carton A,place it on a clean, non-marring surface.


## Step 2

Carton B-N771P418615

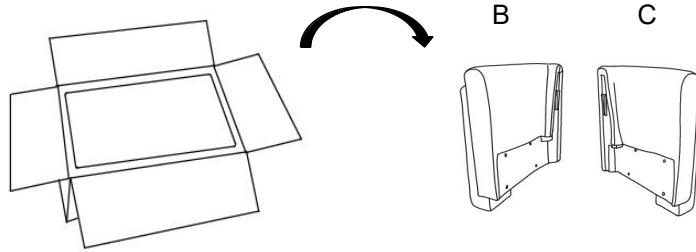

Take out the Left Armrest(B) and Right Armrest(C) from the Carton B and place them on a clean, non-marring surface.

## Step 3

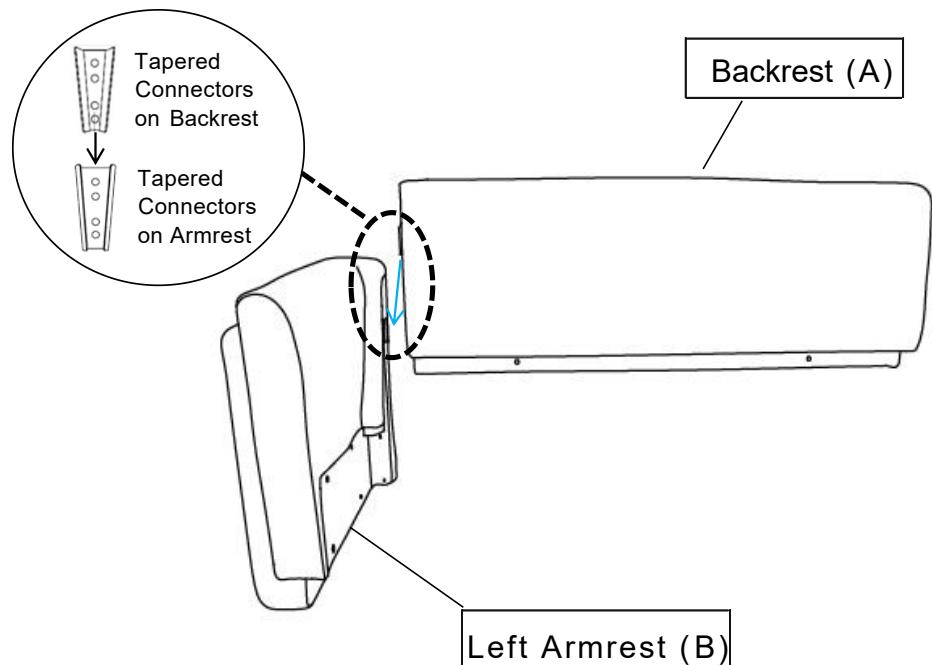

With the assistance from your adult partner:

Lift the Backrest(A) up, make sure the Backrest(A) is vertical and aligned to the Left Armrests(B).

Align the Tapered Connectors on the Backrest(A) with those on the Left Armrests(B).

Your adult partner may need to push the Armrests in towards the Backrest(A) to allow for better alignment.

Slip and Slide the Backrest, in a gradual and balanced manner into the Tapered Connectors.


Push the Backrest(A) downwards until it is fully slotted and locked into position.

**Note: Make sure the Tapered Connectors on the Backrest(A) lock into the Tapered Connectors on Left Armrests(B) .**


**Fully locked position: Check and assess that the base of the Backrest(A) and Left Armrests(B) are aligned and level.**

## Step 4

Left Armrest (B)      Backrest (A)      Right Armrest (C)

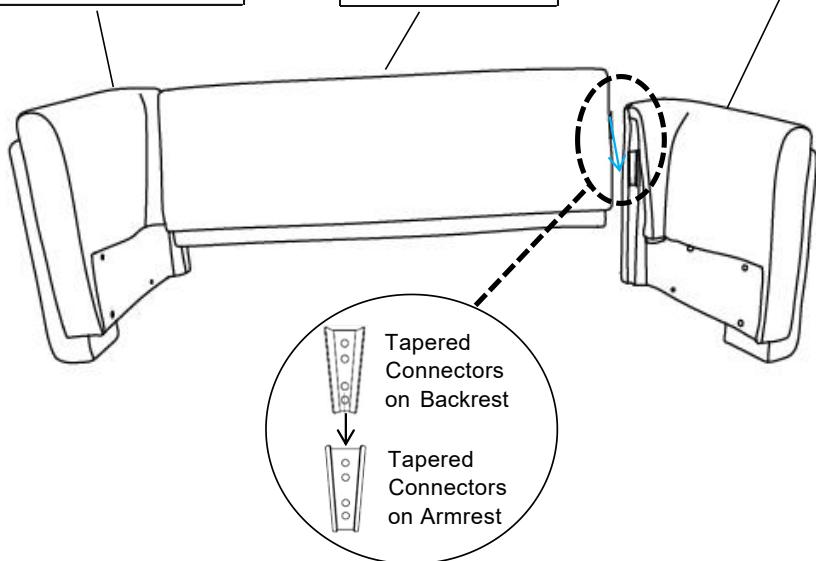

4.1

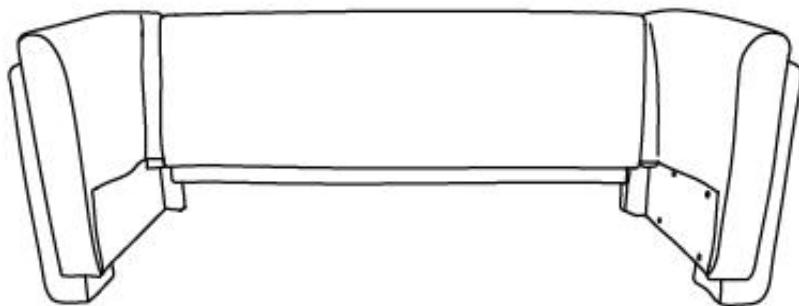

4.2

With the assistance from your adult partner:

4.1) Lift the Backrest(A) up, make sure the Backrest(A) is vertical and aligned to the Right Armrests(C).

Align the Tapered Connectors on the Backrest(A) with those on the Right Armrest(C).

Your adult partner may need to push the Armrests in towards the Backrest(A) to allow for better alignment.


Slip and Slide the Backrest, in a gradual and balanced manner into the Tapered Connectors.

4.2) Push the Backrest(A) downwards until it is fully slotted and locked into position.

**Note: Make sure the Tapered Connectors on the Backrest(A) lock into the Tapered Connectors on Right Armrest(C) .**

**Fully locked position: Check and assess that the base of the Backrest(A) and Right Armrest(C) are aligned and level.**

## Step 5

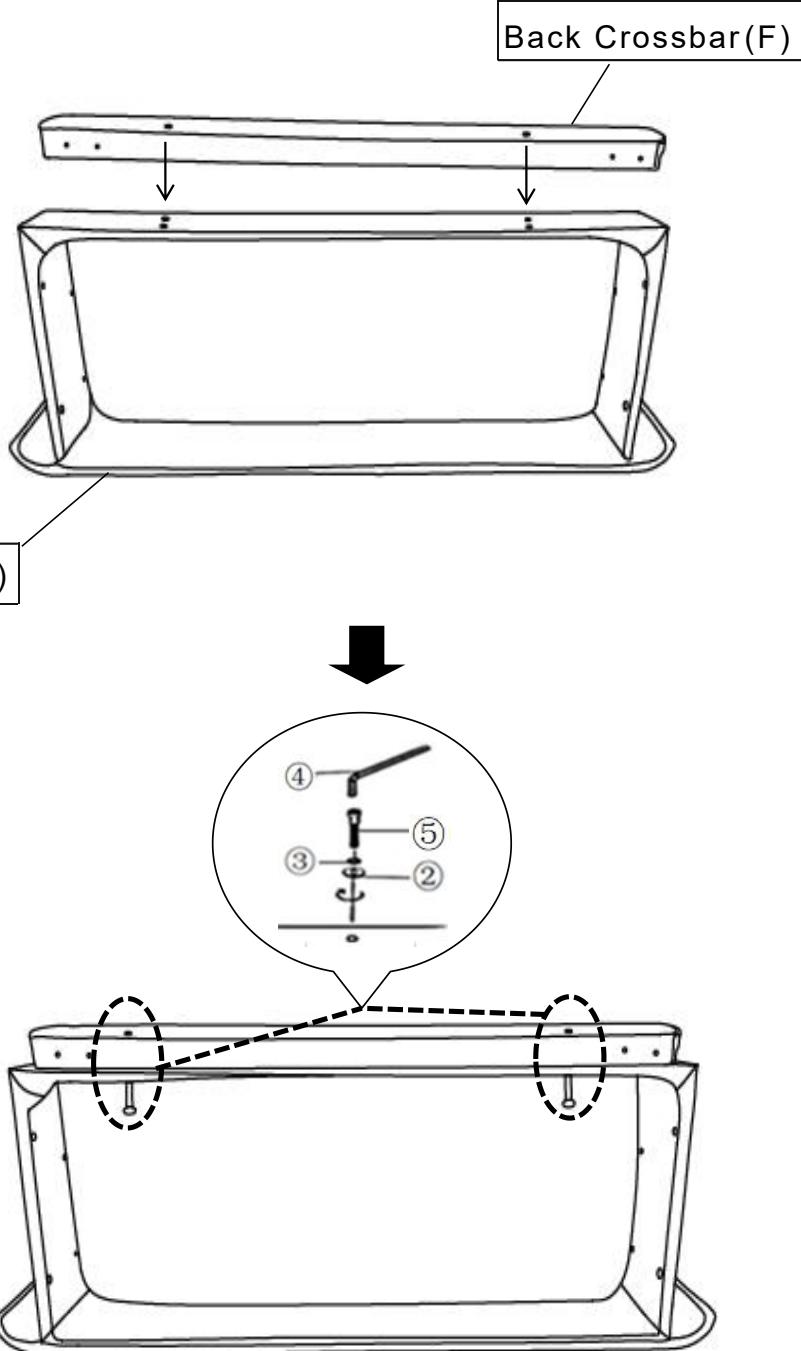


Shown as above picture, tilt the Seat(D) and lay it on a flat surface.

Put Back Crossbar(F) onto the Seat(D) using 2 Bolts(⑤),2 Spring Washers(③) and 2 Washer(②) with the Allen Wrench(④).

**Note:Please use the Bolts(⑤), the shorter one in this step.**

**Tighten the bolts completely.**

## Step 6

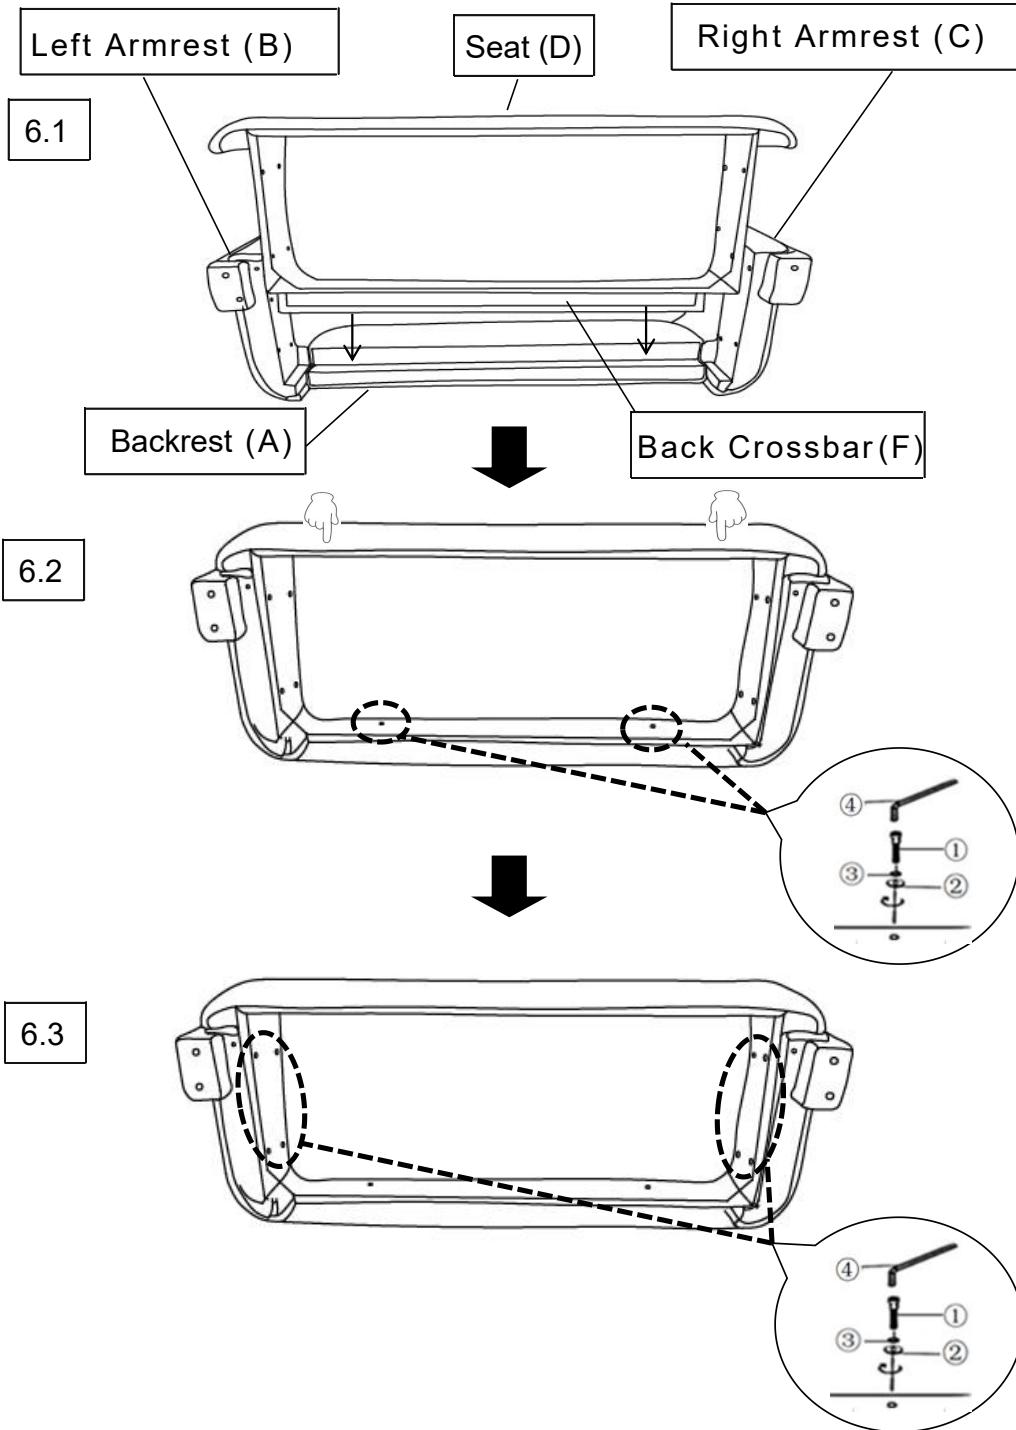

With the assistance from your partner.

6.1) Shown as above picture, Place the assembled components from Step 4 flat on a smooth surface, and then position the Seat (D) on the Backrest(A).

6.2) Attach the Seat(D) to Backrest(A) using 2 Bolts(①),2 Spring Washers(③), and 2 Washers(②) with the Allen Wrench(④).

**Note: With the assistance from your partner. Press down the Seat(D) to the Backrest (A), until the Bolts can screw in the nuts on the Backrest (A) through the holes on the Seat (D). Fully tighten the two Bolts between Seat (D) and Backrest (A)**


6.3) With the assistance from your partner. Press down the Seat(D) to the Backrest (A) Attach the Seat(D) to the Left Armrest(B) & the Right Armrest(C) using 8 Bolts(①),8 Spring Washers(③), and 8 Washers(②) with the Allen Wrench(④).

**DO NOT fully tighten a Bolt in one go and then move on to the next.**

**Rather, In a sequential manner, gradually tighten each Bolt until all Bolts are evenly secured.**

**This methodology will ensure maximum evenness once all Bolts are fully tightened.**

## Step 7

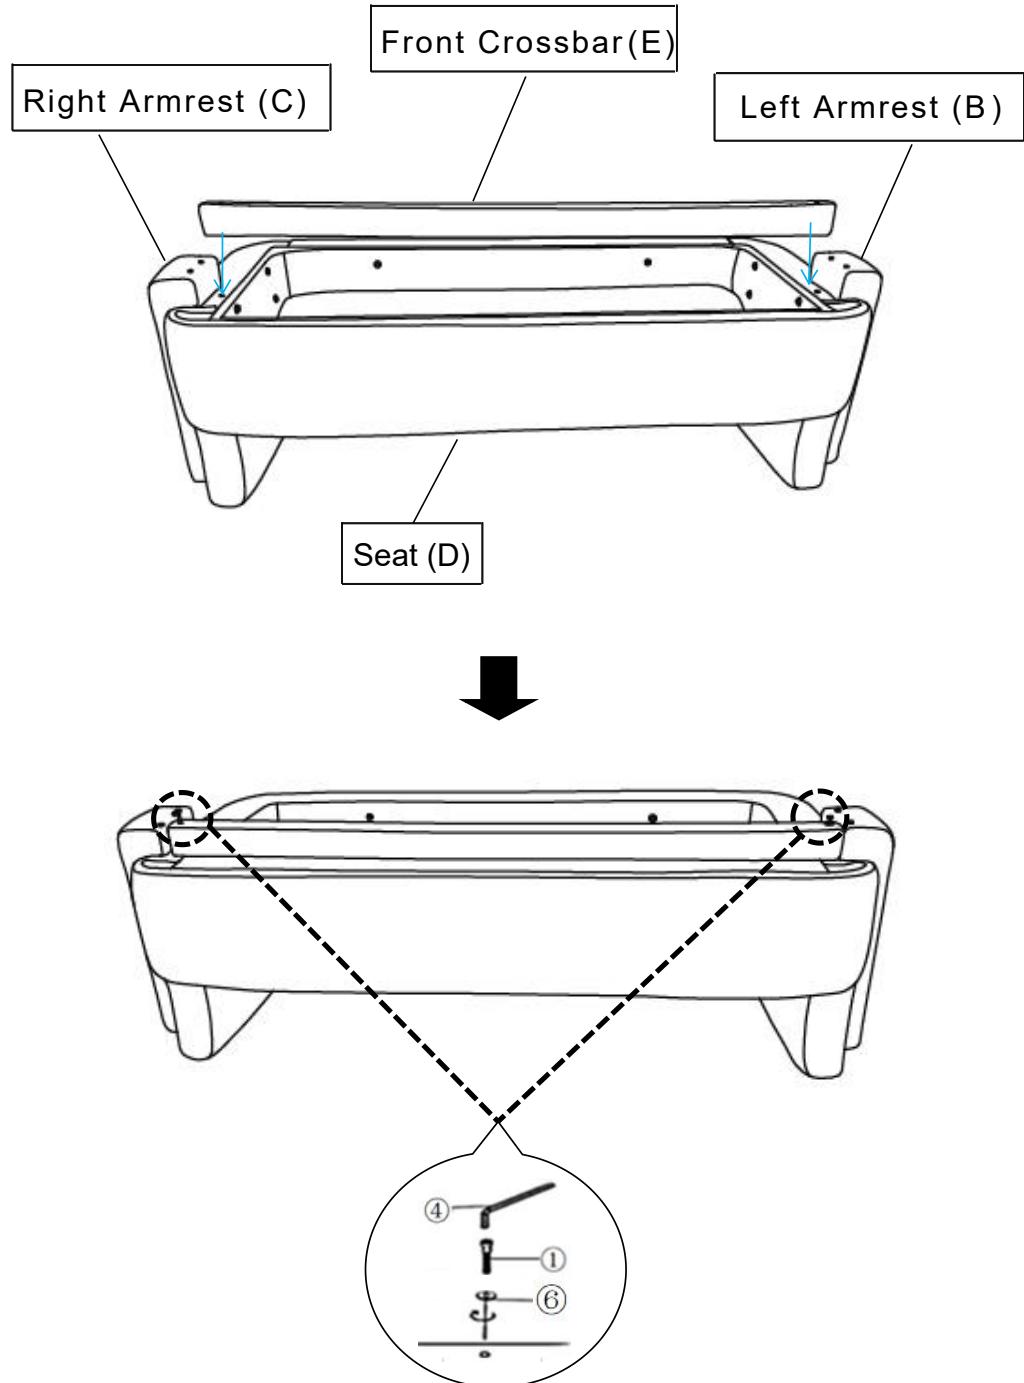


Turn over the assembled sofa as pictures shown.

Put Front Crossbar(E) onto the Seat(D) using 2 Bolts(①) and 2 Washer(⑥) with the Allen Wrench(④).

**Note:Please use the smaller Washer(⑥) in this step.**

**Tighten the bolts completely.**


## Step 8

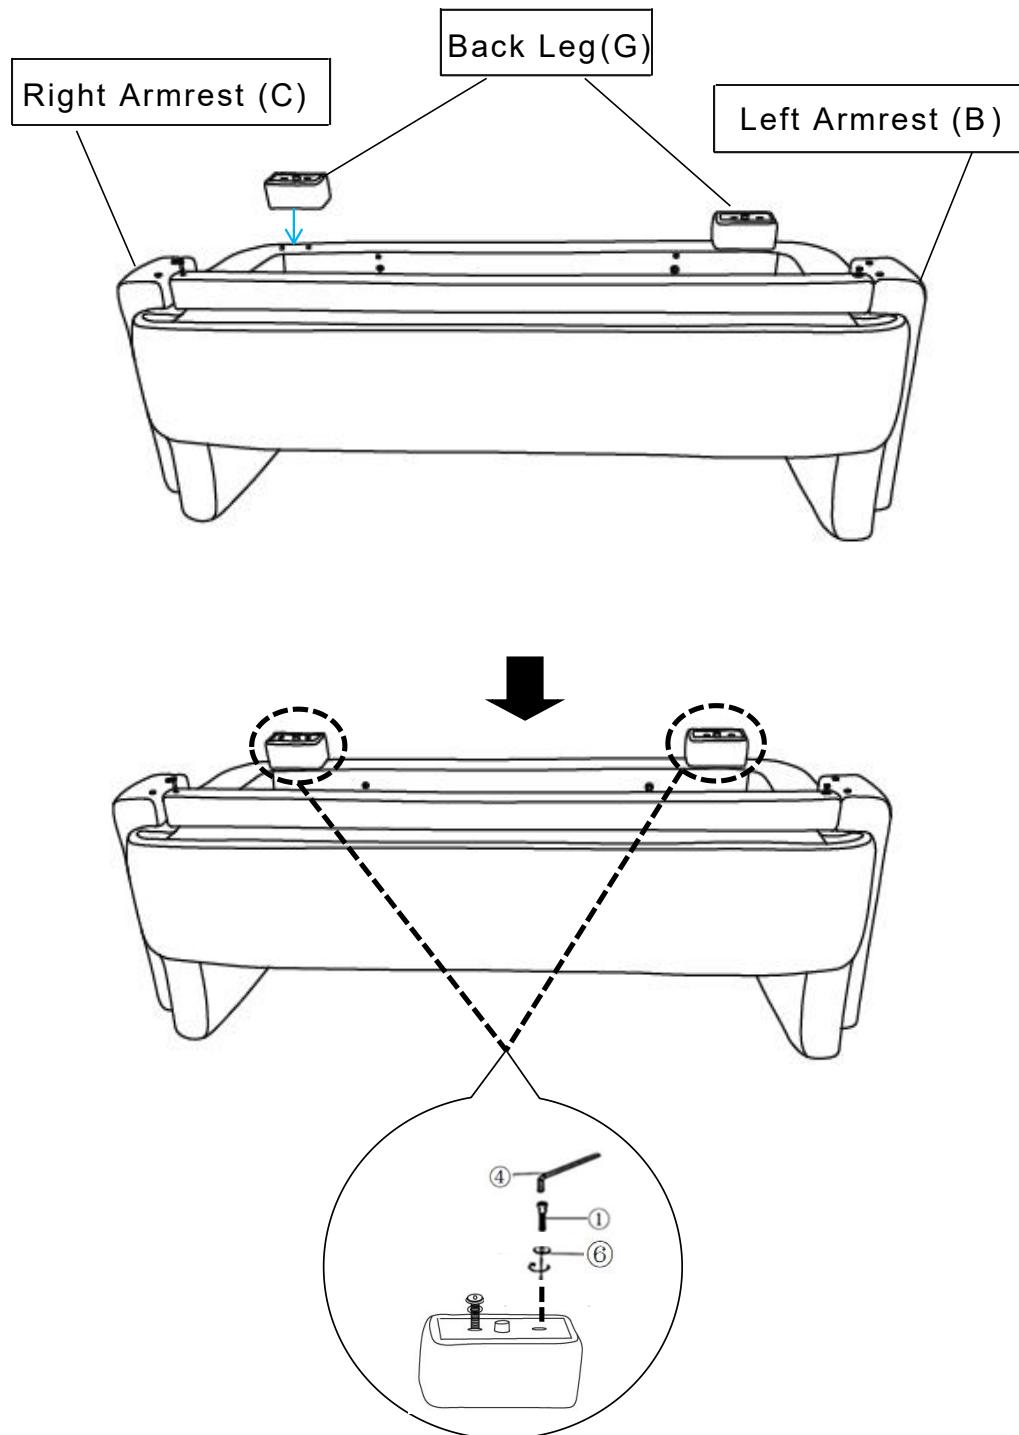

Install the Back Leg(G) on the Backrest(A) using 4 Bolts(①) and 4 Washers(⑥) with the Allen Wrench(④).

**Note:** Please use the smaller Washer(⑥) in this step.  
Tighten the bolts completely.

## Step 9

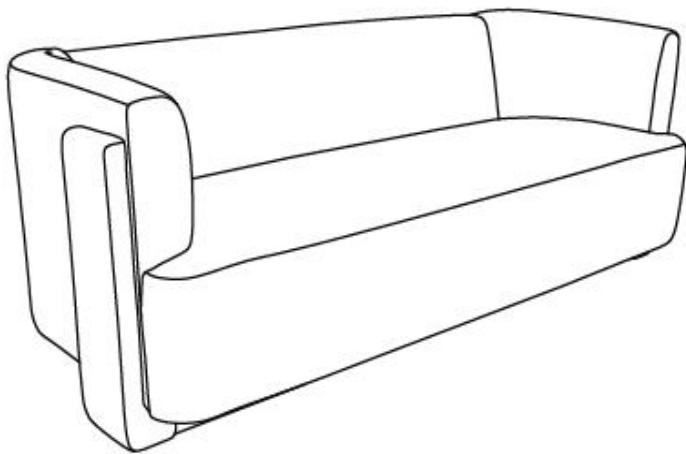

Your Sofa is ready for use.

This Sofa can only be used on a flat, level surface.