

## Assembly Instructions

**Caution: You must read this before you proceed**

### Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.

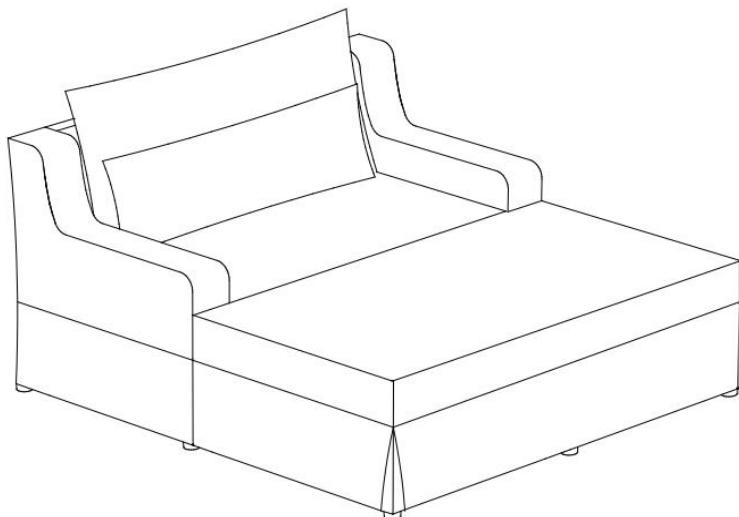


- Dust and pick-up spills using a clean, non-colored, lint-free cloth.






Please look in the magic tape pouch for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.





## SOFA




## Part List

Label	Picture	Description	QTY
A		Backrest	1
B		Left Armrest	1
C		Right Armrest	1
D		Left Front Rail	1
E		Right Front Rail	1
F		Left Side Rail	1
G		Right Side Rail	1
H		Fabric cover	1
I		Middle Leg Connecting Wooden Batten (Left)	1
J		Middle Leg Connecting Wooden Batten (Right)	1
K		Back Middle Leg Connecting Wooden Batten	1
L		Back Bed Slat	1
M		Front Bed Slat	1
N		Small Back Cushion	1
O		Big Back Cushion	1
P		Seat Cushion Package	1
Q		Back Middle Leg	1
R		Middle Leg	1
S		Leg	7

### PARTS LIST N719P386828

A		Backrest	1
D		Left Front Rail	1
E		Right Front Rail	1
I		Middle Leg Connecting Wooden Batten (Left)	1
J		Middle Leg Connecting Wooden Batten (Right)	1
K		Back Middle Leg Connecting Wooden Batten	1
L		Back Bed Slat	1
M		Front Bed Slat	1
O		Big Back Cushion	1
P		Seat Cushion Package	1
Q		Back Middle Leg	1
R		Middle Leg	1
S		Leg	7

### PARTS LIST N719P386829


B		Left Armrest	1
C		Right Armrest	1
F		Left Side Rail	1
G		Right Side Rail	1
H		Fabric cover	1
N		Small Back Cushion	1

## HARDWARE LIST N719P386828

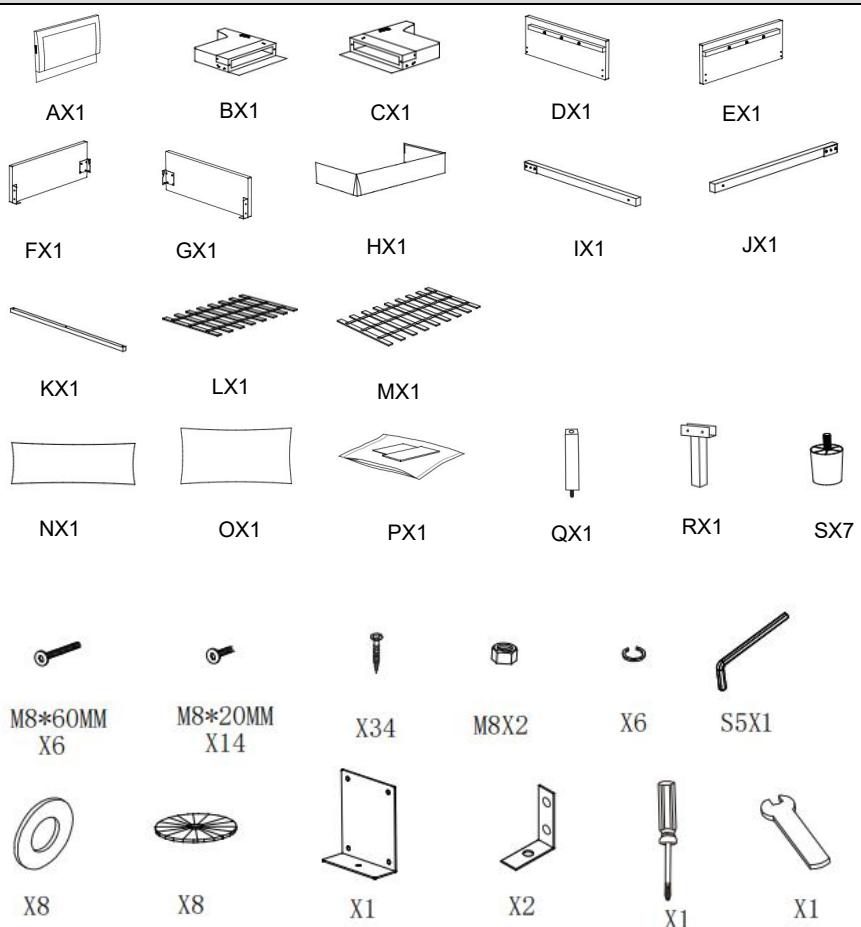Label	Picture	Description	QTY
①		Plastic Washer	8
②		Allen Wrench	1
③		Bolt (M8*60)	6
④		Bolt (M8*20)	14
⑤		Screw (M4*30)	34
⑥		Flat Washer	8
⑦		Spring Washer	6
⑧		Iron Connecting Plate	1
⑨		Iron Connecting Plate	2
⑩		Nut (M8)	2
⑪		Screwdriver	1
⑫		Spanner	1

## Assembly Preparation

Before Beginning Assembly:



- **Read instructions, cover to cover-**



- **Have 2 adults on hand for assembly-**



- **Do not assemble on flooring or carpet-**




- **Assemble on a clean non-marring surface (packing foam)-**



- **Save all packaging until finished-**


## Assembly Steps:
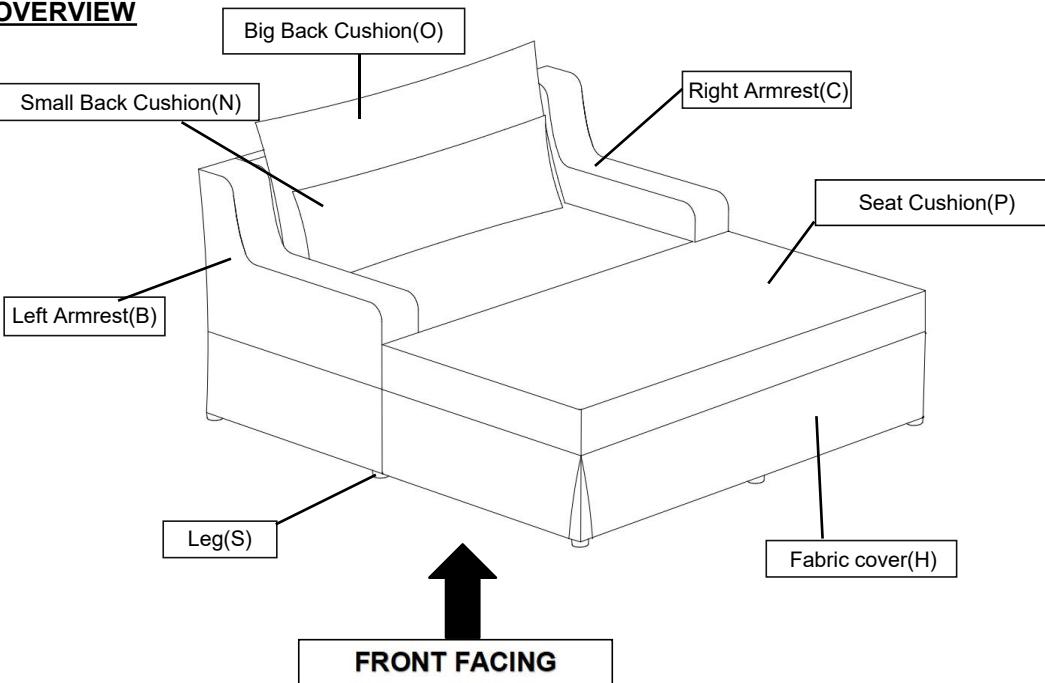
### OVERVIEW




This Sofa has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various Sofa parts into perspective. Please read through the instructions to familiarise yourself with the parts and steps before assembly.

### Step 1

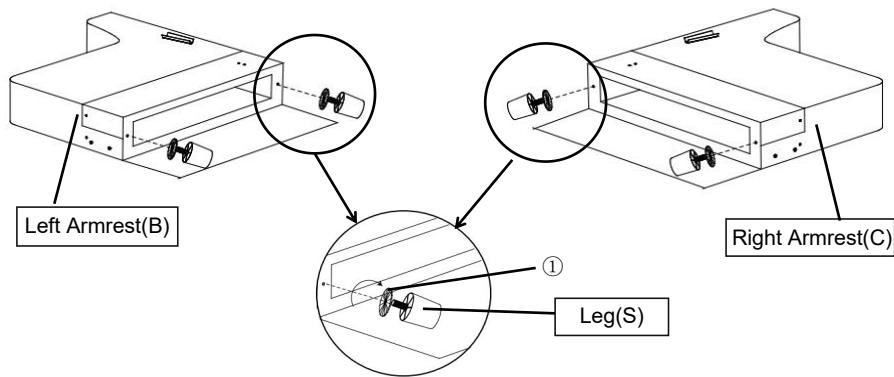


Step 1. Install the Leg(S) at the bottom of Left Armrest(B) and Right Armrest(C) by placing Plastic Washer(①) on the threaded stem. Tighten by turning the Leg clockwise.




### Step 2

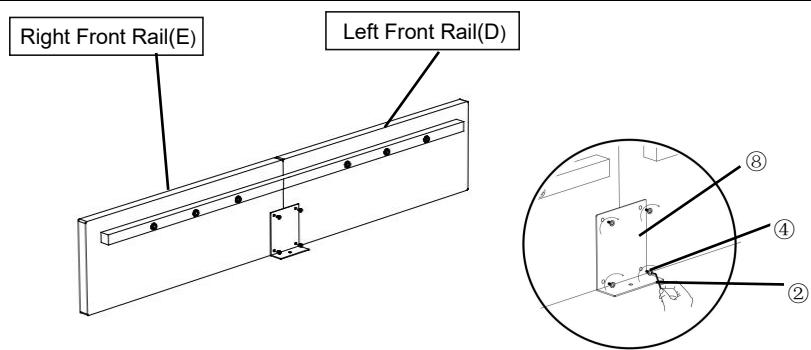

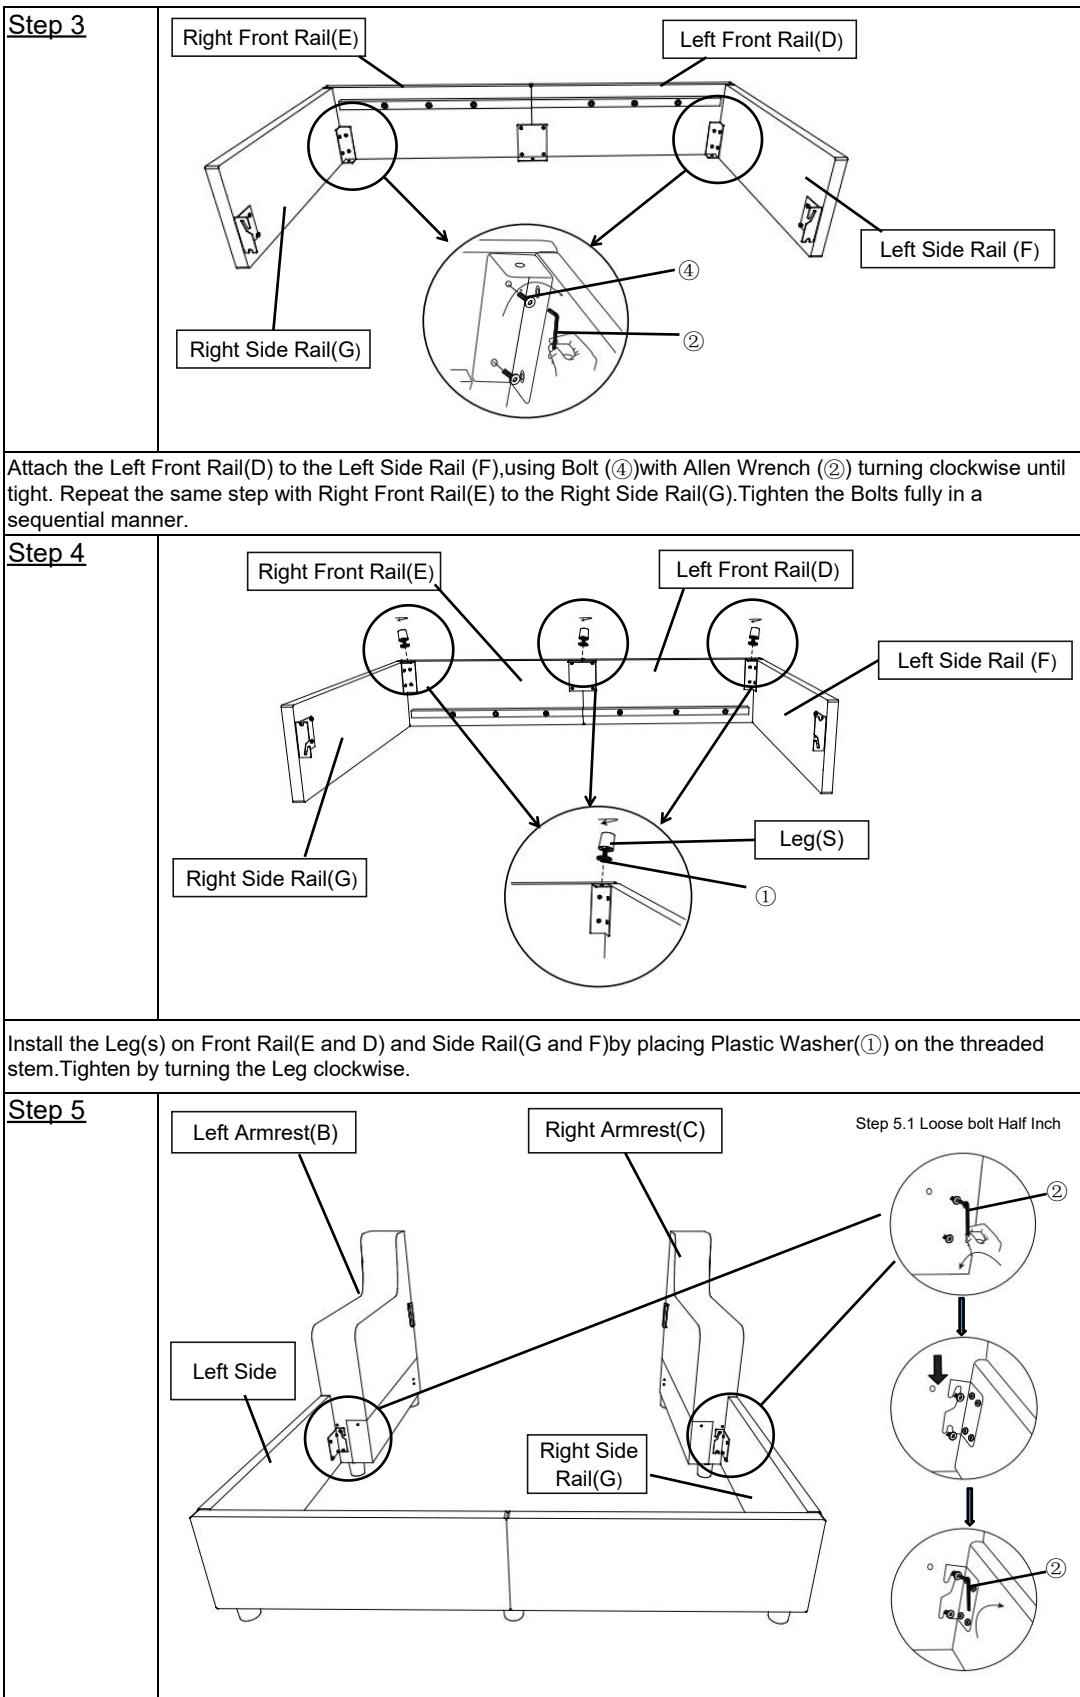Connect Right Front Rail(E) and Left Front Rail(D) by using Iron Connecting Plate(⑧), Bolts(④) with Allen Wrench(②) turning clockwise until tight.



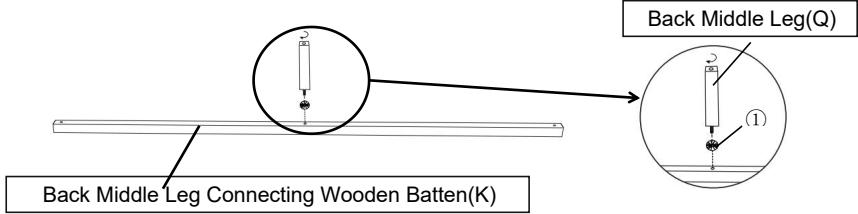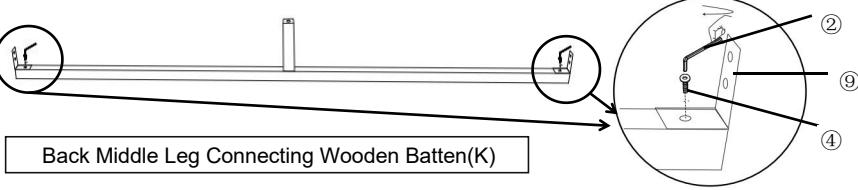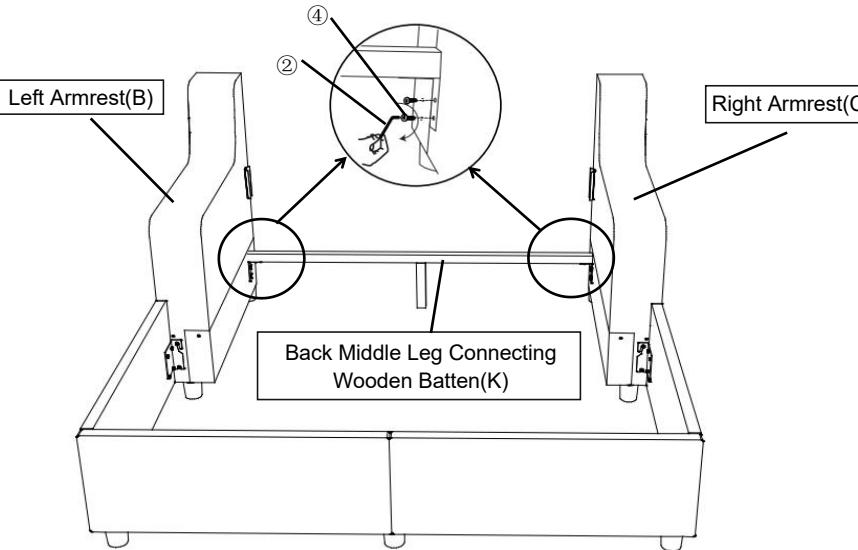
Step5.1. Loose the bolts Half Inch by Allen Wrench(②).  
 Step5.2. With the assistance of your partner, slide the hooks of Left Side Rail(F) and Right Side Rail(G) into the bolts of Left Armrest(B) and Right Armrest(C) and tighten the Bolts with Allen Wrench(②) as shown above.

Step 6	
Install the Iron Connecting plate(⑨) on two sides of Back Middle Leg Connecting Wooden Batten (K) by using Bolt(④) and Allen Wrench(②),turning clockwise until tight.	
Step 7	
Install the Iron Connecting plate(⑨) on two sides of Back Middle Leg Connecting Wooden Batten (K) by using Bolt(④) and Allen Wrench(②),turning clockwise until tight.	
Step 8	
Install the Back Middle Leg Connecting Wooden Batten (K) on the Left Armrest(B) and Right Armrest(C) by using Bolt(④) and Allen Wrench(②),turning clockwise until tight.	

**Step 9**

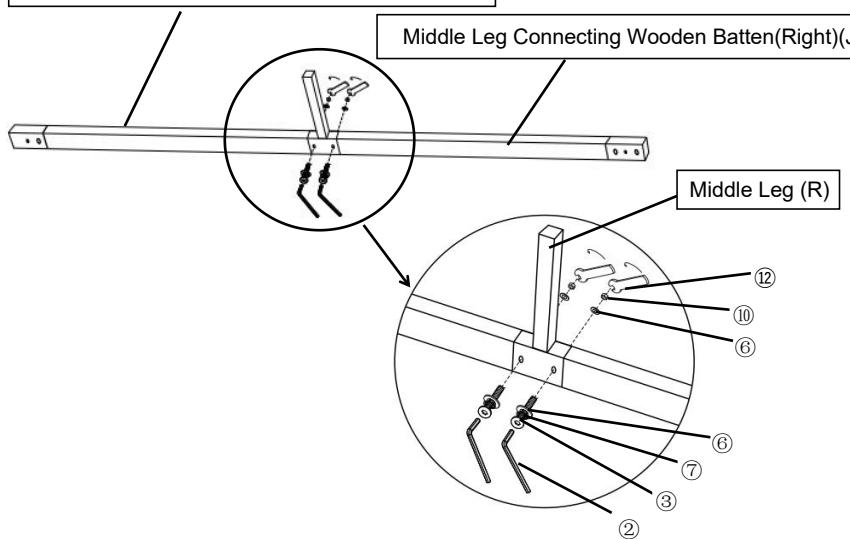Middle Leg Connecting Wooden Batten(Left)(I)


Middle Leg Connecting Wooden Batten(Right)(J)




Assemble the Middle Leg(R) on two Middle Leg Connecting Wooden Batten(I ) and(J) by using Bolt(③) ,Spring Washer(⑦),Flat Washer(⑥) and Allen Wrench(②),Nut(⑩),Flat Washer(⑥),and Spanner(⑫) turning clockwise until tight.

**Step 10**

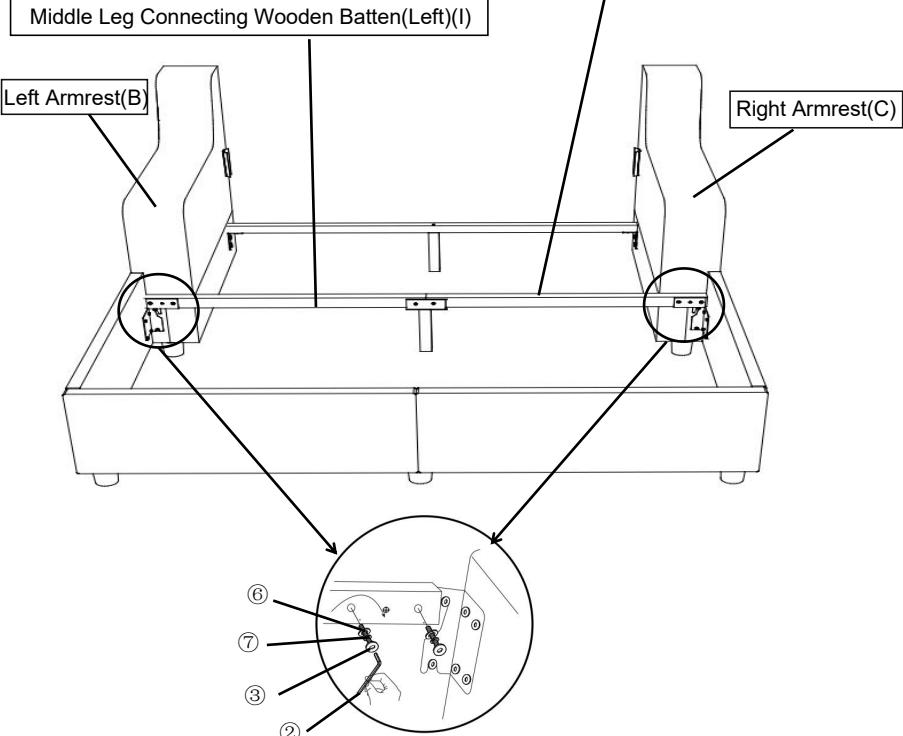Middle Leg Connecting Wooden Batten(Right)(J)



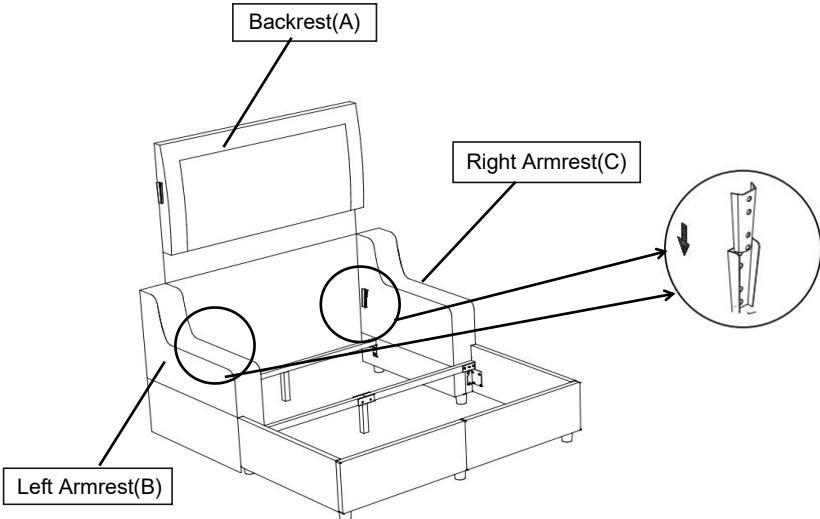Install the Middle Leg Connecting Wooden Batten(I ) and(J) on the Left Armrest(B) and Right Armrest(C) by using Bolt (③), Spring Washer(⑦) ,Flat Washer(⑥) and Allen Wrench(②),turning clockwise until tight.


**Step 11**

Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture. Repeat the same steps with the Right Armrest(C).


**Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C). Assistance from an adult partner is necessary for this assembly process.**

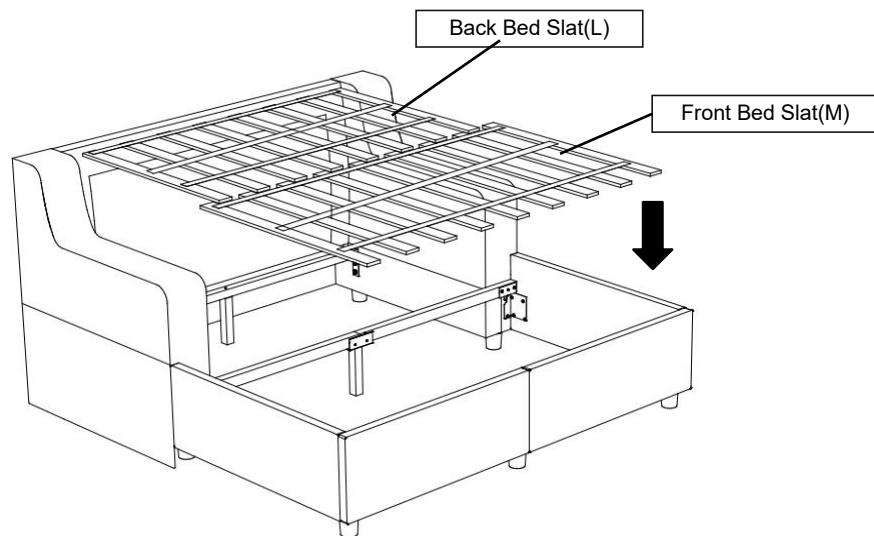During this assembly process - do exercise caution. You may need to use your hand to press down or pave away the padded surface to facilitate the 'slip and slide' assembly.

**Caution:** Ensure that your fingers do not get caught or pinched in the assembly process.


**Step 12**

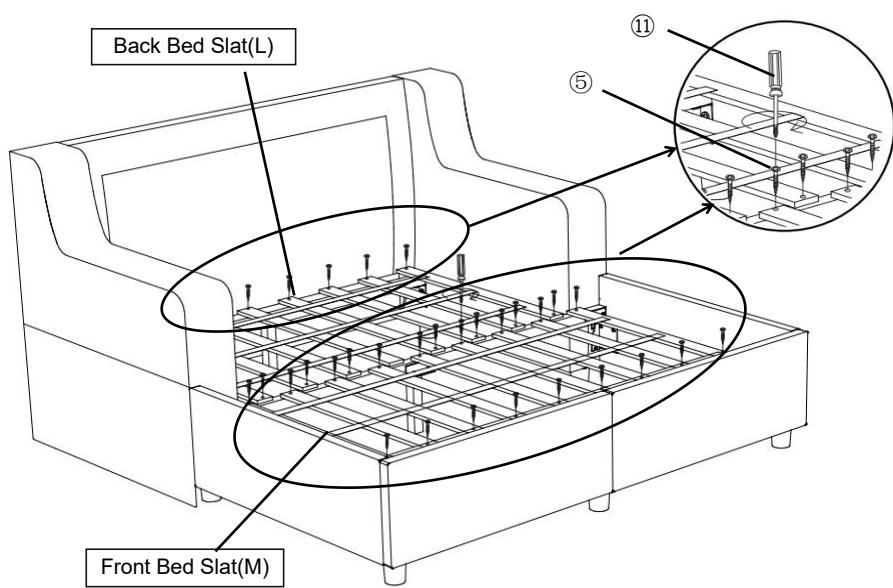Put the Back Bed Slat(L) and Front Bed Slat(M) on the SOFA.

**Step 13**


Use a screwdriver(⑪) to fix the screw(⑤) and the Back Bed Slat(L) and Front Bed Slat(M) to the slat. A total of 33 screws are needed.

**Step 14**

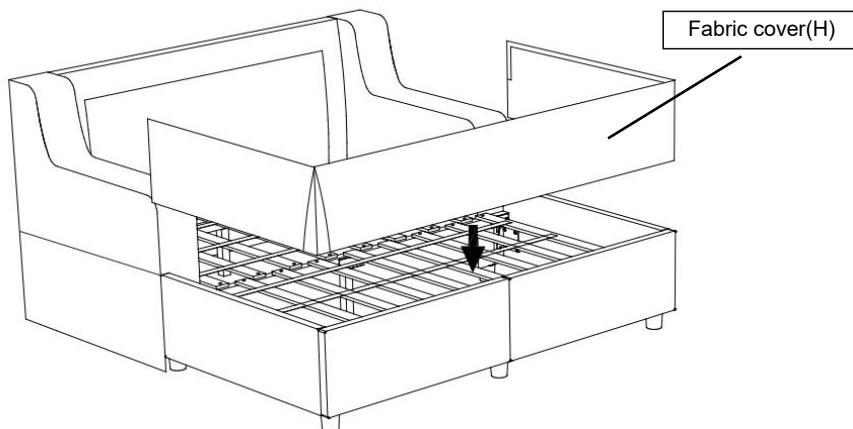


Attach the Fabric cover(H) tape to the SOFA.

**Step 15**

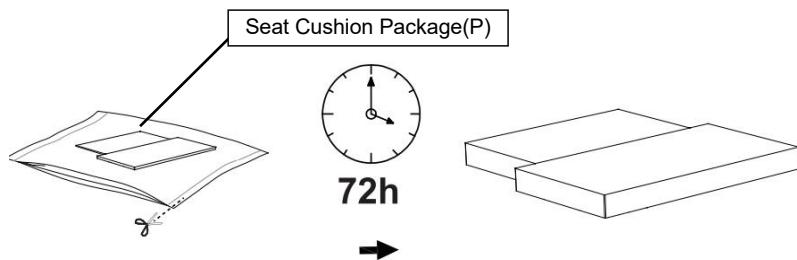


Cut the Seat Cushion Package(P) , then take out Seat Cushion. Full decompression may take up to 72 hours.

**Step 16**

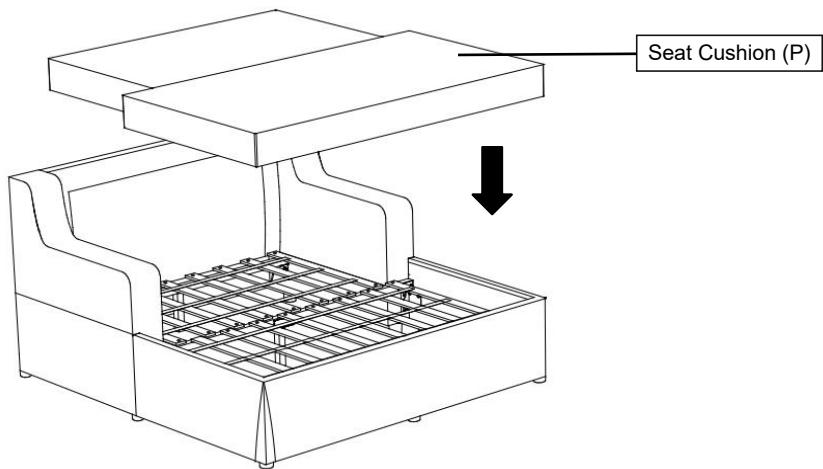


Put the Back Cushion(P) on the SOFA.

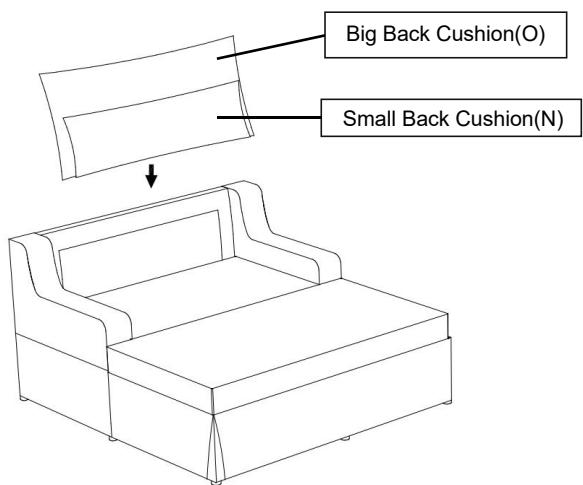Step 17



Put the Back Cushion(O and N) on the SOFA.

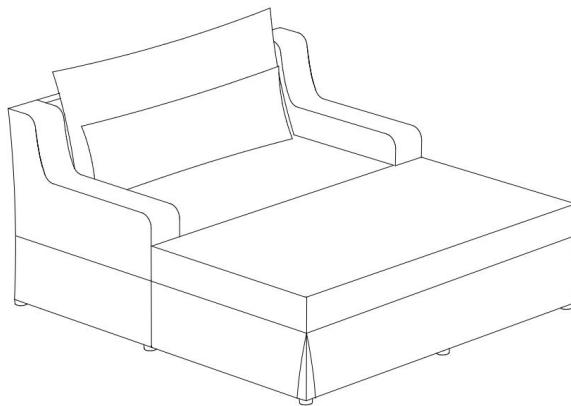Step 18



Your SOFA is ready to use.  
This SOFA can only be used on a flat, level surface.