

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restraints, to help prevent tip-over

1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product




Assembly Instructions

Caution : You must read this before you proceed




Care & Maintenance

- Ø 
 - Not for commercial use. For residential use only.
- ✓ 
 - Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- Ø 
 - Do not put hot items directly on furniture surface.
- Ø 
 - Do not clean furniture with harsh cleansers or polish.
- Ø 
 - Do not place furniture under direct sunlight.
- Ø 
 - Do not place furniture near heating or cooling vents.
- Ø 
 - Do not write on furniture without a padded barrier to protect the surface.
- Ø 
 - Do not place furniture outside . For indoor use only.
- Ø 
 - Stains may be removed with mild soap solution and damp cloth.
- Ø 
 - Children should not climb or jump on the furniture.
- ✓ 
 - Dust and pick-up spills using a clean, non-colored, lint-free cloth.



Please look in small carton box for Hardware packs.

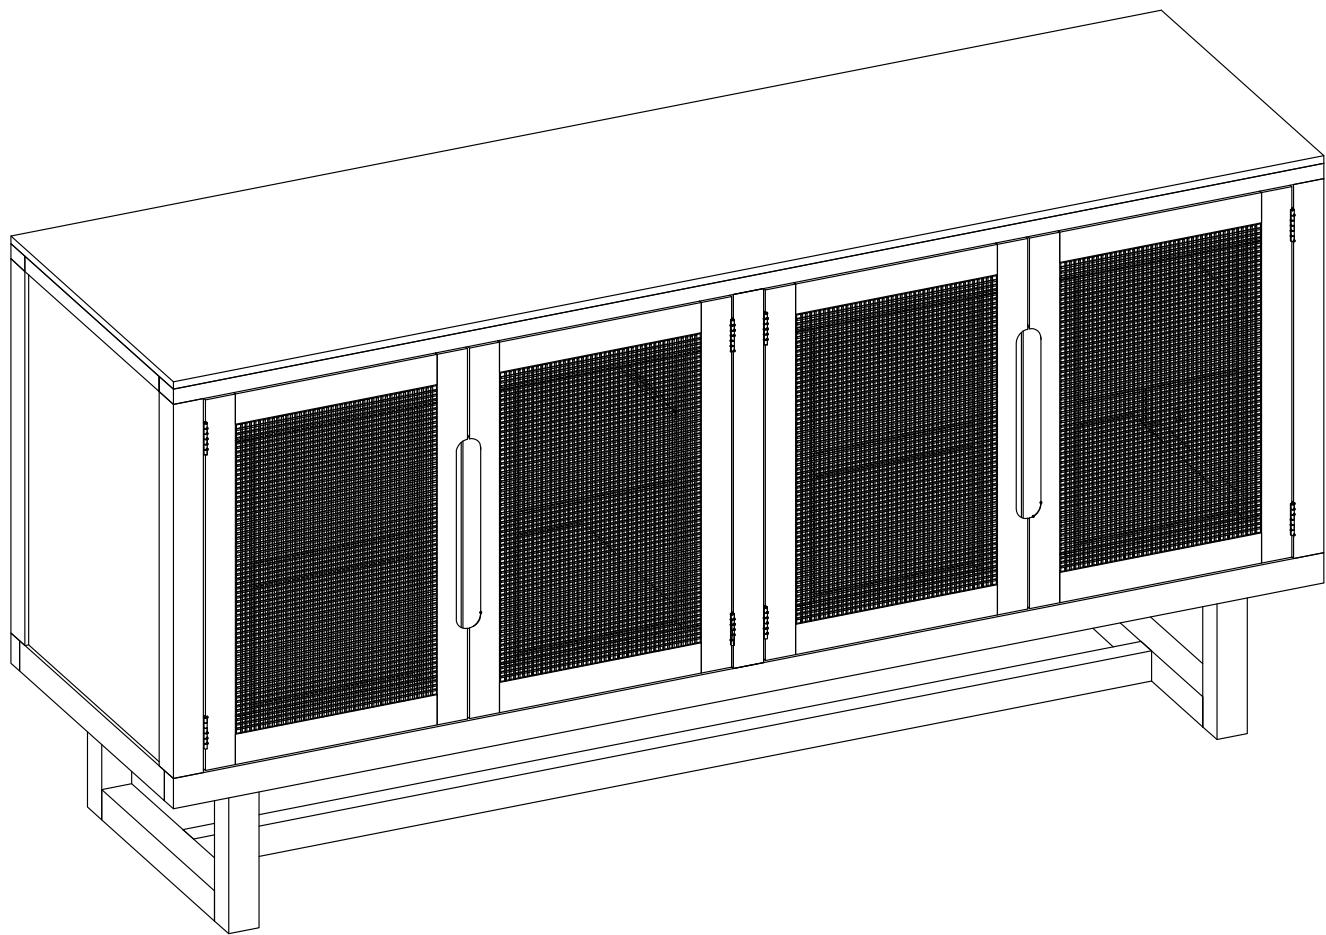

▲
* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

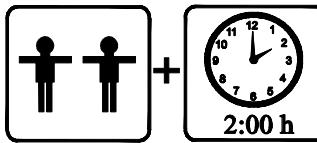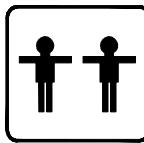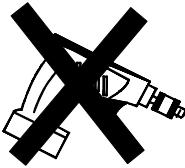

Tools Required



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

Diagram A

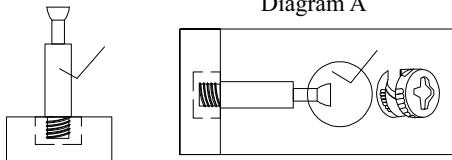


Insert Cam Ball into hole as shown in diagram A.

Diagram B

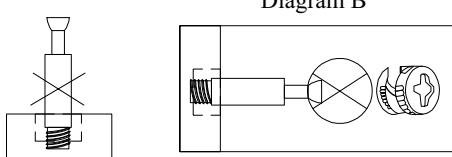


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause
the cam Lock to be misaligned and unable to
interlock properly.

Diagram C

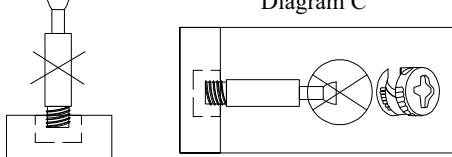


Also avoid inserting the Cam Bolt too close to the
surface of the hole as shown in figure C, as this
will cause the Cam Lock to be too loose, and not
interlock properly.


Connect the panels together.

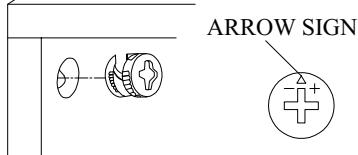











Insert the Cam Lock so the side opening fits over
the head of the Cam Bolt.

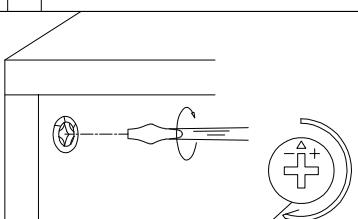


To tighten the Cam Lock, turn it clockwise on half
a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may
bend or break if too much power is imposed.*

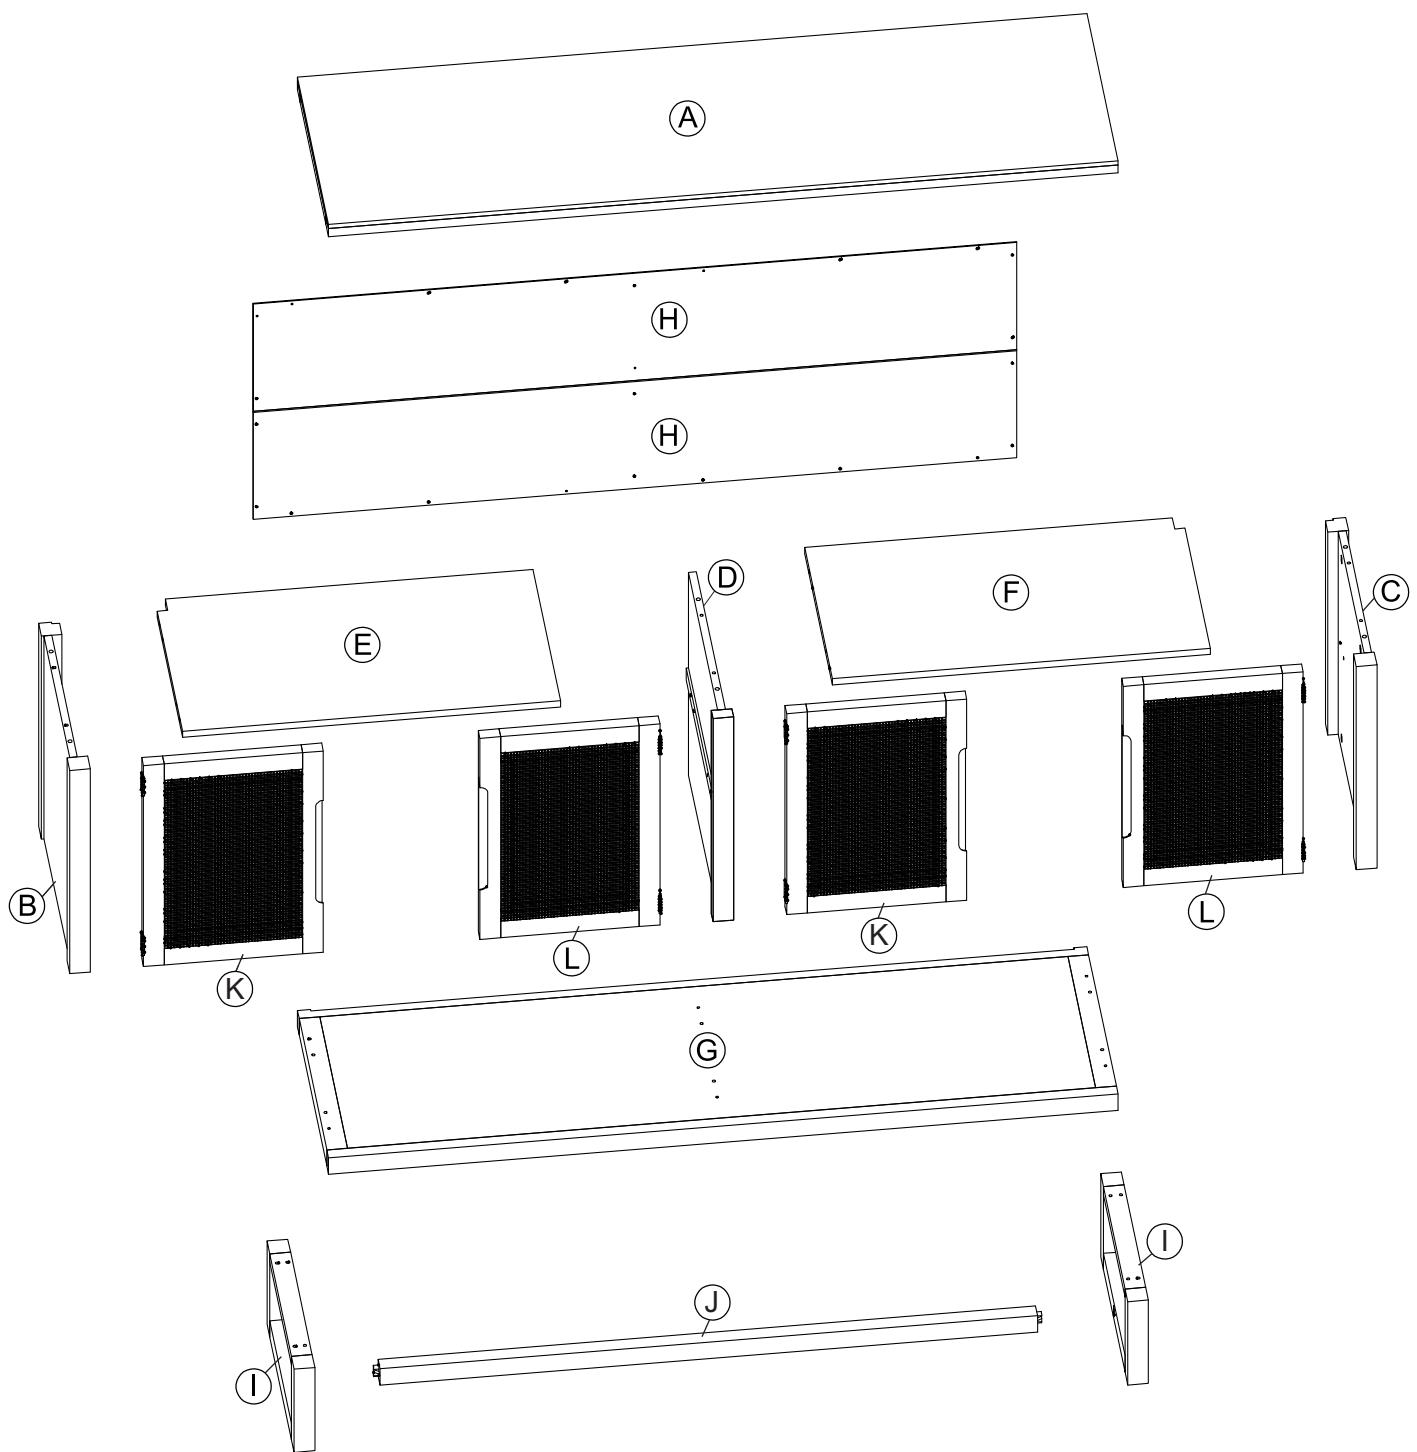


PACKAGE CONTENTS

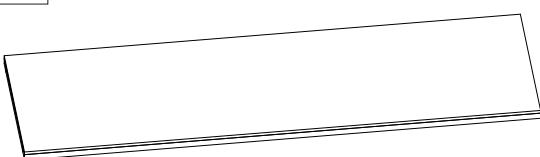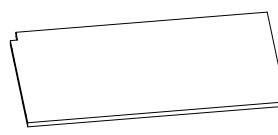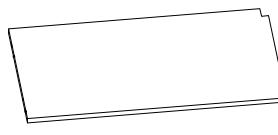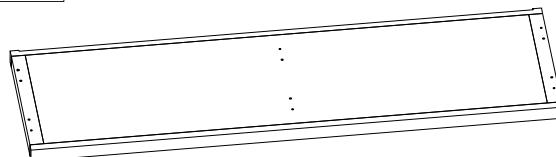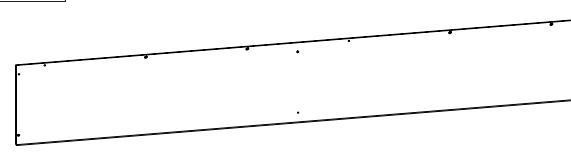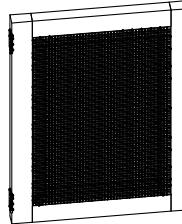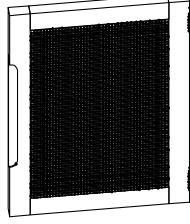A		B	
	Top Panel - 1 pc		Left Side Board - 1 pc
C		D	
	Right Side Board - 1 pc		Middle Vertical Panel - 1 pc
E		F	
	Left Shelf - 1 pc		Right Shelf - 1 pc
G		H	
	Bottom Panel - 1 pc		Back Panel - 2 pcs
I		J	
	Leg Panel - 2 pcs		Stretcher - 1 pc
K		L	
	Left Door - 2 pcs		Right Door - 2 pcs

HARDWARE CONTENTS


1		2		3		4	
	Ø6*35mm Three in one bolt - 21pcs		Ø15*9mm Three in one lock - 21pcs		Ø6*30mm Wood dowel - 21pcs		Ø3*15mm Round head screw - 25pcs
5		6		7		8	
	Ø4*20mm Flat head screw - 17pcs		Ø6*35mm Bolt - 9pcs		Ø6*50mm Screw - 3pcs		Allen Wrench - 1pc
9		10		11		12	
	Anti fall hardware- 2pcs		Ø4*20mm Round head screw - 2pcs		Ø4*35mm Round head screw - 2pcs		Ø8*40mm Plastic wall bolt - 2pcs

STEP 1

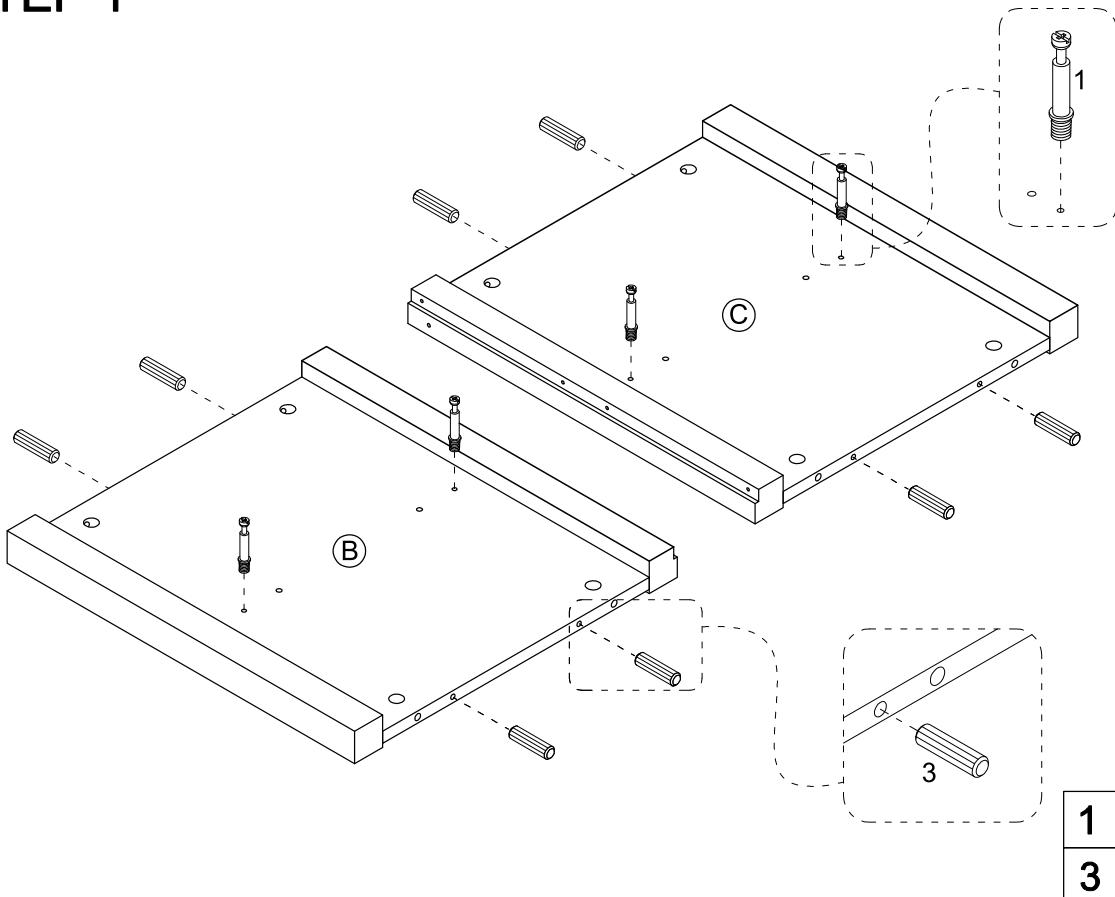


Insert Three in one bolt (1) and Wood dowels (3) into drilled holes on the Left Side Board (B), Right Side Board (C) with Screwdriver and Hammer (Not provided).

STEP 2

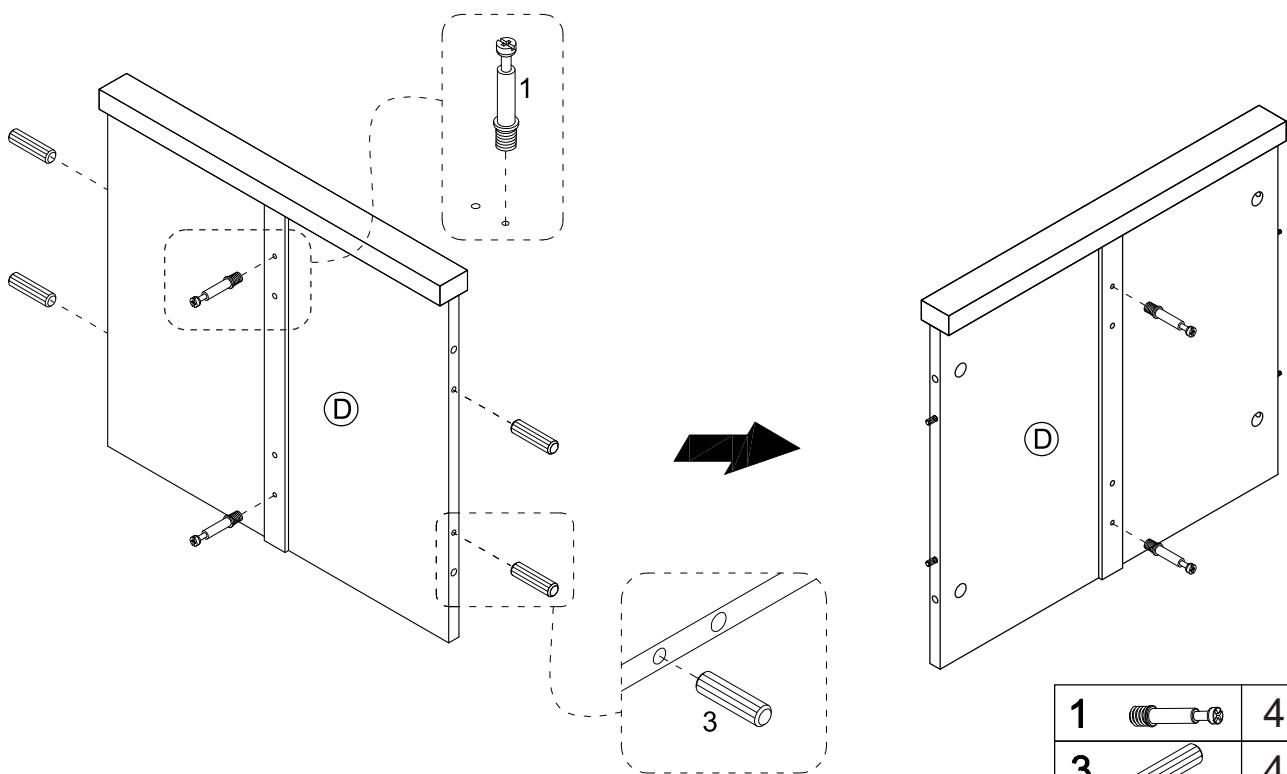

Insert Three in one bolt (1) and Wood dowels (3) into drilled holes on the Middle Vertical Panel (D) with Screwdriver and Hammer (Not provided).


STEP 3

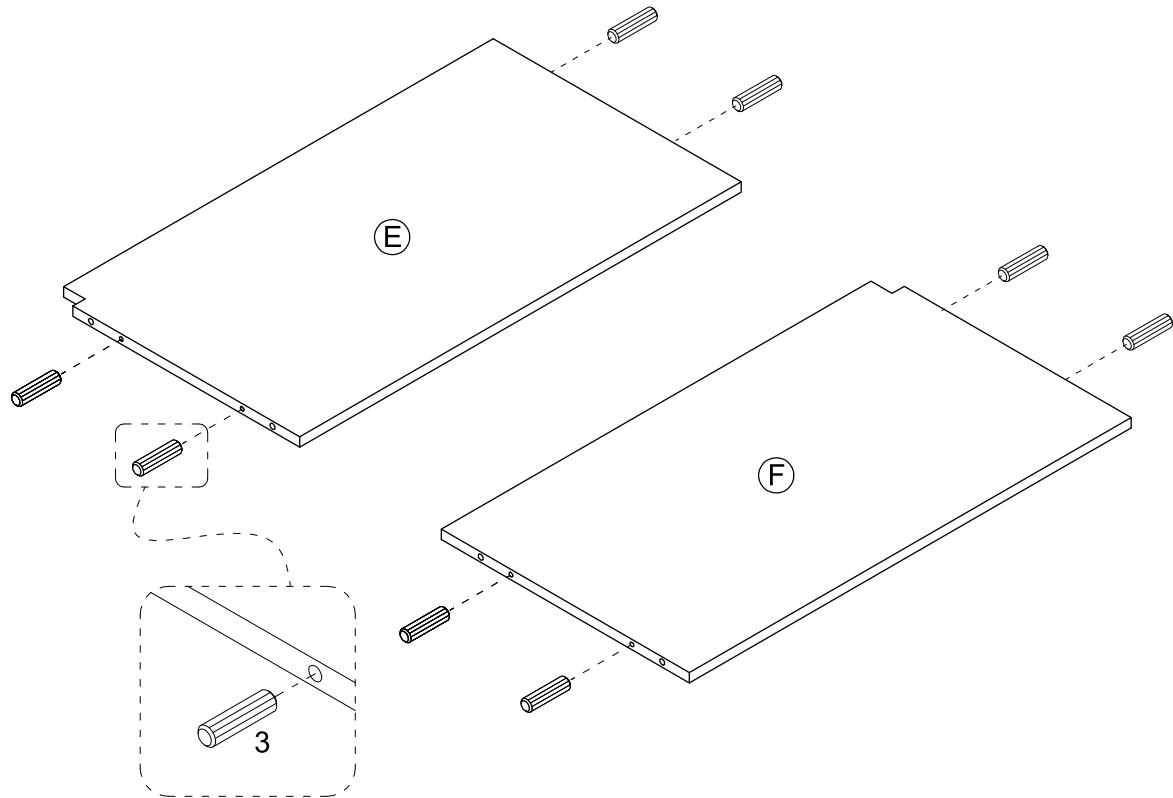

3 8pcs

Insert Wood dowels (③) into drilled holes on the Left Shelf (E), Right Shelf (F) with Hammer (Not provided).


STEP 4

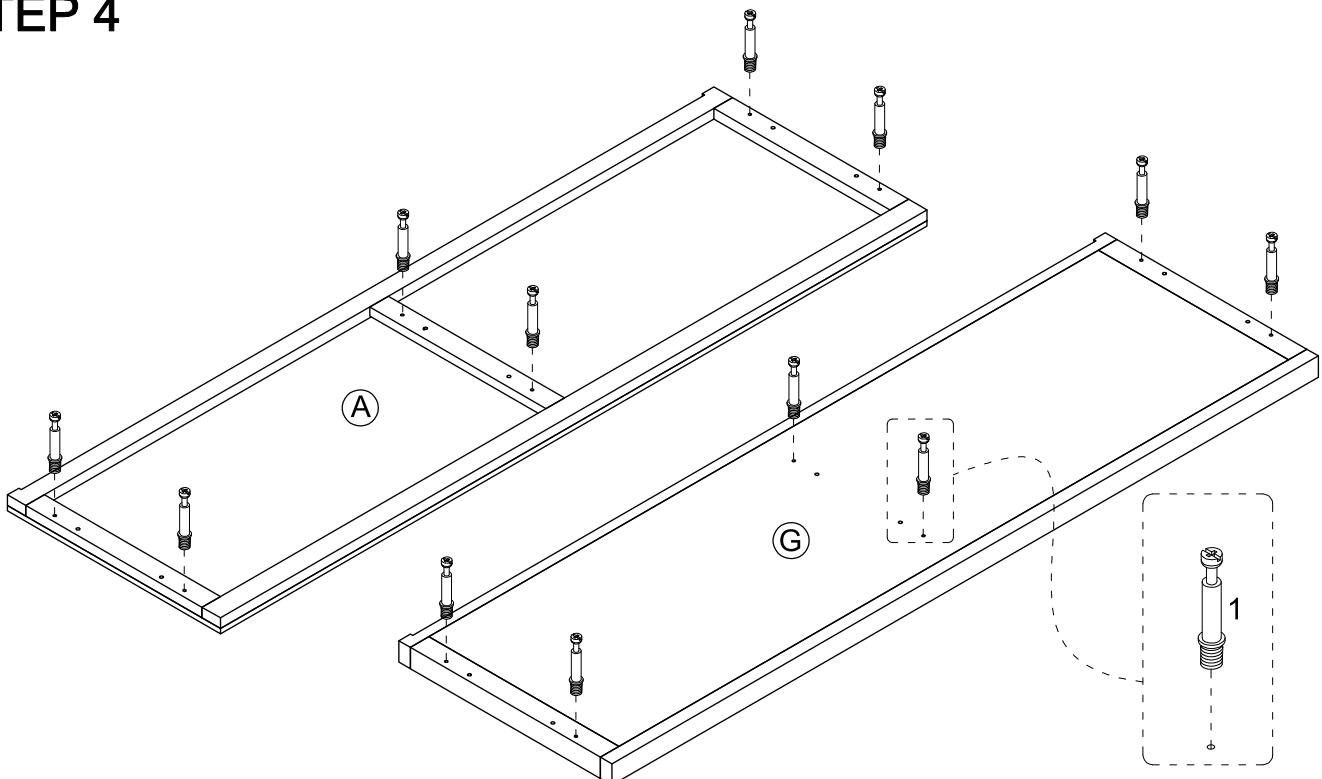

1 12pcs


Insert Three in one bolt (①) into drilled holes on the Top Panel (A), Bottom Panel (G) with Screwdriver (Not provided).

STEP 5

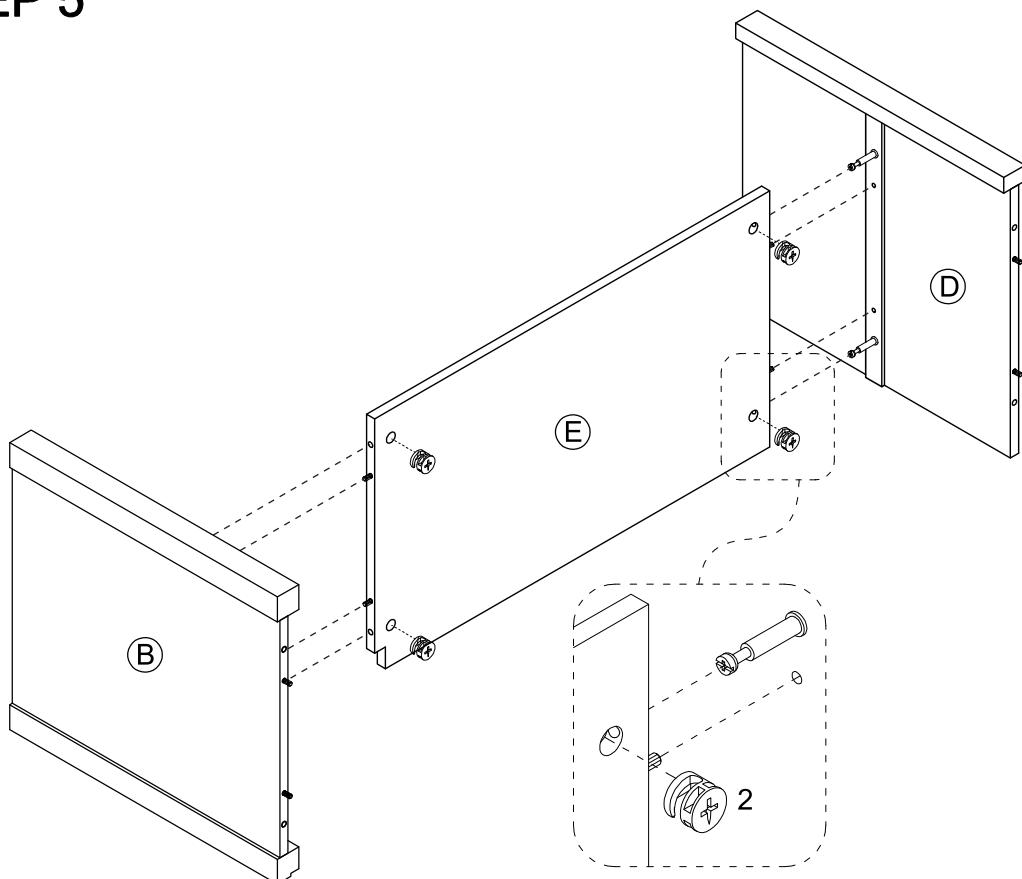


Attach Left Shelf (E) to Left Side Board (B) and Middle Vertical Panel (D) using Three in one lock (②) with Screwdriver (Not provided).

STEP 6

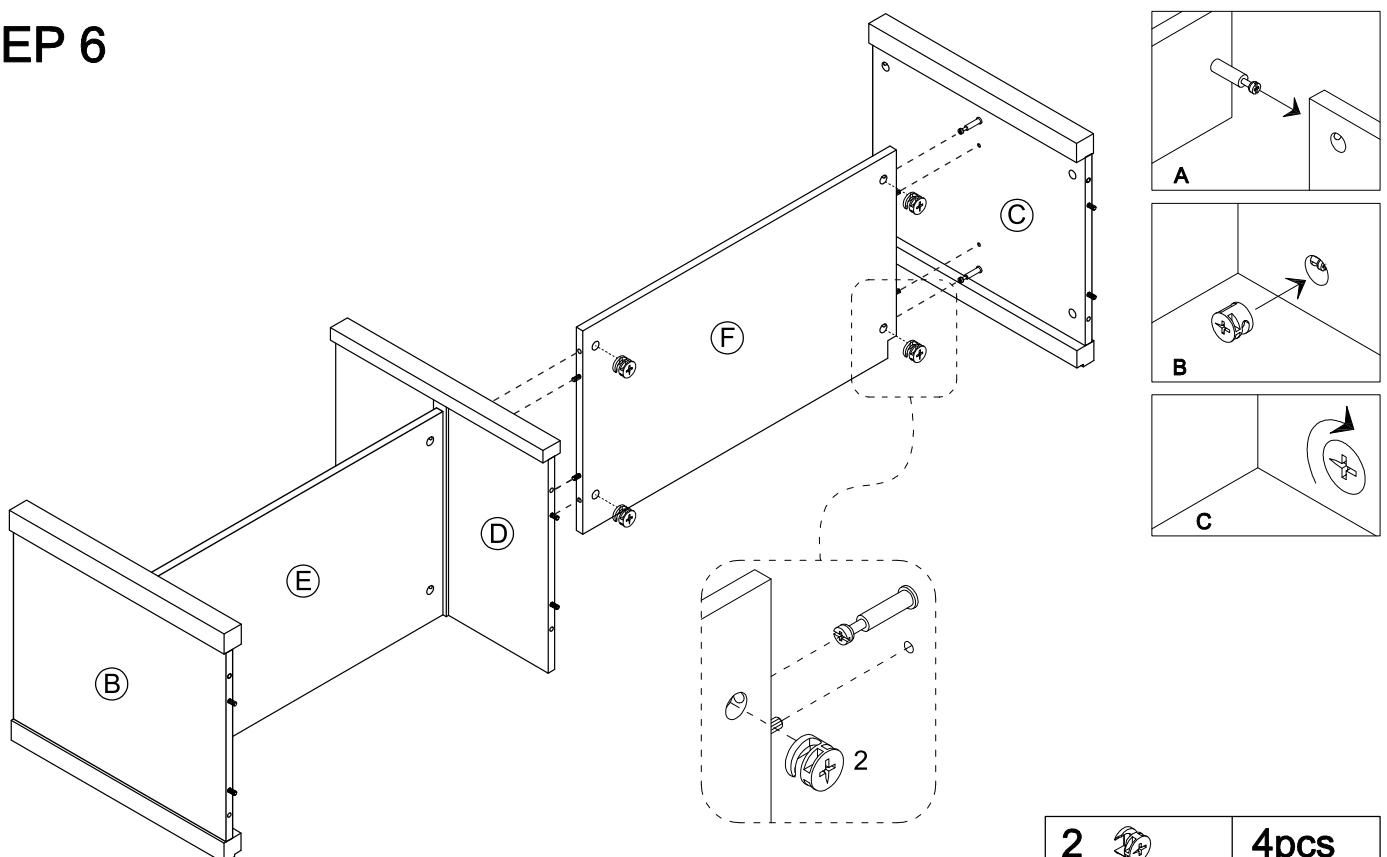

Attach Right Shelf (E) to Middle Vertical Panel (D) and Right Side Board (C) using Three in one lock (②) with Screwdriver (Not provided).


STEP 7

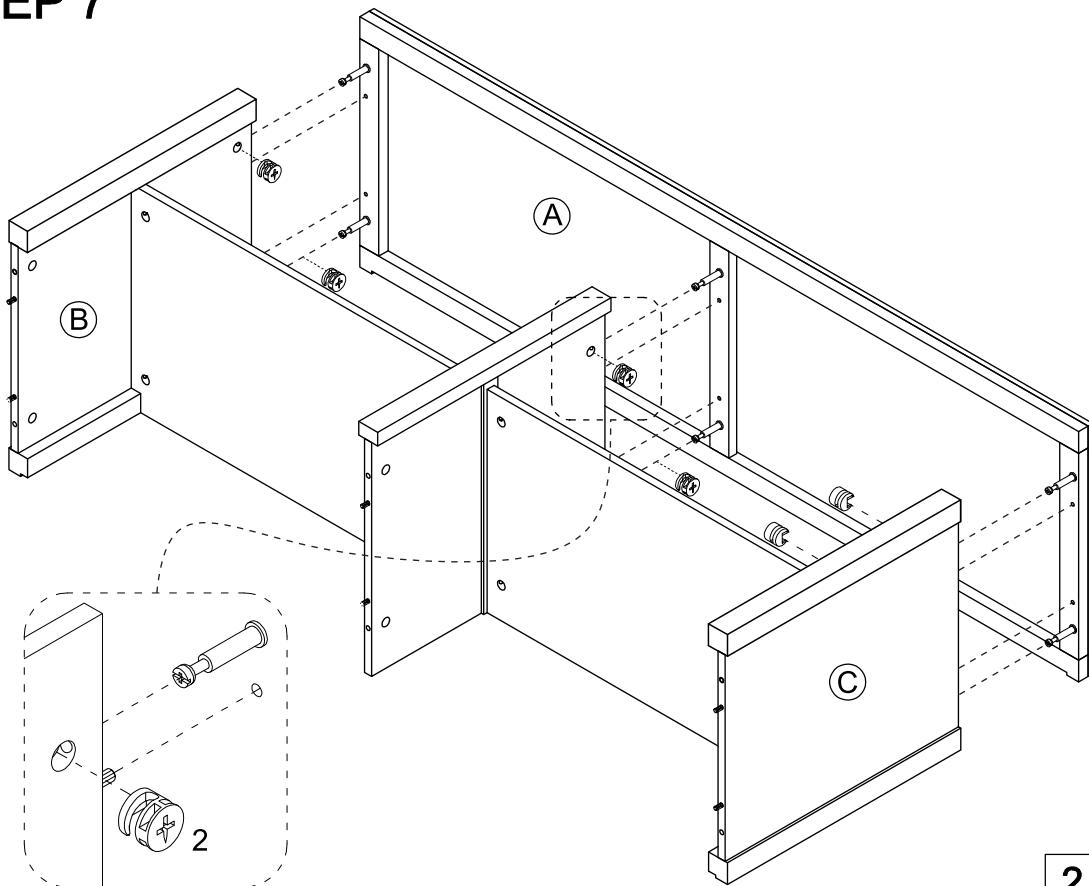

2 2 6pcs

Attach Top Panel (A) to Left Side Board (B), Middle Vertical Panel (D) and Right Side Board (C) using Three in one lock (2) with Screwdriver (Not provided).


STEP 8

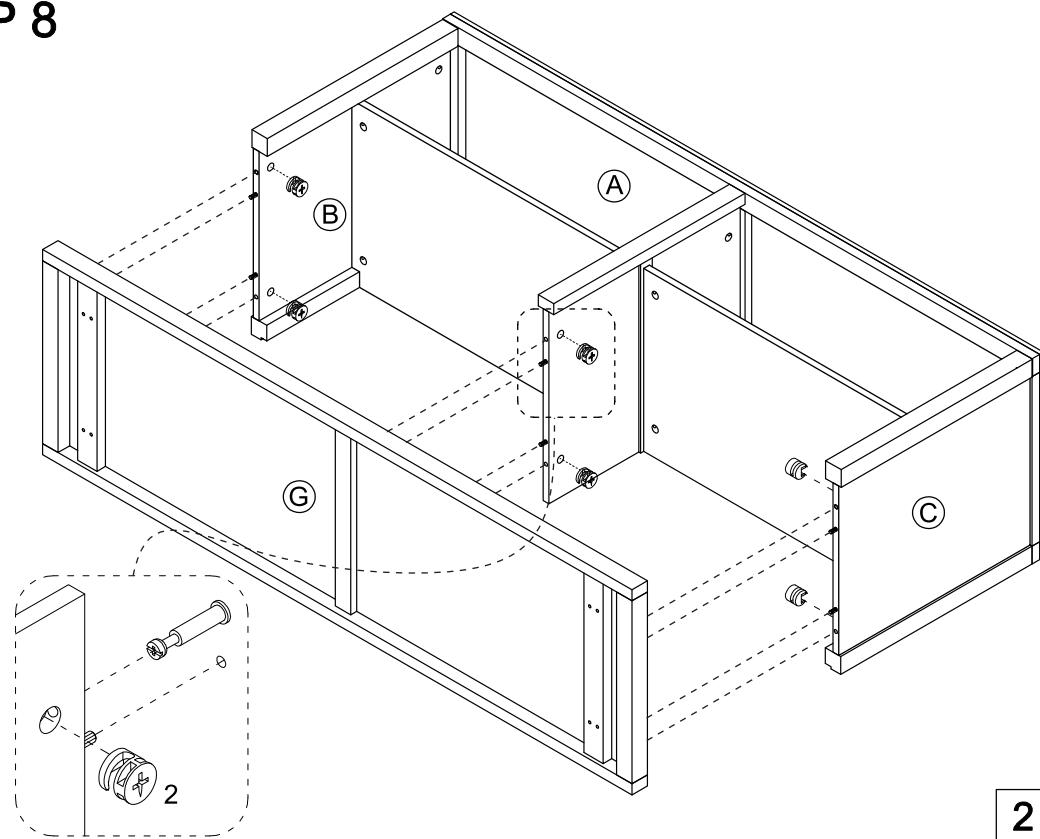

2 2 6pcs


Attach Bottom Panel (G) to Left Side Board (B), Middle Vertical Panel (D) and Right Side Board (C) using Three in one lock (2) with Screwdriver (Not provided).

STEP 9

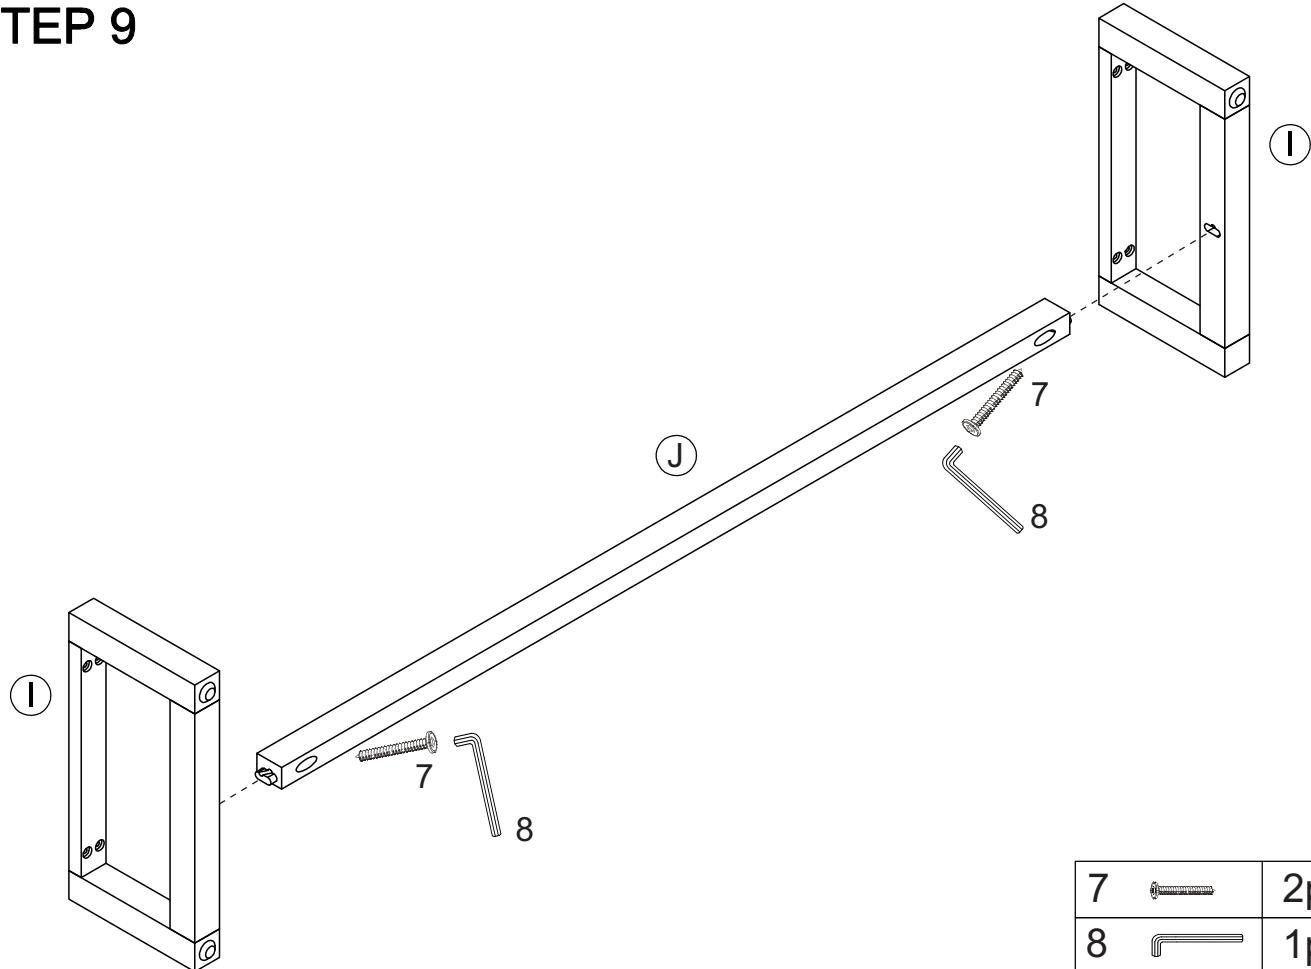


Attach Stretcher (J) to Leg Panel (I) using Screw (7) with Allen Wrench (8).

STEP 10

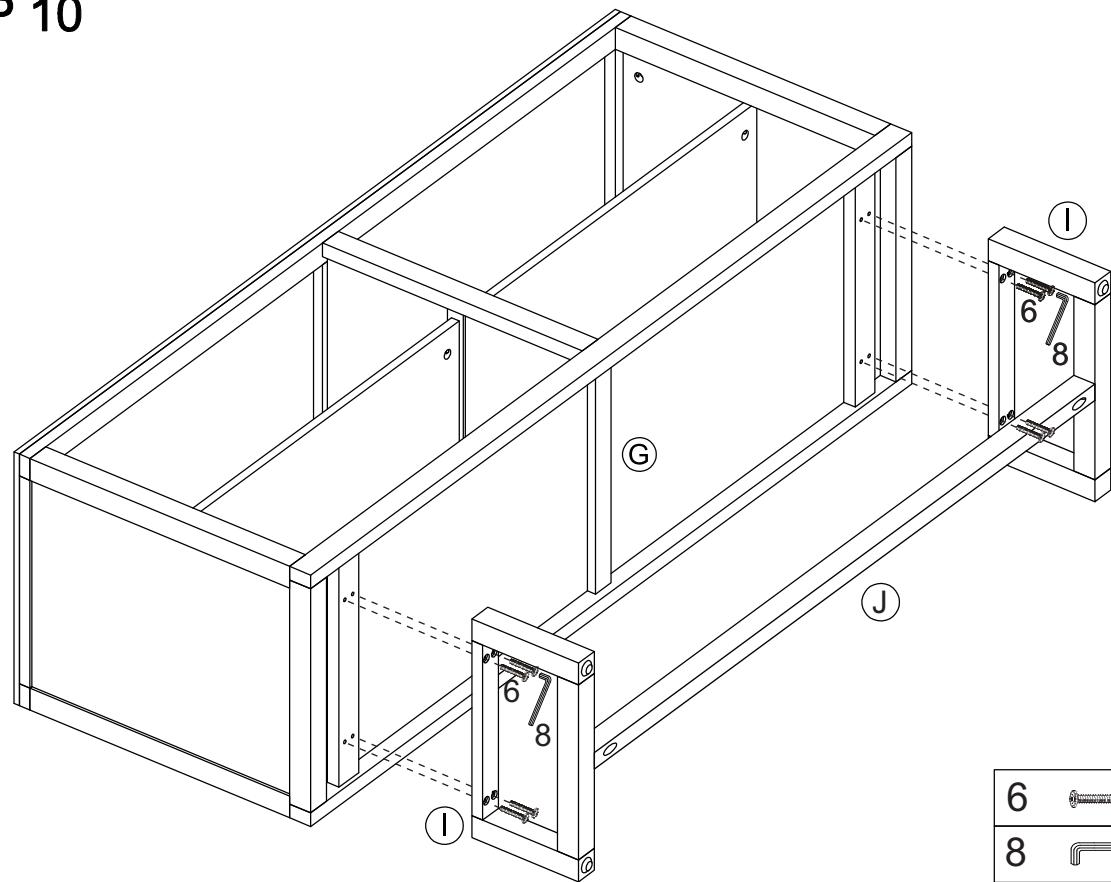


Attach Leg Panel (I) to Bottom Panel (G) using Bolt (6) with Allen Wrench (8).

STEP 11

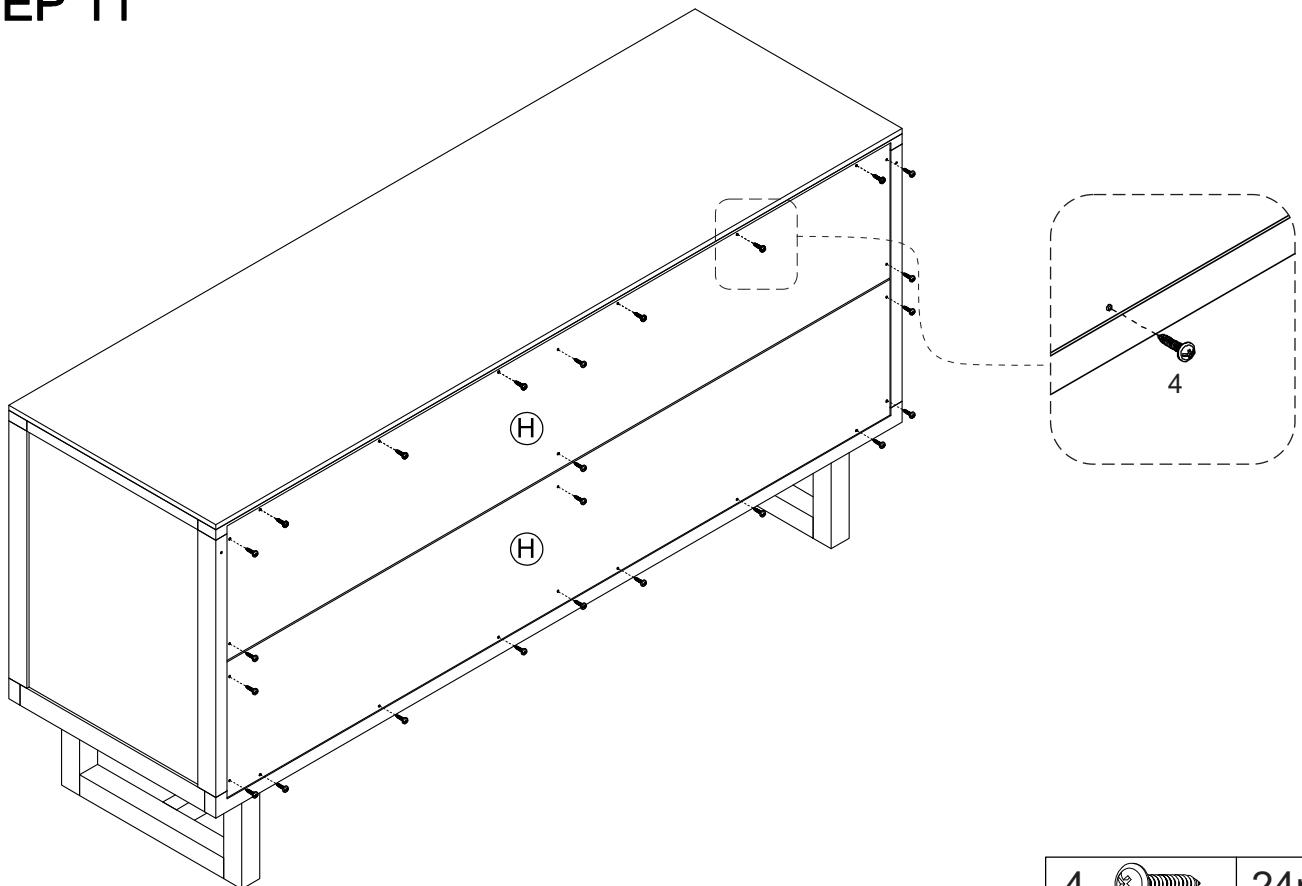


Attach Back Panel (H) to the Cabinet back using Screw (4) with Screwdriver (Not provided).

STEP 12

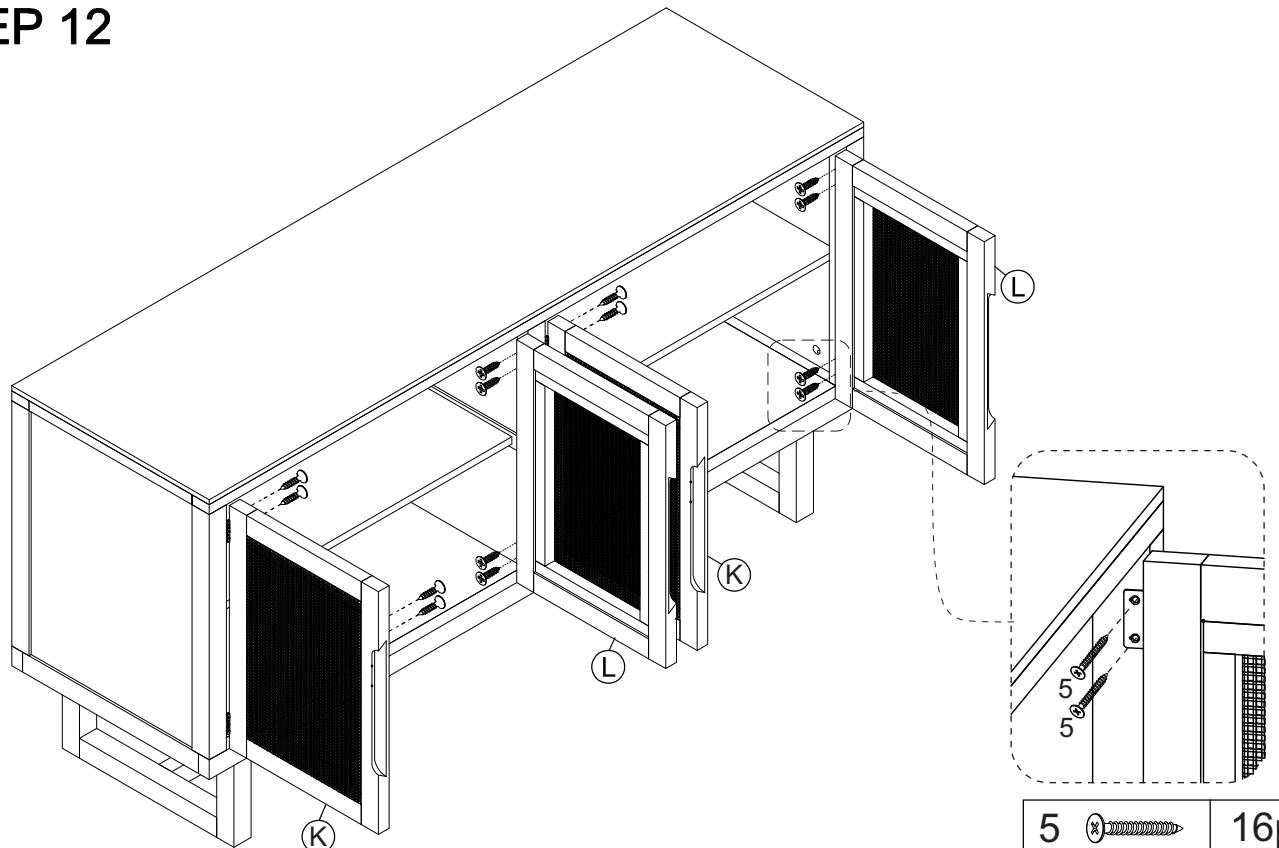

Attach Leg Door (K) and Right Door (L) to Left Side Board (B), Middle Vertical Panel (D) and Right Side Board (C) using Screw (5) with Screwdriver (Not provided).

STEP 13

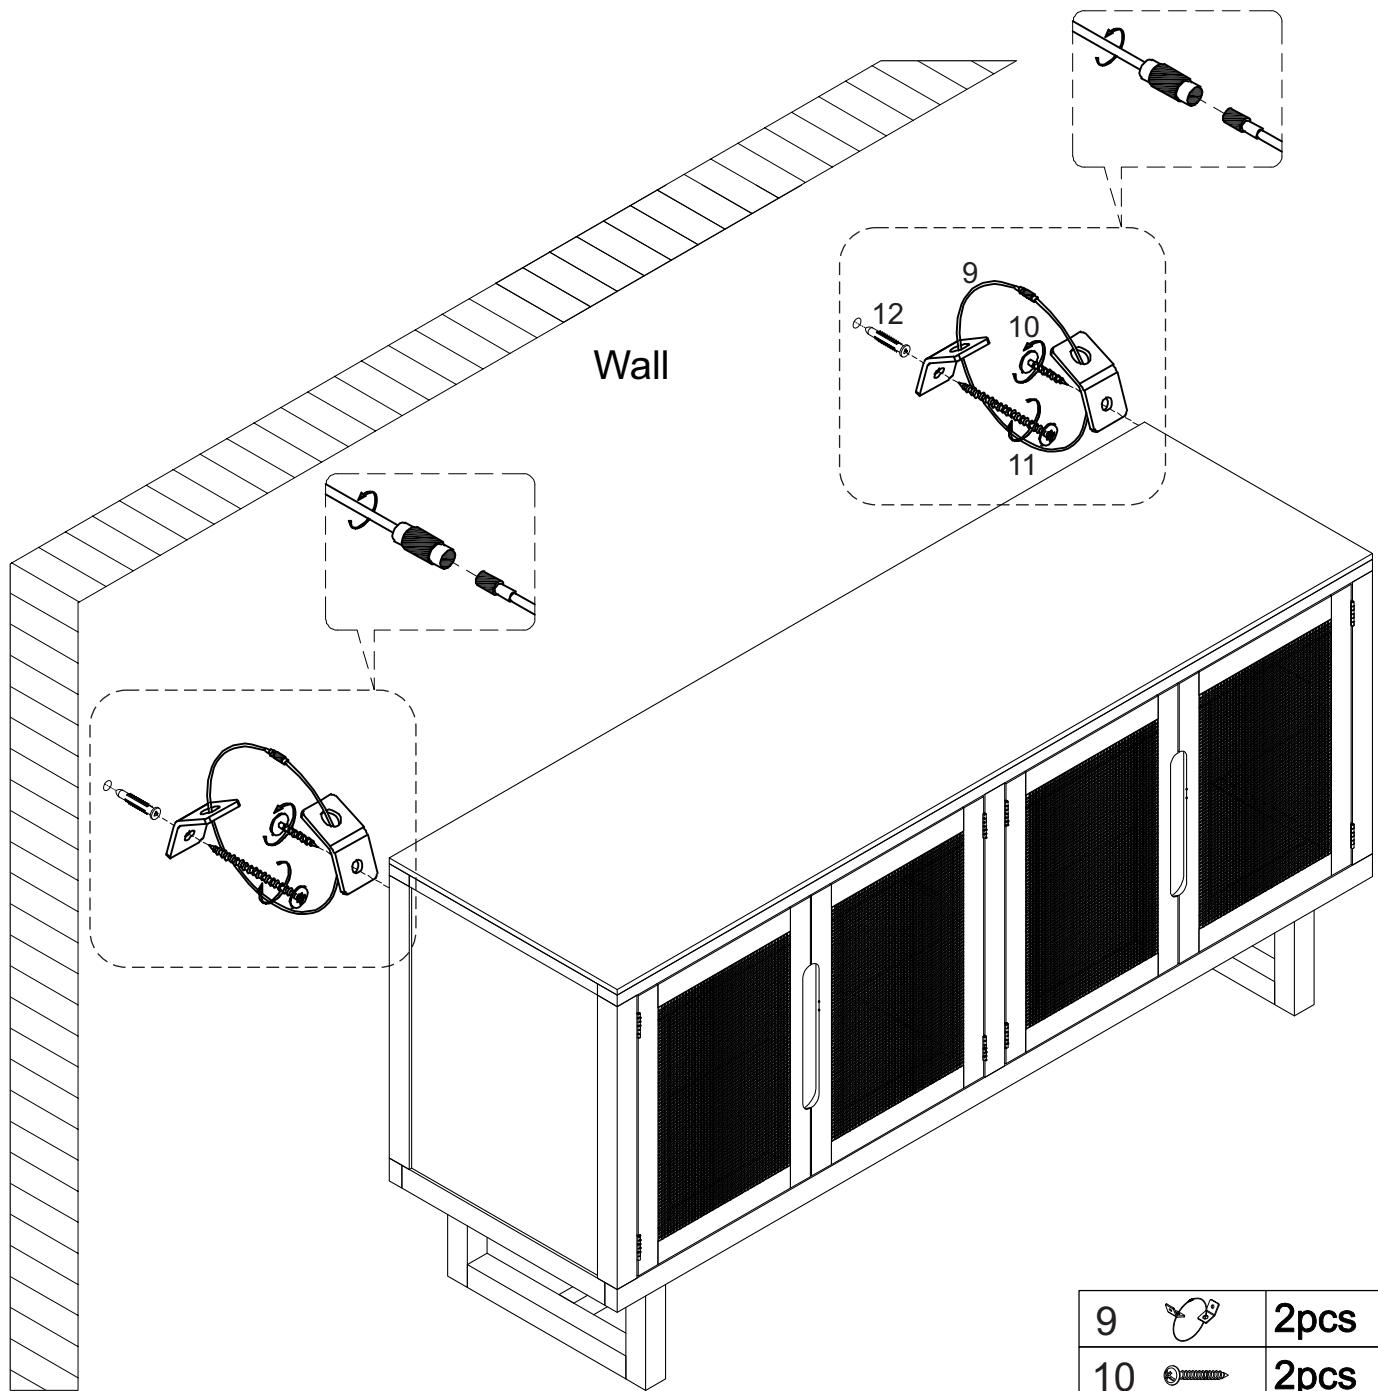

9		2pcs
10		2pcs
11		2pcs
12		2pcs

- 13.1) Connect the Anti fall hardware (9) to Cabinet with help of Round head screw (10) and Screwdriver (Not provided) same as other side.
- 13.2) Move the Cabinet back to the wall. Mark two points same width of Cabinet on the wall.
- 13.3) Drill two holes on wall at 5 cm below from the height of Cabinet as Anti fall hardware on the Cabinet with Power Drill (Not provided).
Insert Plastic wall bolts (12) into drilled holes on the wall with Hammer (Not provided).
- 13.4) Attach Anti fall hardware (9) to Plastic wall bolts (12) using Round head screw (11), and Screwdriver (Not provided) same as other side.

Your Cabinet is ready for use.
This Cabinet can only be used on a flat, level surface.