

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED

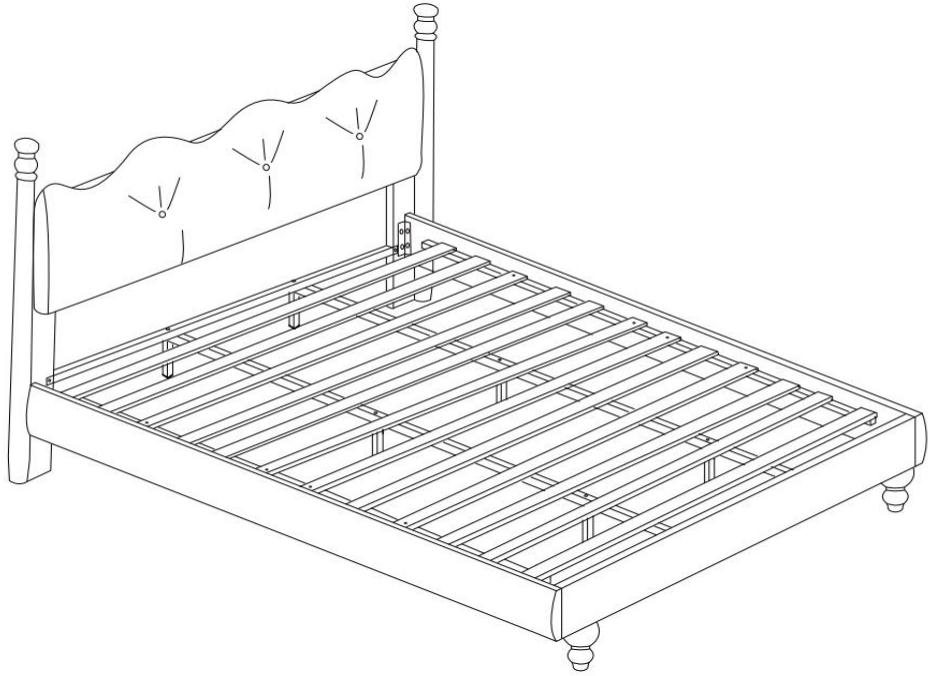








NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.


The bed is **HEAVY**.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.

Parts List

Label	Picture	Description	QTY
A		Headboard	1
B		Footboard	1
CL&CR		Bedside Panel	2
D		Wooden Leg	2
E		Slat	12
F		Bedside Rod	2
G		Center Rod	2
H		Support Leg	6
IL / IR		L-shape Connector	4
J		Front Side Cleat(Iron)	1
K		Headboard Pillar	2
ML / MR		Headboard support board	2
O		Side Slat Plug	24



Hardware List

Label	Picture	Description	QTY
①		Bolt(M8 x20mm)	22
②		Bolt(M8 x40mm)	32
③		Flat Washer	10
④		Allen Key N6	1
⑤		Bolt(M8 x50mm)	1
⑥		Nut	14
⑦		Spanner	1


Assembly Preparation

Before
Beginning
Assembly:

N761P383540

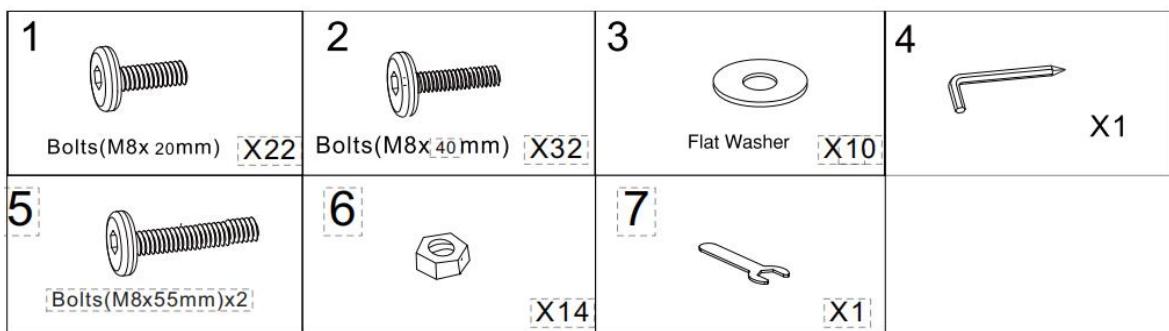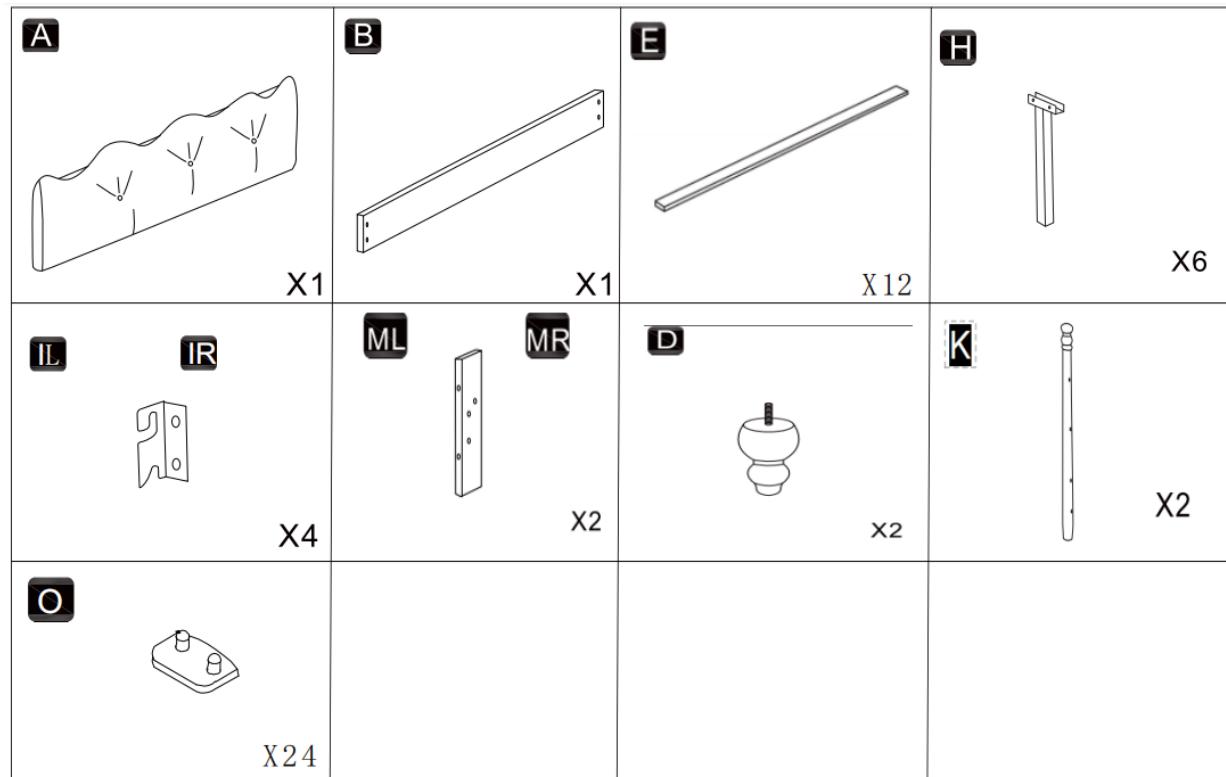

N761P383541

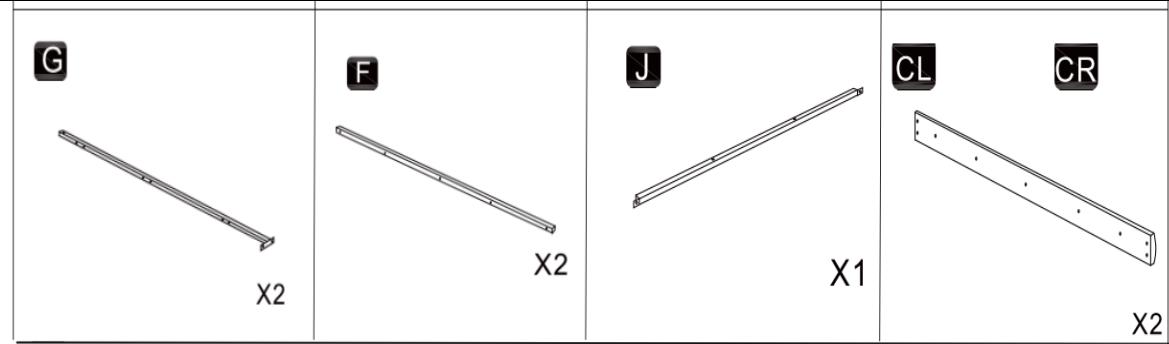

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-




- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-

- Save all packaging until finished-

Overview

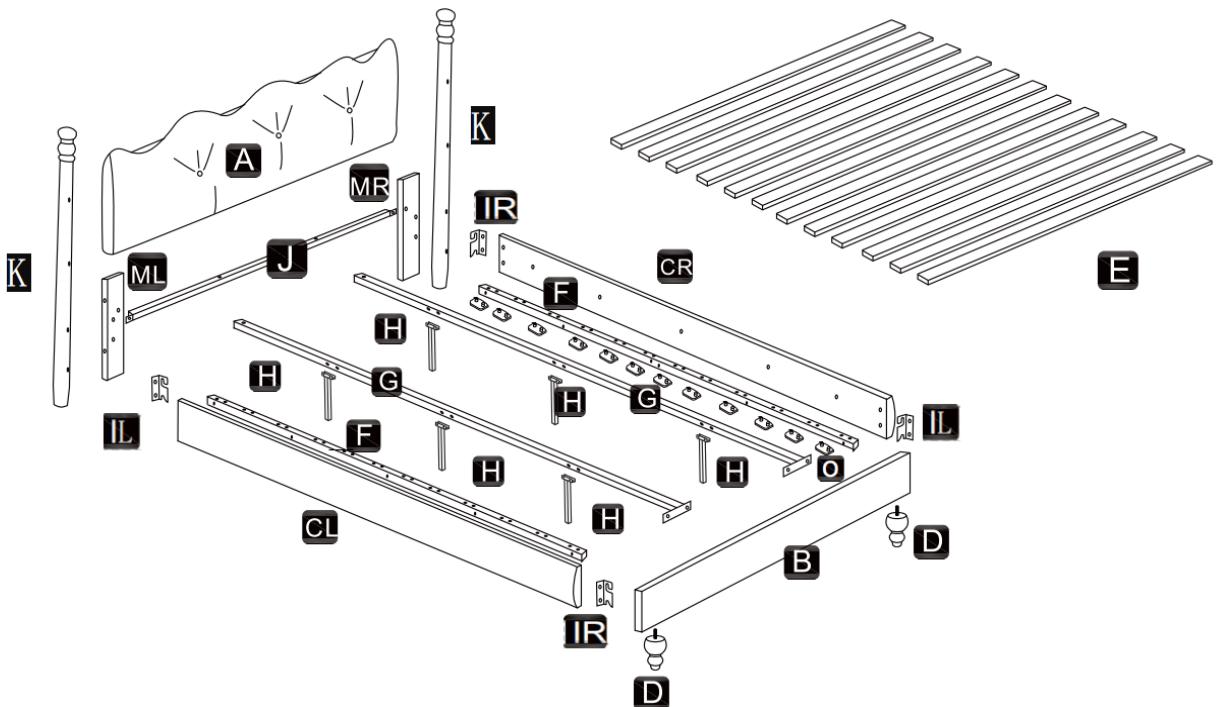


This Bed has multiple parts and may require up to 60 minutes to assemble.

To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

1 x8
4 x1

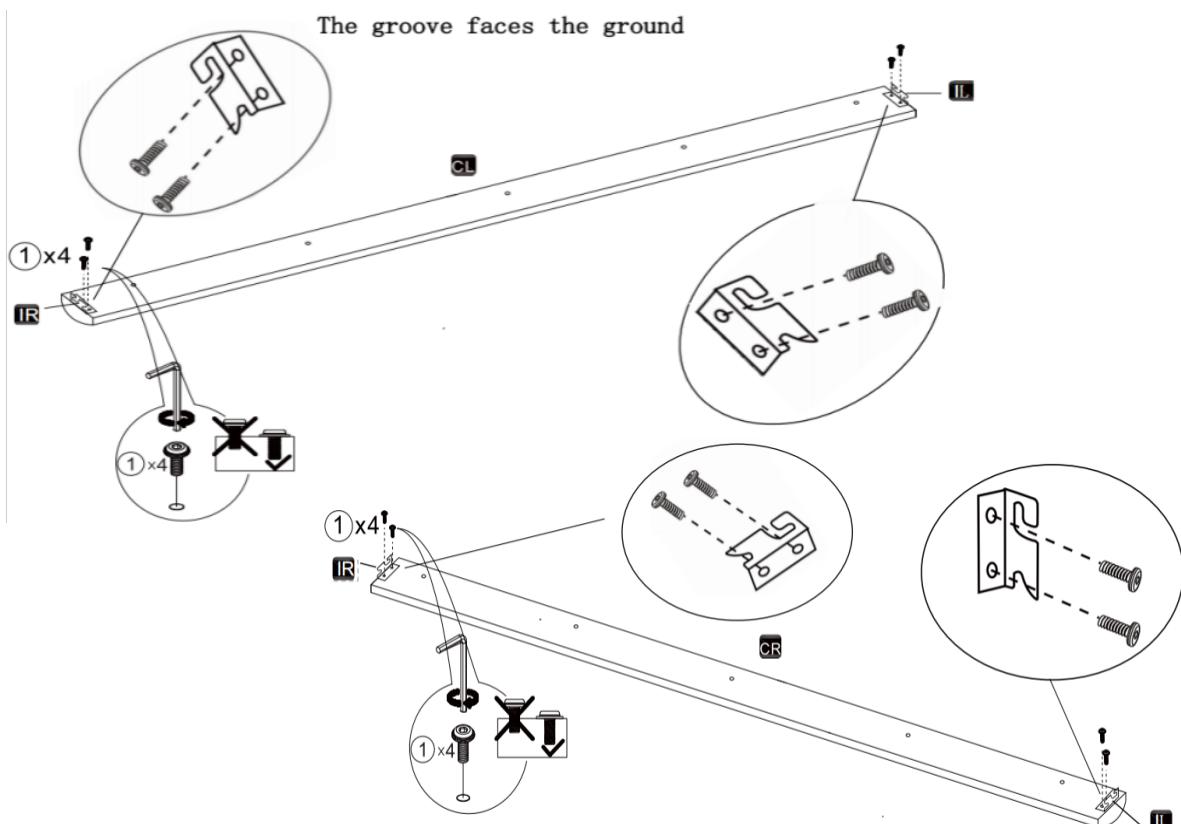

Attached the Fix the angle bracket (IL\$LR) to the bed side (CL\$CR) with the screw (1) and tighten it with an internal hexagonal wrench (4). Note: Do not fully tighten the bolt.


Step 2

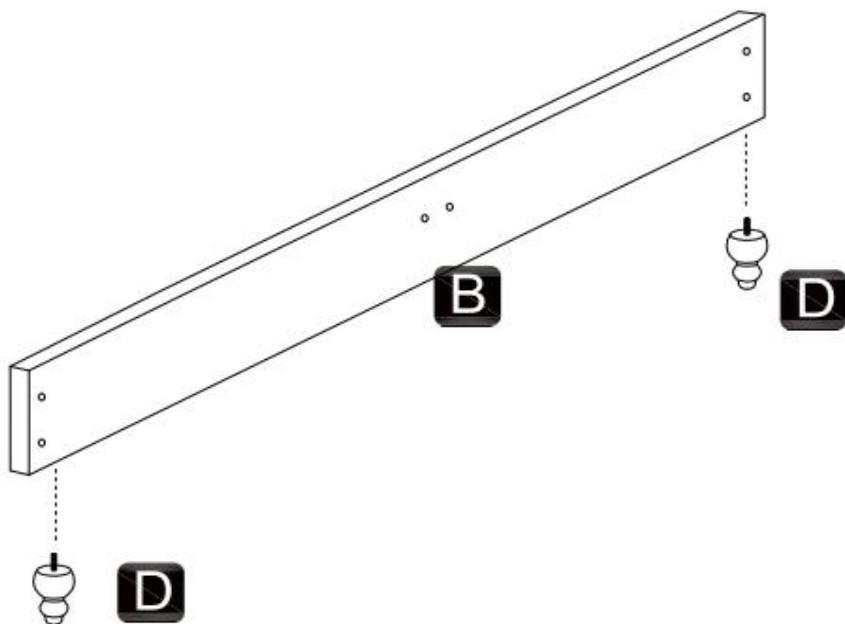

Install Leg(D) to Footboard(B) then tighten it by turning the legs clockwise until the legs are completely secured.

Step 3

2	●	x10
3	○	x10
4	└	x1

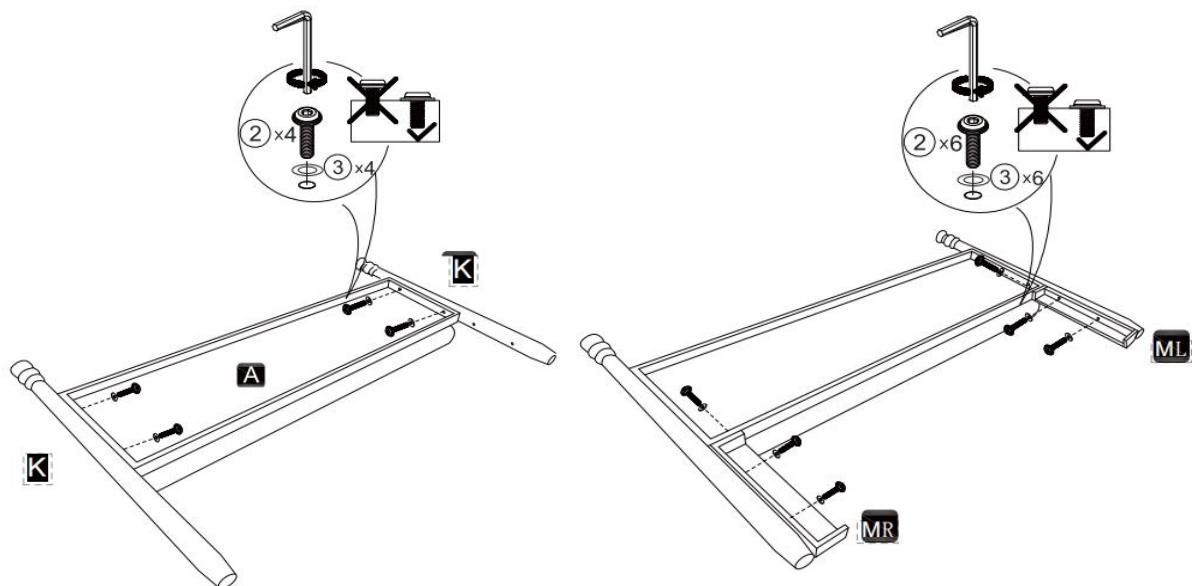

Place the Headboard(A) face skywards onto a clean, soft surface to avoid any scratches or damages to the product.

Align the mounting position of the back of Headboard(A) to Headboard Leg(K) as shown.

3-1 Attach Headboard(A) to Headboard Leg(K) using Bolts(②)+Flat washer(③) with Allen Key(④).


3-2 Attach Headboard Support Rail(MR) to Headboard Leg(K) using Bolts(②)+Flat washer(③) with Allen Key(④).

Repeat same step to attach the other Side Headboard Leg(ML).

Do not overtighten

Step 4


1  x4
4  x1

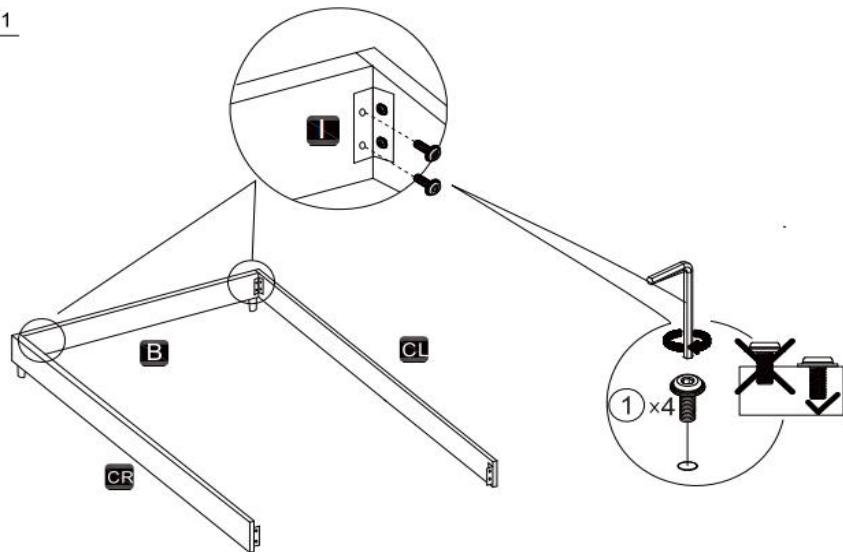

Attach Side Rail (CL&CR) to Footboard(B) using Bolt (①) with Allen Key(④).

Step 5


1  x4
4  x1

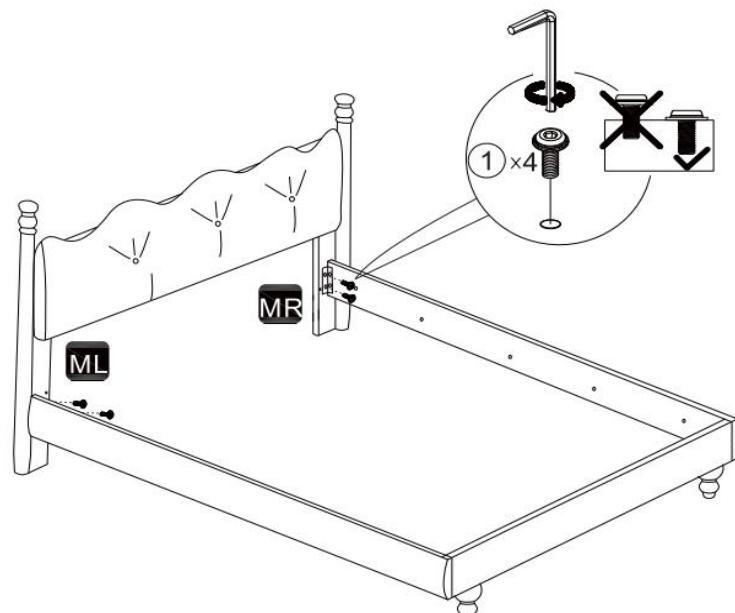

Attach Side Rail (CL&CR) to Headboard Support Rail(ML&MR) by using Bolt (①) with Allen Key(④).

Step 6


2  x10
4  x1

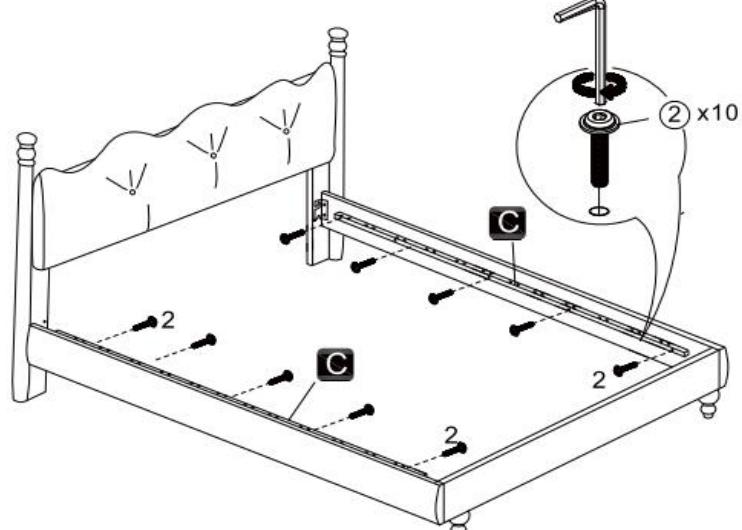

Attach Side Cleat(F) to assembled Side Rail Frame(CL) by using Bolts(②) with Allen Key(④).
Repeat same step to assemble the other Side(CR).

Step 7


1  x2
4  x1

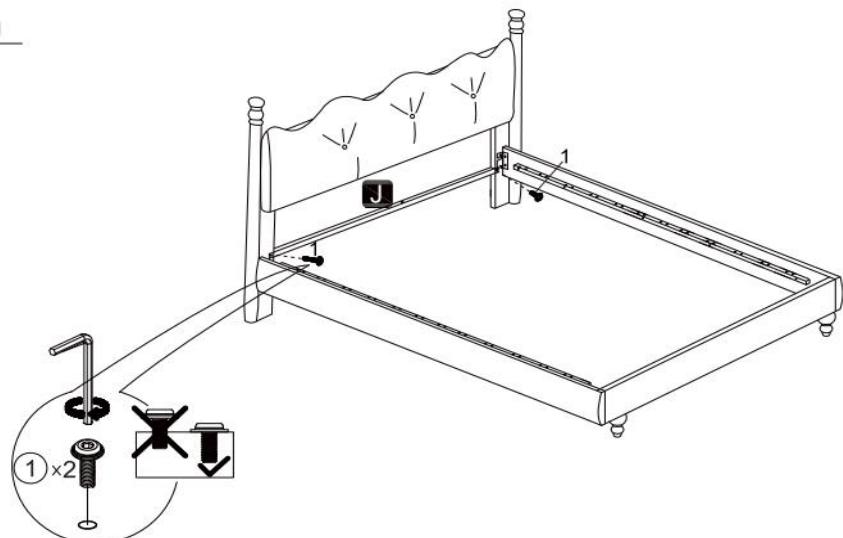

Attach Front Side Cleat(J) to Headboard Support Rail(ML&MR) using Bolt (①) with Allen Key(④) as shown in step 7


Step 8

1  x4
2  x12
4  x1
5  x2
6  x7
7  x1

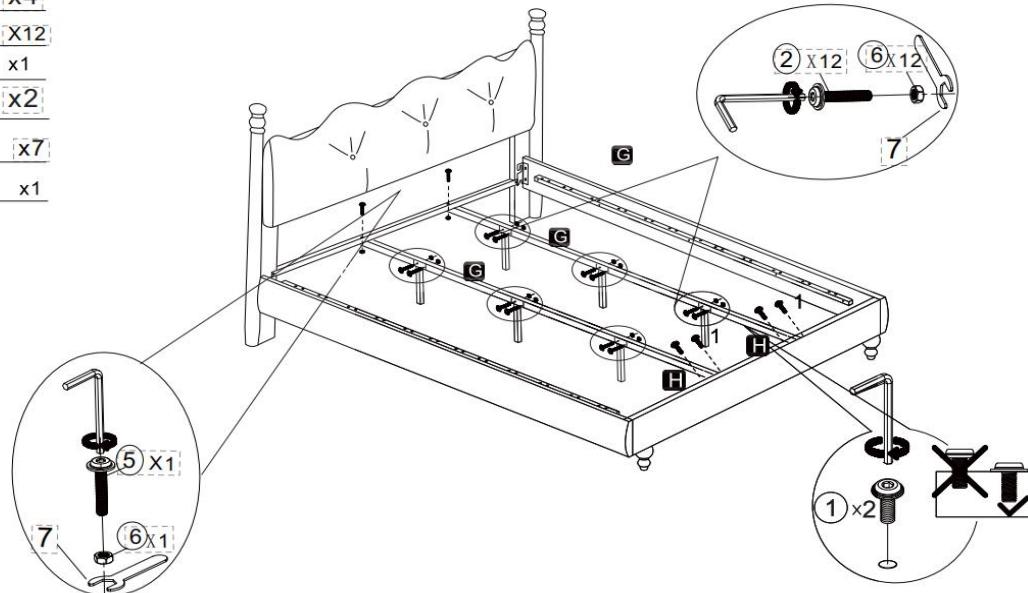

Attach Center Support Leg(H) to Front Side Cleat(J) using Bolts(⑤)+Nut(⑥) with Allen Key(④)&Spanner(⑦).
Attach Center Support Leg(H) to Center Side Cleat(G) using Bolts(②)+Nut(⑥) with Allen Key(④)&Spanner(⑦).
Attach Center Support Leg(H) to Footboard(B) using Bolts(①) with Allen Key(④).

Step 9

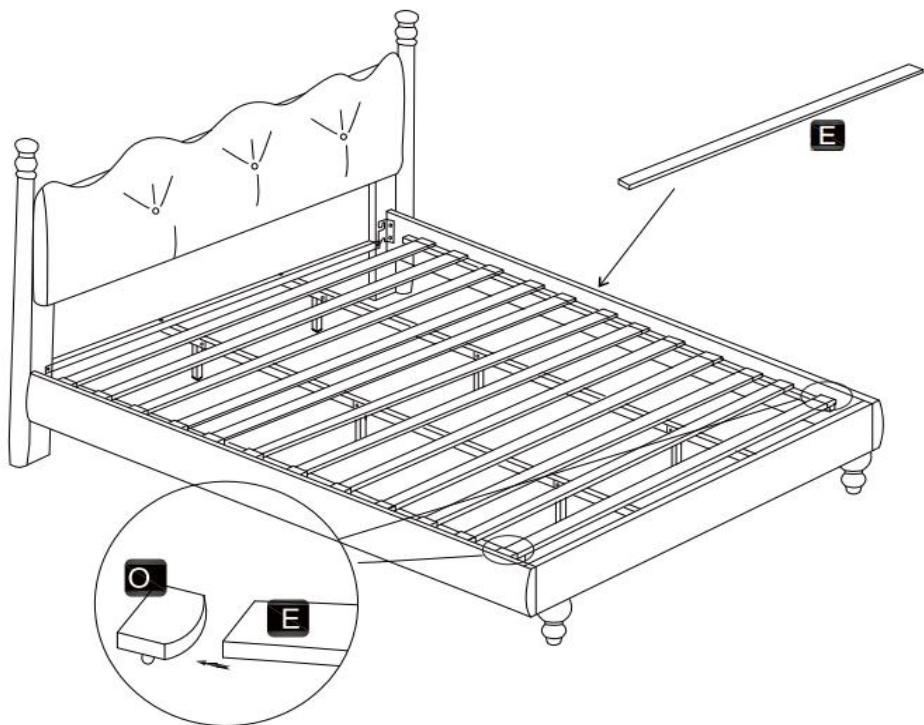


Fully tighten all bolts at each joint in a sequential manner.

Insert the Side Slat Plug (O) into both ends of the Slat (E).

Align the Side Slat Plug (O) with the mounting position on the Side Cleat (F) and press it into place by hand.

Repeat the same step to assemble the remaining Slat (E).

Step 10

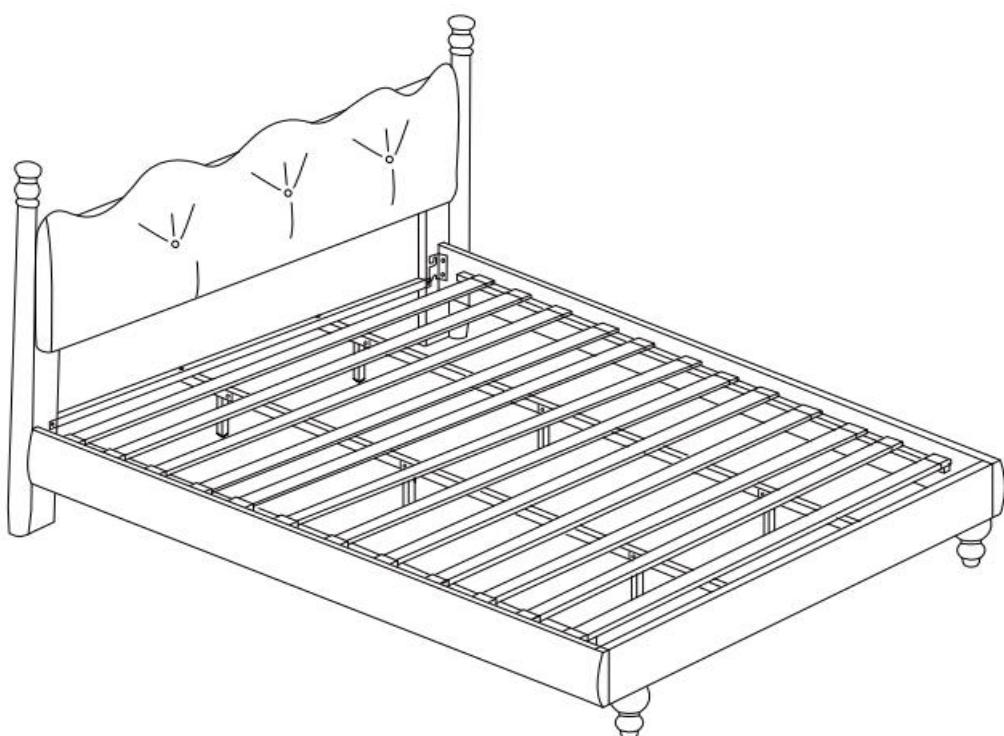

Your bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.