

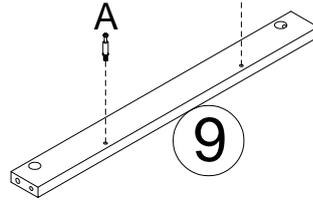
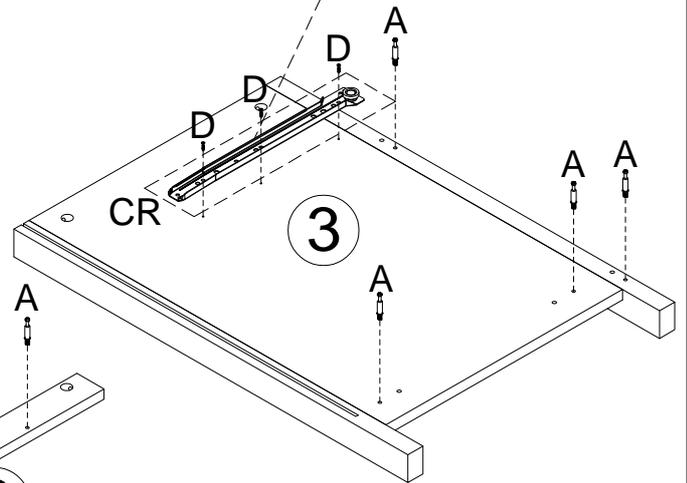
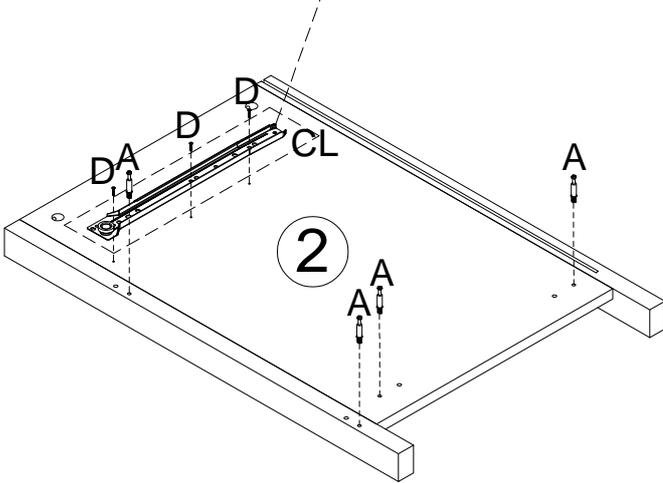
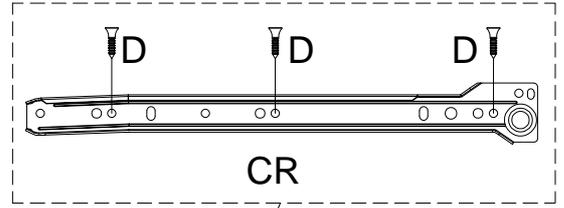
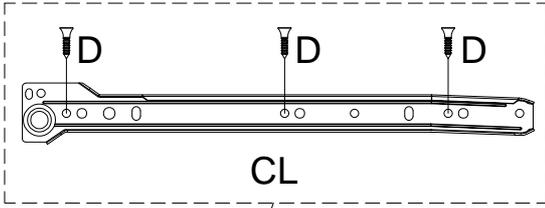

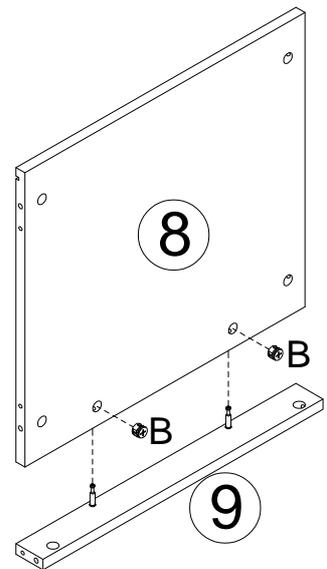


 A×18	 B×18	 C×12	 D×12 3×12mm	 E×8 3×14mm	 F×1 4×12mm	 G×2 4×18mm
 H×5 4×35mm	 I×1	 J×1	 K×8	 L×1	 CL×1	 CR×1
 DL×1	 DR×1					



# STEP 1

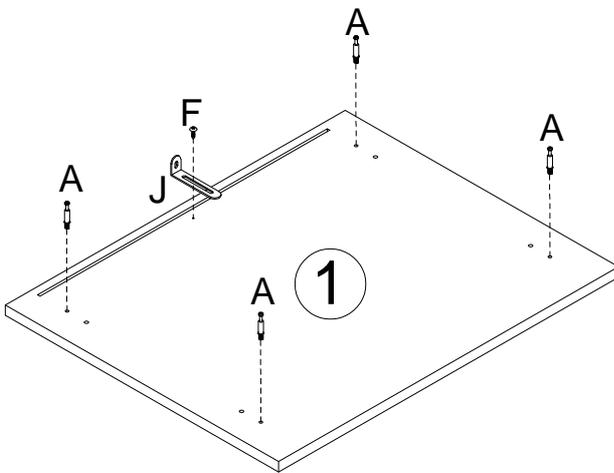



# STEP 2




### STEP 3

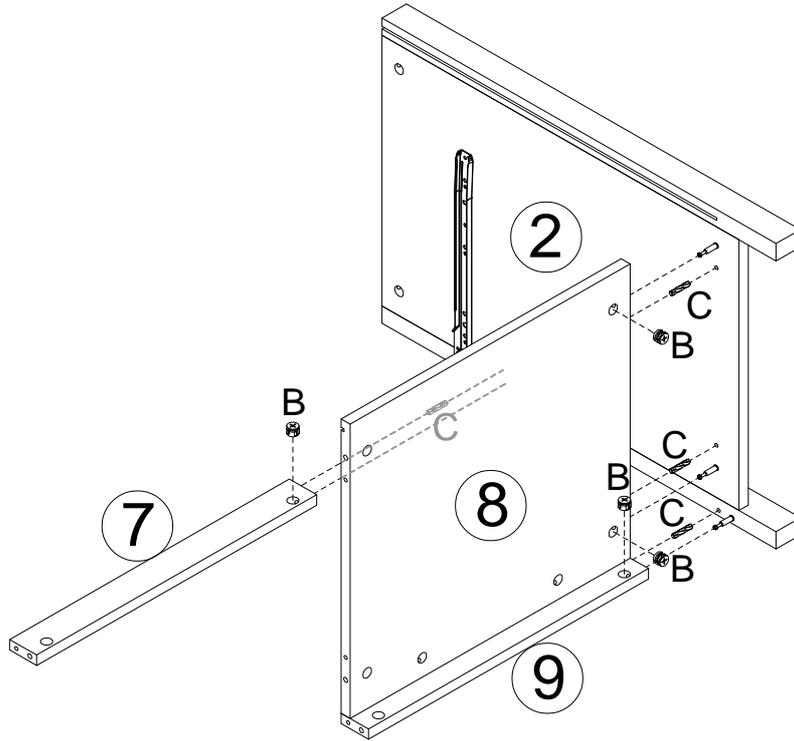



### STEP 4

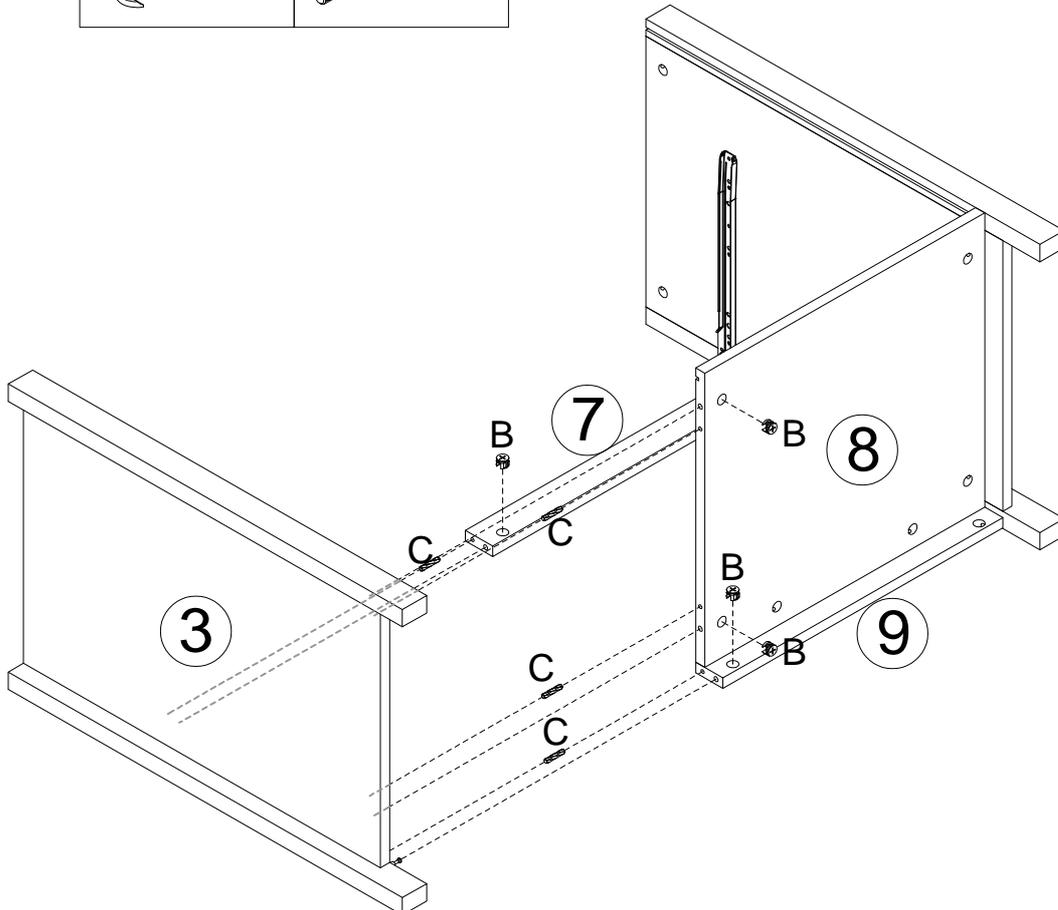




# STEP 5

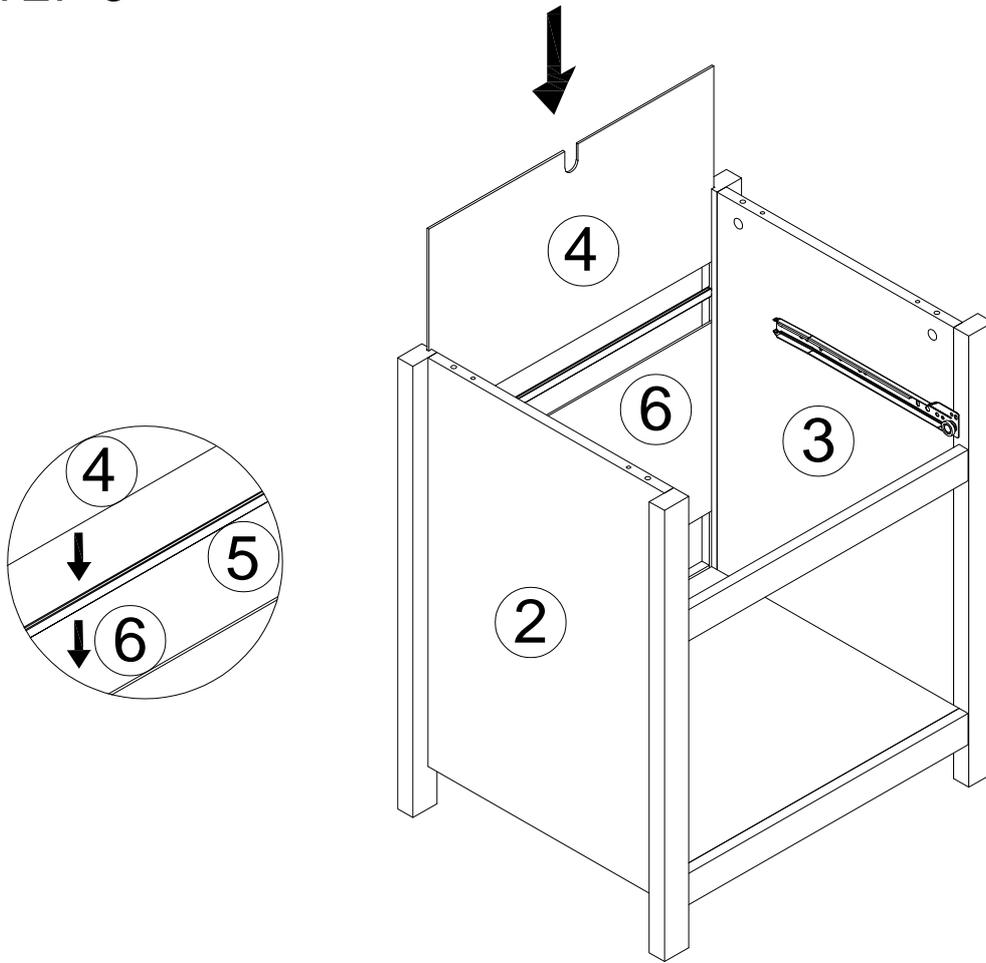




# STEP 6

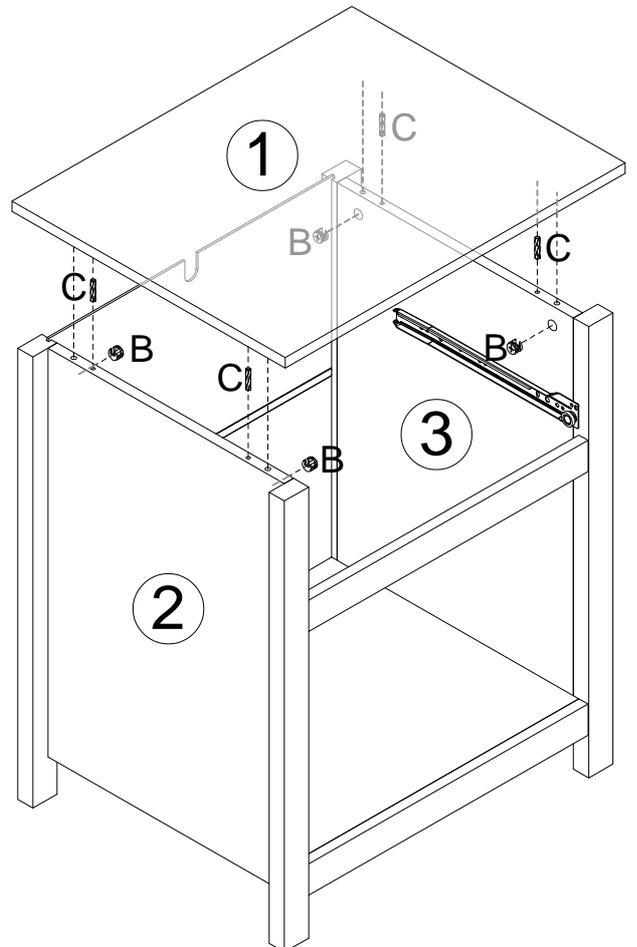




# STEP 7

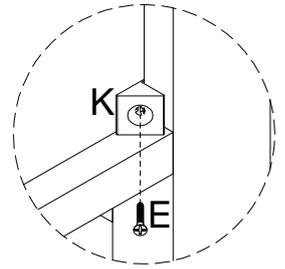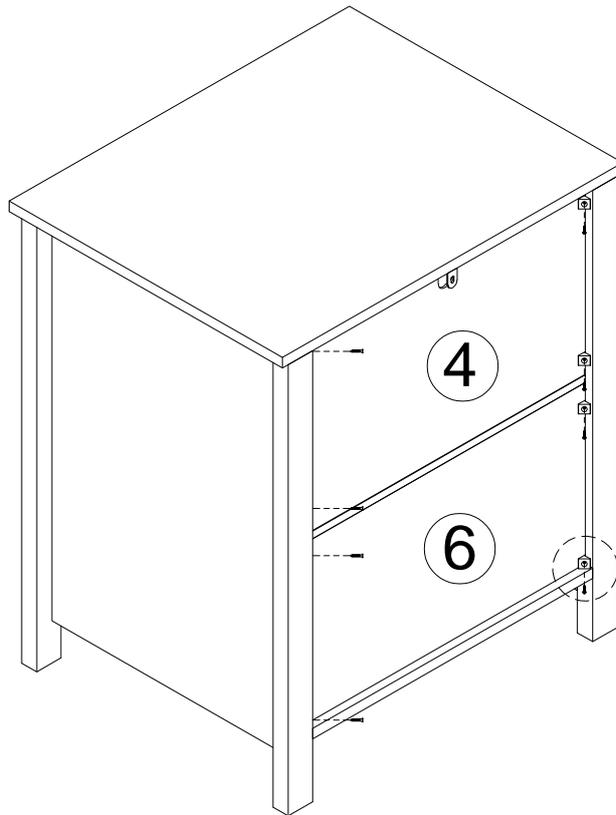



# STEP 8

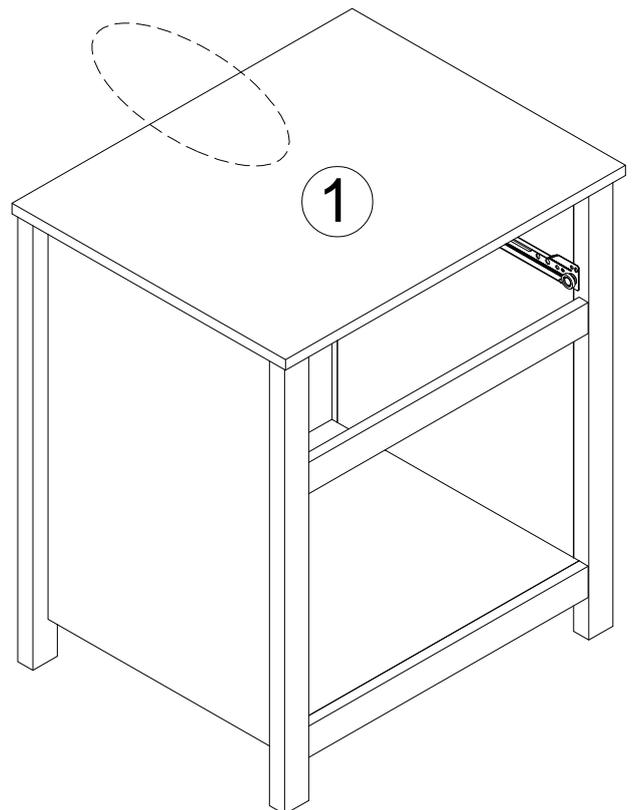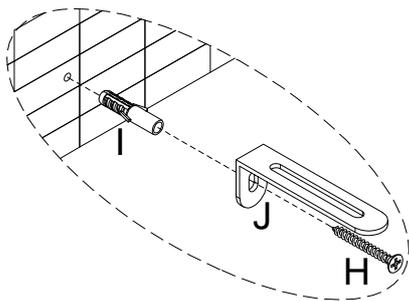




# STEP 9

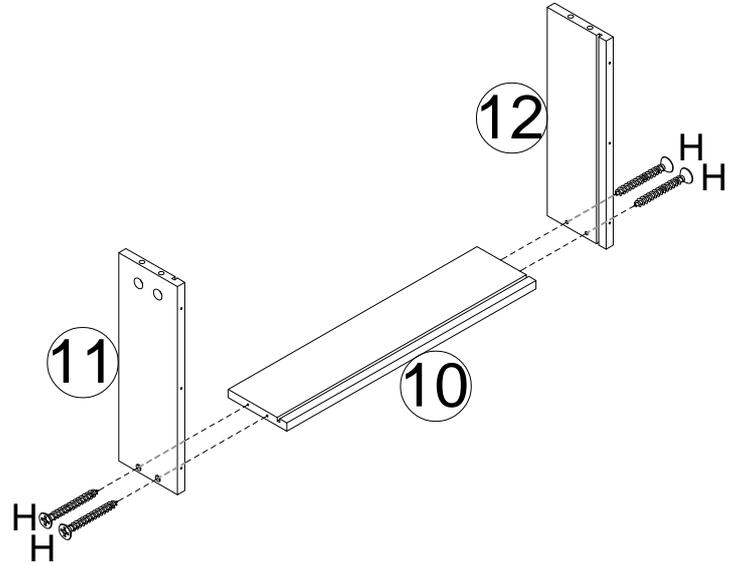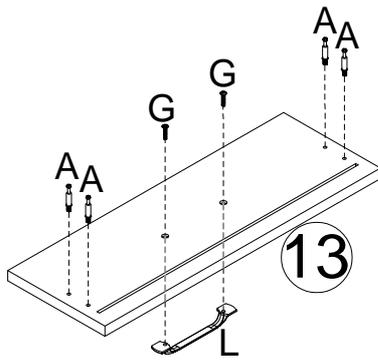

# STEP 10

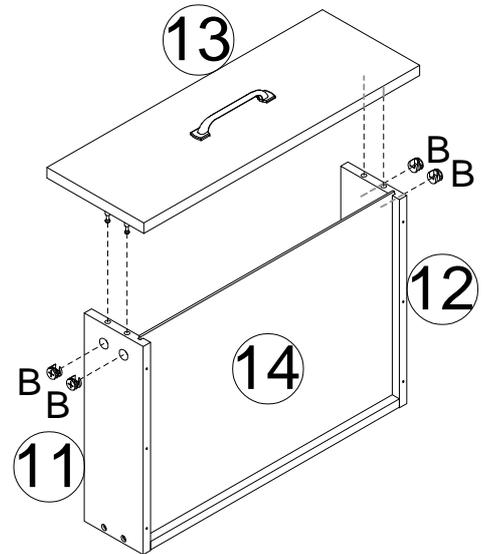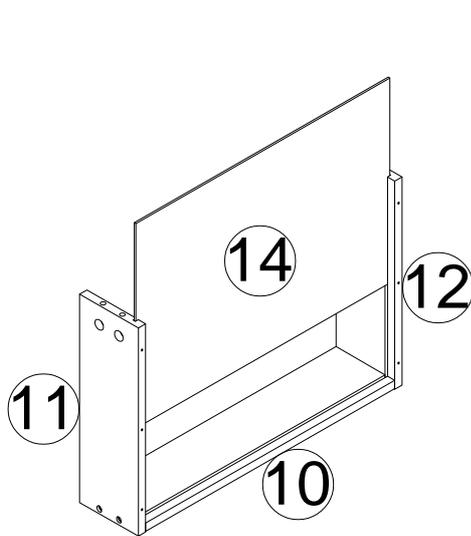

## STEP 11

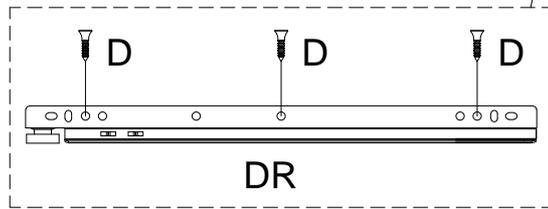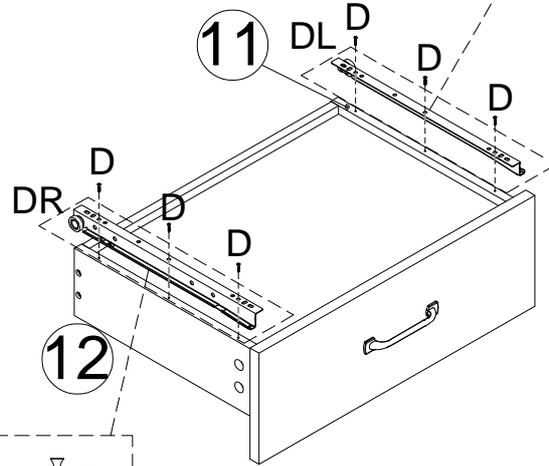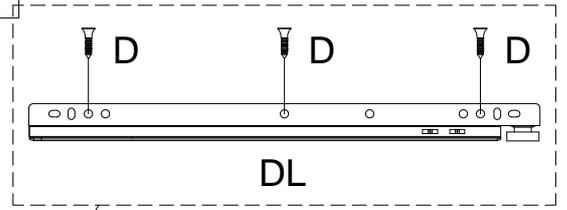

## STEP 12

### Drawer Installation Tip

Tilt the drawer downward toward the cabinet to align the rollers, then push it in smoothly. Adjust if the panel looks uneven.

