
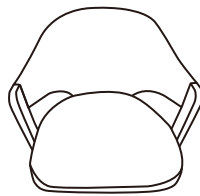


FREYA 203-146

ASSEMBLY INSTRUCTIONS


INSTRUCTION D' ASSEMBLAGE

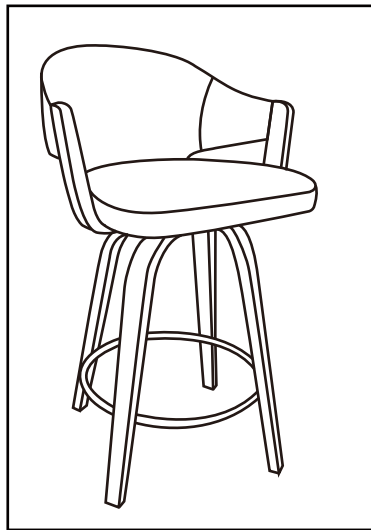


A




Bx4



C



D

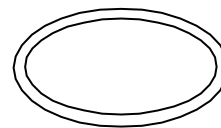

E

TURN TOP UPSIDE DOWN ON A SOFT WORKING SURFACE.

RETOURNEZ LE MEUBLE DANS L' AUTRE SENS SUR UNE SURFACE DE TRAVAIL NON RIGIDE.

a

M6*30MM



4+1pcs

b

M6*20MM



8+1pcs

c

M6*18MM





4+1pcs

g





M6



STEP 1/ETAPE 1

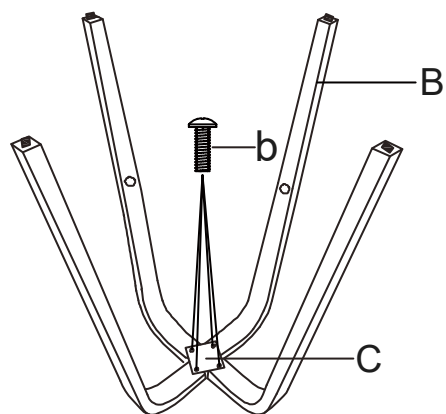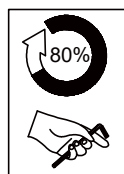



STEP 2/ETAPE 2

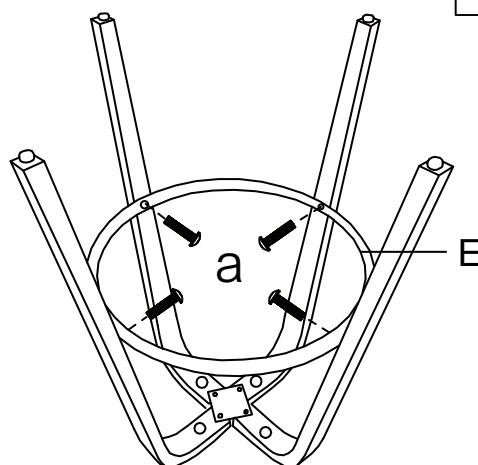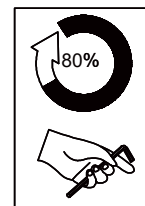

STEP 3/ETAPE 3

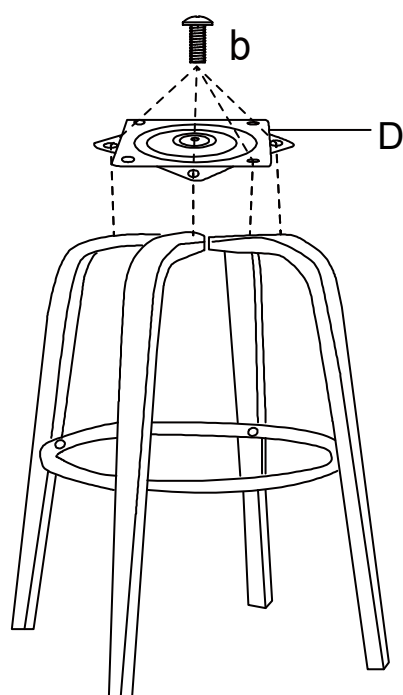

STEP 4/ETAPE 4

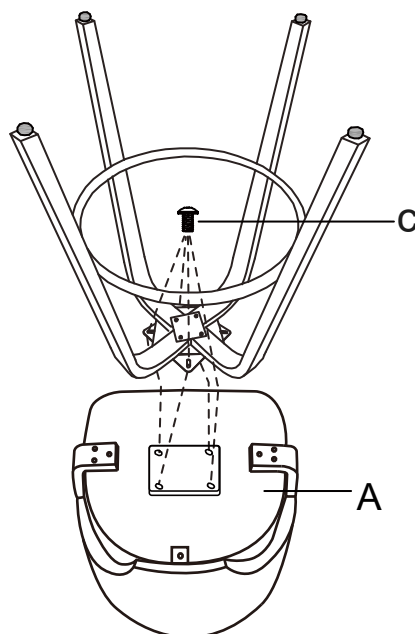

Fasten All screws indicate on Step 1 & Step 2

STEP 5/ETAPE 5

