



INSTALLATION INSTRUCTIONS

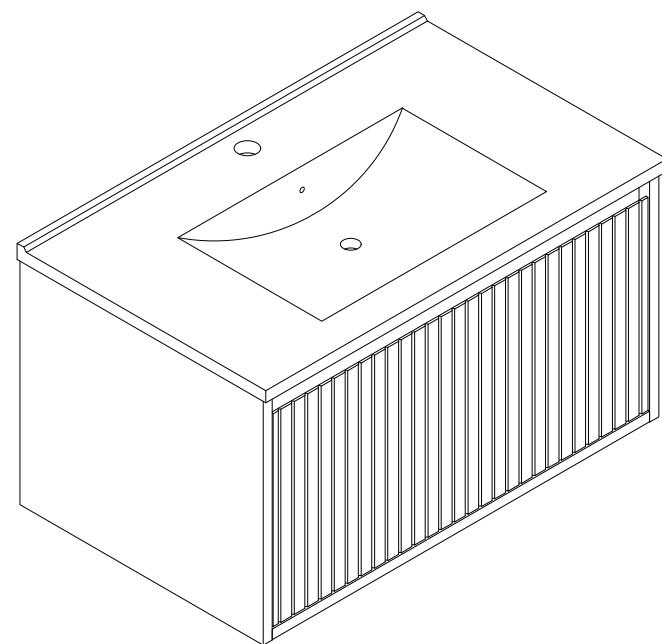


1 x 1


2 x 1

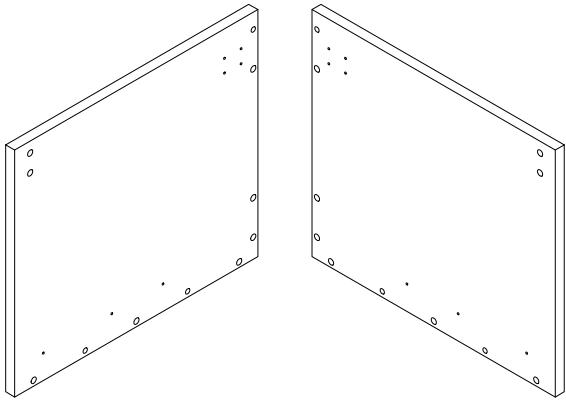


3 x 1

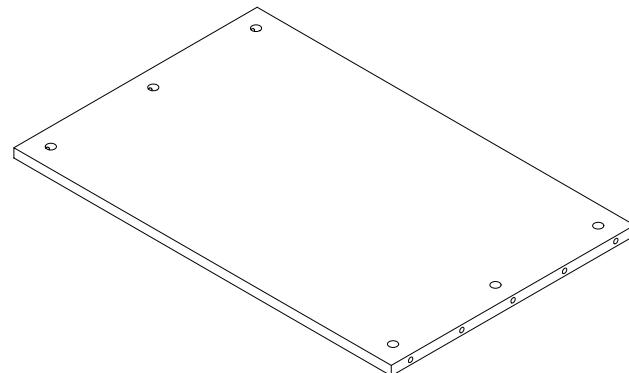


4 x 1

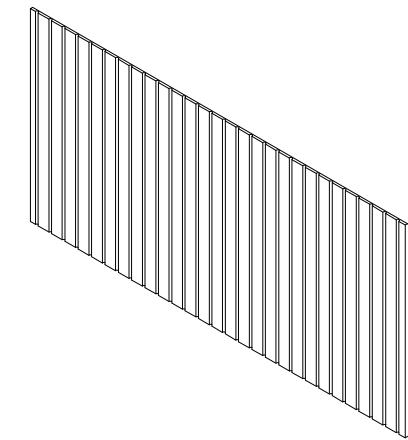


5 x 1

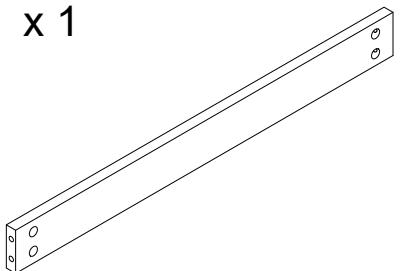


6 x 1

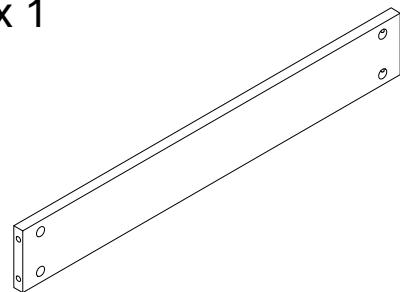

7 x 1

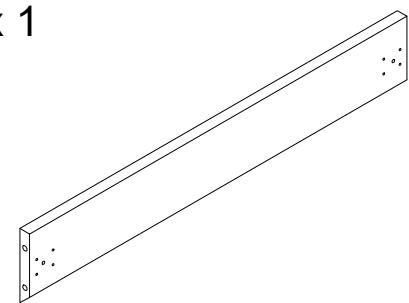


8 x 1

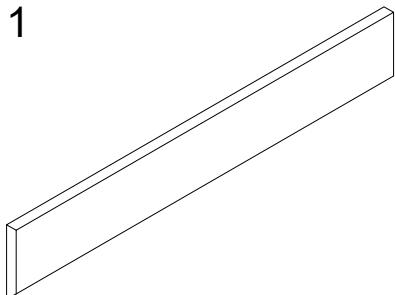


9 x 1

10 x 1

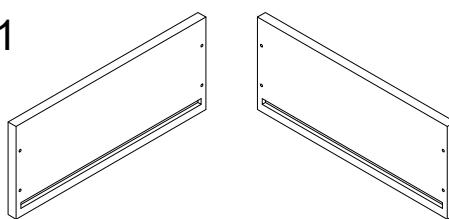



11 x 1

12 x 1

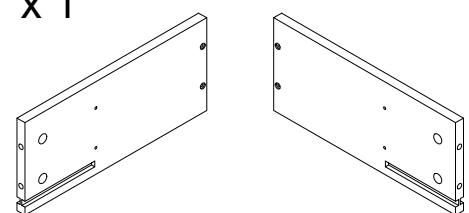


13 x 1


14 x 1

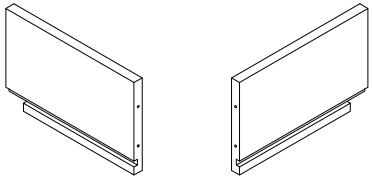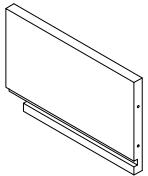


15 x 1




16 x 2

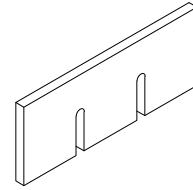


17 x 4

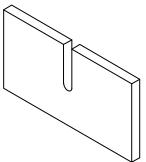


18 x 2

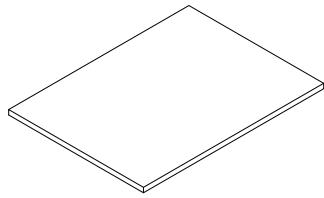

19 x 1




A1 x 20
A2 x 20

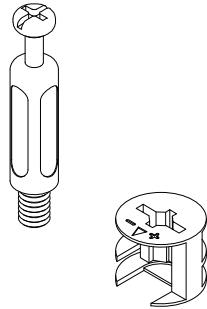

B x 6




C1 x 2
C2 x 2

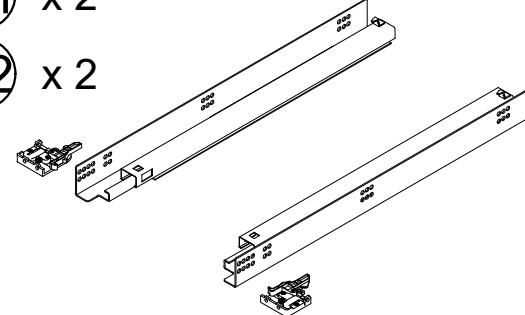


D x 28




E x 16




F x 7

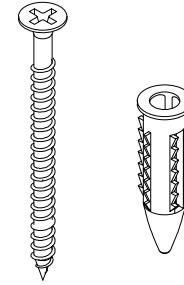

G x 2




A1 x 16

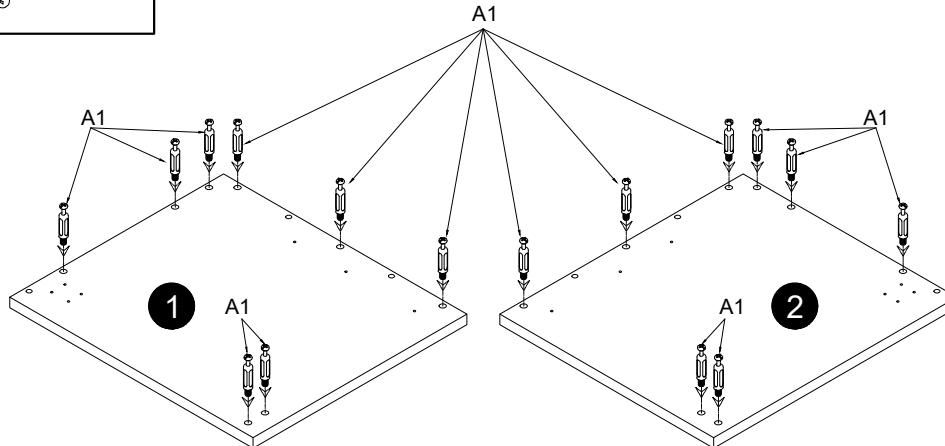


Step 1

C1 x 2




D x 6

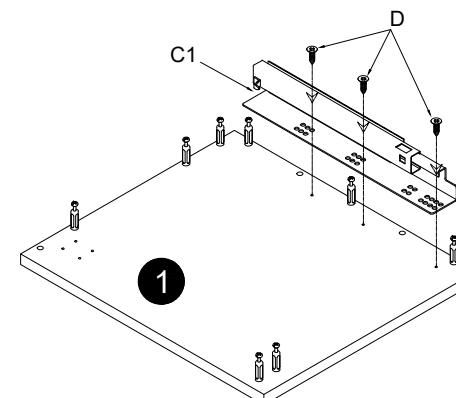


Step 2

B x 6

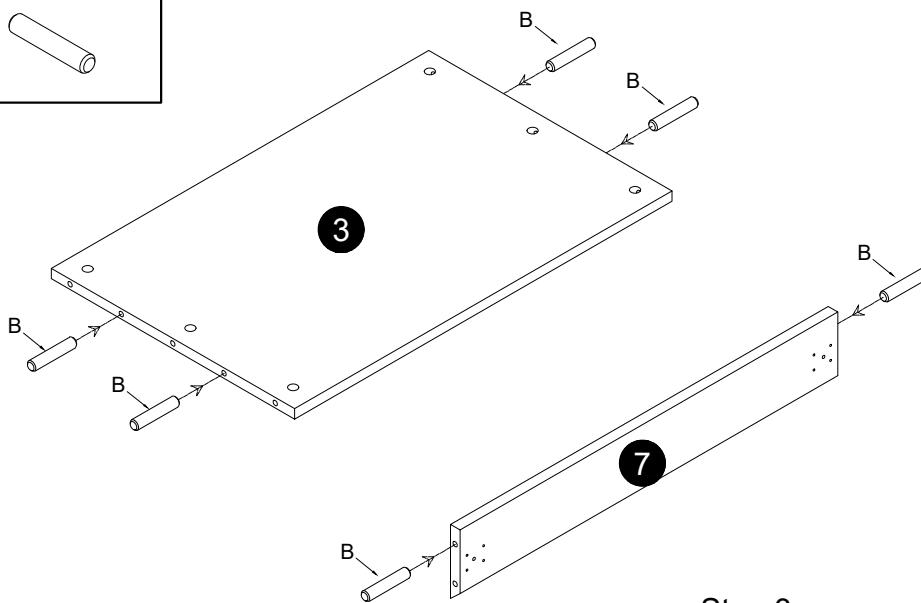


Step 3

A1 x 4

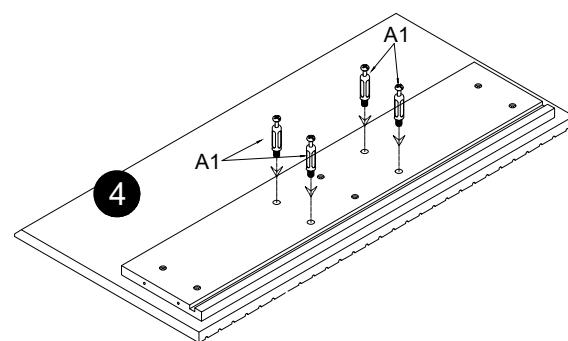


Step 4

A2 x 5


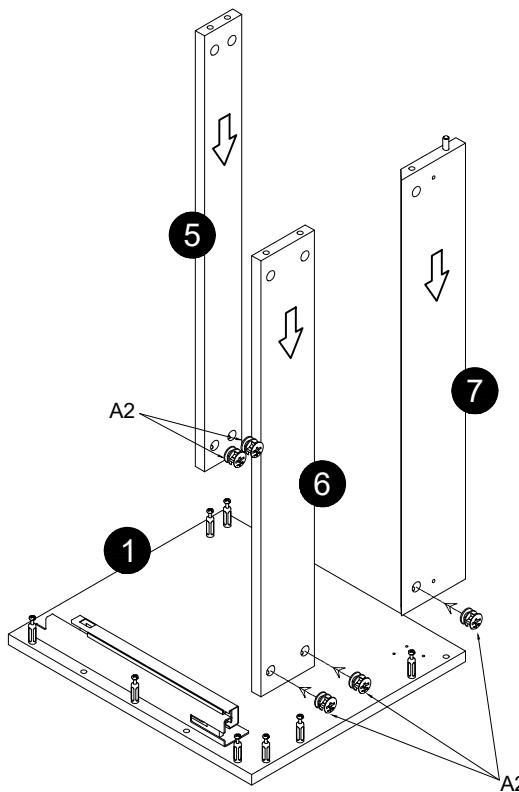


Step 5


A2 x 3

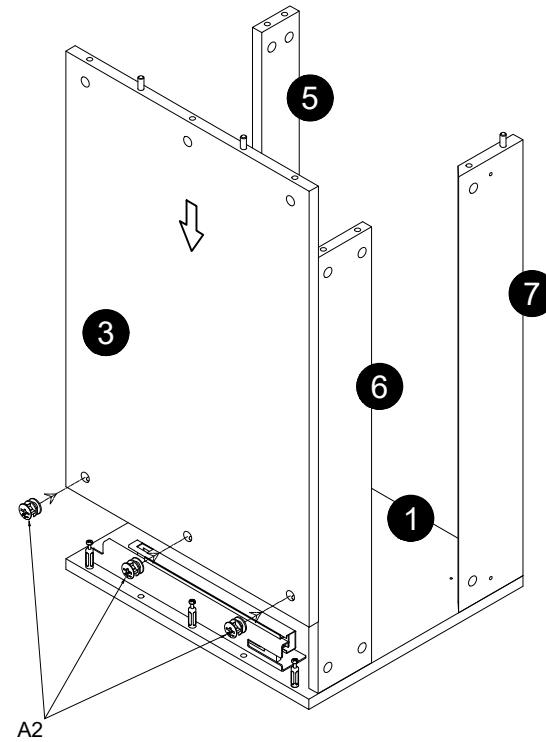


Step 6

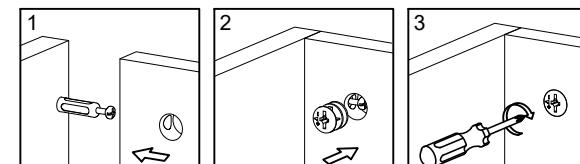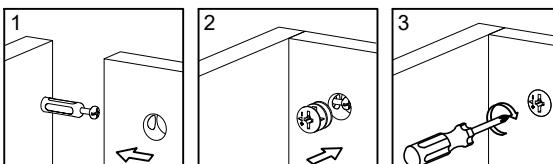


A2 x 8

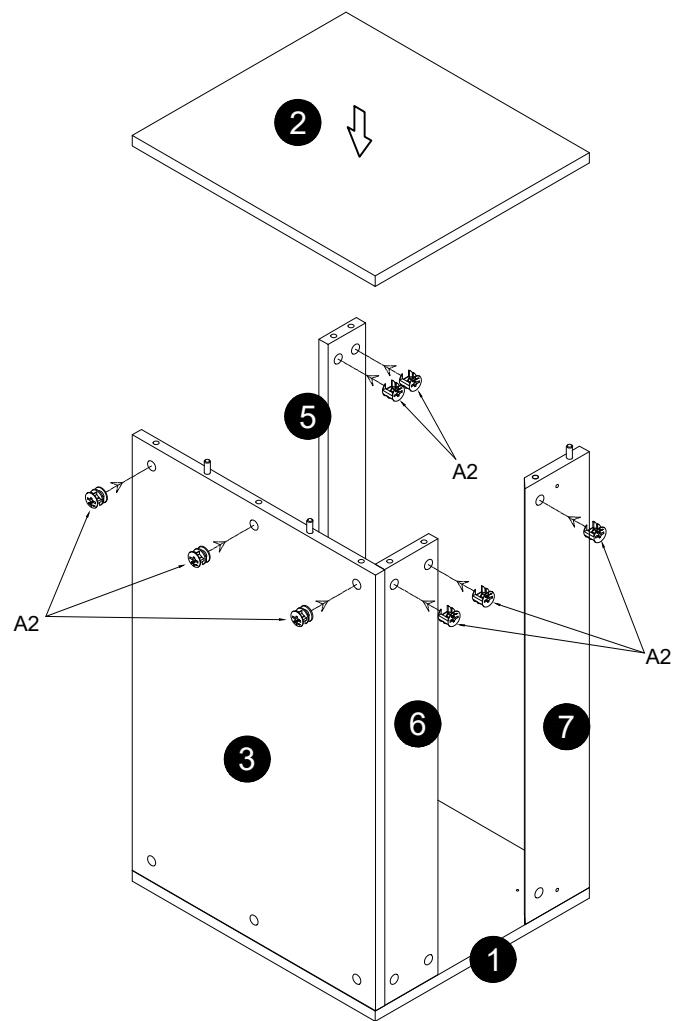

Step 7

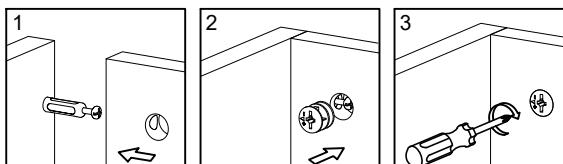


E x 4

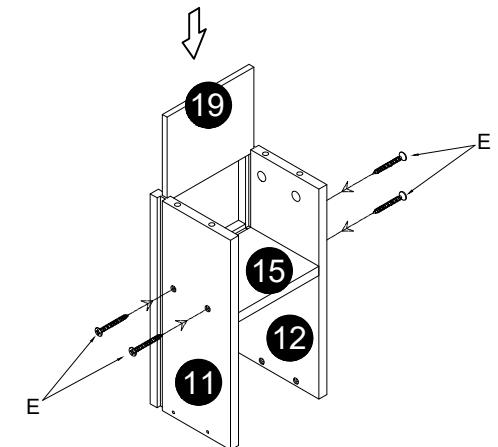


Step 8


A2 x 4

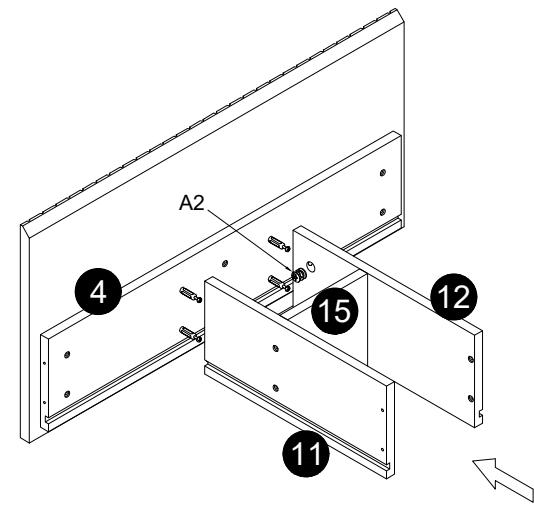

Step 9

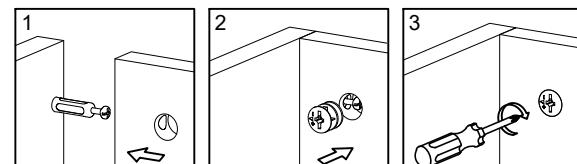

E x 12

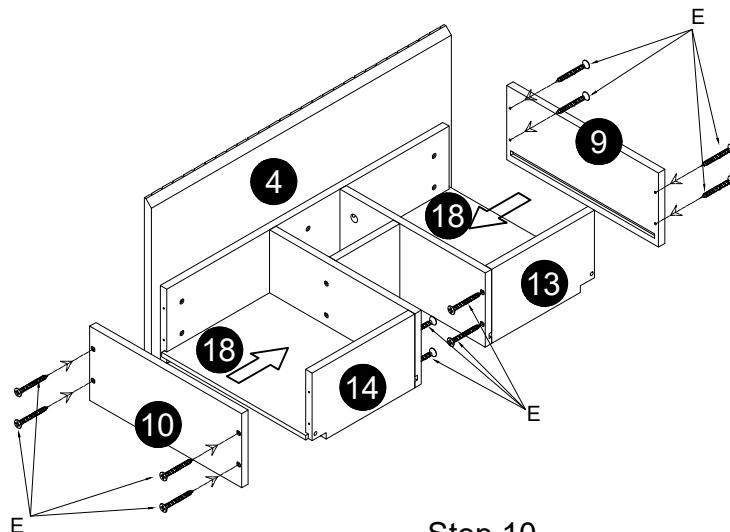


Step 10



D x 6




C2 x 2




Place C2 tightly into the corner as shown in the picture.
Use an electric screwdriver to secure it with screws

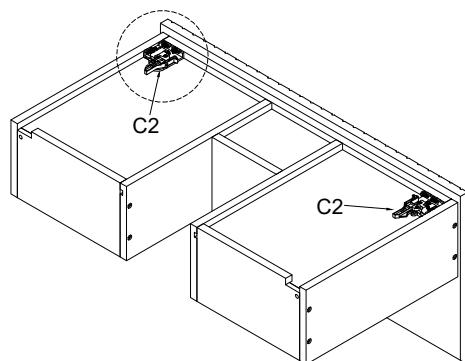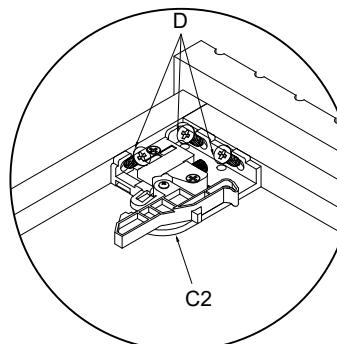

Step 11

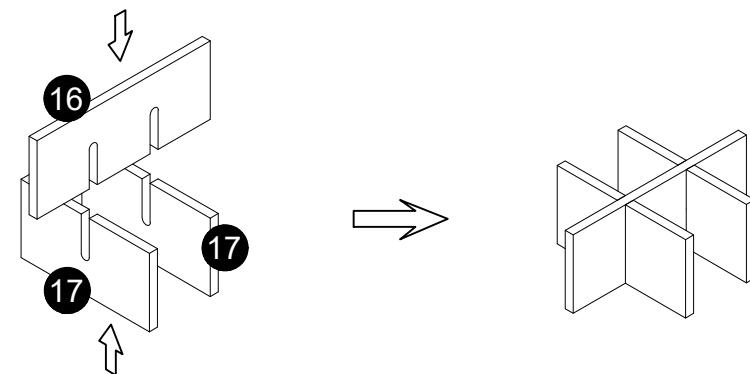

Step 12



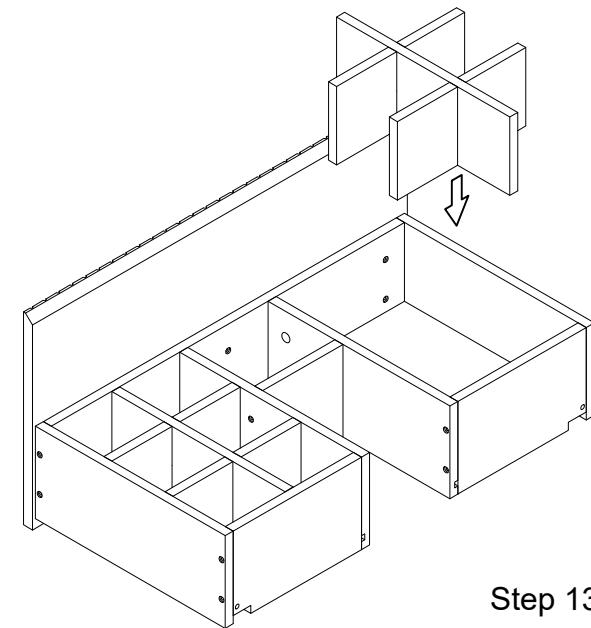


Step 13

D x 16




G x 2

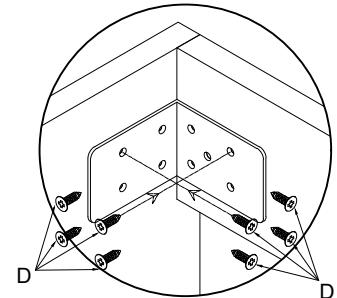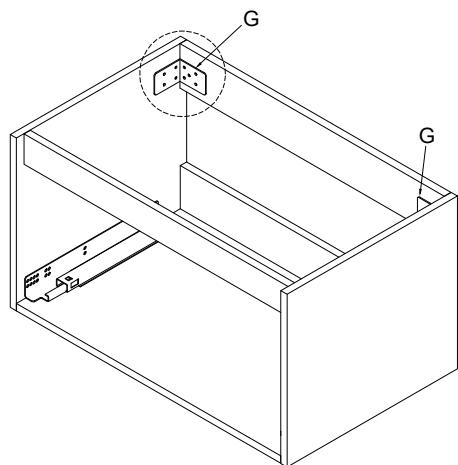

Step 14

Step 15

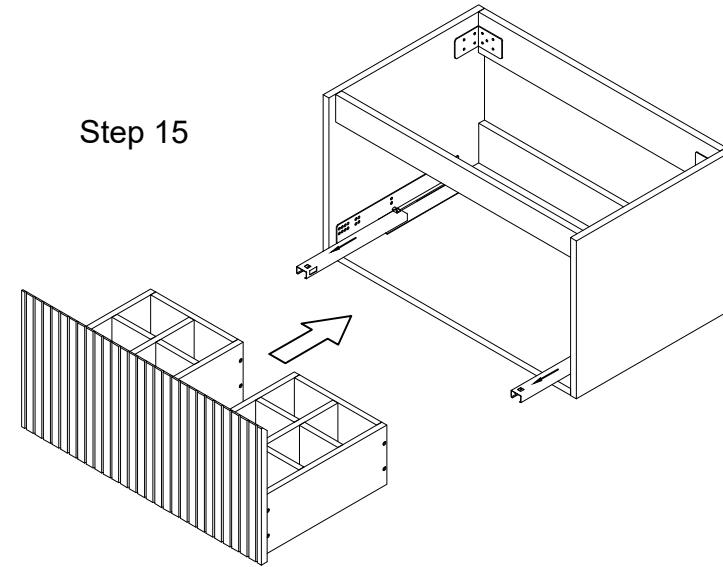

Complete

