

ASSEMBLY INSTRUCTION


Caution: You must read this before you proceed

Care & Maintenance

- ⊘  ● Not for commercial use. For residential use only.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ⊘  ● Do not place furniture under direct sunlight.
- ⊘  ● Do not place furniture near heating or cooling vents.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface
- ⊘  ● Do not place furniture outside. For indoor use only.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ⊘  ● Children should not climb or jump on the furniture.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth

UPHOLSTERED DAY BED

N757P387578V-N757P387579V

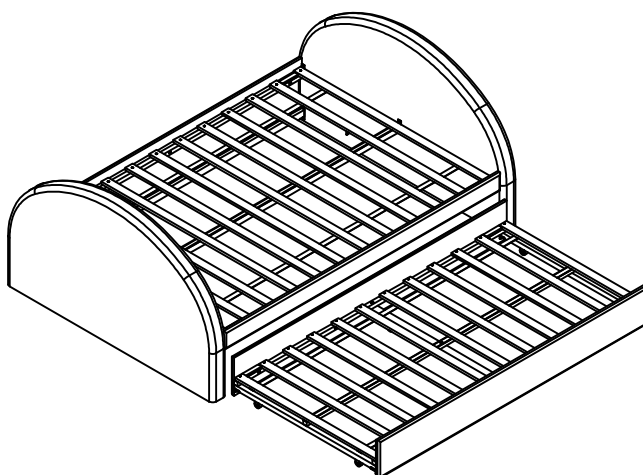



WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.
NEVER suspend strings over bed
NEVER place items with a string, cord, or ribbon such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts
ALWAYS follow assembly instructions

! WARNING!

Not intended for children under the age of six. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.



NOTE: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.








The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.




Part List (Box 1 - N757P387578V)

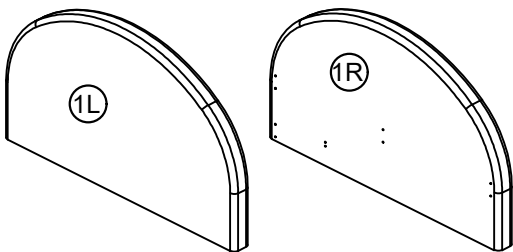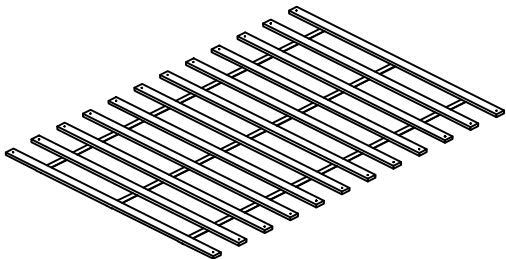1 x2  Headboard	9 x1  Slats 2
---	--

Part List (Box 2 - N757P387579V)

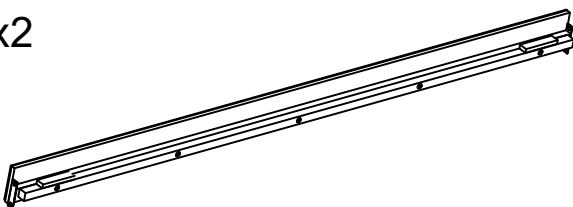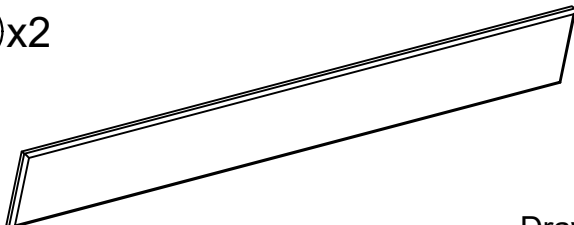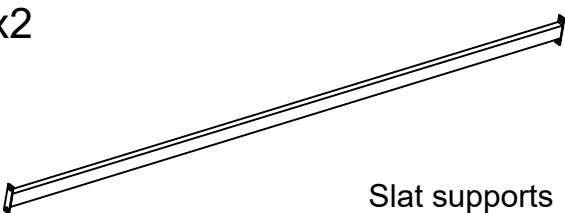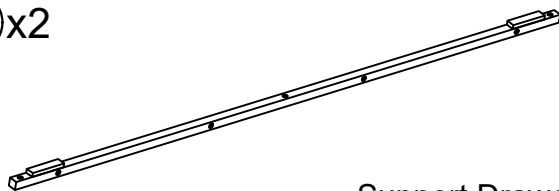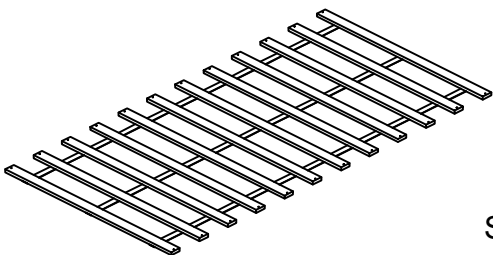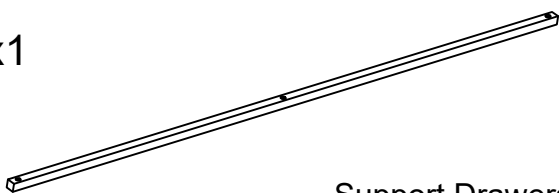
2 x2  Side rail	6 x2  Drawers
3 x2  Slat supports	7 x2  Support Drawers 1
4 x1  Slats 1	8 x1  Support Drawers 2
5 x3  Support Drawers 3	

Hardware List (Box 2 - N757P387579V)

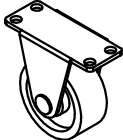No.	OUTLOOK	DESC	QTY
(A)		Bolts M6*15mm	18+1
(B)		Bolts M6*30mm	37+1
(C)		Screws M4*15mm	24+1
(D)		Screws M4*30mm	48+1
(E)		Base U small	06
(F)		Wheels	06
(G)		Base L small	02
(K)		Allen key K4*60mm	01

Assembly preparation


Before Beginning Assembly

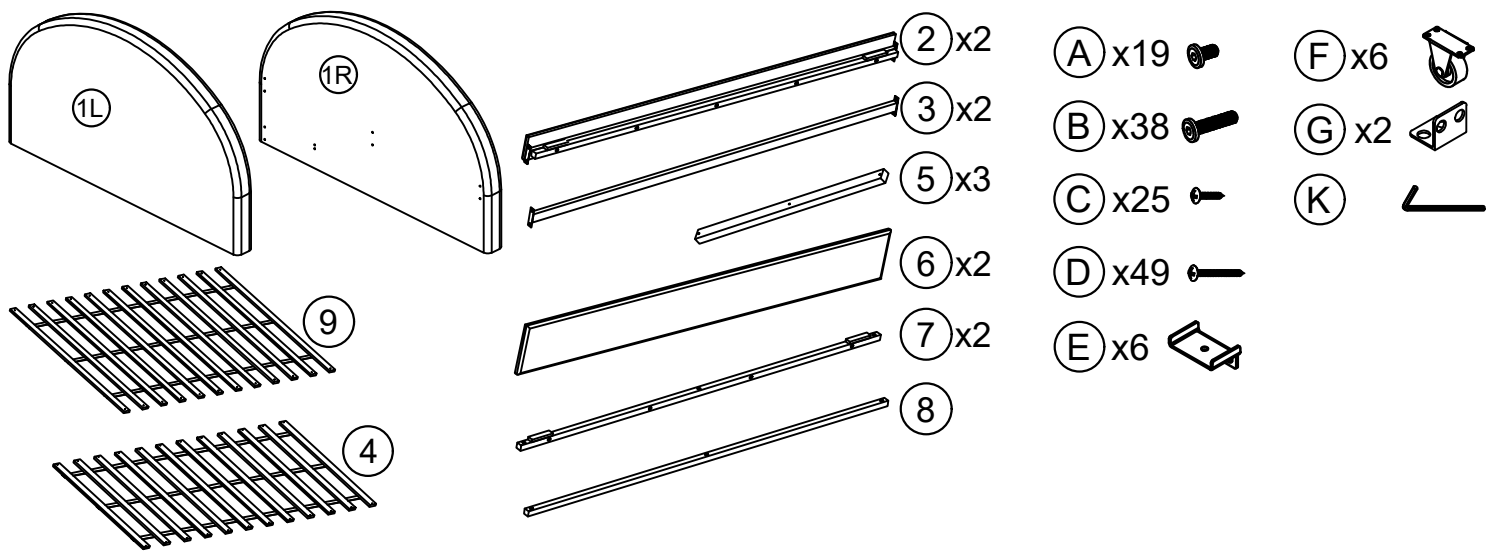

- Read instruction, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.


ASSEMBLY Step

Overview

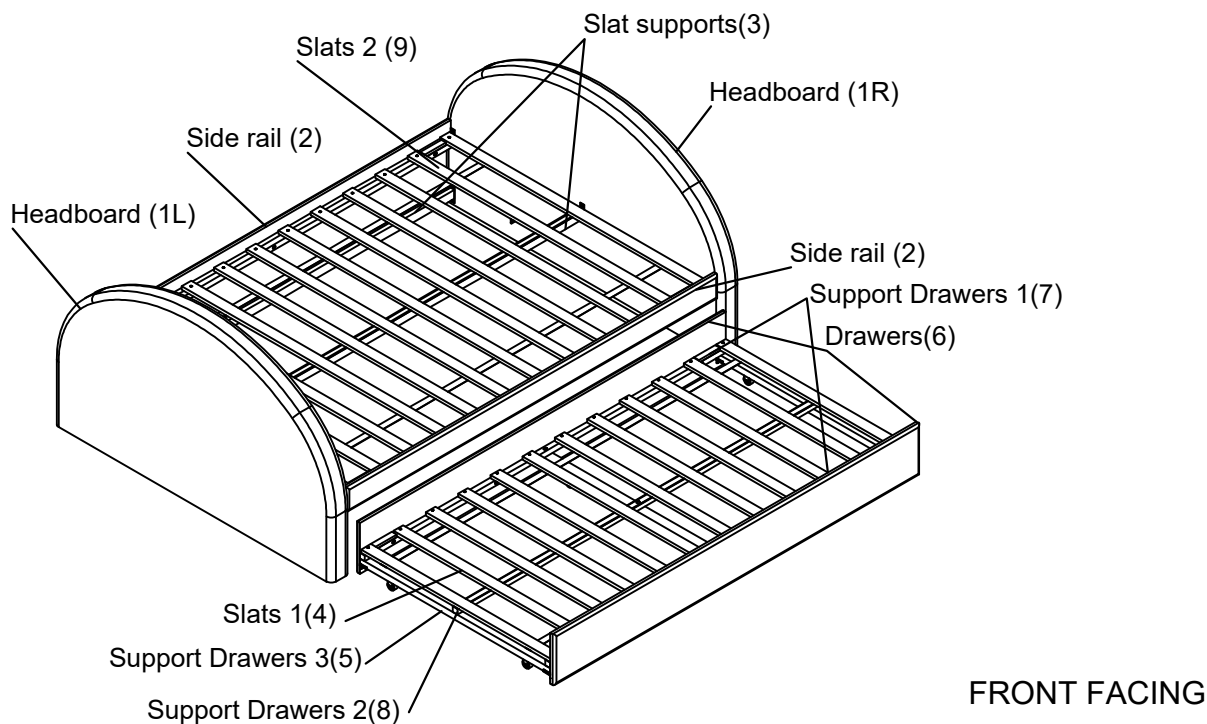


This Bed has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

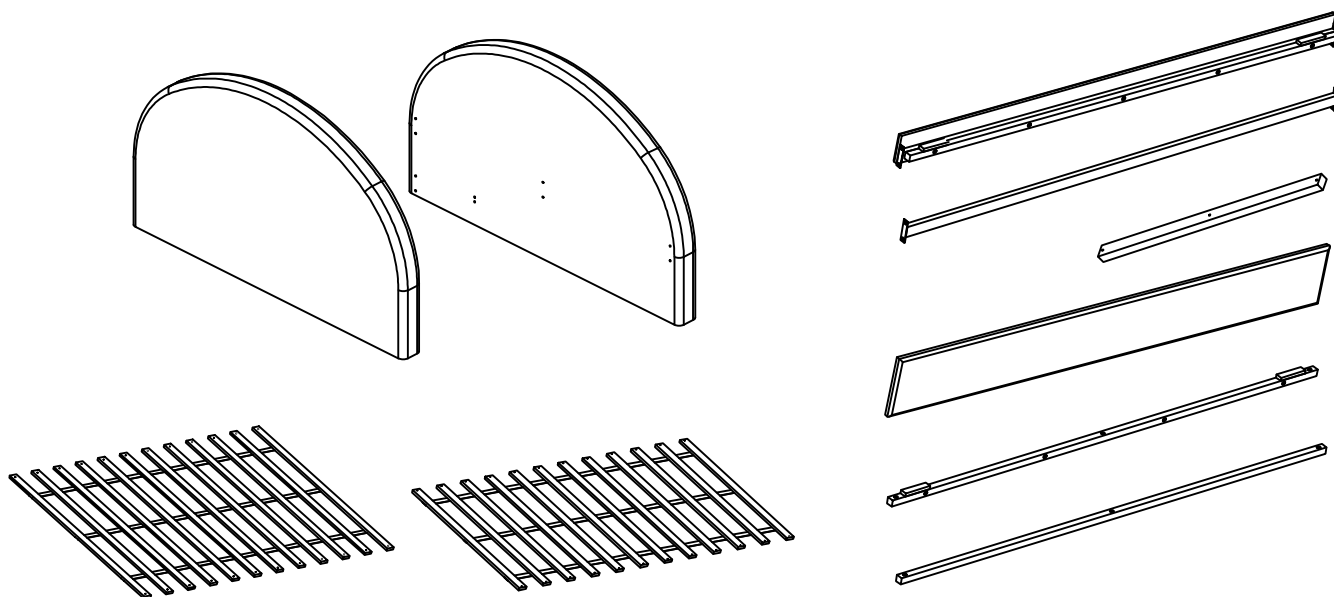

Unpack and place all parts on a clean, non-marring surface.


Step 2

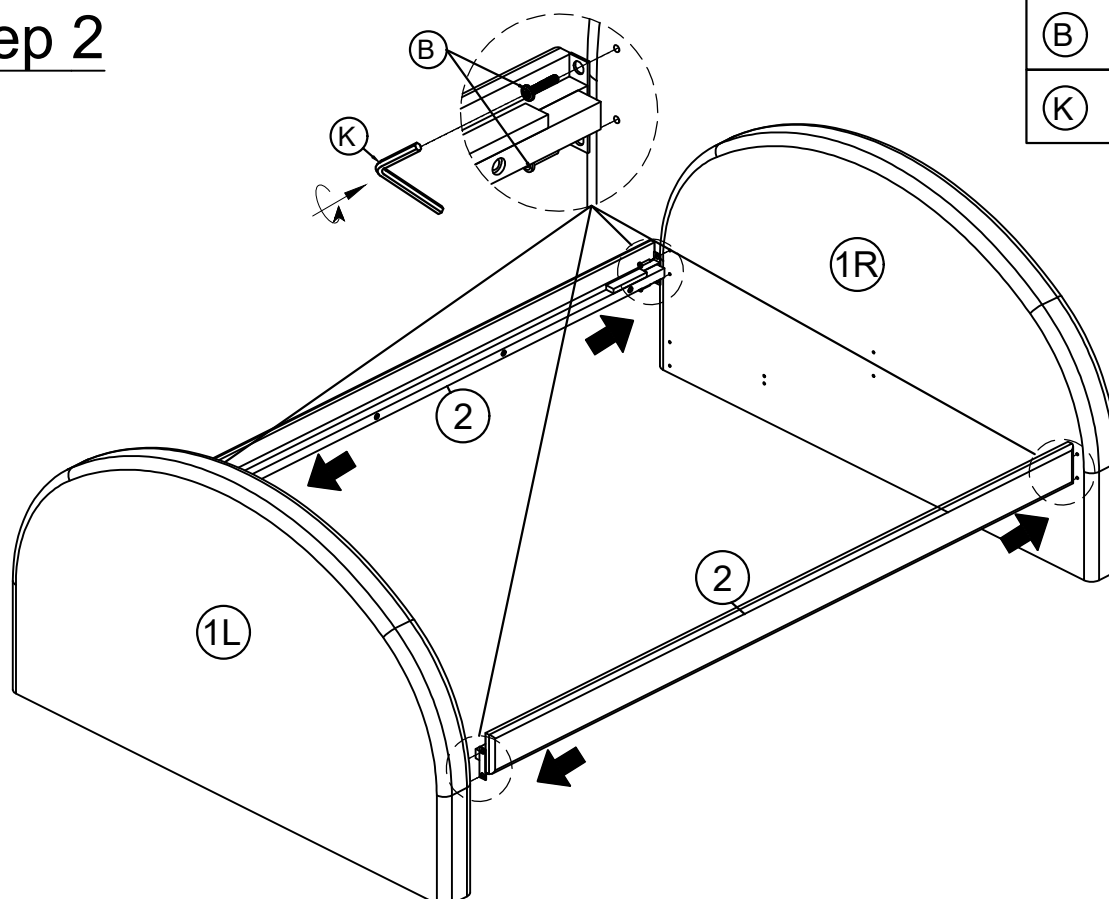

(B)		08
(K)		01


Attach Side rail (2) to Headboard (1L), Headboard (1R) using Bolts M6*30mm (B) with Allen key (K). Do not fully tighten the bolts.

Step 3

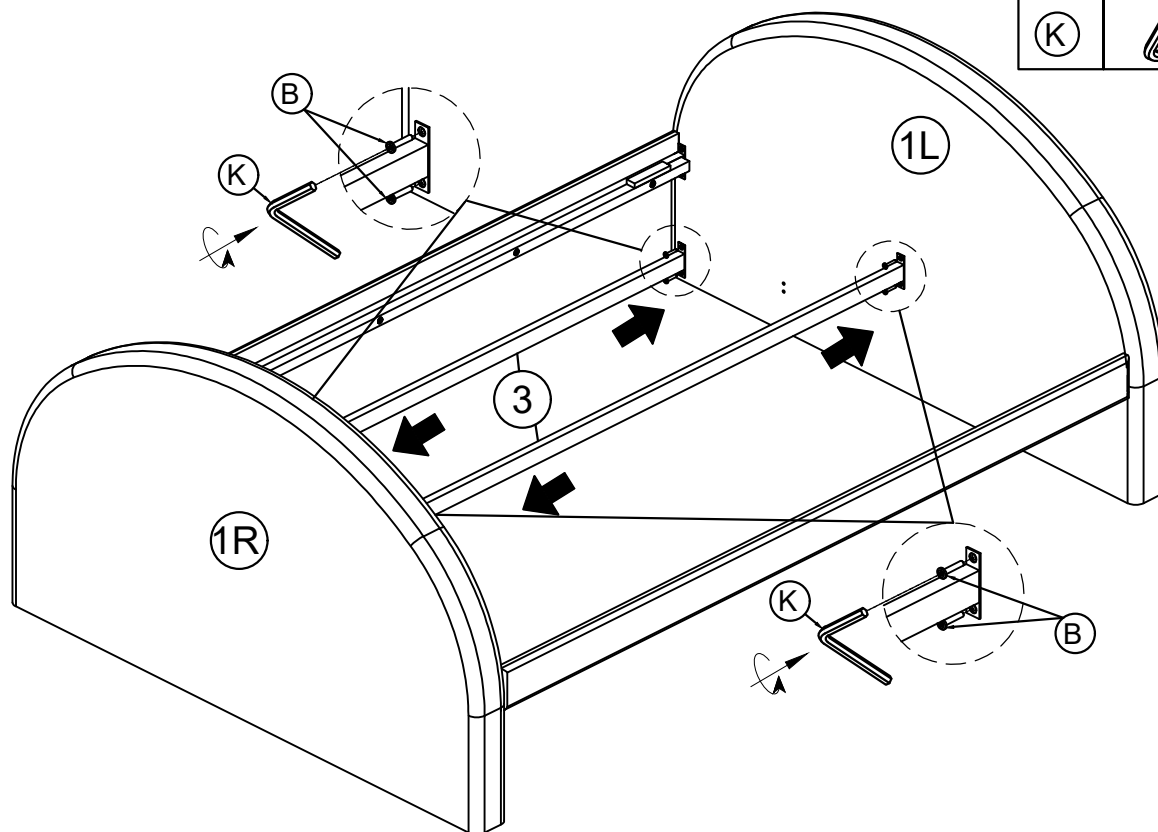


Attach Slat supports(3) to Headboard (1L), Headboard (1R) using Bolts M6*30mm (B) with Allen key (K). Tighten the bolts in steps 2 and

Step 4

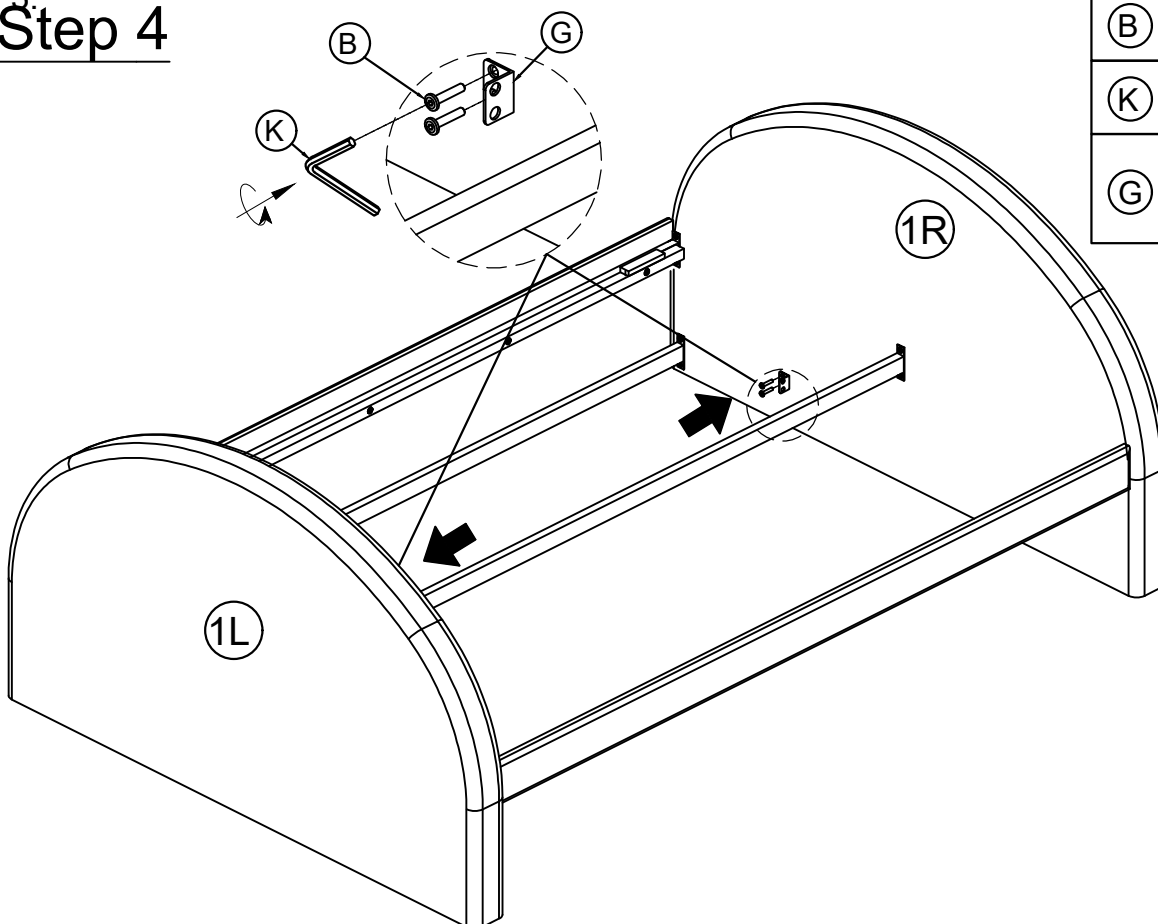


Attach Base L small(G) to Headboard (1L), Headboard (1R) using Bolts M6*30mm (B) with Allen key (K). Tighten the bolts.

Step 5

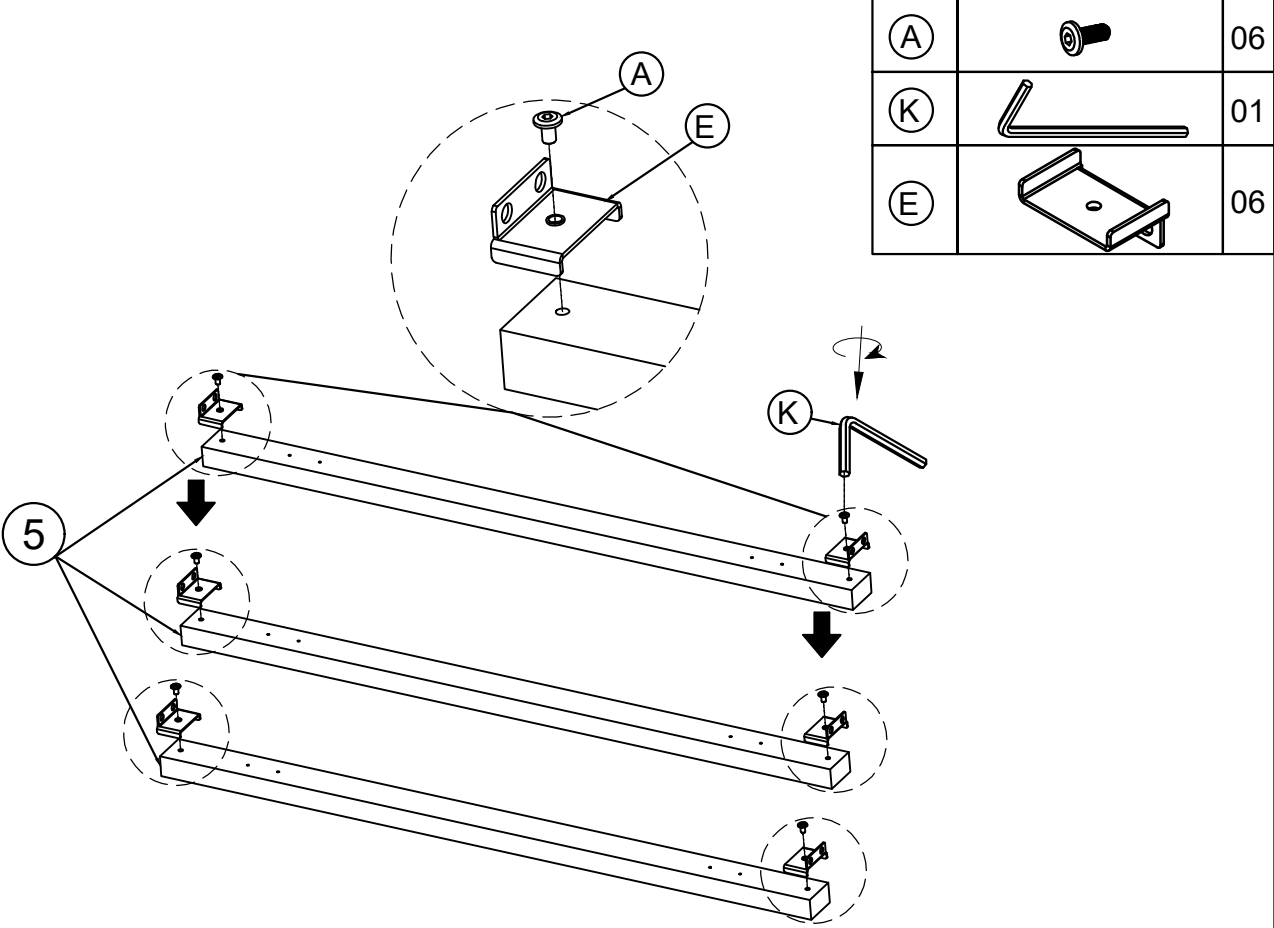


Attach Base U small (E) to Support Drawers 3 (5) using Bolts M6*15mm (A) with Allen key (K). Tighten the bolts.

Step 6

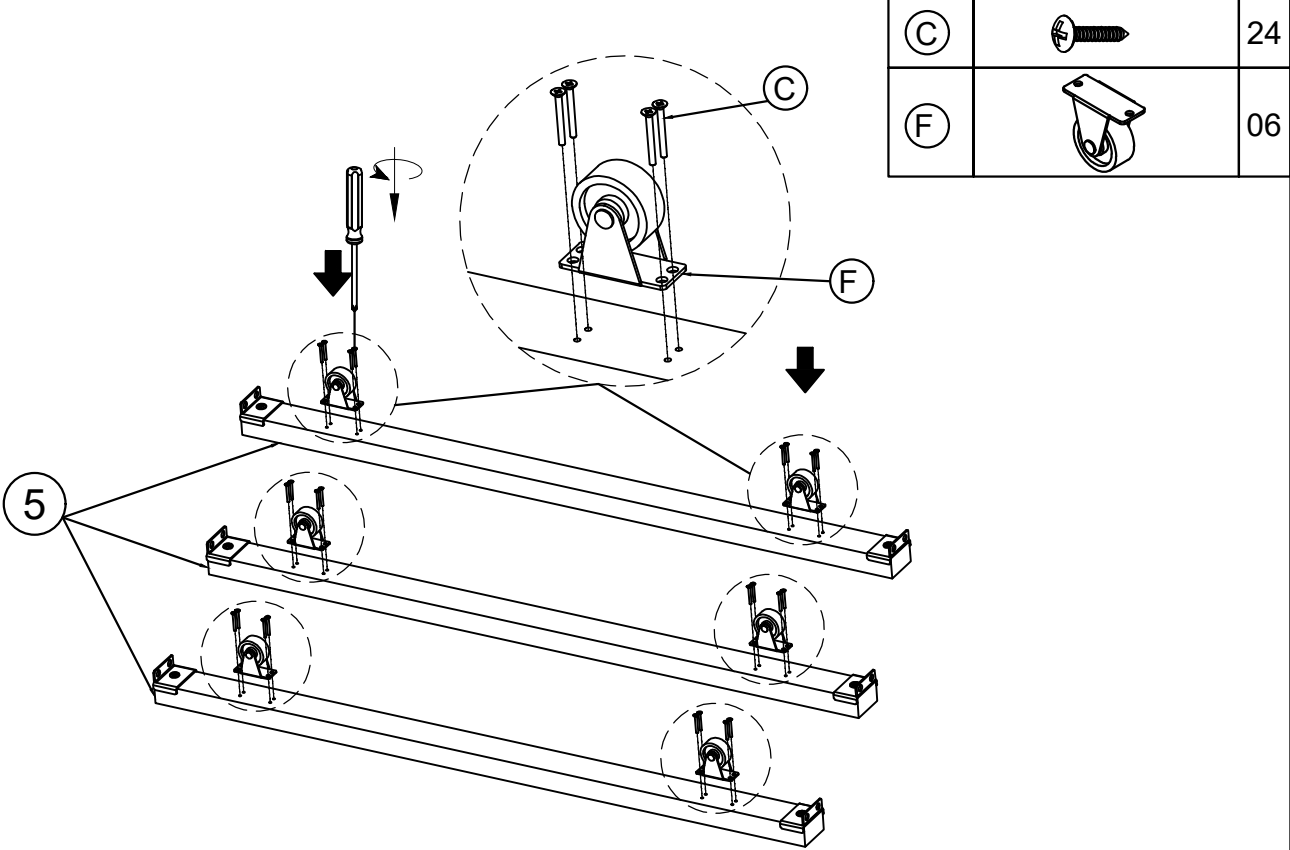

Attach Wheels (F) to Support Drawers 3 (5) using Screws M4*15mm (C) with Screwdriver. Tighten the screws.


Step 7

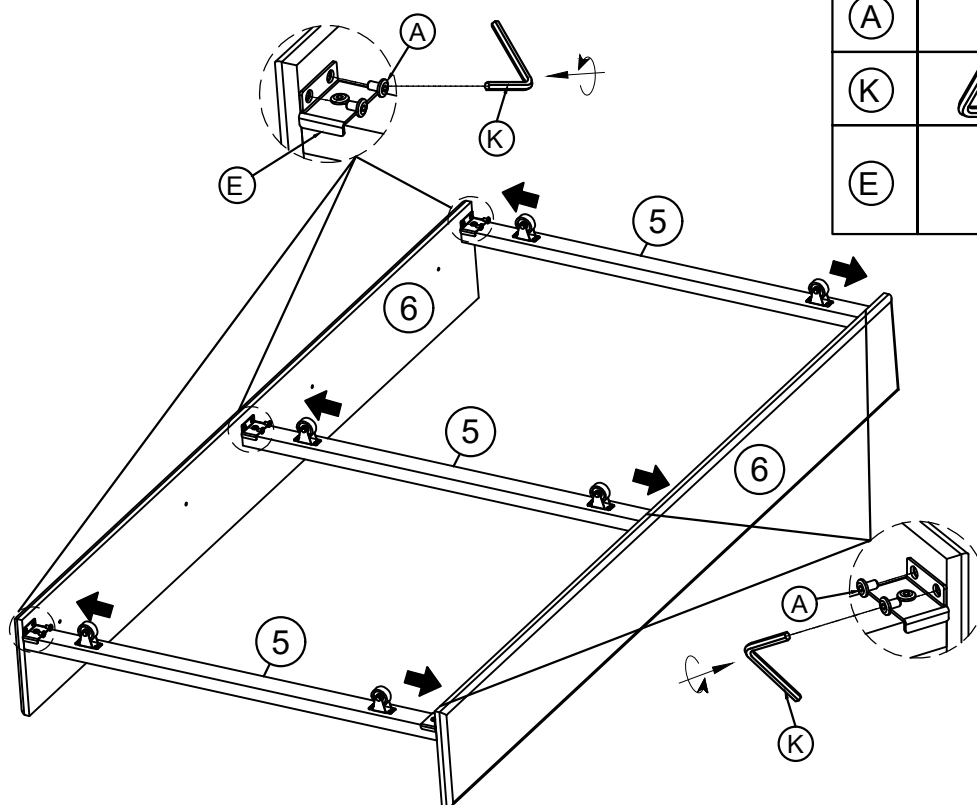

(A)		12
(K)		01
(E)		06

Attach Base U small (E) to Drawers (6) using Bolts M6*15mm (A) with Allen key (K). Tighten the bolts.


Step 8

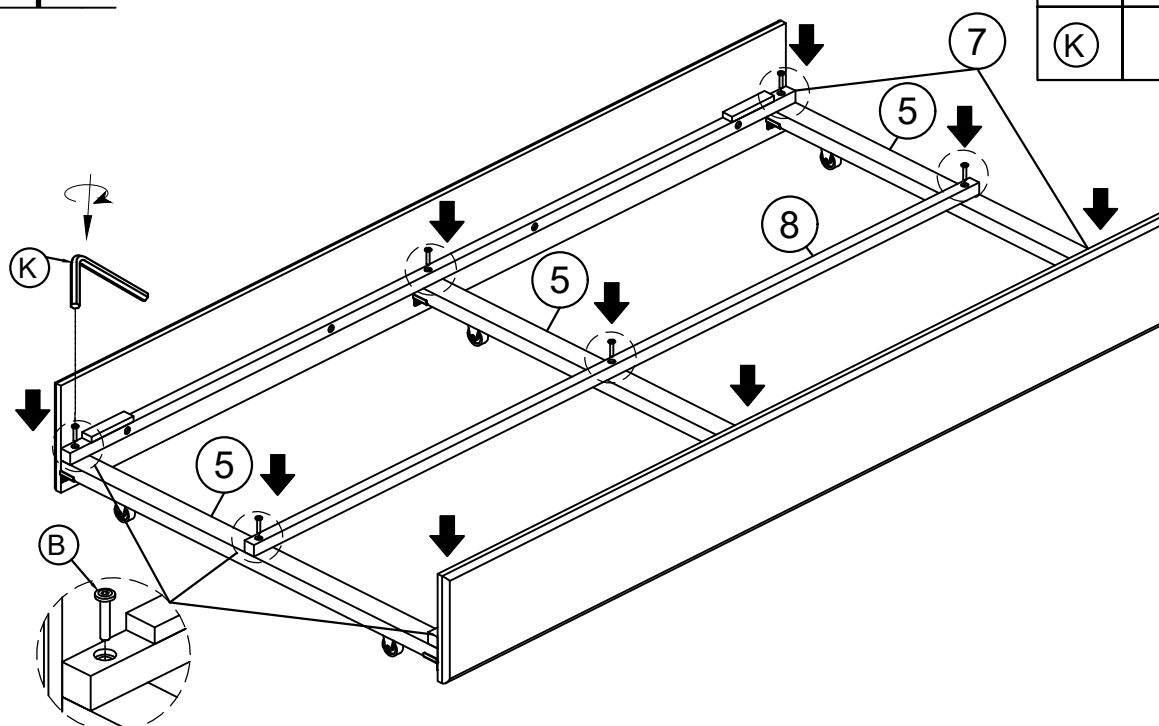

(B)		09
(K)		01

Attach Support Drawers 1 (7), Support Drawers 2 (8) to Support Drawers 3 (5) using Bolts M6*30mm (B) with Allen key (K). Tighten the bolts.


Step 9

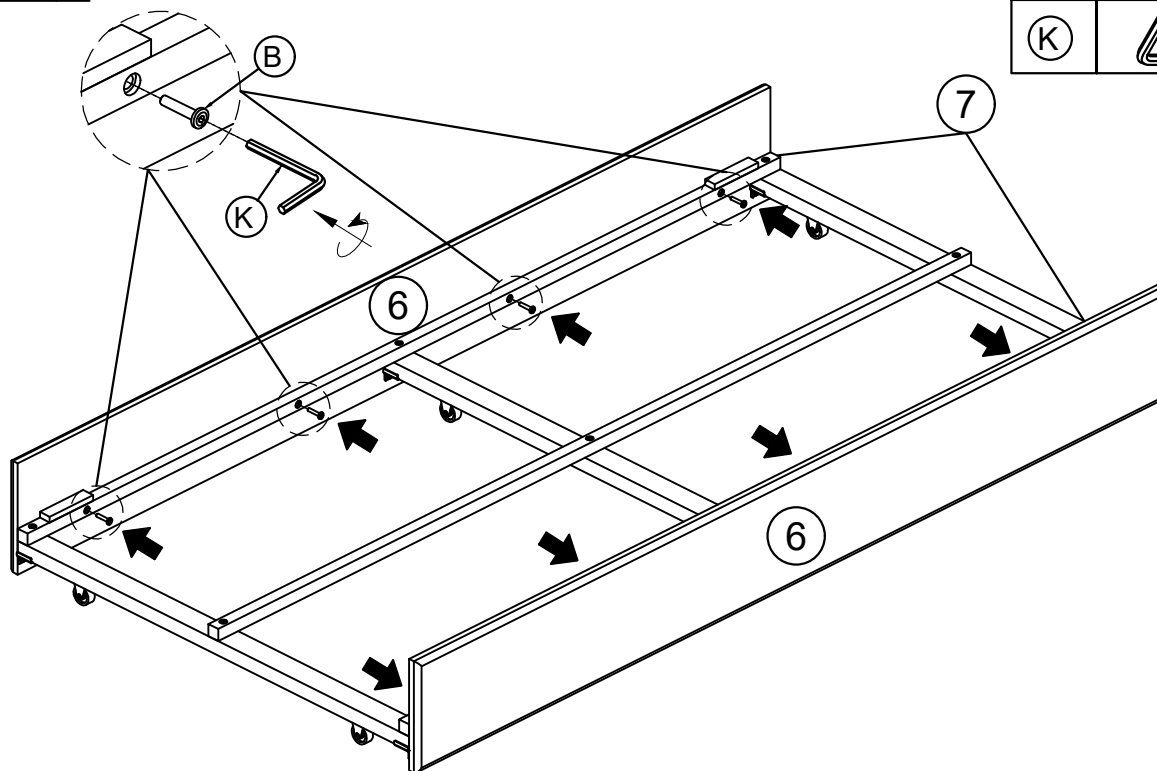

(B)		08
(K)		01


Attach Support Drawers 1(7) to Drawers (6) using Bolts M6*30mm (B) with Allen key (K). Tighten the bolts.

Step 10

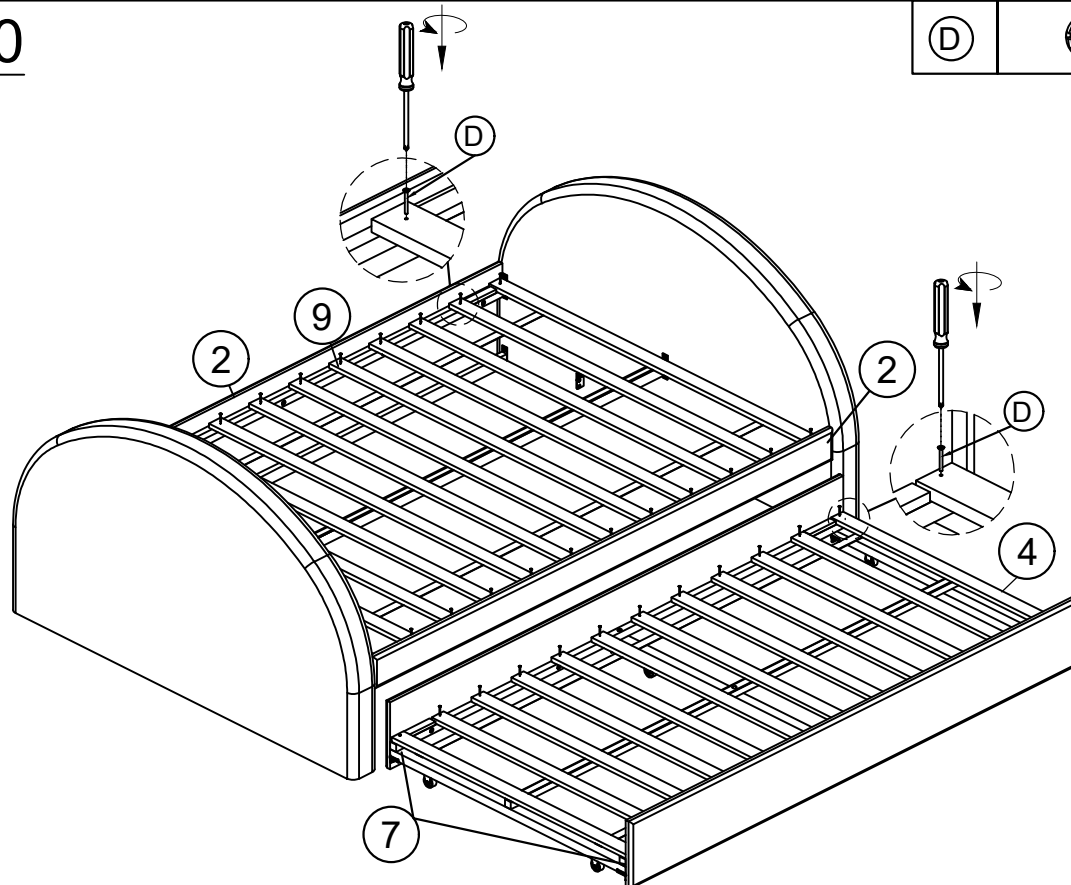

(D)		48
-----	--	----

Attach Slats 2 (9) to Side rail (2) using Screws M4*30mm (D) with Screwdriver.
Attach Slats 1 (4) to Support Drawers 1 (7) using Screws M4*30mm (D) with Screwdriver.
Tighten the screws.

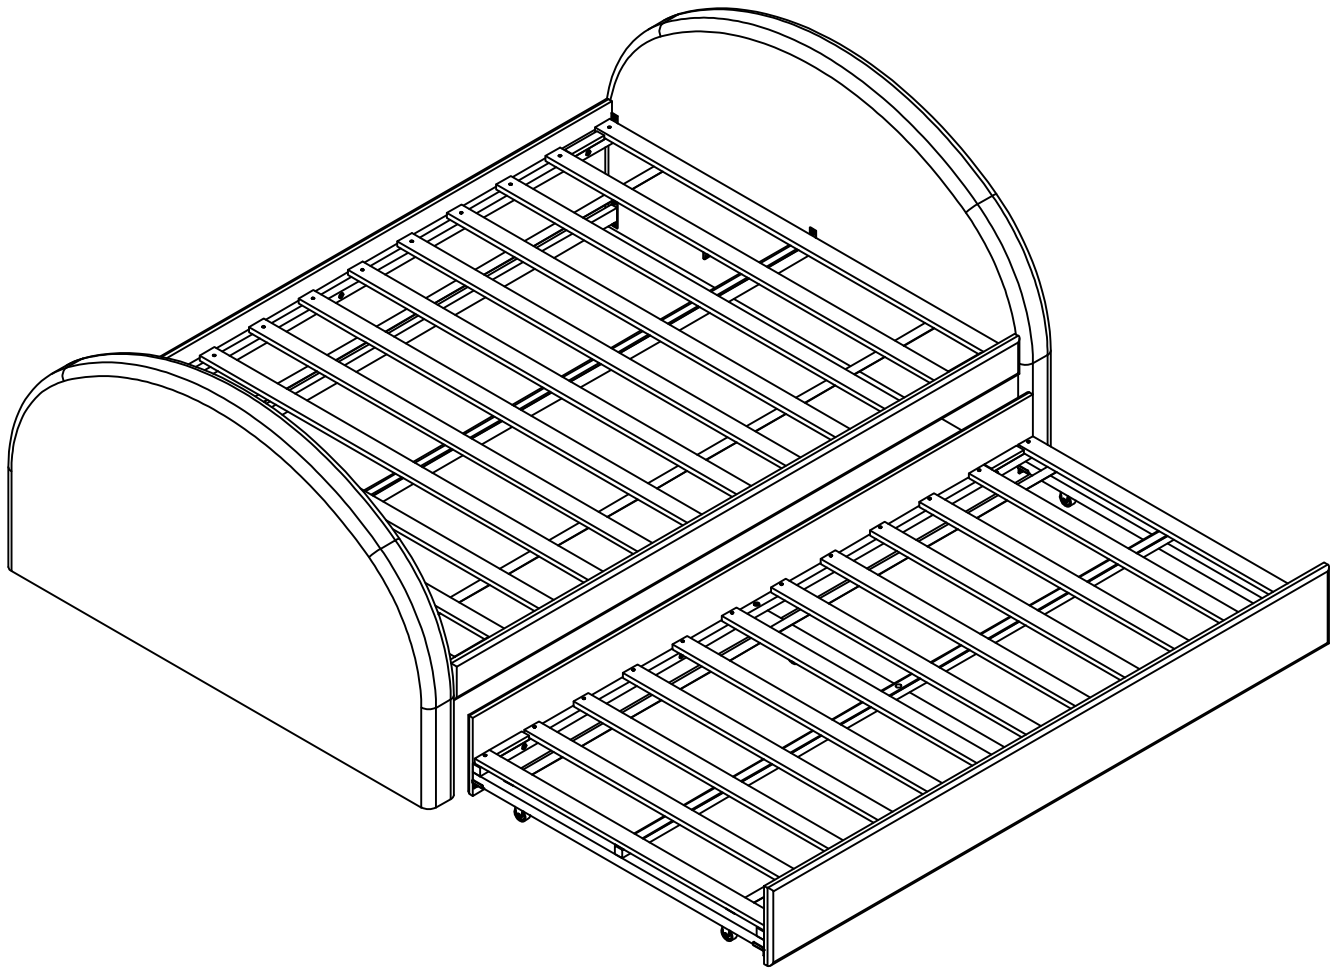

Place the Bed on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

Don't push too hard, shake on the bed.

This would help to align all the parts at all the joint areas.

CAUTION 1: When tightening these screws, tighten sequentially. DO NOT tighten any screw fully and then towards the next one. This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process. DO NOT tighten any screw fully and then towards the next one.

WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

The bed is ready to be used.

Caution 2: This bed can only be used on a flat, level surface.