


ASSEMBLY INSTRUCTIONS HARDWARE

CVFDR1044


HANDLE 1

STEP - 1

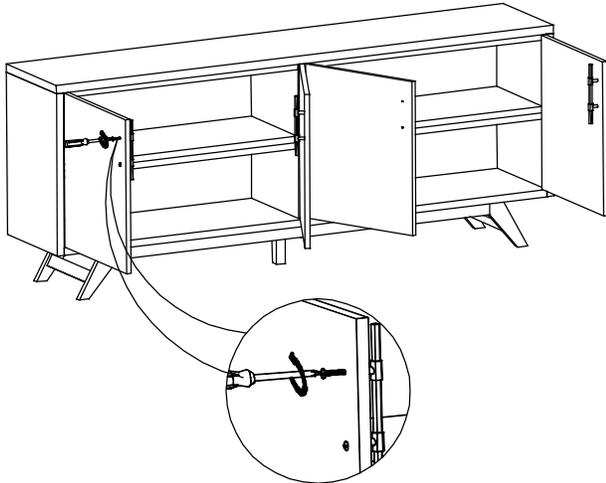


Open the door before the handle is released, by pulling the tape on the door
Remove the screw holding the handle with a screwdriver

STEP - 2

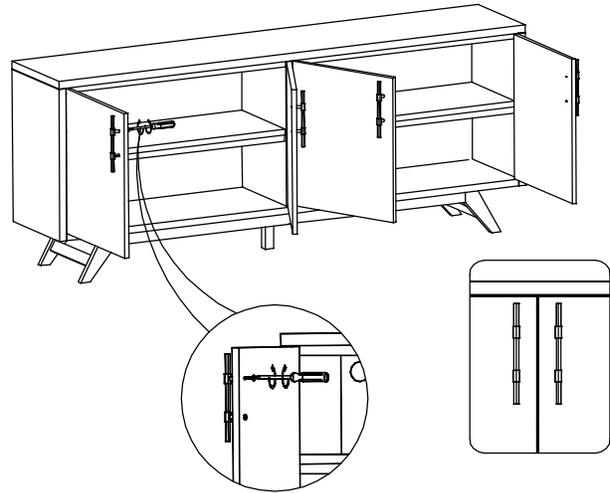

Install the handle on the outside of the door, then tie it with a screw and tighten it with a screwdriver

COMPLETED

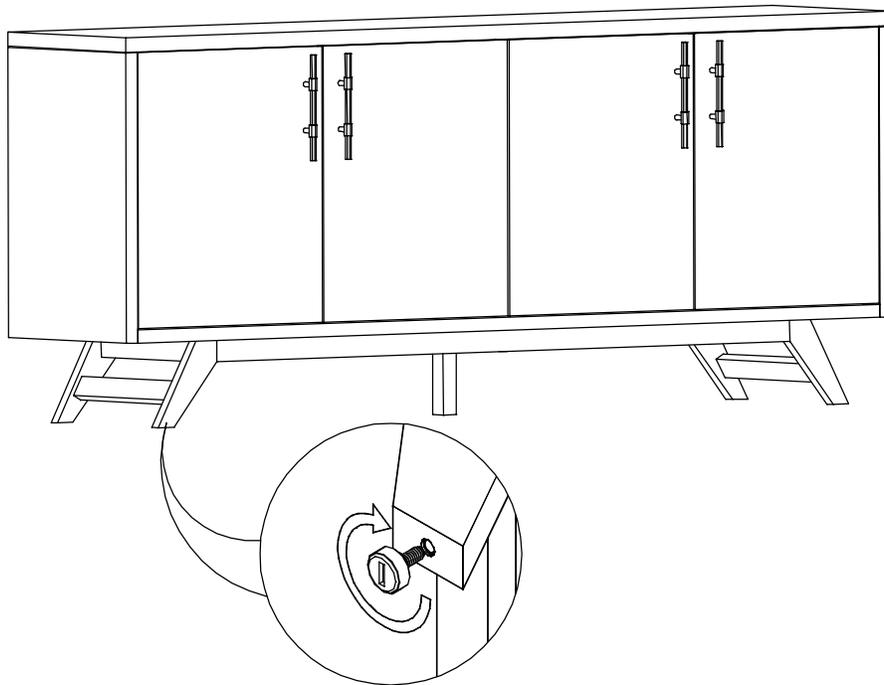


MADE IN INDONESIA

ASSEMBLY INSTRUCTIONS HARDWARE


CVFDR1044

PARTS

HANDLE 2

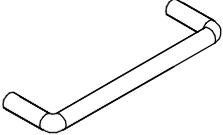
S. NO	DESCRIPTION	QNT
A		HANDLE 04
B		SCREW 08

STEP - 1

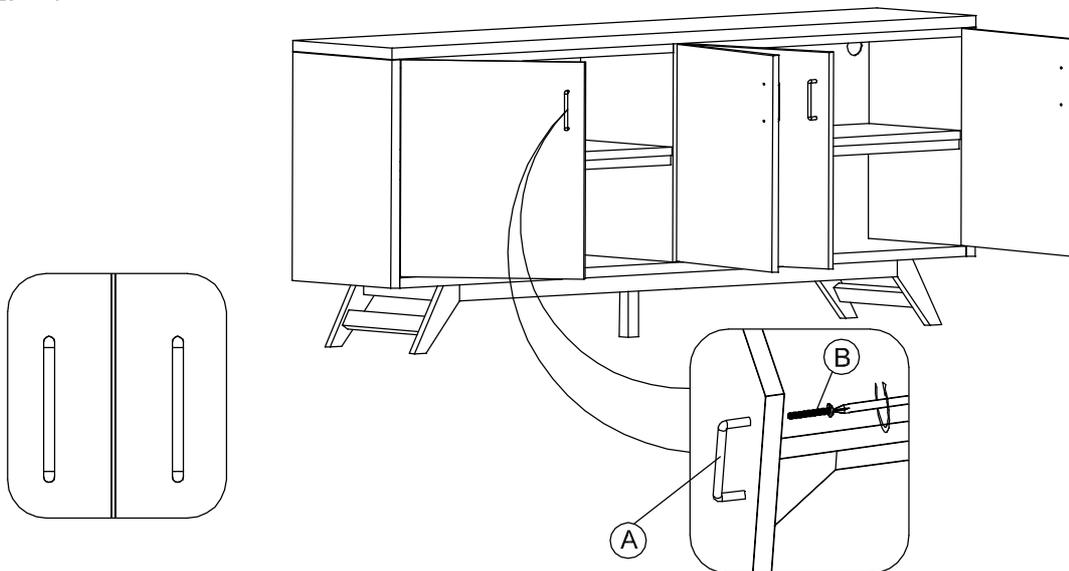

Install the handle on the outside of the door, then tie it with a screw and tighten it with a screwdriver ascrewdriver

COMPLETED


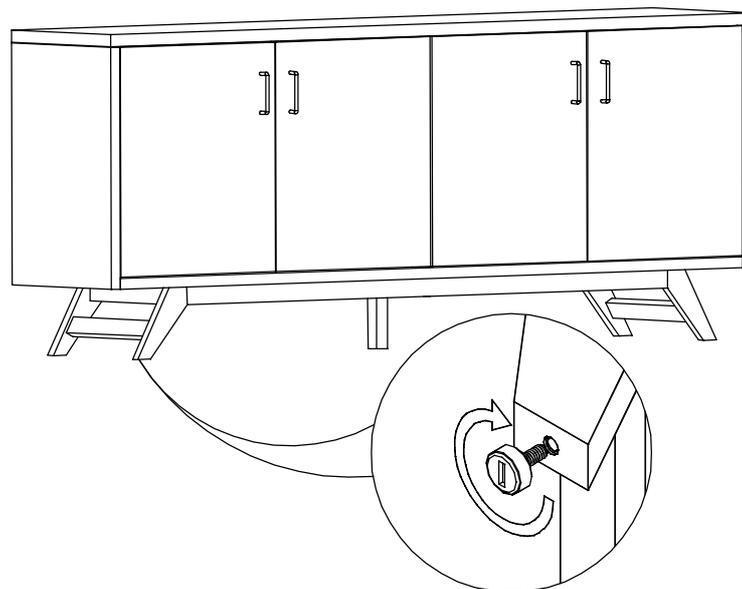


MADE IN INDONESIA


ANTI - TIP KIT INSTALATION INTRUCTIONS

CVFDR1044_4 DOOR CABINET

- A : 1X 
- B : 2X 
- C : 2X  S5
- D : 2X 
- E : 2X 

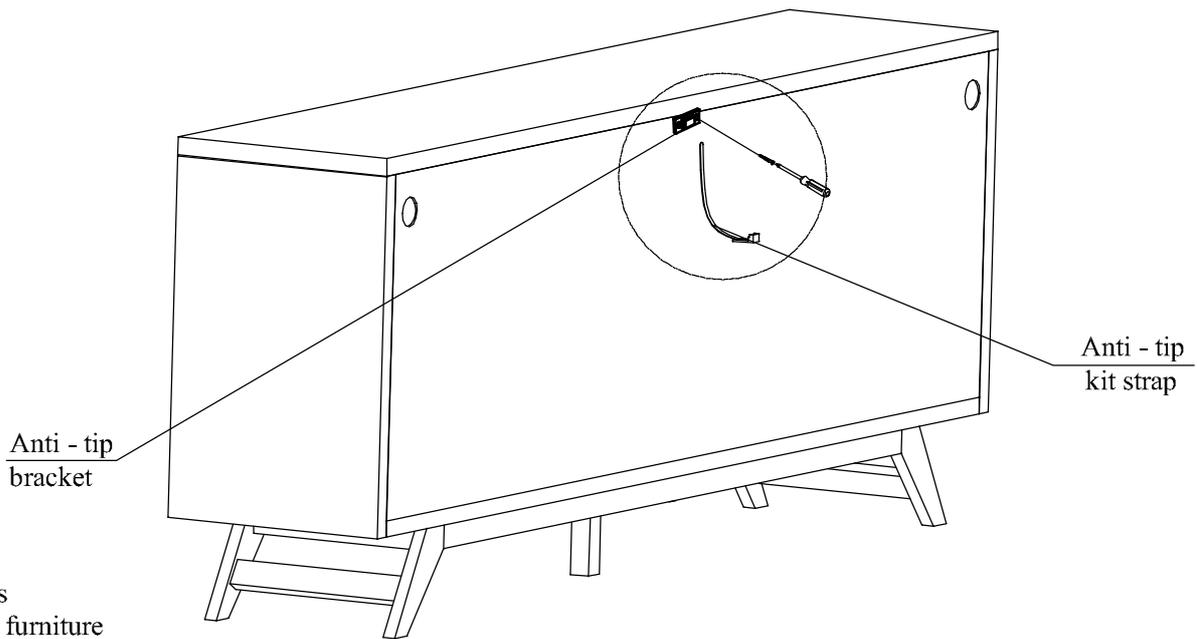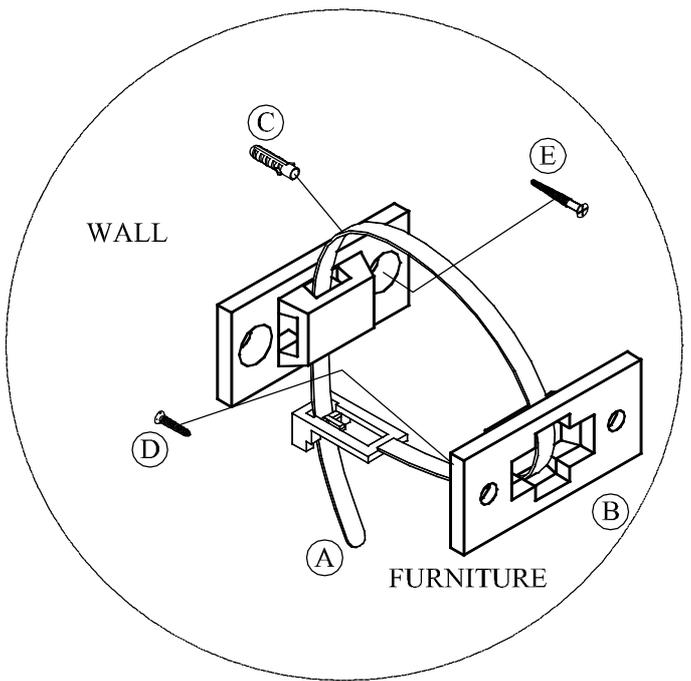


Attach this bracket to furniture




i




Attach this bracket to wall



ii

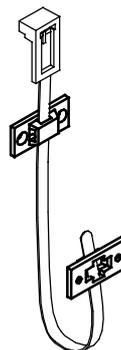

iii

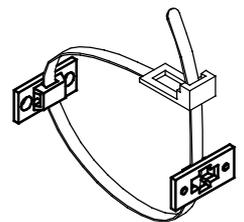

iv