


ASSEMBLY INSTRUCTIONS HARDWARE


CVFDR1034

STEP - 1

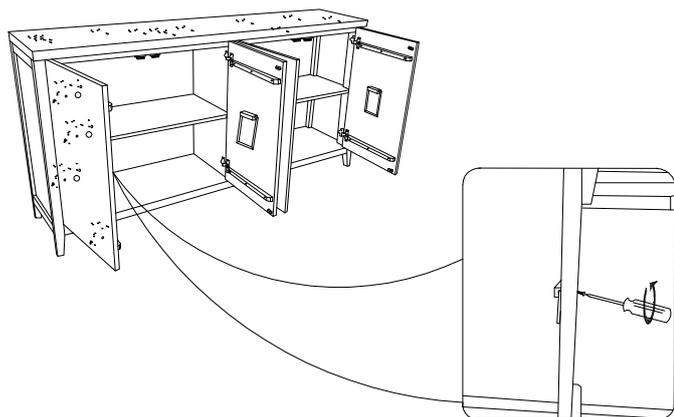


Open the door before the handle is released, by pulling the tape on the door
Remove the screw holding the handle with a screwdriver

STEP - 2

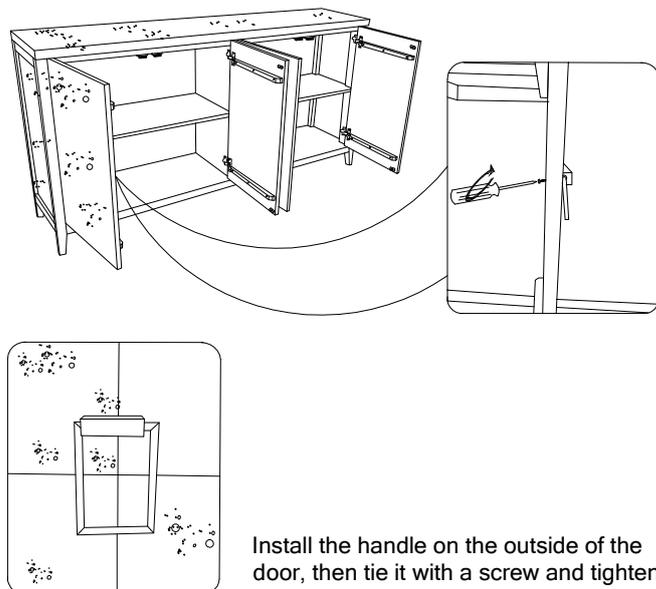

Install the handle on the outside of the door, then tie it with a screw and tighten it with a screwdriver

COMPLETED

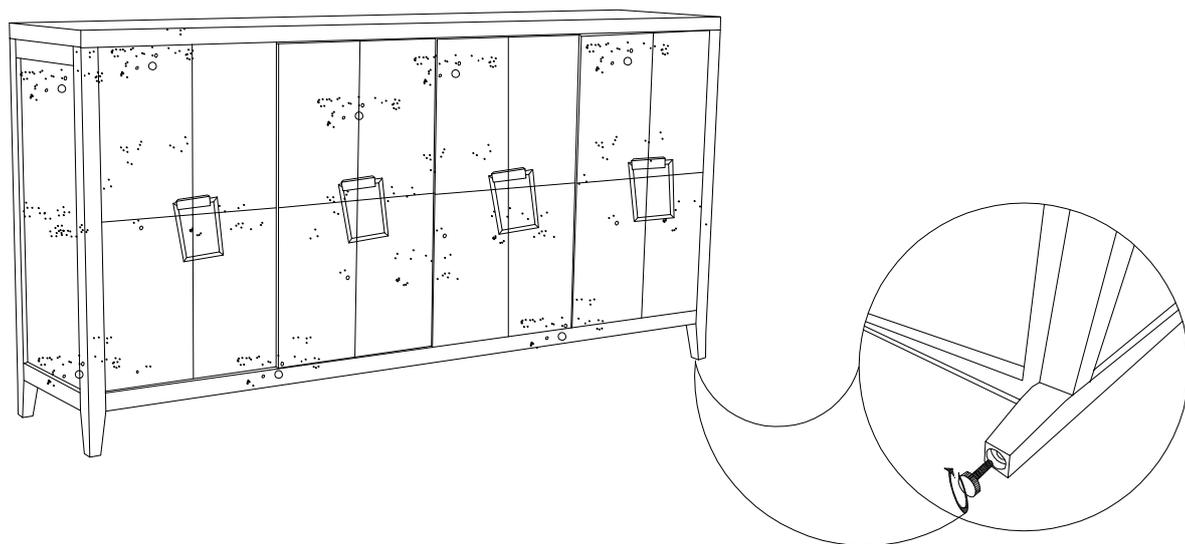




Levellers are provided at the bottom to balance on uneven surfaces

MADE IN INDONESIA


ANTI - TIP KIT INSTALLATION INSTRUCTIONS

CVFDR1034_4 DOORS SIDEBOARD BIG HANDLE




- A : 1X 
- B : 2X 
- C : 2X  S5
- D : 2X 
- E : 2X 

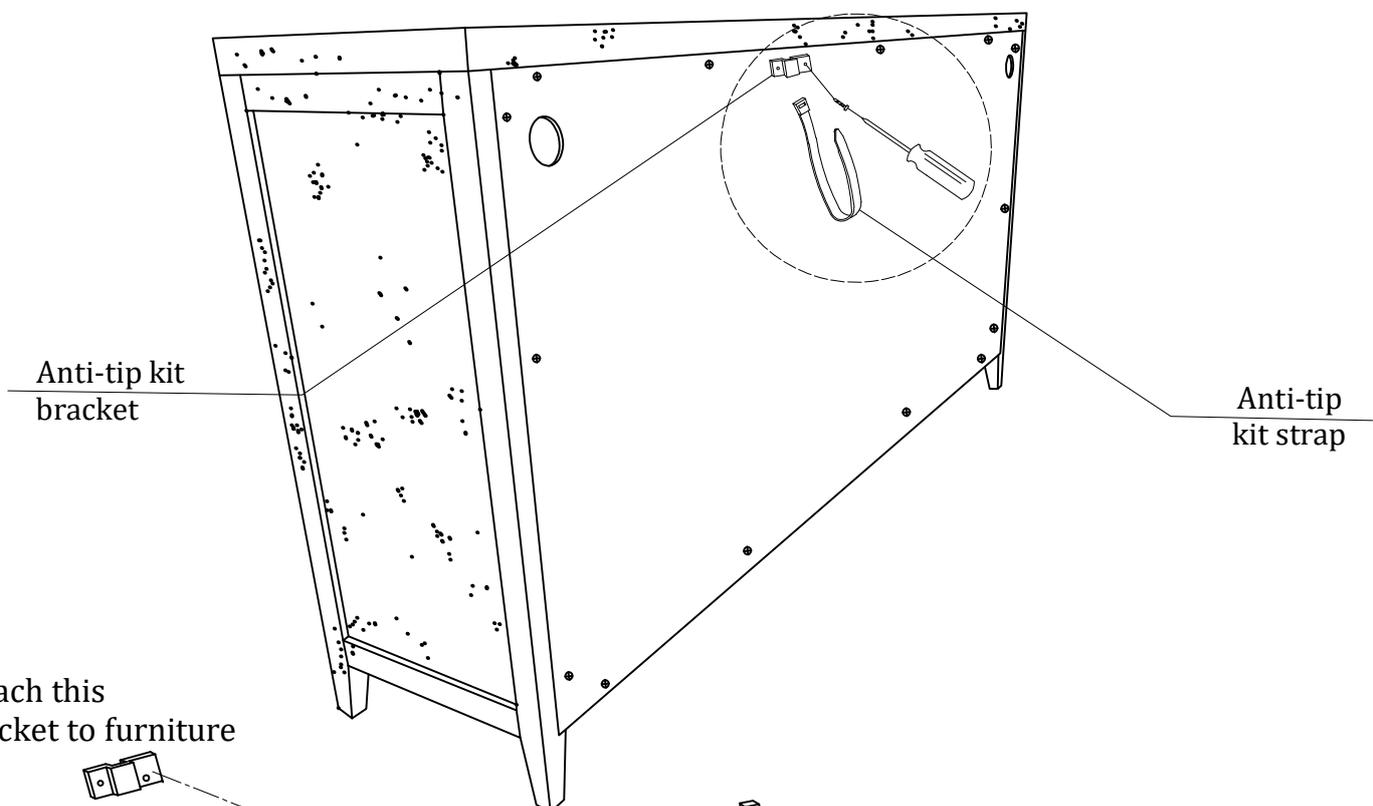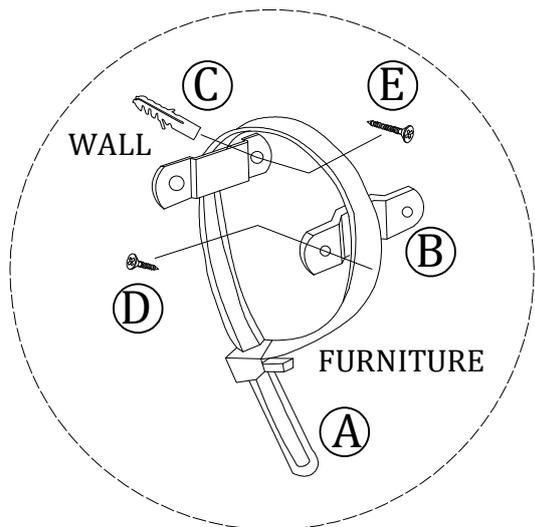

Attach this bracket to furniture



Attach this bracket to wall

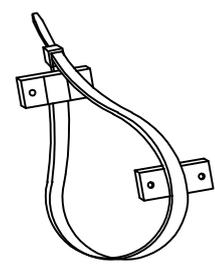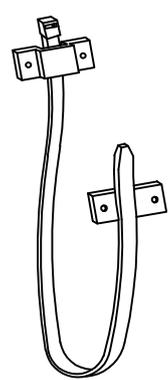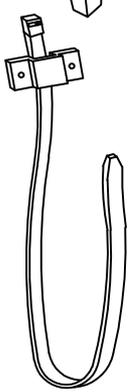

i

ii

iii

iv