
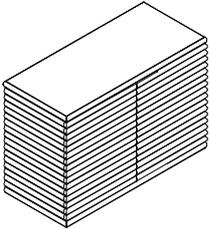
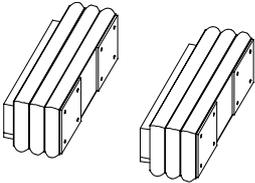
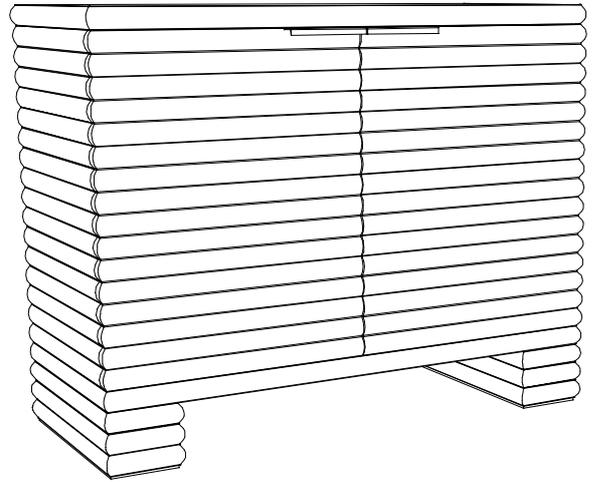




ASSEMBLY INSTRUCTIONS HARDWARE

CVFDR1229 - Horizontal Reeded 2 Door Sideboard, 40.16" x 18.11" x 32.24"

COMPONENT PART			
S.NO	DESCRIPTION		QNT
A		Box	01
B		Legs	02



HARDWARE			
S.NO	DESCRIPTION		QNT
1.		Allen Bolt	04
2.		Spring Washer	04
3.		Flat Washer	04
4.		Allen Key	01

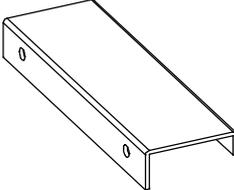PART			
S.NO	DESCRIPTION		QNT
I		Handle	02
II		Screw	04

MADE IN INDONESIA


ASSEMBLY INSTRUCTIONS HARDWARE

CVFDR1229 - Horizontal Reeded 2 Door Sideboard, 40.16" x 18.11" x 32.24"

Important Notes:


A minimum of two (2) people are recommended for this installation

STEP - 1

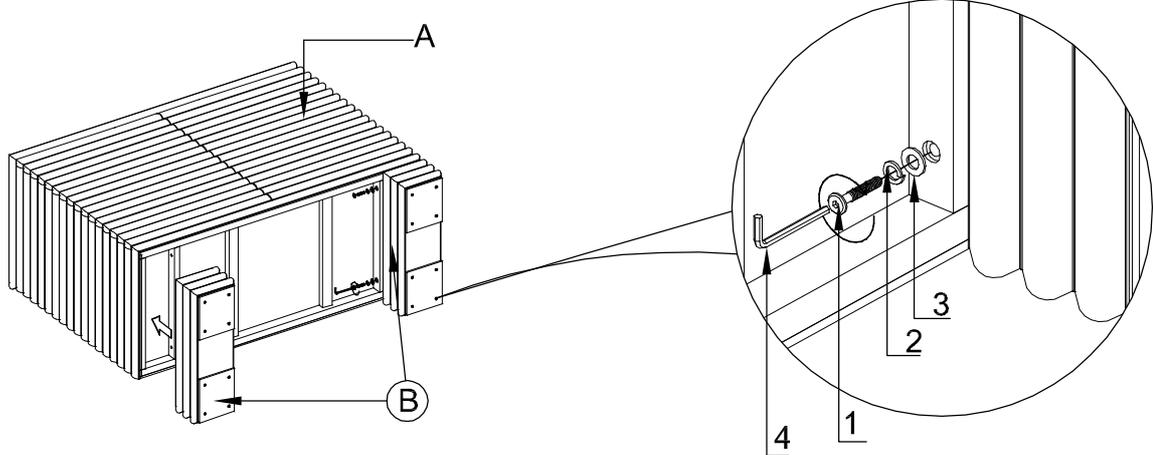


Place Box (A) on the flat soft surface. Additional soft cloth layer may require to prevent unnecessary scratches or damages on the table top during installation. Carefully place the Leg (B) and locate the position of each Legs (B) on the Box. Make sure the position are all correctly place and insert the Allen Bolt (1), spring washer (2) and flat washer (3) through the holes of the base and halfiray tighten with the Allen Key (4) provided.

STEP - 2

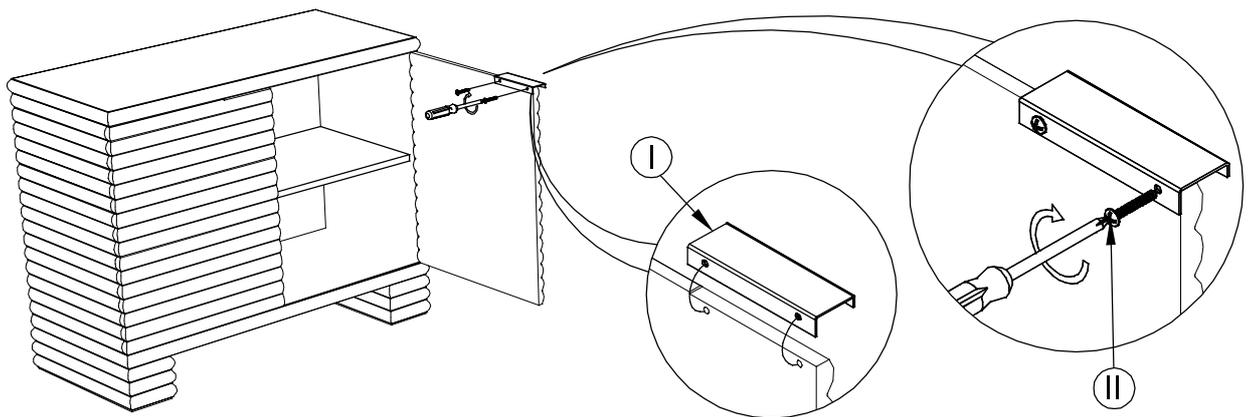

Install the handle on the outside of the door, then tie it with a screw and tighten it with a screwdriver

COMPLETED


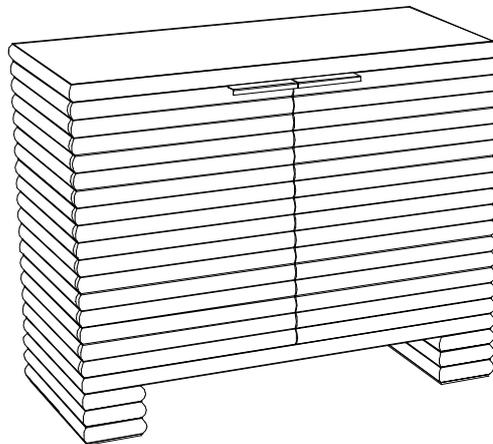


MADE IN INDONESIA


ANTI - TIP KIT INSTALATION INTRUCTIONS

CVFDR1229 - Horizontal Reeded 2 Door Sideboard, 40.16" x 18.11" x 32.24"

- A : 1X 
- B : 2X 
- C : 2X  S5
- D : 2X 
- E : 2X 

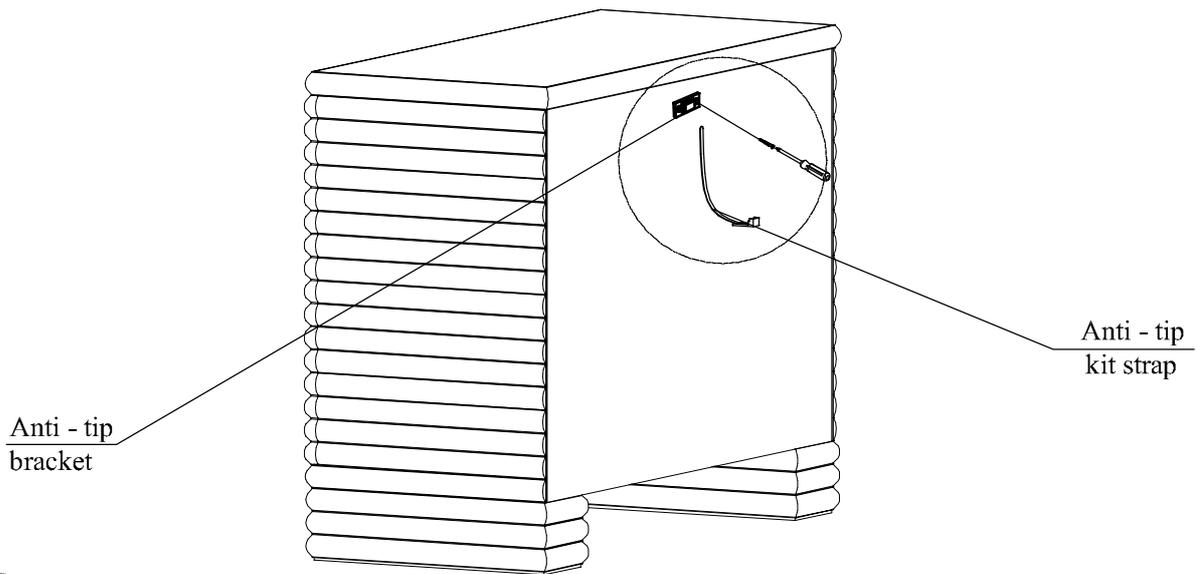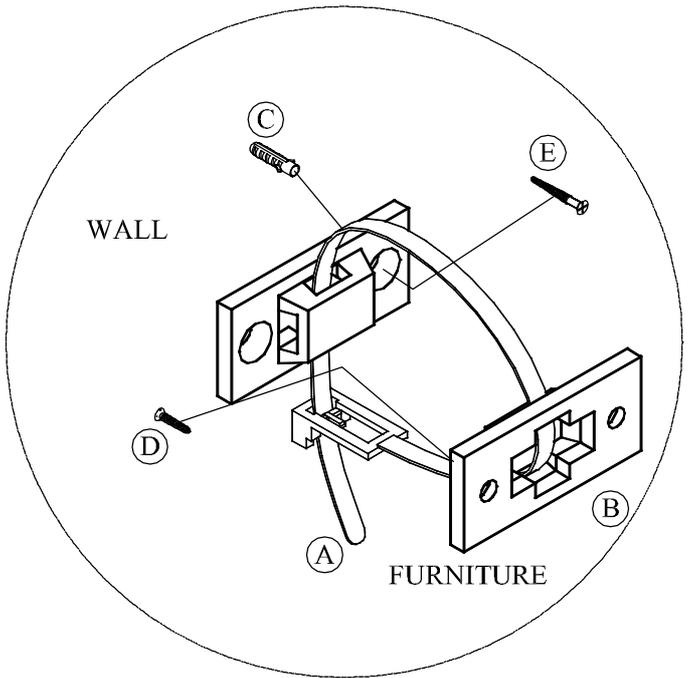


Attach this bracket to furniture




i




Attach this bracket to wall



ii

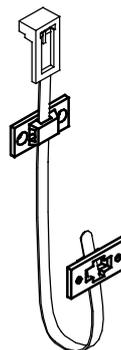

iii

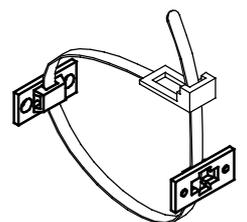

iv