

ASSEMBLY INSTRUCTIONS

CVFN4585


PARTS

S.NO.	DESCRIPTION	QNT
A	 WOODEN TOP	01
B	 WOODEN LEG B1, B2 & B3	03
C	 IRON BAR	01

HARDWARE


S.NO.	DESCRIPTION	QNT
D	 WASHER (20mmx9mm)	16
E	 SPRING WASHER (18mmx12mm)	16
F	 BOLT (25mmx13mm)	16
G	 SPANNER (12 & 13 No.)	01

STEP - 1

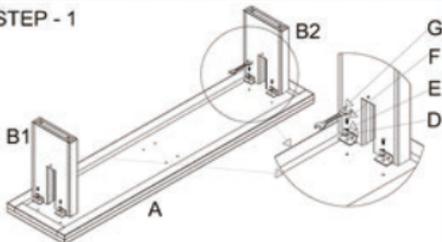


Lay down the top on the floor. Match the holes on the top with holes on the wooden legs. Tighten them with spring washer, washer and bolt with help of spanner provided. Do not tight all the bolts fully for now. (As shown in figure above.)


STEP - 2

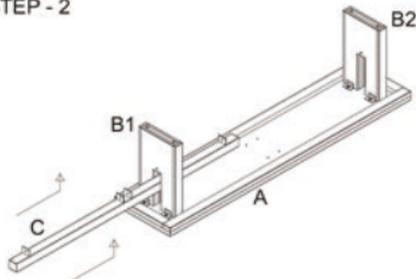


STEP - 3

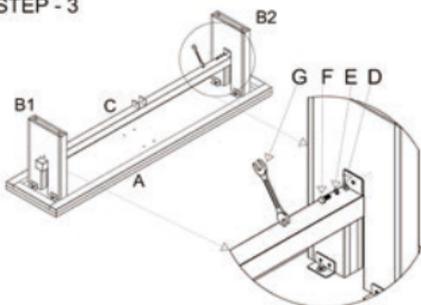

STEP - 4

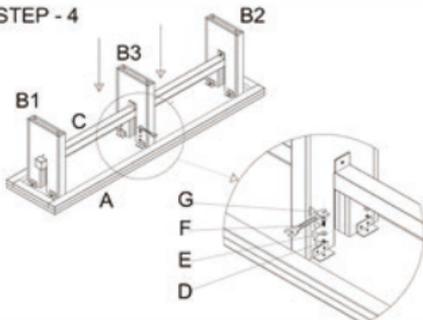


STEP - 5

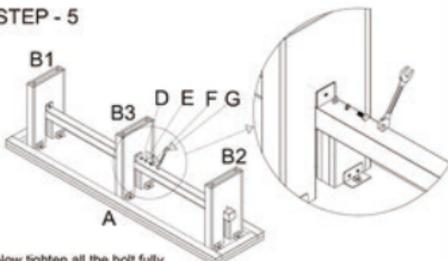

Now tighten all the bolt fully.

COMPLETED

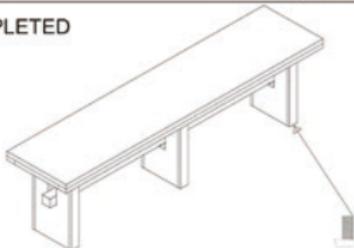

Leveller are provided at the bottom to balance the product on uneven surface

MADE IN INDIA