



# ASSEMBLY INSTRUCTIONS HARDWARE

CVFDR1226 - Horizontal Reeded Console, 64.17" x 16.14" x 32.2"


| COMPONENT PART |   |     |
|----------------|---|-----|
| S. NO          | DESCRIPTION   | QNT |
| A              |  Top Table | 01  |
| B              |  Legs      | 02  |

| HARDWARE |  |     |
|----------|--|-----|
| S. NO    | DESCRIPTION  | QNT |
| 1.       |  Allen Bolt    | 04  |
| 2.       |  Spring Washer | 04  |
| 3.       |  Flat Washer   | 04  |
| 4.       |  Allen Key     | 01  |

## Important Notes:


A minimum of two (2) people are recommended for this installation

### STEP - 1

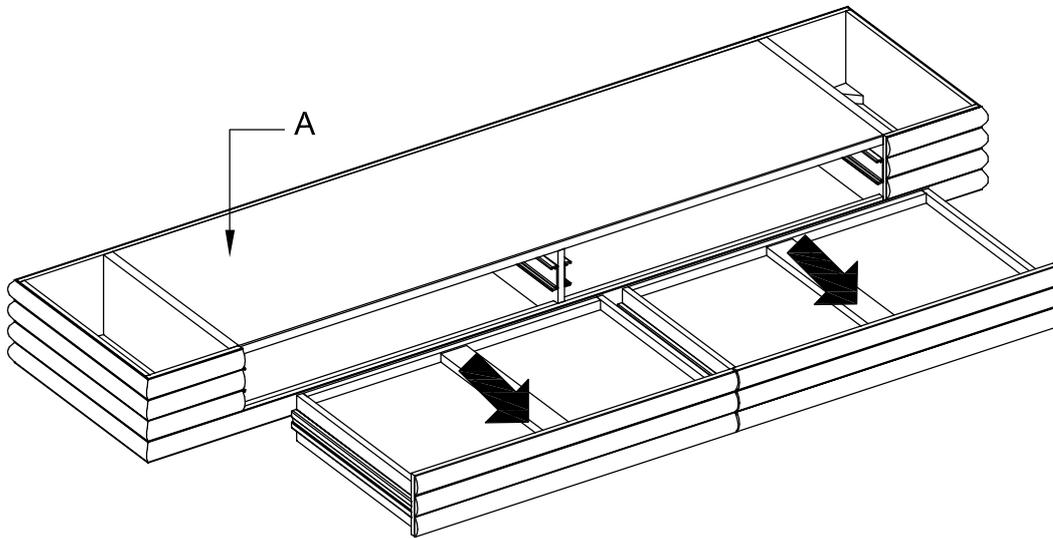

Place Top Table (A) on the flat soft surface. Remove the drawer from table

### STEP - 2

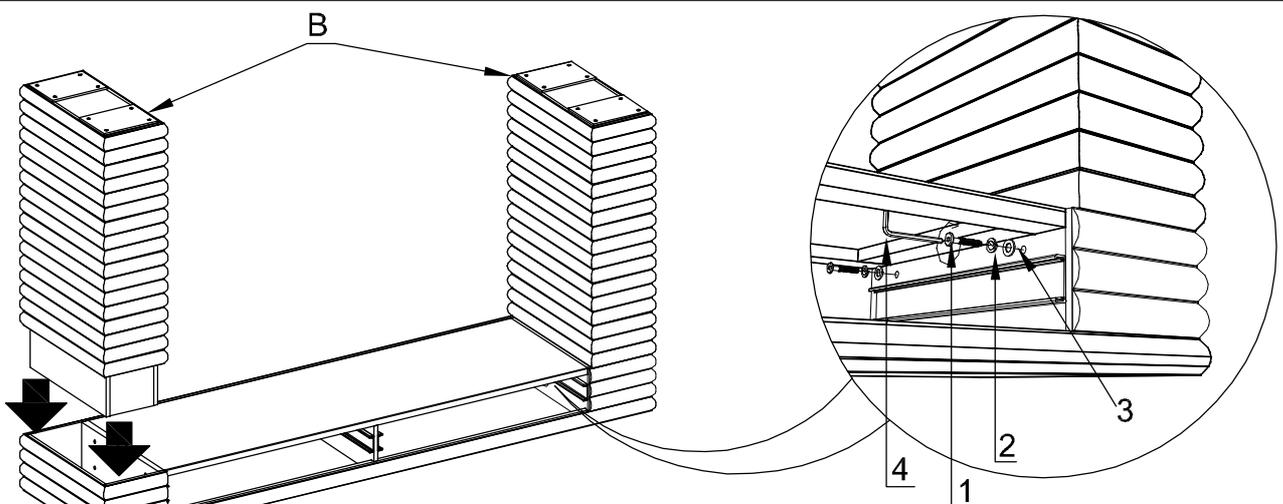


Place table top (A) on the flat soft surface. Additional soft cloth layer may require to prevent unnecessary scratches or damages on the table top during installation. Carefully place the Leg (B) and locate the position of each Legs (B) on the table top. Make sure the position are all correctly place and insert the Allen Bolt (1), spring washer (2) and flat washer (3) through the holes of the base and halfiray tighten with the Allen Key (4) provided.

# MADE IN INDONESIA

# ASSEMBLY INSTRUCTIONS HARDWARE


CVFDR1226 - Horizontal Reeded Console, 64.17" x 16.14" x 32.2"

STEP - 3

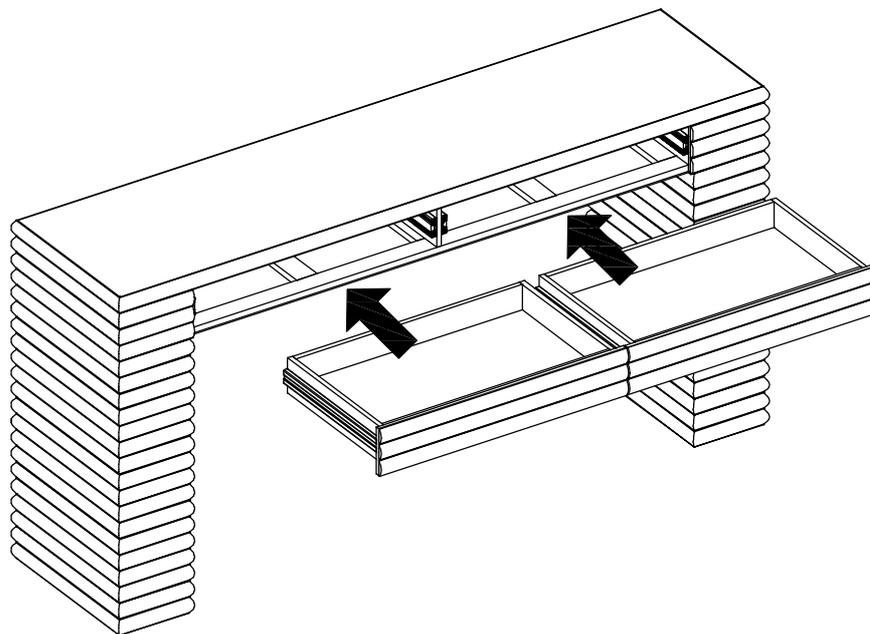

Insert the drawers back to the Top Table

COMPLETED

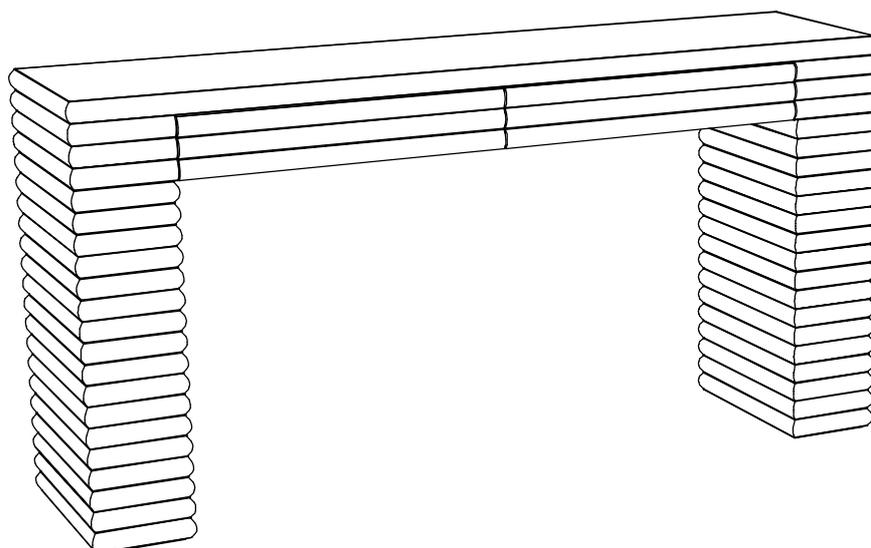

MADE IN INDONESIA

# ANTI - TIP KIT INSTALATION INTRUCTIONS

## CVFDR1226 - Horizontal Reeded Console, 64.17" x 16.14" x 32.2"

A : 1X



B : 2X



C : 2X





S5


D : 2X



E : 2X

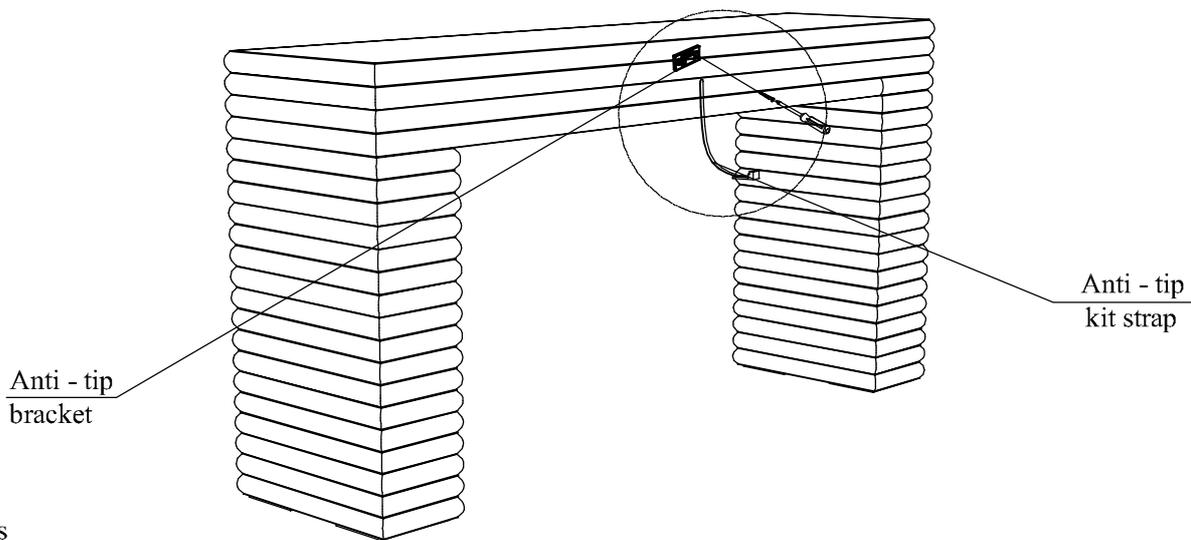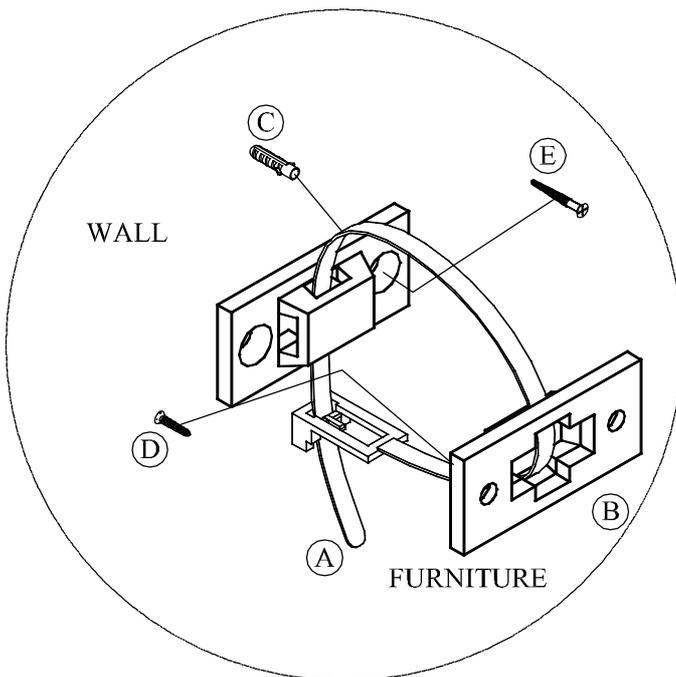


Attach this bracket to furniture




i




Attach this bracket to wall



ii



iii

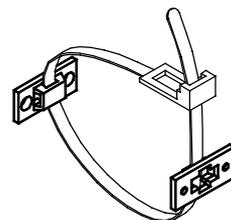

iv