



ASSEMBLY INSTRUCTION

CVFNR4546


PARTS

No.	DESCRIPTION	QTY
A	 WOODEN CASE	1
B	 WOODEN LEG B1/B2	2
C	 WOODEN LEG	1


HARDWARE

No.	DESCRIPTION	QTY
1	 SPRING WASHER	6
2	 WASHER	6
3	 ALLEN SCREW 8X25MM	6
4	 ALLEN KEY	1

STEP 1

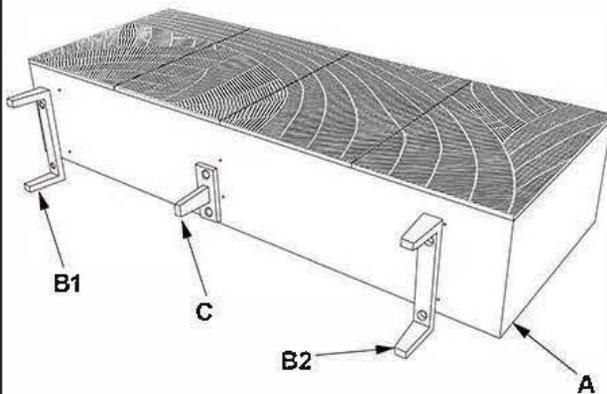


STEP 2

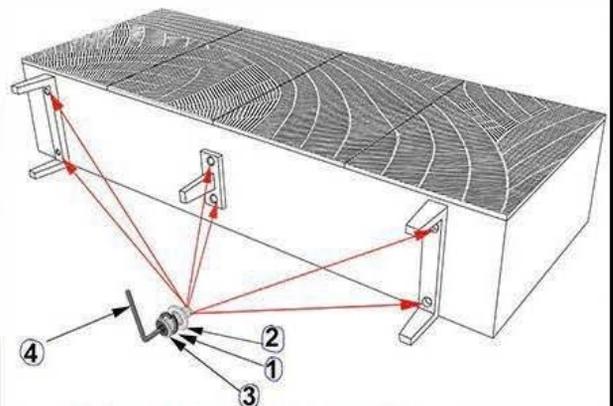


Match holes of legs to holes on bottom before screwing, if holes do not line up, switch the legs

STEP 3

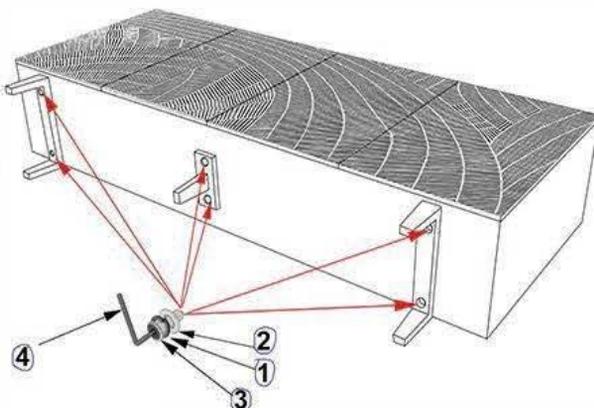

Screw and tighten the legs.

STEP 4

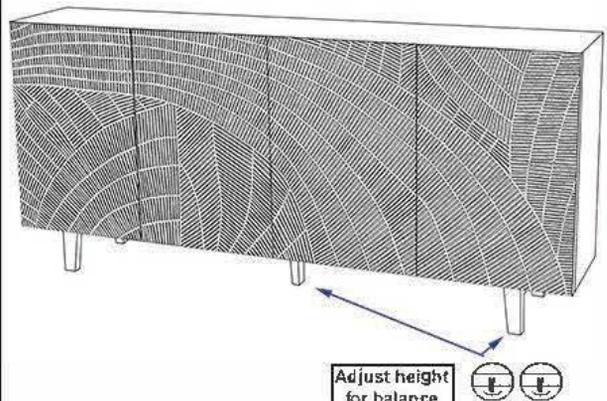

MADE IN INDIA