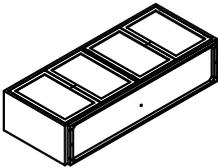



ASSEMBLY INSTRUCTION

CVFDR1153


PARTS

	DESCRIPTION		
A		Box	1
B		Legs	2
C		Center Leg	1
D		Crossbar	1

HARDWARE


	DESCRIPTION		
H1		Bolts (50 mm x 6 mm)	4
H2		Bolts (35 mm x 6 mm)	2
H3		Flat Washers (17 mm x 8 mm)	4
H4		Spring Washers (14 mm x 8 mm)	4
H5		Hex Key #4	1
H6		Wooden Plugs (15 mm x 7 mm)	2

STEP 1

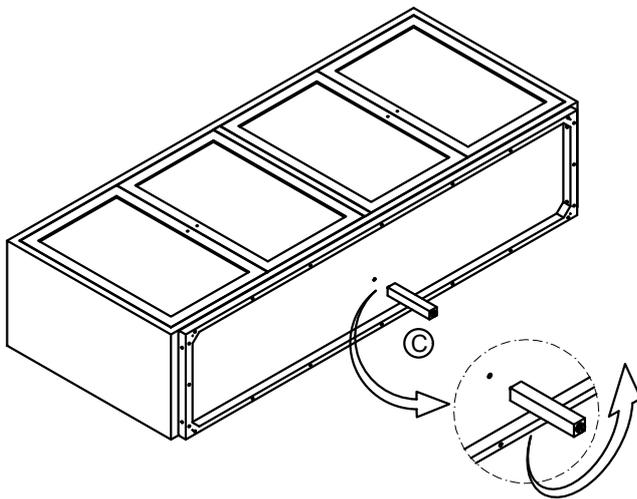


1. Attach a Leg to its position
2. Turn the Legs clockwise until it is tight

STEP 2

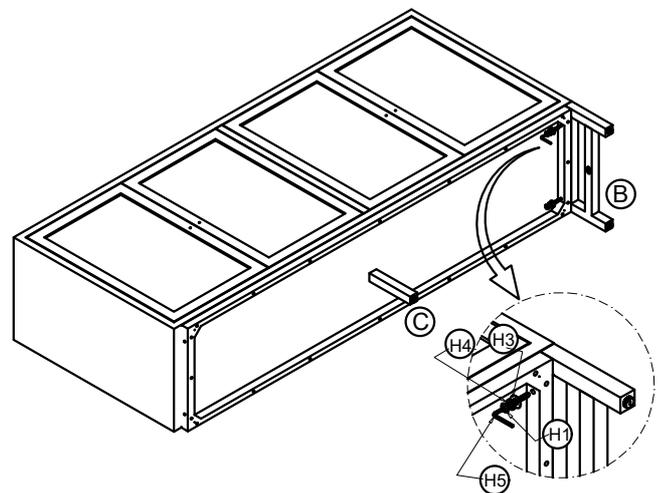


1. Place the Cabinet (A) with doors facing up on the ground.
2. Place one Leg (B) in the space provided on bottom right of cabinet (A), then insert two (2) Bolt (H1) through two (2) Flat Washer (H3) and through the holes on bottom of Cabinet (A) and into the holes on Leg (B) (See picture), without tightening fully.

STEP 3

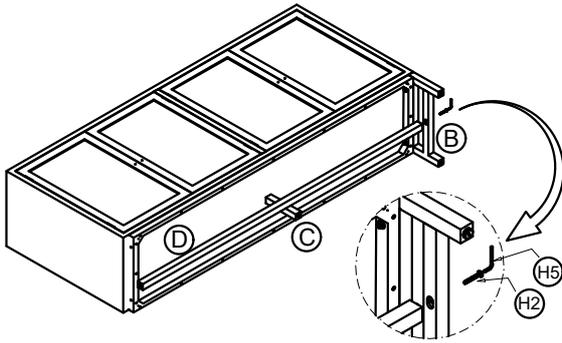


1. Place Crossbar (D) in the space provide on the inside middle of Leg (B), then insert one (1) Bolt (H2) through the hole on Leg (B) and into hole on Crossbar (D). (see picture), without tightening fully.

STEP 4

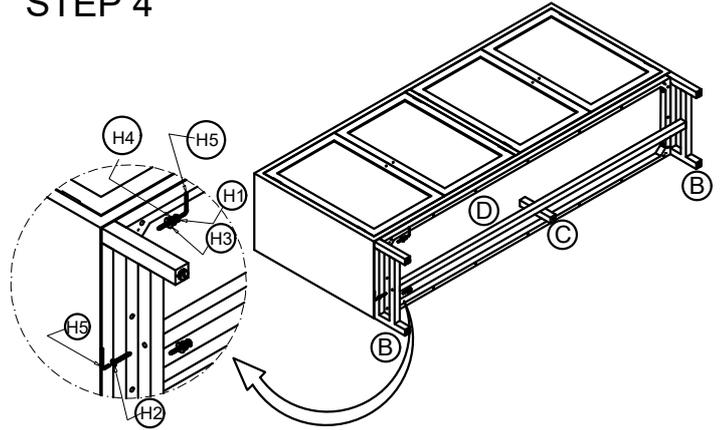


1. Place the other Leg (B) in the space provided on the bottom left of Cabinet (A), then insert two (2) Bolt (H1) through two (2) Flat washer (H3) through the holes on the bottom of Cabinet (A) and into holes on Leg (B). (see picture), without tightening fully.
2. Insert one (1) Bolt (H2) through the holes on Leg (B) and into the holes on Crossbar (C). (see picture)
3. Tighten all Bolts with the H5 wrench.

STEP 5

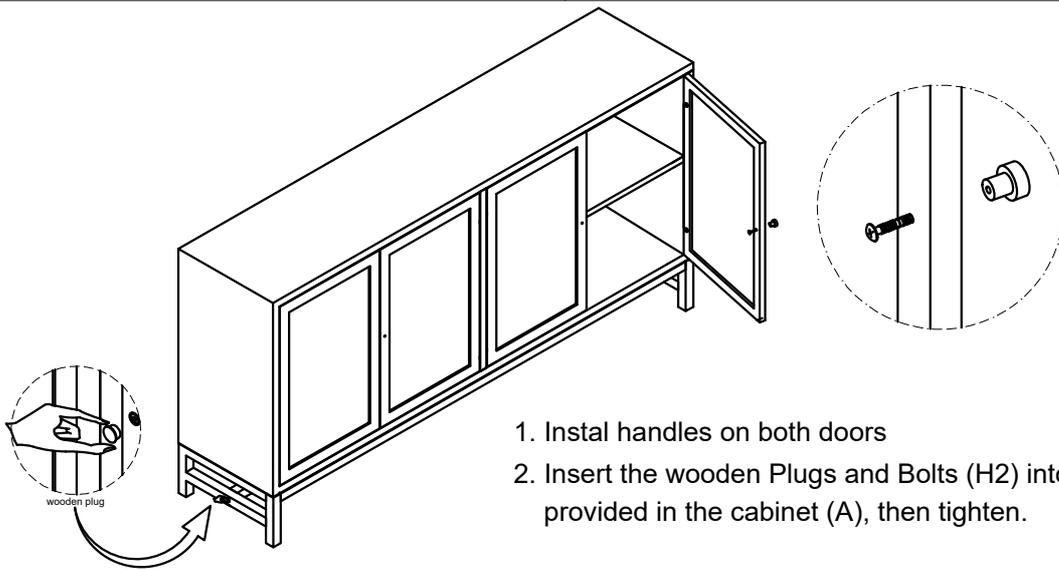

1. Instal handles on both doors
2. Insert the wooden Plugs and Bolts (H2) into the holes provided in the cabinet (A), then tighten.


COMPLETED

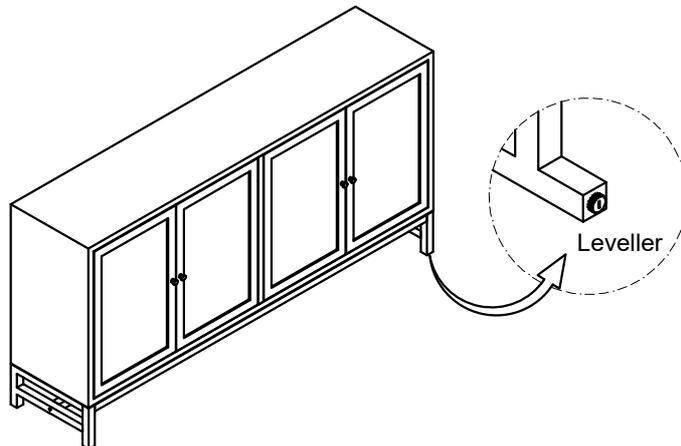

Leveller are provided at the bottom to the balance on uneven surface

ANTI - TIP KIT INSTALLATION INSTRUCTIONS

CVFDR1153 - 4 DOOR CABINET

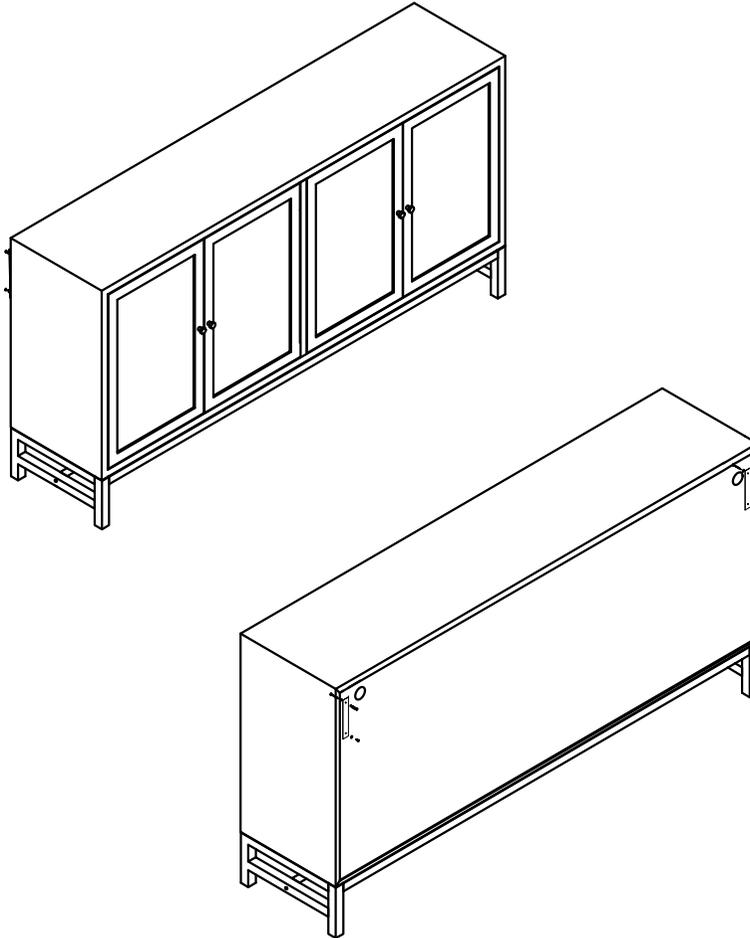

HARDWARE ANTI TIP KIT

A	Belt		2x
B	Wall plug		2x
C	Long Screw		2x
D	Rings		4x
E	Short Screw		2x

ANTI TIP KIT INSTALLATION

