


Before You Start

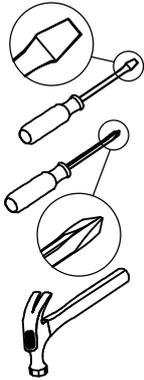

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.



- Never push, pull, or drag your furniture.


Board Identification

Not actual size

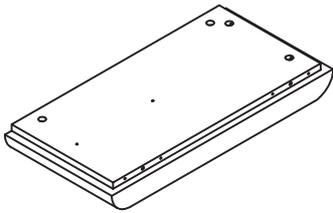


①

Qty: 1

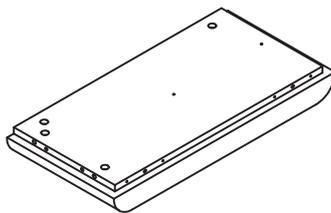


②

Qty: 1

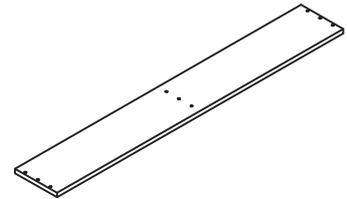


③

Qty: 1

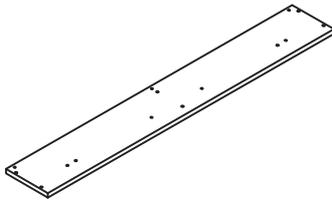


④

Qty: 1

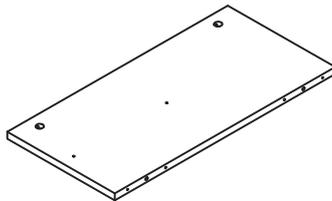


⑤

Qty: 1

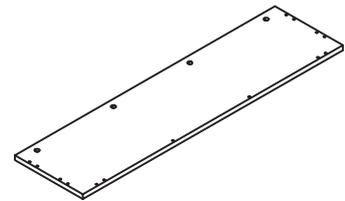


⑥

Qty: 1

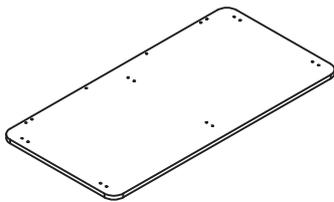


⑦

Qty: 1

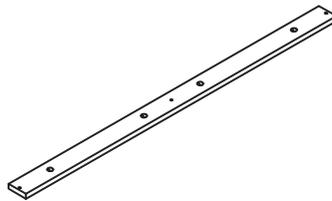


⑧

Qty: 2

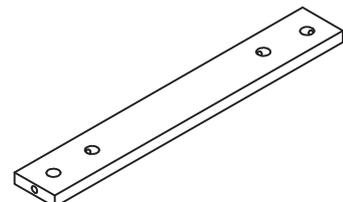


⑨

Qty: 3

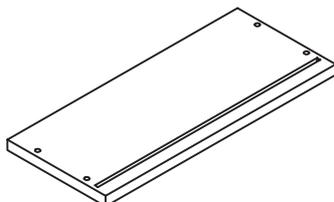


⑩

Qty: 2

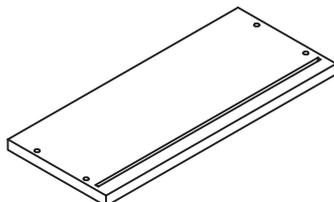

⑪

Qty: 2

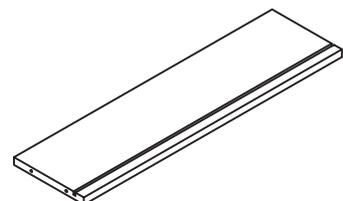


⑫

Qty: 2


Board Identification

Not actual size

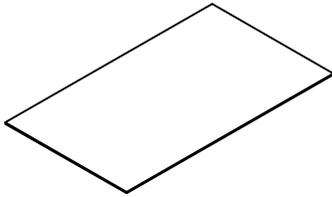


⑬

Qty: 2

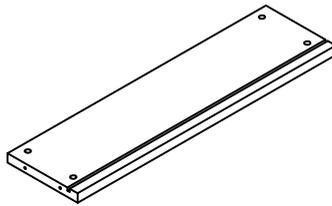


⑭

Qty: 2

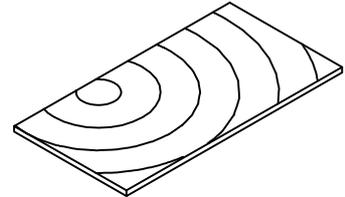

⑮









Qty: 1

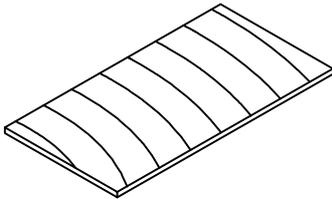

⑯


Qty: 1

Part List

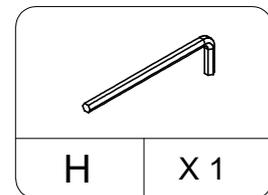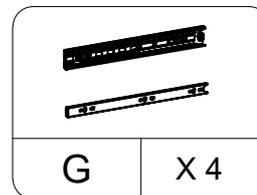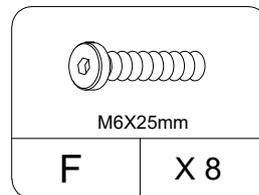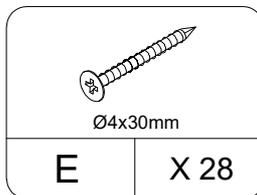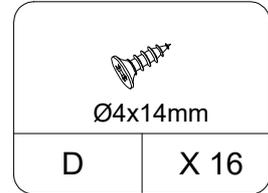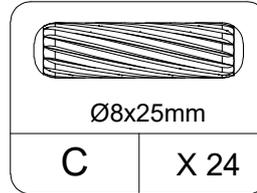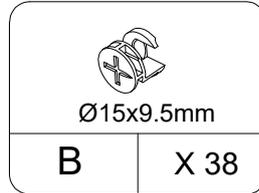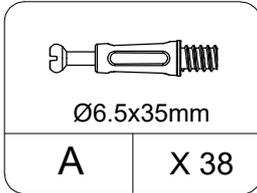


Cam Lock Fastening System

Insert the cam bolt into the
hole first, then insert the
cam lock and lock it.

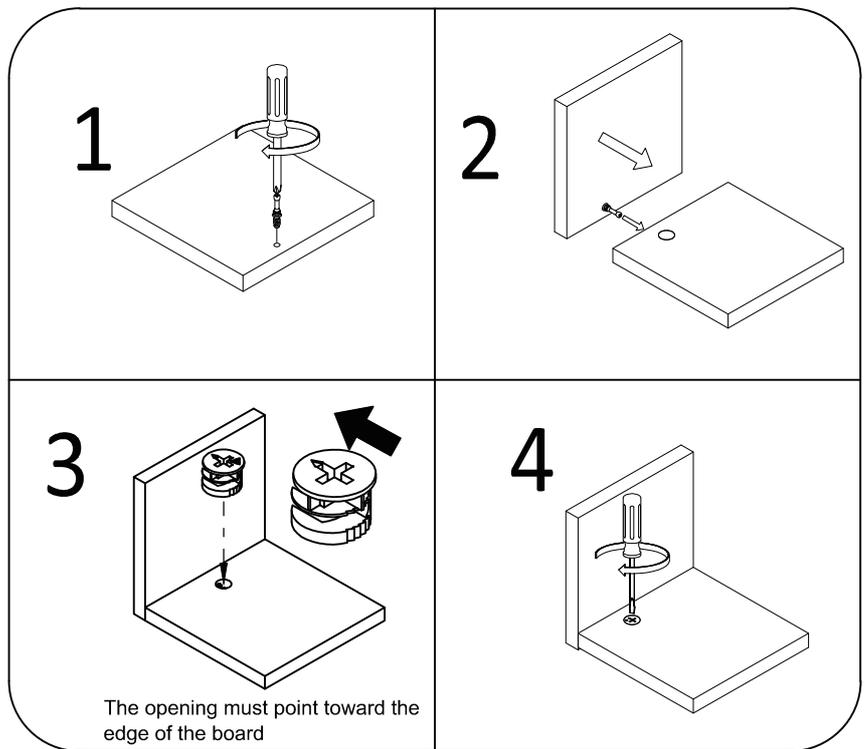

Board Identification







Not actual size

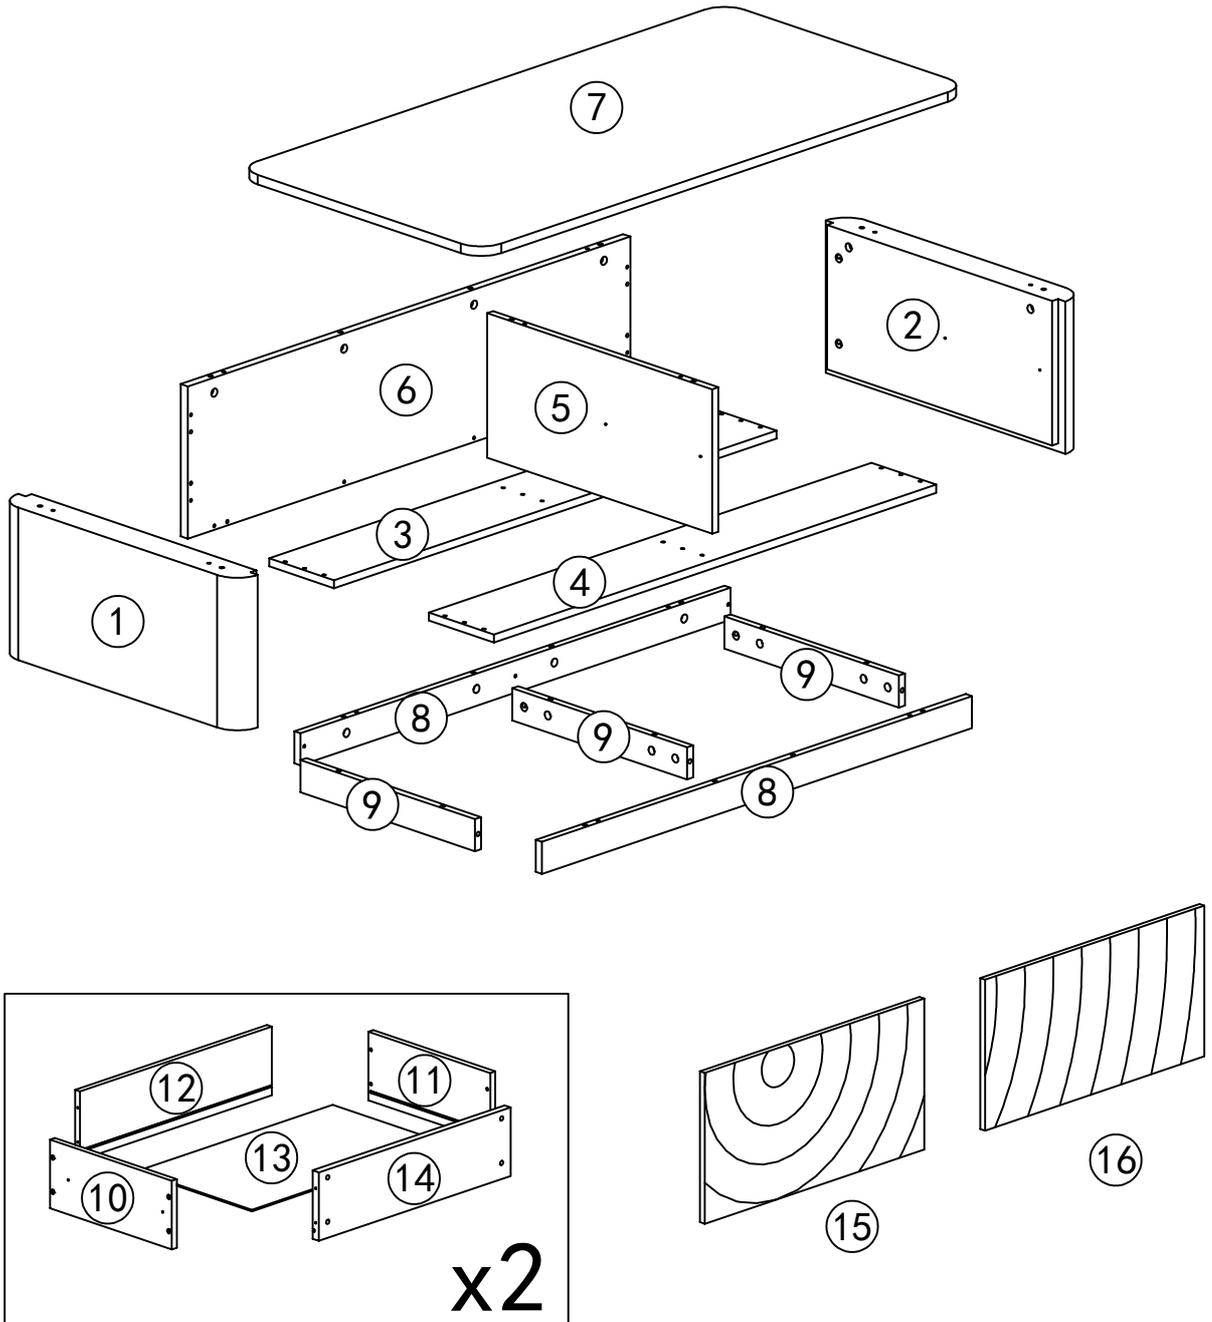







STEP1

	
Ø4X14mm	
D	X 4




	
	
G	X 2

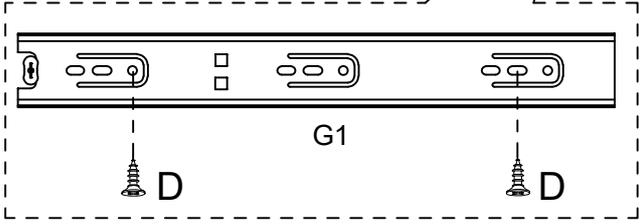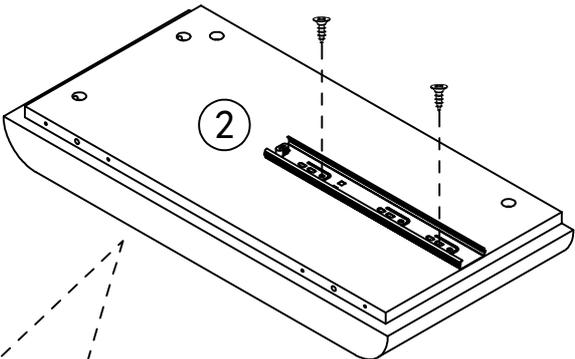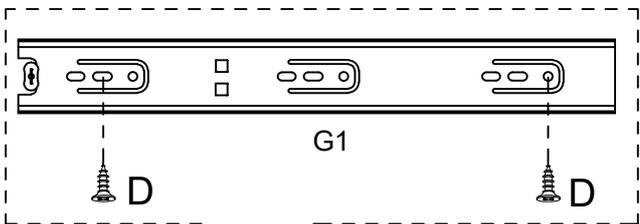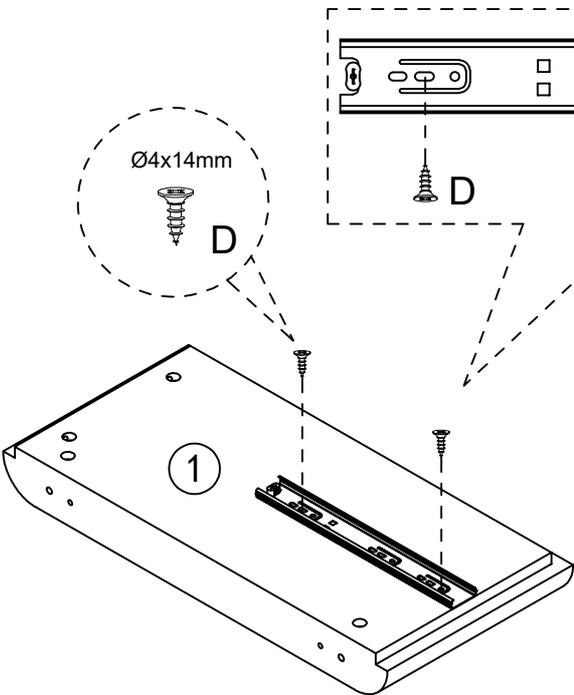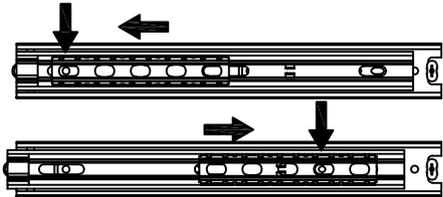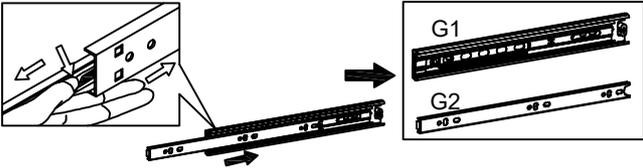


STEP 2

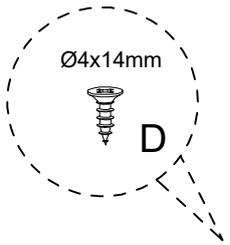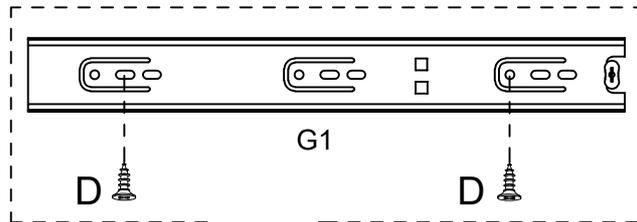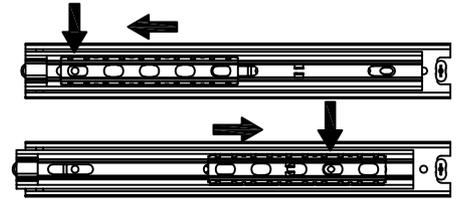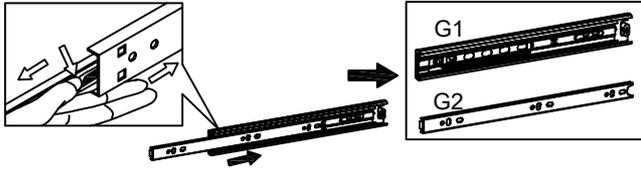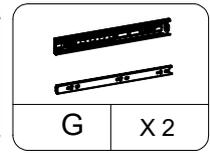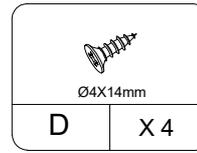


Flip

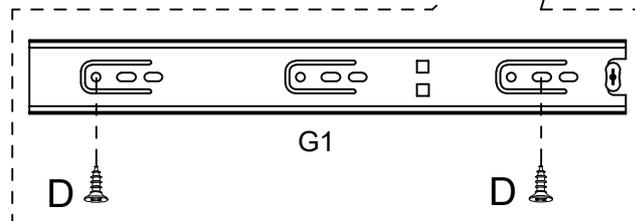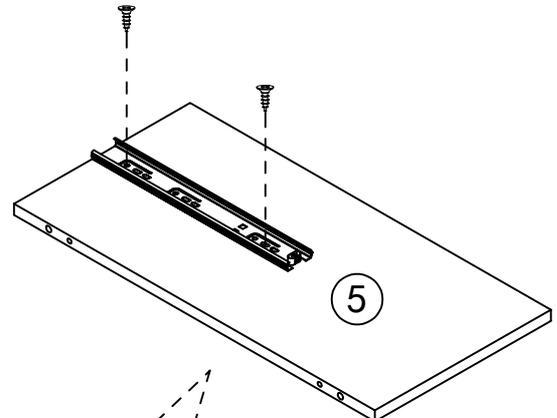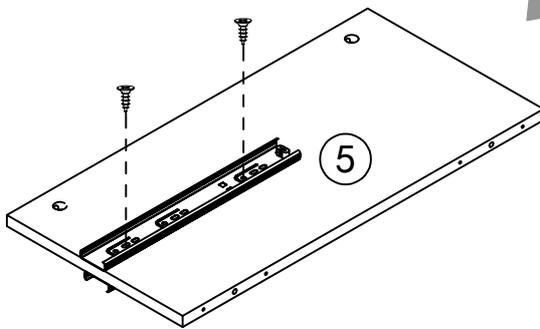


STEP3

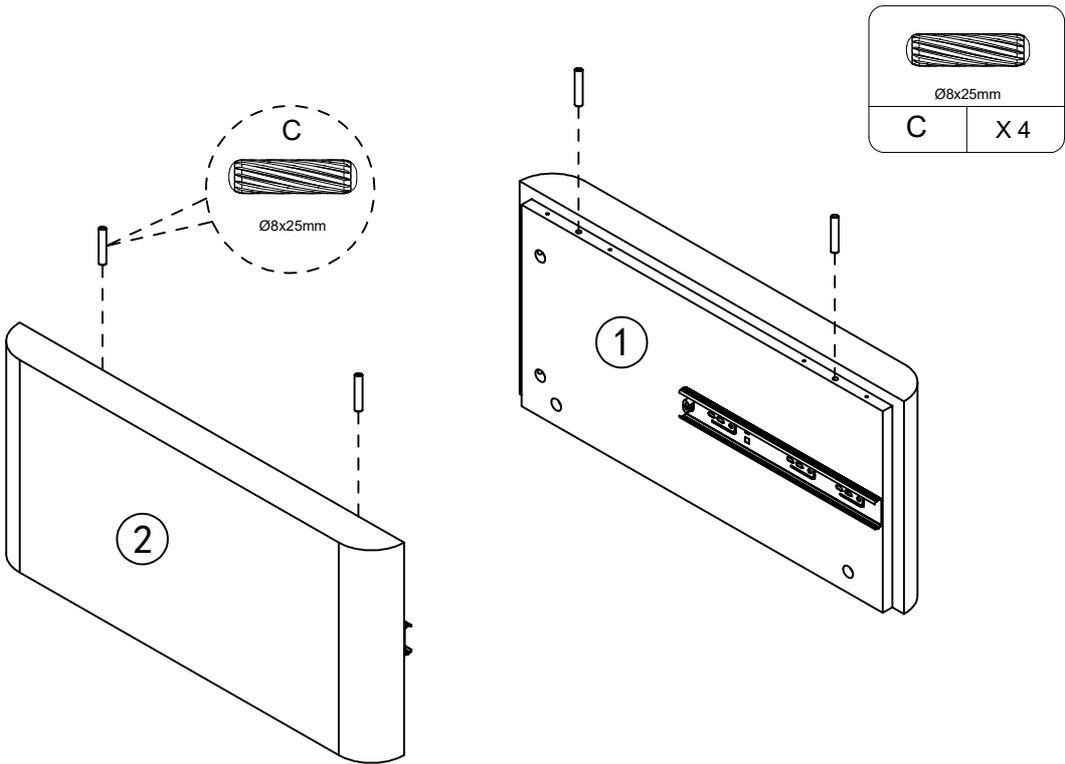


STEP4

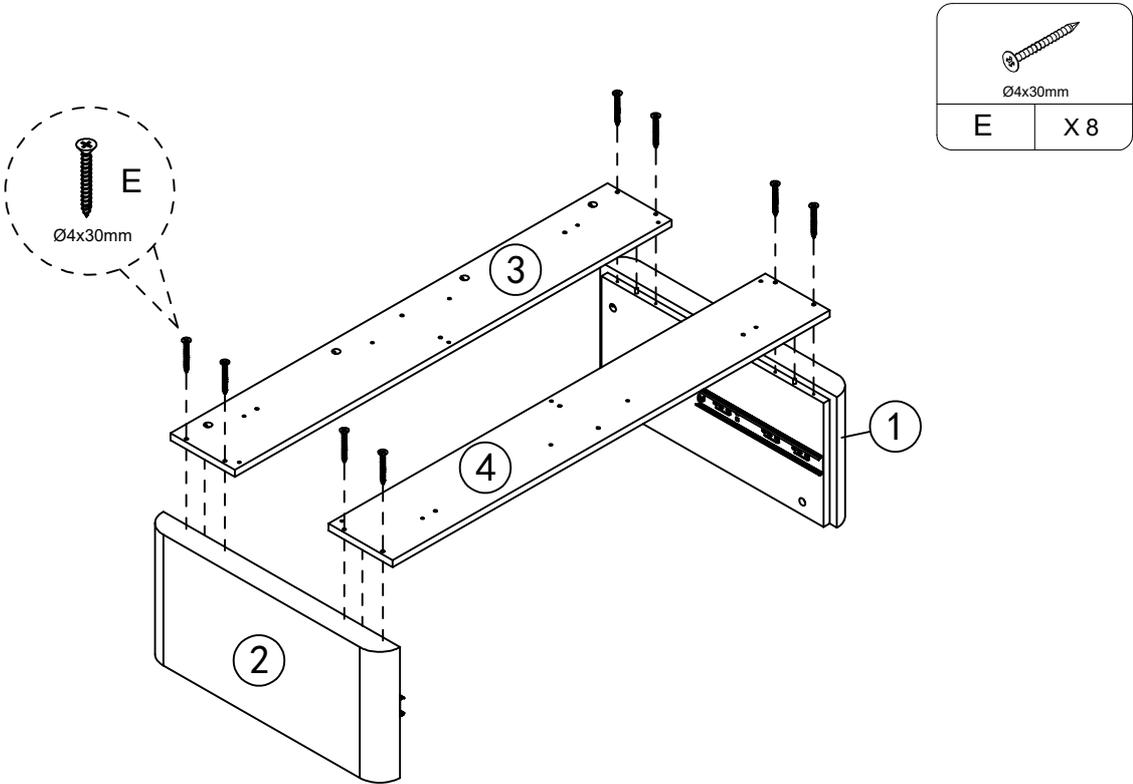

STEP5

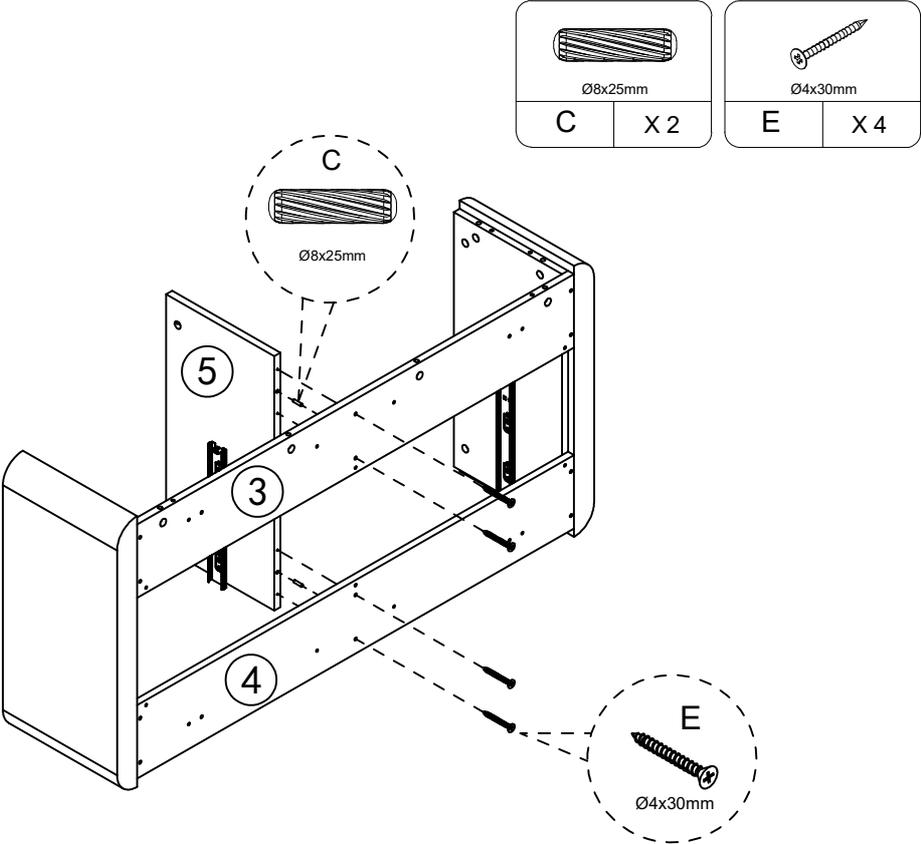


STEP6

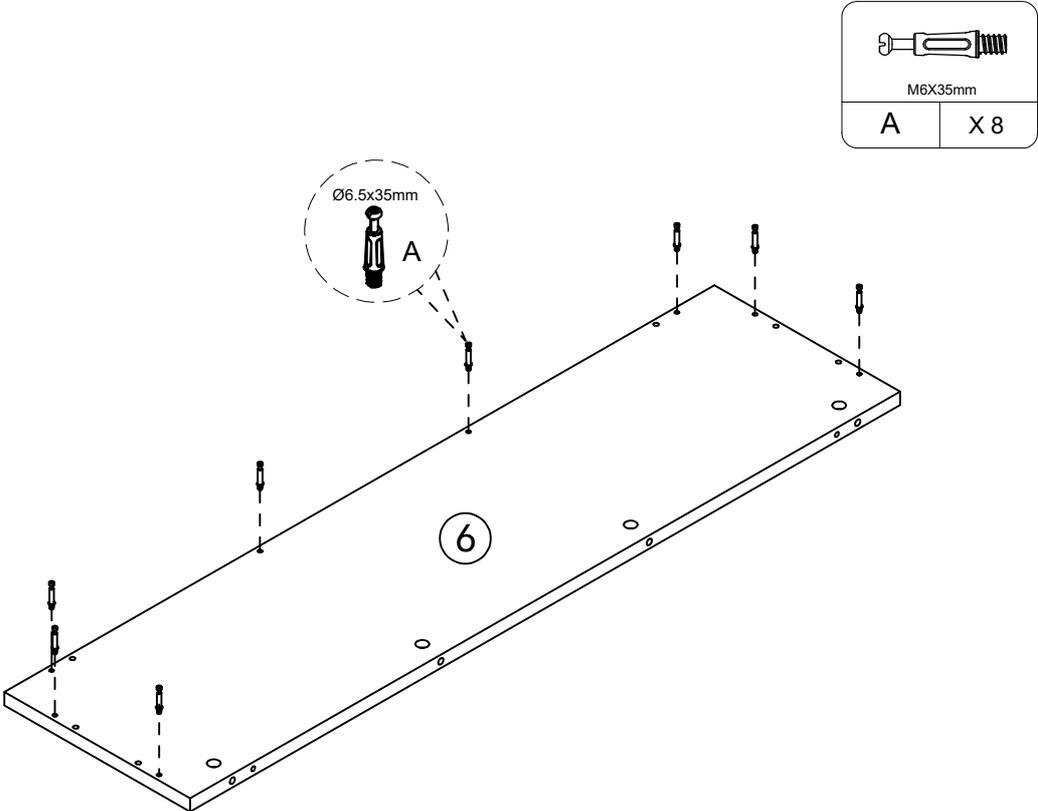


STEP 7


	
Ø15x9.5mm	
B	X 8

	
Ø8x25mm	
C	X 6

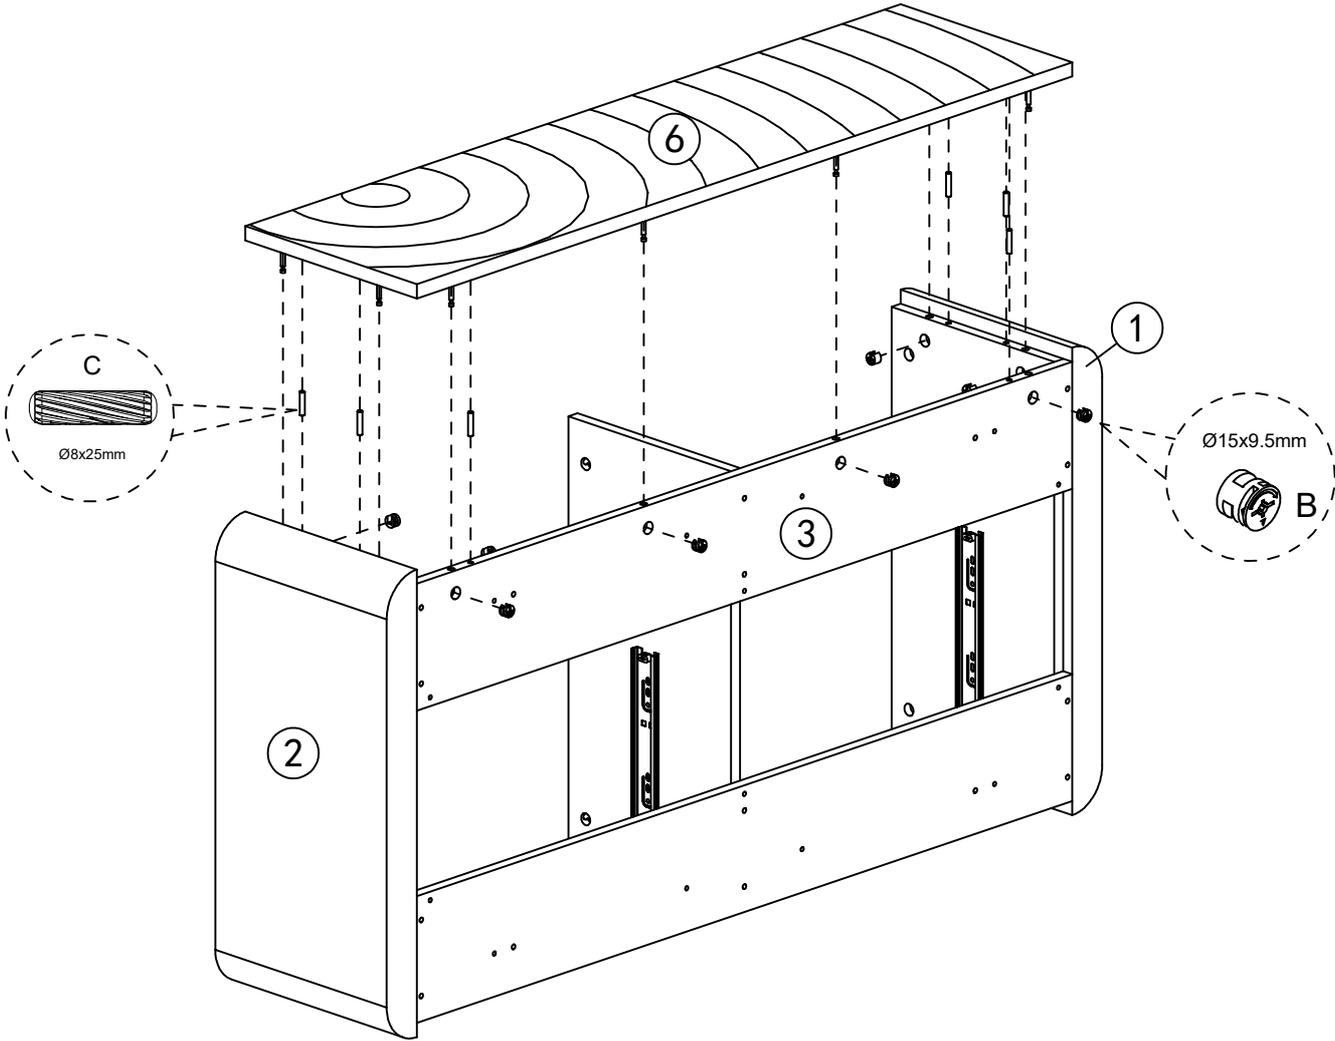



STEP 8

			
M6X35mm		Ø8x25mm	
A	X 14	C	X 4

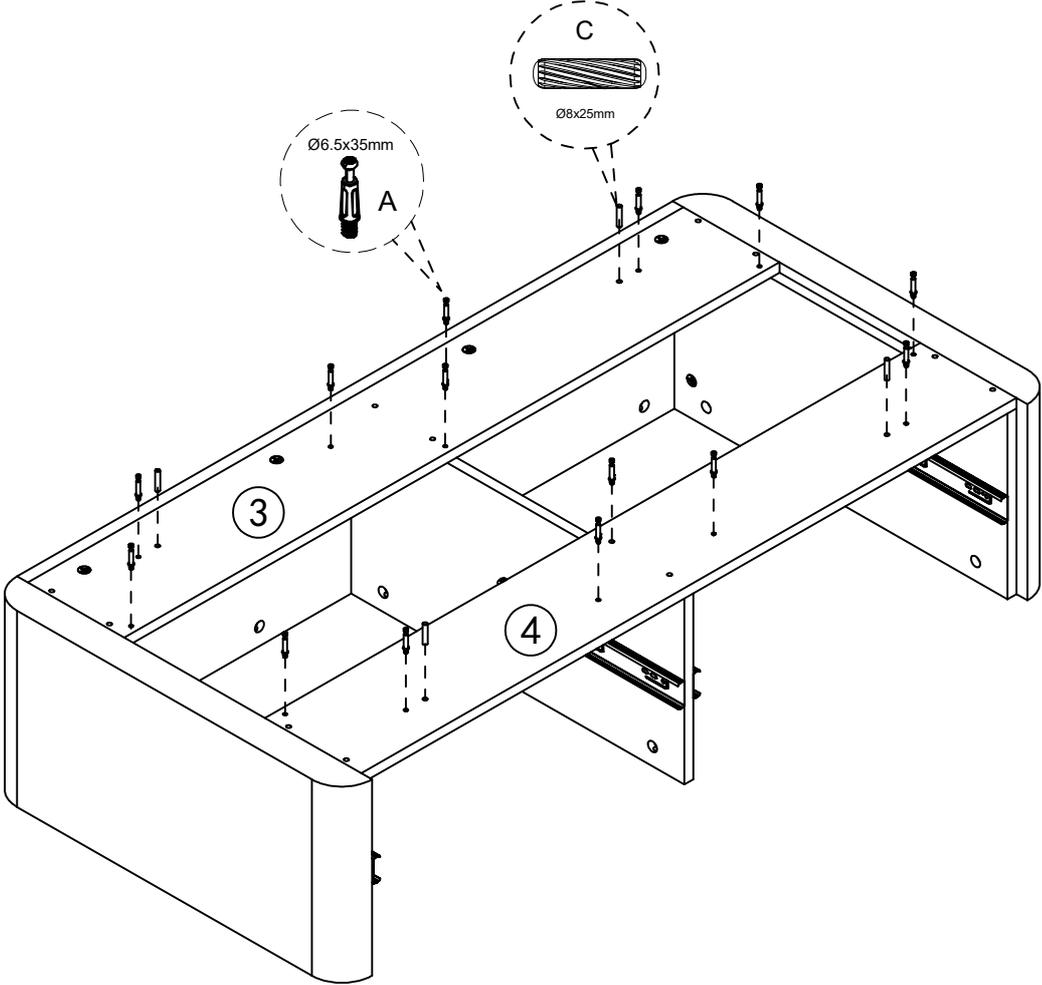

STEP9


	
M6X35mm	
A	X 6

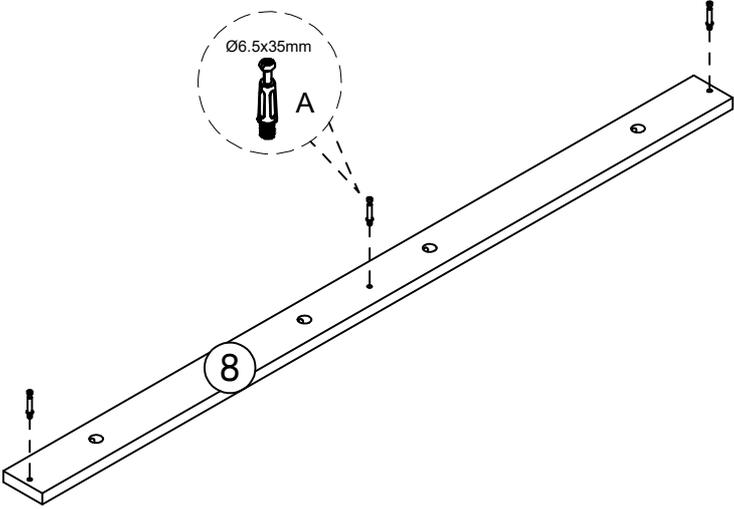

x2


STEP10

	
Ø15x9.5mm	
B	X 6

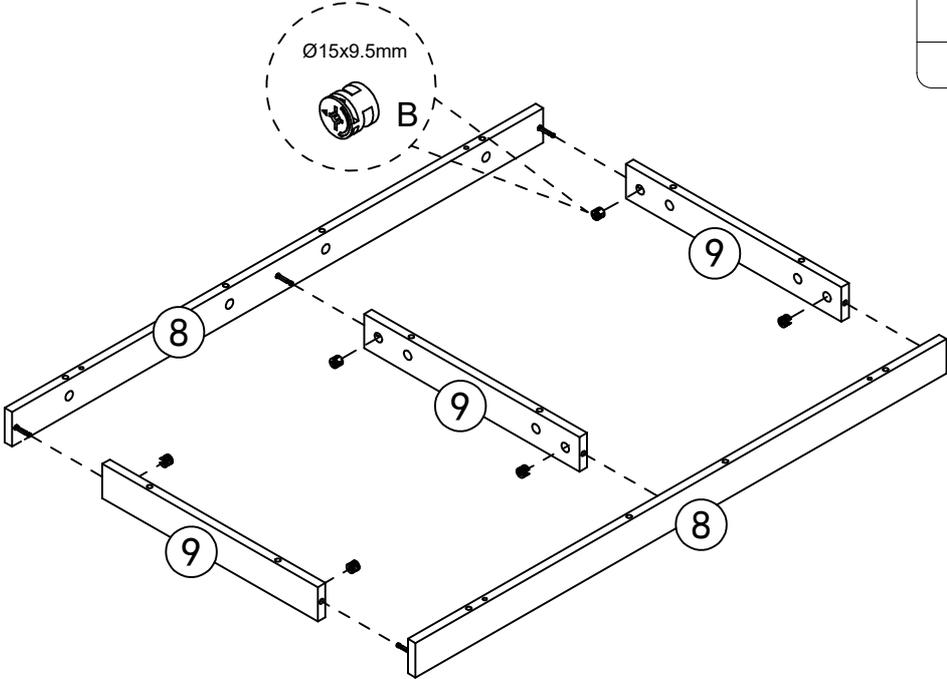



STEP11

	
Ø15x9.5mm	
B	X 14

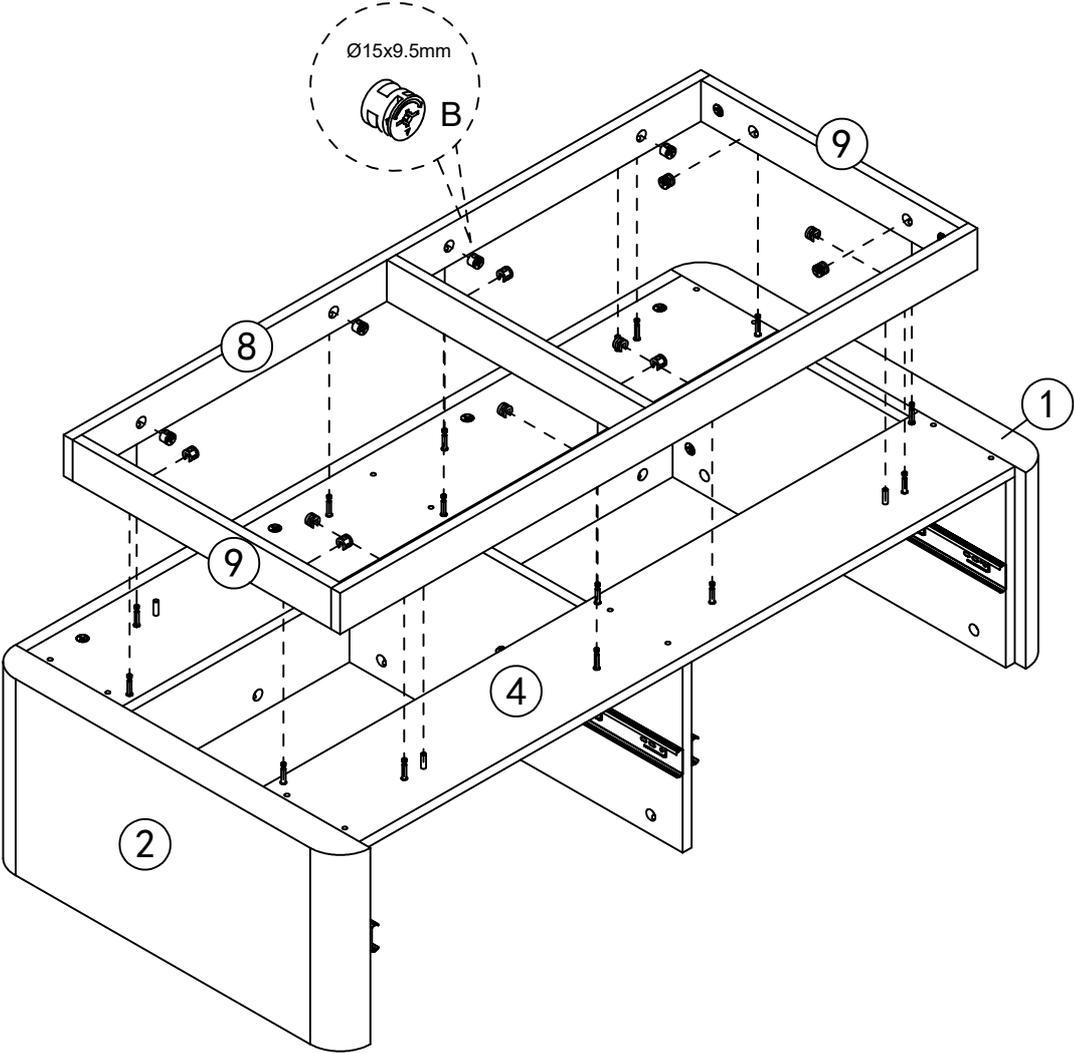


STEP12

	
M6X35mm	
A	X 10


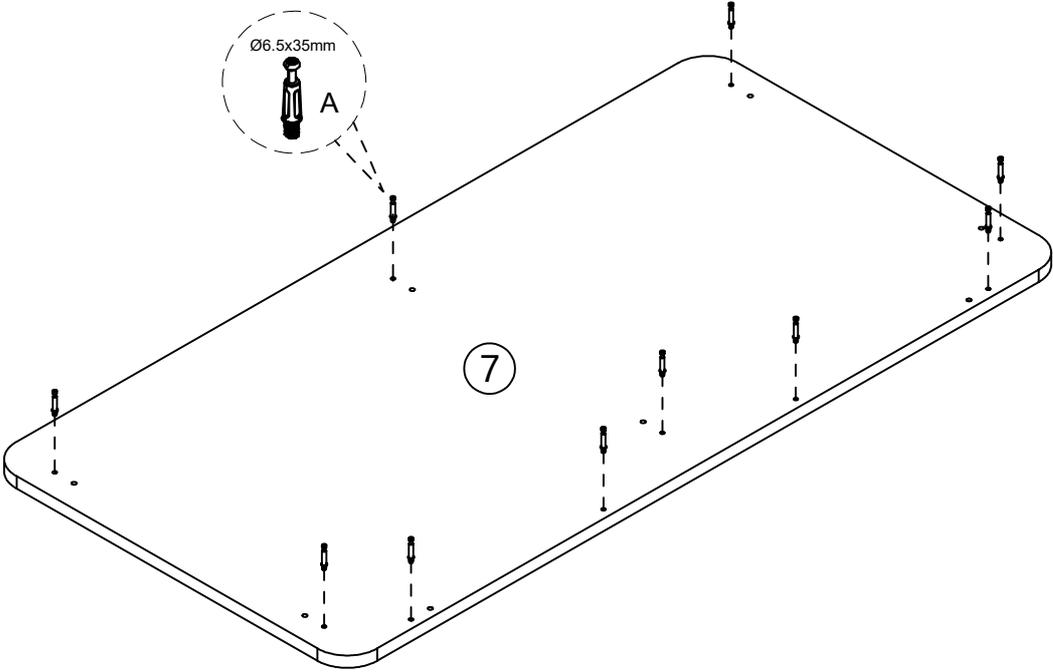


STEP13

 Ø15x9.5mm		 Ø8x25mm	
B	X 10	C	X 8

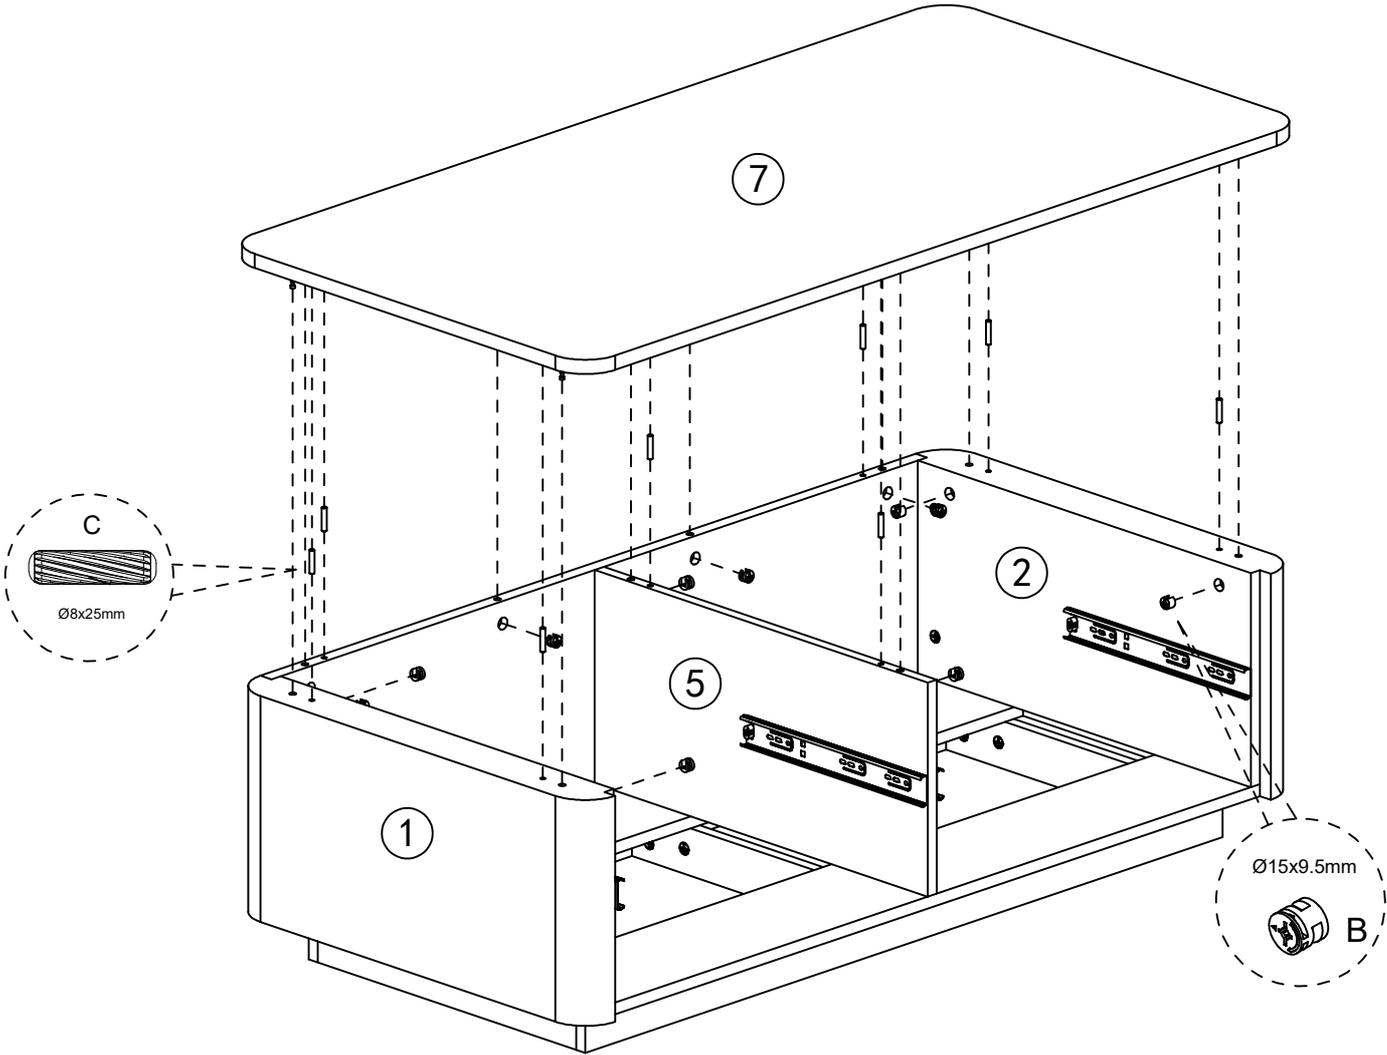


STEP14

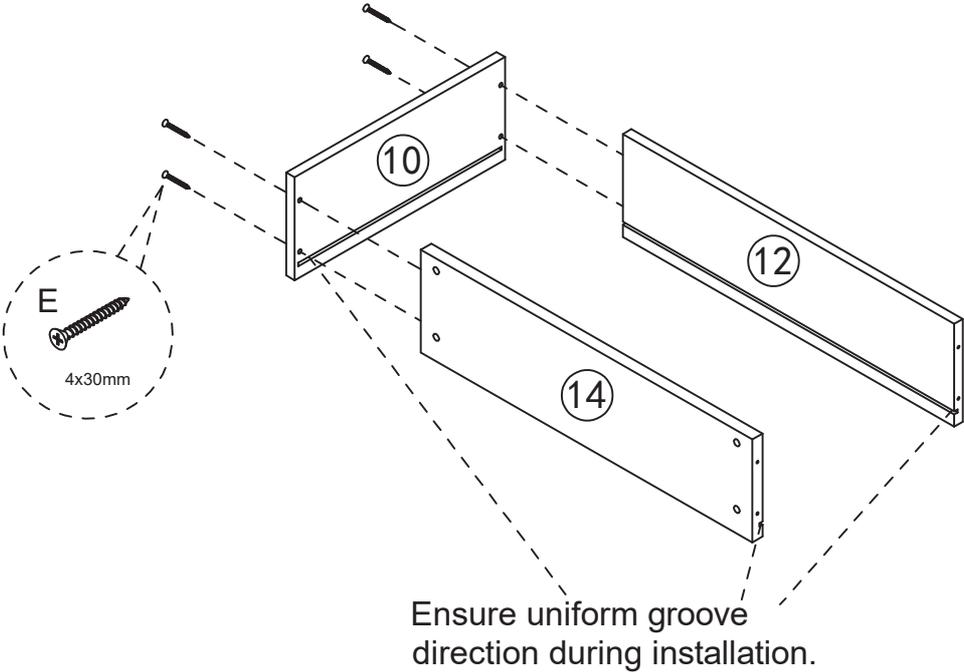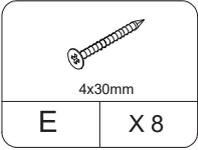


x2

STEP15

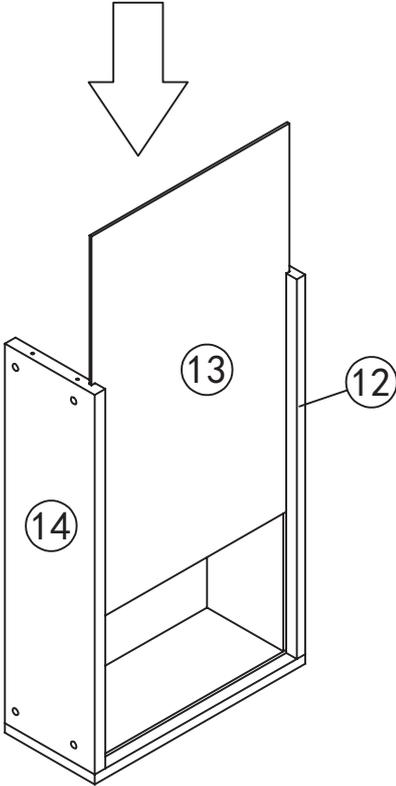


x2





STEP16

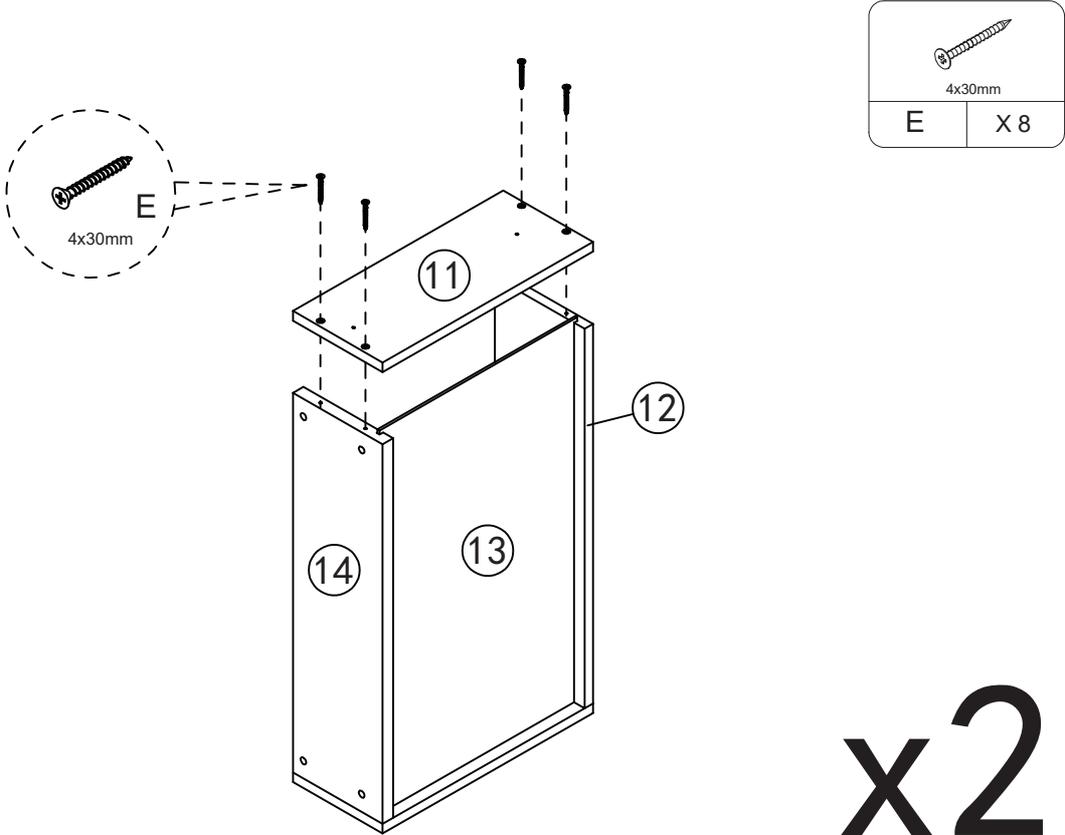


STEP17

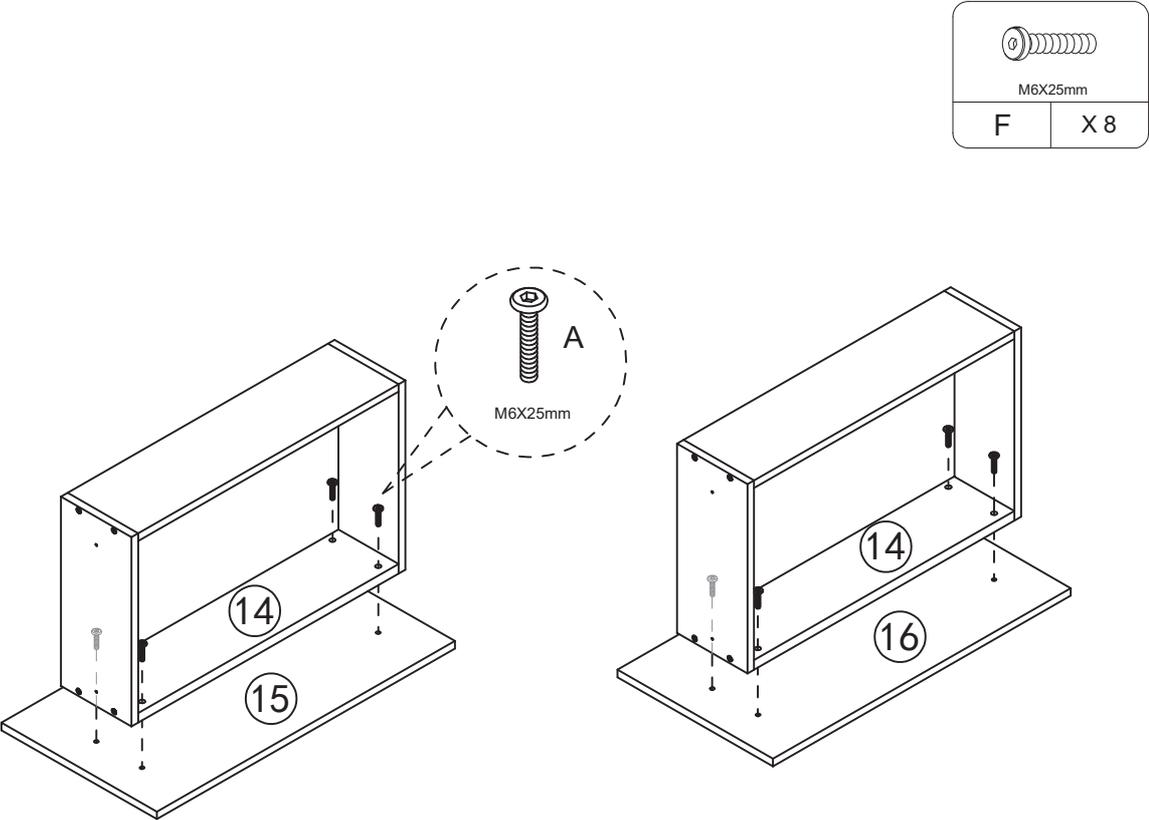

STEP18

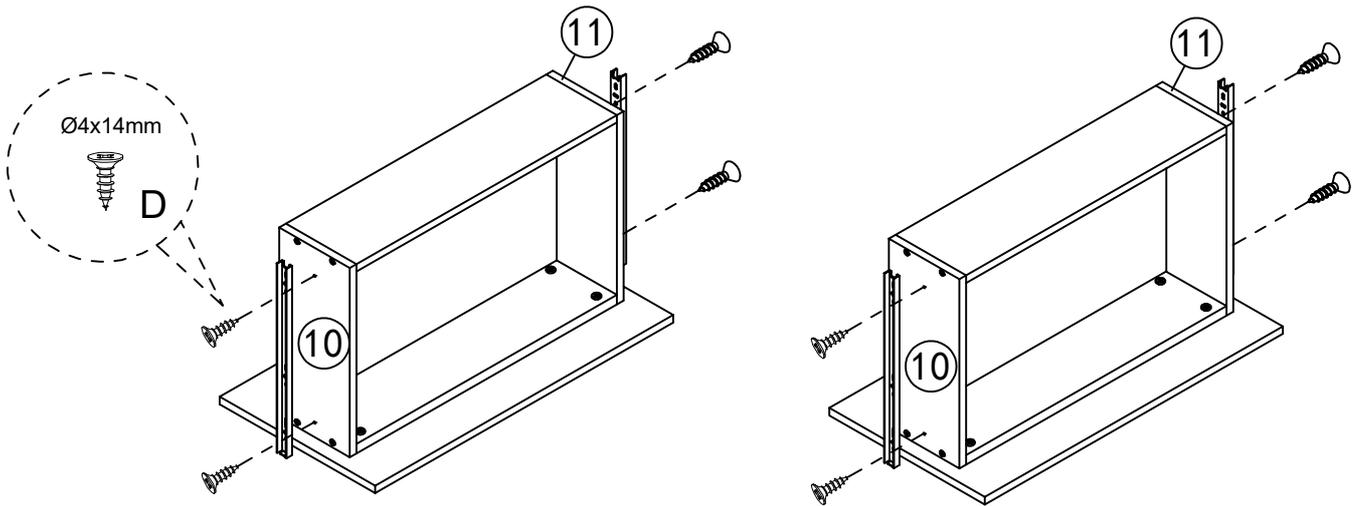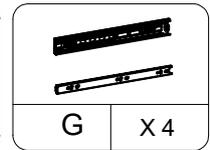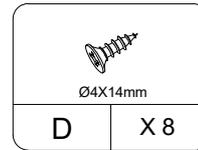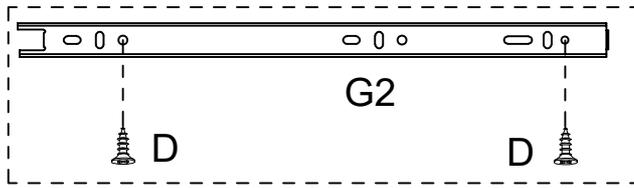

STEP19

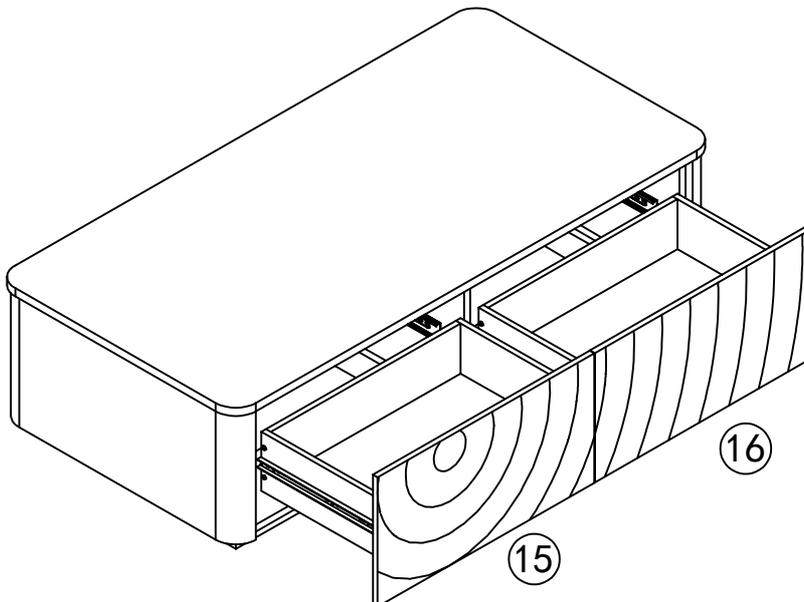

Drawer Front Flush Adjustment

