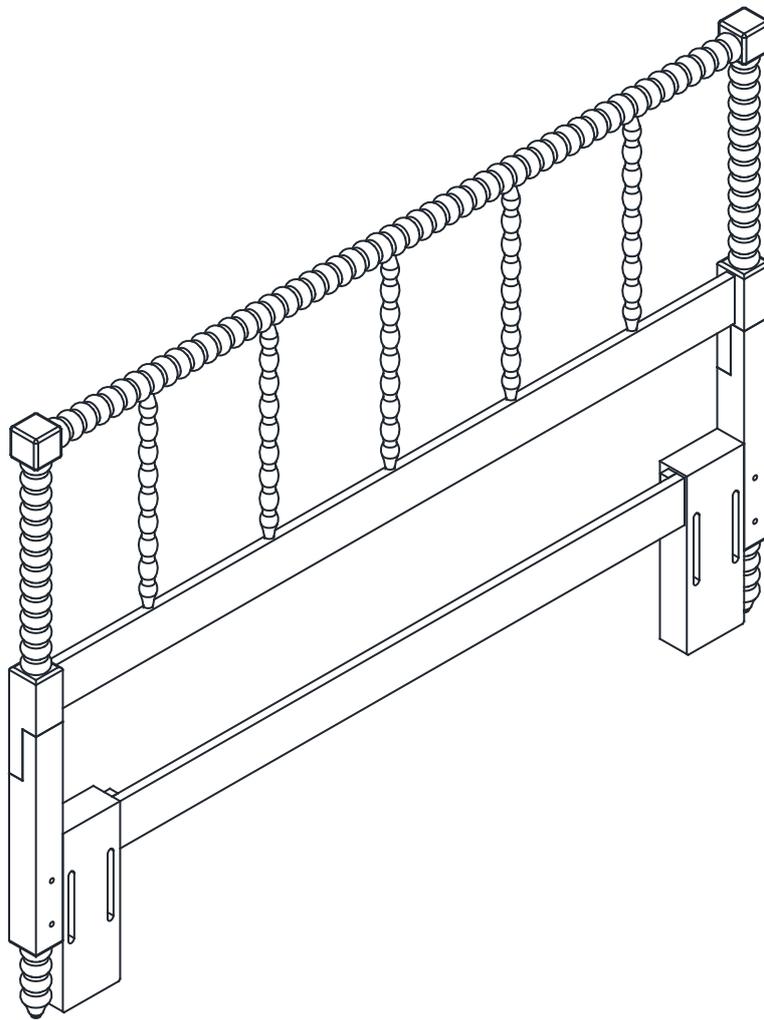


# **CROSLEY**

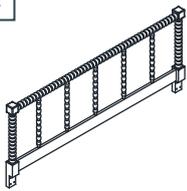


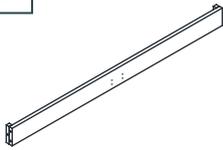
---

FURNITURE


## Queen Headboard CF92009-501



# PART LIST

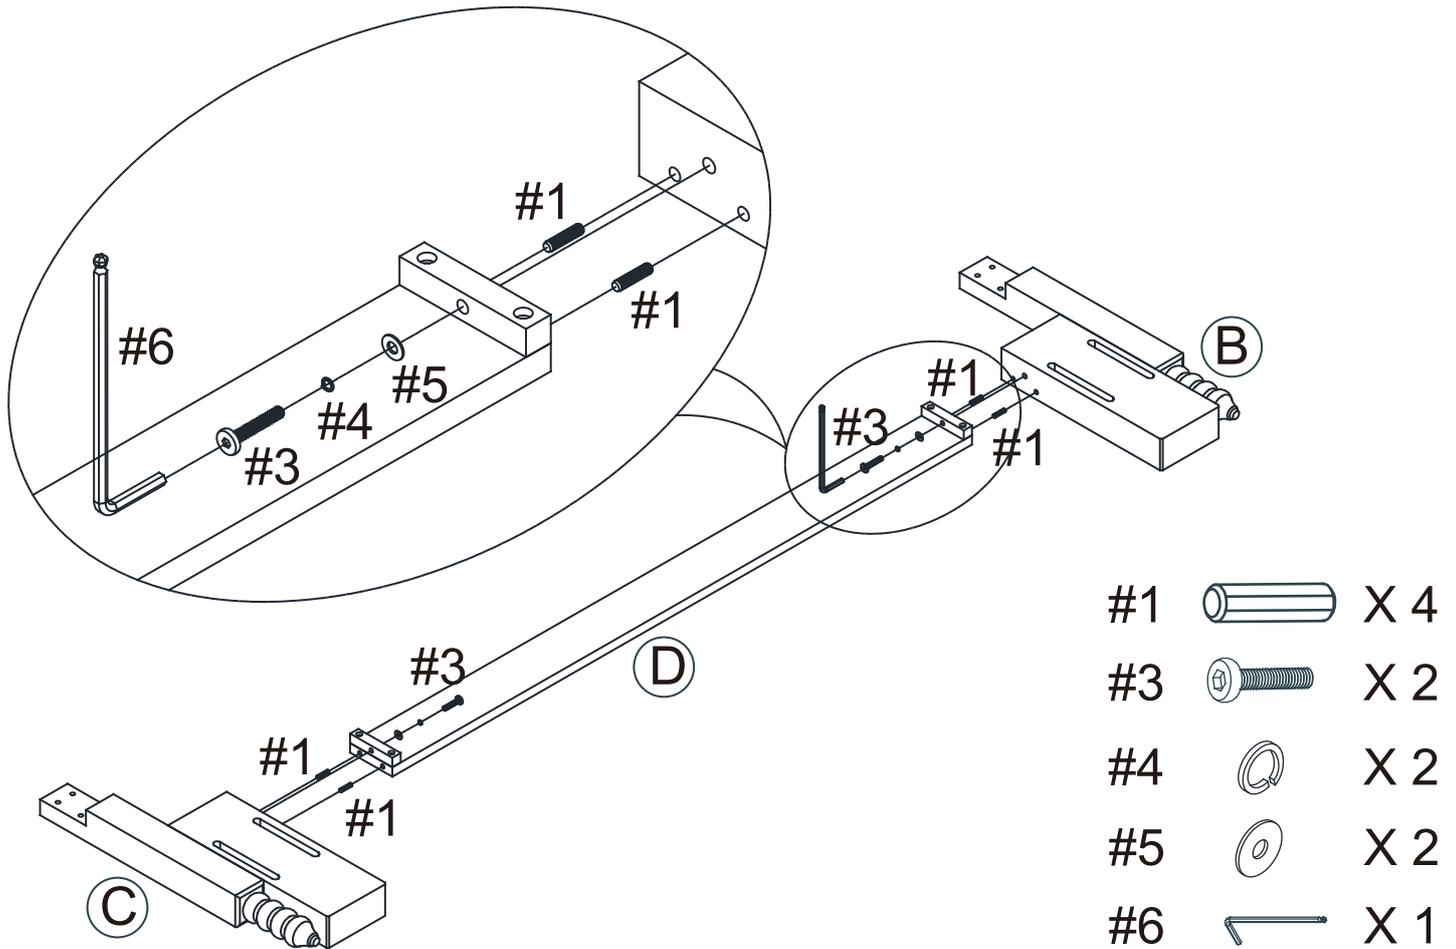
			
<p>Headboard 1 PC</p>	<p>Left Post 1 PC</p>	<p>Right Post 1 PC</p>	<p>Crossbar 1 PC</p>

# HARDWARE LIST

 <p>Ø8mm*1-1/8"</p>	 <p>Ø1/4"*2"</p>	 <p>Ø1/4"*1-3/8"</p>		
<p>Wood Dowel 4 PCS (Extra 1)</p>	<p>Medium Bolt 8 PCS (Extra 1)</p>	<p>Short Bolt 2 PCS (Extra 1)</p>	<p>Spring Washer 10 PCS (Extra 1)</p>	<p>Flat Washer 10 PCS (Extra 1)</p>
 <p>4mm Allen Wrench 1 PC</p>				

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach left post (part B) and right post (part C) to crossbar (part D) using wood dowels (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).



Step 2. Attach left post (part B) and right post (part C) to headboard (part A) using medium bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

