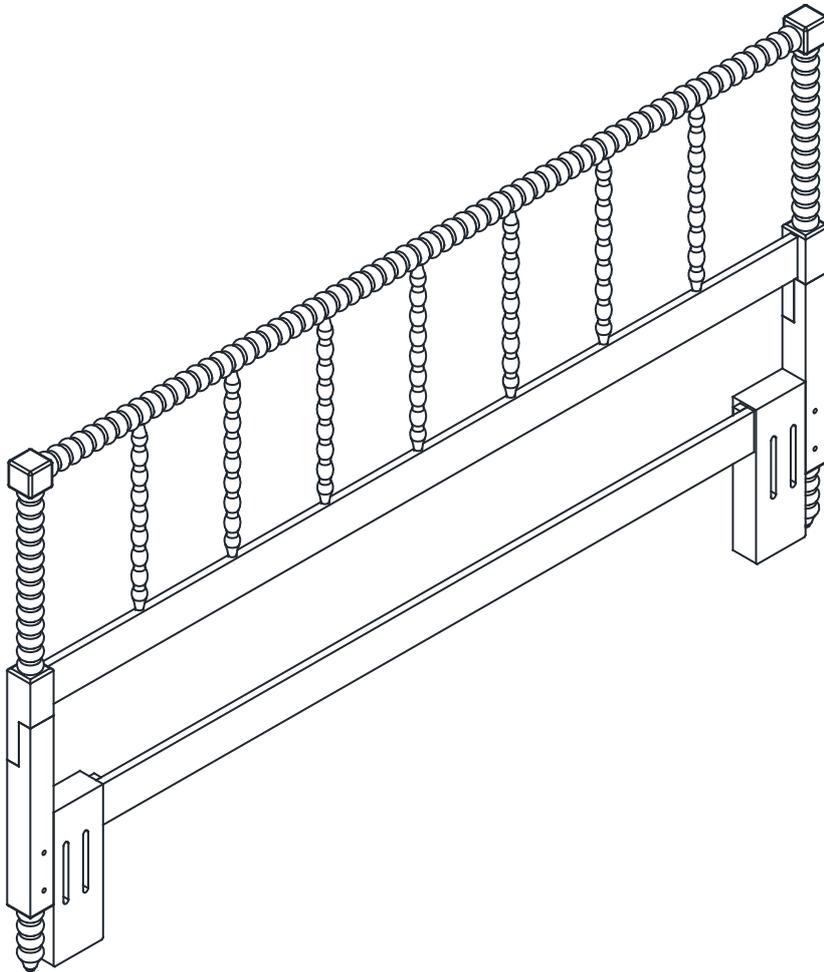


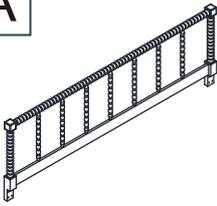


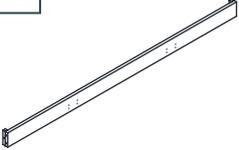
CROSLEY

FURNITURE


King Headboard CF92009-601



PART LIST

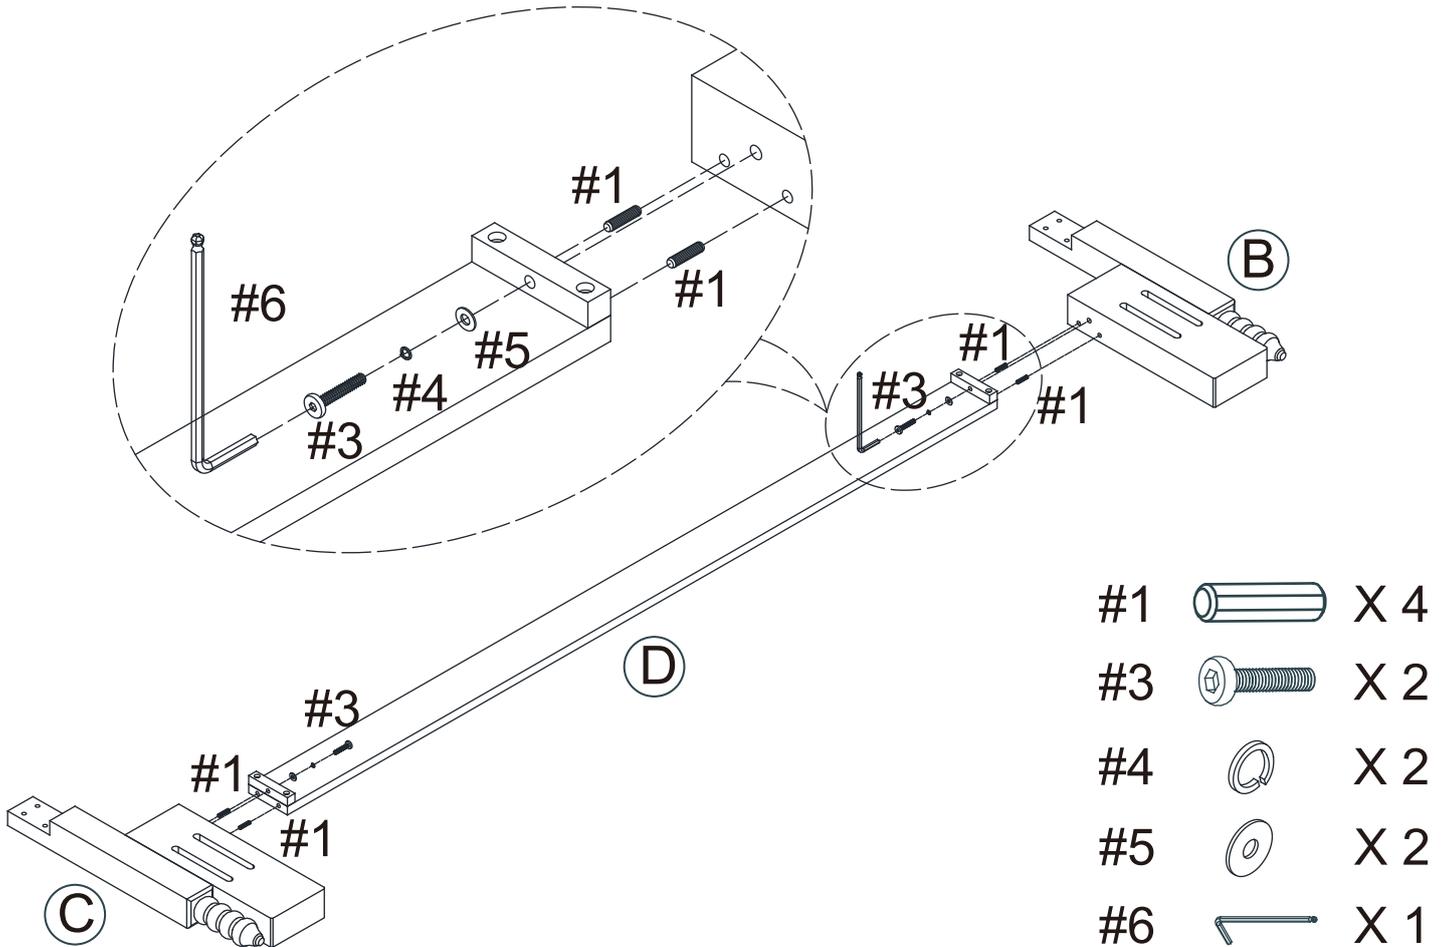
			
<p>Headboard</p> <p>1 PC</p>	<p>Left Post</p> <p>1 PC</p>	<p>Right Post</p> <p>1 PC</p>	<p>Crossbar</p> <p>1 PC</p>

HARDWARE LIST

 <p>Ø8mm*1-1/8"</p>	 <p>Ø1/4"*2"</p>	 <p>Ø1/4"*1-3/8"</p>		
<p>Wood Dowel</p> <p>4 PCS (Extra 1)</p>	<p>Medium Bolt</p> <p>8 PCS (Extra 1)</p>	<p>Short Bolt</p> <p>2 PCS (Extra 1)</p>	<p>Spring Washer</p> <p>10 PCS (Extra 1)</p>	<p>Flat Washer</p> <p>10 PCS (Extra 1)</p>
 <p>4mm</p> <p>Allen Wrench</p> <p>1 PC</p>				

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach left post (part B) and right post (part C) to crossbar (part D) using wood dowels (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).



Step 2. Attach left post (part B) and right post (part C) to headboard (part A) using medium bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #6).

