


It can be installed quickly in Various Styles

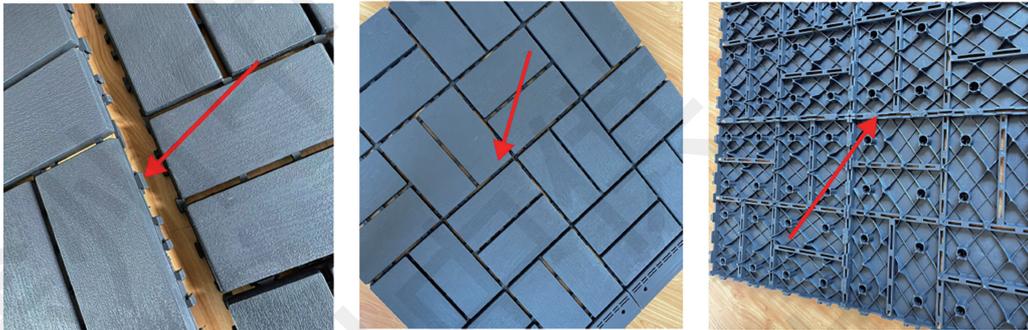


Step 1. Place the first floor in position and align the other floors with the grooves and clasps.

Step 2. Put the Deck Tiles in the pattern you like, and Align the slots and clasps, then press down the upside one.



Filling With Surroundings

1: Filling With Cobblestone

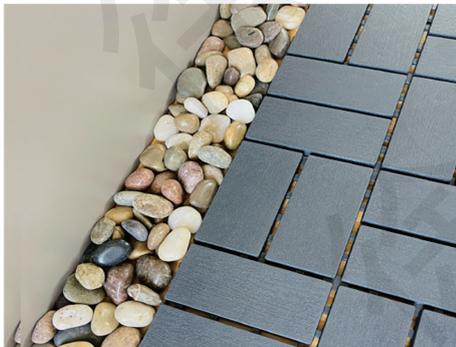

2:Filling With Floor edge banding



Real Scene Picture

