


HALL TREE-ARBRE À HALL

Assembly Instructions-Instructions de montage - Please keep for future reference

Instructions de montage - Veuillez conserver pour référence ultérieure

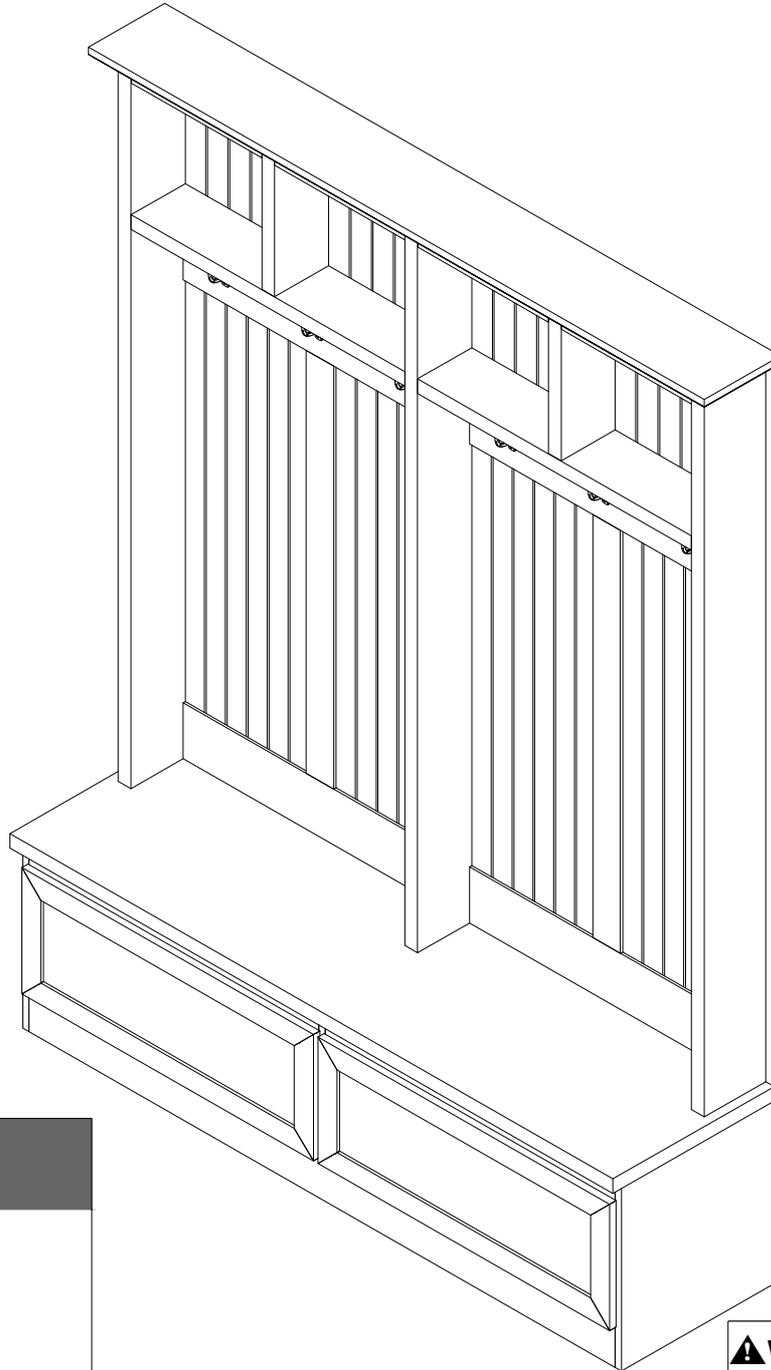

Dimensions

Width-55.9inch

Depth-15inch

Height-75.6inch

⚠ WARNING/AVERTISSEMENT



This product is NOT a Clothing Storage Unit (CSU).
Ce produit n'est PAS une unité de rangement pour vêtements (CSU).
DO NOT use it for clothing storage.
NE PAS utiliser pour ranger des vêtements.
Improper use may cause furniture tipover.
Une utilisation incorrecte peut entraîner le basculement des meubles.

Important-Please read these instructions fully before starting assembly
Important : Veuillez lire attentivement ces instructions avant de commencer l'assemblage.



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions












To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittinas/N721P433346

Please check you have all the panels listed below
Veuillez vérifier que vous disposez de tous les panneaux listés ci-dessous

Note : The quantities below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.
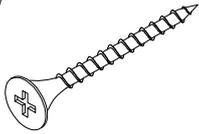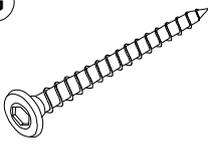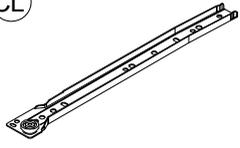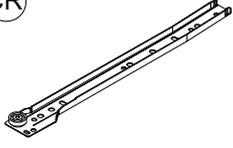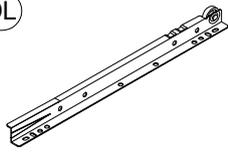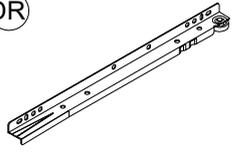
<p>A</p>  <p>Ø6*35mm Cam Bolt-Boulon à came x 58+1</p>	<p>B</p>  <p>Ø15*9mm Cam lock- Verrou à came x 58+1</p>	<p>C</p>  <p>4*40mm Screw-Vis x 10+1</p>	<p>D</p>  <p>6*30mm Dowel-Goujon x 56+2</p>	<p>E</p>  <p>3*12mm Screw-Vis x 24+1</p>
<p>F</p>  <p>6*50mm Dowel-Goujon x 2</p>	<p>G</p>  <p>5*45mm Screw-Vis x x 20+1</p>	<p>H</p>  <p>Clothes-Hook-Crochet à vêtements x 6</p>	<p>I</p>  <p>3.5*12mm Screw-Vis x 12+1</p>	<p>J</p>  <p>3*14mm Screw-Vis x 32+2</p>
<p>K</p>  <p>Plastic Nail-Clou en plastique x 32+1</p>	<p>L</p>  <p>30*12mm Non-Slip mat- Tapis antidérapant x 6</p>	<p>M</p>  <p>Anti-tip Hardware-Dispositif anti-basculement x2</p>	<p>N</p>  <p>Ø3.9*30mm Screw-Vis x 2</p>	<p>O</p>  <p>wrench-clé x 1</p>
<p>P</p>  <p>Huamei Patch-Huamei Patch x58+1</p>	<p>CL</p>  <p>300mm Runner -Coureux x 2</p>	<p>CR</p>  <p>300mm Runner-Coureuse x 2</p>	<p>DL</p>  <p>300mm Runner-Coureuse x 2</p>	<p>DR</p>  <p>300mm Runner-Coureuse x 2</p>

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

ATTENTION À NE PAS ENDOMMAGER LA POSITION DU TROU LORSQUE VOUS UTILISEZ DES OUTILS ÉLECTRIQUES !


Using Camlocks

Step 1

Connect the male camlock as directed in the Assembly Instructions- Instructions de montage using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

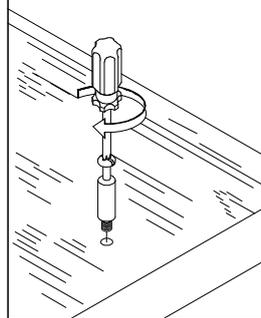

Step 2

Push the male camlock into the entry hole.

2

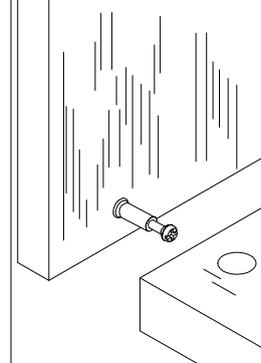


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

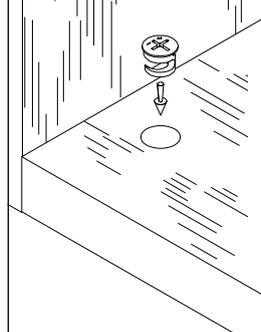


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.






4

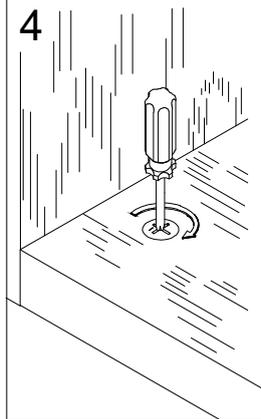

Components - Fittinas/N721P433346

Please check you have all the panels listed below


Veillez vérifier que vous disposez de tous les panneaux listés ci-dessous
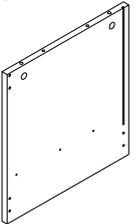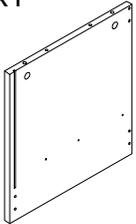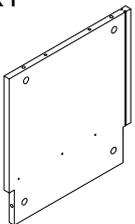
<p>① x1</p>  <p>1450x195x37mm</p>	<p>② x1</p>  <p>1498x160x23mm</p>	<p>③ x1</p>  <p>1498x160x23mm</p>	<p>④ x1</p>  <p>1498x160x23mm</p>	<p>⑤ x2</p>  <p>655x160x23mm</p>	<p>⑥ x2</p>  <p>320x160x23mm</p>
<p>⑧ x4</p>  <p>316x50x14mm</p>	<p>⑨ x2</p>  <p>890x75x14mm</p>	<p>⑩ x2</p>  <p>655x100x14mm</p>	<p>⑫ x4</p>  <p>900x300x4.5mm</p>	<p>⑬ x1</p>  <p>1420x380x24mm</p>	<p>⑭ x1</p>  <p>386x355x12mm</p>
<p>⑮ x1</p>  <p>386x355x12mm</p>	<p>⑯ x1</p>  <p>386x355x12mm</p>	<p>⑰ x1</p>  <p>1393x80x14mm</p>	<p>⑱ x1</p>  <p>1393x80x14mm</p>	<p>⑲ x2</p>  <p>690.5*66*14mm</p>	<p>⑳ x2</p>  <p>316*699*4.5mm</p>
<p>㉑ x2</p>  <p>697x260x14mm</p>	<p>㉒ x2</p>  <p>641x180x12mm</p>	<p>Hardware kit kit de matériel x1</p>			


Components - Fittinas/N721P433347

Please check you have all the panels listed below

Veillez vérifier que vous disposez de tous les panneaux listés ci-dessous




<p>⑦ x2</p>  <p>655x165x14mm</p>	<p>⑪ x4</p>  <p>330x326x4.5mm</p>	<p>⑫ x2</p>  <p>300x180x12mm</p>	<p>⑬ x2</p>  <p>300x180x12mm</p>	<p>⑮ x2</p>  <p>651x297x4.5mm</p>	<p>⑯ x2</p>  <p>287x60x12mm</p>
---	--	---	---	--	--




Assembly Instructions-Instructions de montage

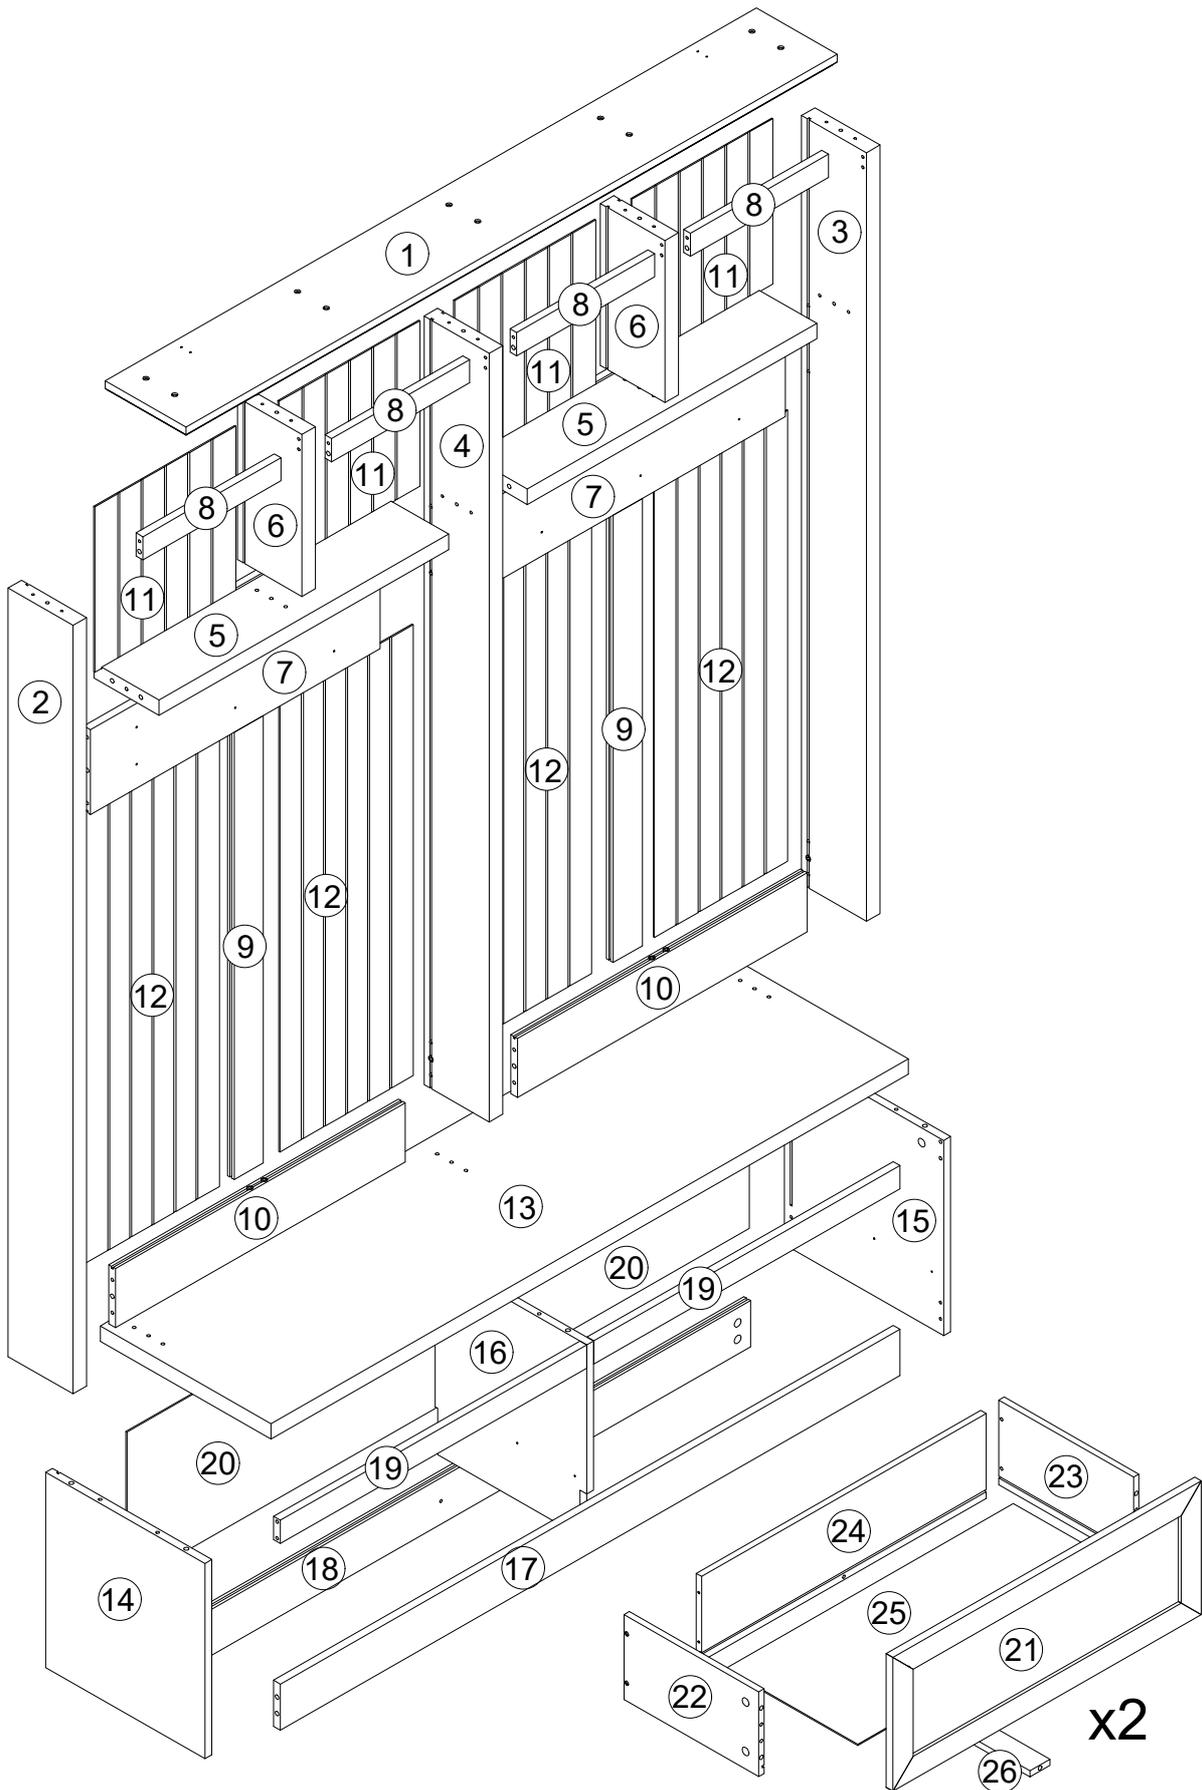

Assembly Instructions - Instructions de montage





step/Étape 1

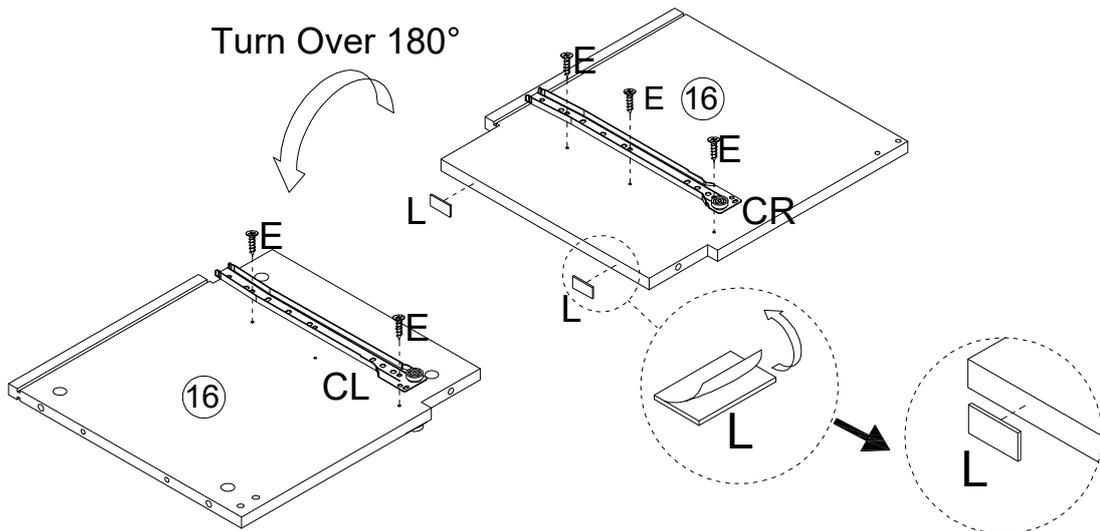
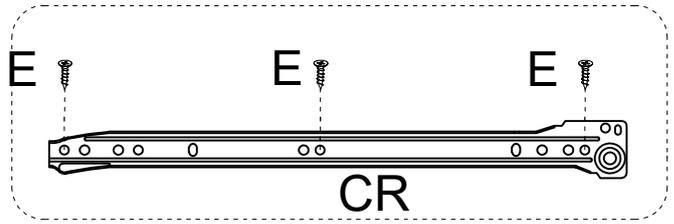
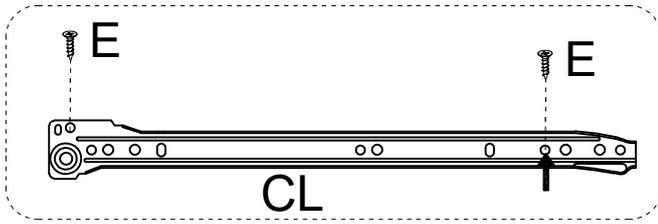


<p>(E)</p>  <p>3*12mm Screw x 5</p>	<p>(L)</p>  <p>30*15mm Non-Slip mat x 2</p>	<p>(CL)</p>  <p>300mm Runner x 1</p>	<p>(CR)</p>  <p>300mm Runner x 1</p>	<p>(16)x1</p> 
--	--	---	---	--

Assembly Instructions - Instructions demontage



step/Étape 2

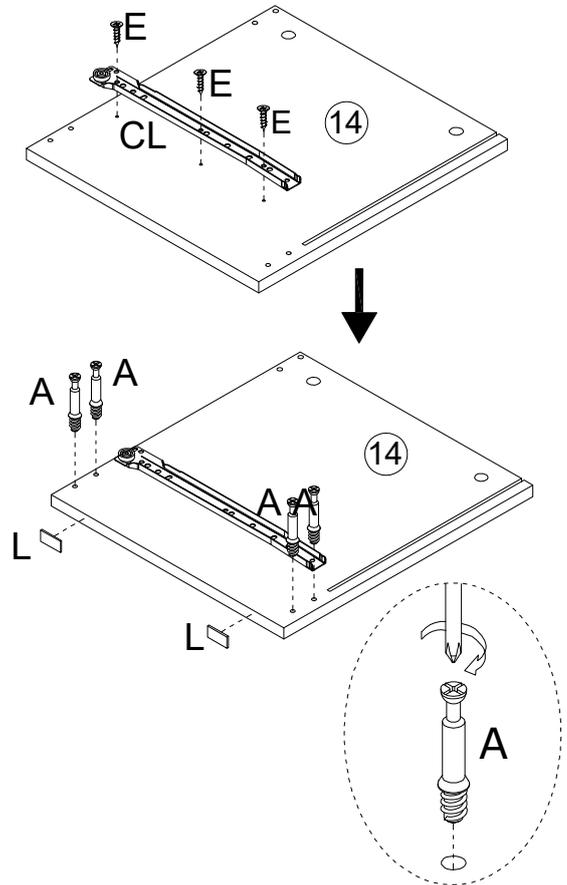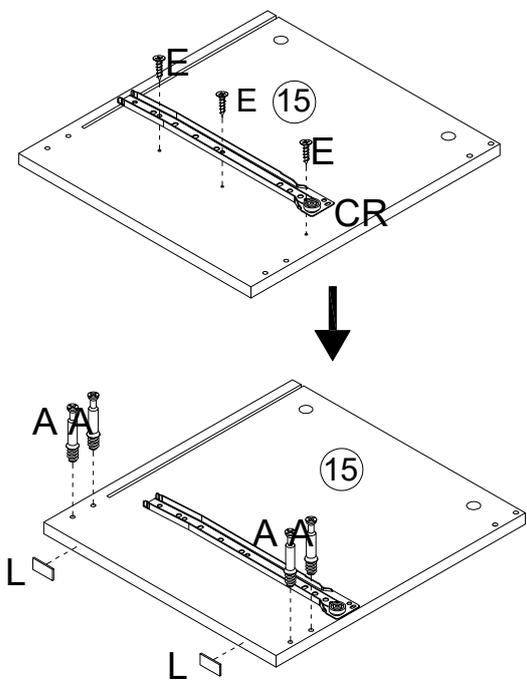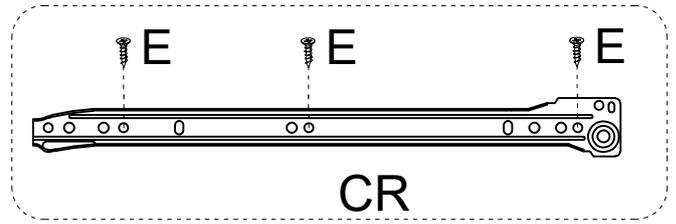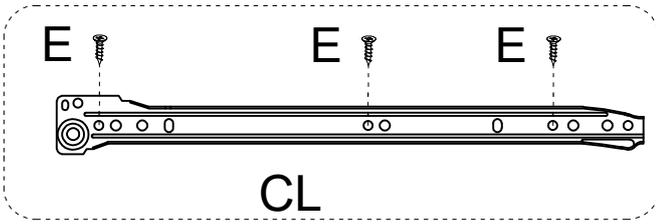



<p>(A)</p>  <p>Ø6*35mm Cam Bolt x 8</p>	<p>(E)</p>  <p>3*12mm Screw x 6</p>	<p>(L)</p>  <p>30*15mm Non-Slip mat x 4</p>	<p>(CL)</p>  <p>300mm Runner x 1</p>	<p>(CR)</p>  <p>300mm Runner x 1</p>	<p>(14)x1</p> 	<p>(15)x1</p> 
--	--	--	---	--	---	---

Assembly Instructions-Instructions montage

step/Étape 3

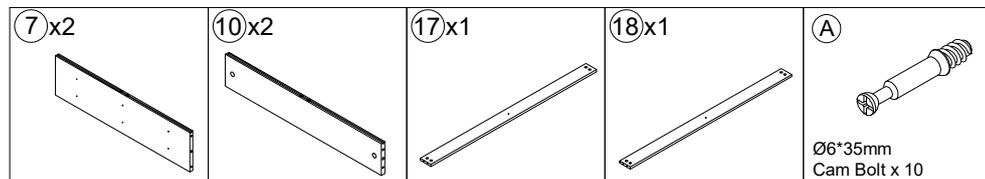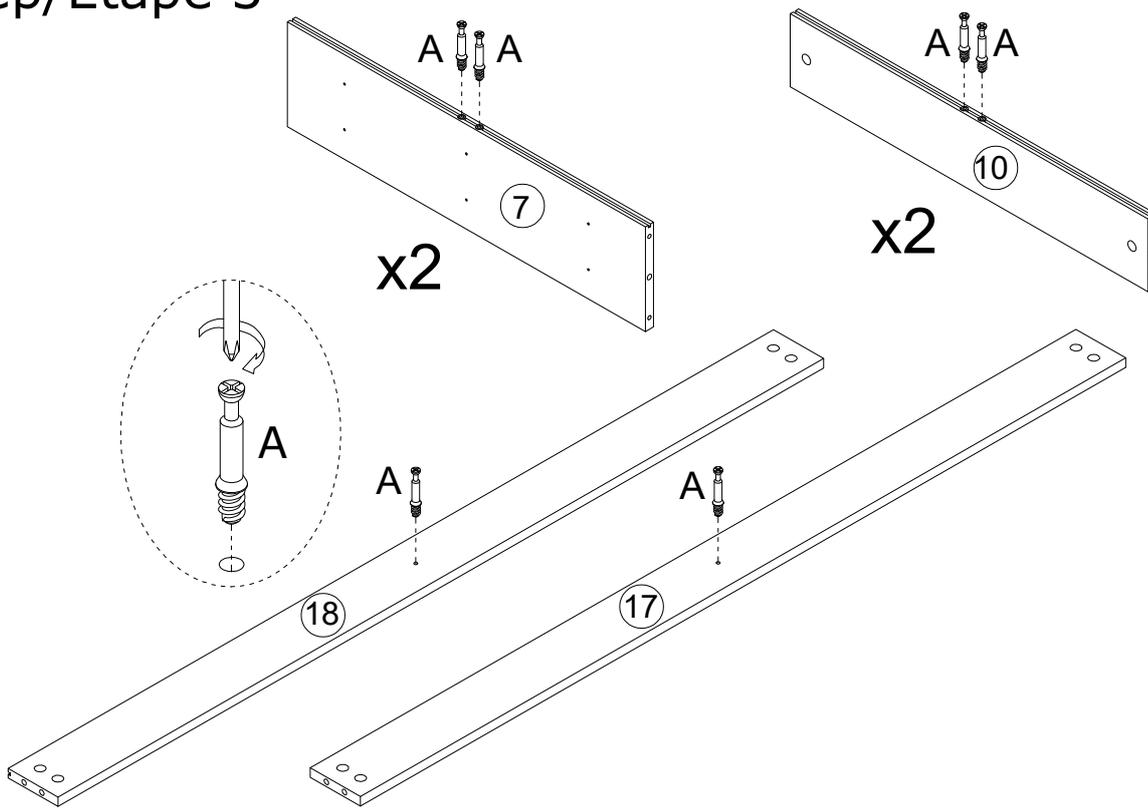


step/Étape 4

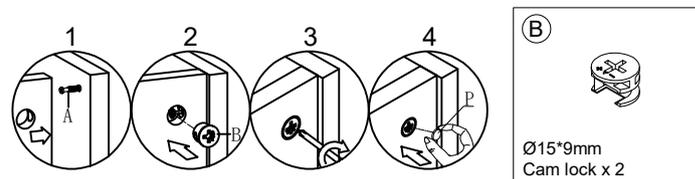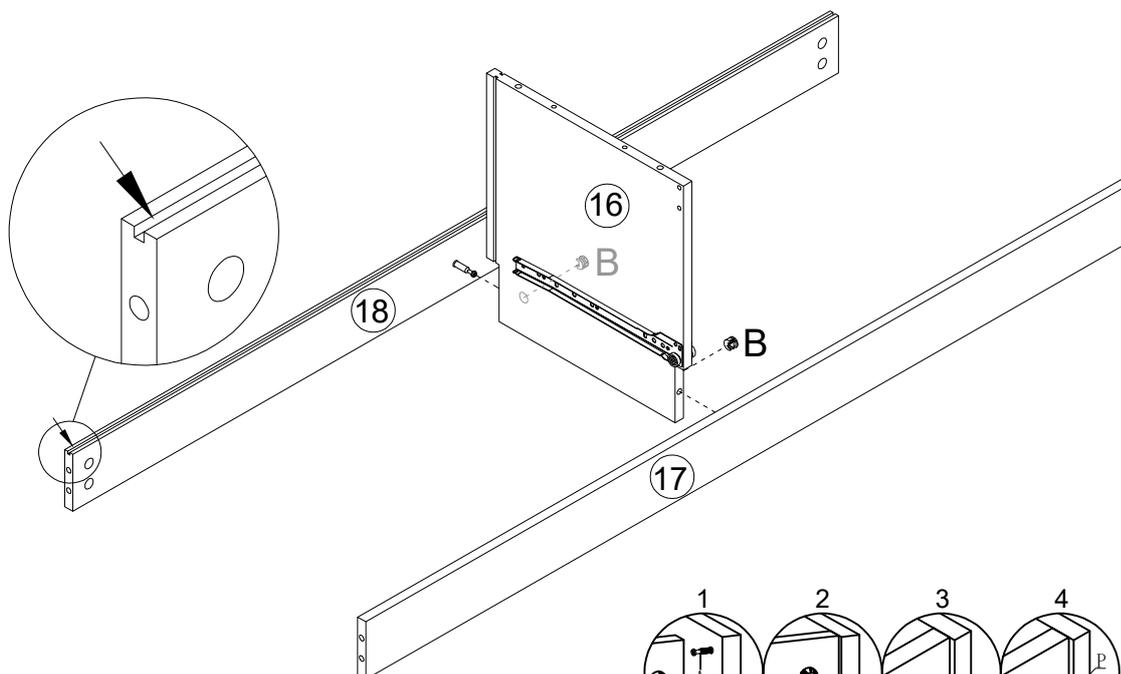


Assembly Instructions-Instructions montage

step/Étape 5

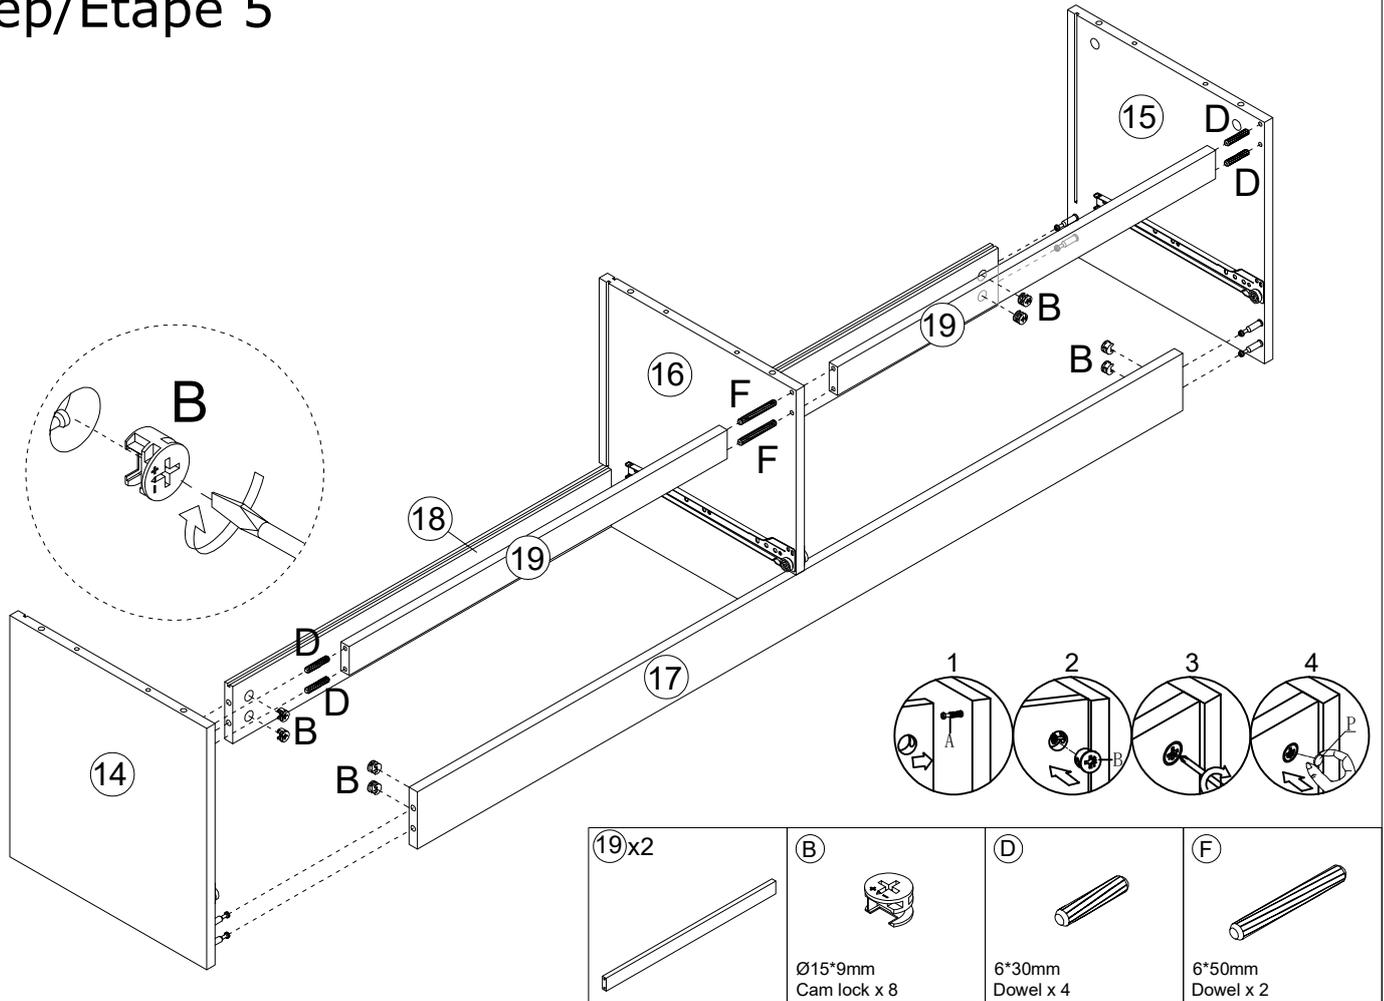


step/Étape 6

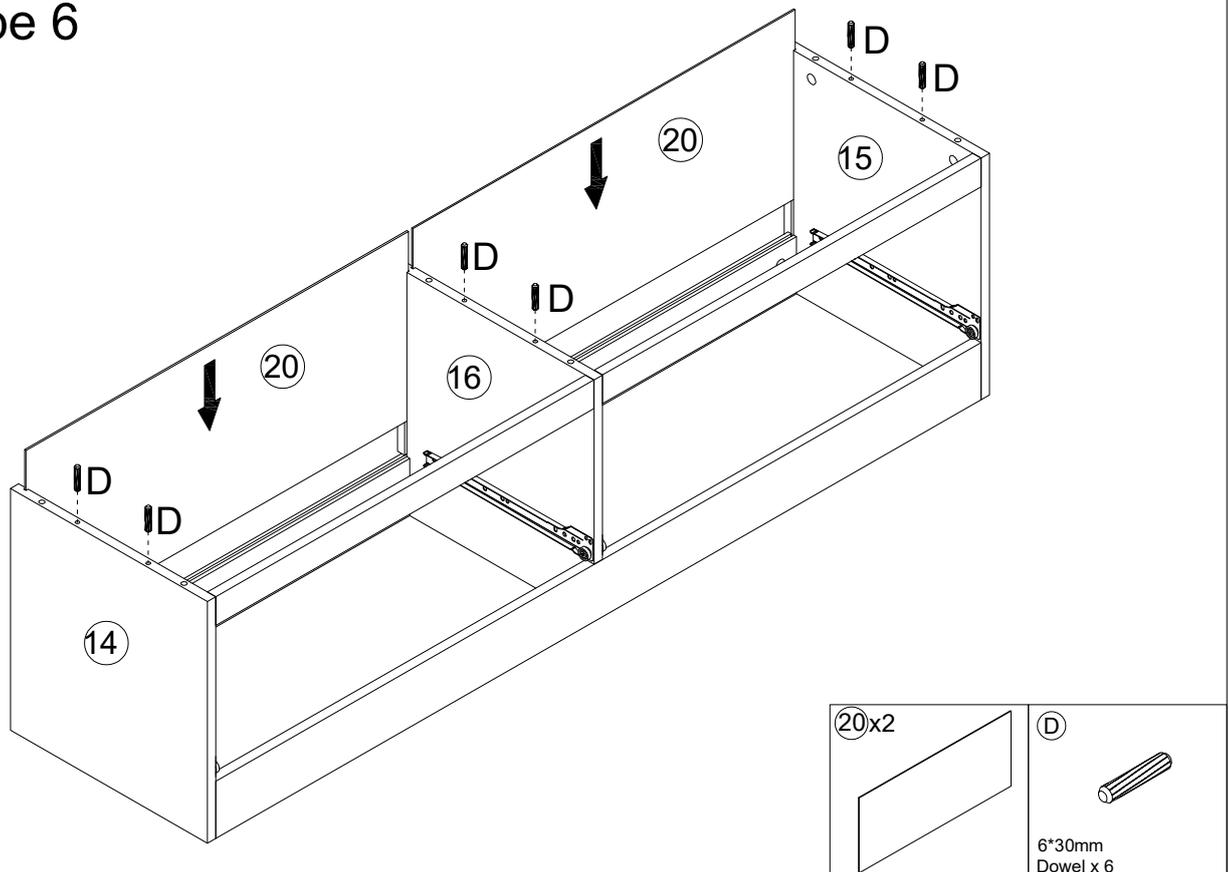


Assembly Instructions-Instructions demontage

step/Étape 7

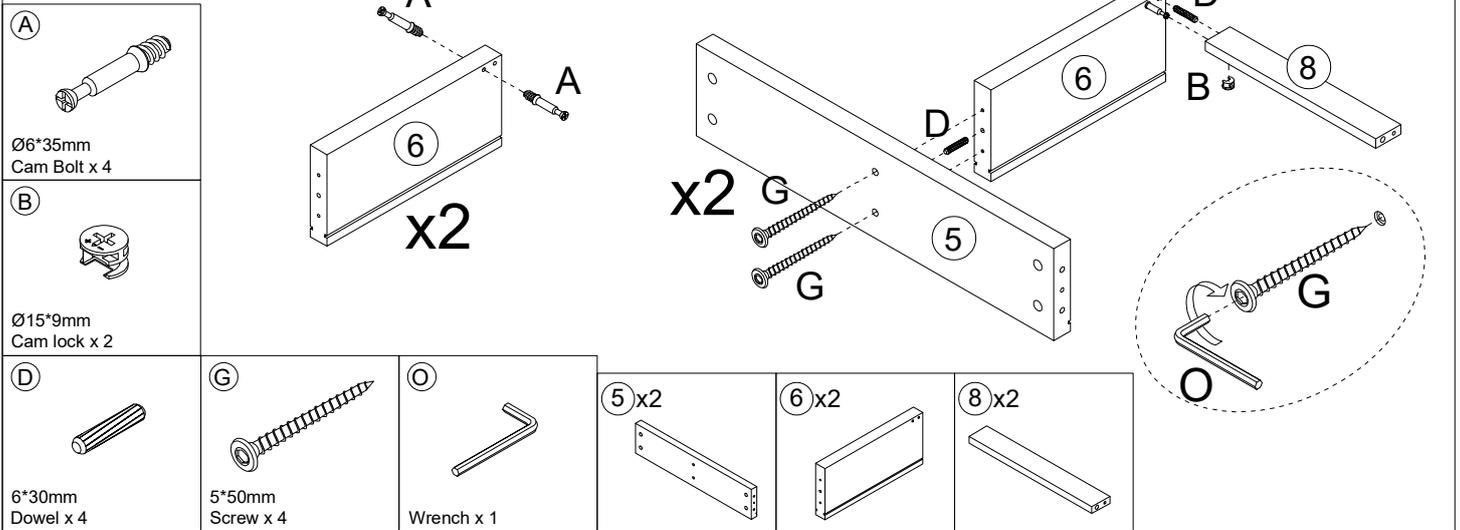


step/Étape 8

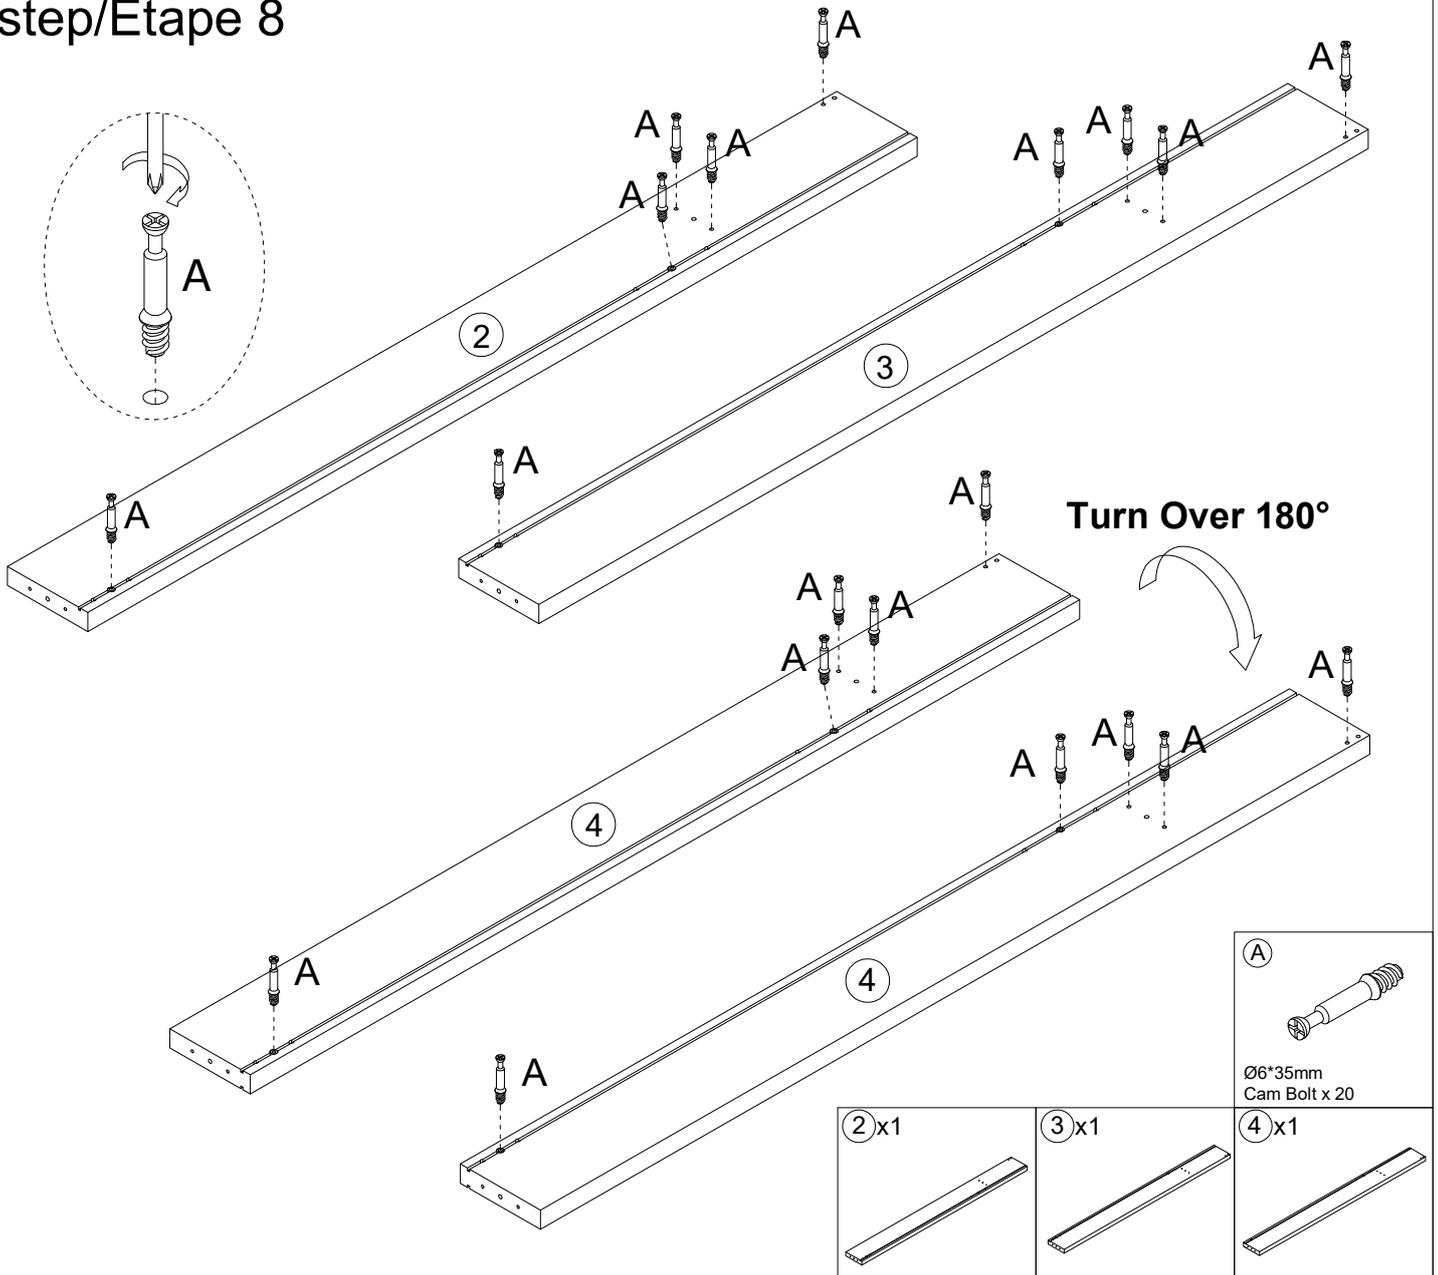

Assembly Instructions-Instructions montage


step/Étape 9

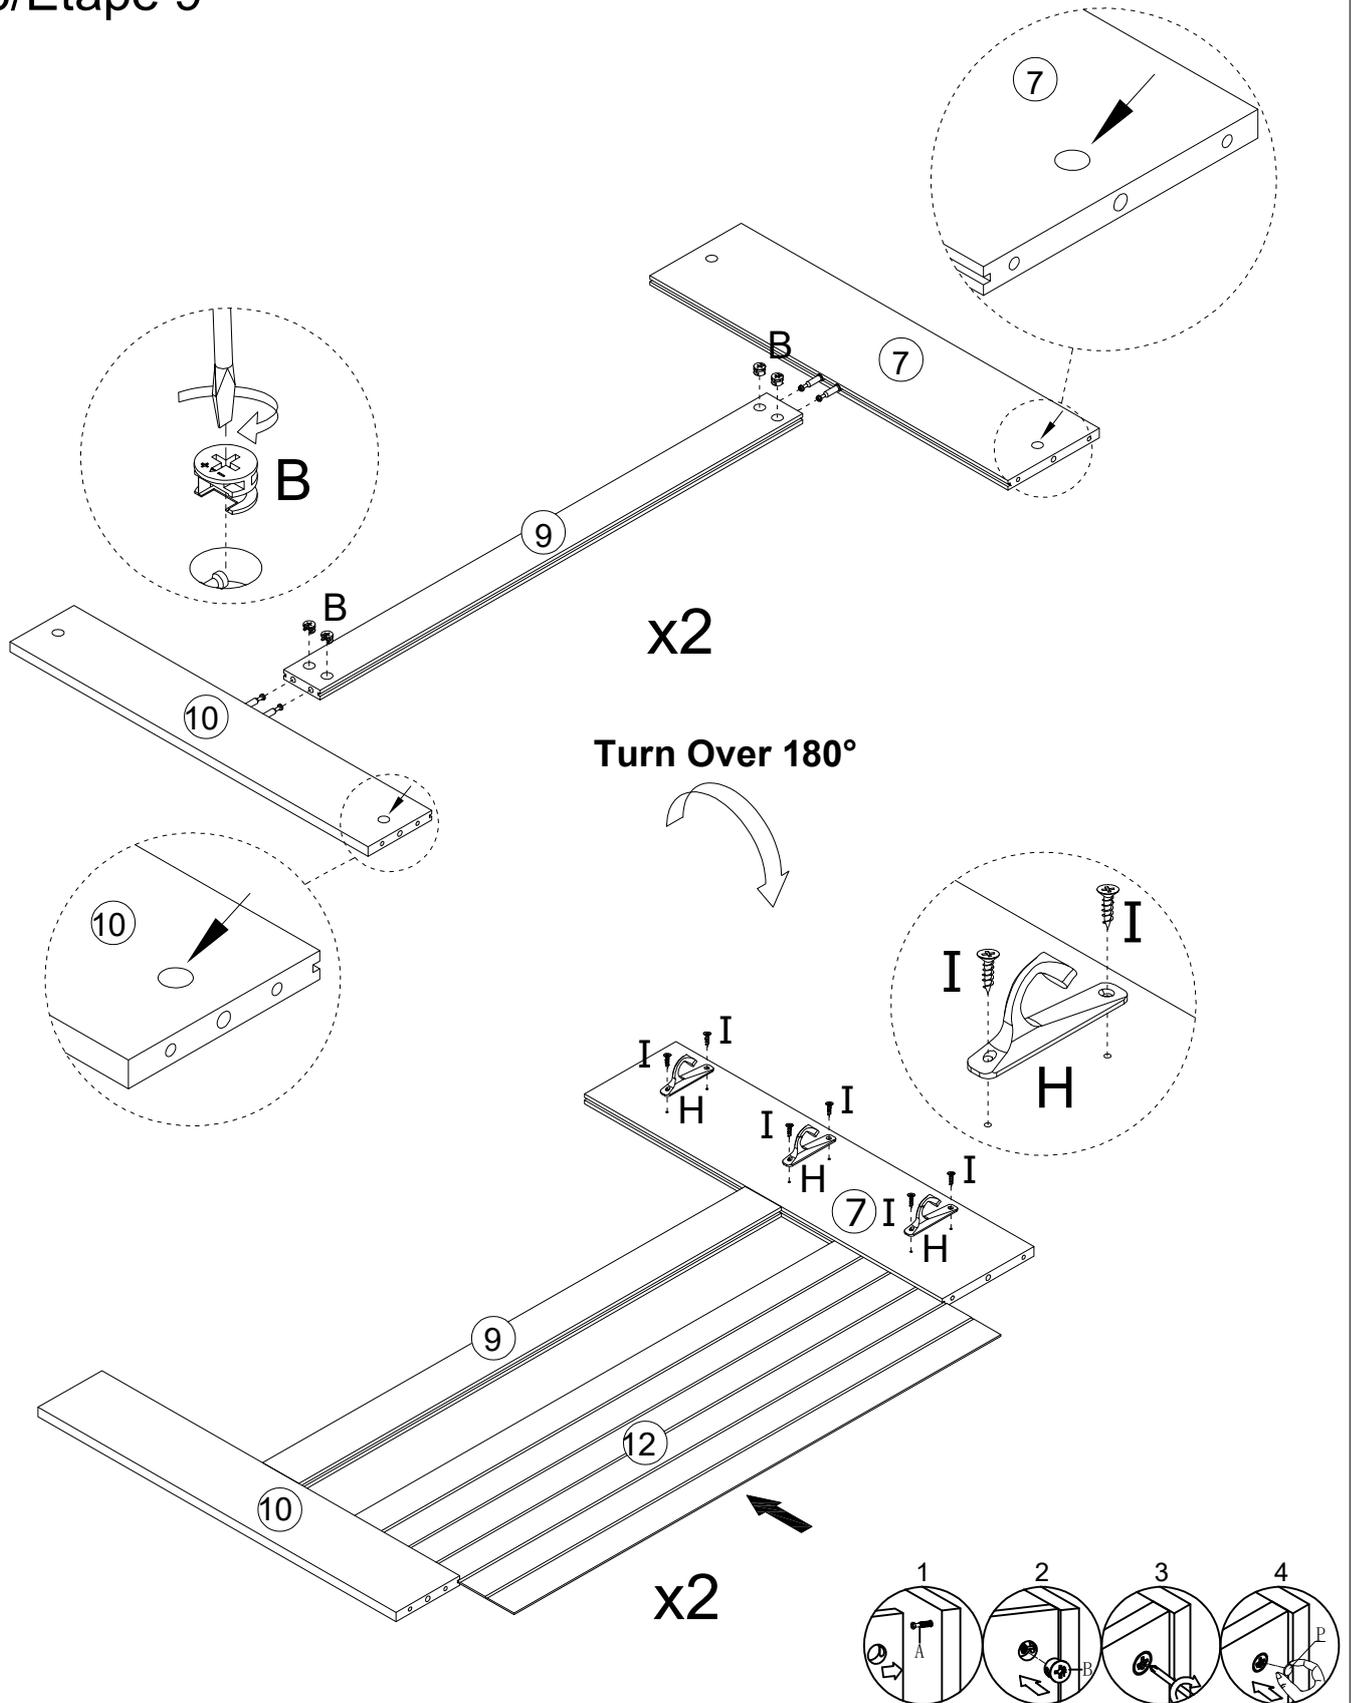


<p>9 x2</p>	<p>12 x2</p>	<p>B</p> <p>Ø15*9mm Cam lock x 8</p>	<p>H</p> <p>Clothes-Hook x 6</p>	<p>I</p> <p>3.5*12mm Screw x 12</p>
-------------	--------------	--	----------------------------------	---

Assembly Instructions-Instructions montage

step/Étape 10

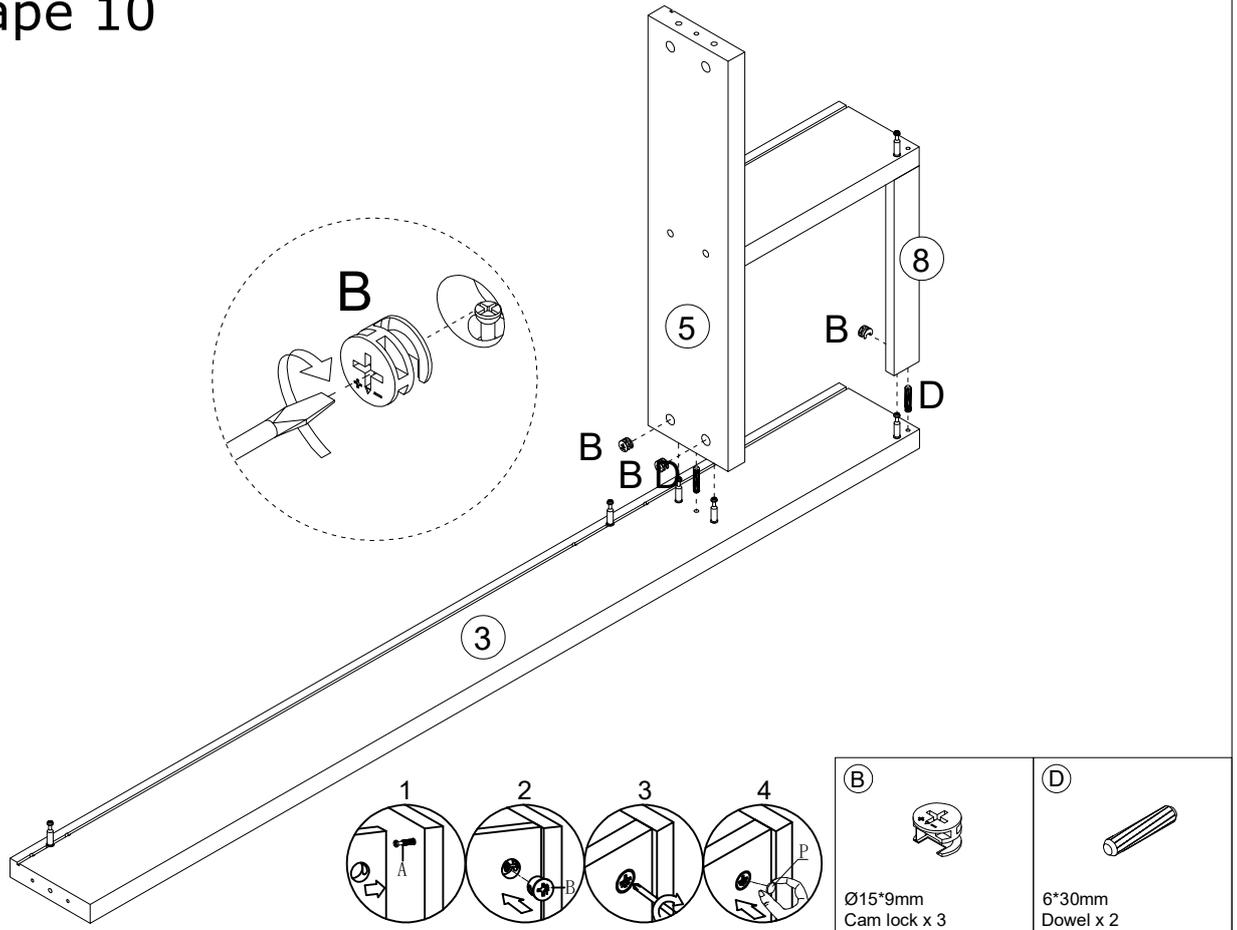




step/Étape 11

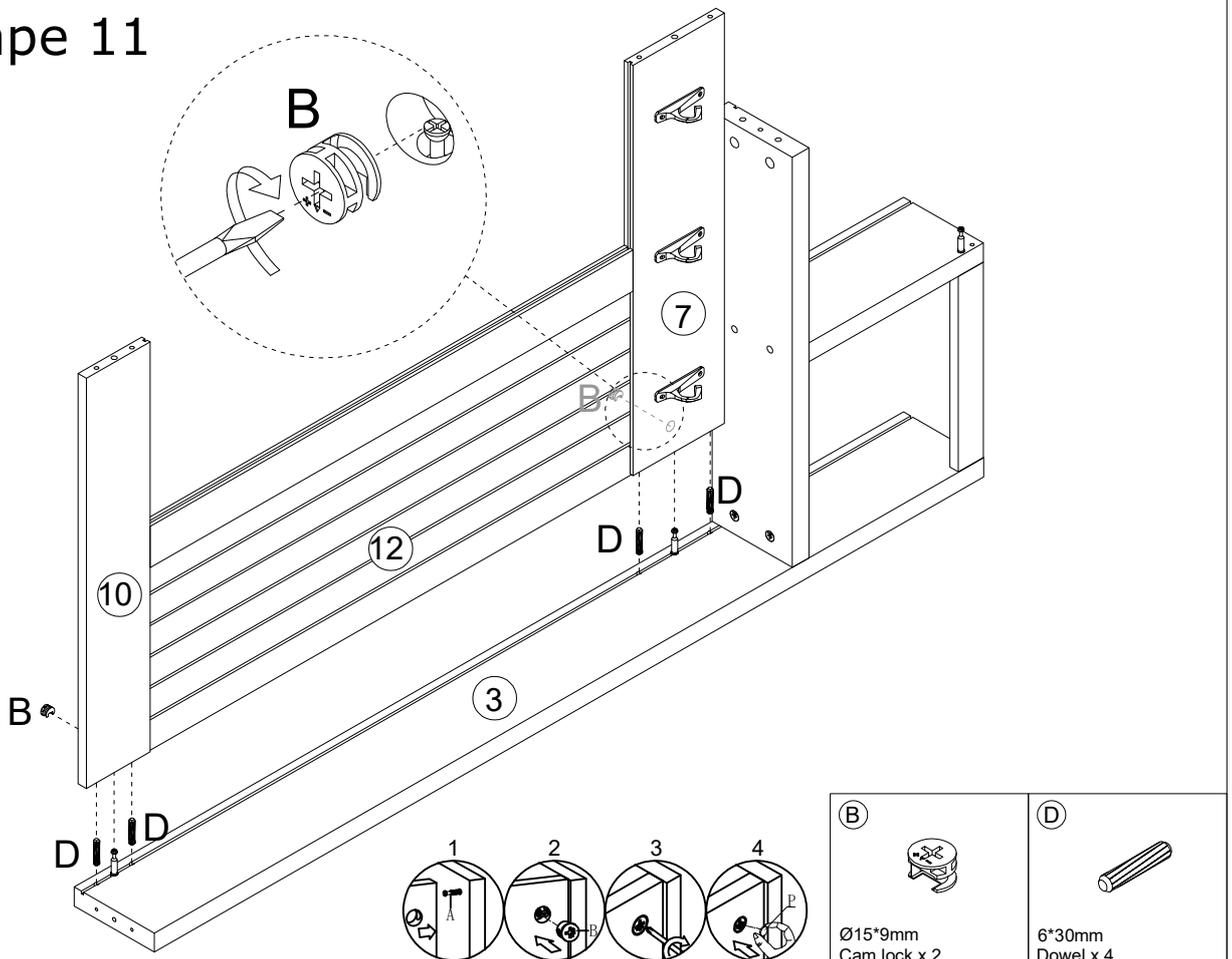


Assembly Instructions-Instructions montage

step/Étape 12

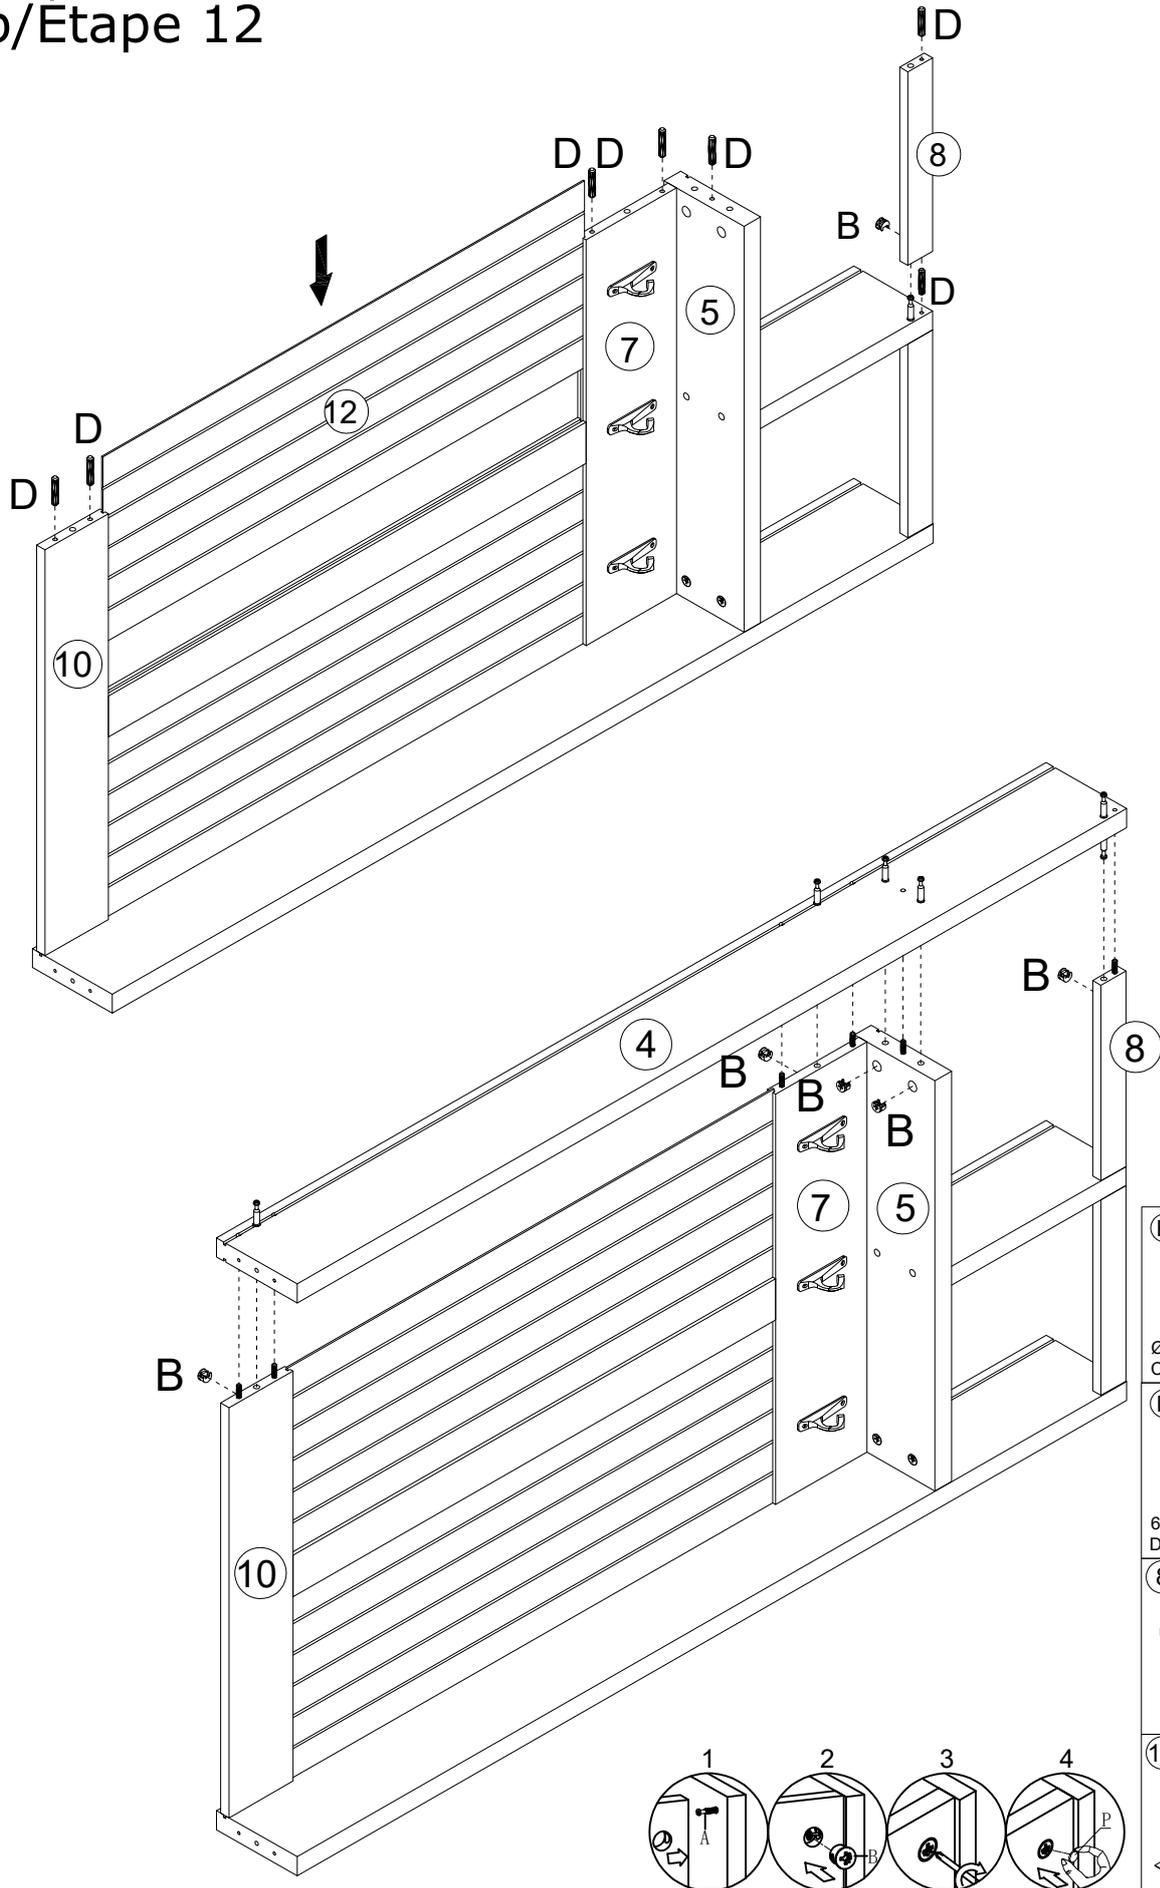


- B** 
Ø15*9mm
Cam lock x 6
- D** 
6*30mm
Dowel x 7
- 8**x1 
- 12**x1 

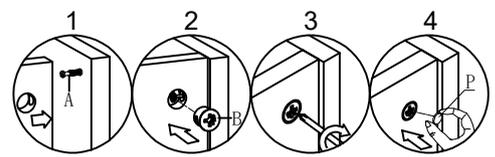

Assembly Instructions-Instructions montage

step/Étape 13

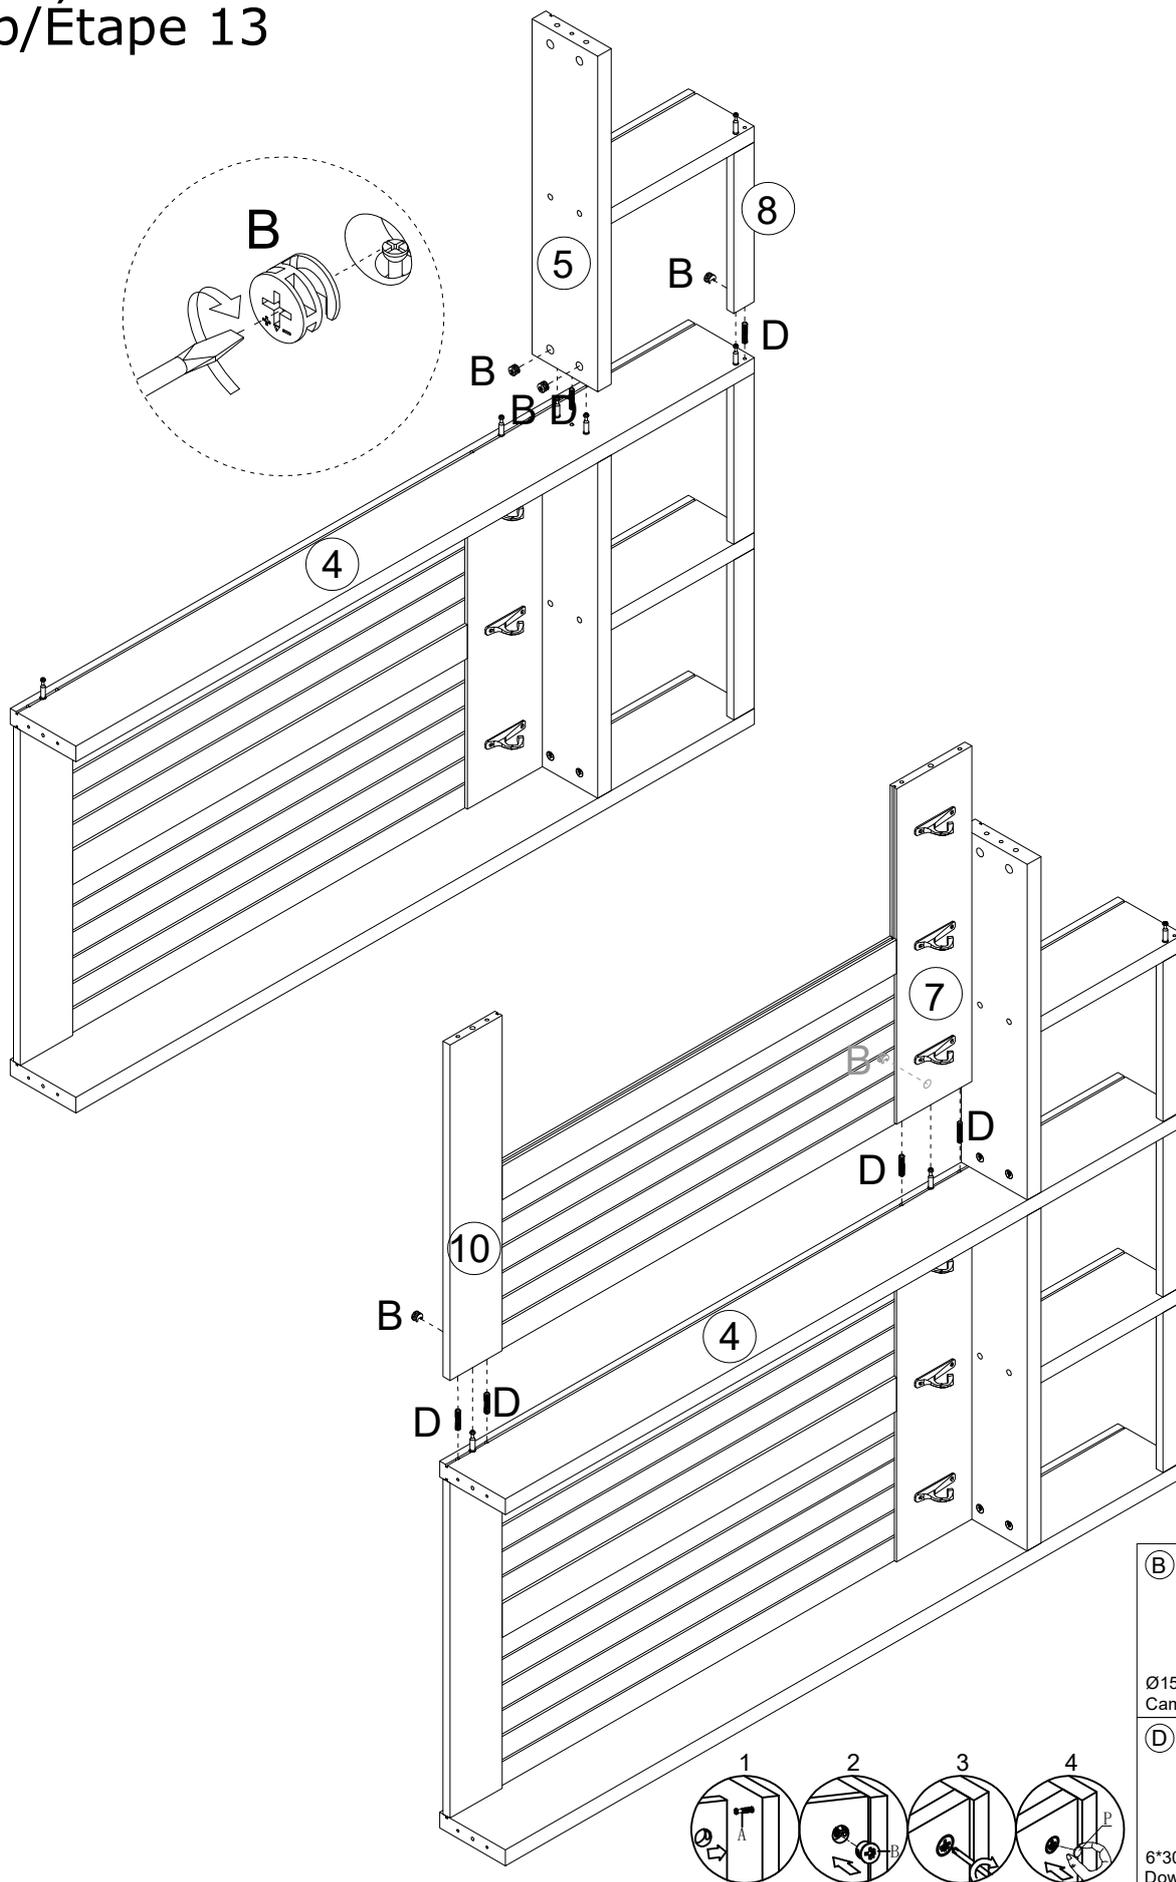

(B)



Ø15*9mm
Cam lock x 5


(D)



6*30mm
Dowel x 6



Assembly Instructions-Instructions montage

step/Étape 15


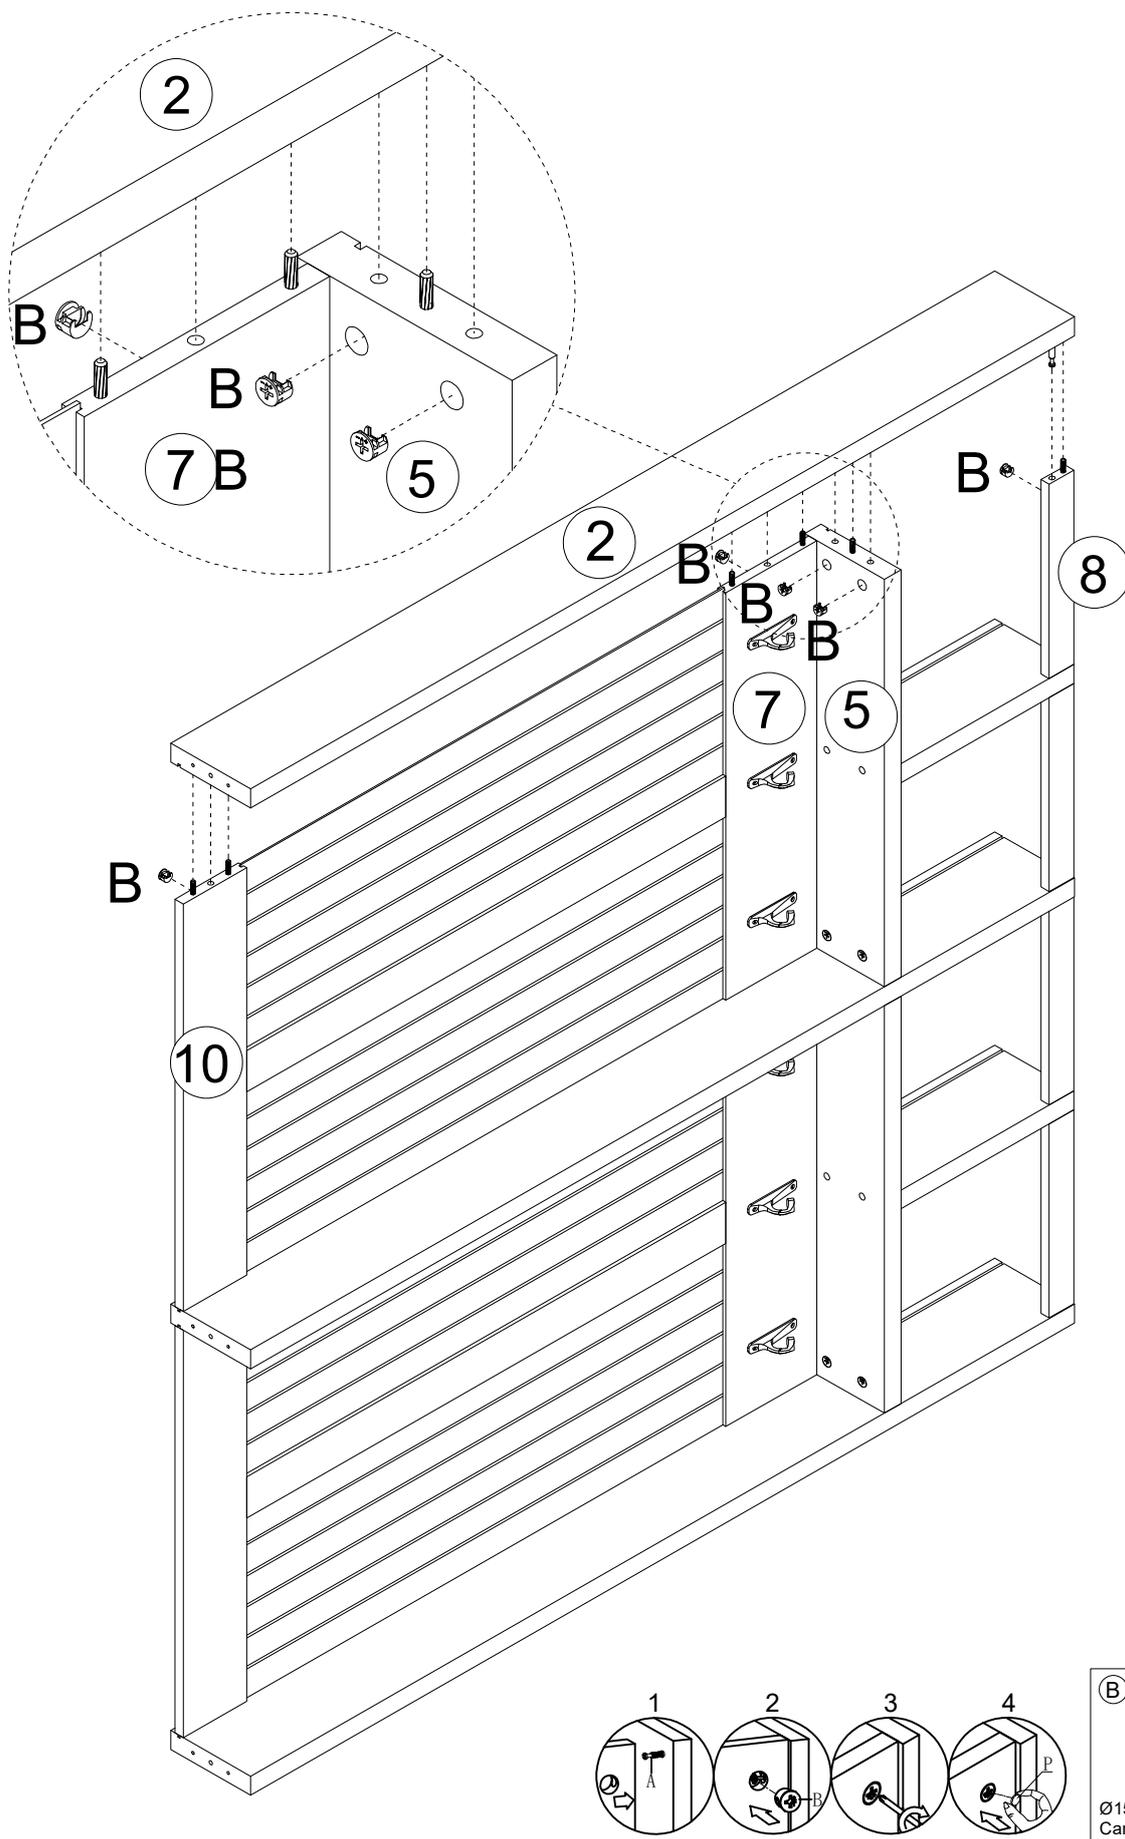


Assembly Instructions-Instructions montage

step/Étape 16

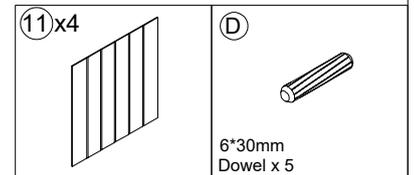
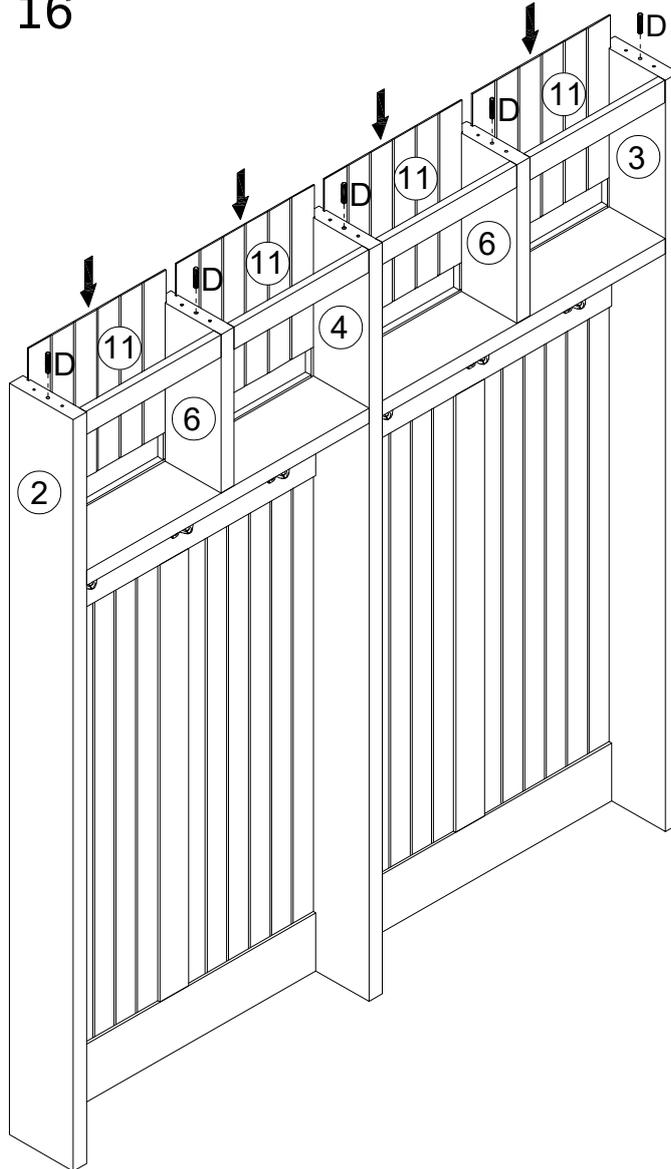


step/Étape 17

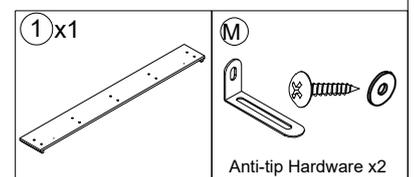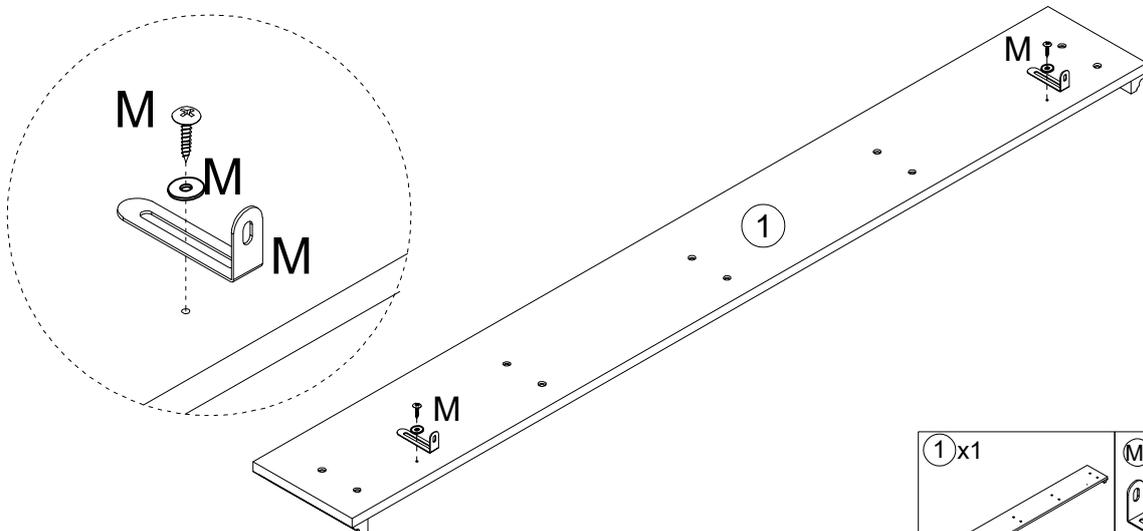


Assembly Instructions- Instructions demontage





step/Étape 18

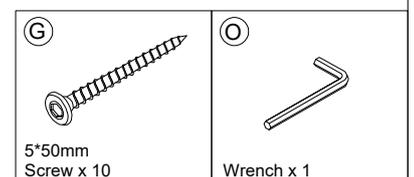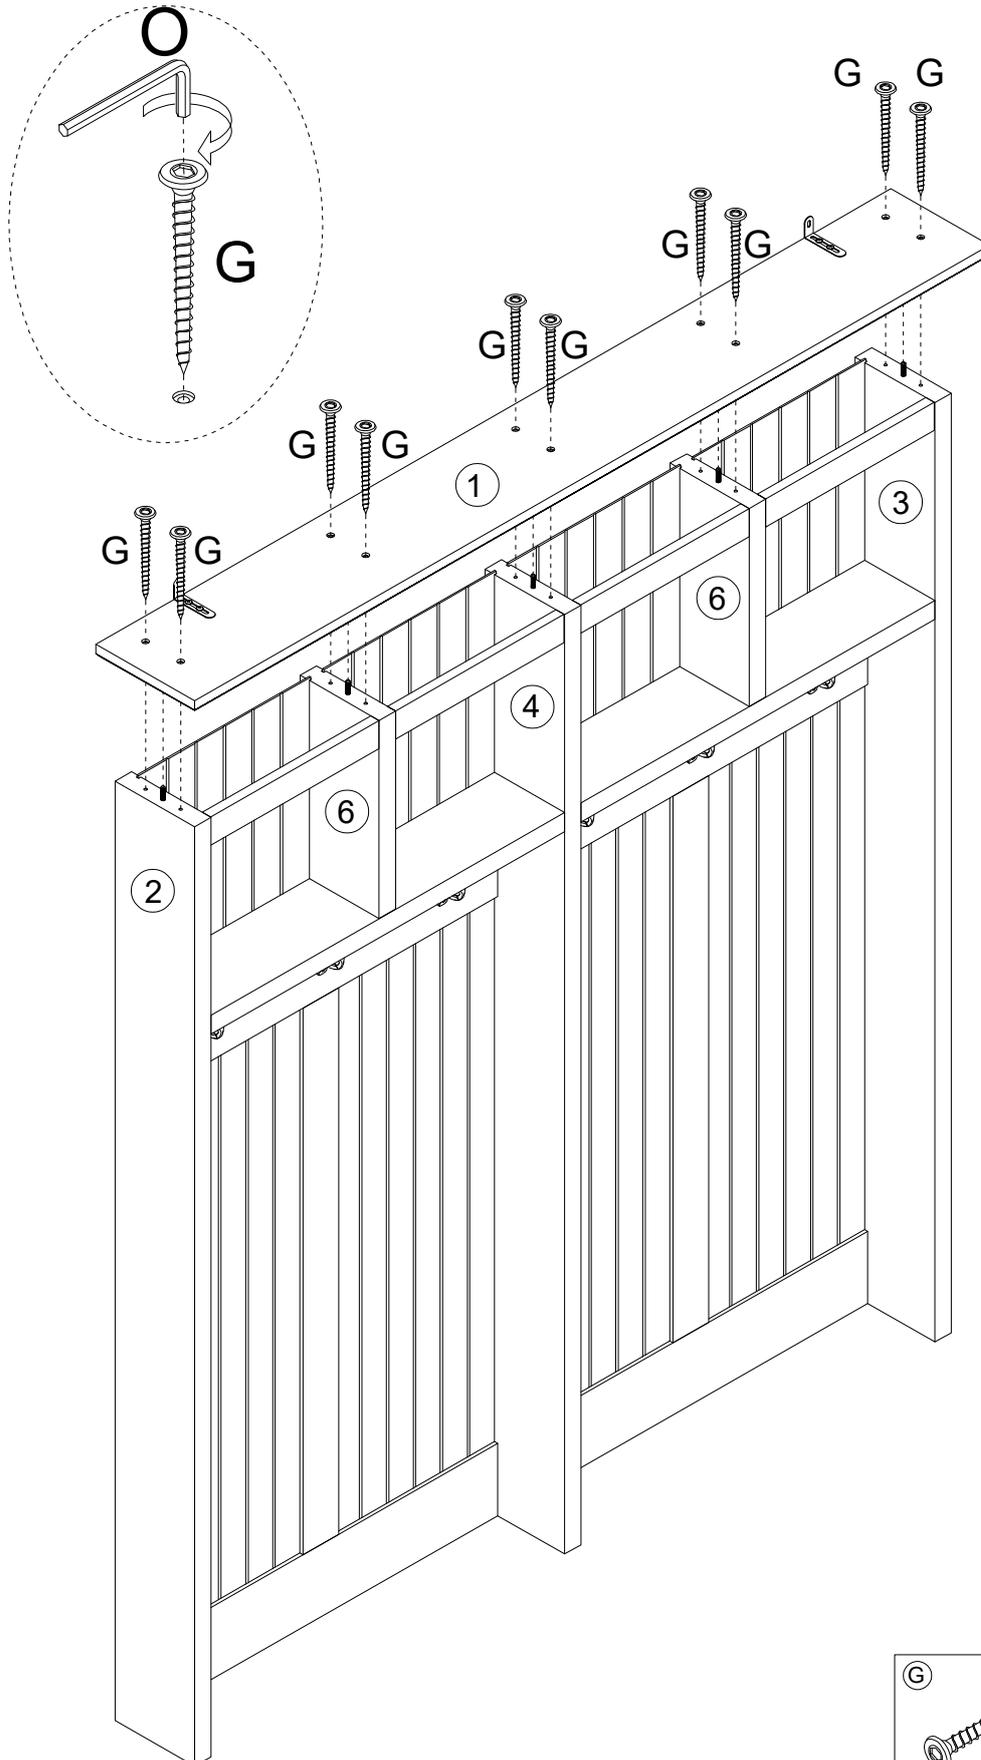

Assembly Instructions-Instructions de montage





step/Étape 19

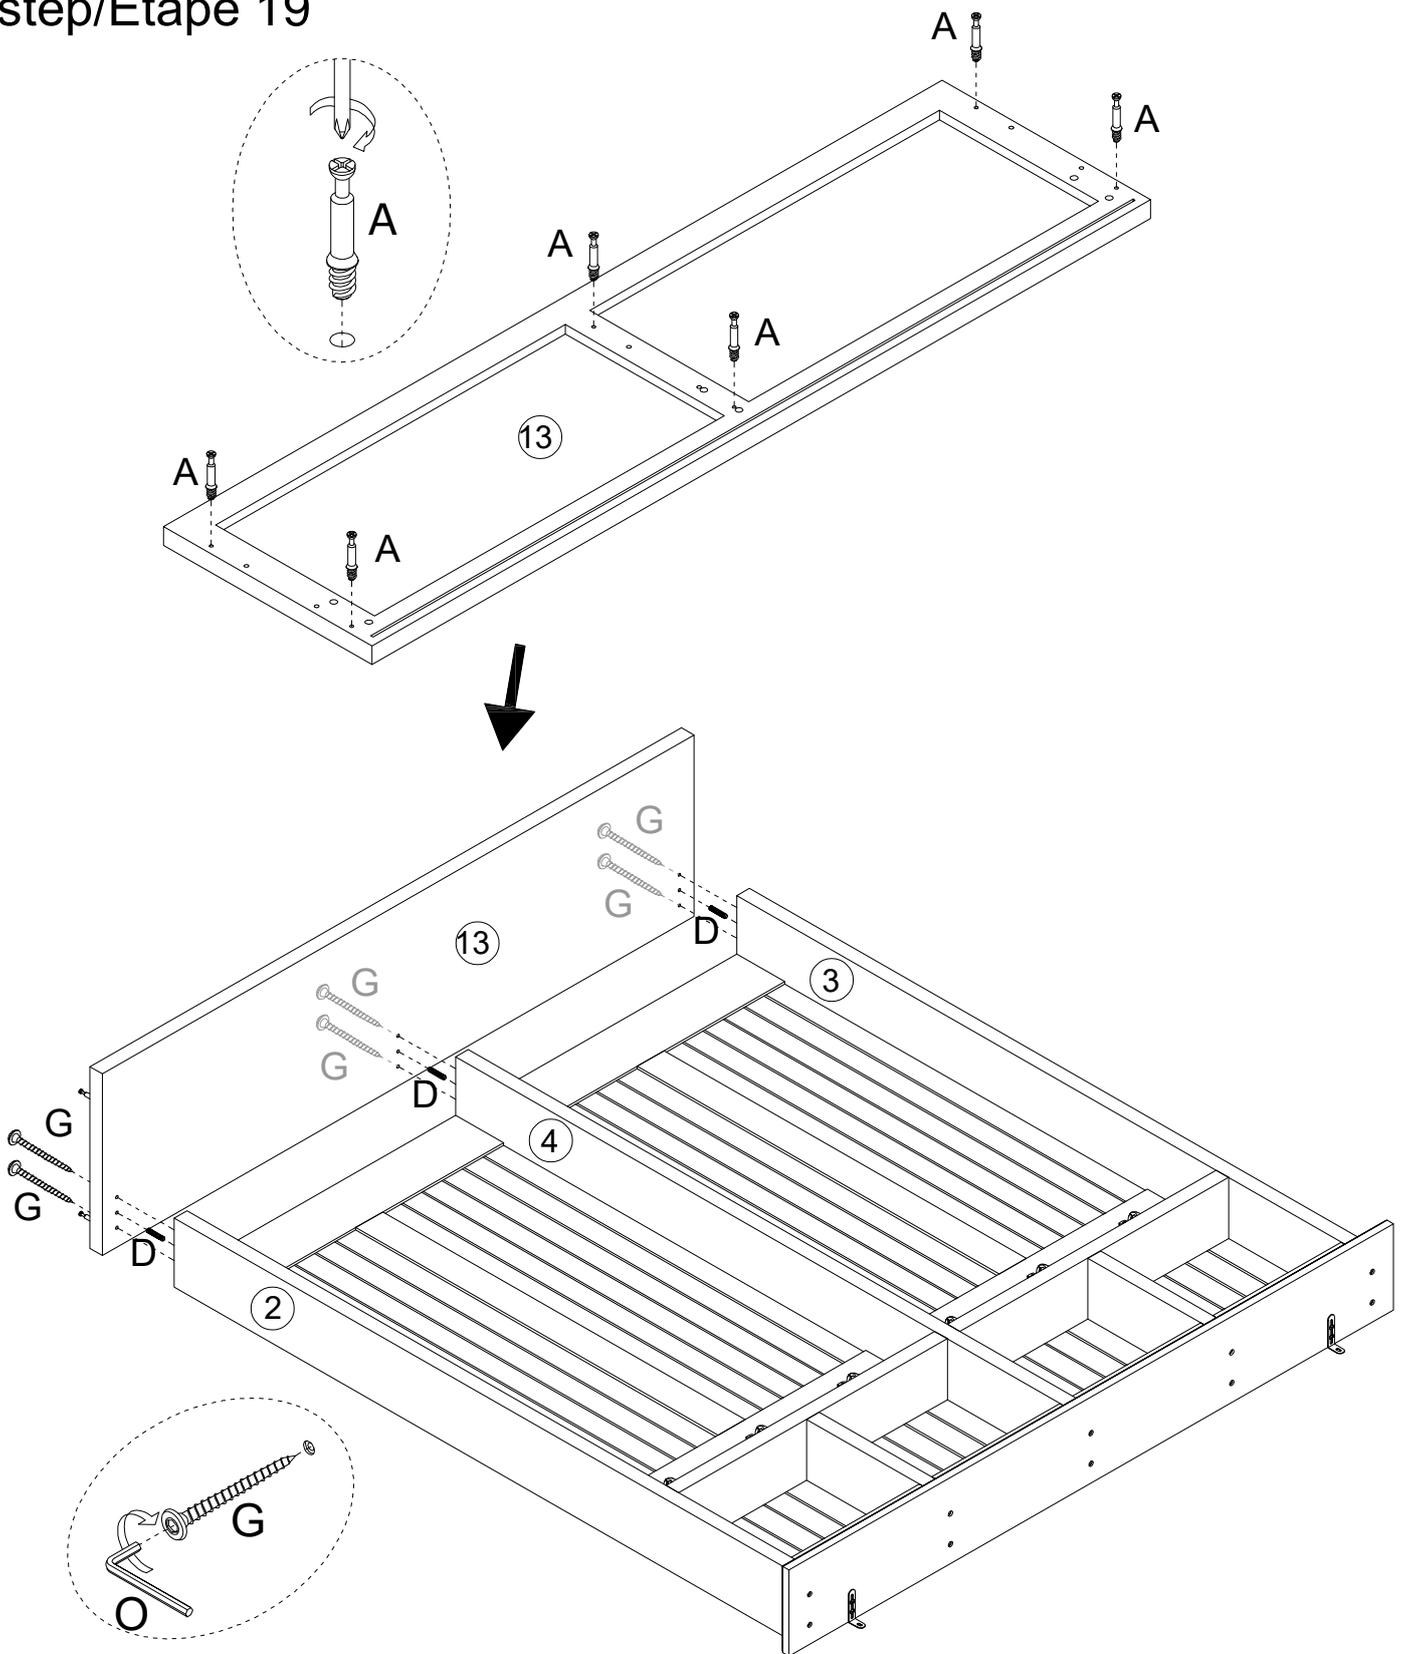

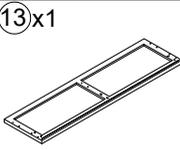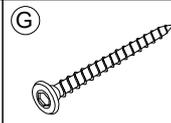 13x1	 A Ø6*35mm Cam Bolt x 6	 D 6*30mm Dowel x 3	 G 5*50mm Screw x 6	 O Wrench x 1
---	---	--	---	--


Assembly Instructions-Instructions montage

step/Étape 20

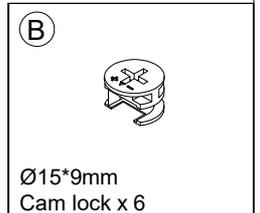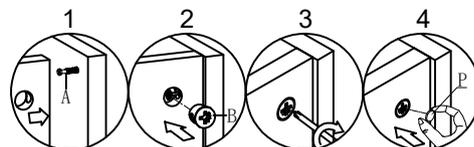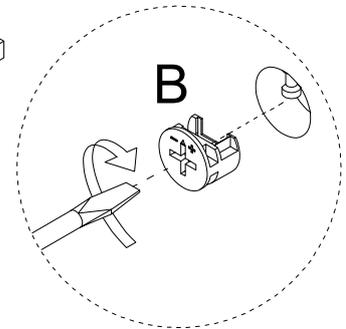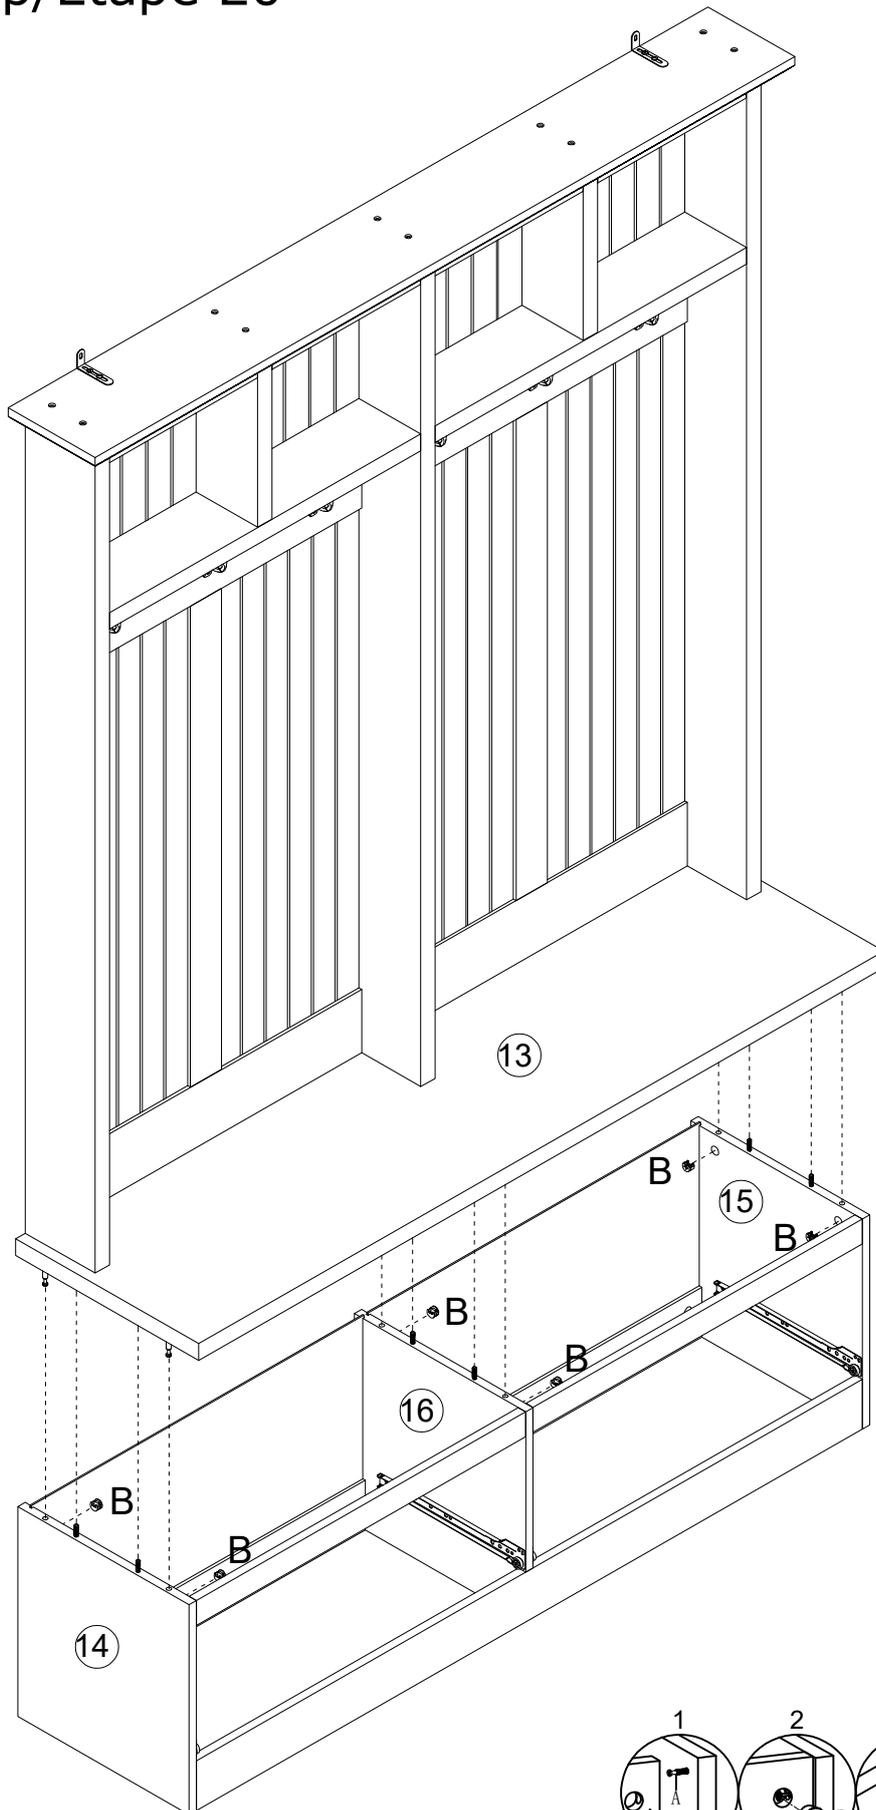

Assembly Instructions-Instructions de montage






step/Étape 21

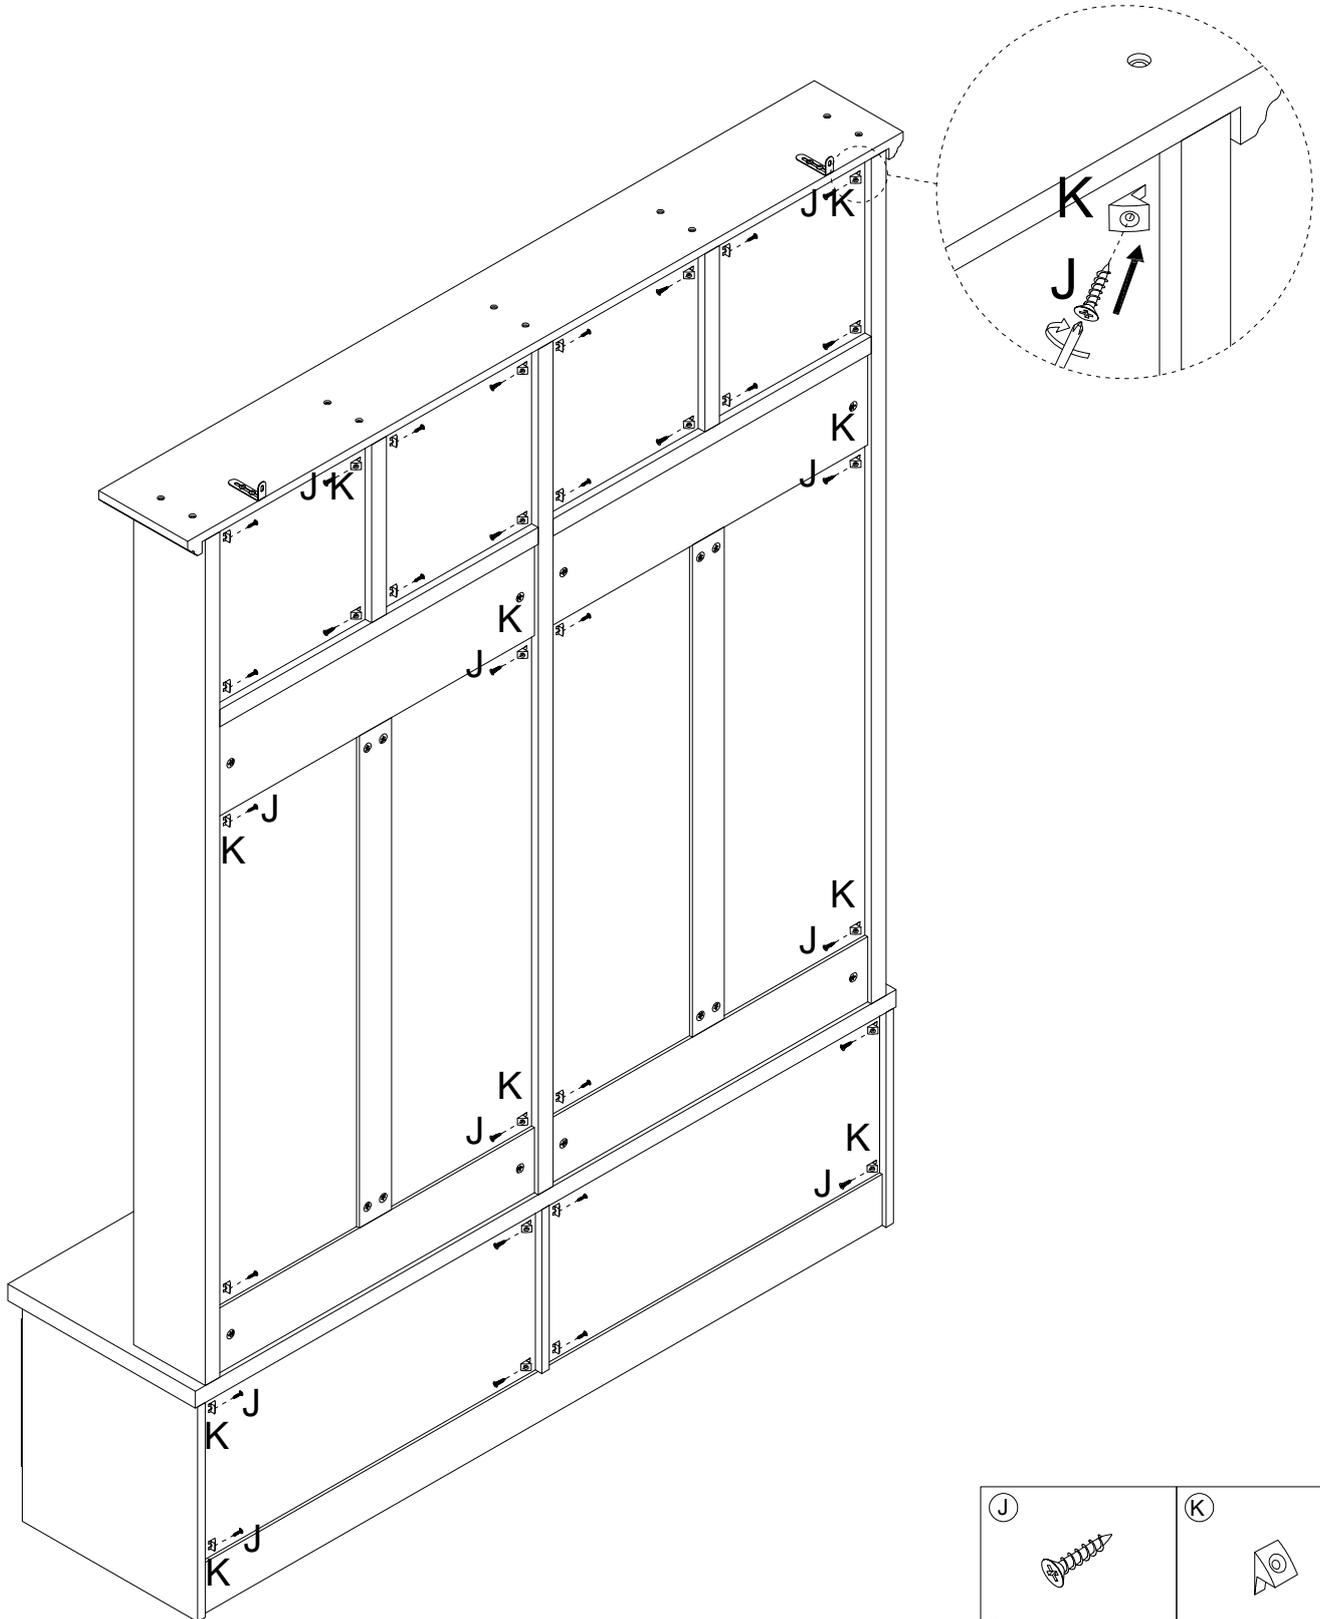

<p>(J)</p>  <p>3*14mm Screw x 32</p>	<p>(K)</p>  <p>Plastic Nail x 32</p>
---	---



Assembly Instructions-Instructions de montage

step/Étape 22

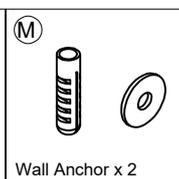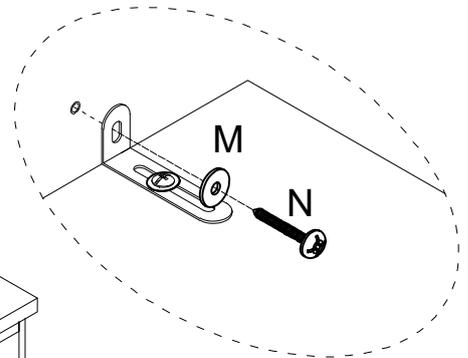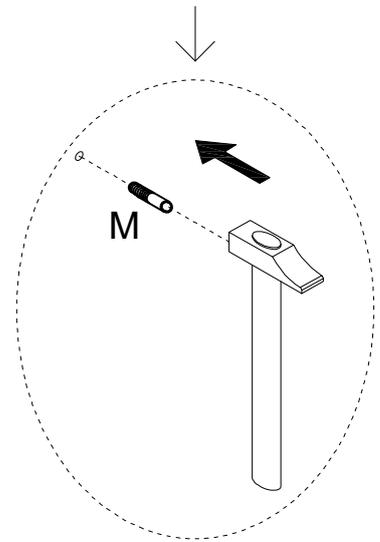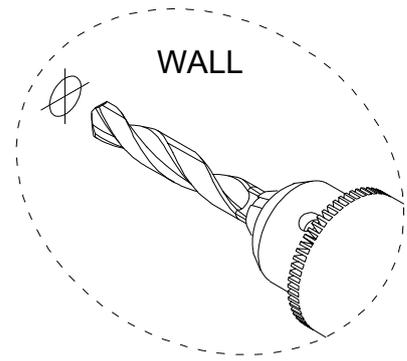
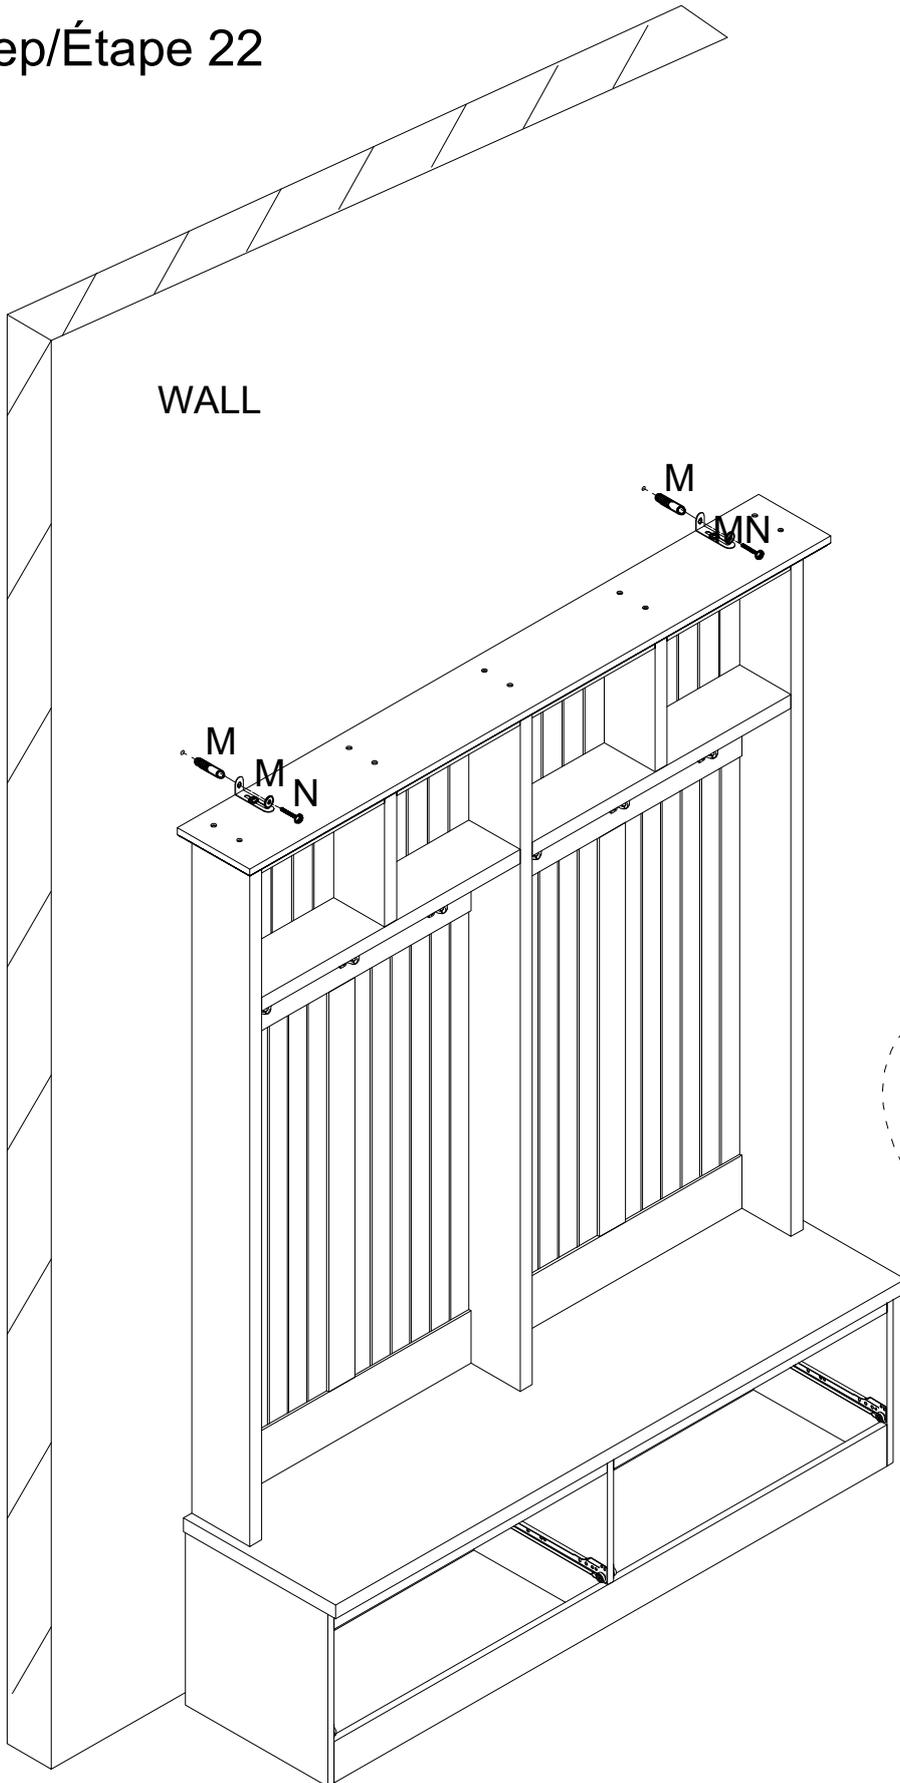


Assembly Instructions-Instructions montage

step/Étape 23

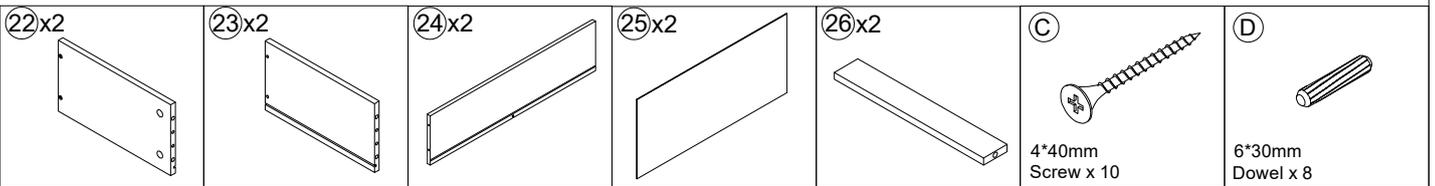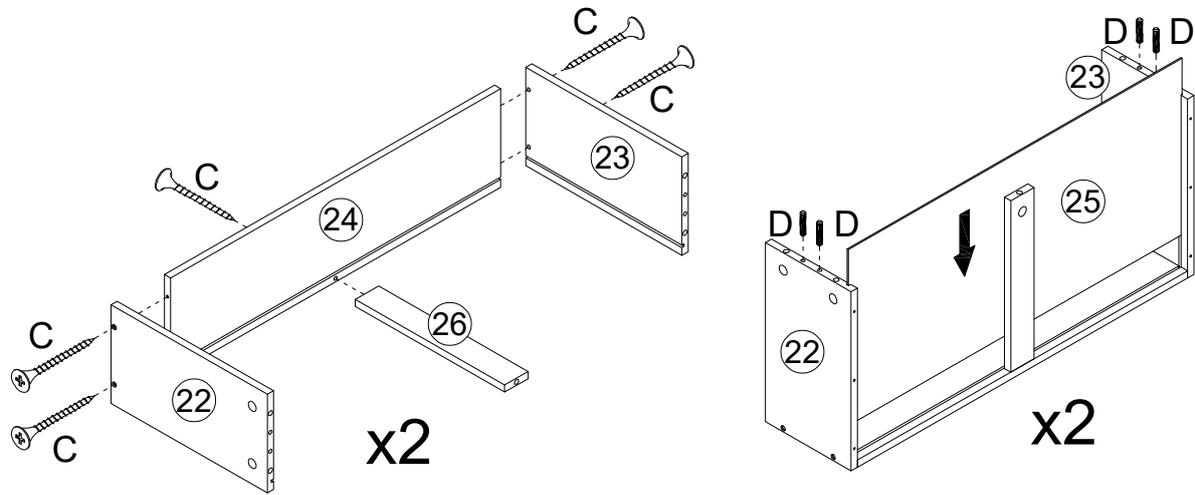


step/Étape 24

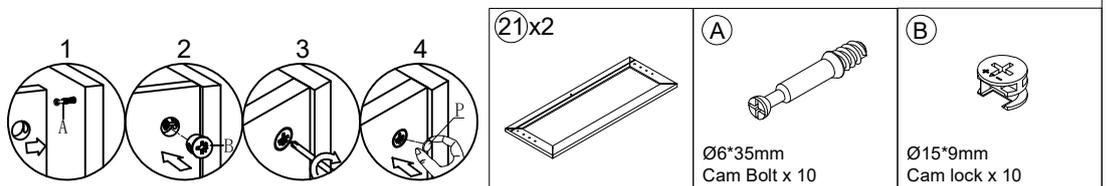
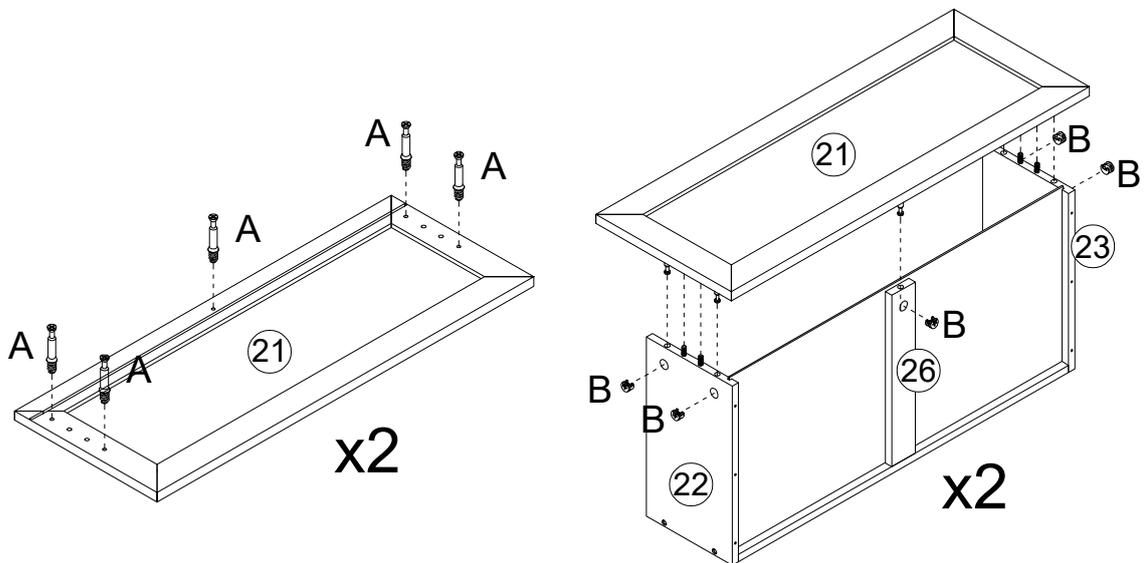


Assembly Instructions-Instructions montage

step/Étape 25



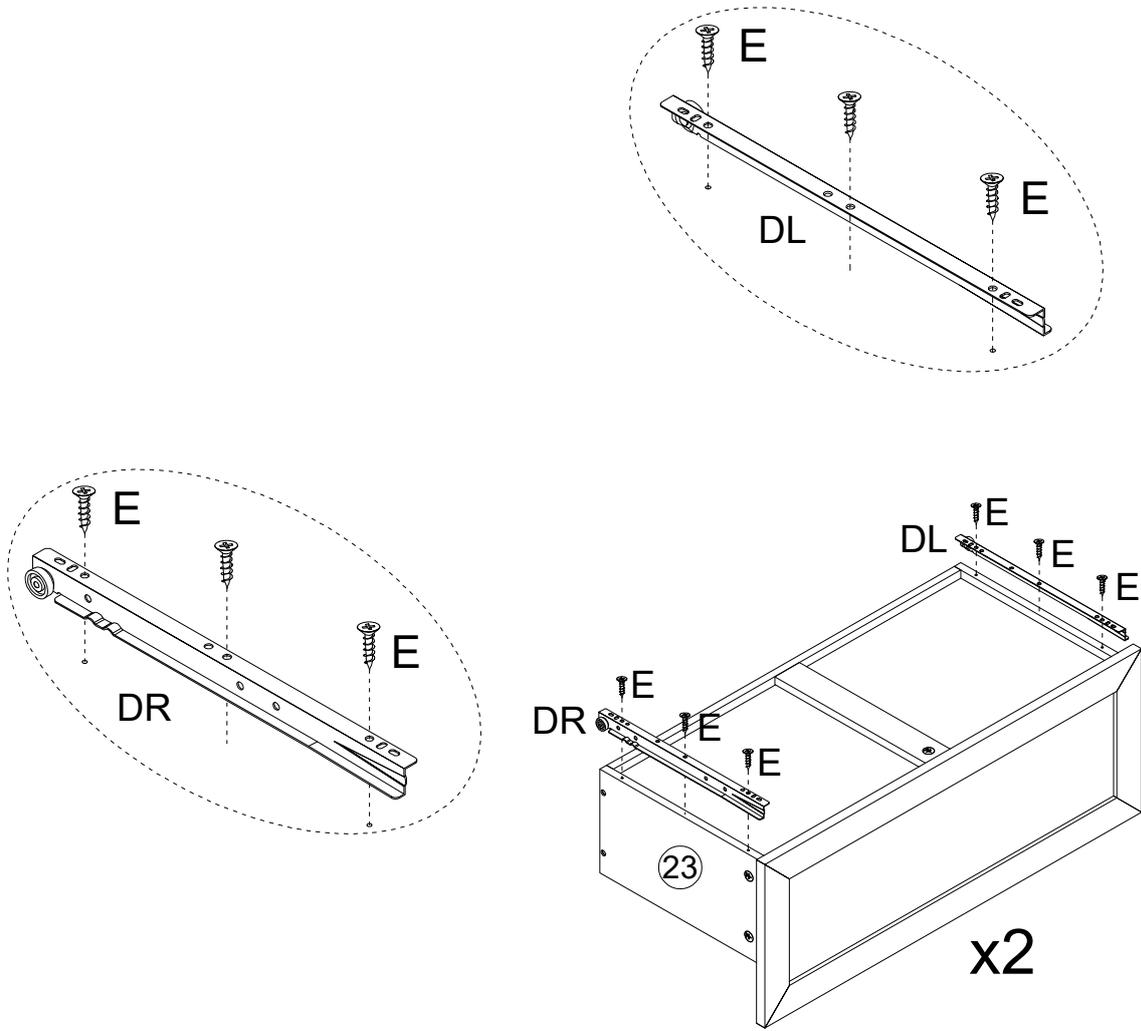


- (E)**

3*12mm
Screw x 12
- (DL)**

300mm
Runner x 2
- (DR)**

300mm
Runner x 2

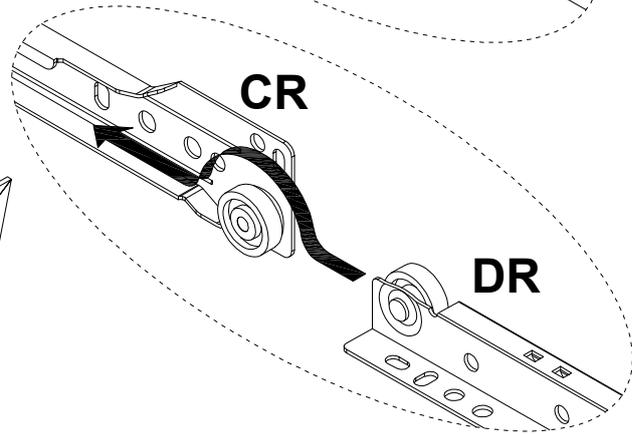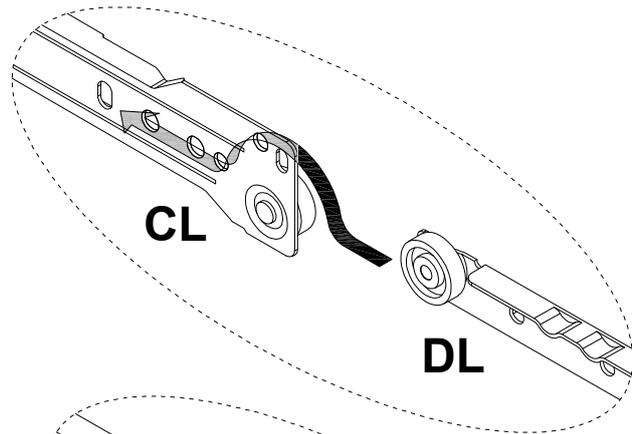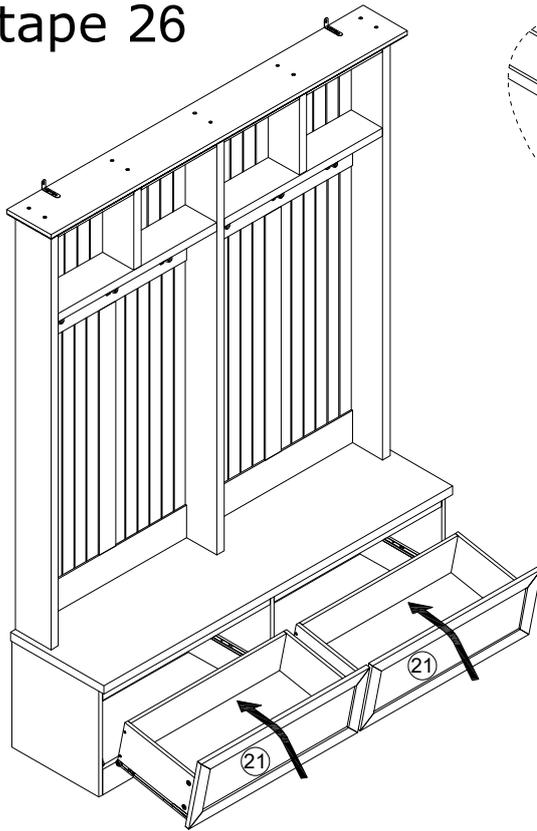Assembly Instructions-Instructions montage

step/Étape 26



FINISH-FINITION

