

Assembly Instruction

Assembly Instructions -Please keep for future reference

N707P417187
N707P417188



Dimensions


Width-30inch

Depth-15.7inch

Height-71.1inch

 WARNING	
	This product is NOT a Clothing Storage Unit (CSU).
	DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Assembly Instruction

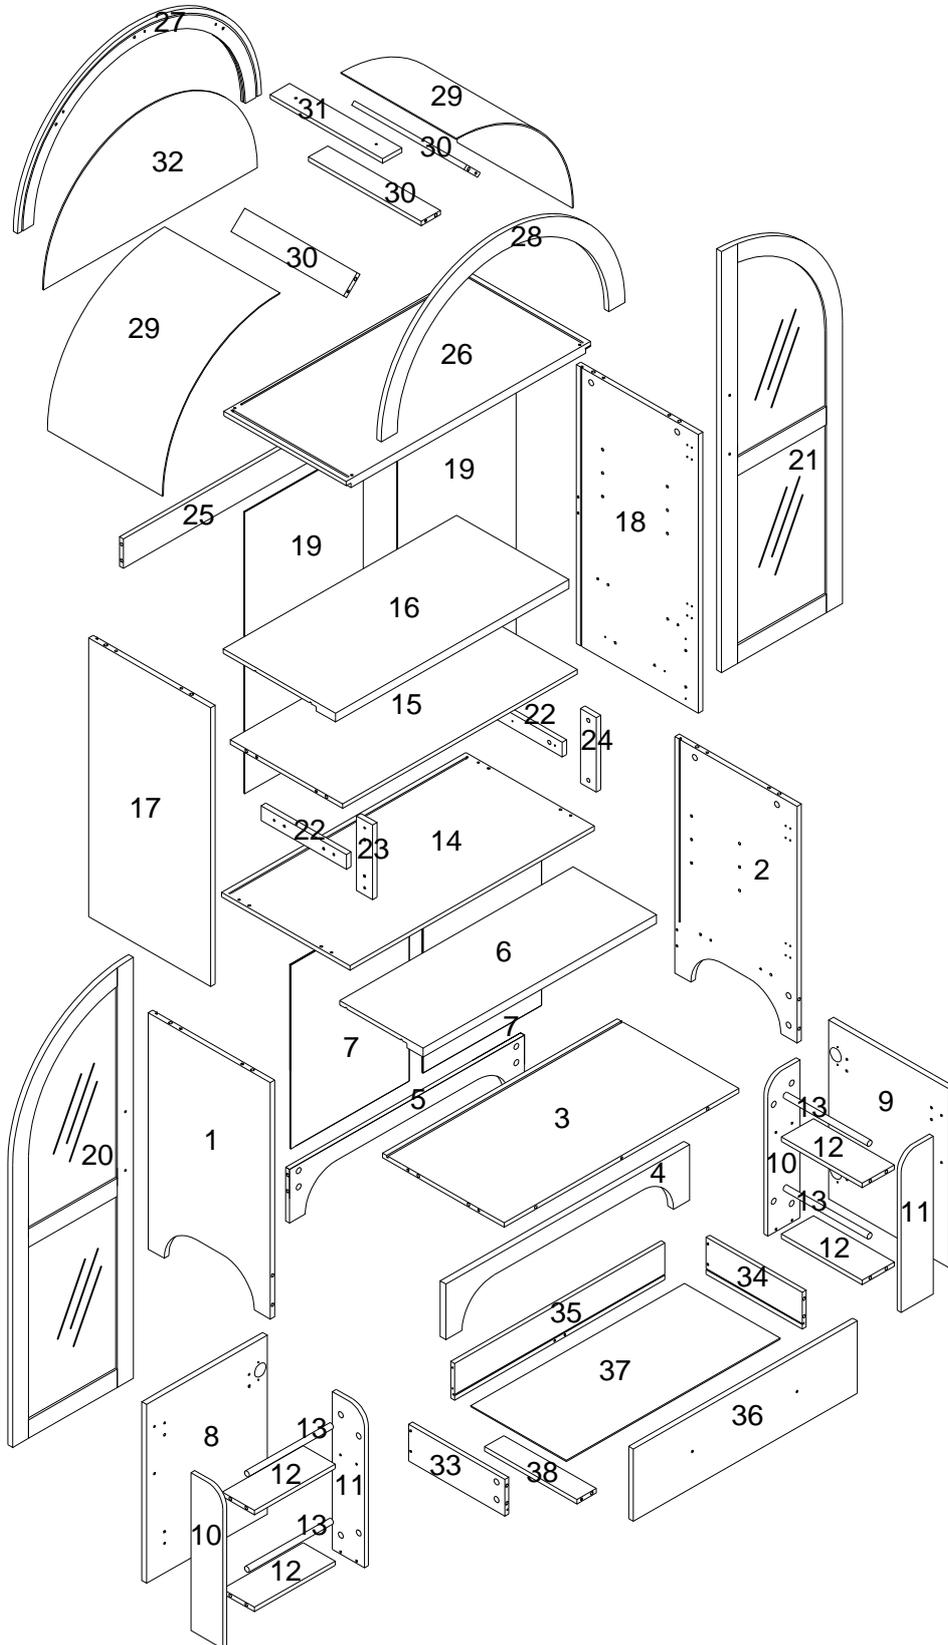



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

. Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

. From time to time check that there are no loose screws on this unit.

. This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

. Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning - please follow these Instructions

To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

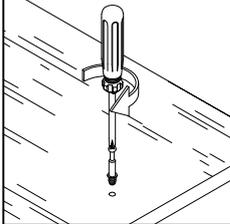

Step 2

Push the male camlock into the entry hole.

2

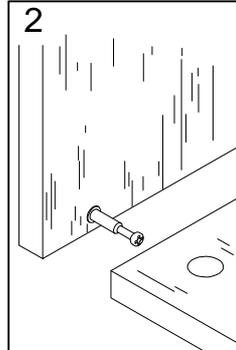


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

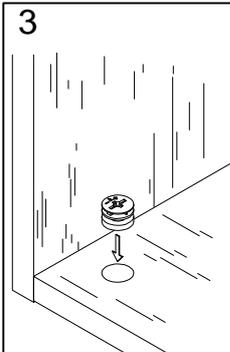


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.






4

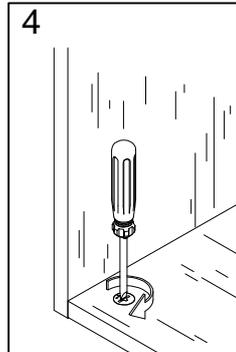

Components -Fittings

Please check you have all the panels listed below









Note: The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than required.
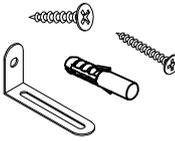
<p>(A)</p>  <p>Ø6x33mm</p> <p>x65pcs</p>	<p>(B)</p>  <p>x65pcs</p>	<p>(C)</p>  <p>Ø4x40mm</p> <p>x8pcs</p>	<p>(D)</p>  <p>Ø3x12mm</p> <p>x10pcs</p>	<p>(E)</p>  <p>150mm</p> <p>x2pcs</p>	<p>(F)</p>  <p>Ø4x15mm</p> <p>x2pcs</p>
<p>(G)</p>  <p>250mm</p> <p>x2pcs</p>	<p>(H)</p>  <p>Ø4x22mm</p> <p>x8pcs</p>	<p>(I)</p>  <p>x8pcs</p>	<p>(J)</p>  <p>Ø3x16mm</p> <p>x8pcs</p>	<p>(K)</p>  <p>Ø6x30mm</p> <p>x36pcs</p>	<p>(L)</p>  <p>Ø4x30mm</p> <p>x6pcs</p>
<p>(M)</p>  <p>x8pcs</p>	<p>(N)</p>  <p>Ø4x14mm</p> <p>x48pcs</p>	<p>(O)</p>  <p>x8pcs</p>	<p>(P)</p>  <p>250mm</p> <p>x2pcs</p>	<p>(Q)</p>  <p>x1set</p>	<p>(R)</p>  <p>x2pcs</p>
<p>(S)</p>  <p>Ø6x20mm</p> <p>x8pcs</p>	<p>(T)</p>  <p>Ø4x20mm</p> <p>x8pcs</p>	<p>(U)</p>  <p>x1pc</p>	<p>(V)</p>  <p>Ø4x28mm</p> <p>x2pcs</p>	<p>(W)</p>  <p>x1pc</p>	

Assembly Instruction
















Box A

N707P417187


					
1: 1pc	2: 1pc	6: 1pc	8: 1pc	9: 1pc	10: 2pcs
					
11: 2pcs	12: 4pcs	15: 1pc	17: 1pc	18: 1pc	19: 2pcs
					
20: 1pc	21: 1pc	27: 1pc	28: 1pc		

Box B


N707P417188

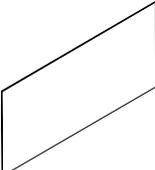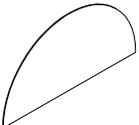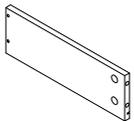							
3: 1pc	4: 1pc	5: 1pc	7: 2pcs	14: 1pc	13: 4pcs	16: 1pc	
							
22: 2pcs	23: 1pc	24: 1pc	25: 1pc	26: 1pc	29: 2pcs	30: 3pcs	
							
31: 1pc	32: 1pc	33: 1pc	34: 1pc	35: 1pc	36: 1pc	37: 1pc	38: 1pc


STEP 1

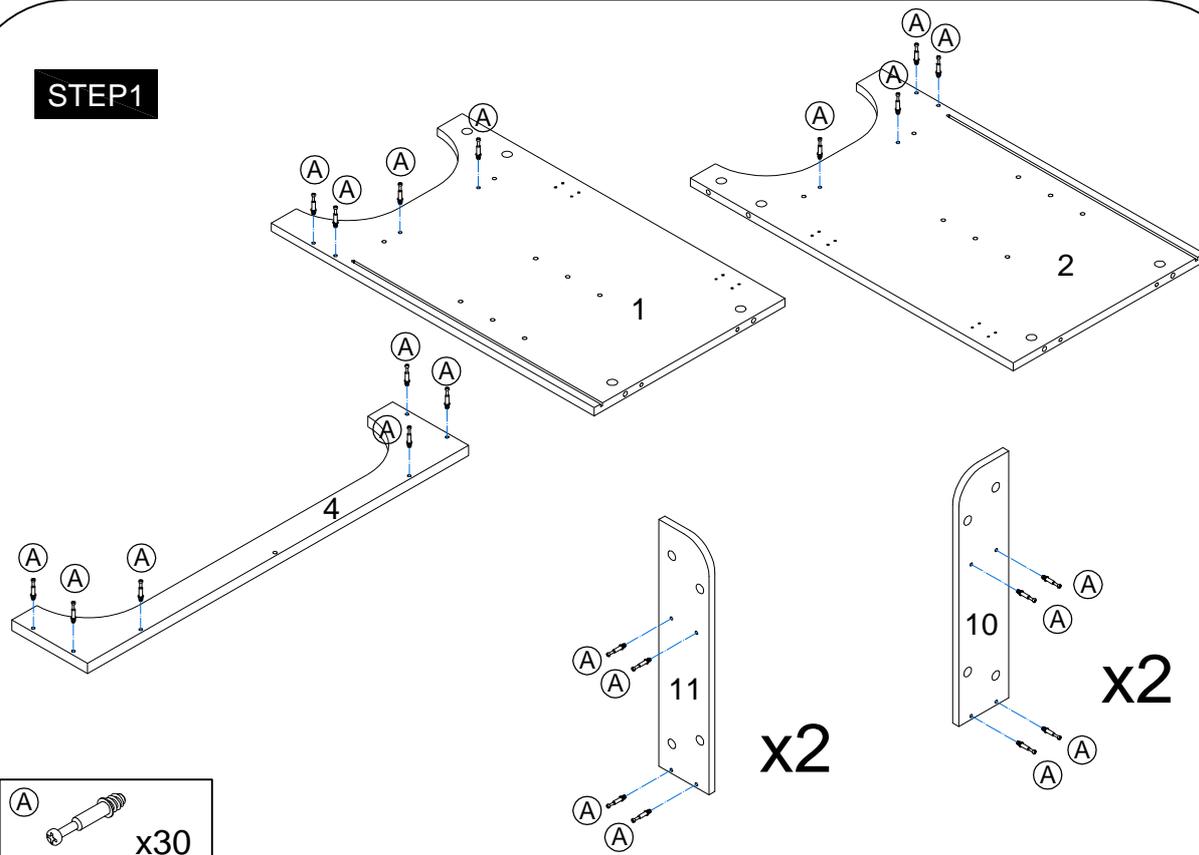

STEP 2

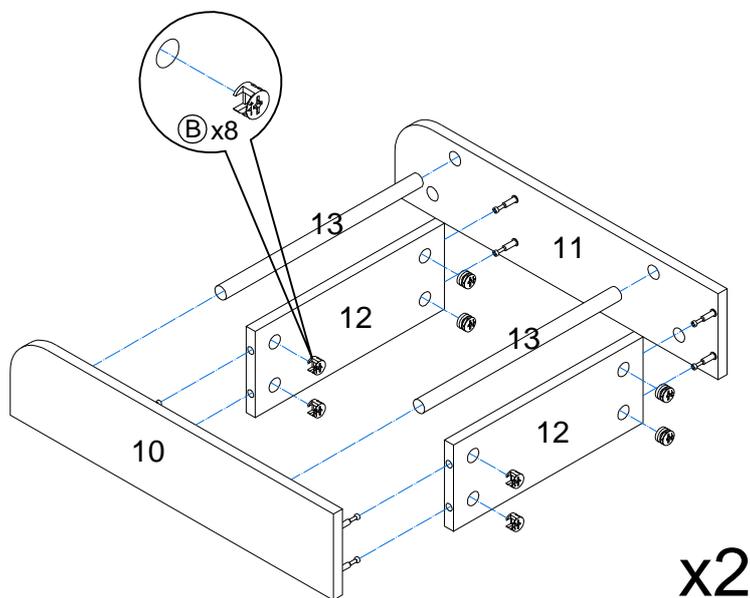



STEP3

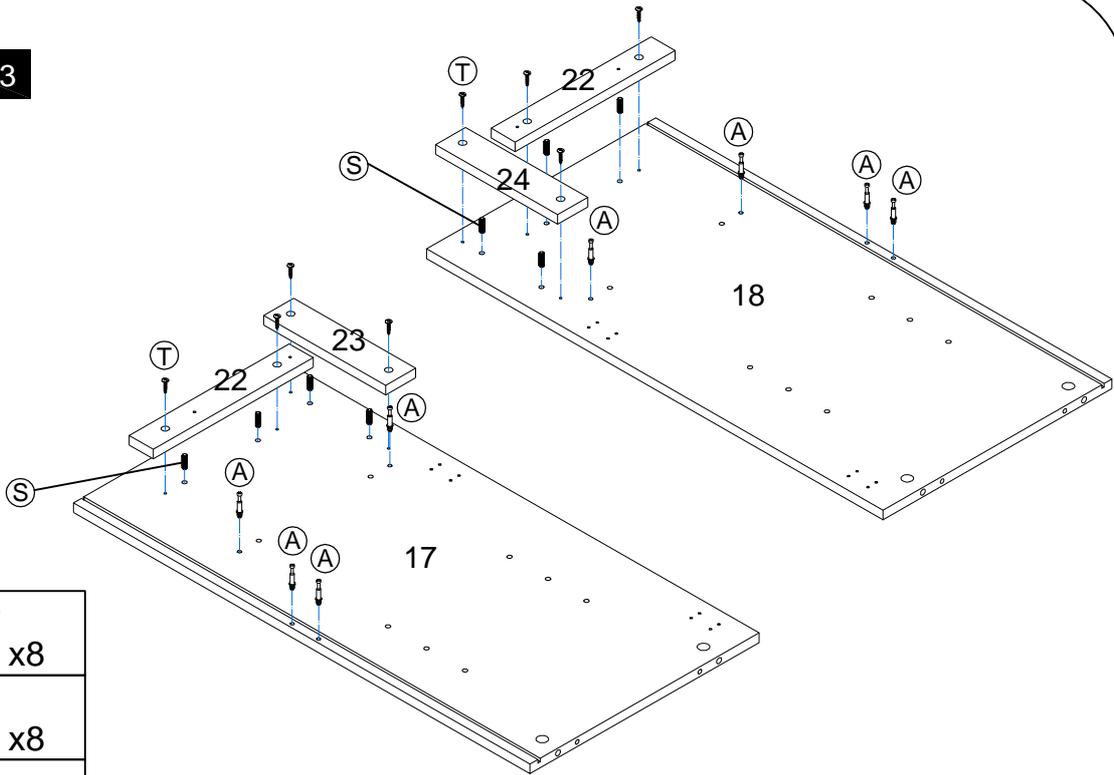


(A)		x8
(T)		Ø4x20mm x8
(S)		Ø6x20mm x8

STEP4





Detaching the Slide
Press lever to disconnect and separate the Extension Slide (K-2) from the Slide (K-1). Do this for both drawer Slides.

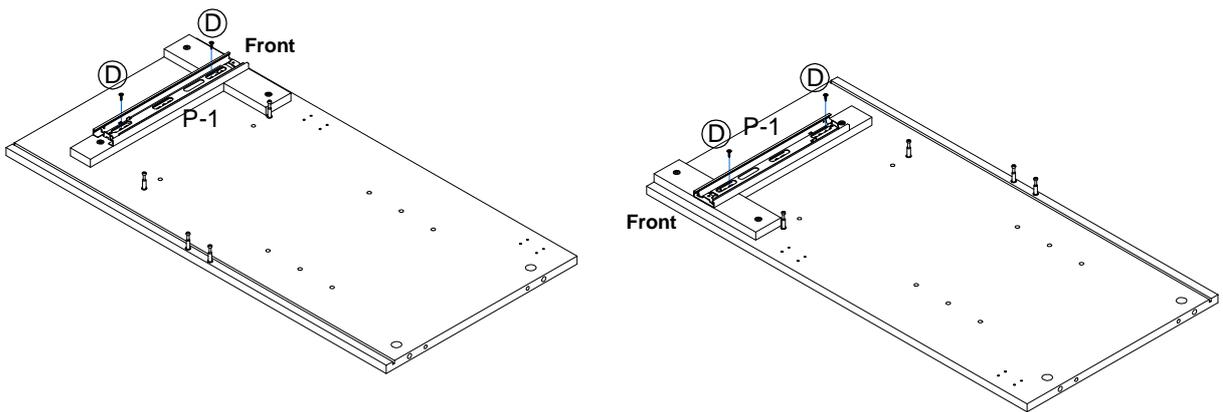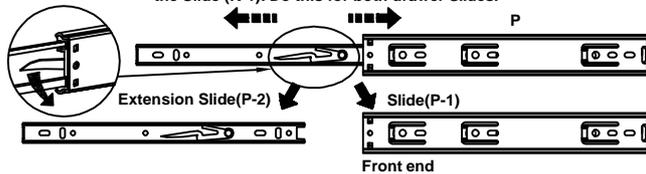




(D)		Ø3x12mm x4
(P)		250mm x2

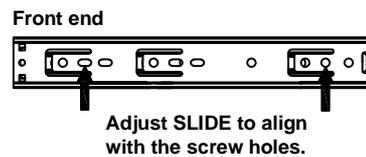


STEP 5

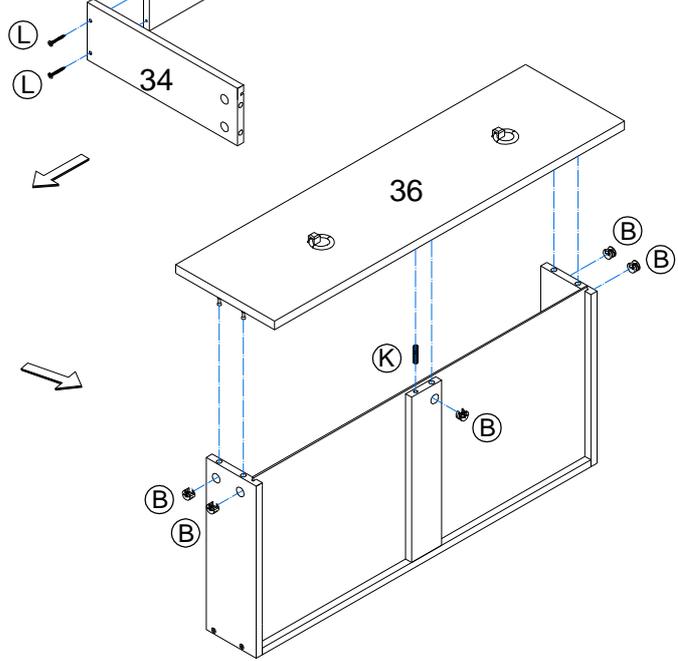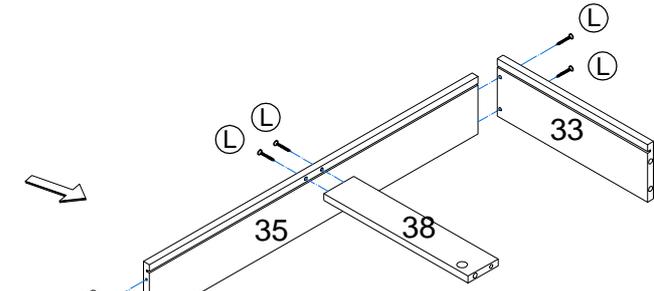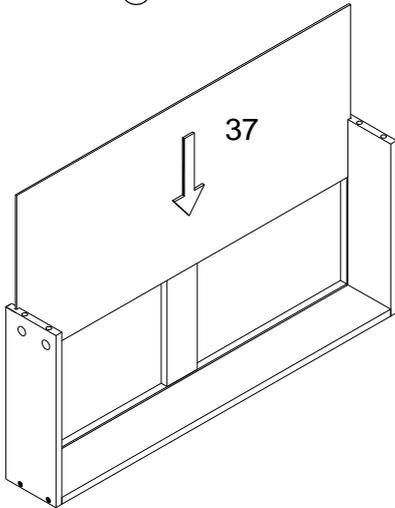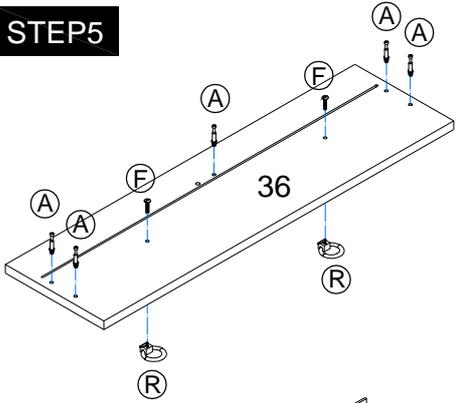

- (A)  x5
- (B)  x5
- (D)  Ø3x12mm x4
- (F)  Ø4x15mm x2
- (K)  Ø6x30mm x1
- (L)  Ø4x30mm x6
- (R)  x2
- (P)  250mm x2

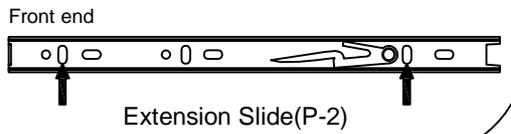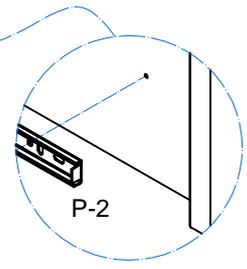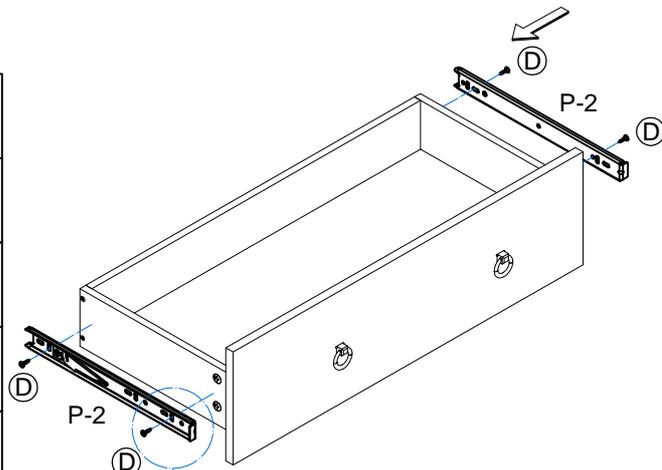


STEP6

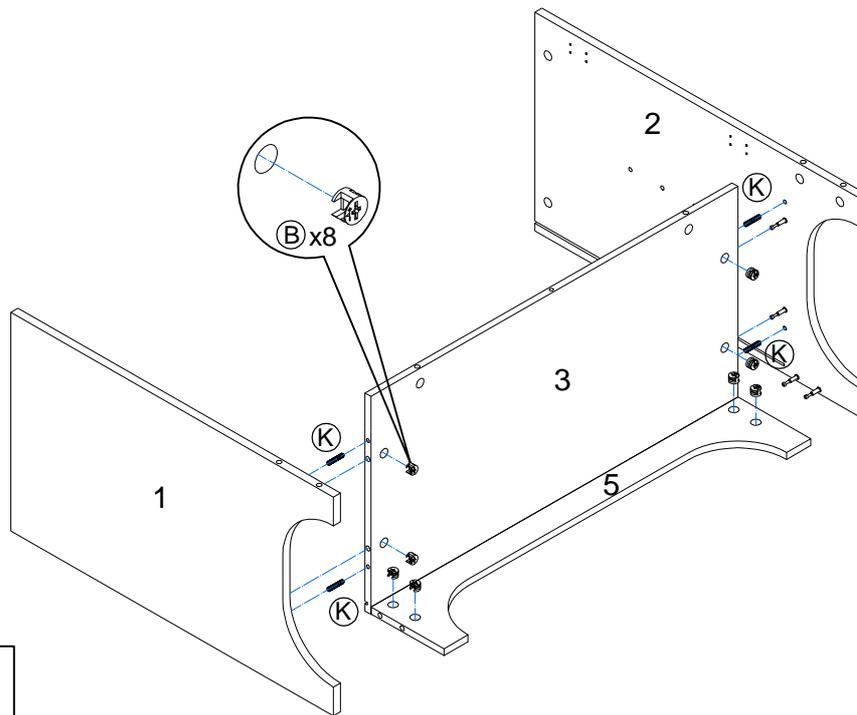


(B)		x8
(K)		x4

STEP7

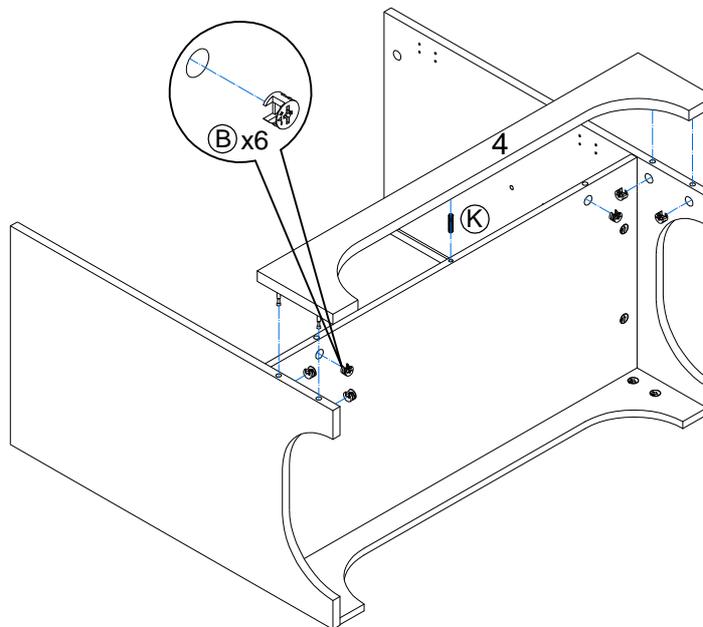


(B)		x6
(K)		x1

STEP8

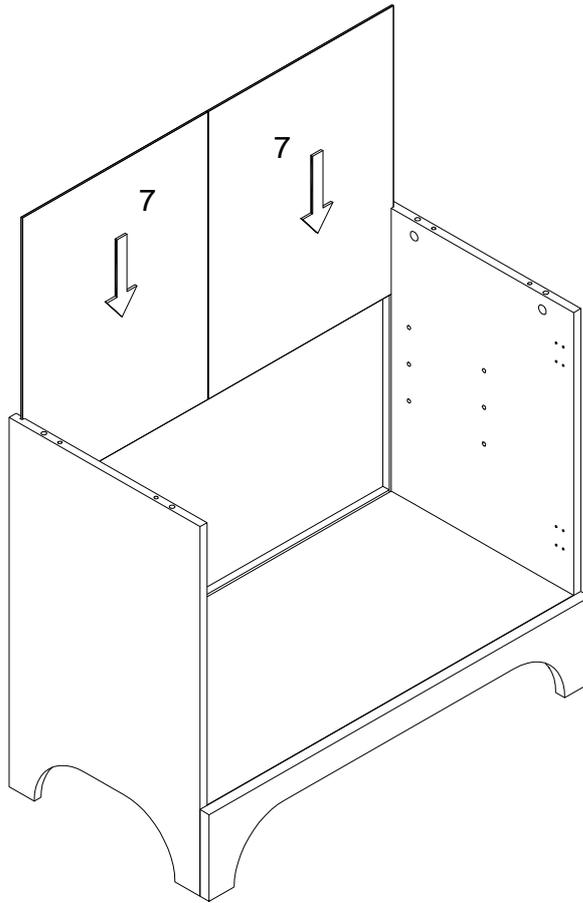


STEP9

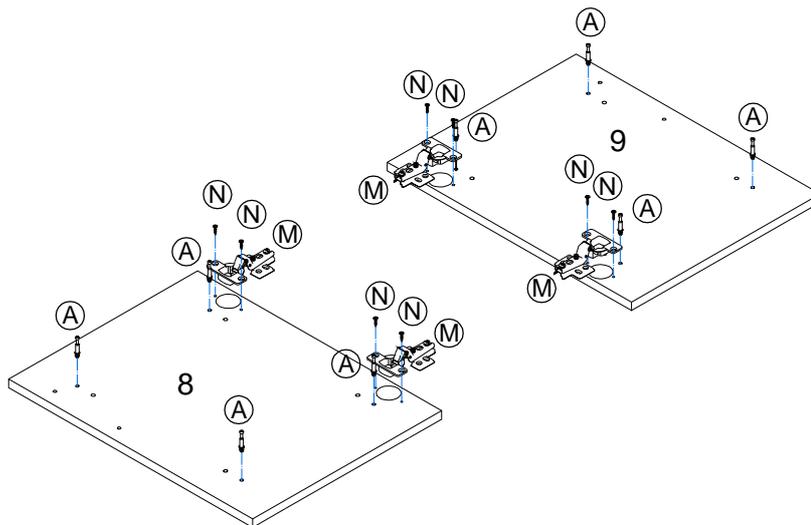


- | | |
|---|---------------|
|   | x8 |
|   | x8
Ø4x14mm |
|   | x4 |

STEP10

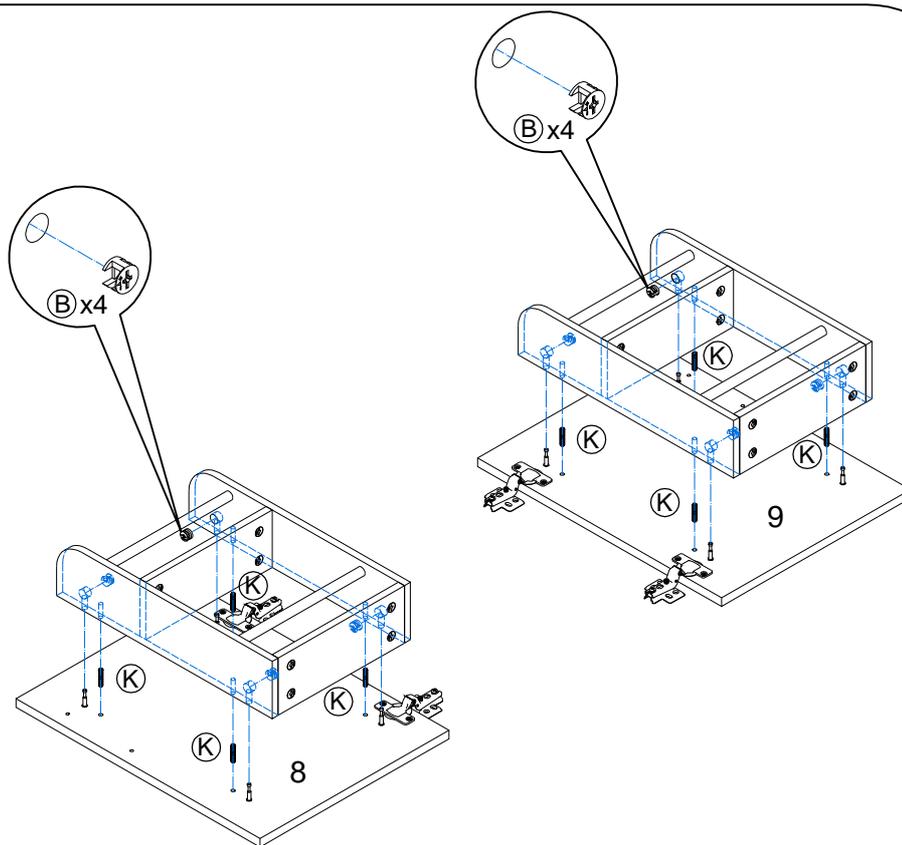


(B)		x8
(K)		Ø6x30mm x8

STEP11

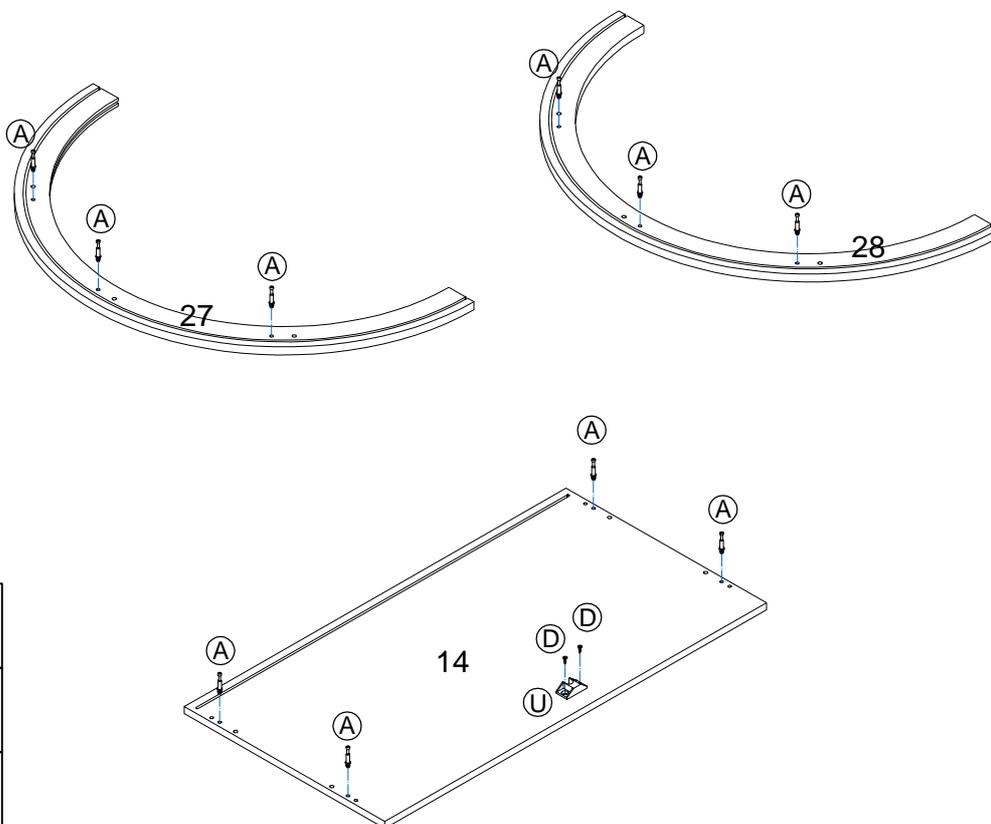


(A)		x10
(D)		Ø3x12mm x2
(U)		x1

STEP12

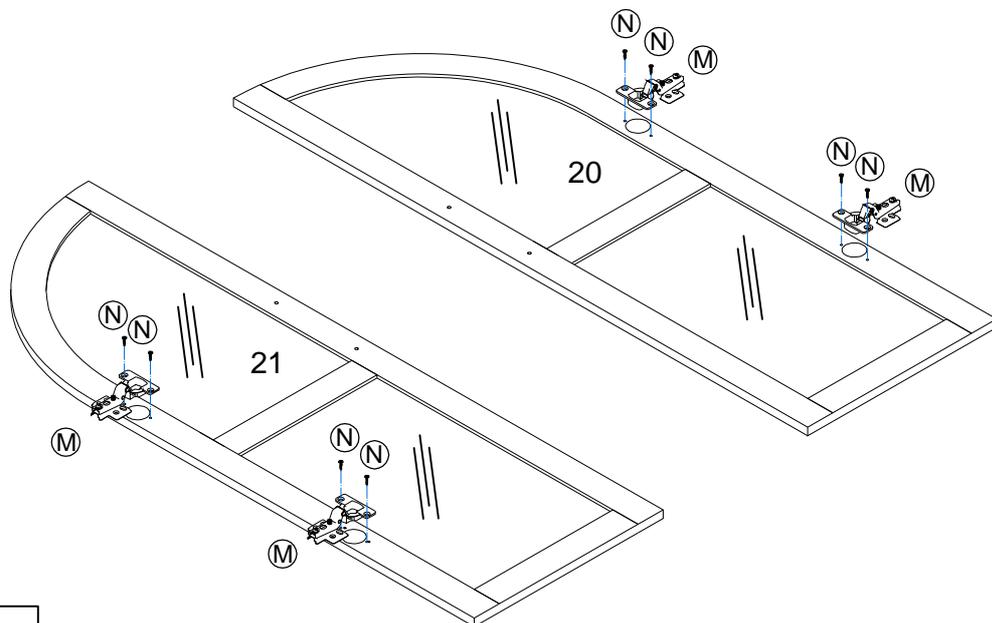


(N)		Ø4x14mm	x8
(M)			x4

STEP13

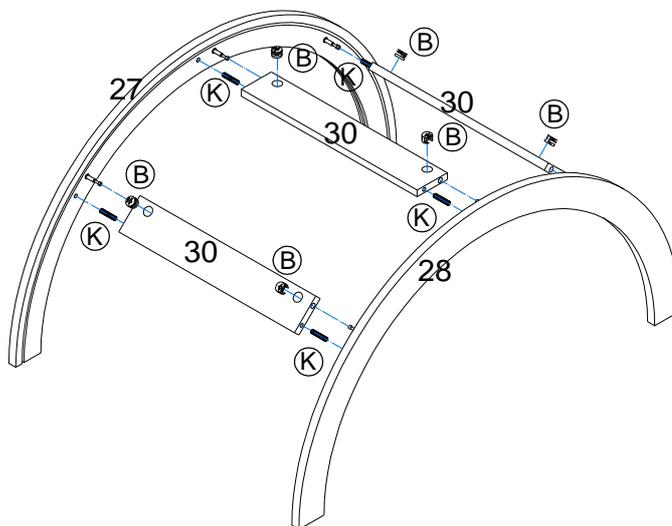


(B)			x6
(K)		Ø6x30mm	x6


STEP14

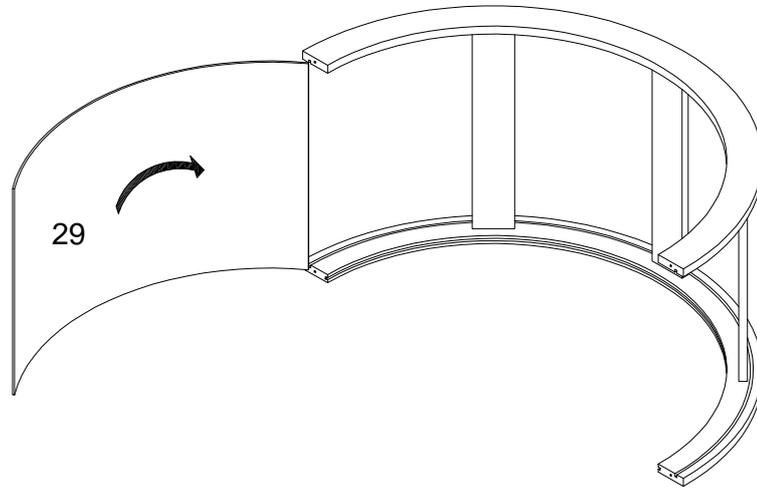


STEP15

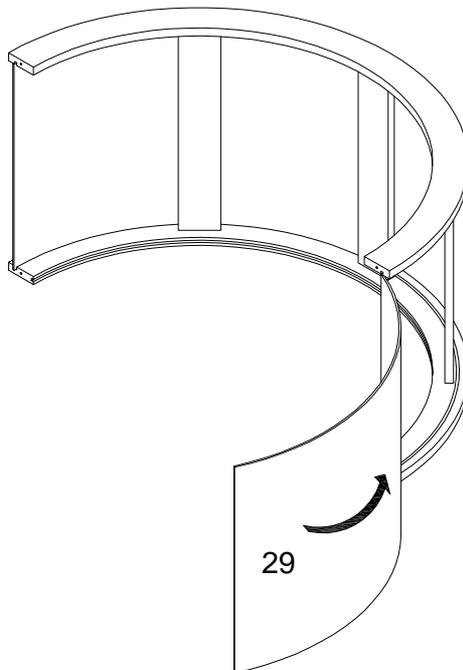



STEP16

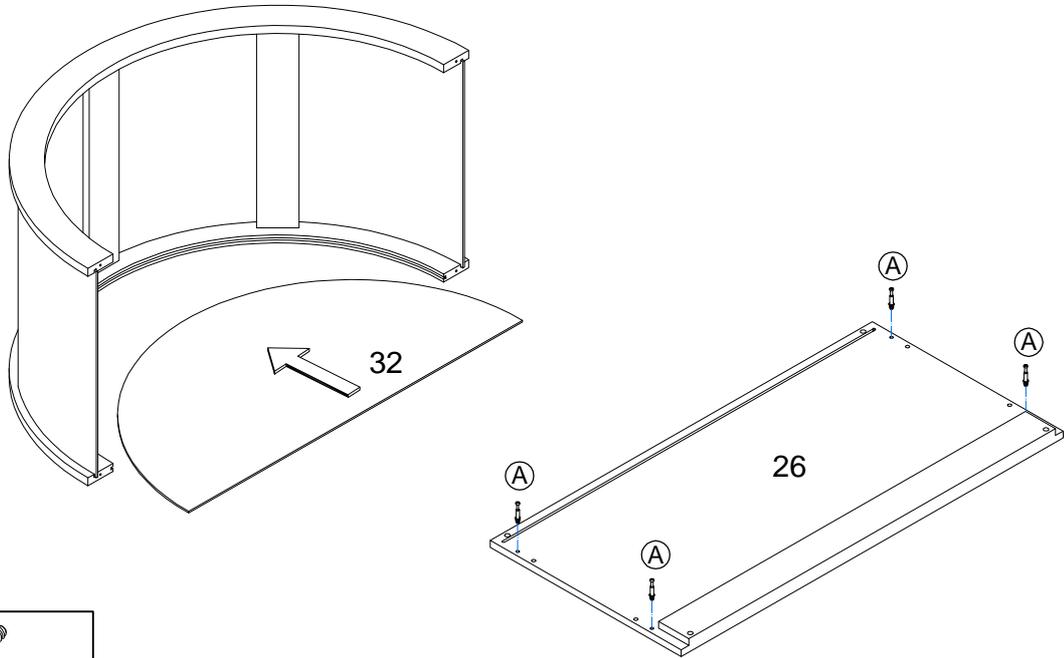



STEP17

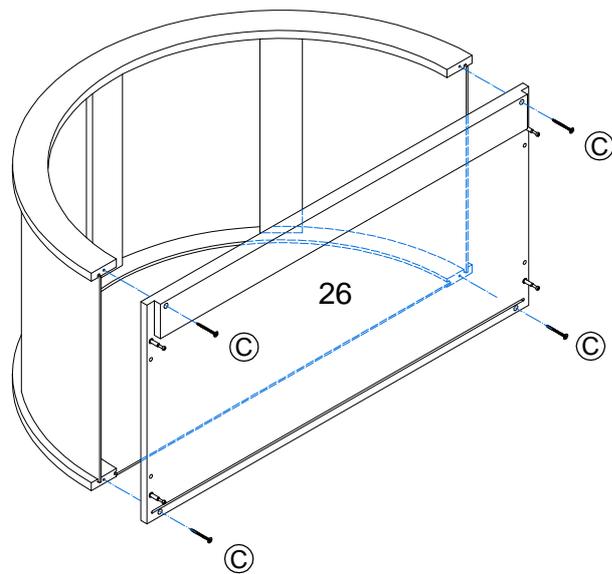


STEP18

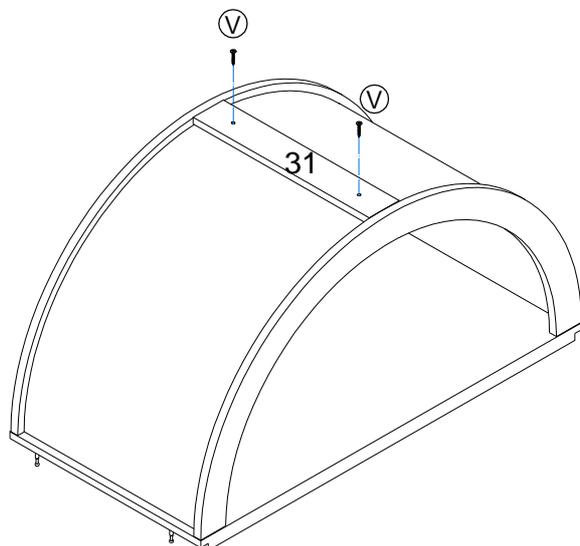

STEP19

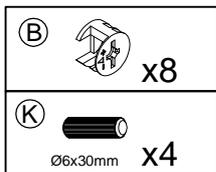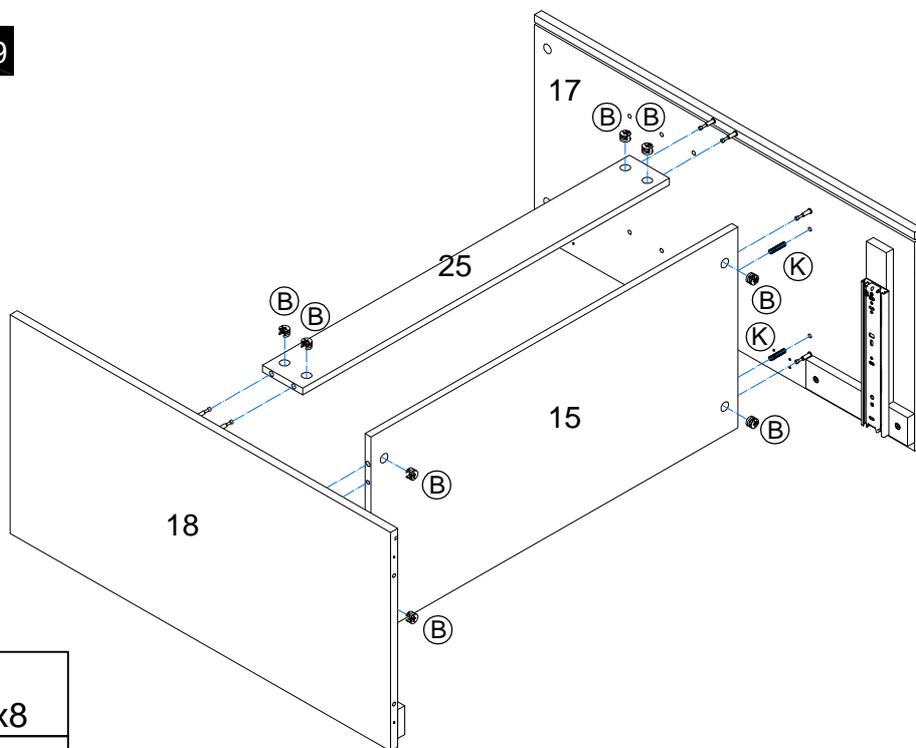


STEP20


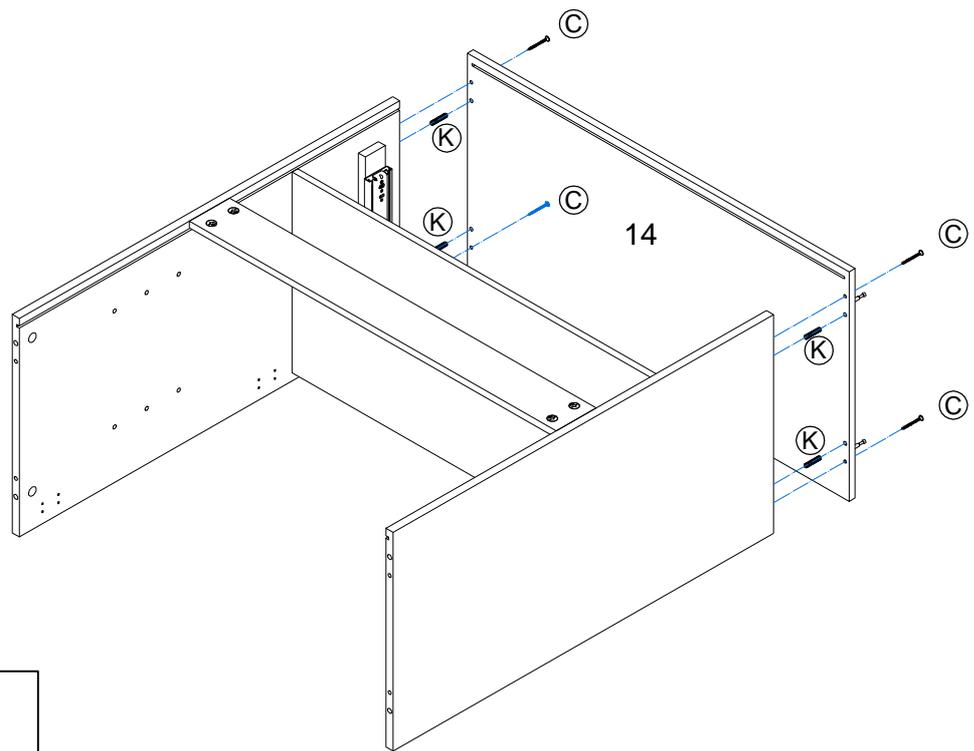


Ⓒ		Ø4x40mm	x4
Ⓐ		Ø6x30mm	x4



STEP21

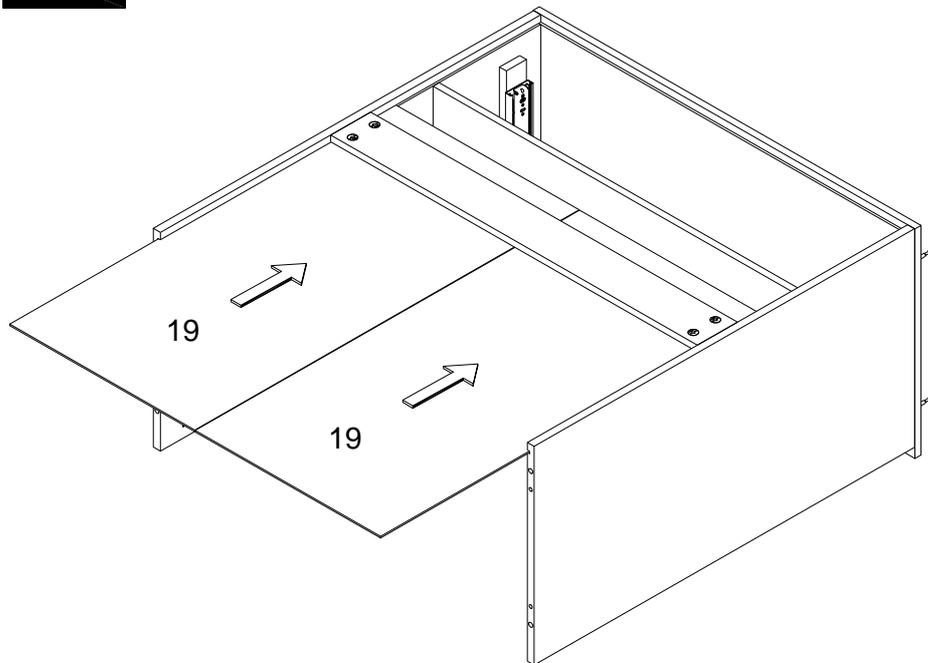



STEP22

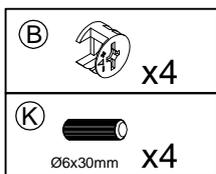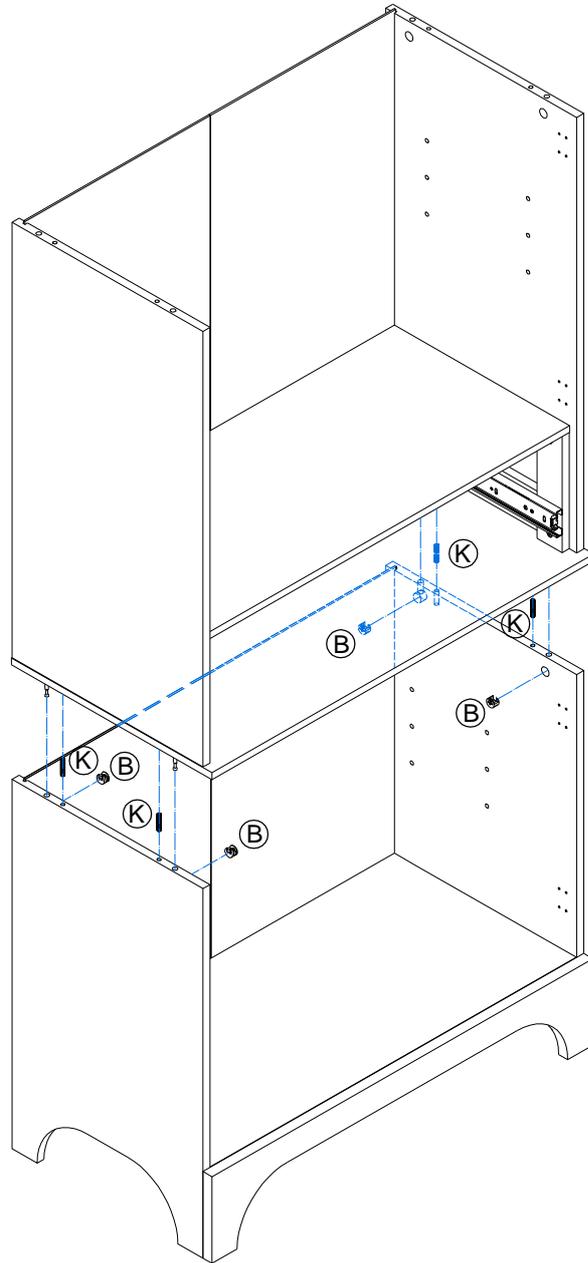


STEP23

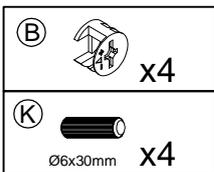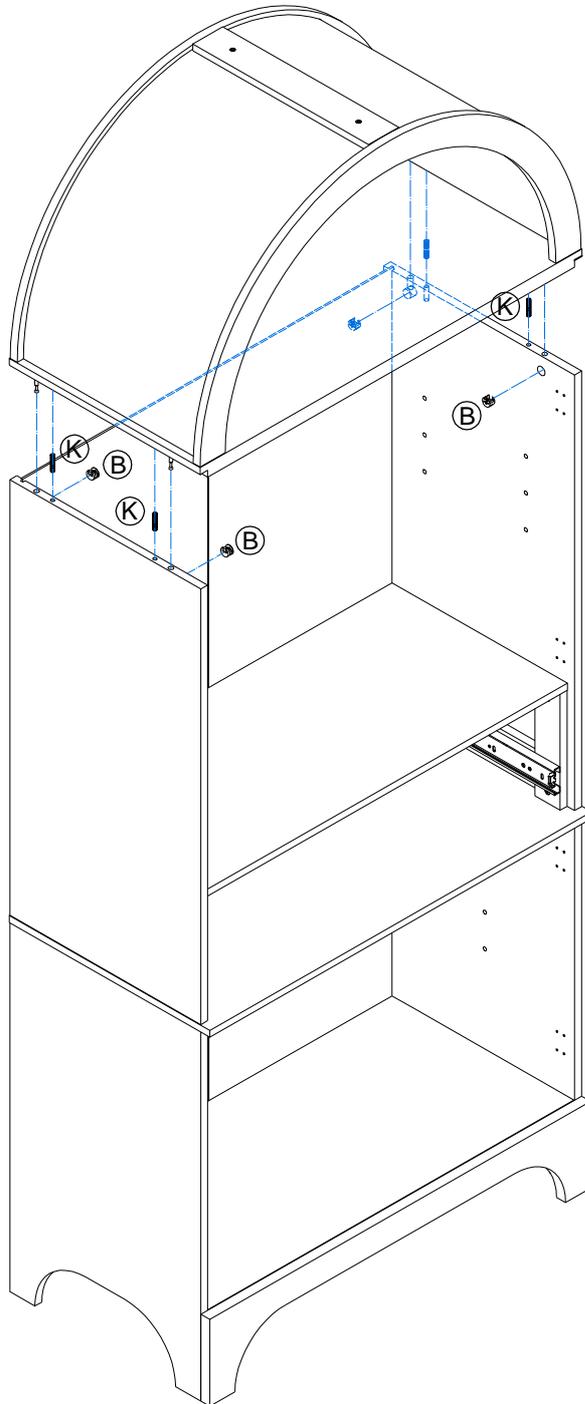



STEP24

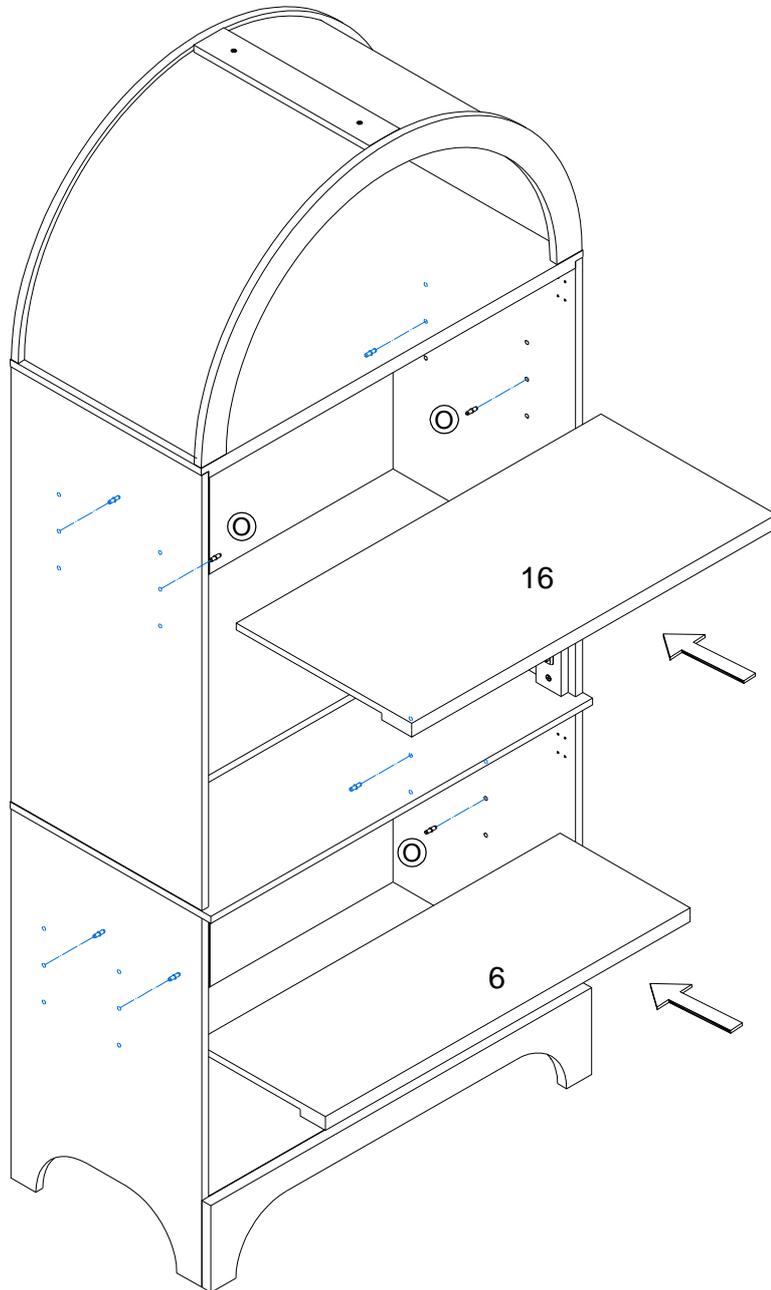

STEP25


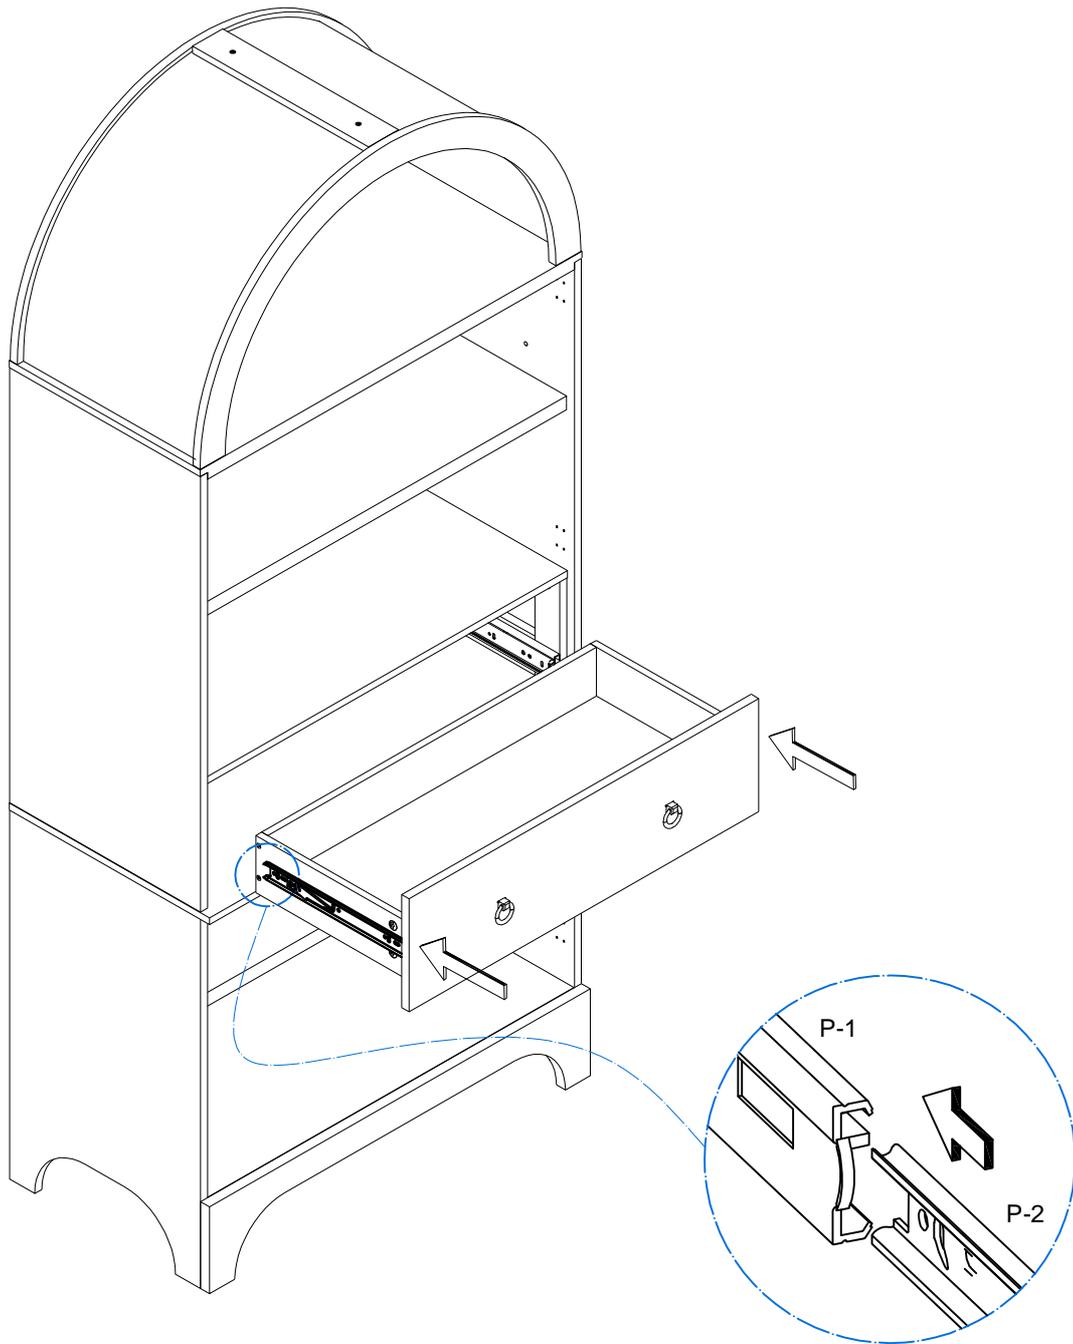


STEP 26

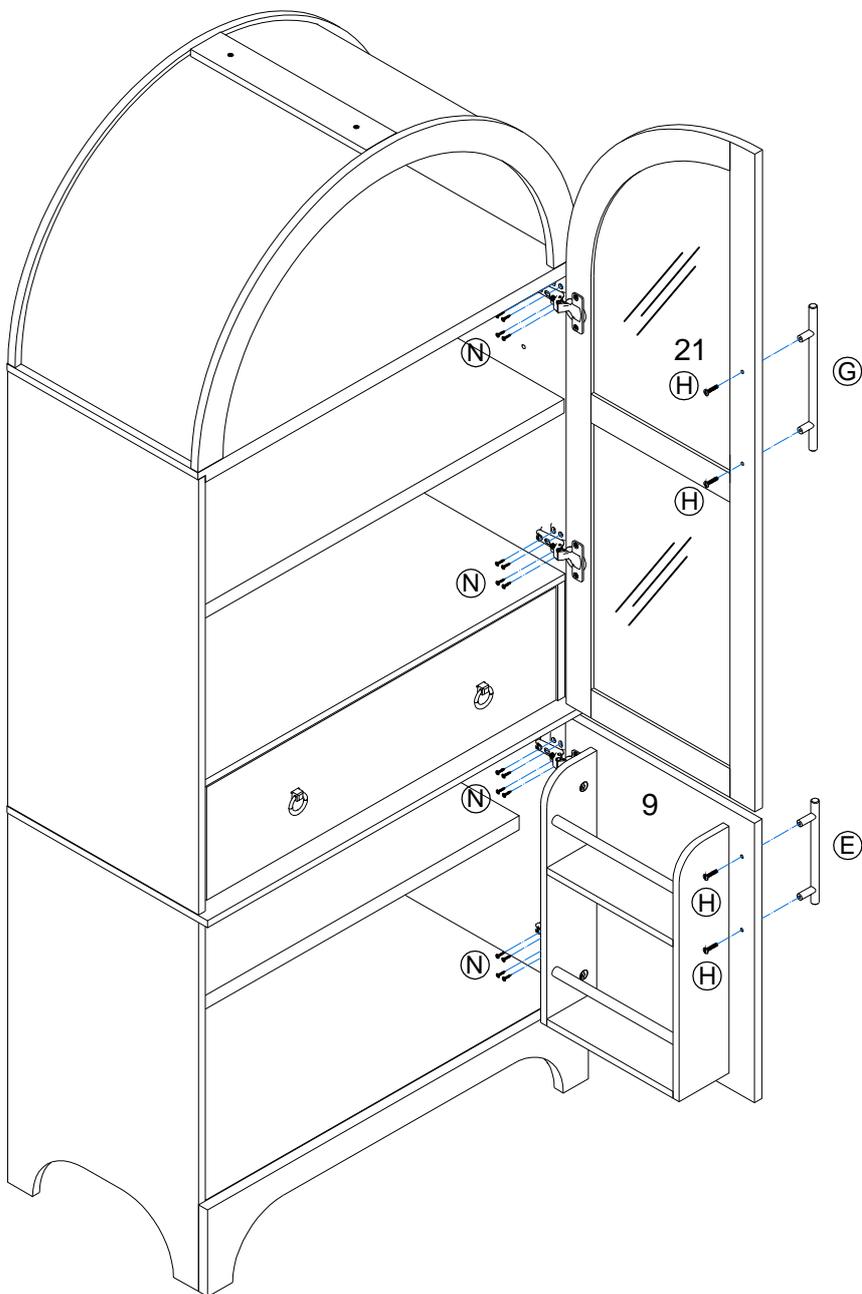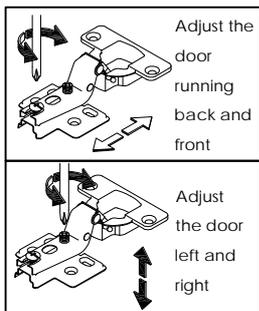



(E)		150mm	x1
(G)		250mm	x1
(H)		Ø4x22mm	x4
(N)		Ø4x14mm	x16

STEP 27

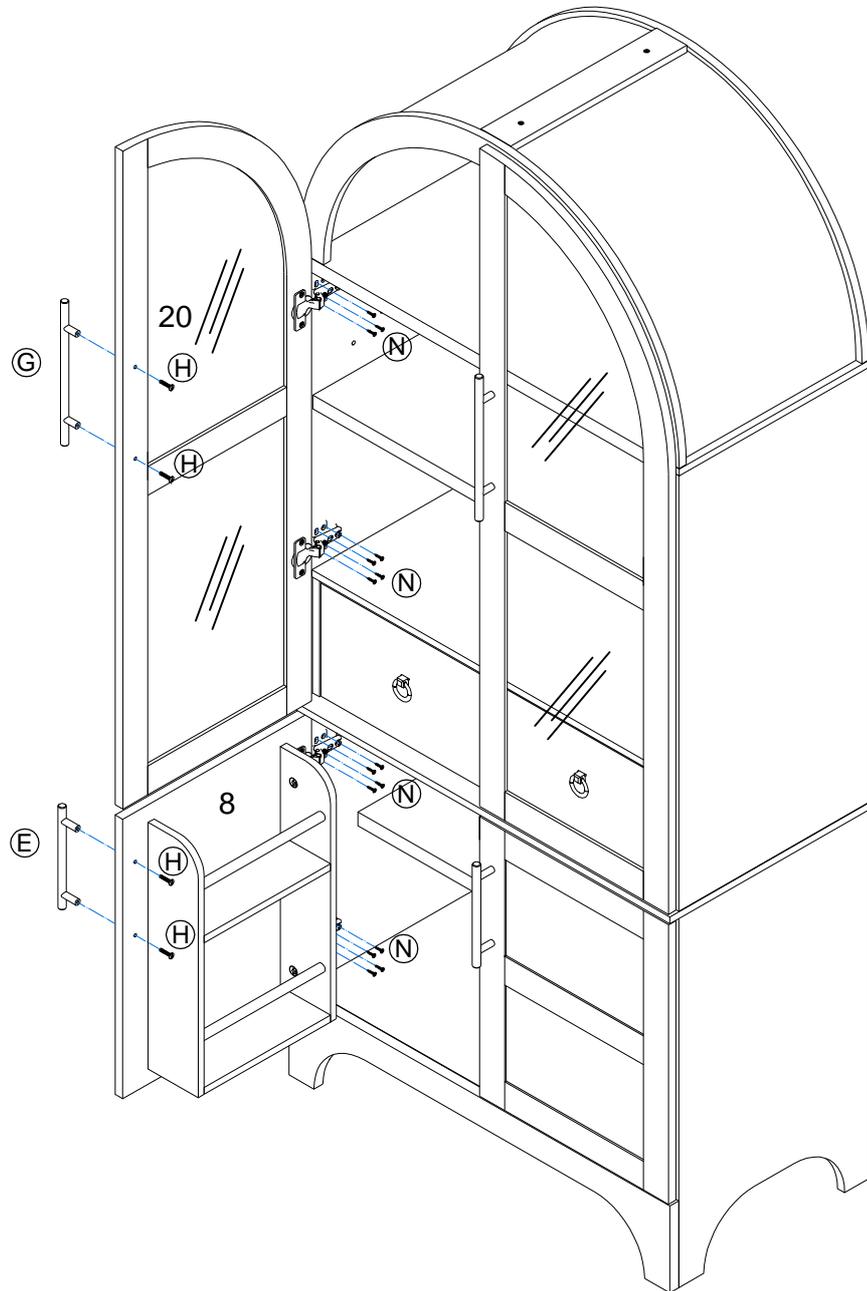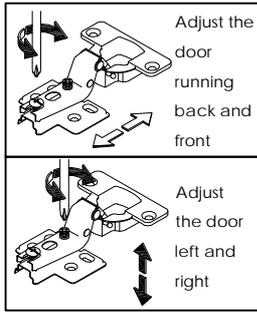



(E)		150mm	x1
(G)		250mm	x1
(H)		Ø4x22mm	x4
(N)		Ø4x14mm	x16

STEP28

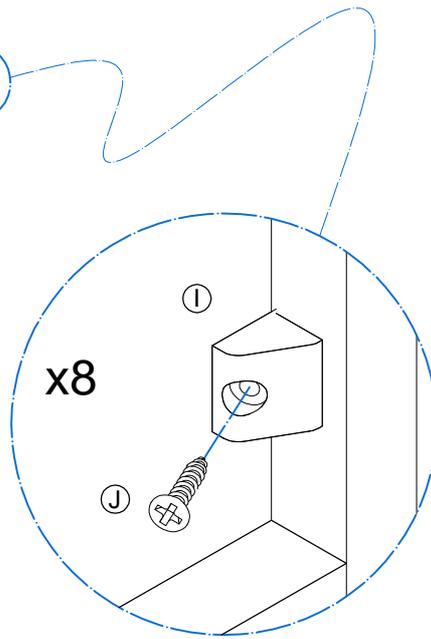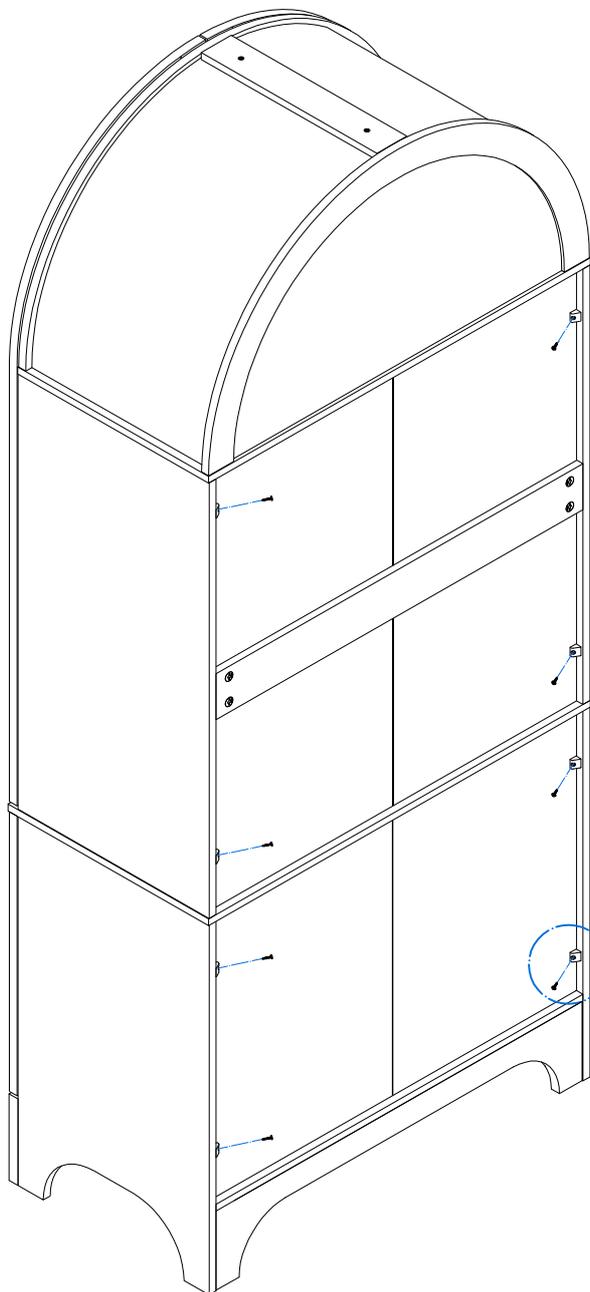

①		x8
②		Ø3x16mm x8

STEP29

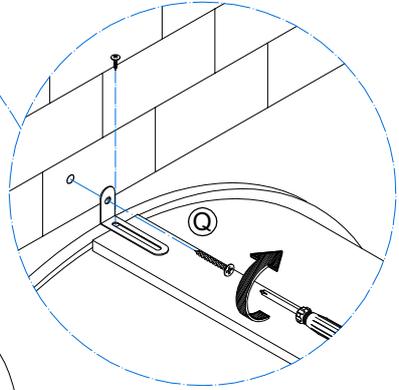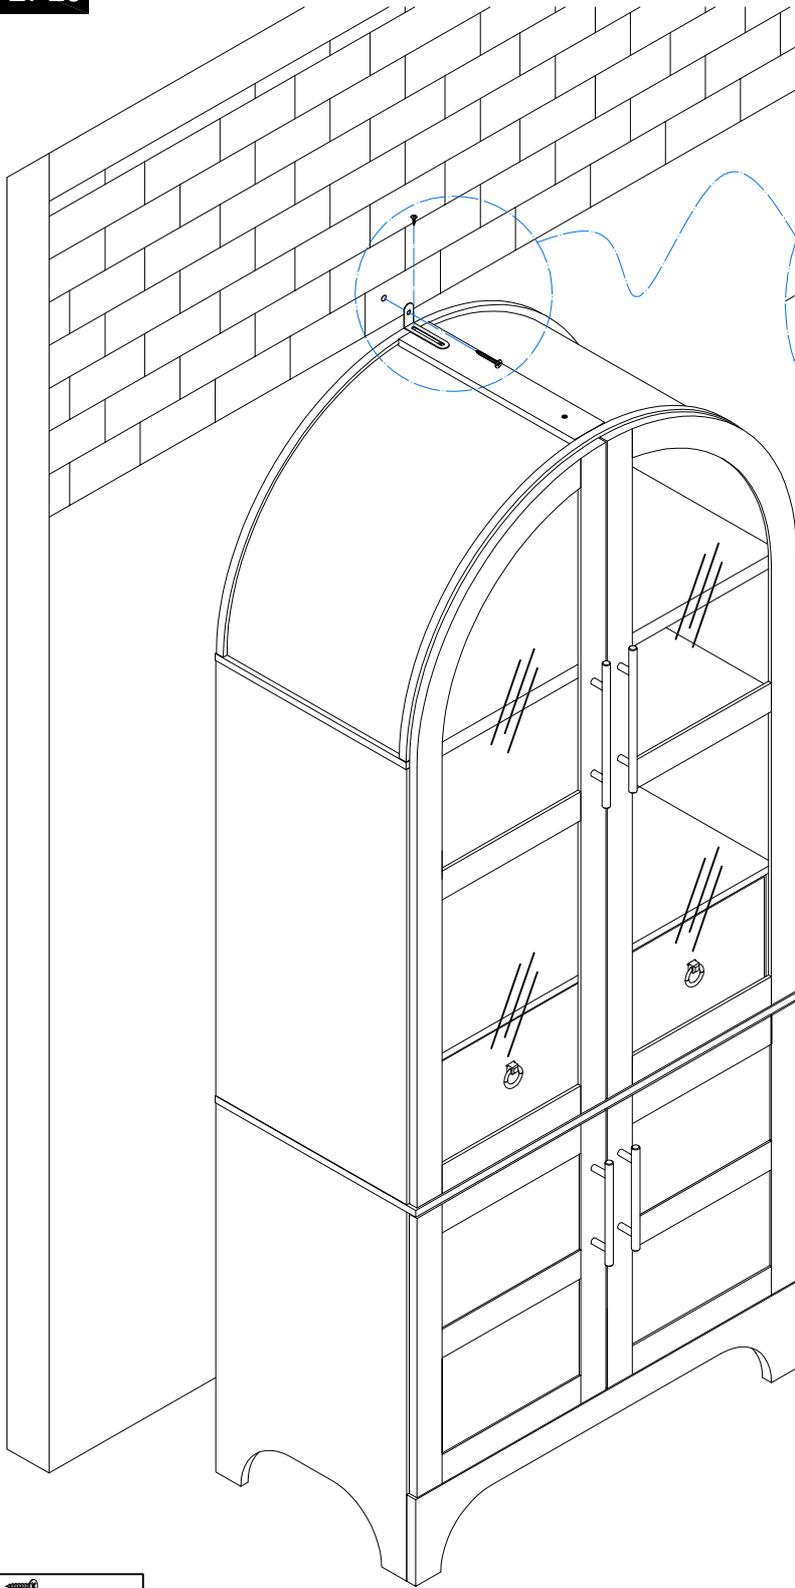

WALL

I

WALL +
drillinghole

II

WALL

Use a hammer to close
Anchor

III

