

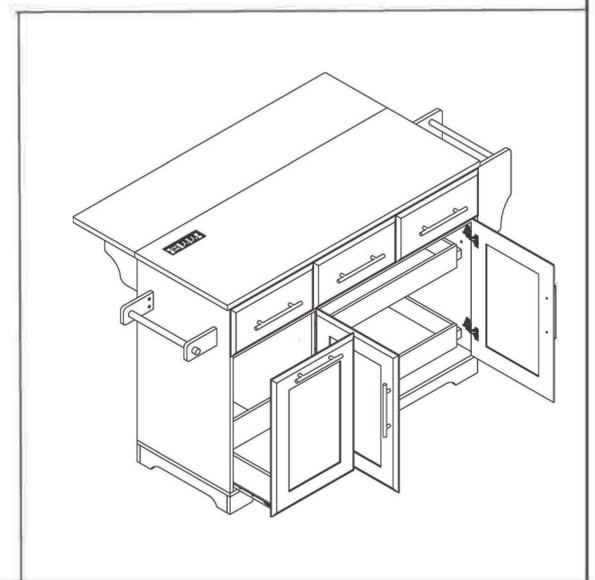


ASSEMBLY INSTRUCTION










ITEM:Kitchen Island Cart


N707P404535/N707P404536

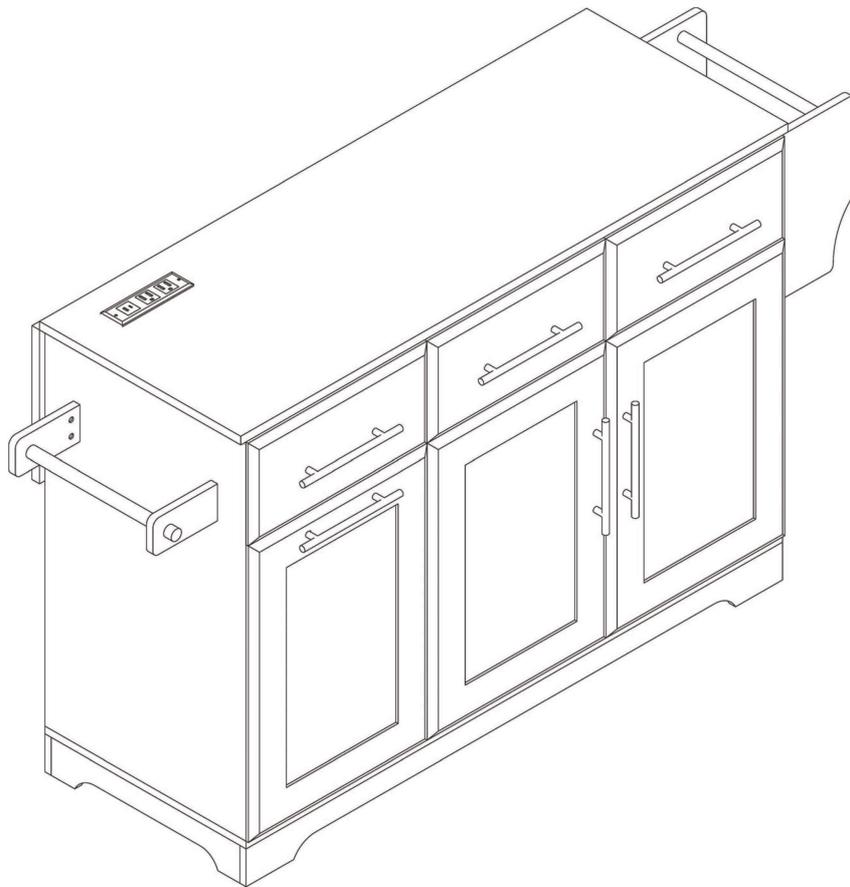






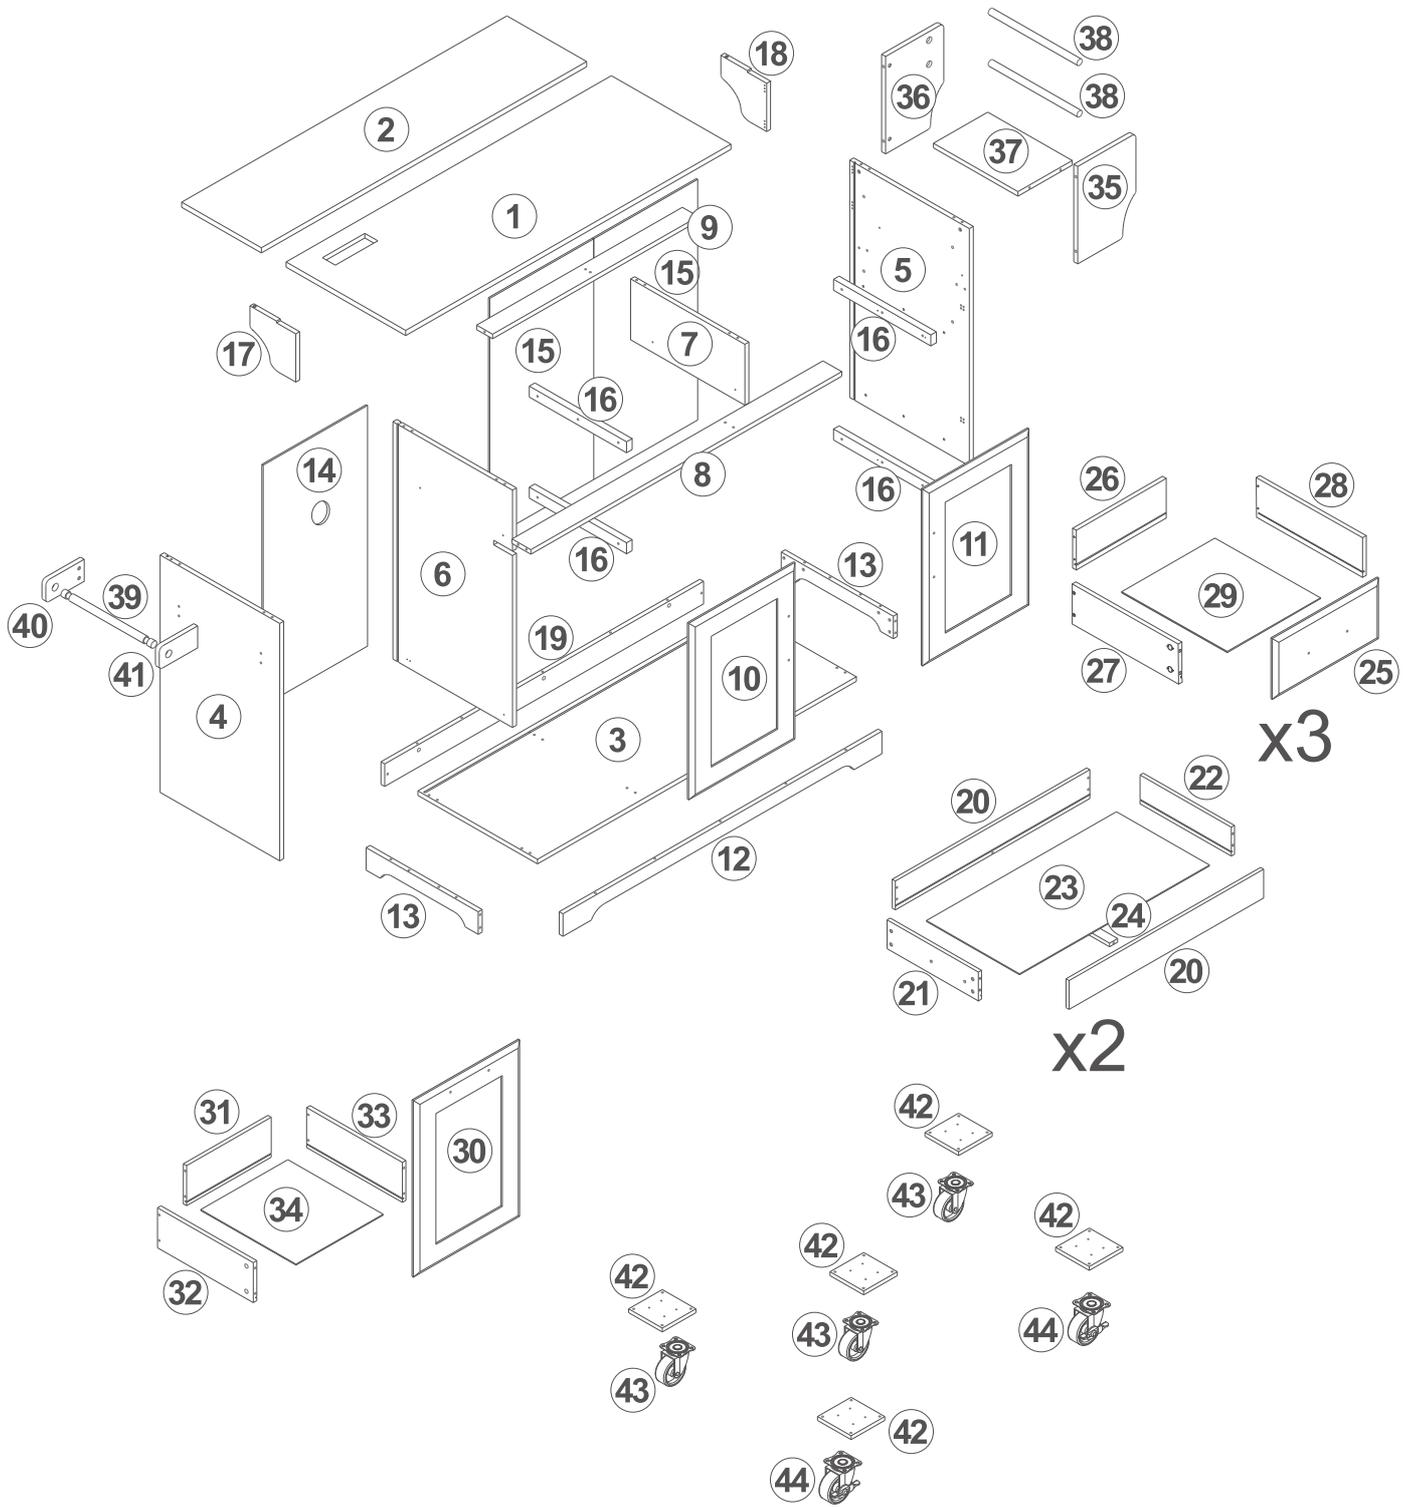





Parts In N707P404536

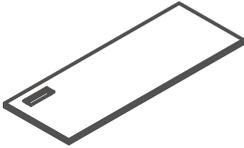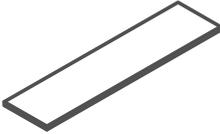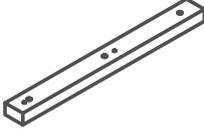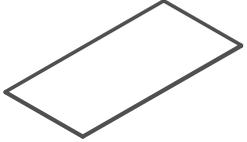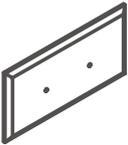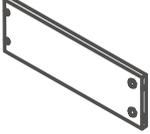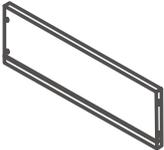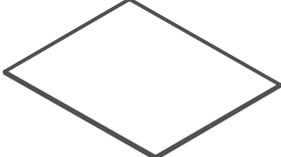			
①×1	②×1	③×1	⑦×1
			
⑧×1	⑨×1	⑫×1	⑬×2
			
⑯×4	⑰×1	⑱×1	⑲×1
			
⑳×4	㉑×2	㉒×2	㉓×2
			
㉔×2	㉕×3	㉖×3	㉗×3
			
㉘×3	㉙×3	㉛×1	㉜×1
			
㉝×1	㉞×1	㉟×1	㊱×1

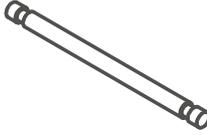			
③⑦×1	③⑧×2	③⑨×1	④⑩×1
			
④①×1	④②×5	④③×3	④④×2

Parts In N707P404535

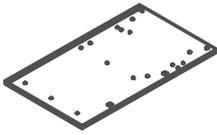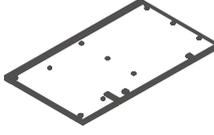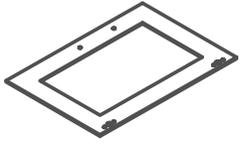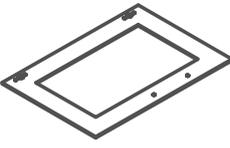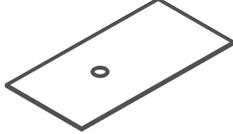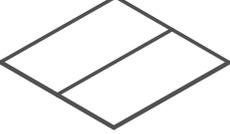			
④×1	⑤×1	⑥×1	⑩×1
			
①①×1	①④×1	①⑤×2	③⑩×1

		 Ø8x30mm	 Ø3x12mm		 Ø5*14
A x 62+2	B x 62+2	C x 30+2	D x 139+5	E x 3	F x 20+2
					 L=2(L-1)+2(L-2)
G x 8	H x 4	I x 4	J x 3	K x 1	Lx2
 Ø6x44mm	 Ø4x25mm	 Ø4x40mm		 Q=CL+CR+DL+DR 350mm	 Ø8x20mm
M x 8	N x 48+2	Ox8+1	P x 6	Qx4	RX 8
	 Ø3x14mm				
S x 8	T x 8	UX 1	VX 1	Wx1	



**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


**Pay attention when connecting !
The sliding module must be at the front end.**

**STEP 1 : Extend Slide
Extender la diapositiva**

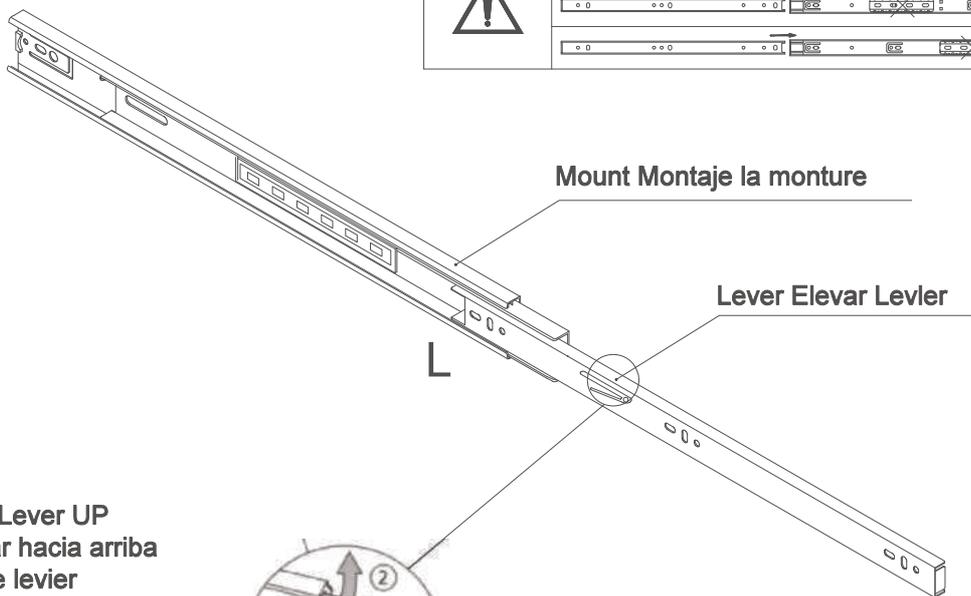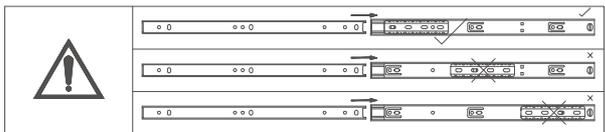



**STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier**

**Push lever for the left of drawer ,
press the lever for the right of drawer.**


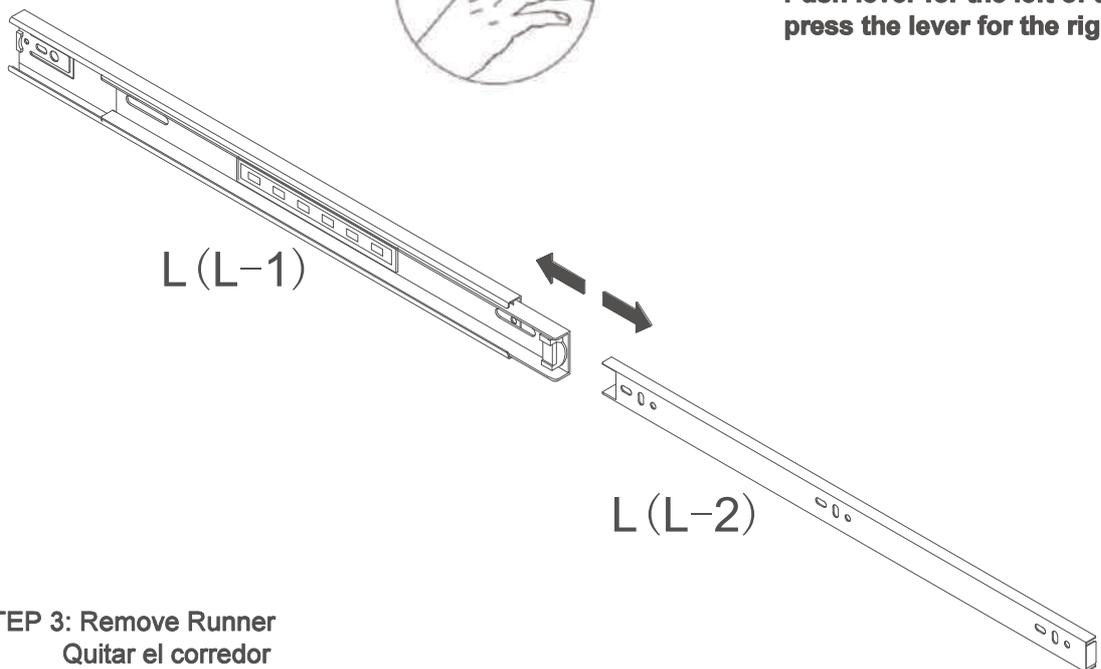


**STEP 3: Remove Runner
Quitar el corredor
Enever le coureur**





step 1

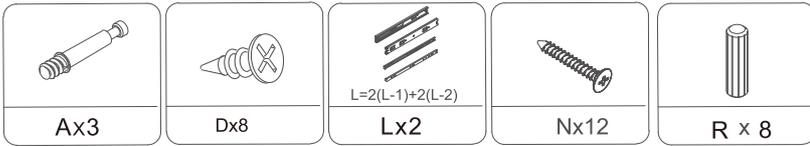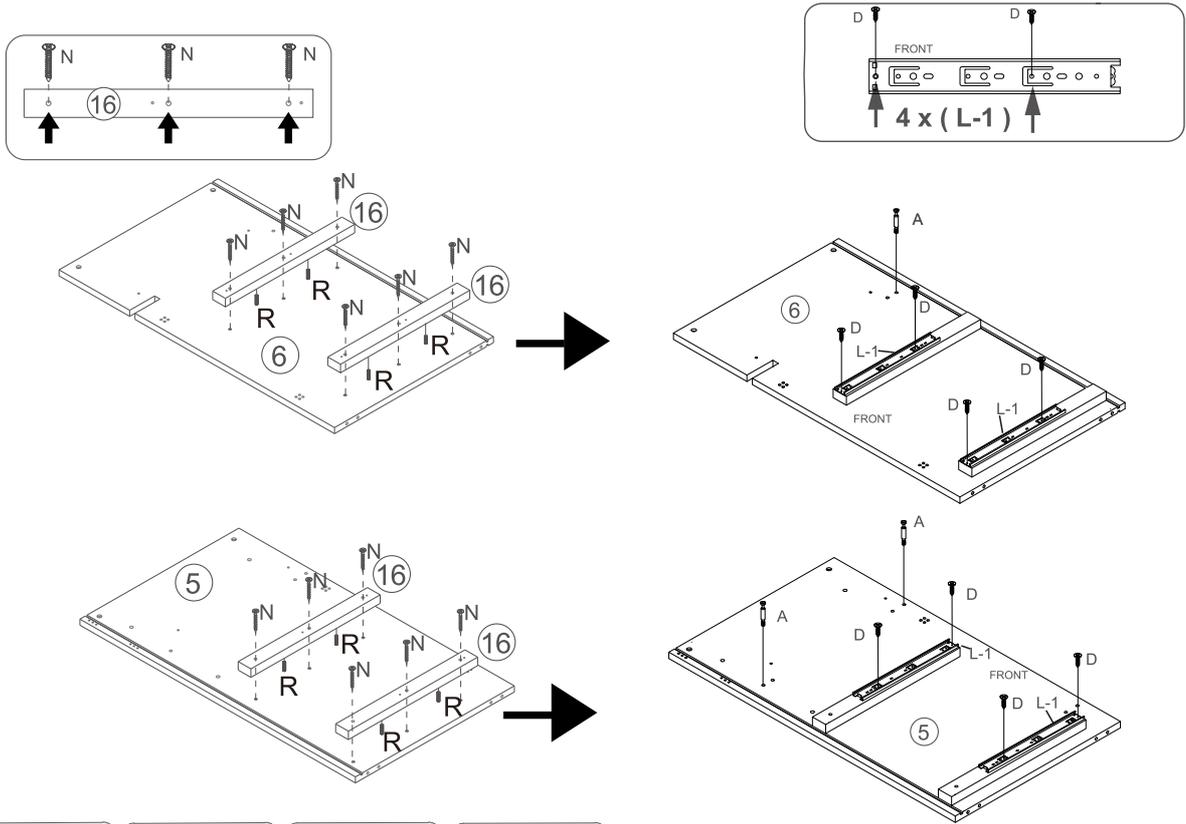




step 2

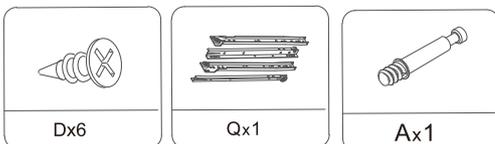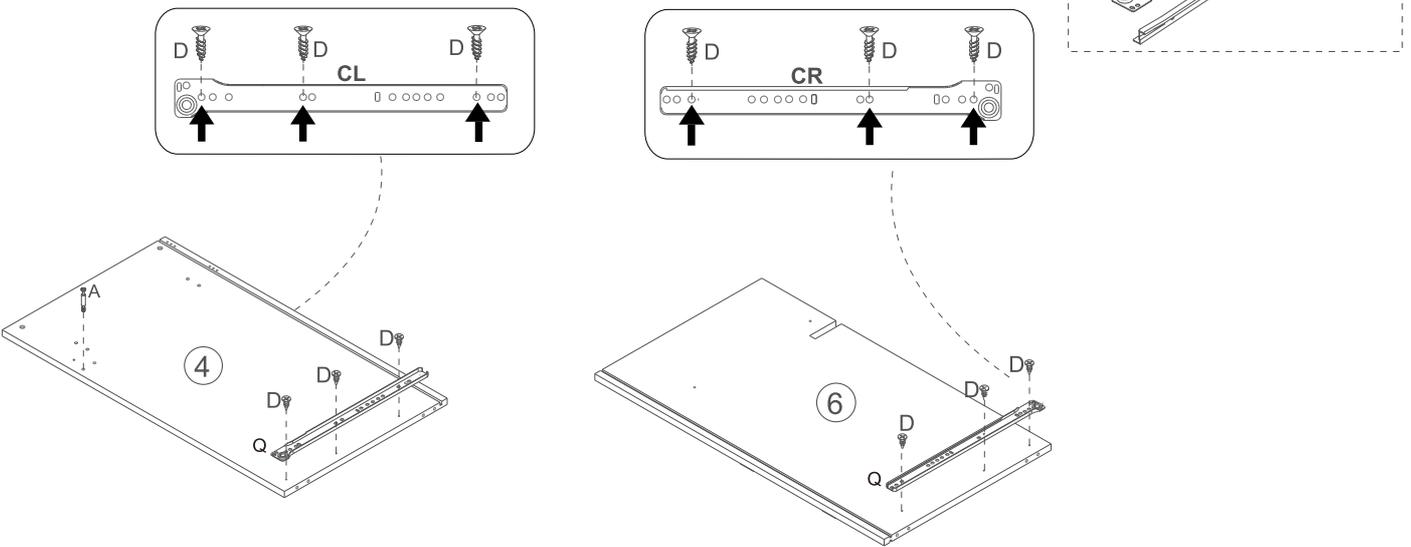



step 3

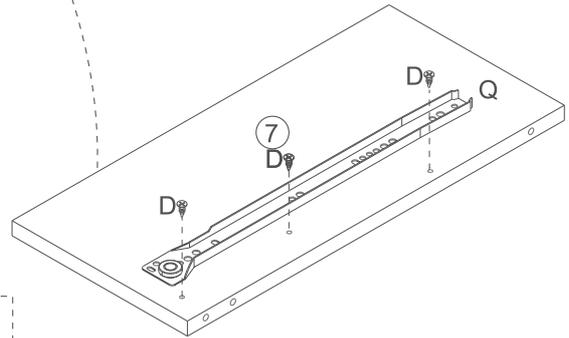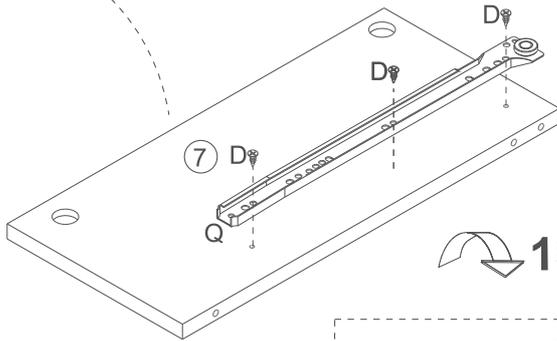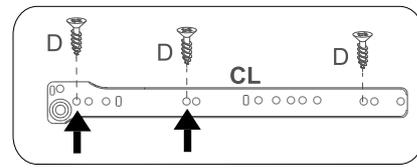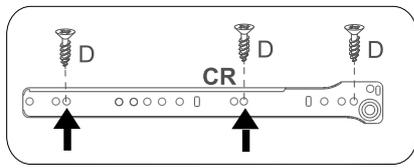





180°

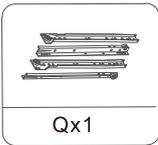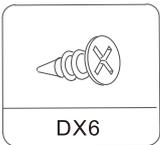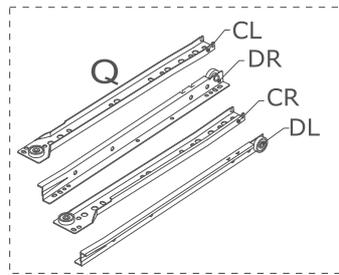




step 4

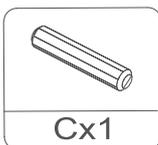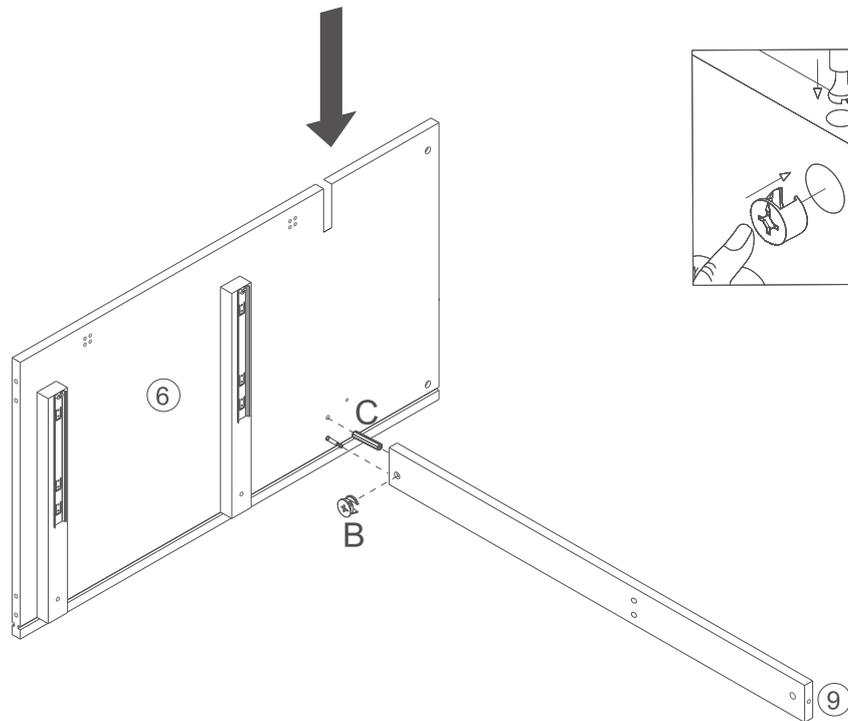




step 5

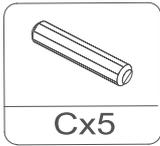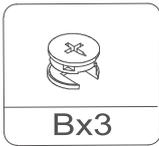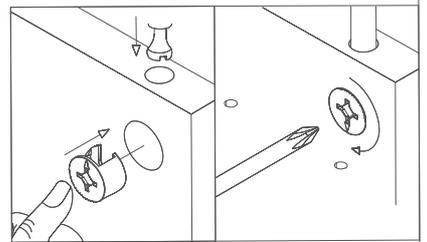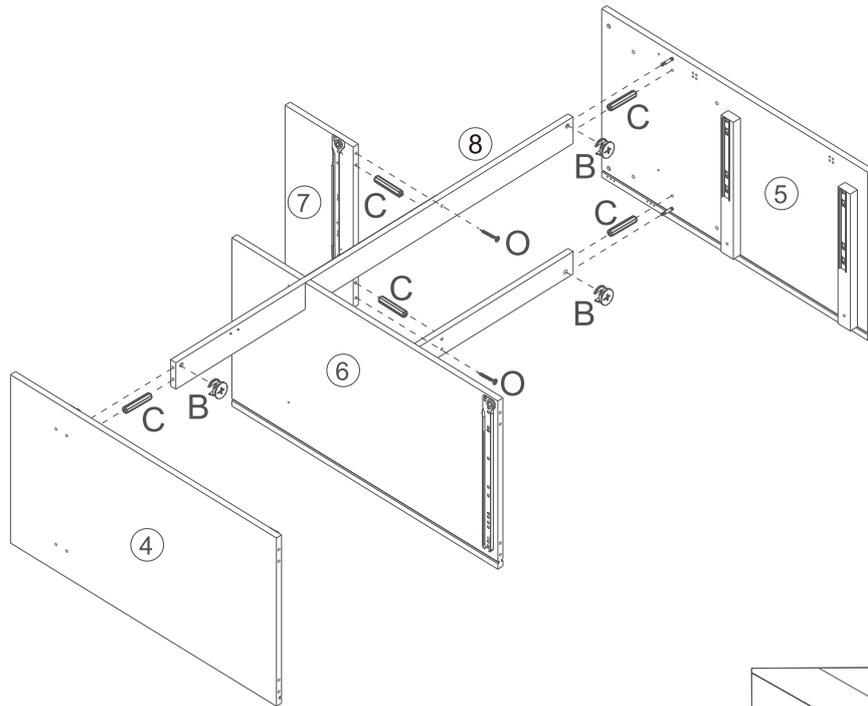





step 6

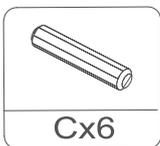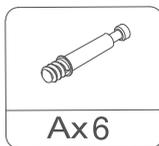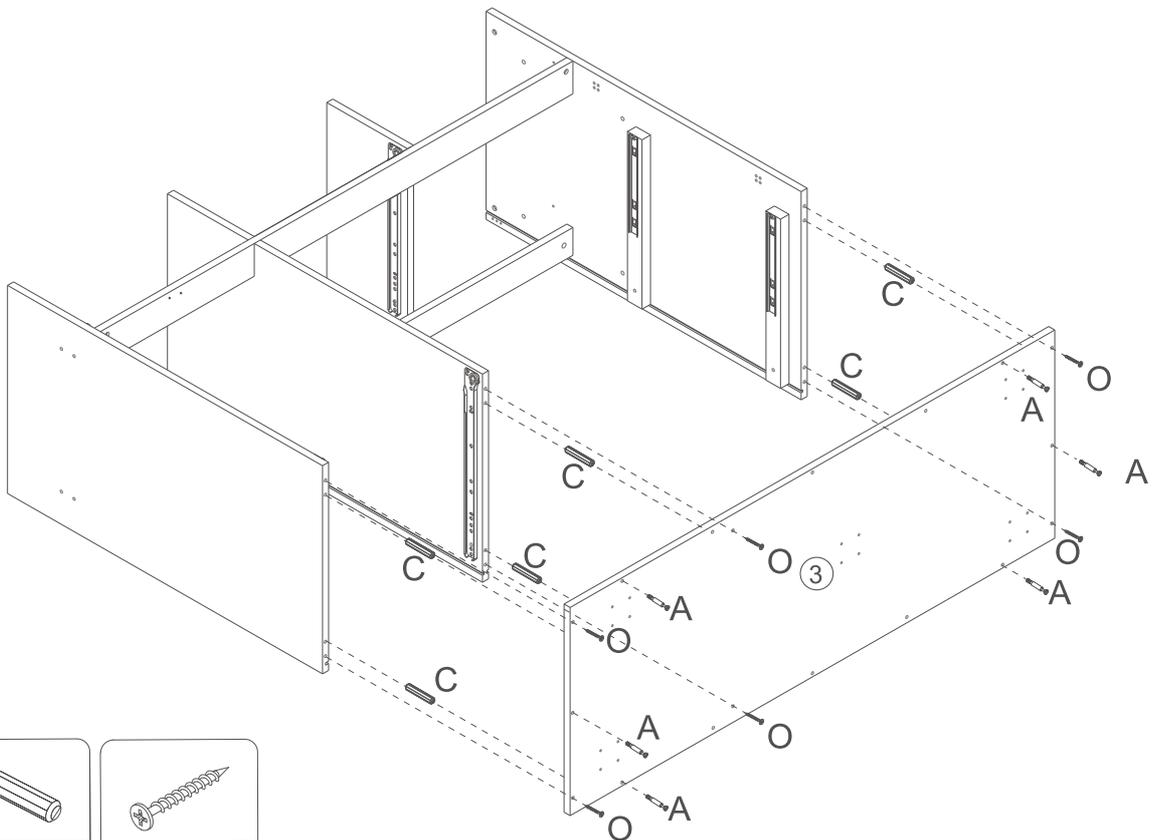


step 7

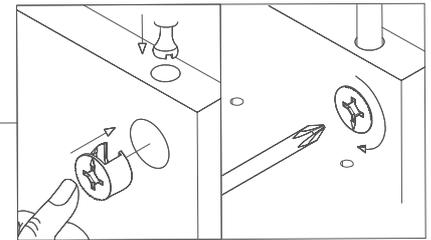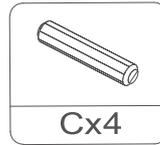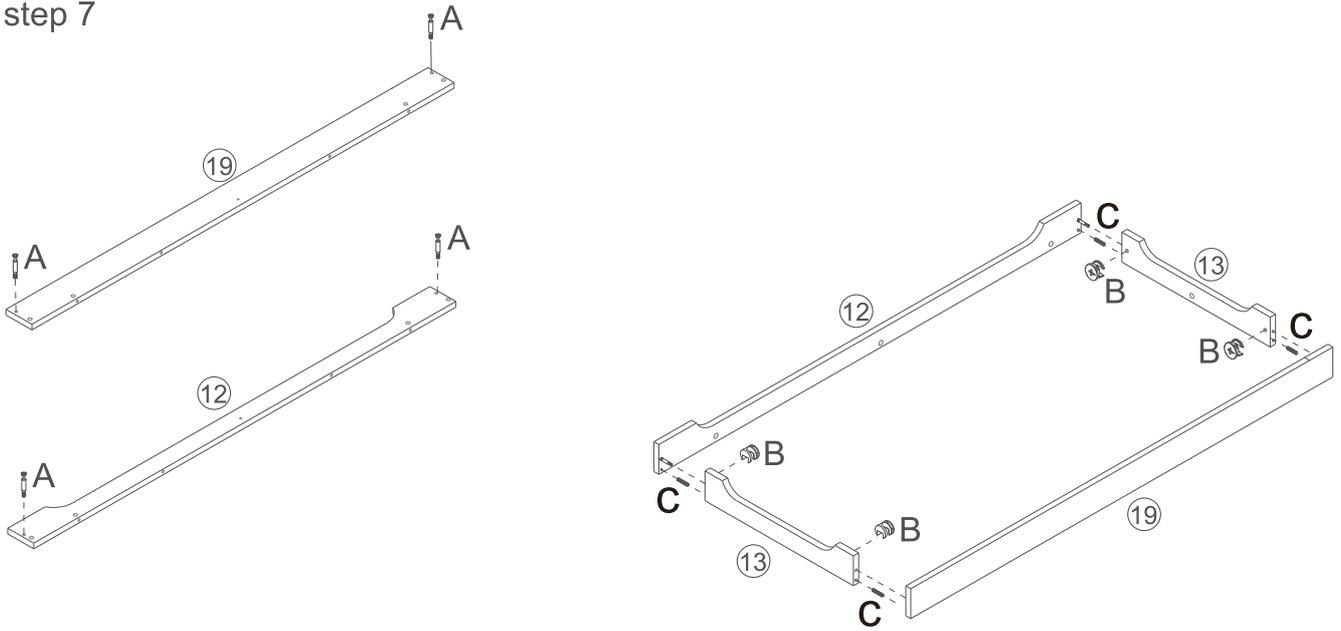




step 8

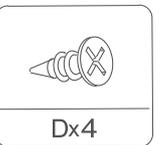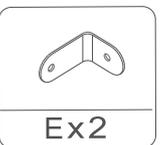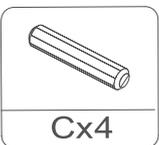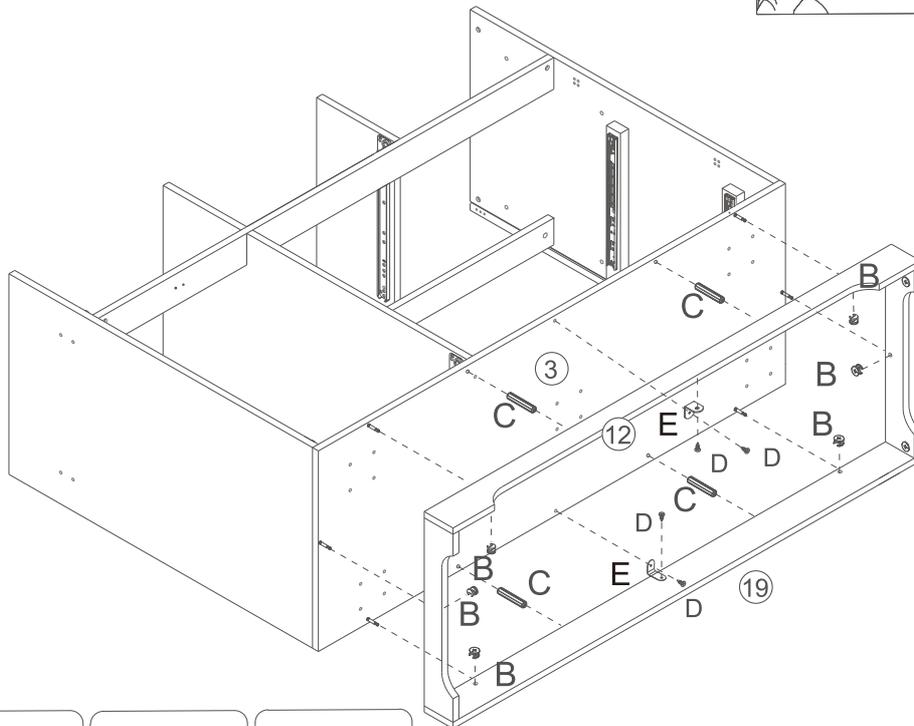



step 9

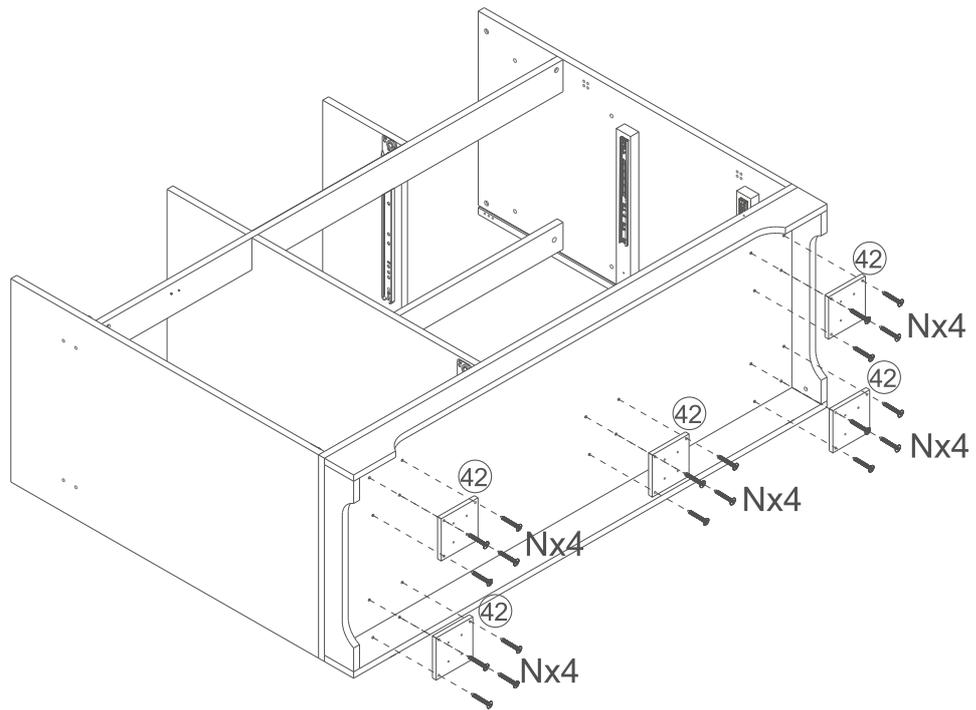





step 10

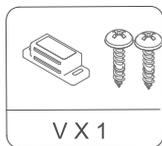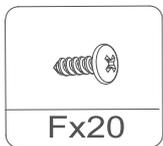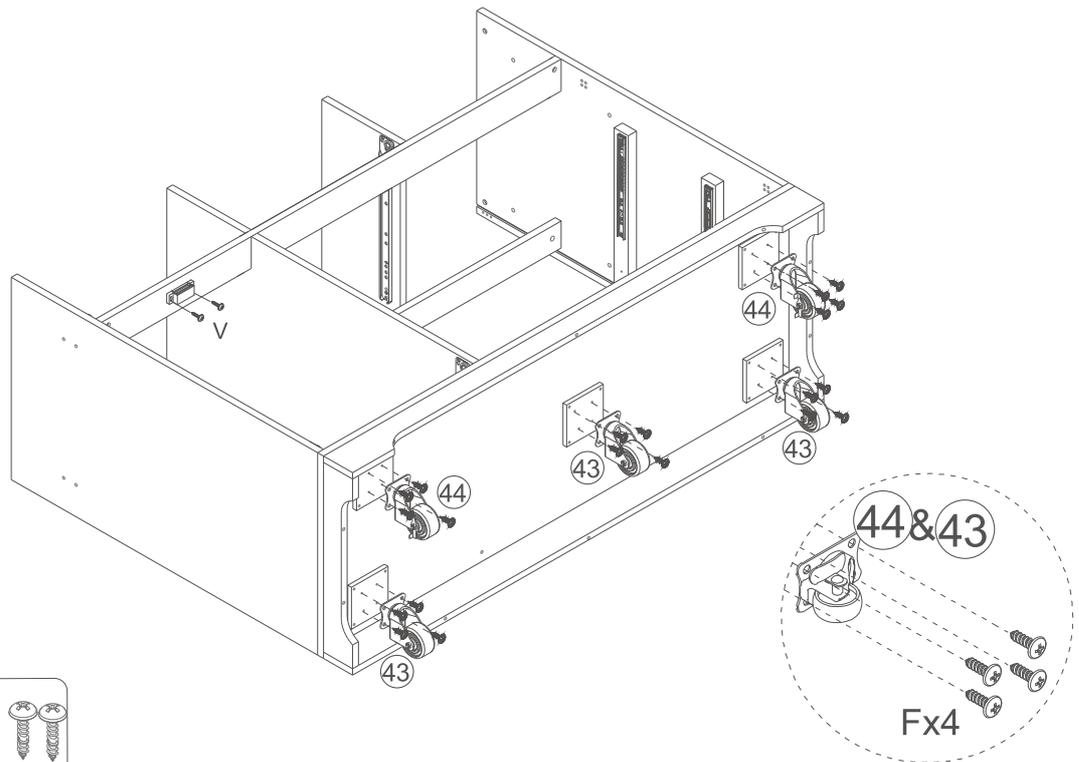



step 11

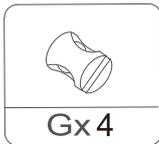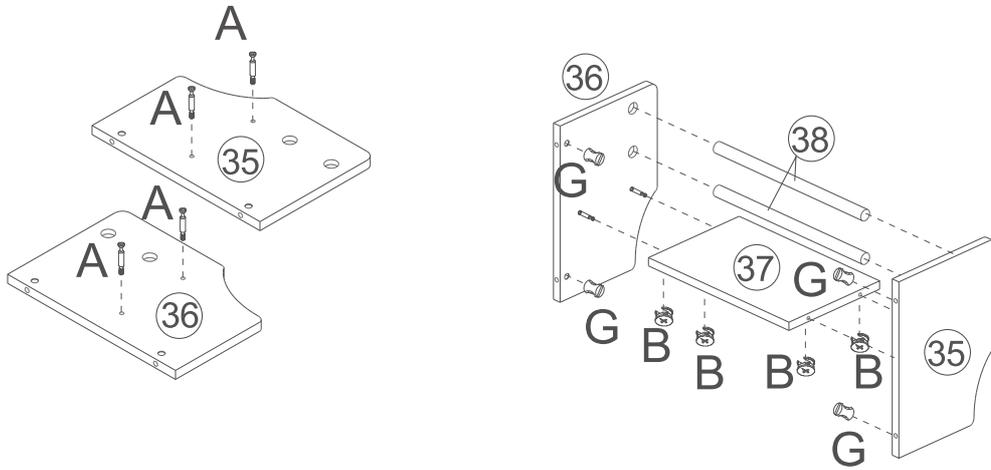



step 12

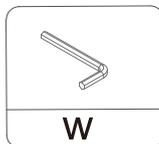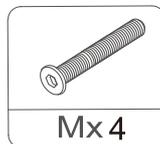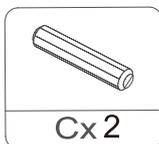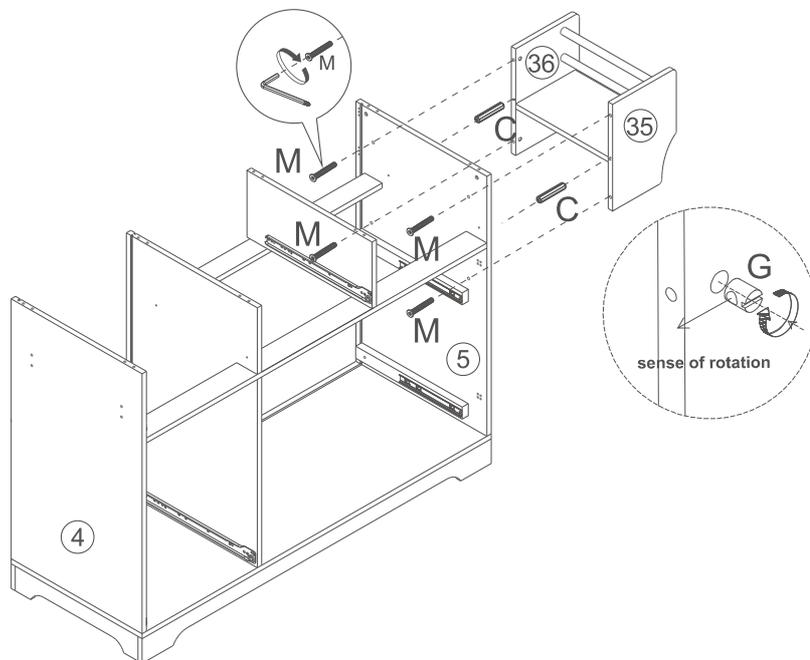


step 13

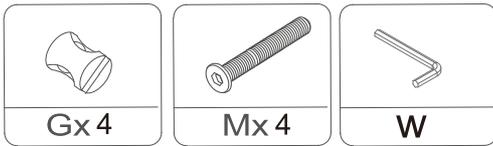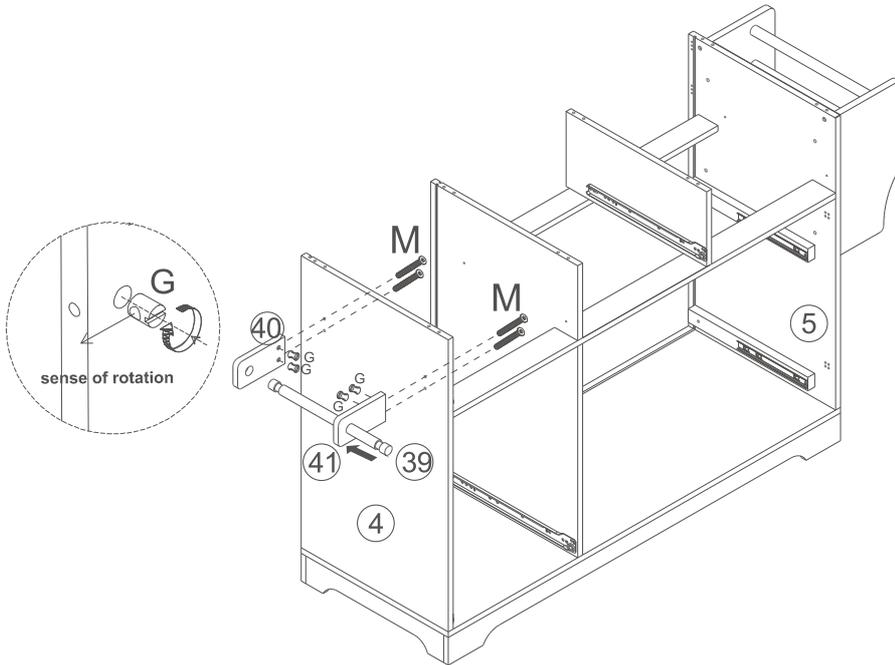


step 14

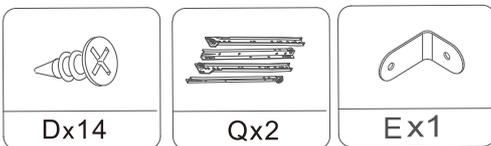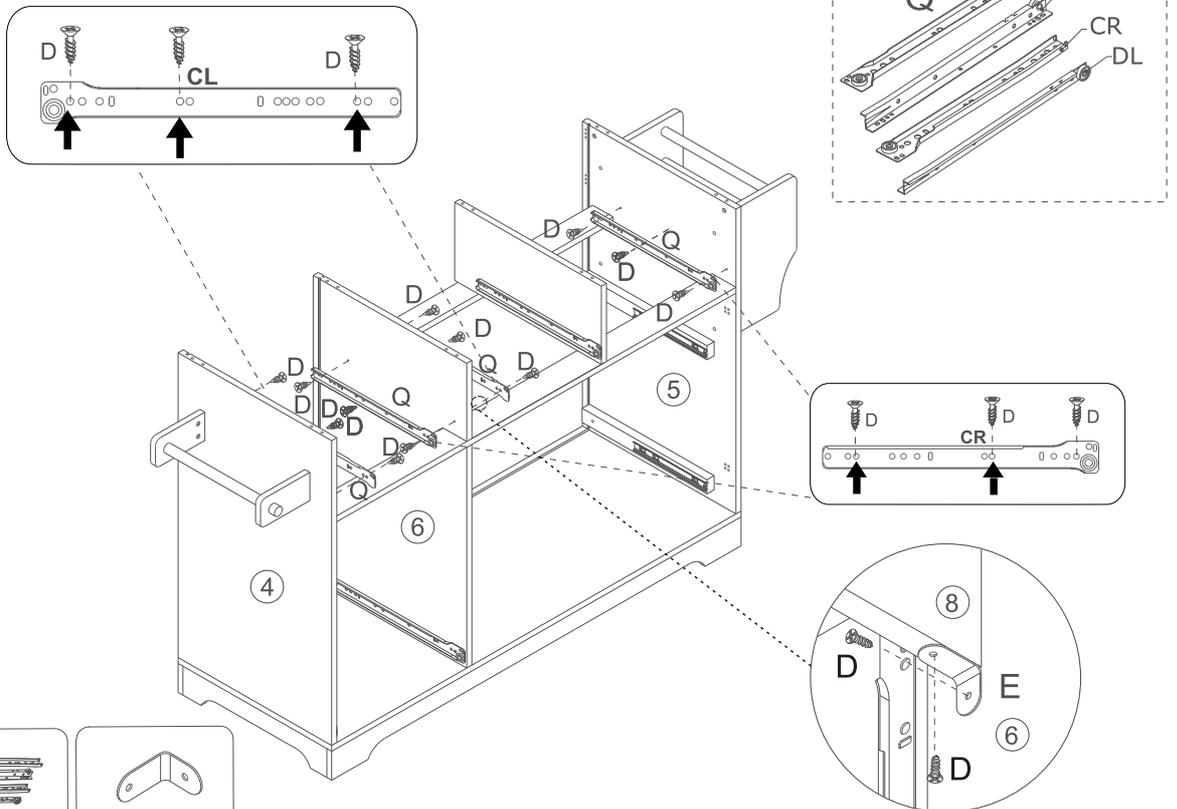




step 15

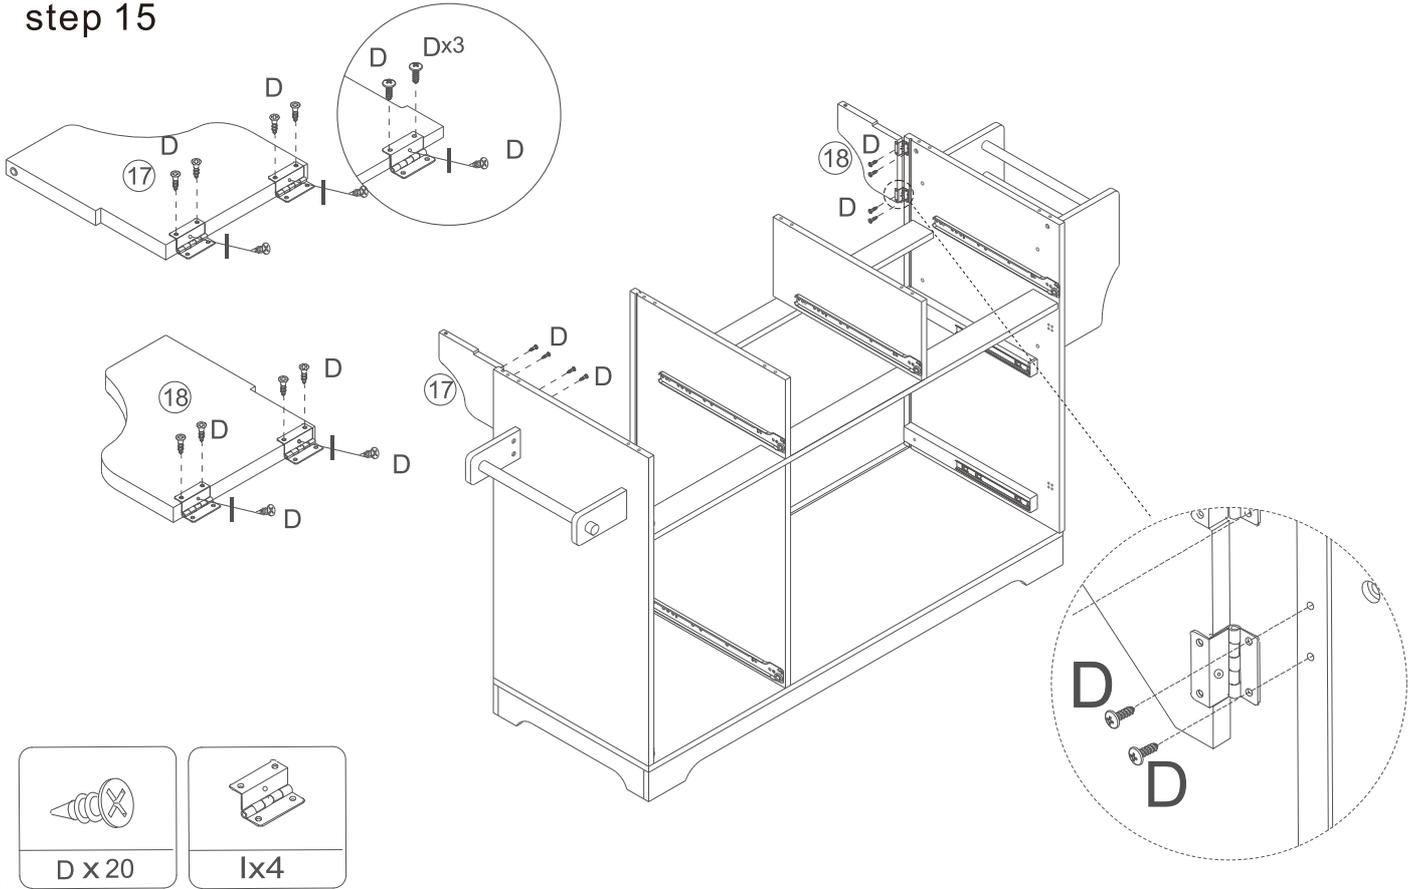





step 16

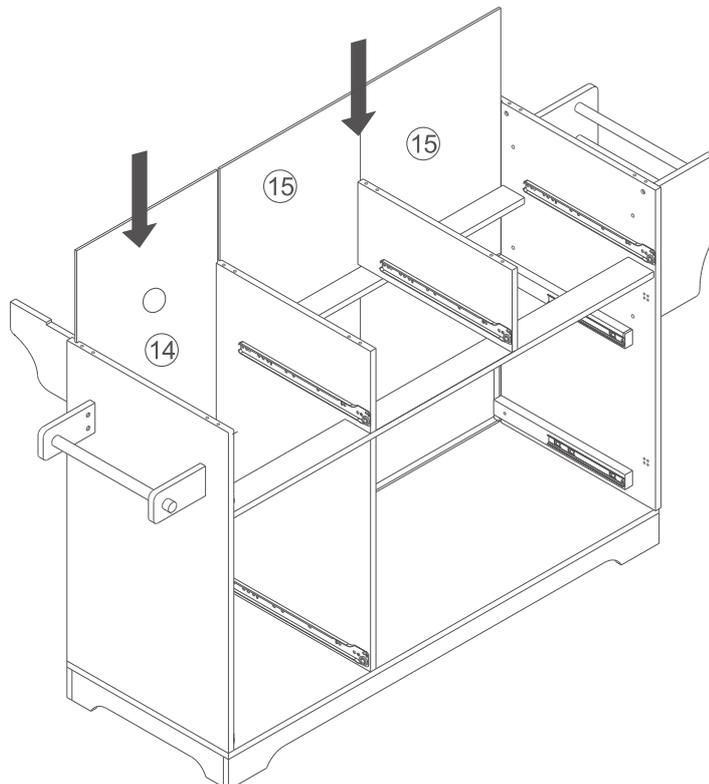



step 17

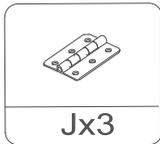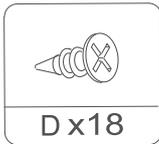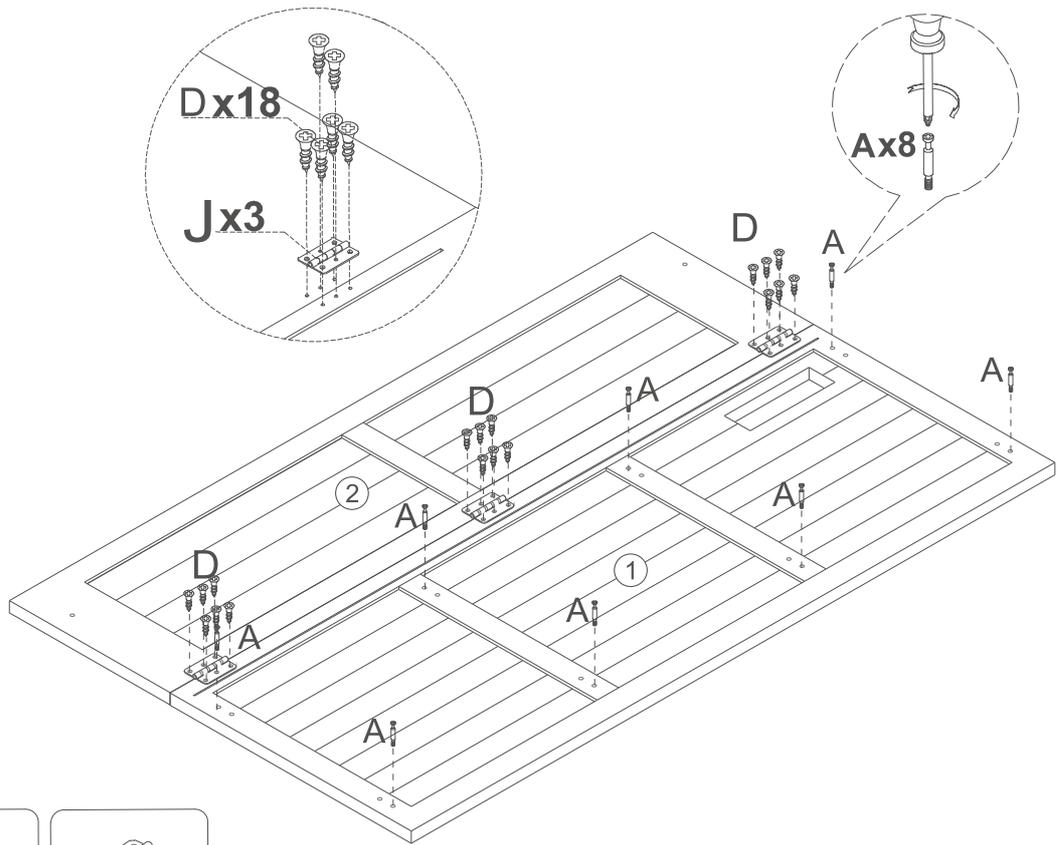




step 18

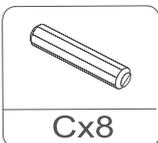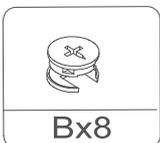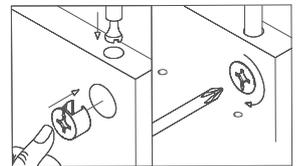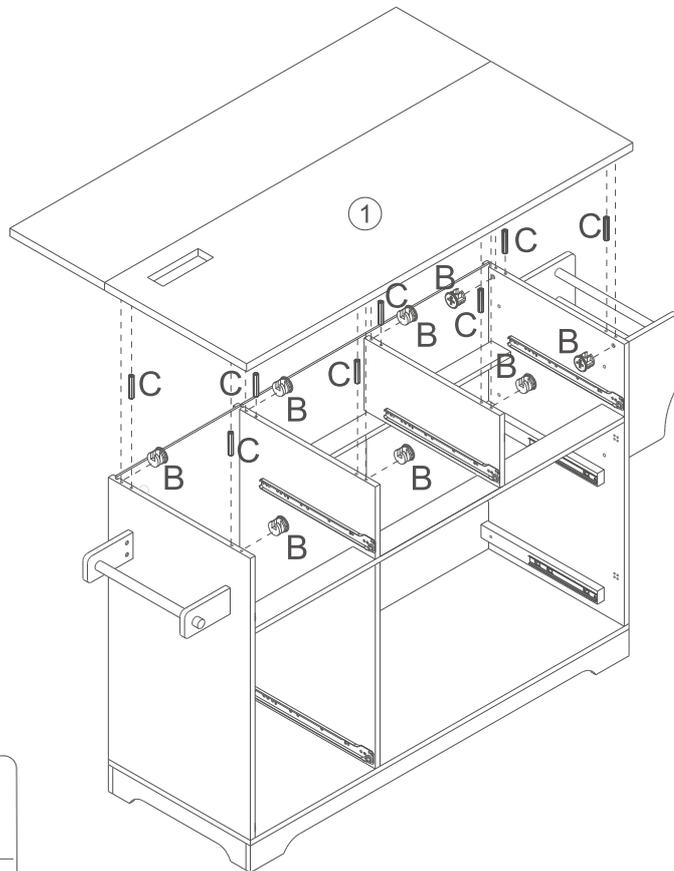



step 19

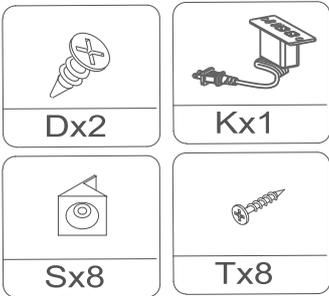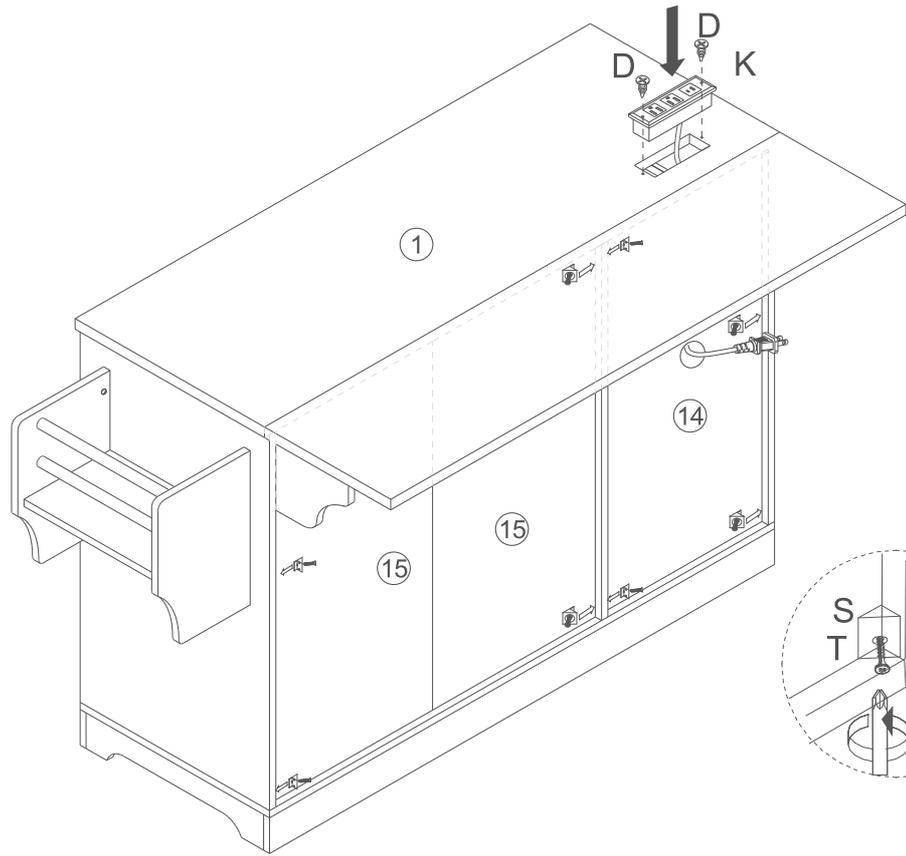





step 20

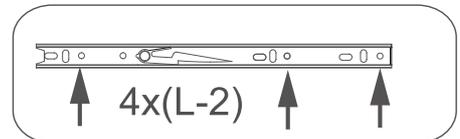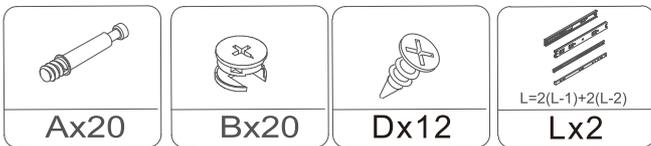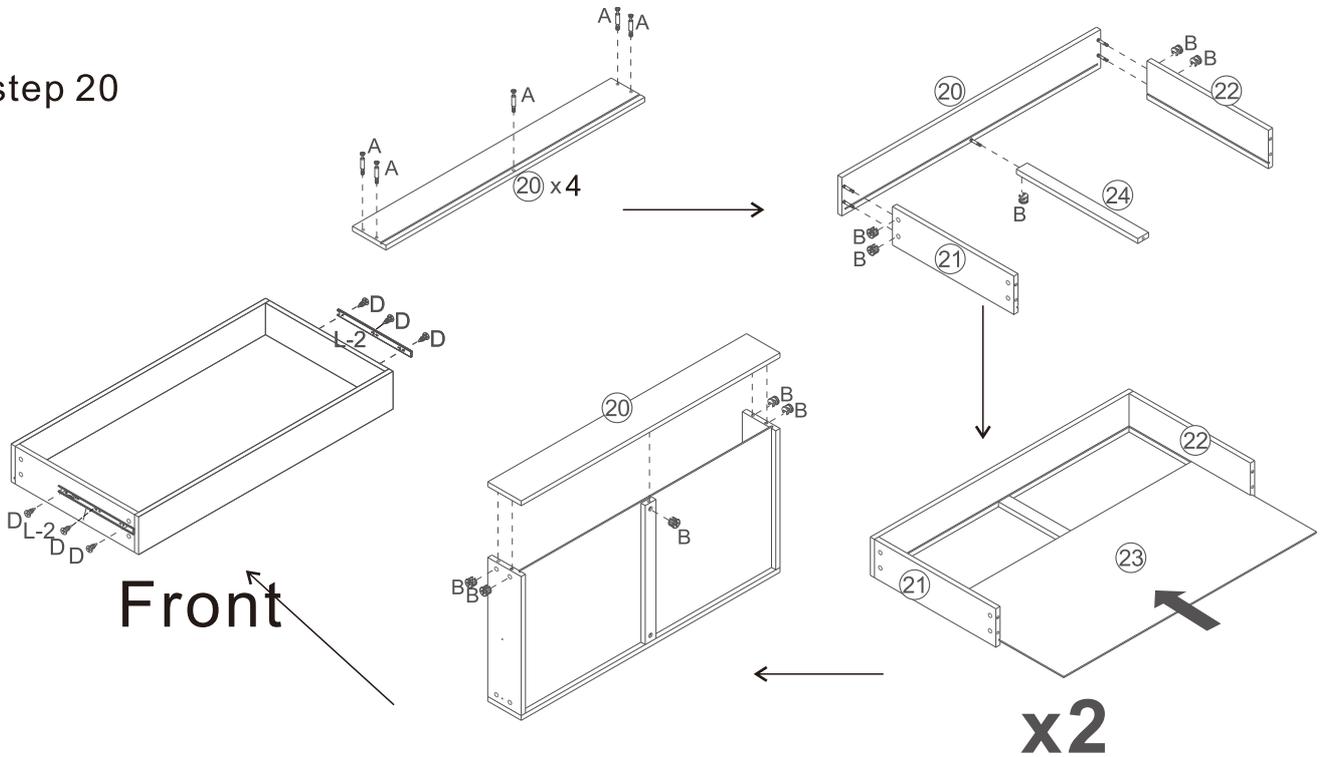



step 21

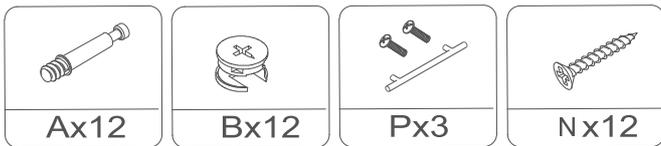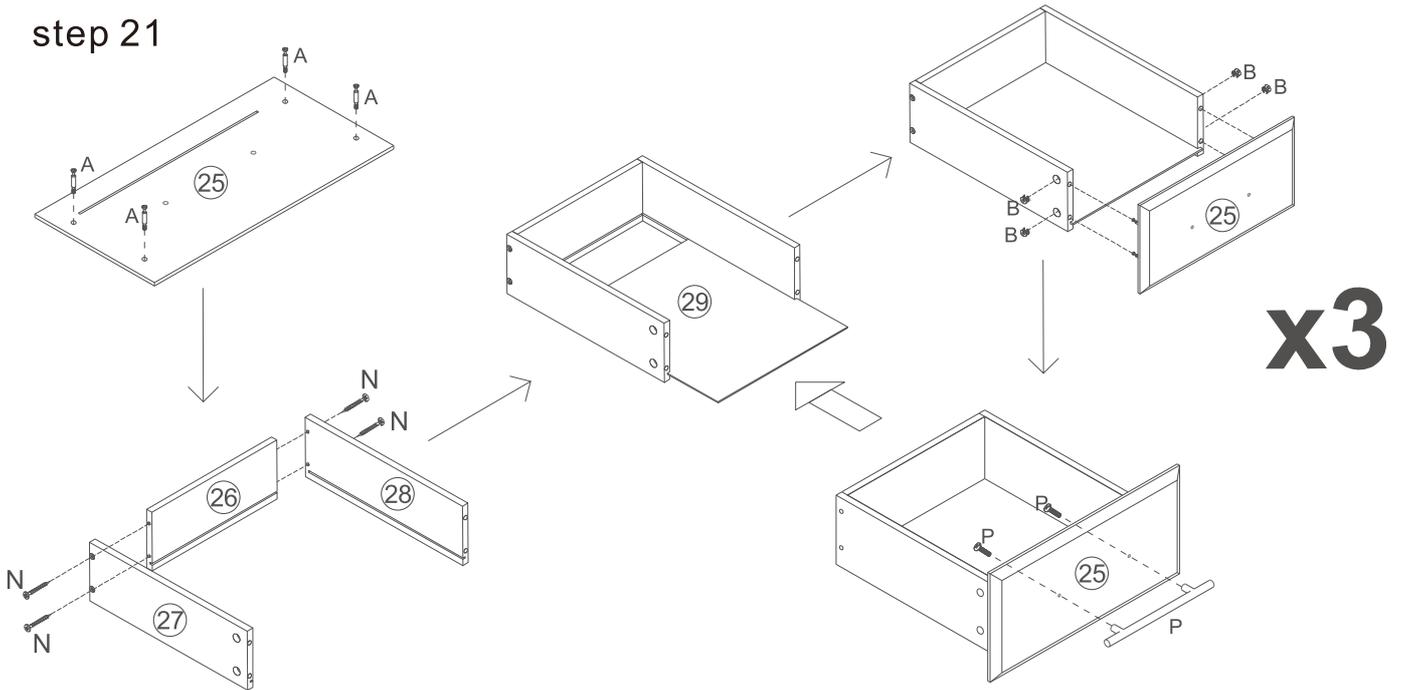





step 22

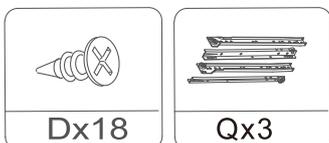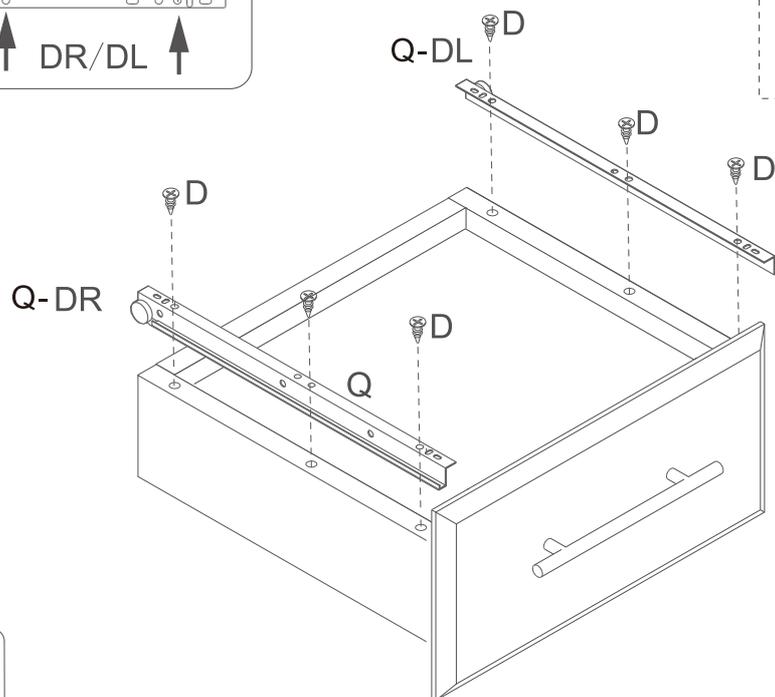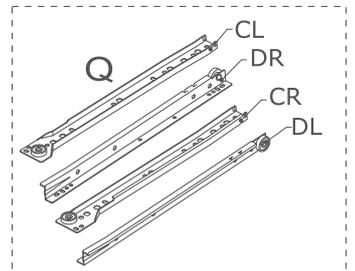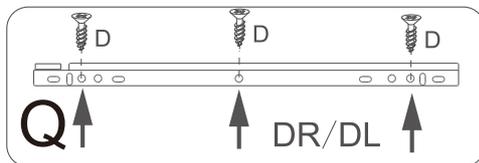



step 23

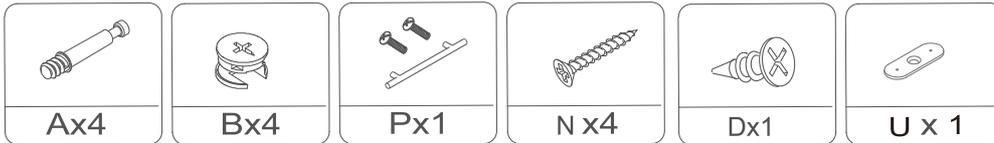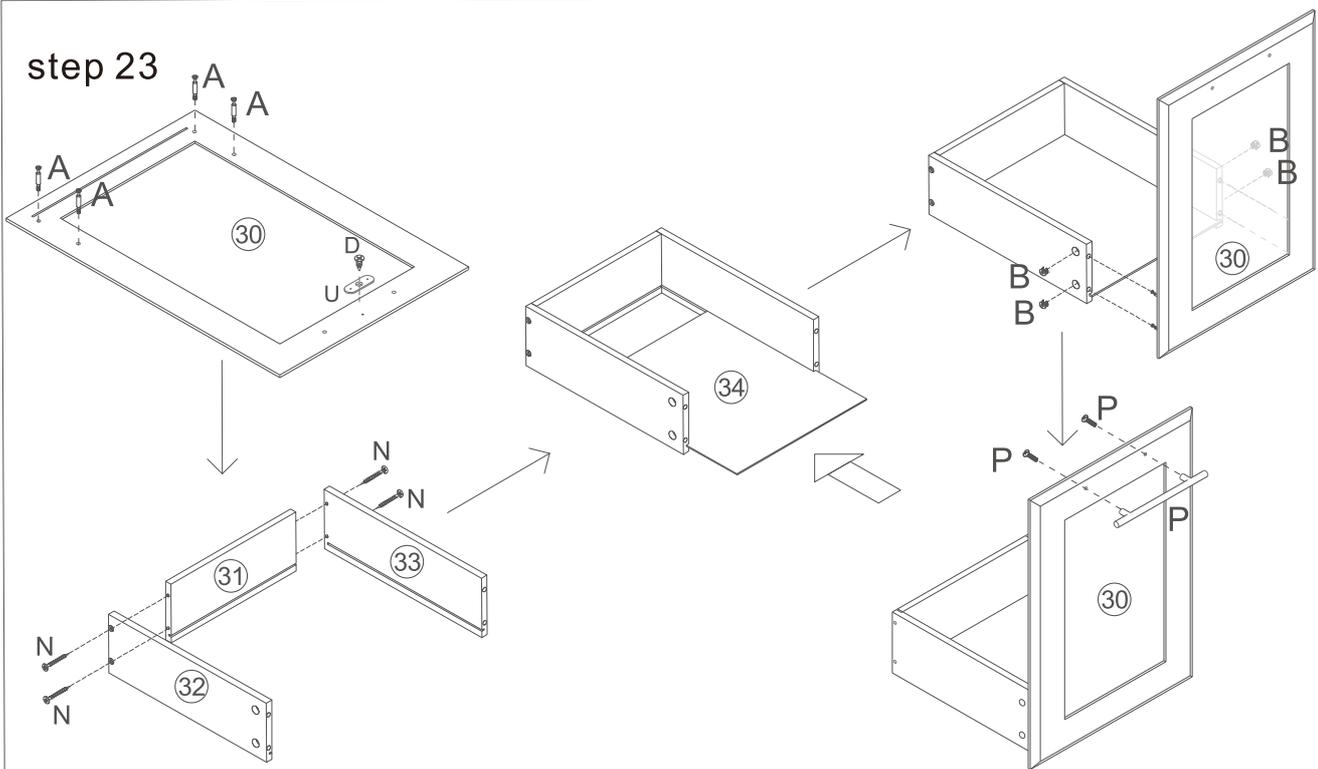



step 24

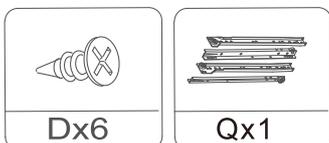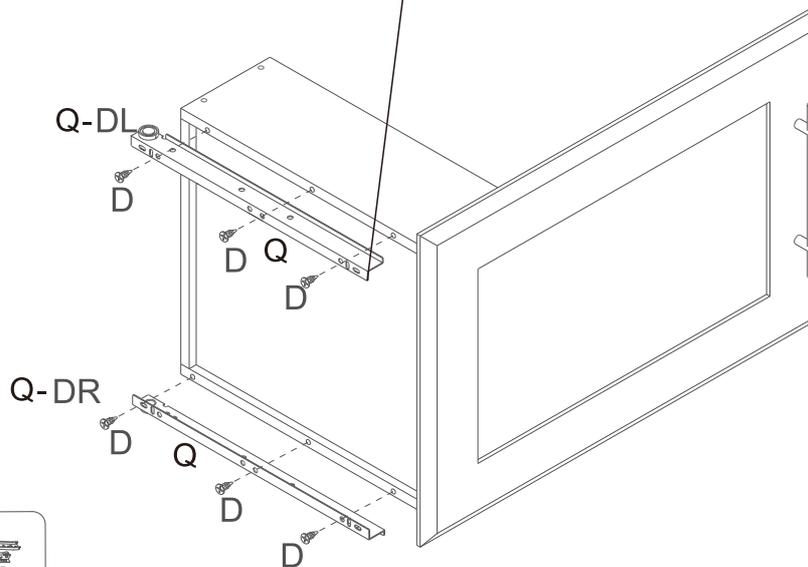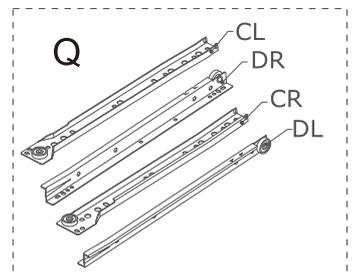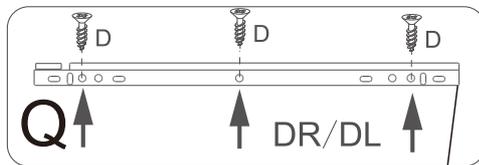







step 25

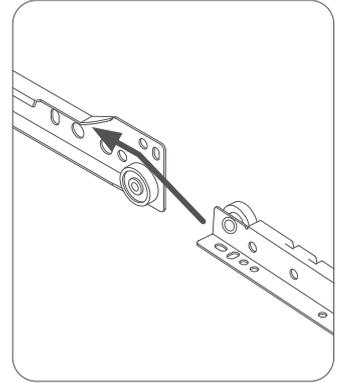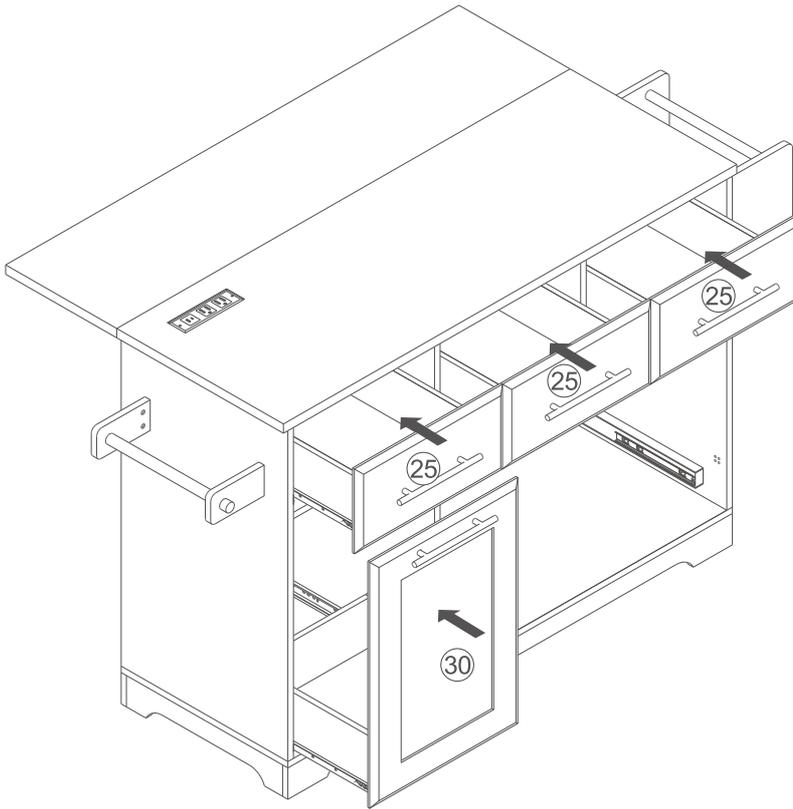




step 26

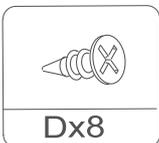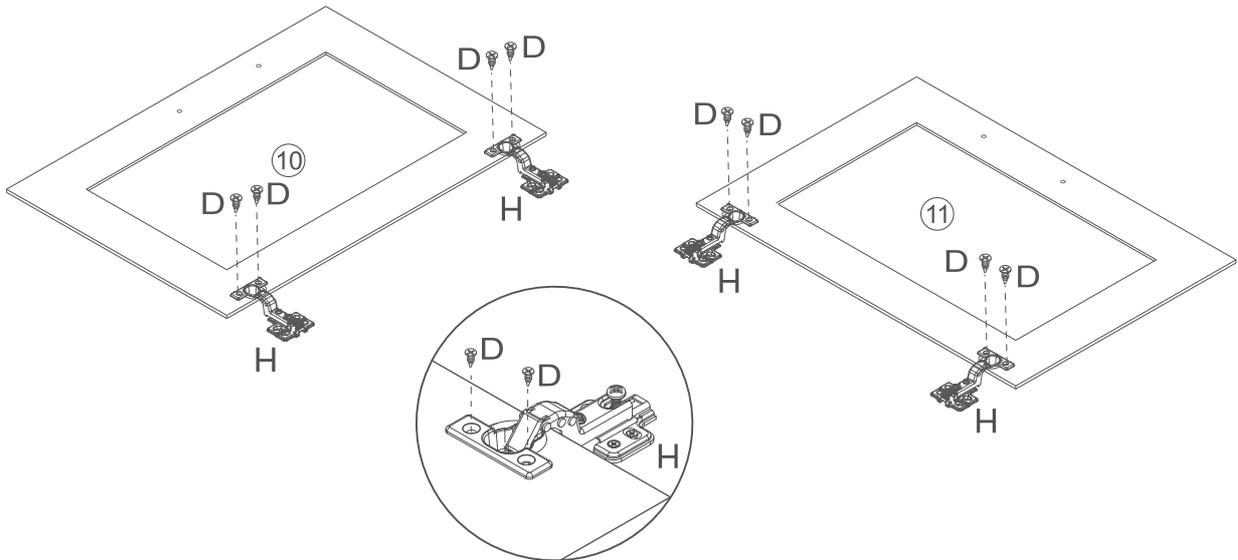


step 27

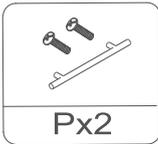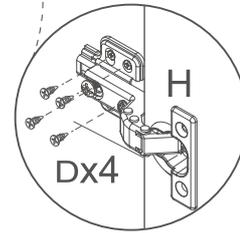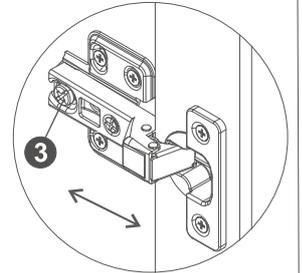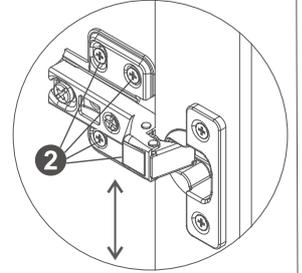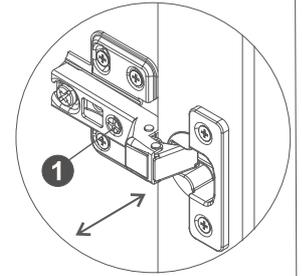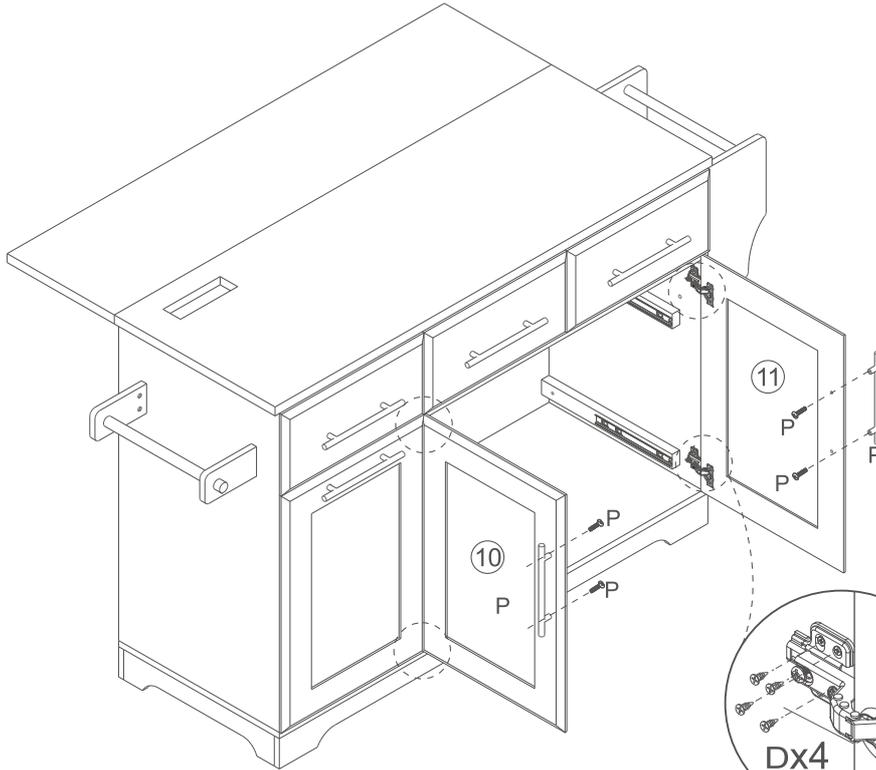

step 28

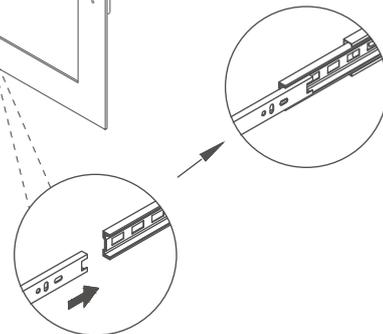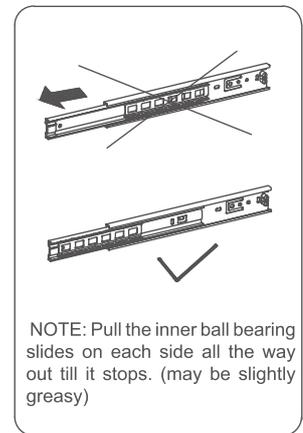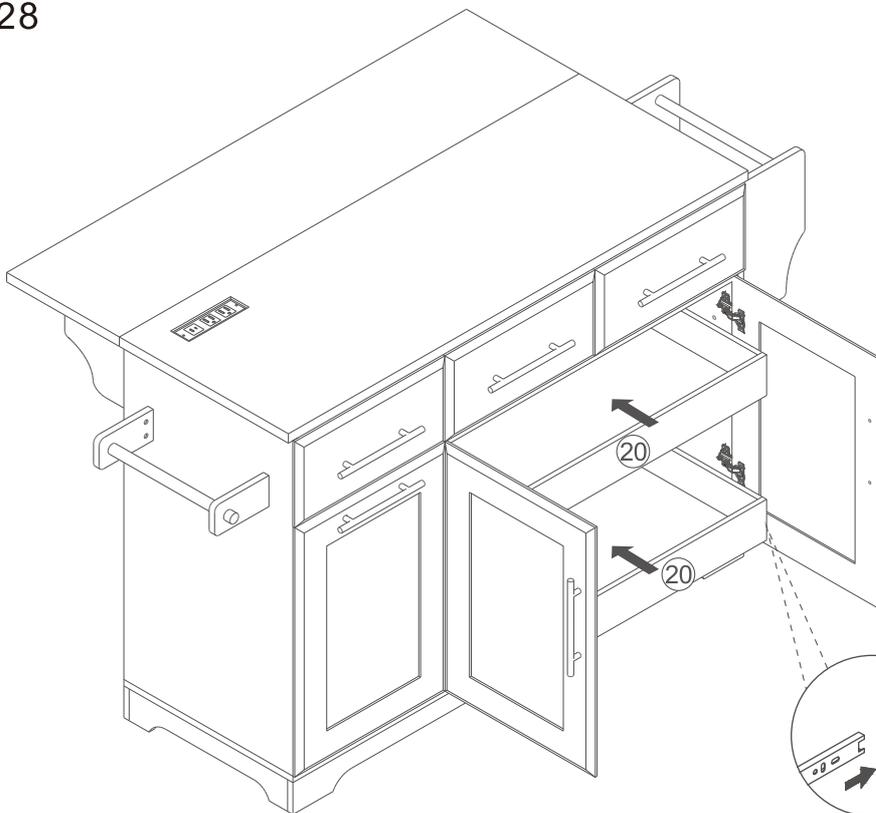


step 29

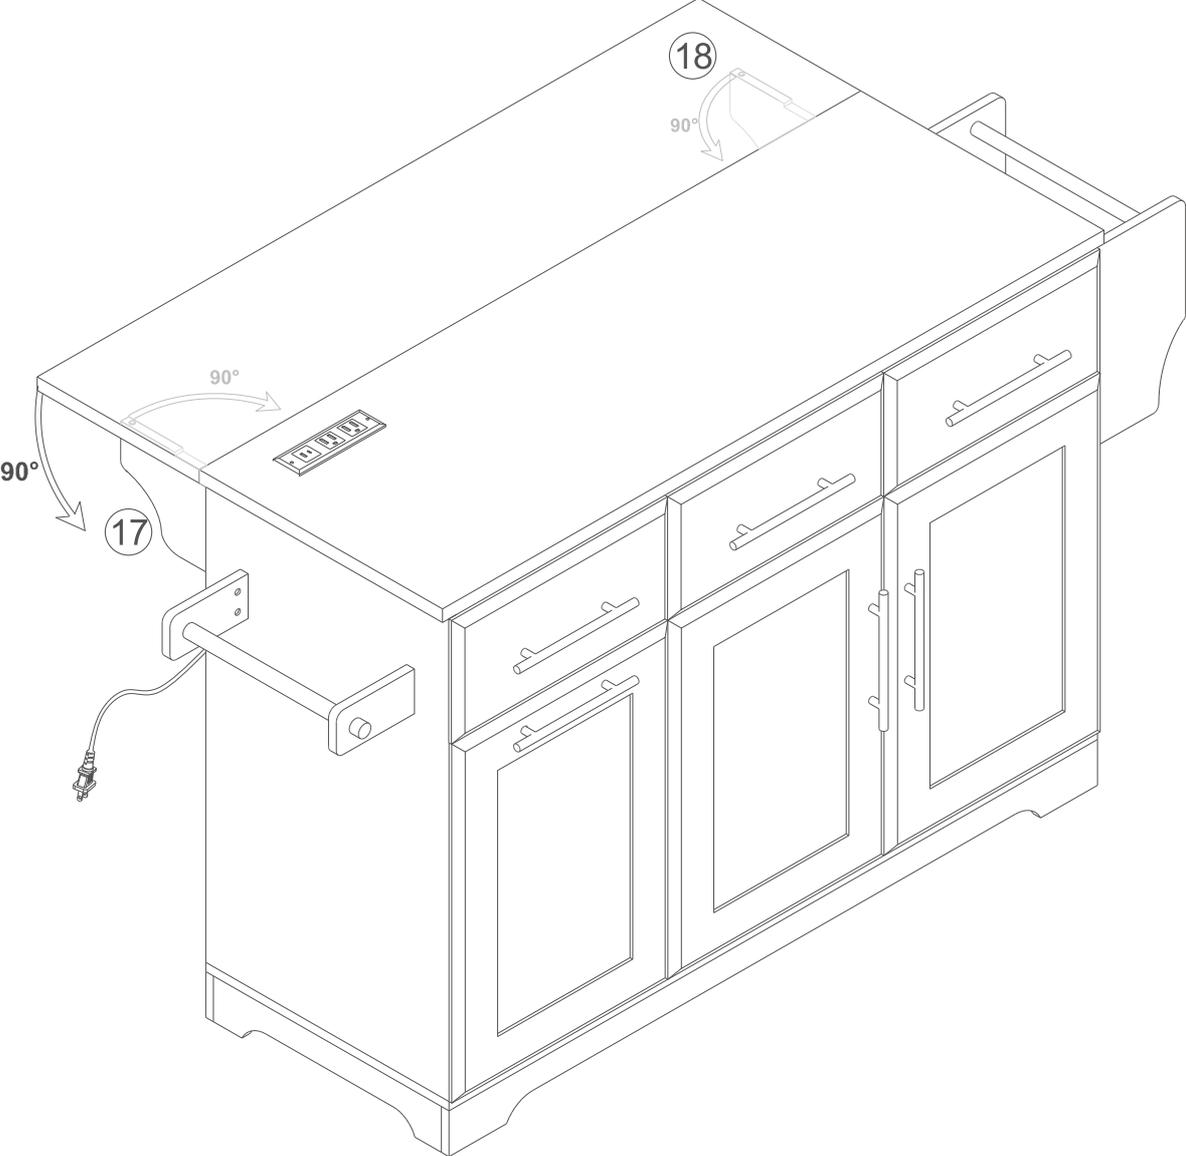

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door

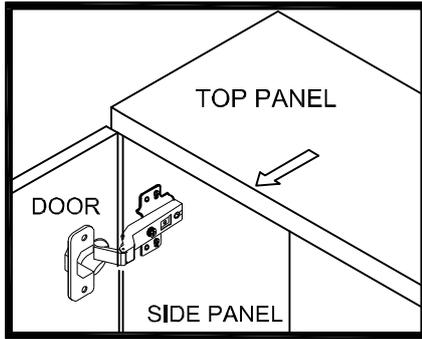


STEP 2

Adjust the gap between door panel and side panel

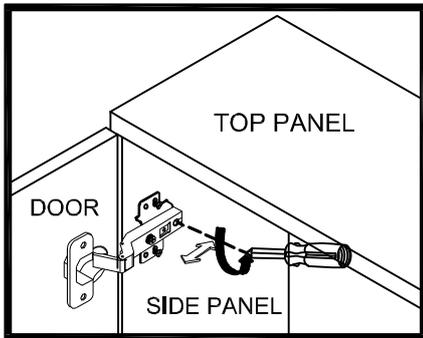


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

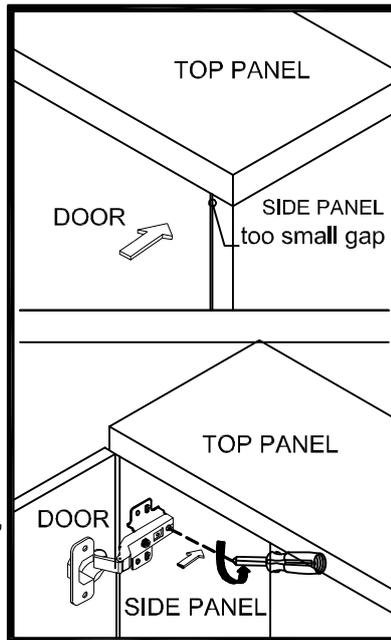

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

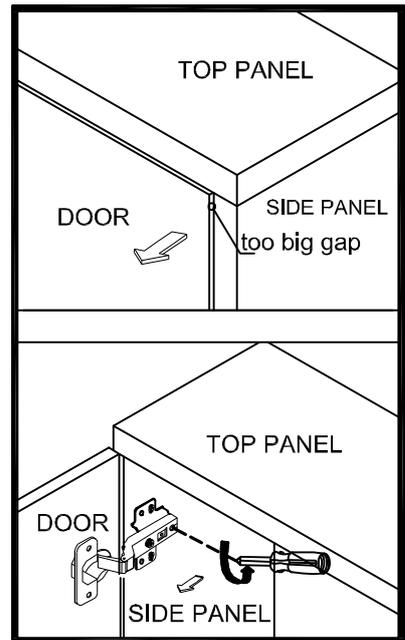

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

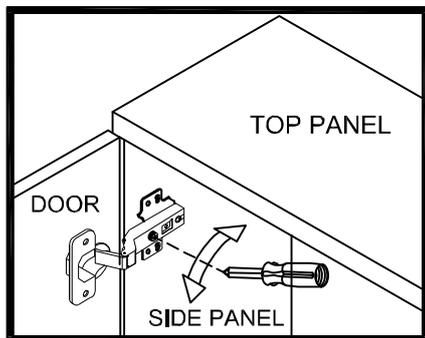


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

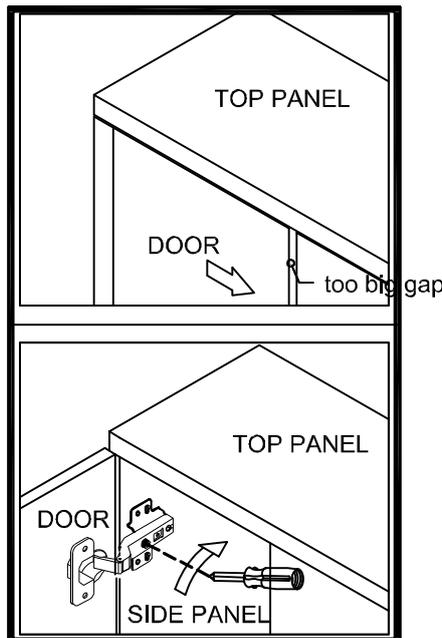

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

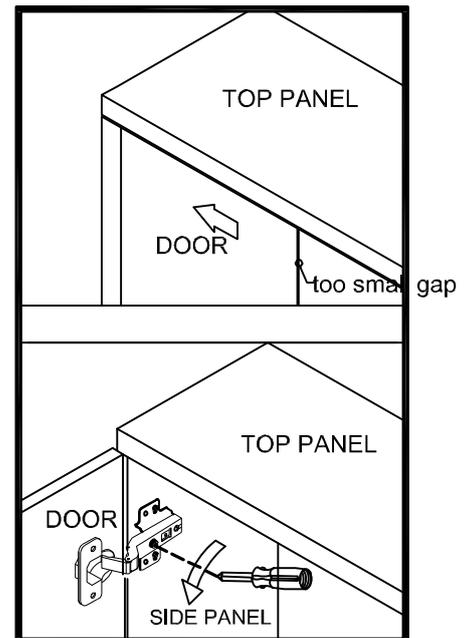

Turn the screw counterclockwise a little as shown to make the gap big.