


Kitchen Island Carts

Assembly Instructions - Please keep for future reference

N707P404532
N707P404533

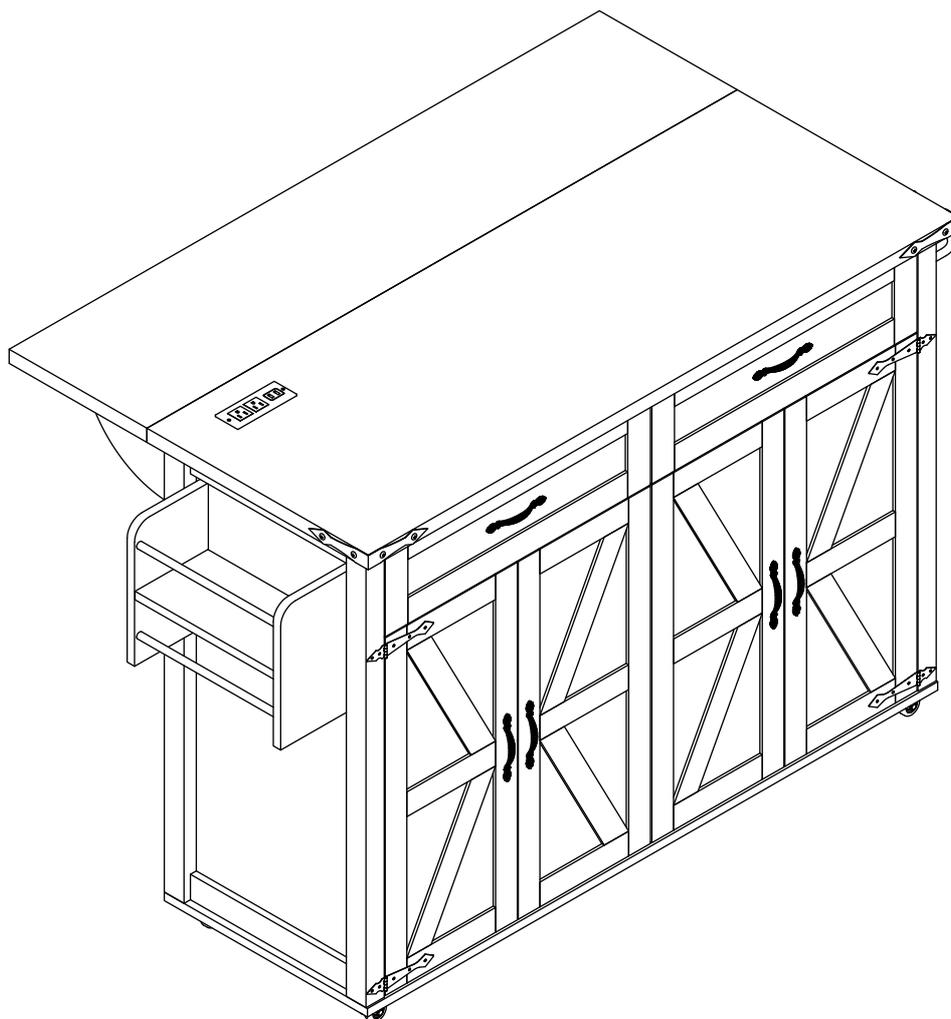

Dimensions

Width-47.2inch

Depth-17.7inch+11inch

Height-36.2inch

Important – Please read these instructions fully before starting assembly

Issue 1 - 12/21/25



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose












Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
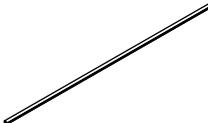
<p>(A)</p>  <p>Cam Bolt x 26</p>	<p>(B)</p>  <p>Cam lock x 26</p>	<p>(C)</p>  <p>8*30mm Dowel x 18</p>	<p>(D)</p>  <p>4*35mm Screw x 10</p>
<p>(E)</p>  <p>4*25mm Screw x 8</p>	<p>(F)</p>  <p>Hold hands x 6</p>	<p>(G)</p>  <p>4*16mm Screw x 8</p>	<p>(H)</p>  <p>6*50mm Bolt x 2</p>
<p>(I)</p>  <p>75*75*22mm x 2</p>	<p>(J)</p>  <p>Tergite x 2</p>	<p>(K)</p>  <p>Caster x 3</p>	<p>(L)</p>  <p>Locking caster x 2</p>
<p>(M)</p>  <p>4*14mm Screw x 28</p>	<p>(N)</p>  <p>hinge x 7</p>	<p>(O)</p>  <p>Pivot x 8</p>	<p>(P)</p>  <p>hinge x 4</p>
<p>(Q)</p>  <p>26mm x 4</p>	<p>(R)</p>  <p>3*12mm Screw x 48</p>	<p>(S)</p>  <p>Pulley x 1</p>	<p>(T)</p>  <p>Screwdriver x 1</p>
<p>(U)</p>  <p>4*8mm Screw x 4</p>	<p>(V)</p>  <p>Magnetic impact x 2</p>	<p>(W)</p>  <p>Suction sheet x 4</p>	<p>(X)</p>  <p>6*14mm Screw x 20</p>
<p>(CR)</p>  <p>Runner 300mm x 2</p>	<p>(CL)</p>  <p>Runner 300mm x 2</p>	<p>(DR)</p>  <p>Runner 300mm x 2</p>	<p>(DL)</p>  <p>Runner 300mm x 2</p>
<p>(Y)</p>  <p>3*12mm Screw x 42</p>	<p>(Z)</p>  <p>Allen Wrench x 1</p>		

Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

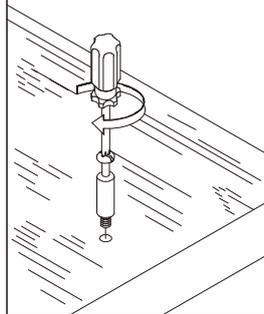

Step 2

Push the male camlock into the entry hole.

2

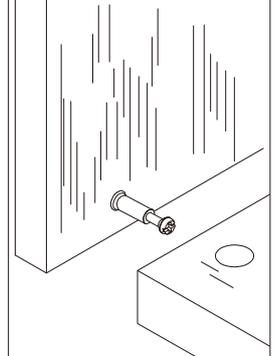


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

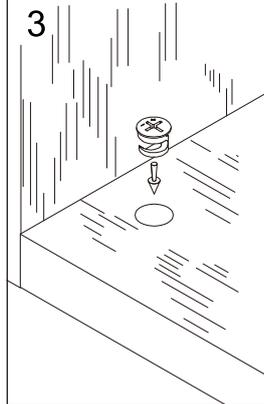


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4






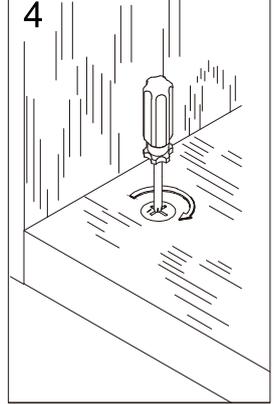


Assembly Instructions








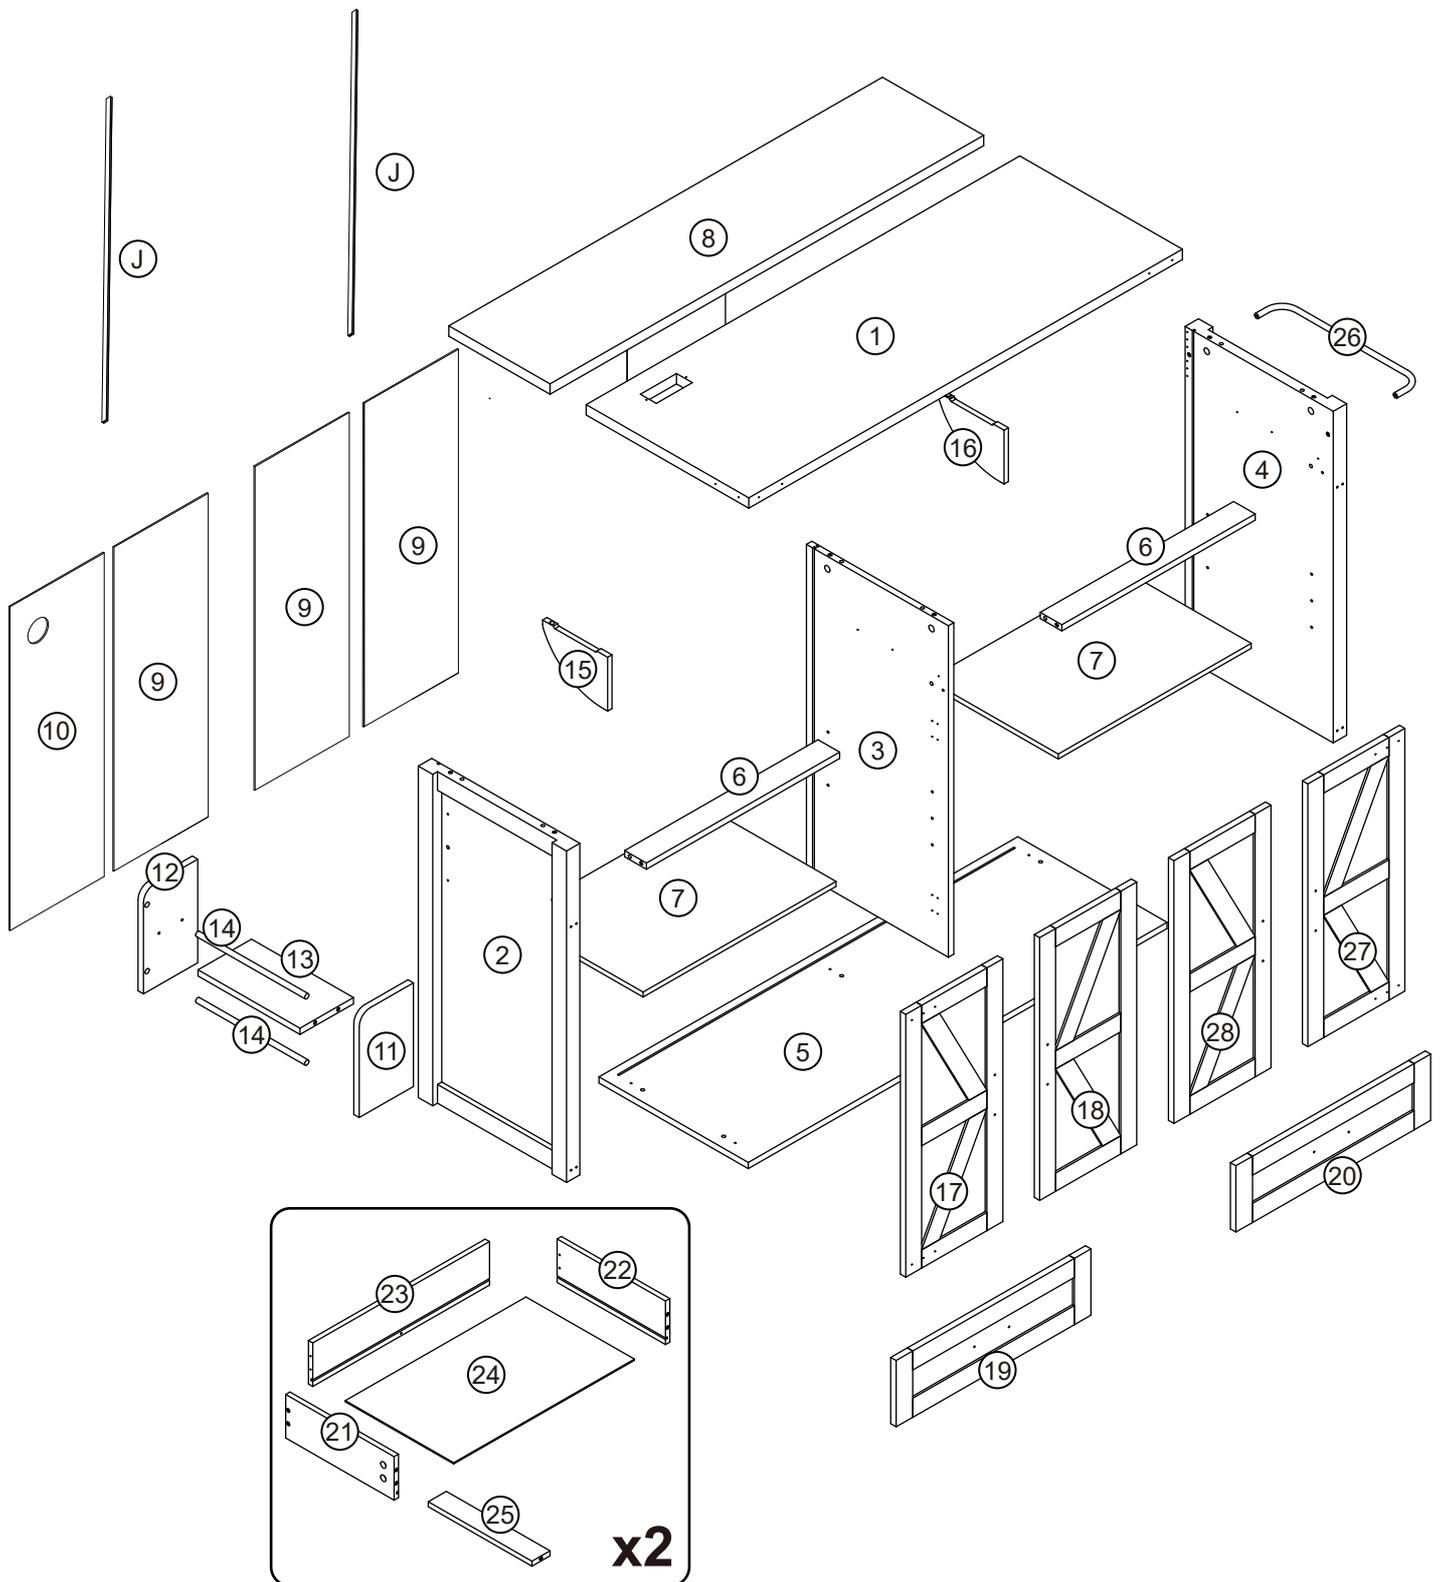


Assembly Instructi















Parts In N707P404532

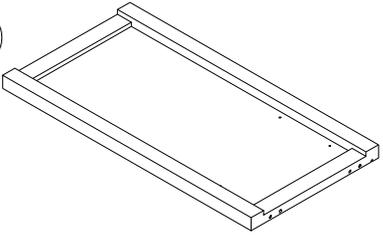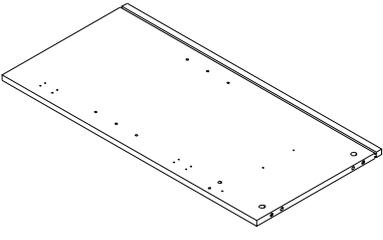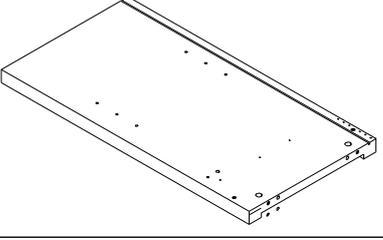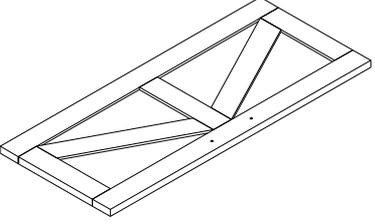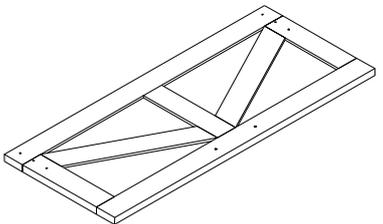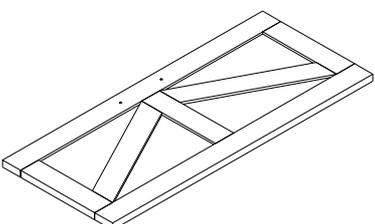 ② 1	 ③ 1
 ④ 1	 ⑱ 1
 ⑳ 1	 ㉘ 1

Parts In N707P404533

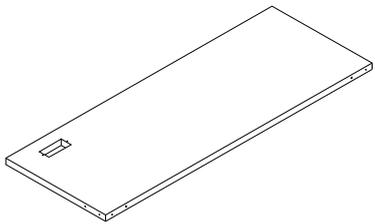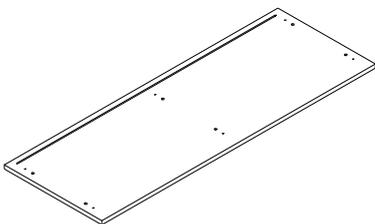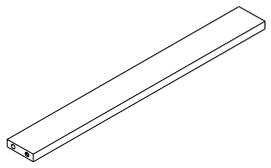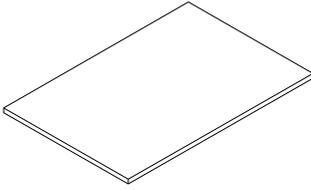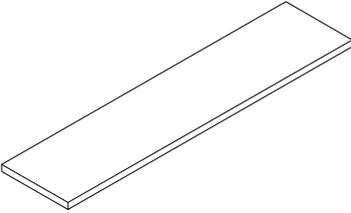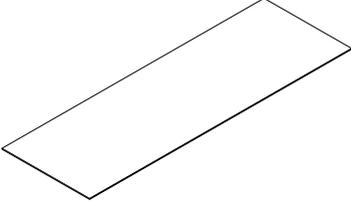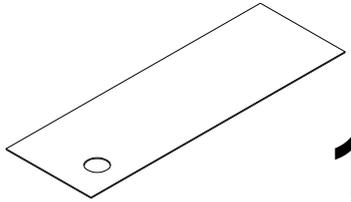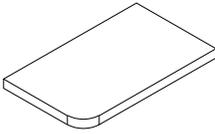
 ① 1	 ⑤ 1
 ⑥ 2	 ⑦ 2
 ⑧ 1	 ⑨ 3
 ⑩ 1	 ⑪ 1


Assembly Instructions

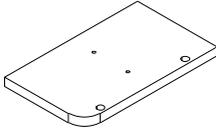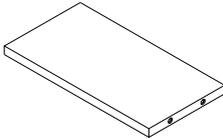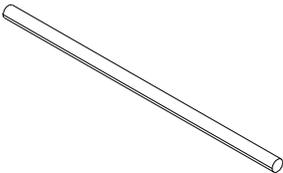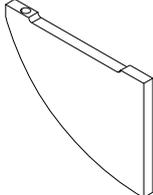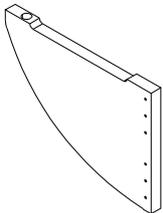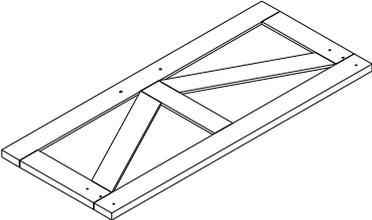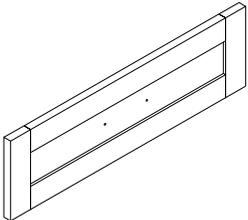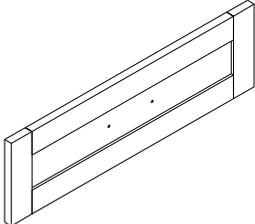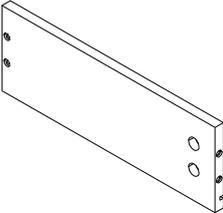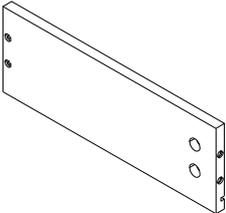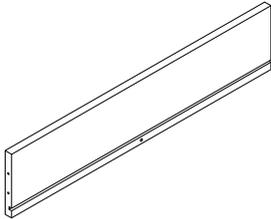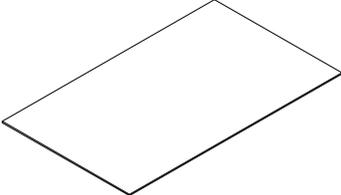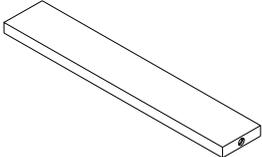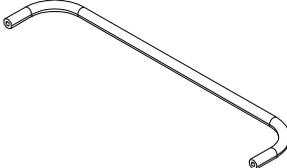12		1	13		1
14		2	15		1
16		1	17		1
19		1	20		1
21		2	22		2
23		2	24		2
25		2	26		1


Assembly Instructions


Step 1

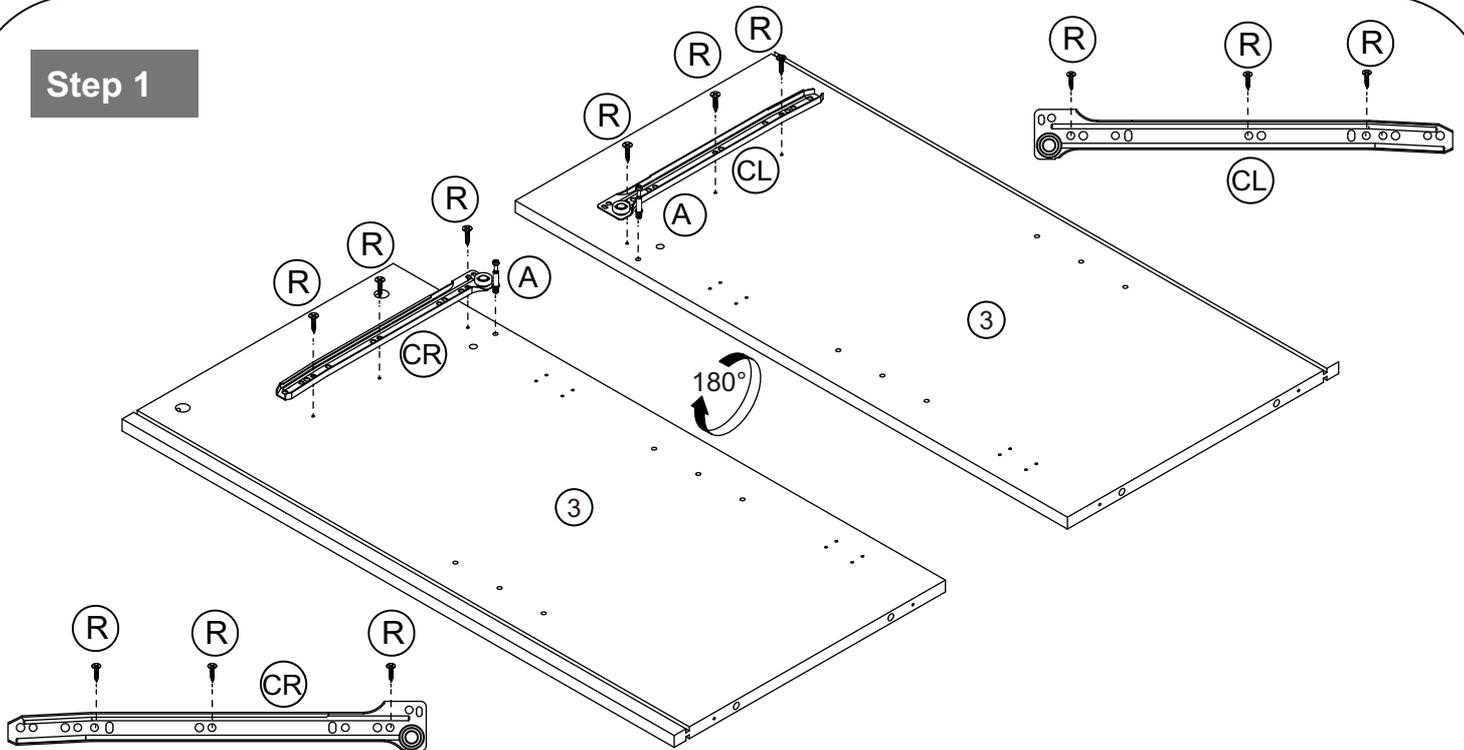

 <p>A Cam Bolt x 2</p>	 <p>R 3*12mm Screw x 6</p>	 <p>CL Runner 300mm x 1</p>	 <p>CR Runner 300mm x 1</p>
--	--	--	---


Step 2

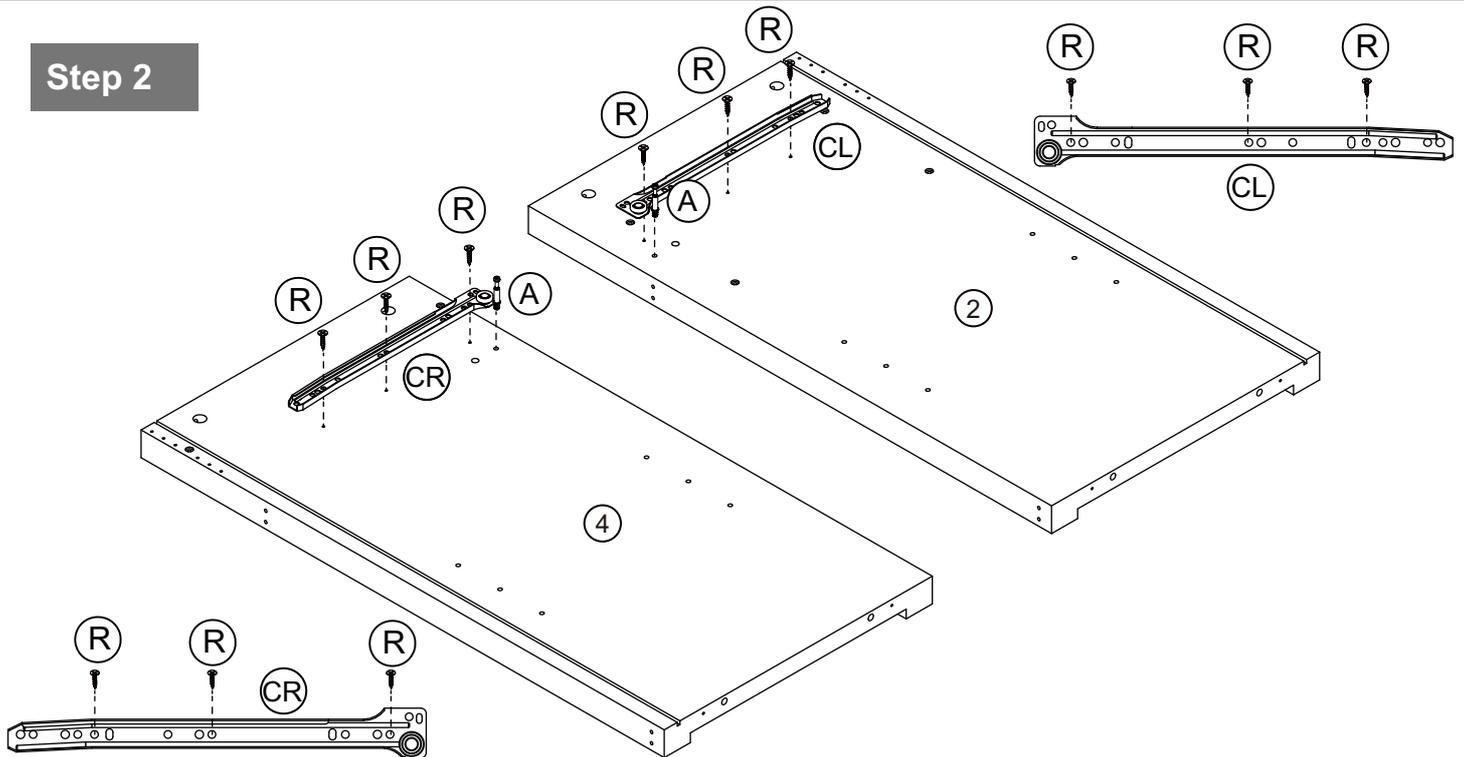




 <p>A Cam Bolt x 2</p>	 <p>R 3*12mm Screw x 6</p>	 <p>CL Runner 300mm x 1</p>	 <p>CR Runner 300mm x 1</p>
--	--	--	---

Assembly Instructions

Step 3

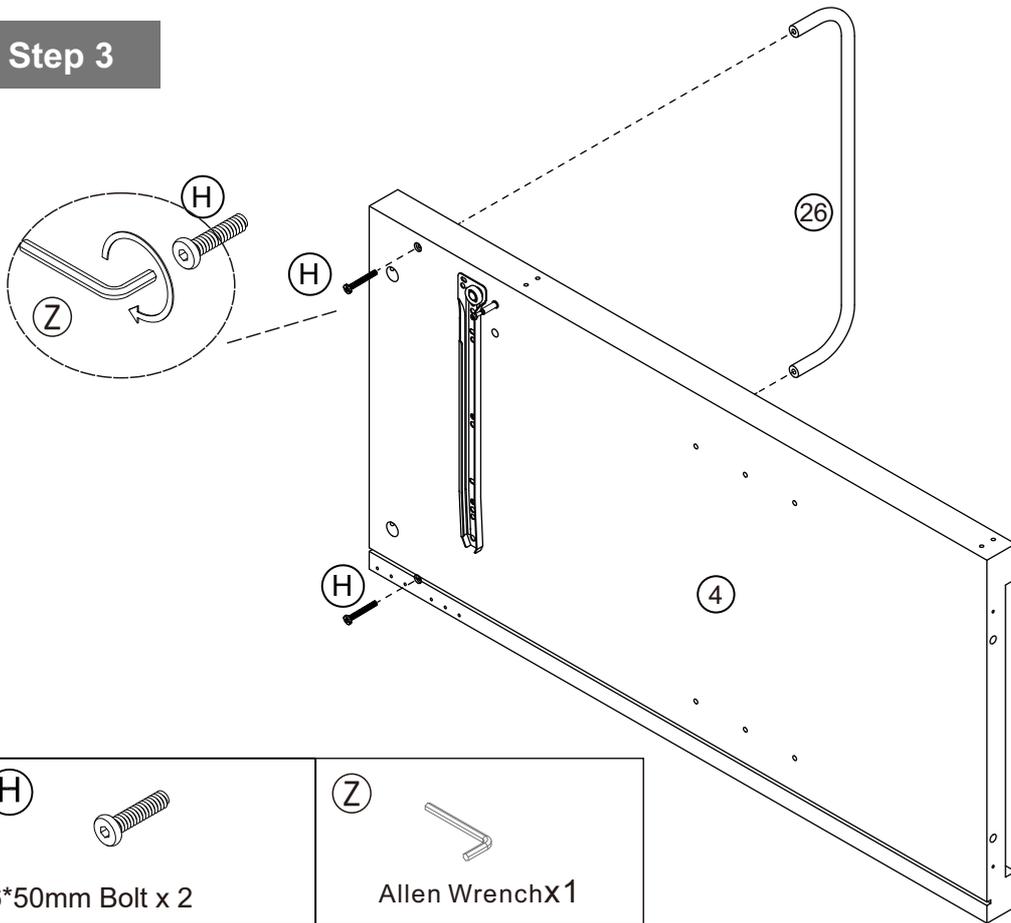


Step 4

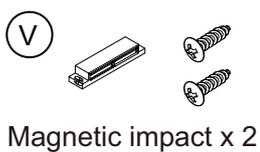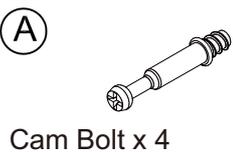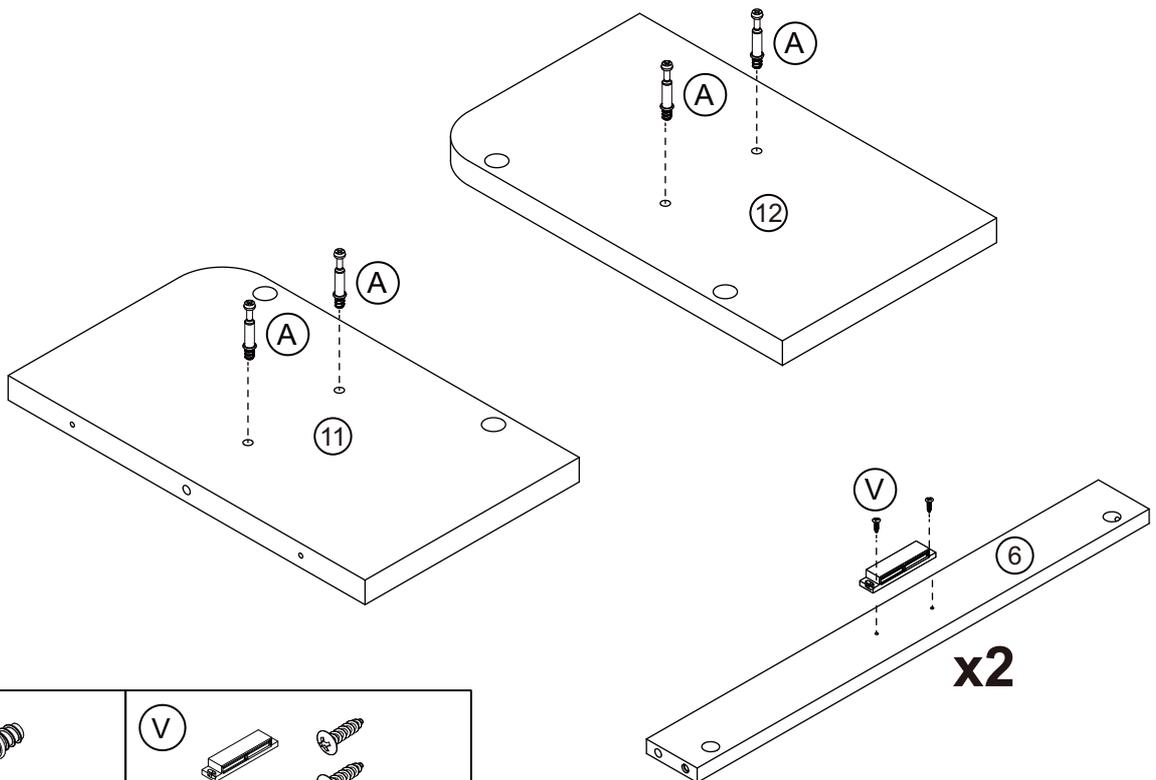

Assembly Instructions

Step 5

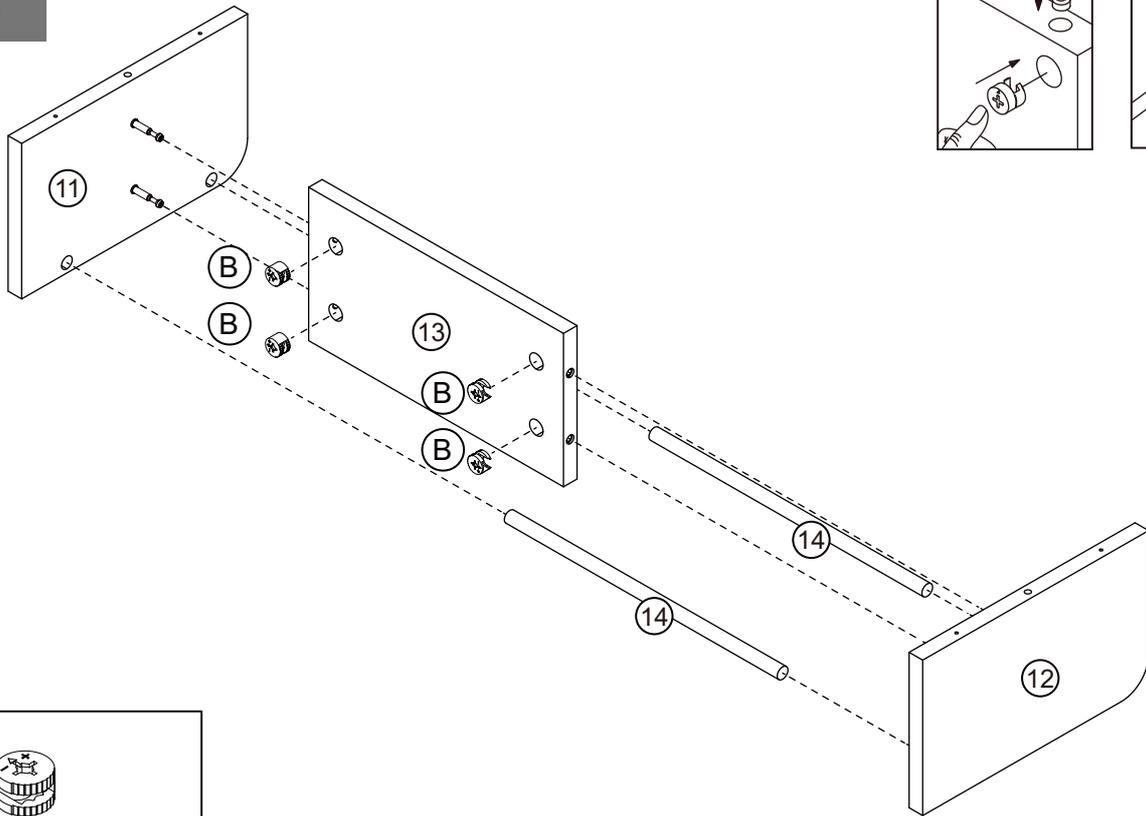


(B)



Cam lock x 4

Step 6

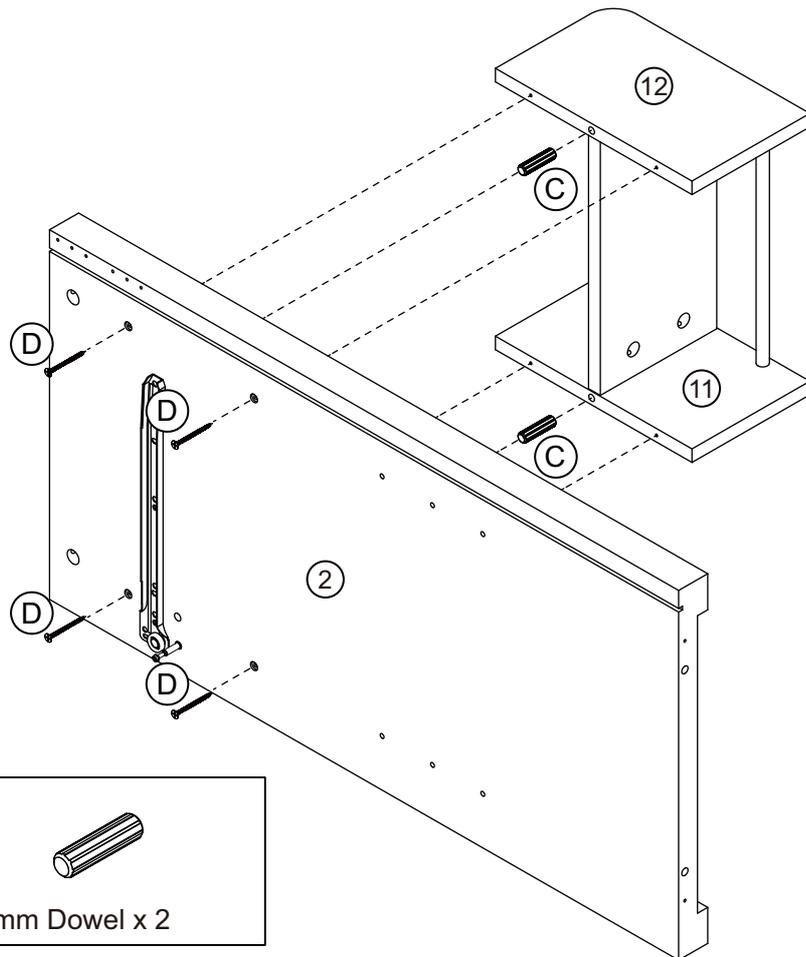

(D)



4*35mm Screw x 4



(C)





8*30mm Dowel x 2

Assembly Instructions

Step 7

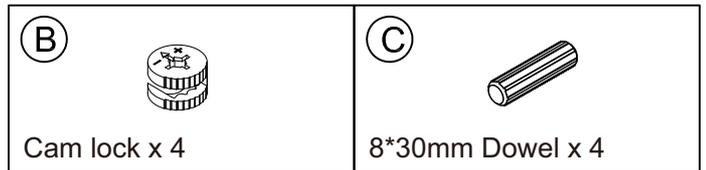
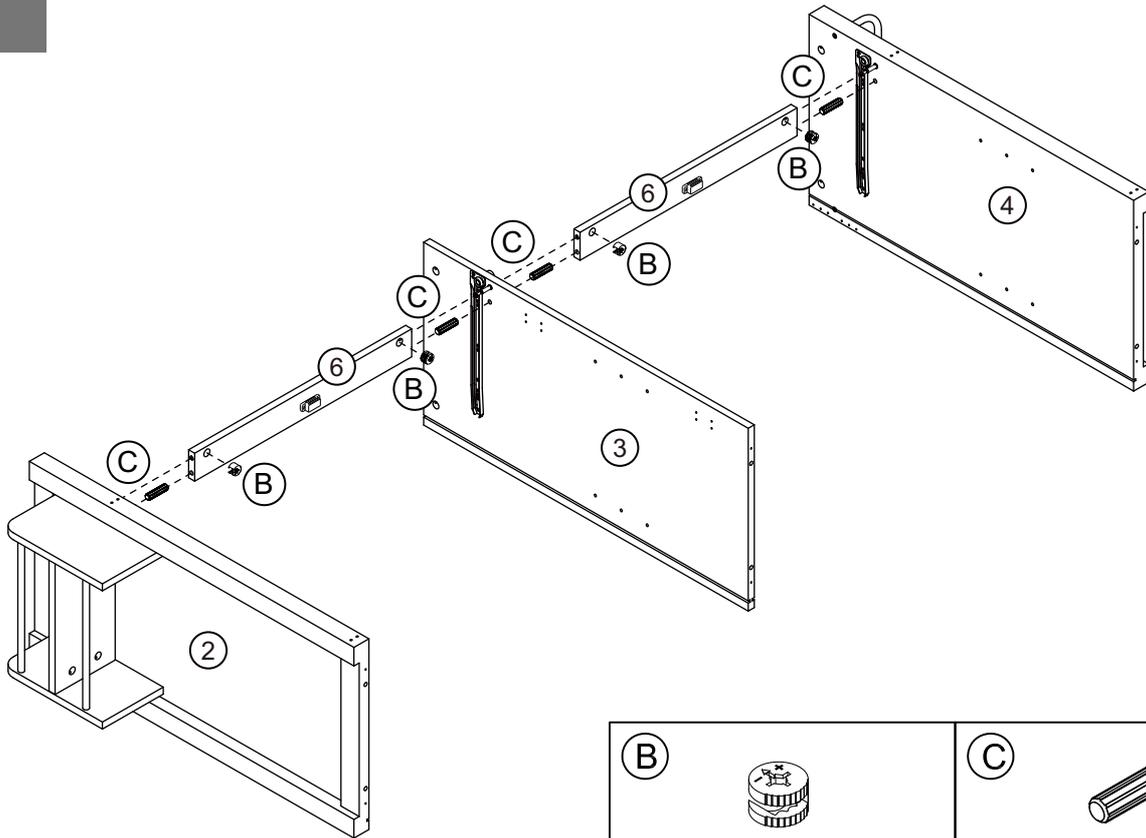


Step 8

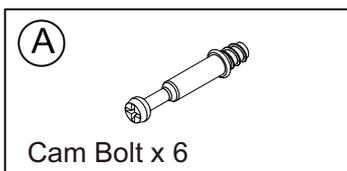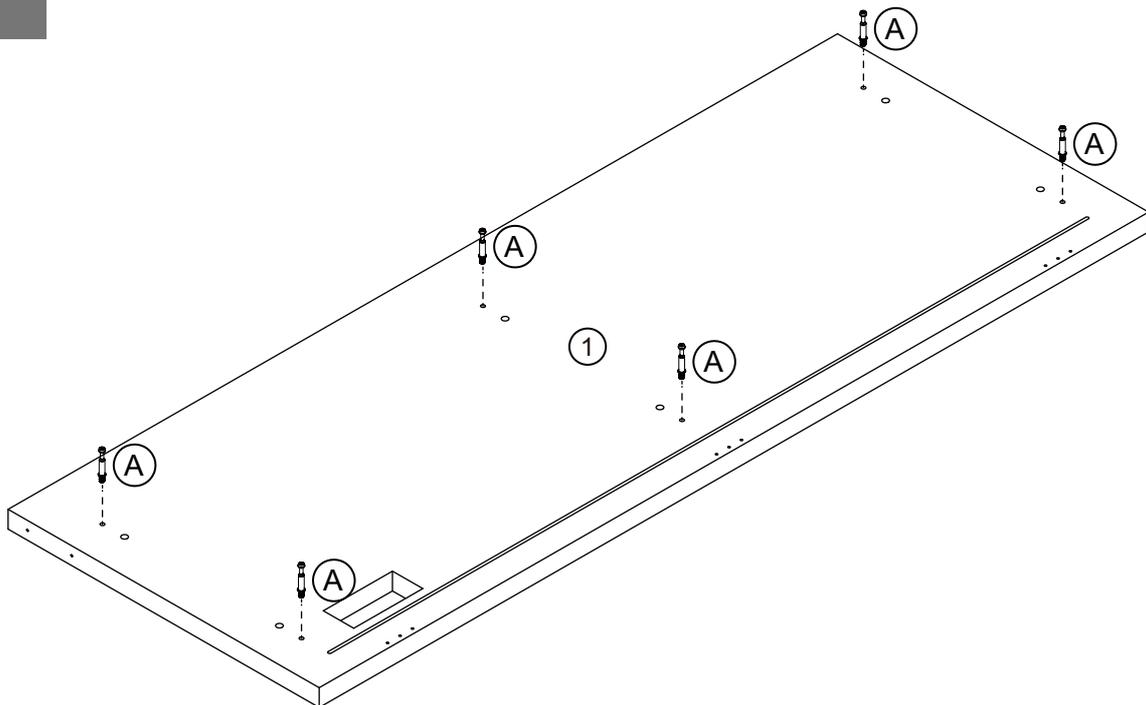


Assembly Instructions

Step 9



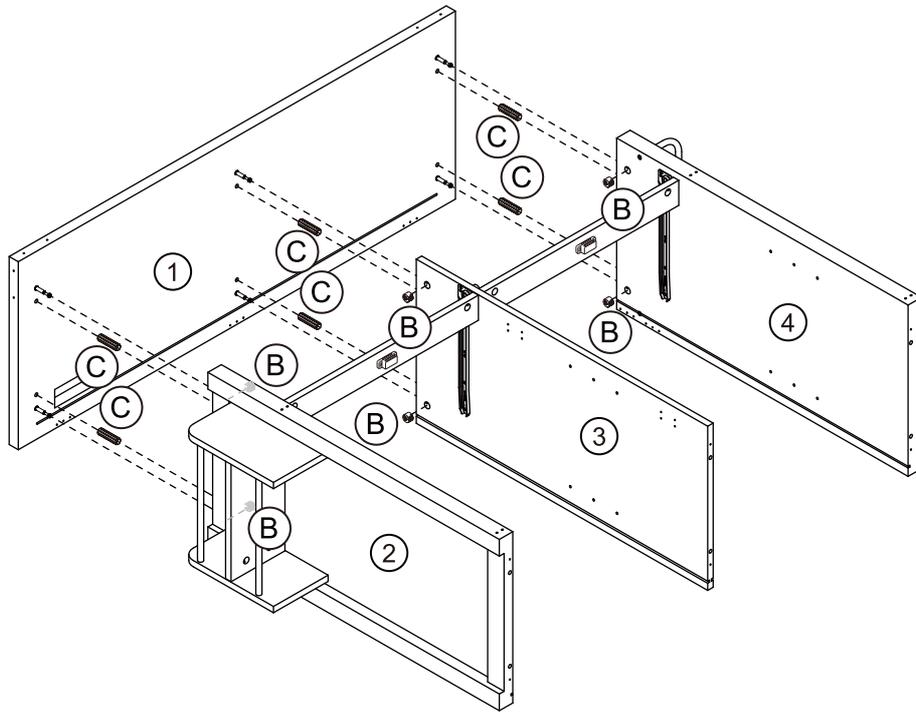


Cam lock x 6



8*30mm Dowel x 6


Step 10

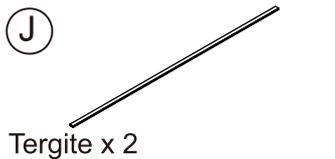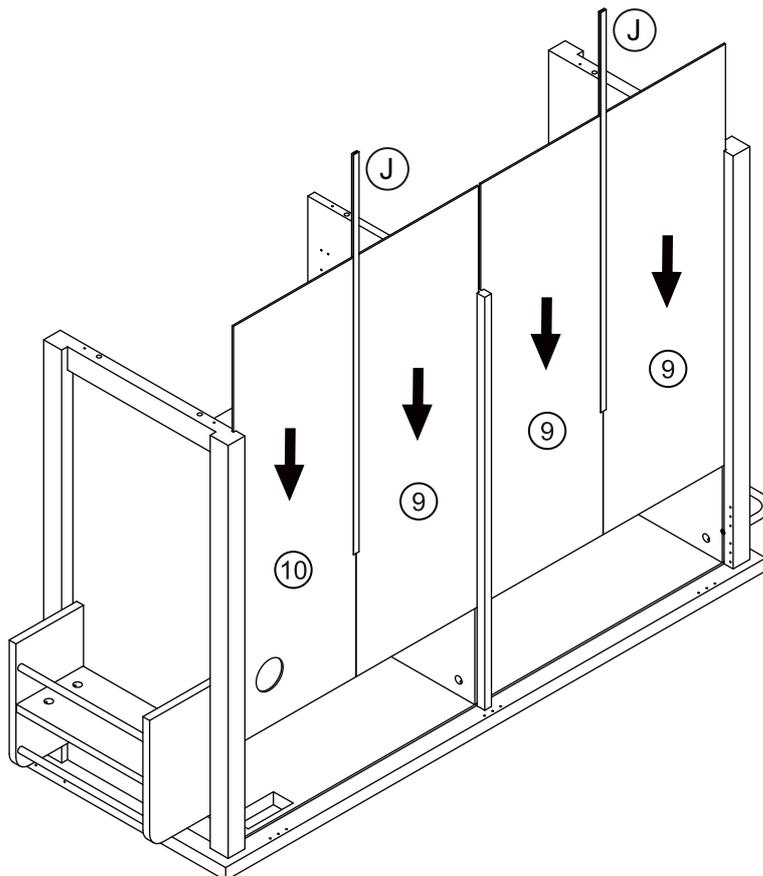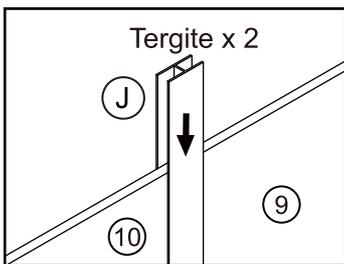

Tergite x 2

Assembly Instructions

Step 11

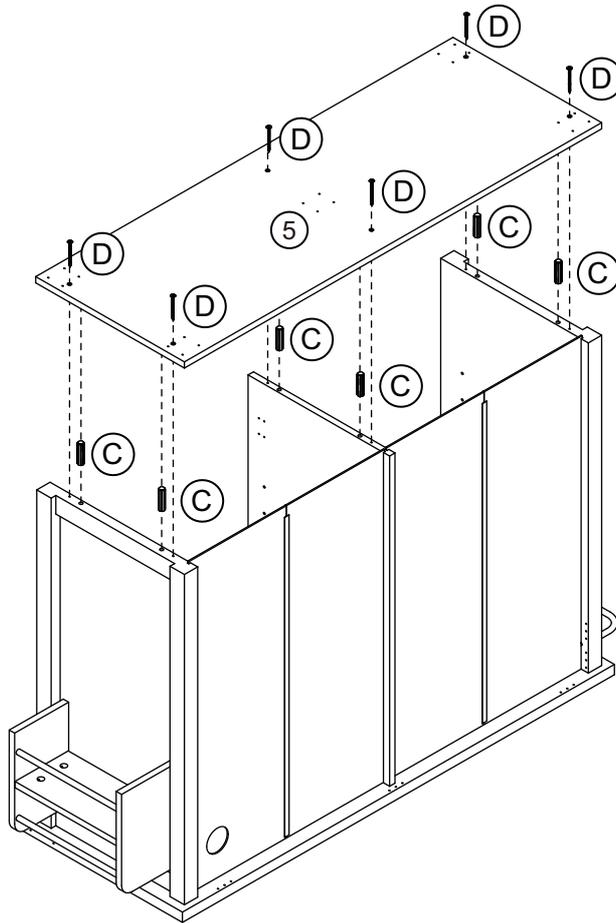

(C)





8*30mm Dowel x 6

(D)



4*35mm Screw x 6

Step 12

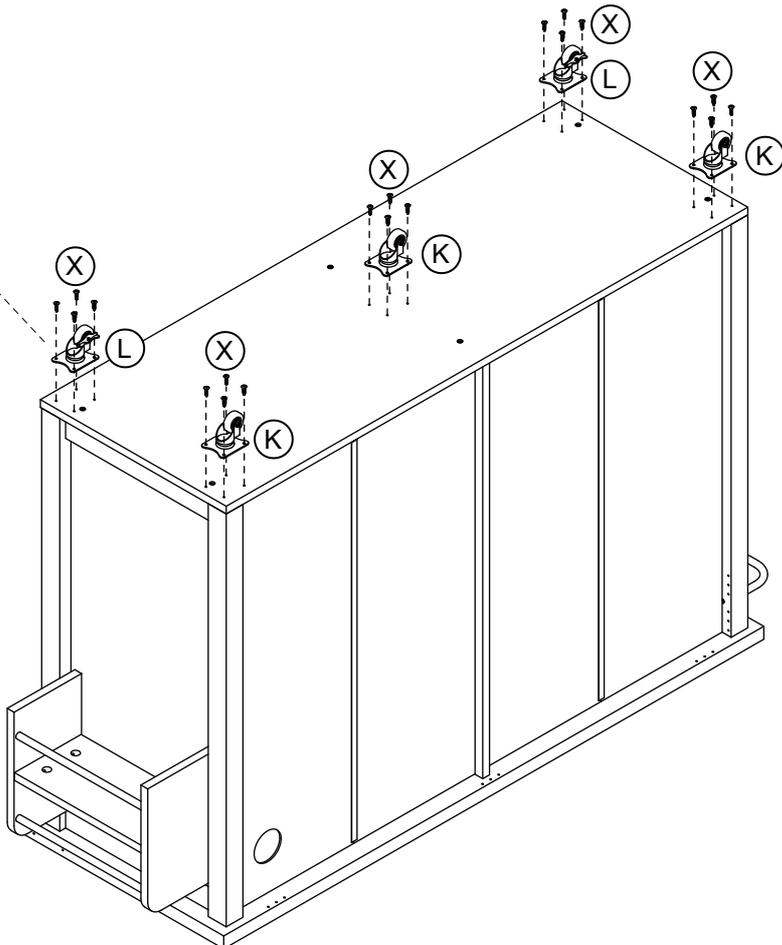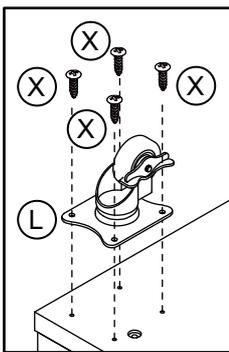

(X)



6*14mm Screw x 20

(L)



Locking caster x 2



(K)



Caster x 3

Assembly Instructions

Step 13

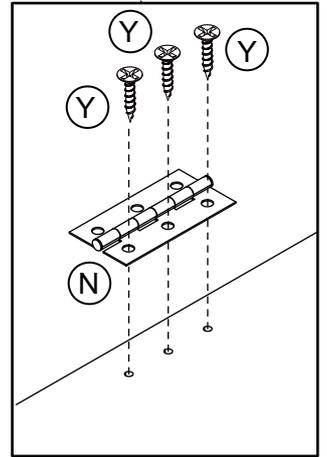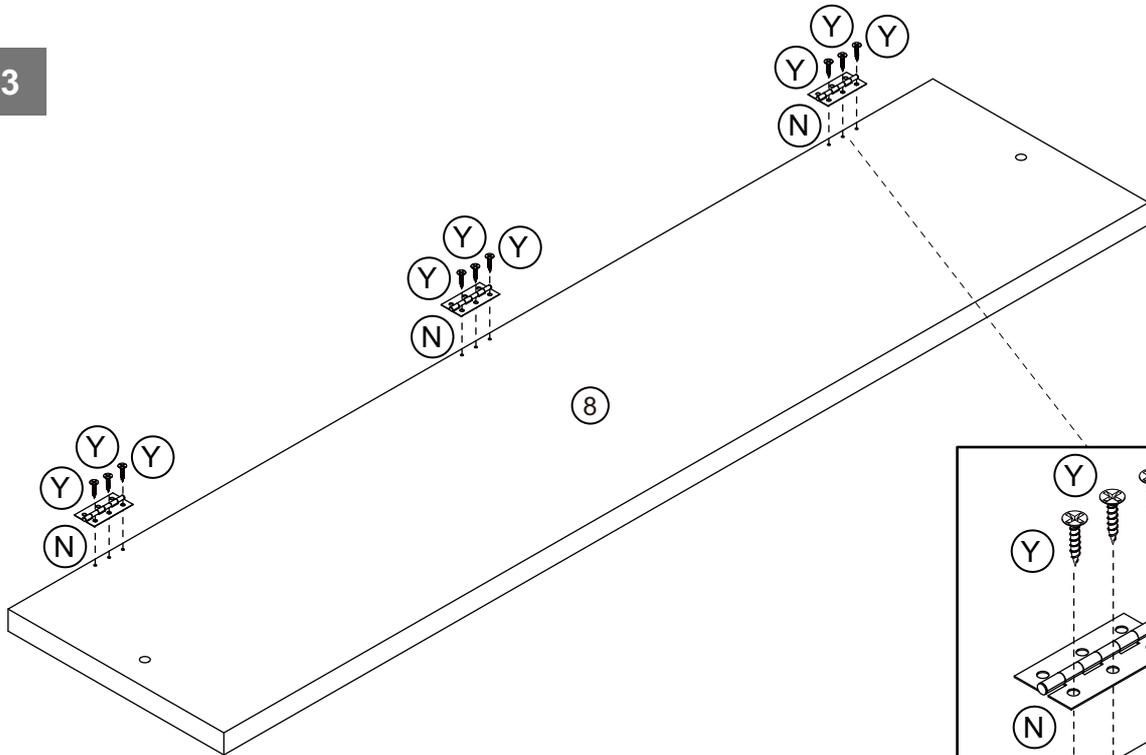


Y





3*12mm Screw x 9

N



hinge x 3

Step 14

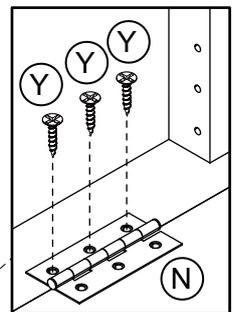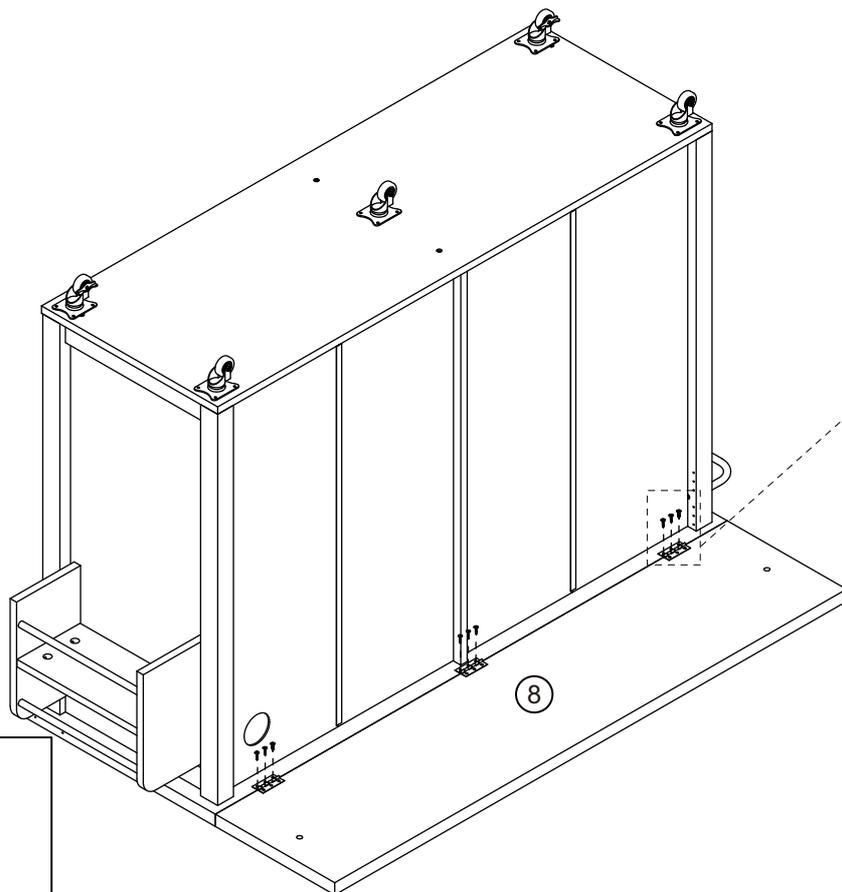


Y



3*12mm Screw x 9

Assembly Instructions

Step 15

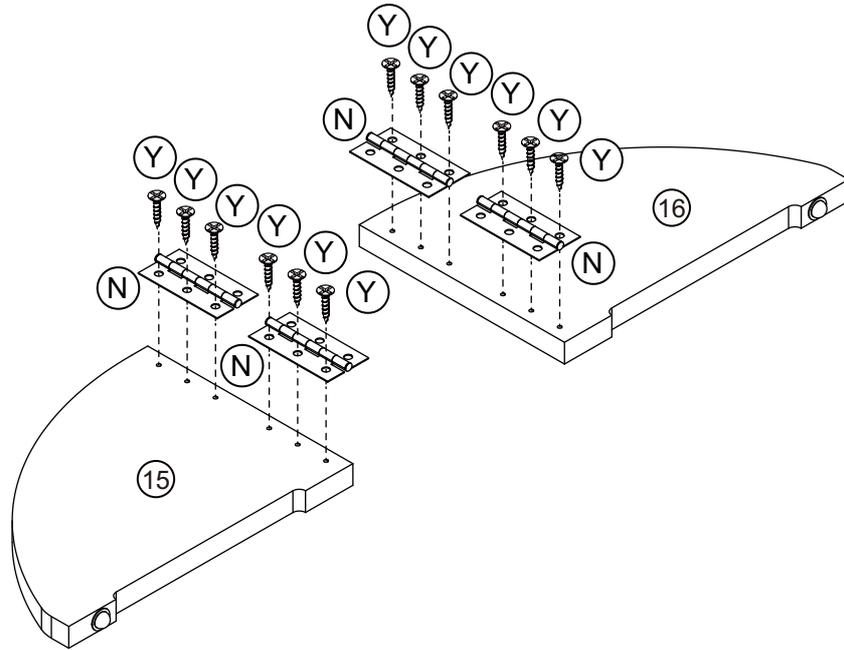


Y




3*12mm Screw x 12

N



hinge x 4

Step 16

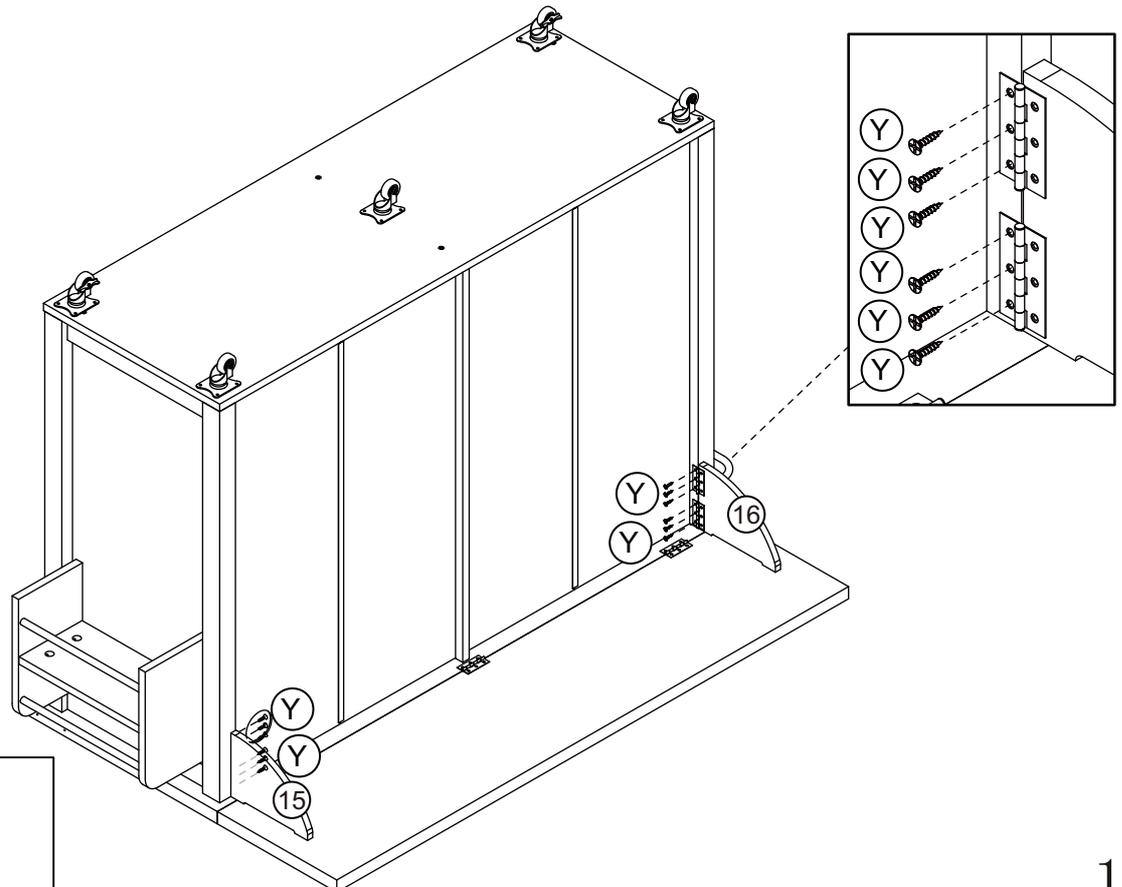




Y



3*12mm Screw x 12



Assembly Instructions

Step 17

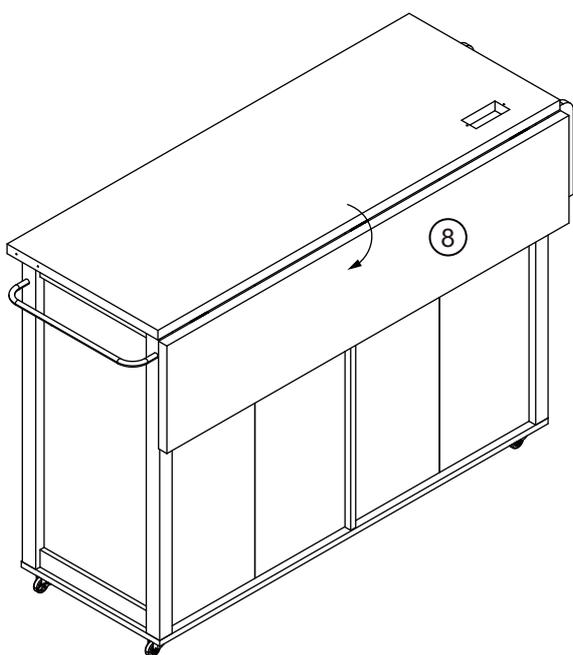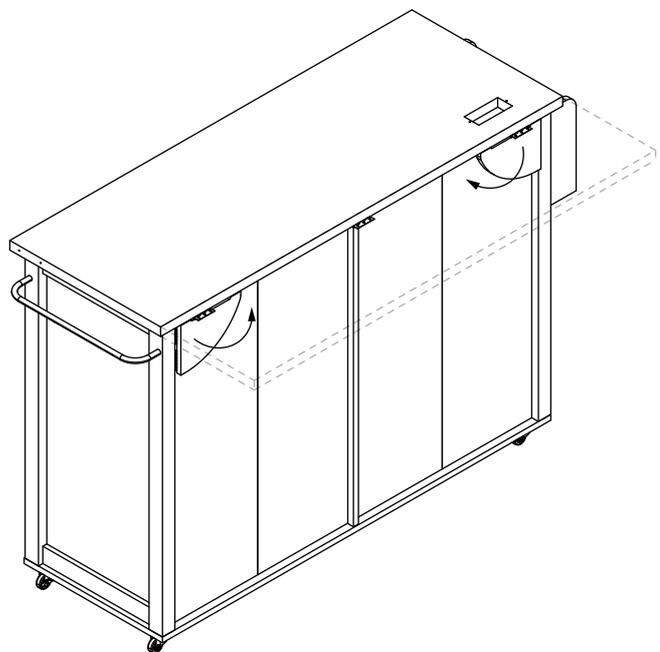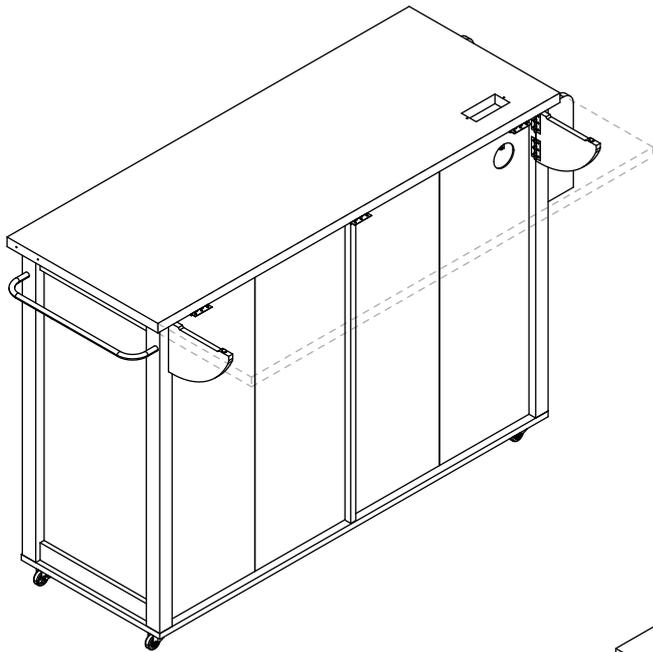


Assembly Instructions

Step 18

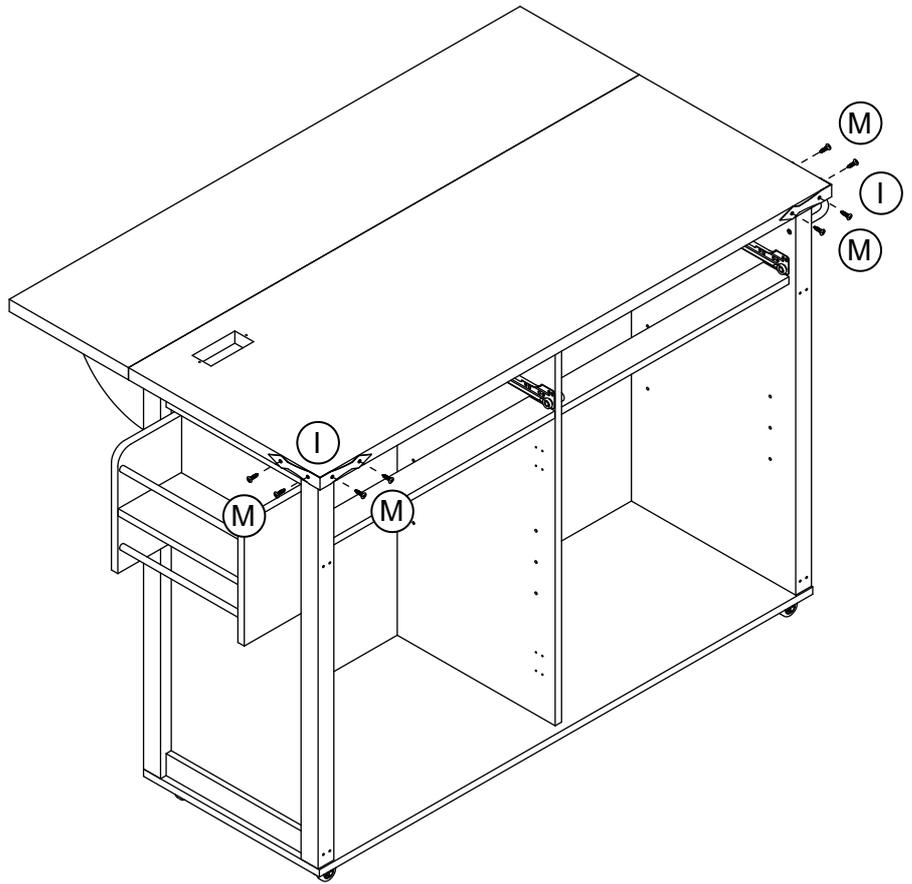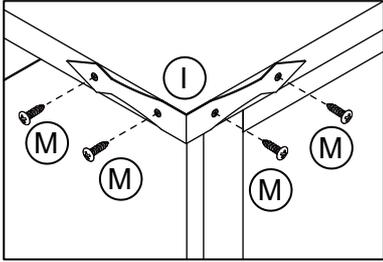

I




75*75*22mm x 2

M



4*14mm Screw x 8

Step 19

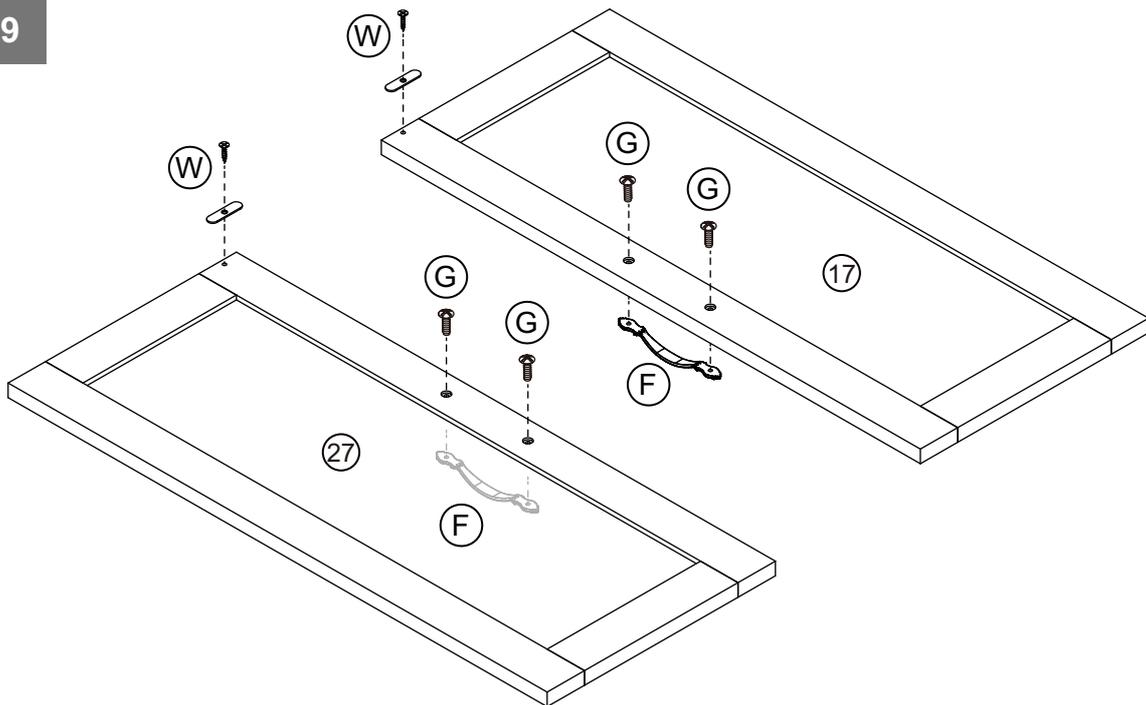

F



Hold hands x 2

G



4*18mm Screw x 4


W



Suction sheet x 2

Assembly Instructions

Step 20

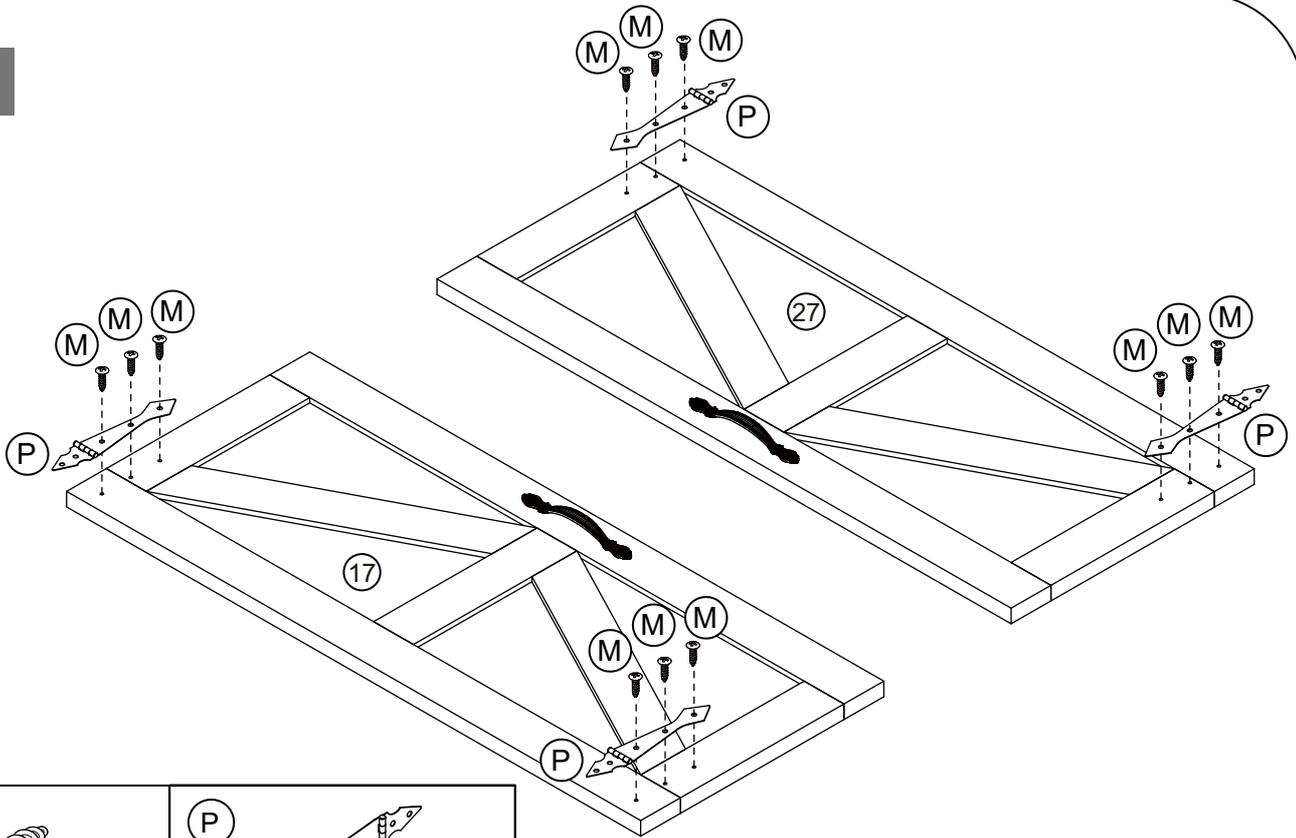


(M)




4*14mm Screw x 12

(P)



hinge x 4

Step 21

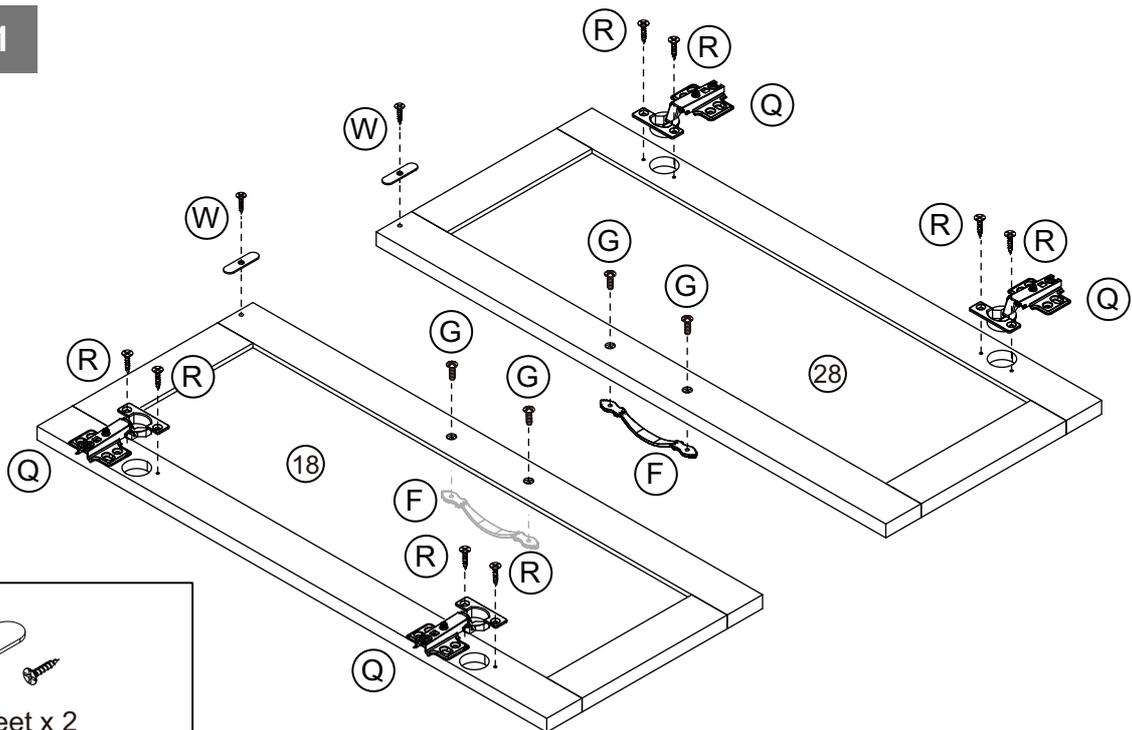

(W)




Suction sheet x 2

(F)



Hold hands x 2

(Q)



26mm x 4

(R)



3*12mm Screw x 8





(G)



4*16mm Screw x 4

Assembly Instructions

Step 22

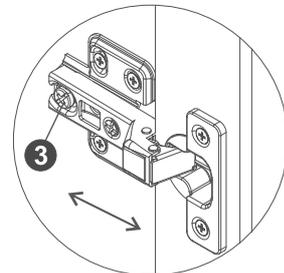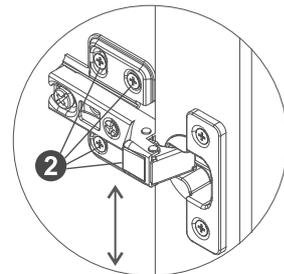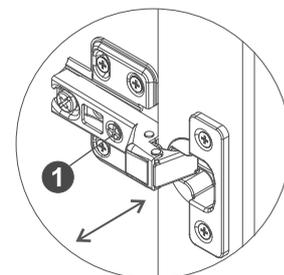
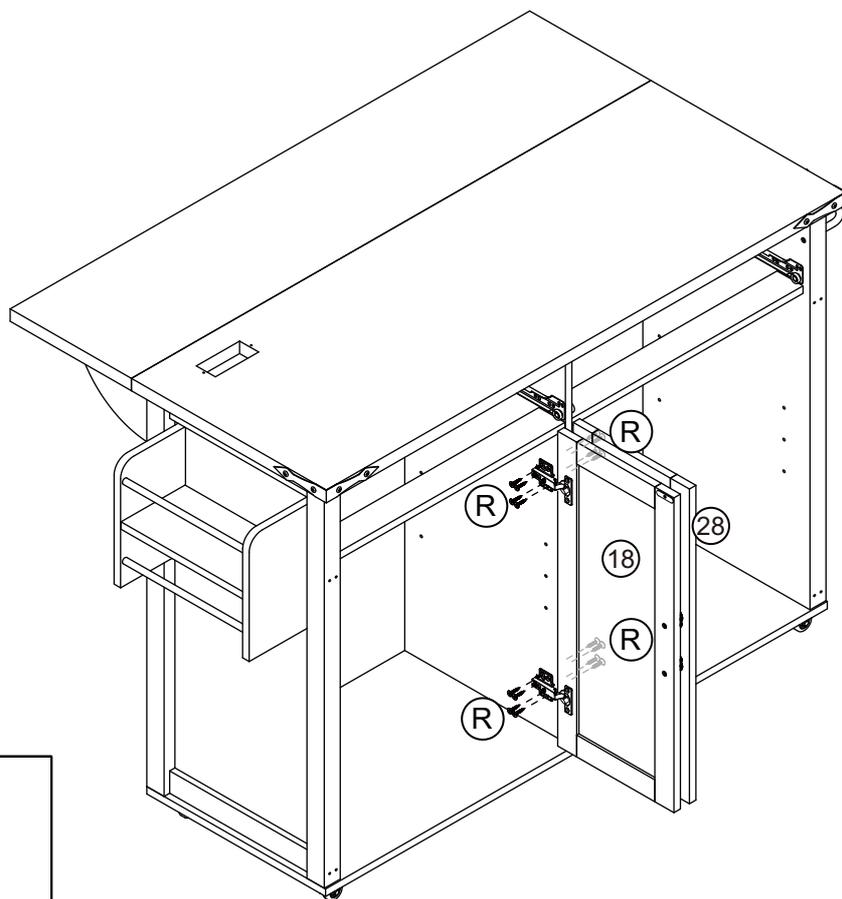


(R)



3*12mm Screw x 16

Step 23

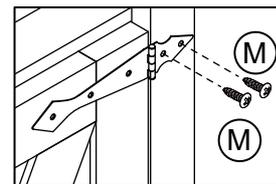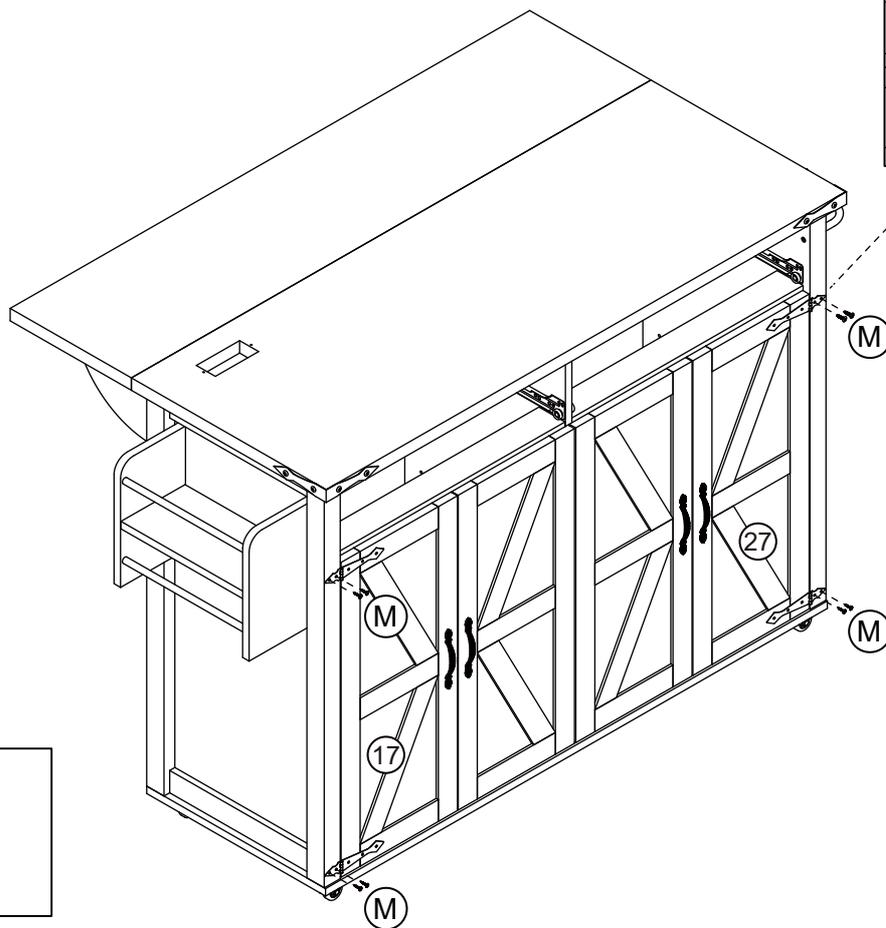



(M)




4*14mm Screw x 8

Assembly Instructions

Step 24

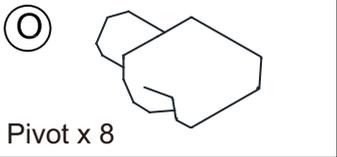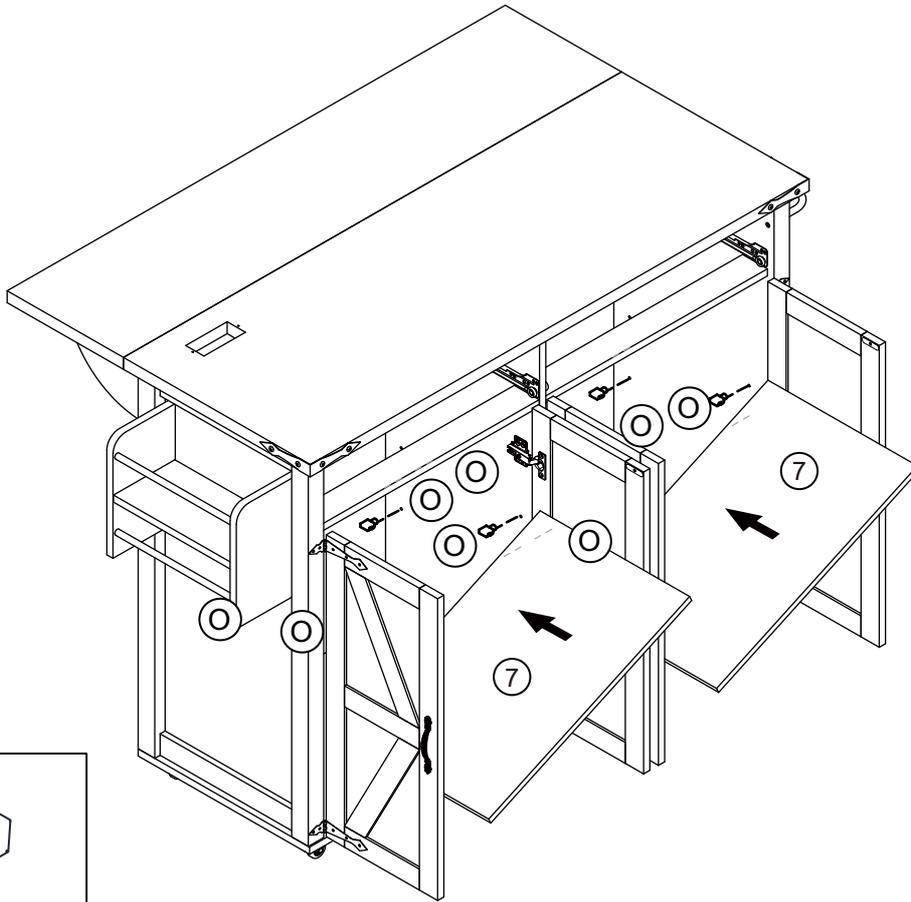


Step 25

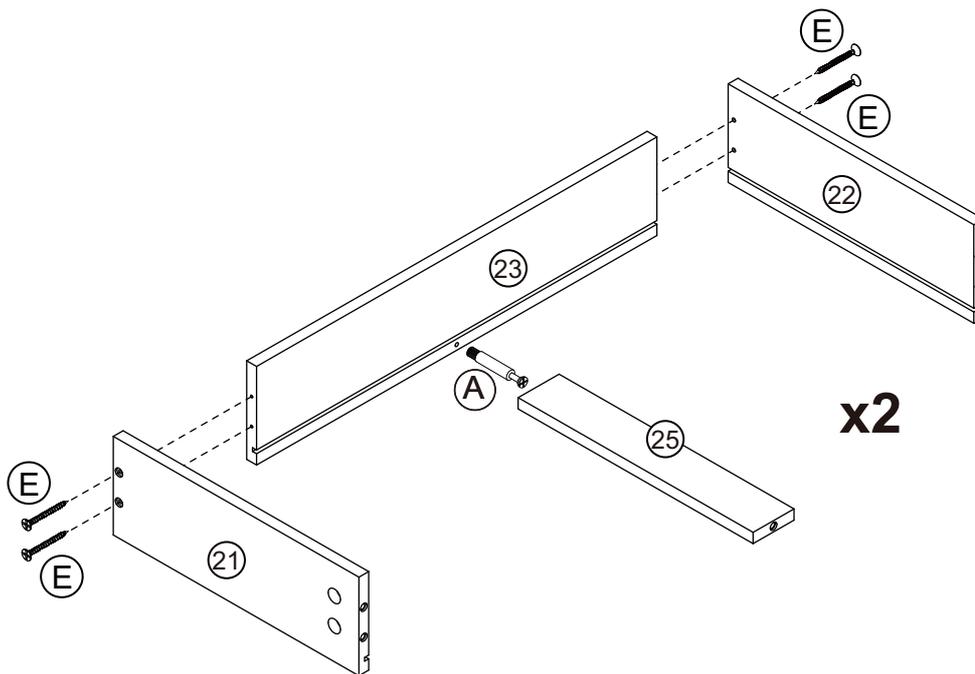


Assembly Instructions


Step 26

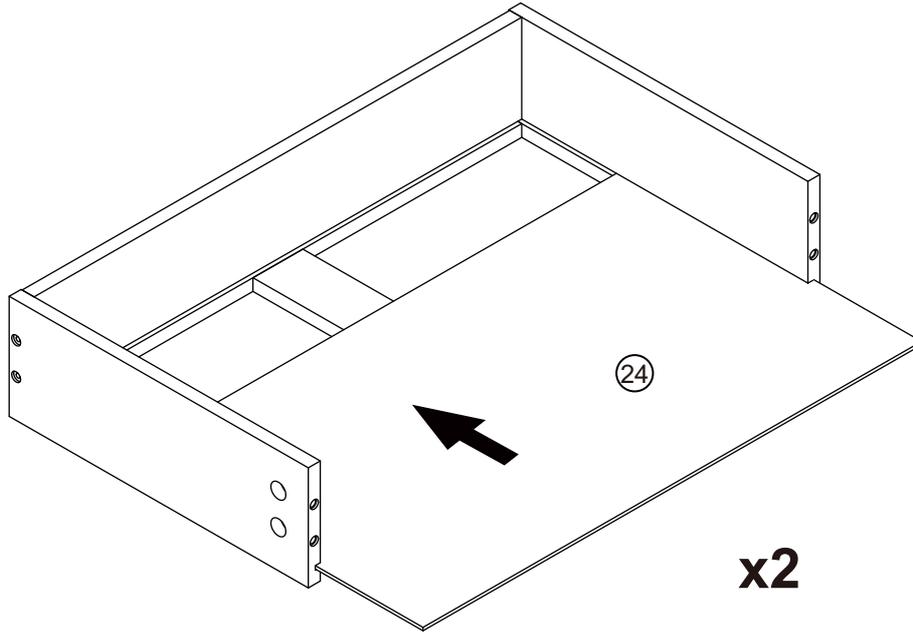

Step 27

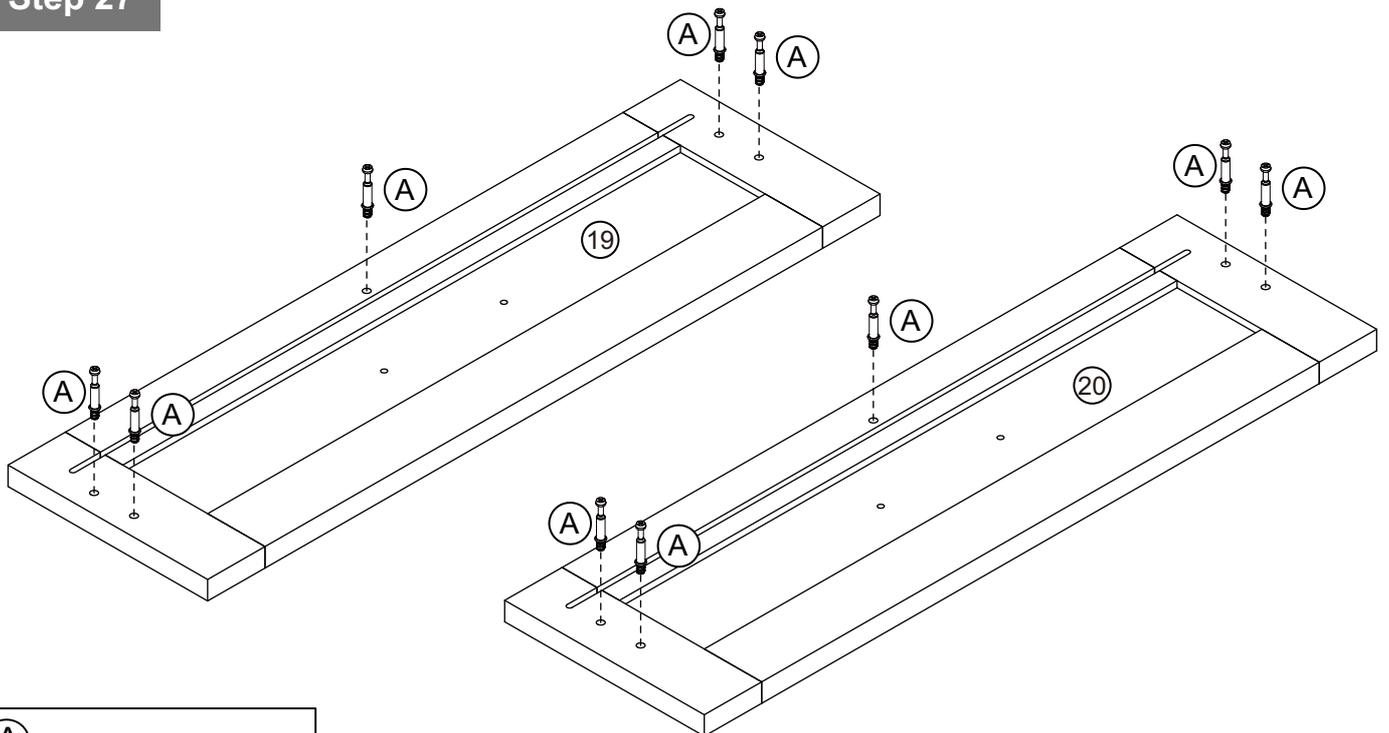


(A)



Cam Bolt x 10


Assembly Instructions


Step 28

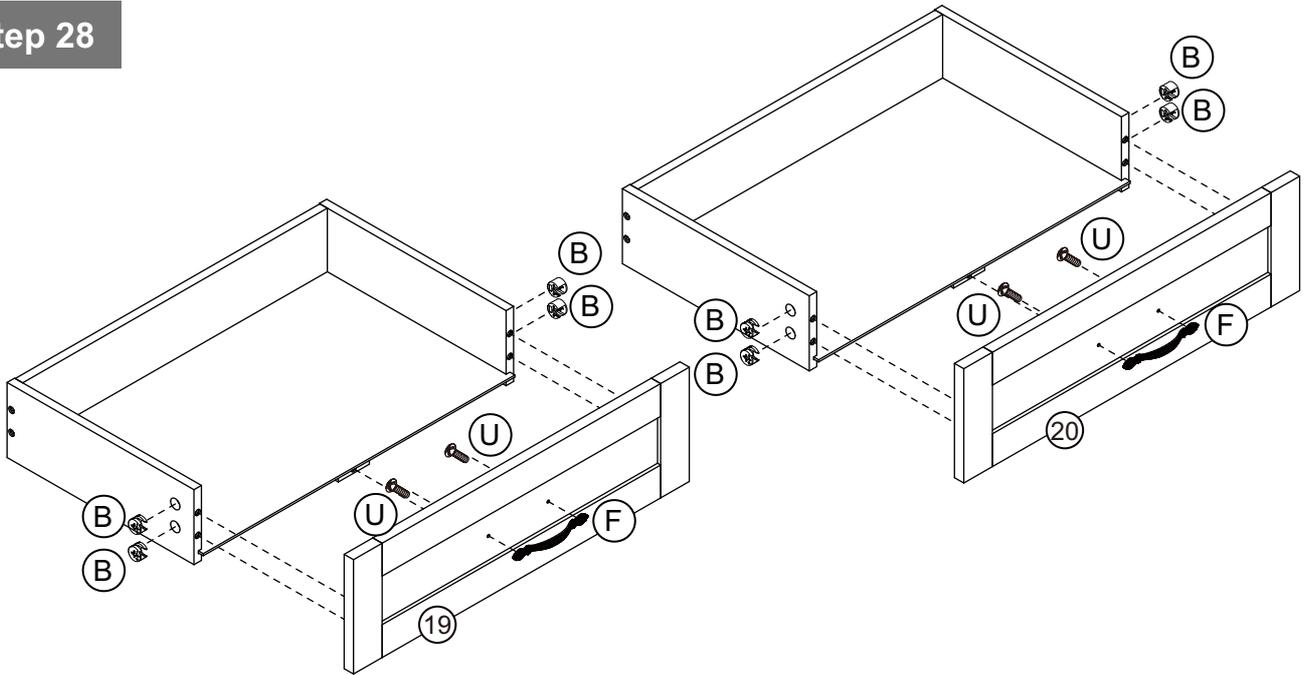

<p>(B)</p>  <p>Cam lock x 8</p>	<p>(U)</p>  <p>4*8mm Screw x 4</p>	<p>(F)</p>  <p>Hold hands x 2</p>
---	--	--


Step 29

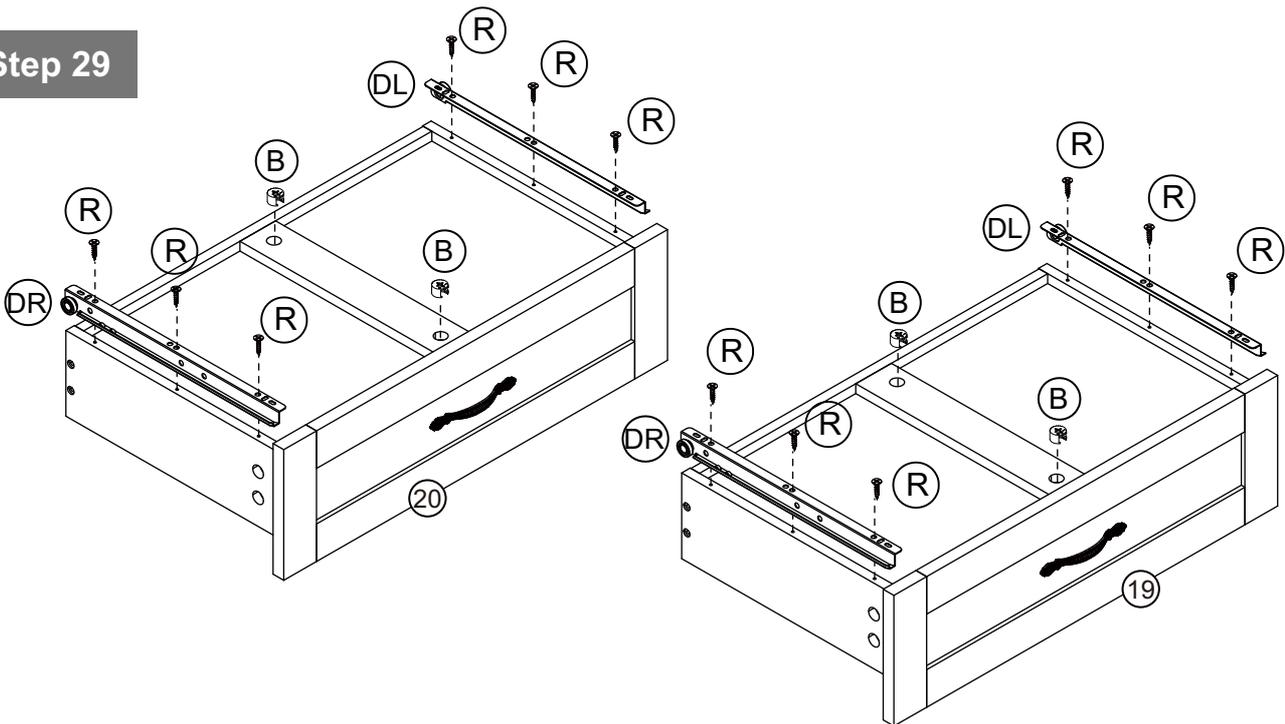



<p>(R)</p>  <p>3*12mm Screw x 12</p>	<p>(DR)</p>  <p>Runner 300mm x 2</p>	<p>(DL)</p>  <p>Runner 300mm x 2</p>	<p>(B)</p>  <p>Cam lock x 4</p>
--	--	---	---

Assembly Instructions

Step 30

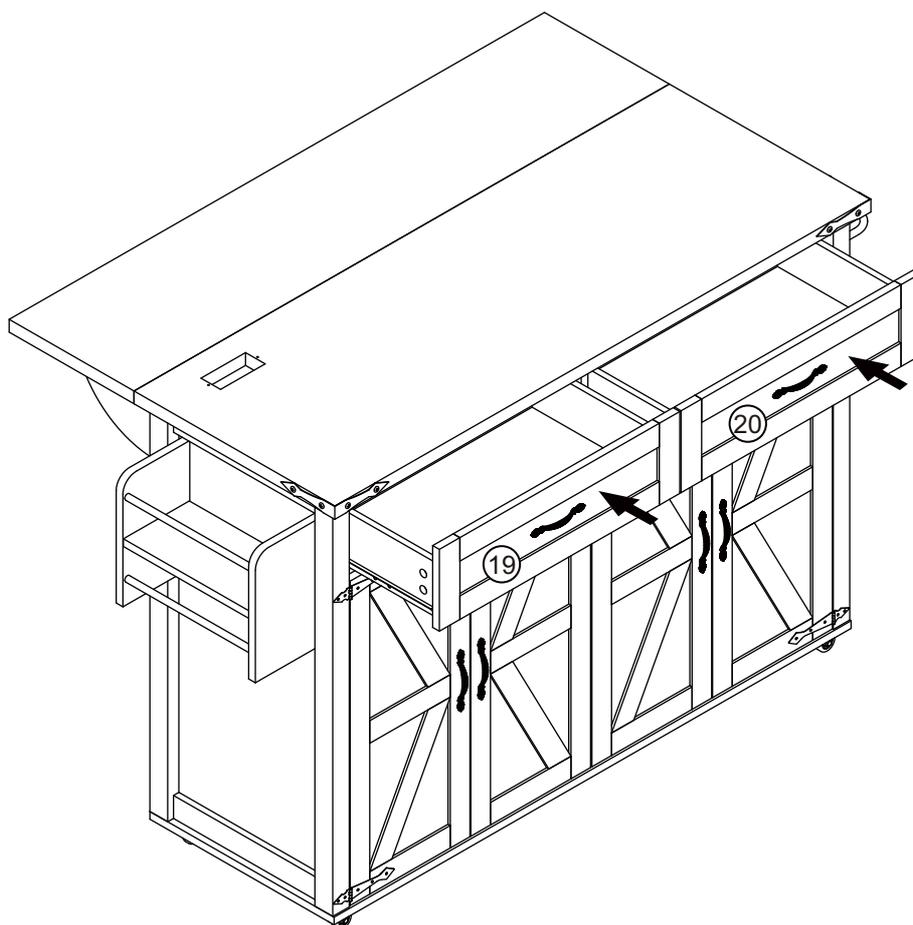

Step 31

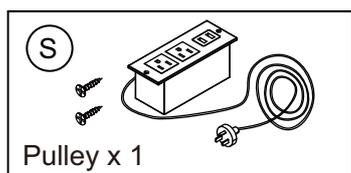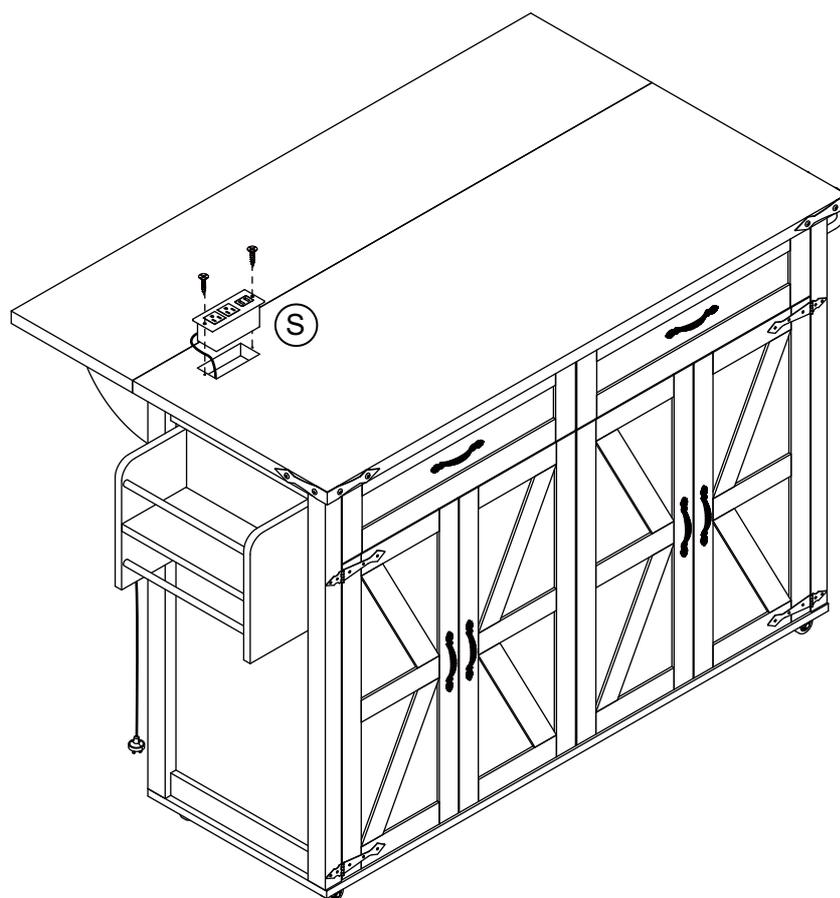

Assembly Instructions

Step 32

