


Kitchen Island Carts

Assembly Instructions - Please keep for future reference

N707P407987&
N707P407988

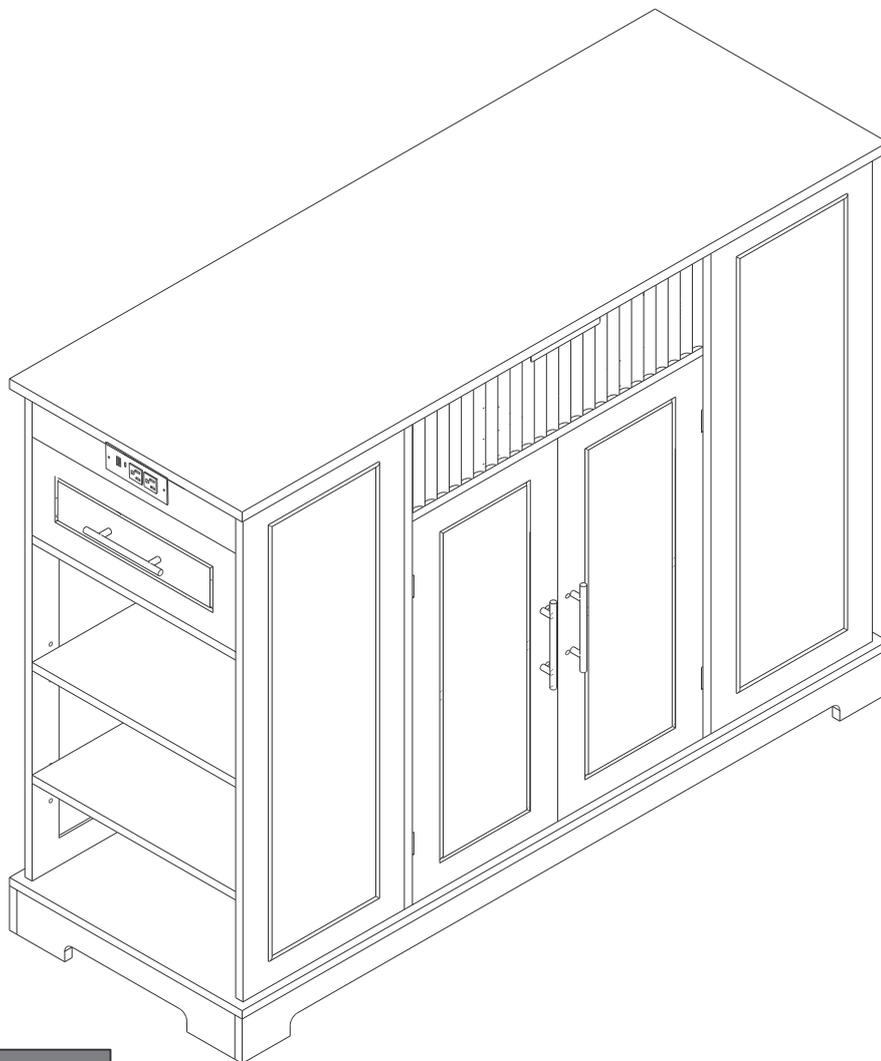

Dimensions

Width-47.2inch

Depth-20.5inch

Height-36.2inch

Important – Please read these instructions fully before starting assembly

ISSUE 1-1 22/11/25



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-










- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type



Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>(A) </p> <p>Cam Bolt x 76</p>	<p>(B) </p> <p>Cam lock x 76</p>	<p>(C) </p> <p>6*30mm Dowel x 65</p>	<p>(D) </p> <p>4*35mm Screw x 8</p>
<p>(E) </p> <p>3*12mm Screw x 73</p>	<p>(F) </p> <p>Hold hands x5</p>	<p>(G) </p> <p>4*20mm Screw x 10</p>	<p>(H) </p> <p>Layer bracket x 12</p>
<p>(I) </p> <p>4*25mm Screw x 20</p>	<p>(J) </p> <p>Hinge x 6</p>	<p>(K) </p> <p>Caster x 3</p>	<p>(L) </p> <p>Locking caster x 2</p>
<p>(M) </p> <p>6*14mm Screw x 20</p>	<p>(N) </p> <p>120mm hands x 1</p>	<p>(O) </p> <p>Screwdriver x 1</p>	<p>(P) </p> <p>Hinge x 1</p>
<p>(Q) </p> <p>Hinge x 1</p>	<p>(R) </p> <p>Magnetic impact x 1</p>	<p>(S) </p> <p>Extension cord x 1</p>	<p>(T) </p> <p>Magnetic impact x 1</p>
<p>(U) </p> <p>Runner 350 mm x 2</p>	<p>(V) </p> <p>3*10mm Screw x 3</p>	<p>(CL) </p> <p>Runner 250mm x 2</p>	<p>(CR) </p> <p>Runner 250mm x 2</p>
<p>(DL) </p> <p>Runner 250mm x 2</p>	<p>DR </p> <p>Runner 250mm x 2</p>	<p>(W) </p> <p>3*14mm Screw x 7</p>	<p>(X) </p> <p>4*28mm Screw x 16</p>

Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

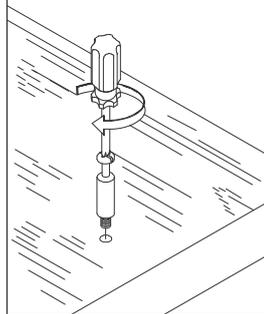

Step 2

Push the male camlock into the entry hole.

2

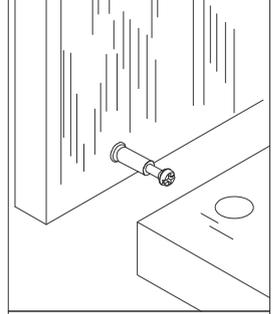


Step 3

Insert the female camlock as shown in the instruction.

Note : ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

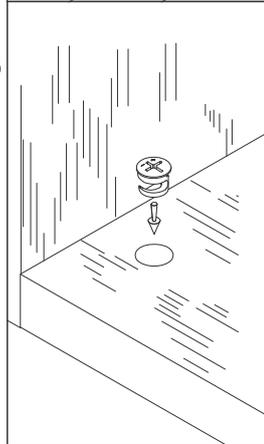


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure .




4

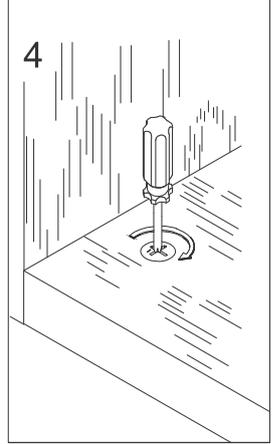

$U=U1+U2$











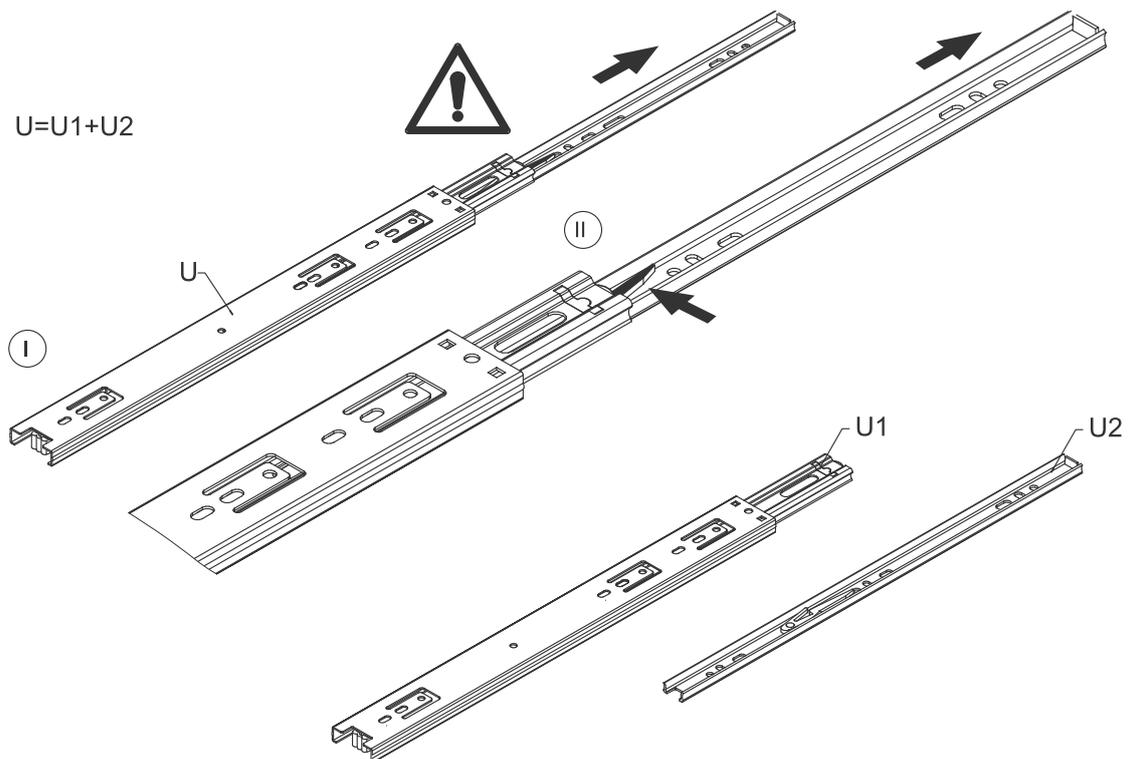


Assembly Instructions

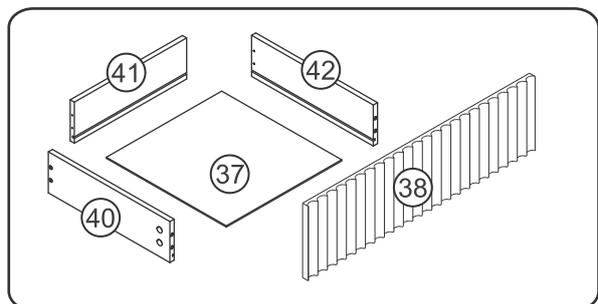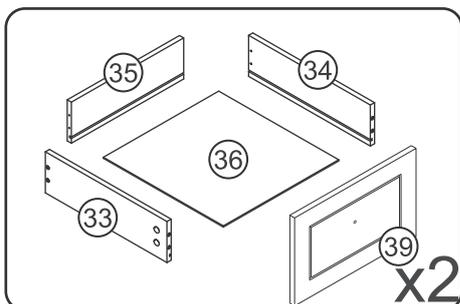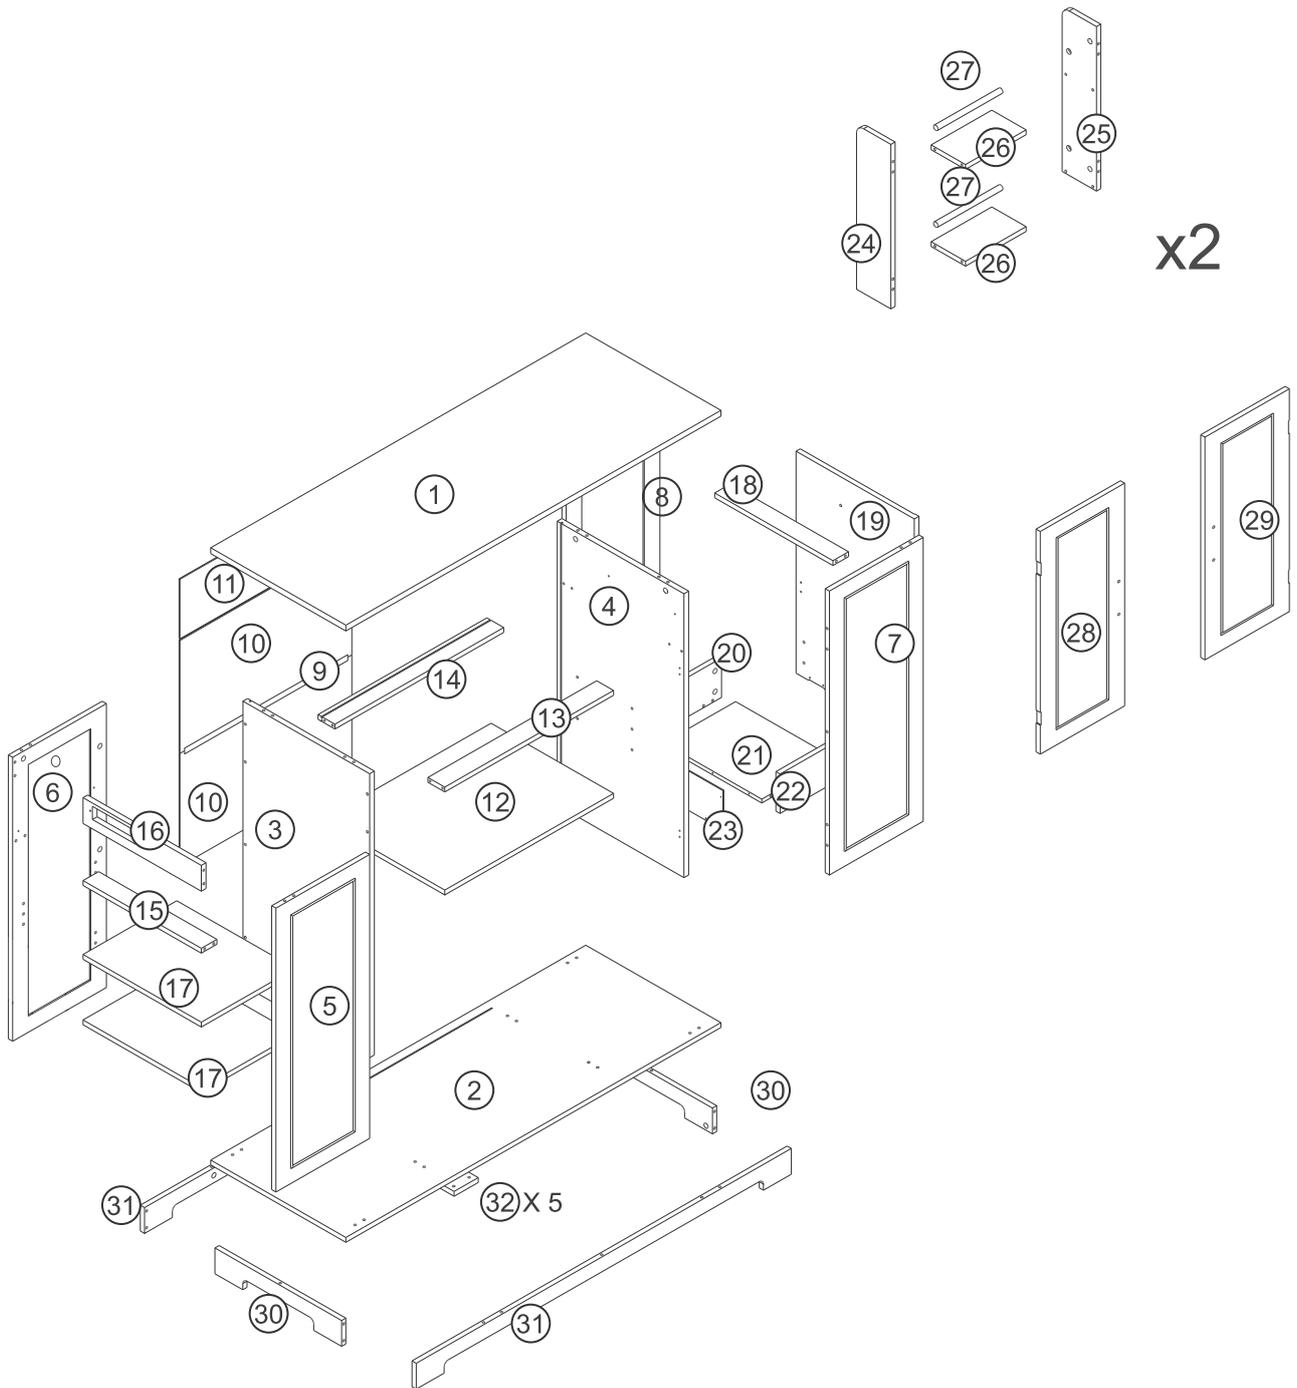













Assembly Instructions

Parts List for N707P407987

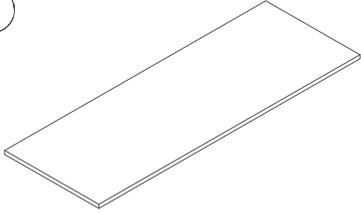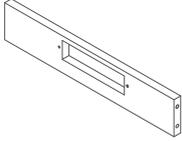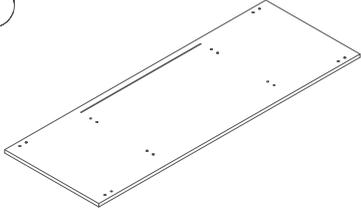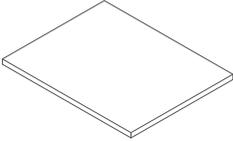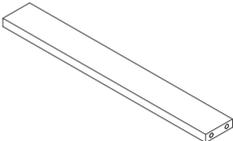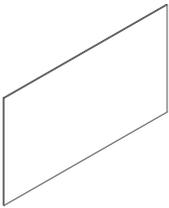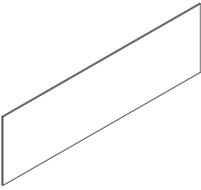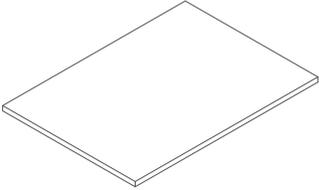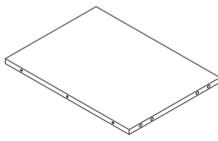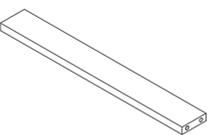 <p>1</p>	 <p>16</p>
 <p>2</p>	 <p>17</p>
 <p>9</p>	 <p>18</p>
 <p>10</p>	 <p>19</p>
 <p>11</p>	 <p>20</p>
 <p>12</p>	 <p>21</p>
 <p>15</p>	 <p>22</p>















Assembly Instructions

Parts List for N707P407987

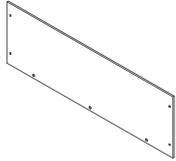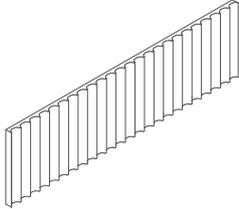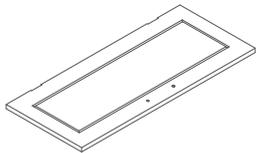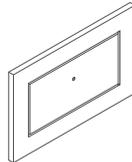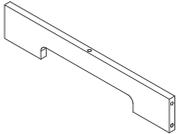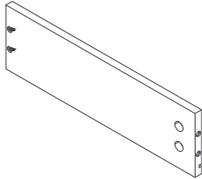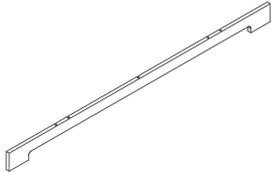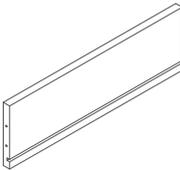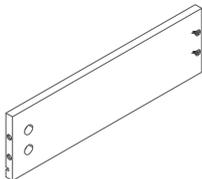 23	1	 36	2
 27	4	 37	1
 28	1	 38	1
 29	1	 39	2
 30	2	 40	1
 31	2	 41	1
 32	5	 42	1








Assembly Instructions

Parts List for N707P407988
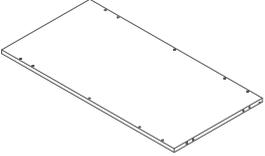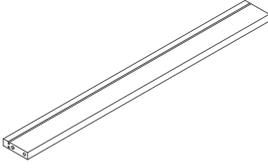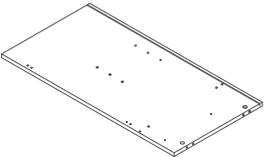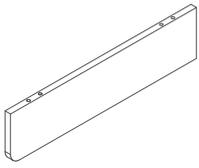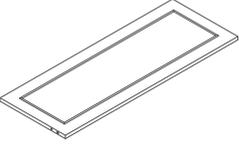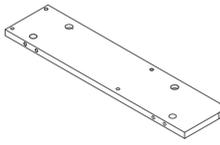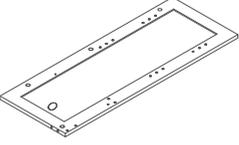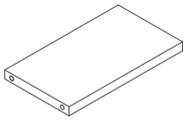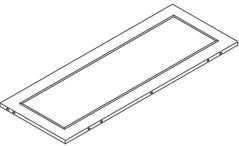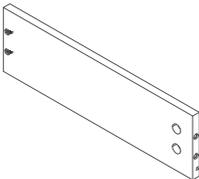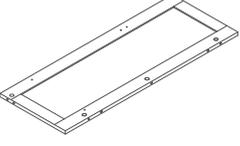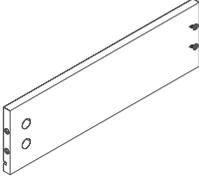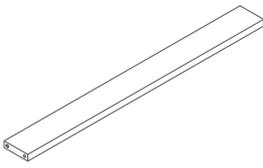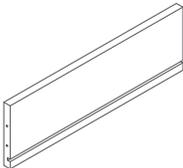
<p>③</p>  <p>1</p>	<p>⑭</p>  <p>1</p>
<p>④</p>  <p>1</p>	<p>⑳</p>  <p>2</p>
<p>⑤</p>  <p>1</p>	<p>㉕</p>  <p>2</p>
<p>⑥</p>  <p>1</p>	<p>㉖</p>  <p>4</p>
<p>⑦</p>  <p>1</p>	<p>㉓</p>  <p>2</p>
<p>⑧</p>  <p>1</p>	<p>㉔</p>  <p>2</p>
<p>⑬</p>  <p>1</p>	<p>㉗</p>  <p>2</p>

Assembly Instructions

Step 1

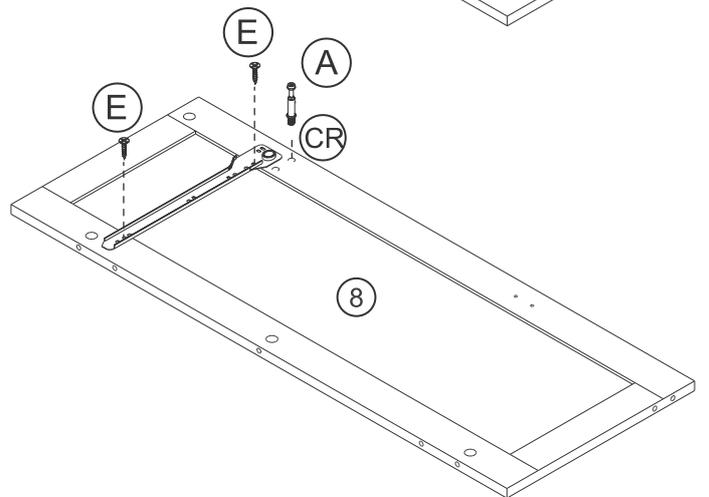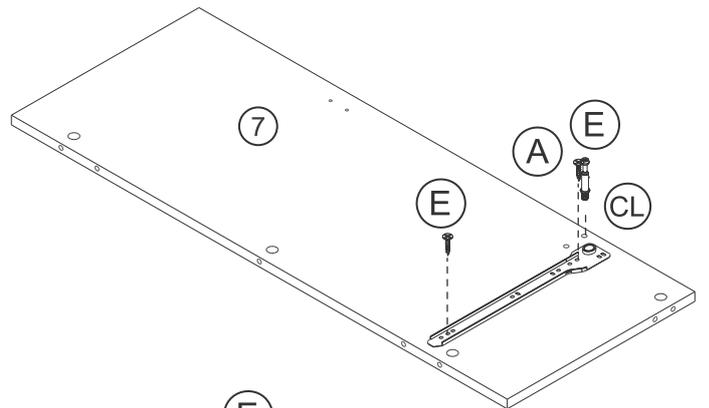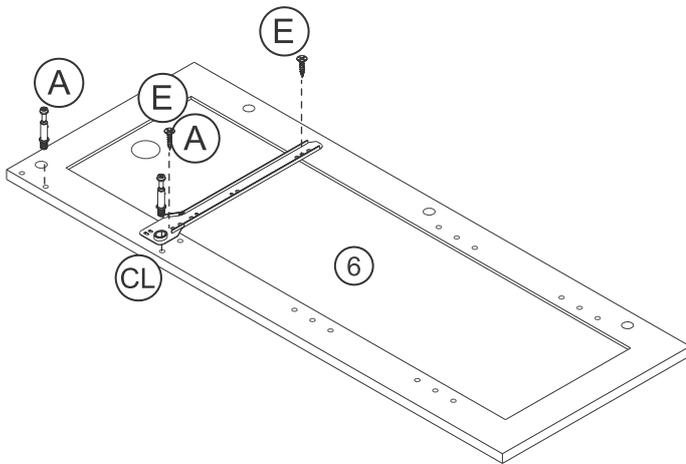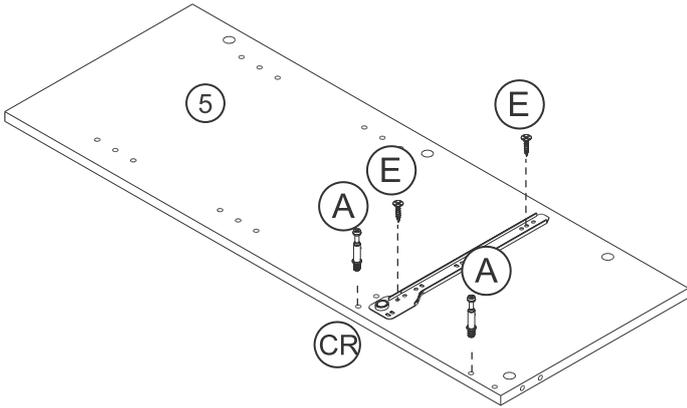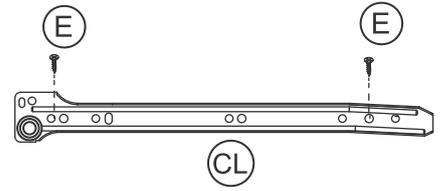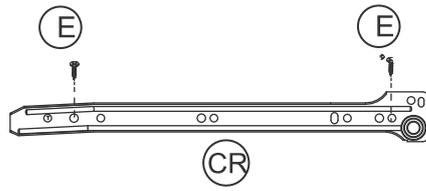

Cam Bolt x 6



Screw x 8




Runner 250mm x 2



Runner 250mm x 2

Assembly Instructions

Step 2

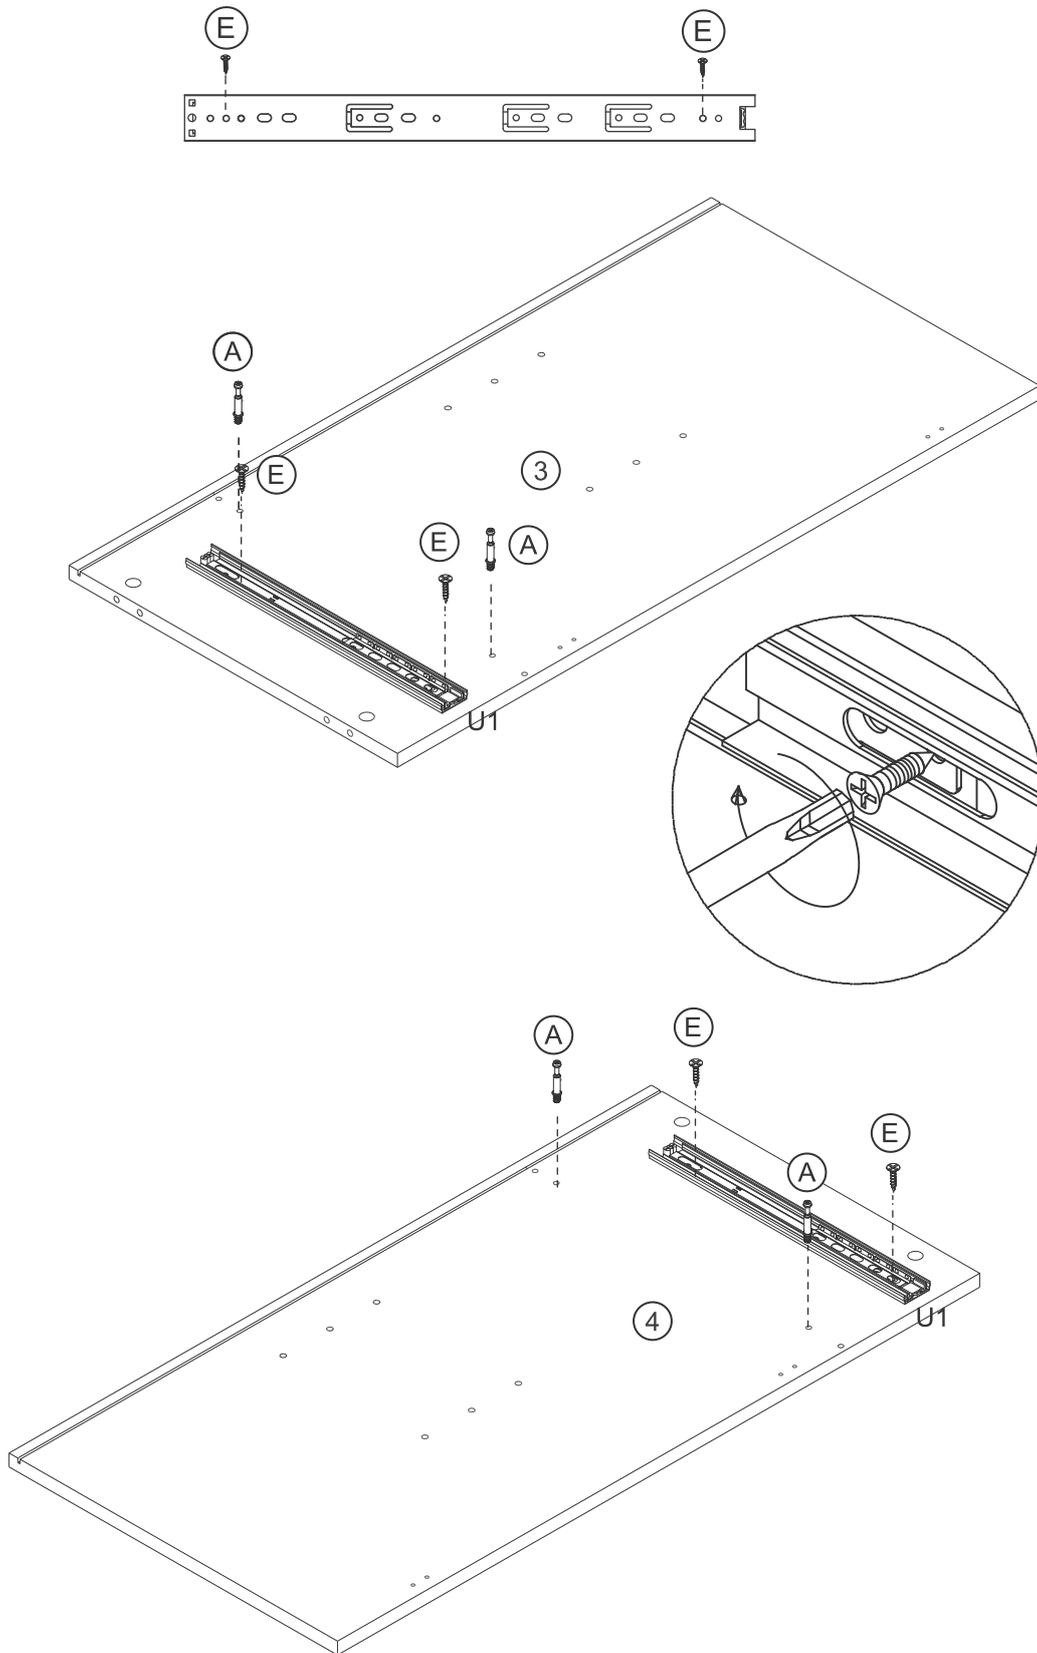

(A)



Cam Bolt x 4

(E)



Screw x 4


(U)



Runner 290mm x 2

Assembly Instructions

Step 3

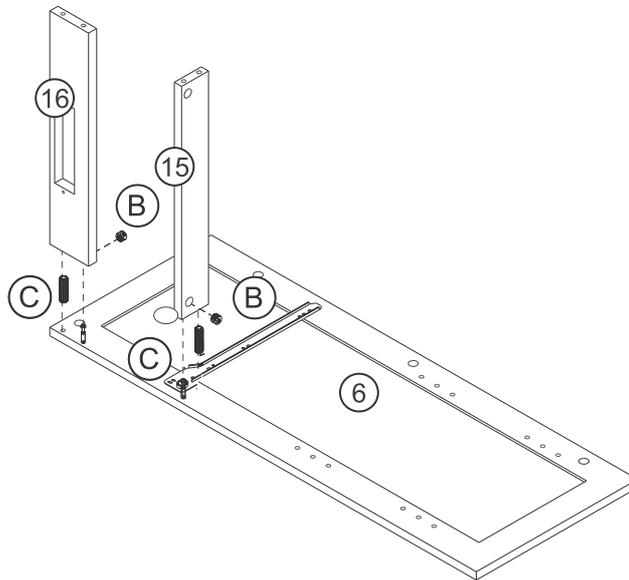


Cam lock x 2



Dowel x 2

Step 4

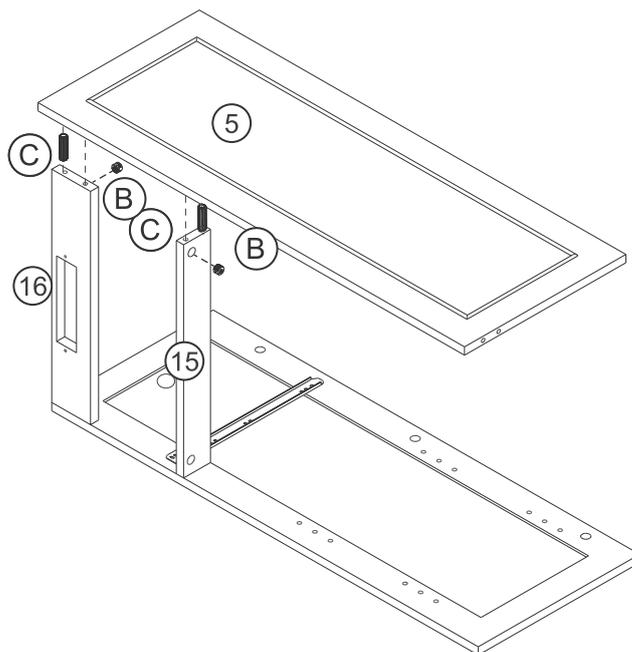


Cam lock x 2




Dowel x 2

Assembly Instructions

Step 5

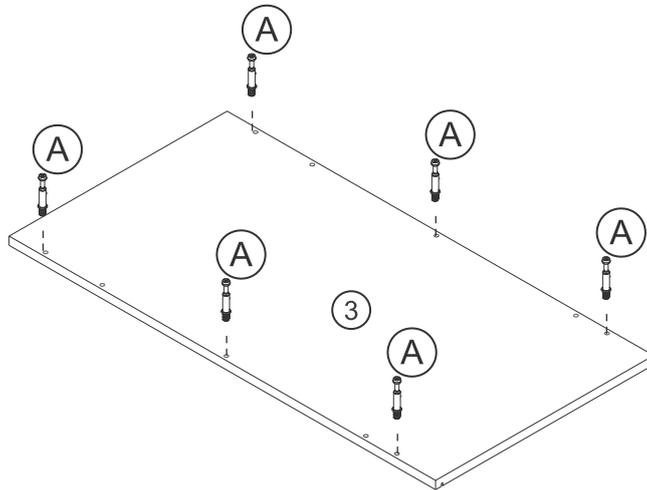


A



Cam Bolt x 6

Step 6

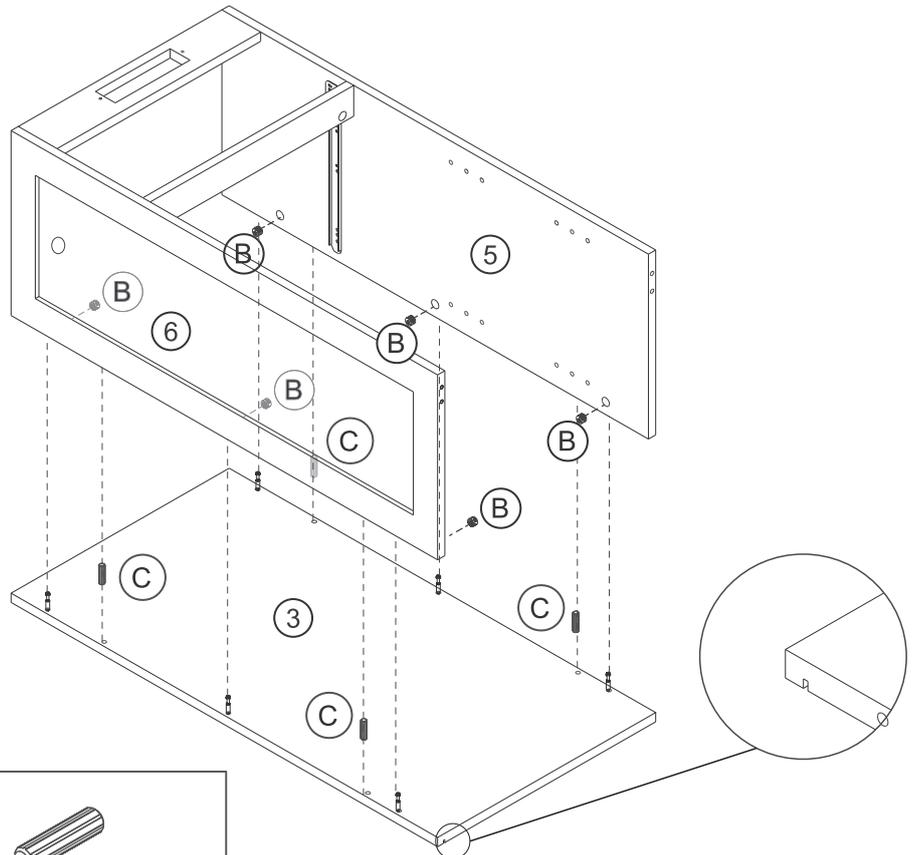

B



Cam lock x 6




C






Dowel x 4

Assembly Instructions

Step 7

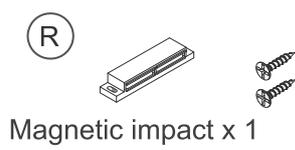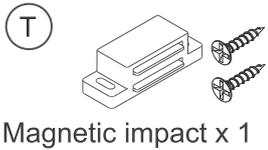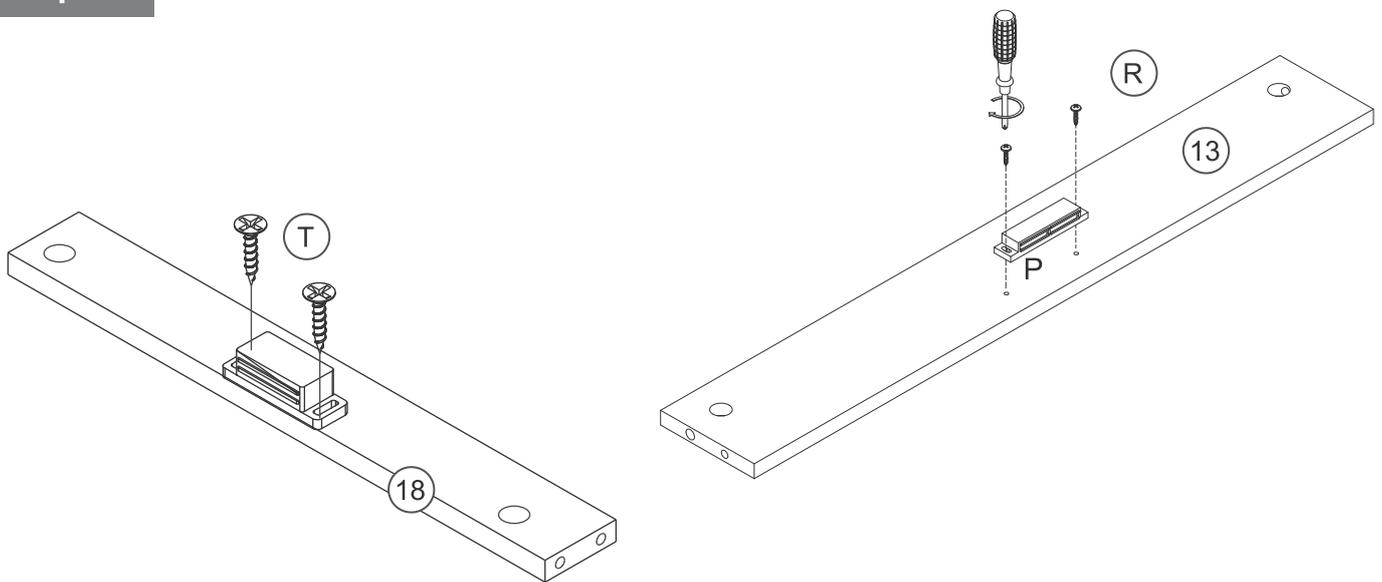


Step 8

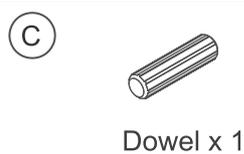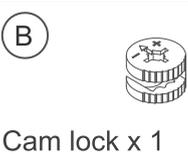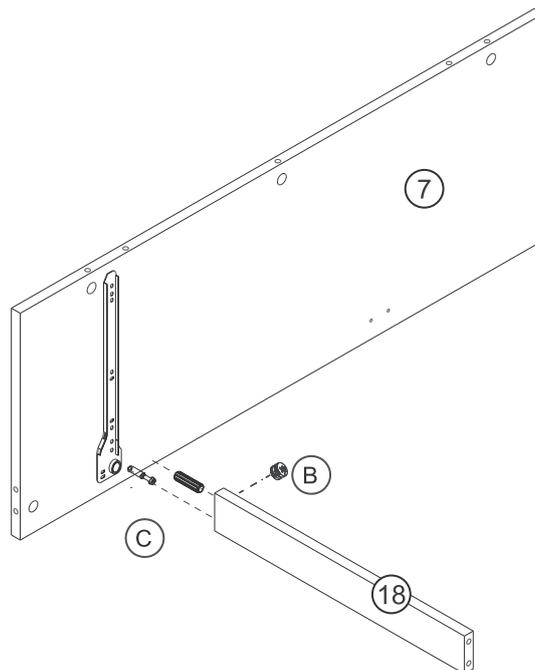

Assembly Instructions

Step 9

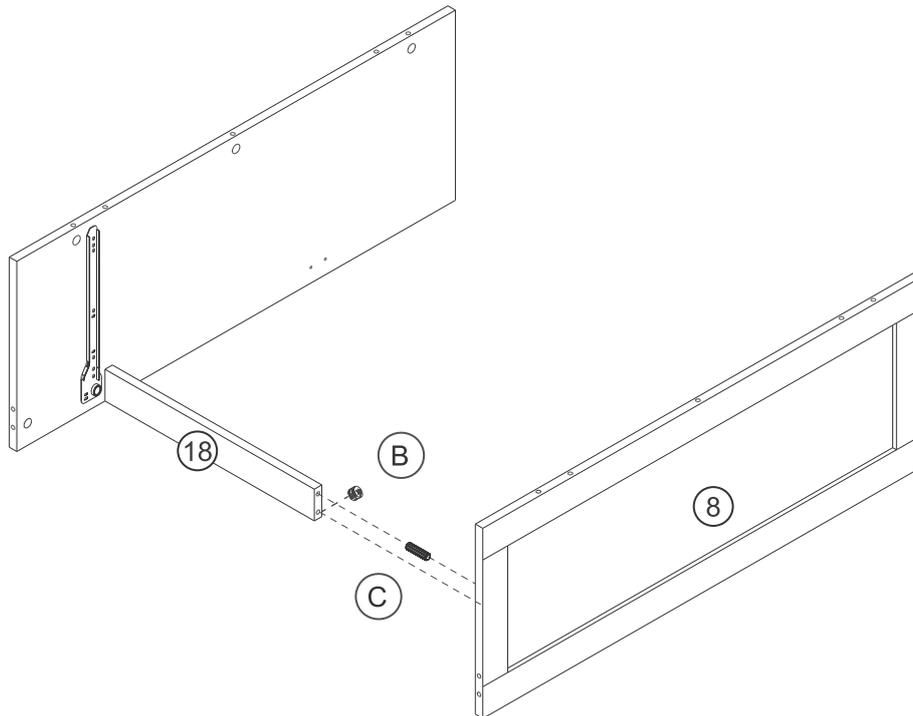


Cam lock x 1

C



Dowel x 1

Step 10

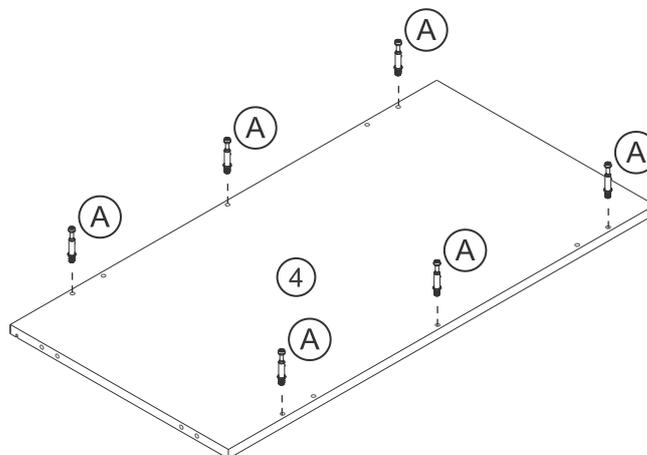



A






Cam Bolt x 6

Assembly Instructions

Step 11

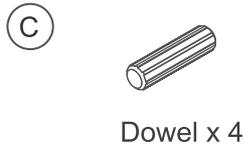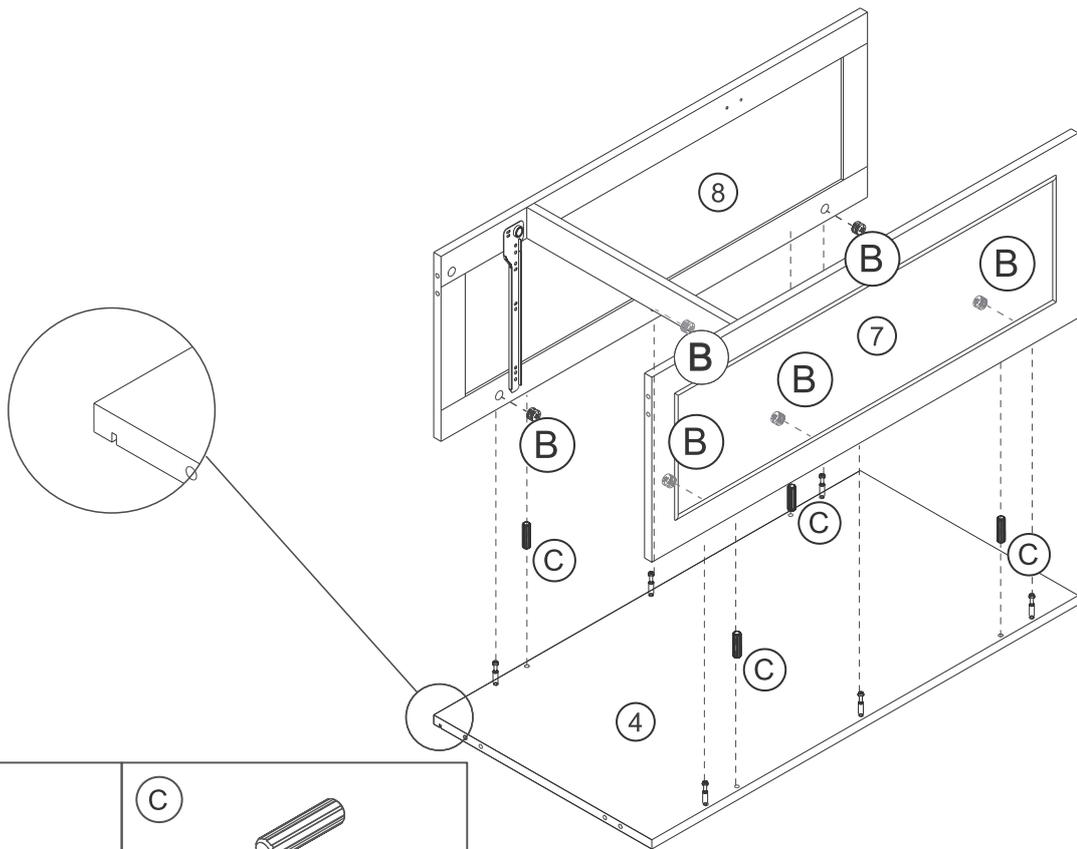


Step 12

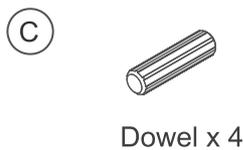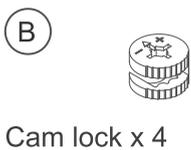
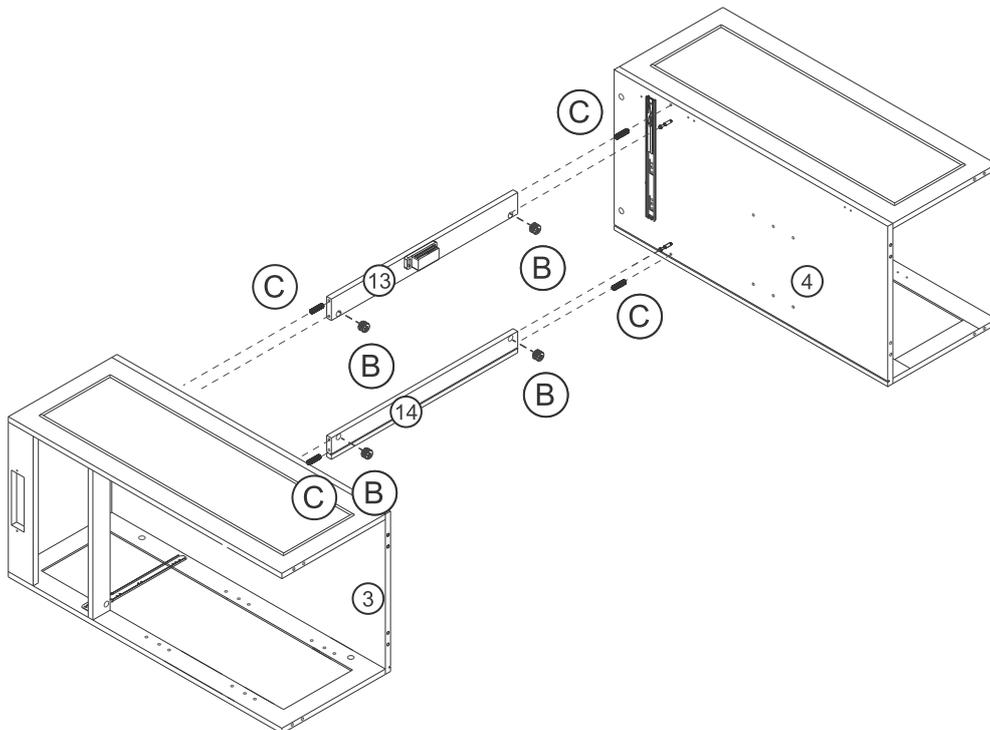


Assembly Instructions

Step 13

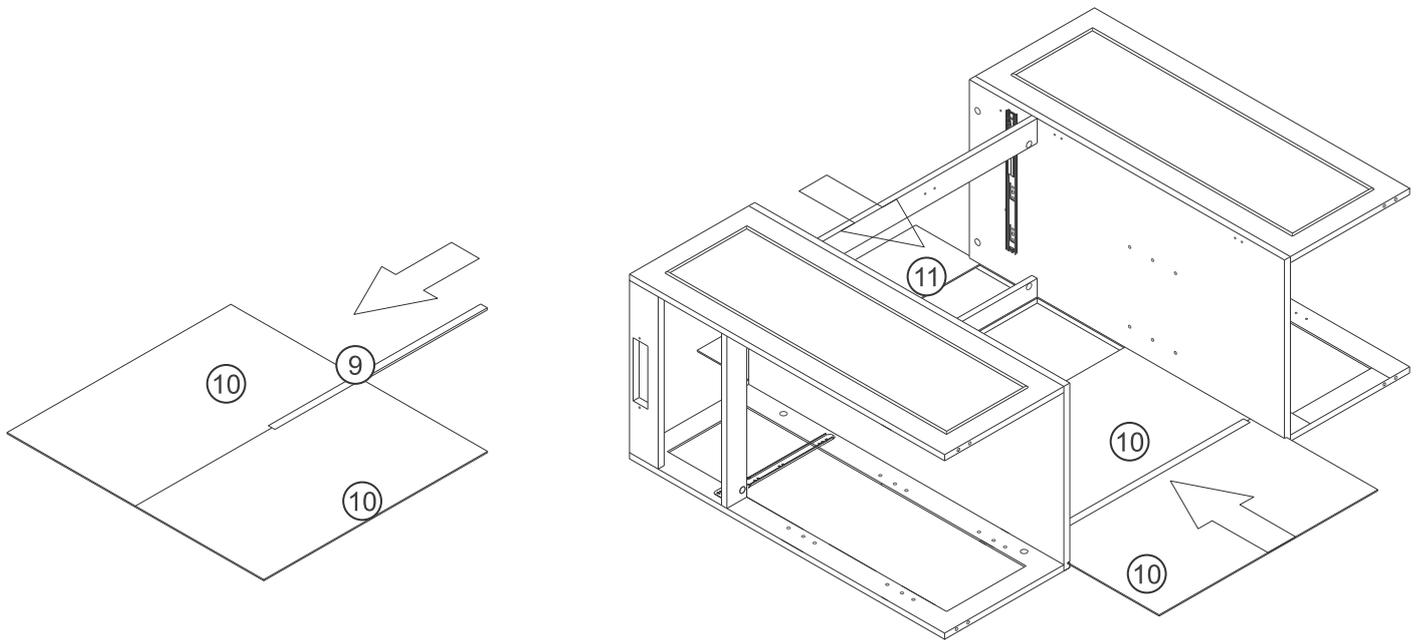


Step 14

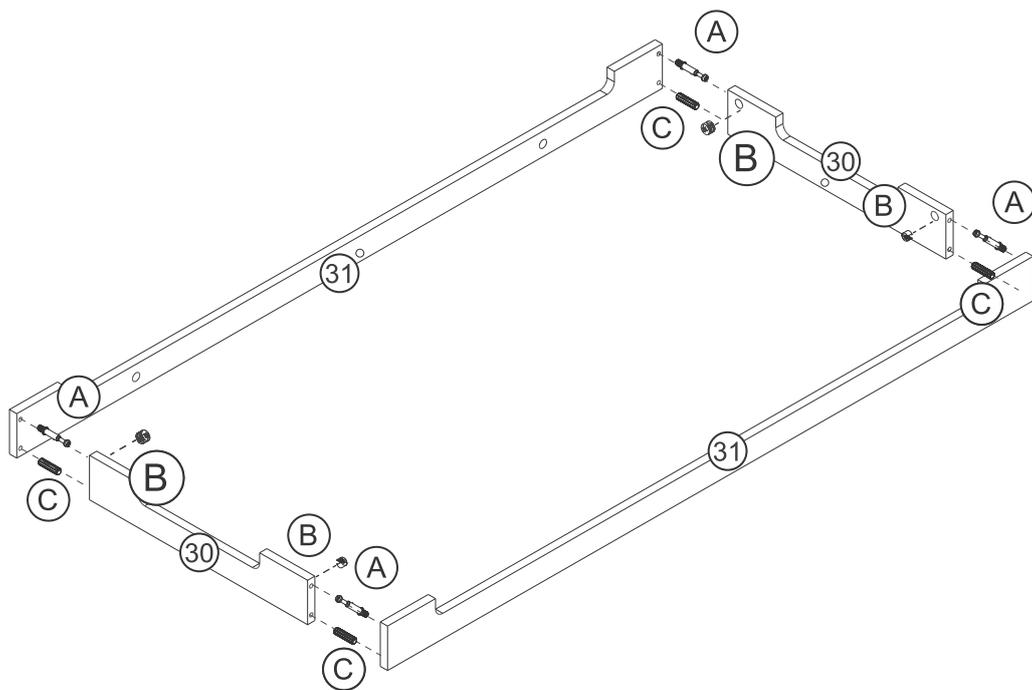

Cam Bolt x 4




Cam lock x 4




Dowel x 4

Assembly Instructions

Step 15

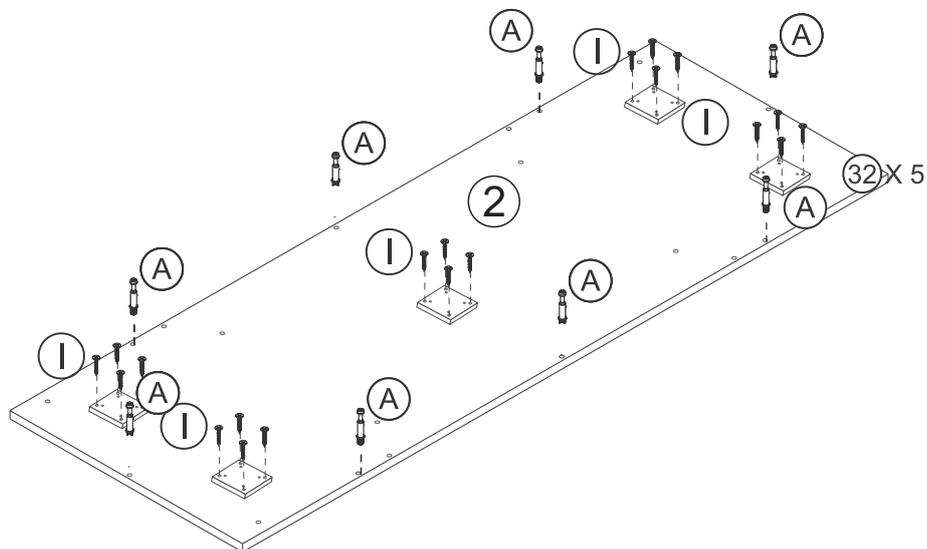

(A)




Cam Bolt x 8

(I)



4*25mm Screw x 20

Step 16

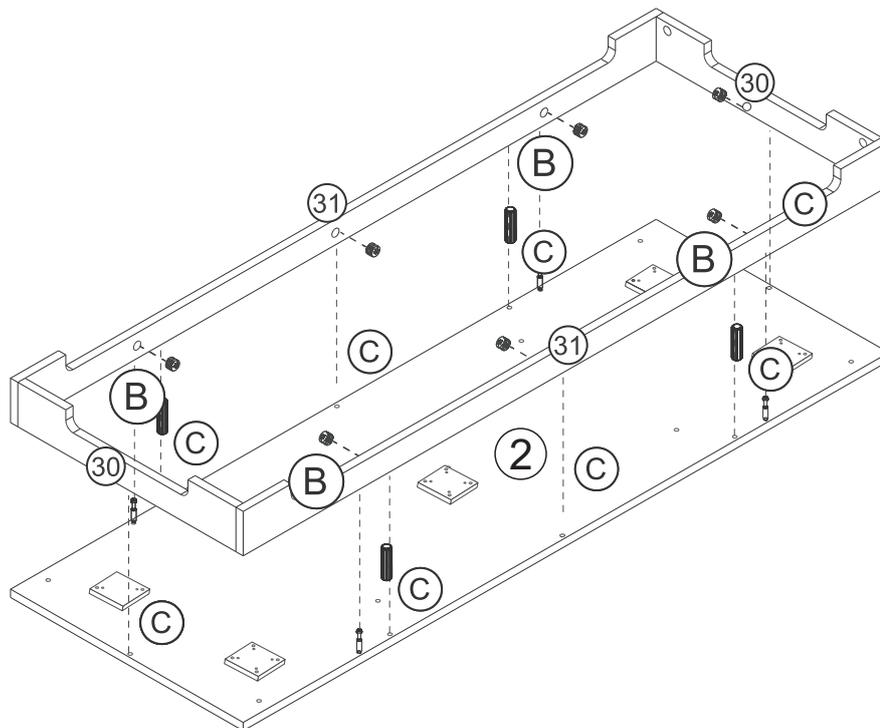

(B)



Cam lock x 8


(C)



Dowel x 4


Assembly Instructions

Step 17

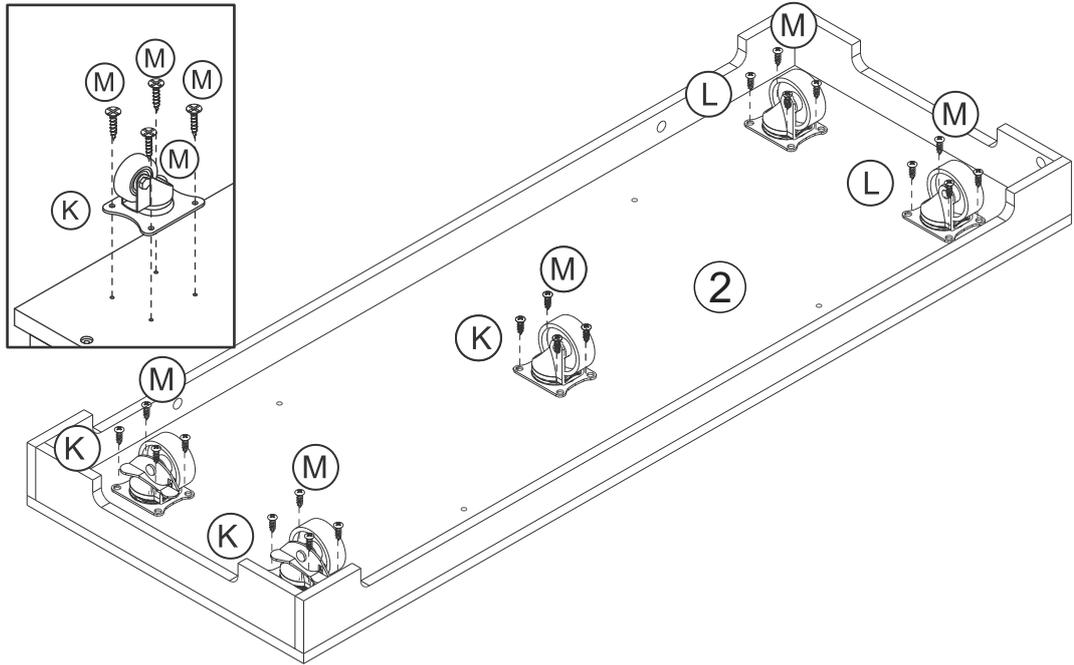

 <p>(K) Caster x 3</p>	 <p>(L) Locking caster x 2</p>	 <p>(M) 6*14mm Screw x 20</p>
---	---	--


Step 18

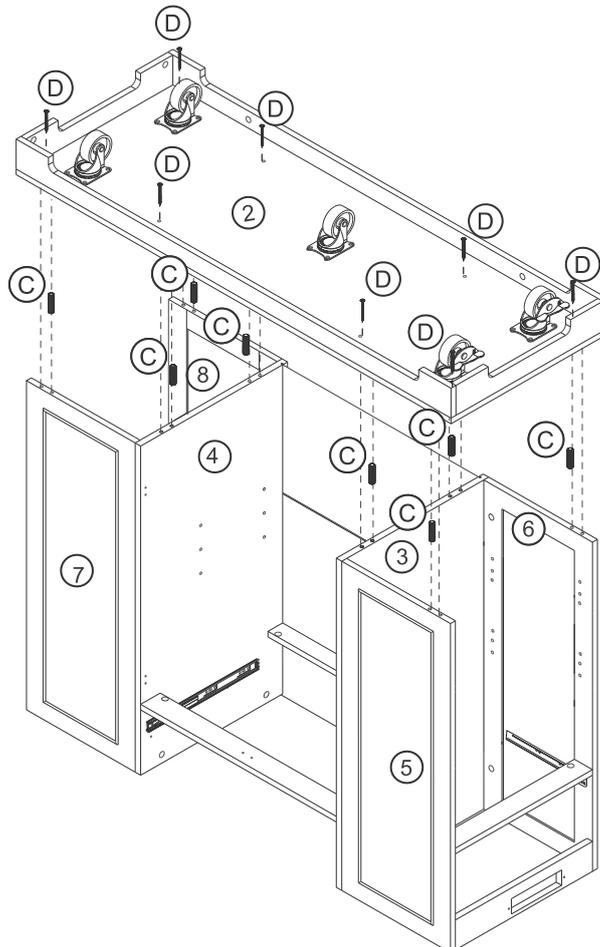


 <p>(C) Dowel x 8</p>	 <p>(D) Screw x 8</p>
--	--

Assembly Instructions

Step 19

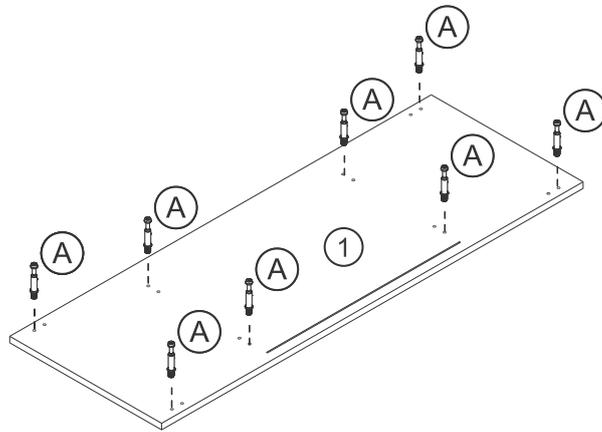


A



Cam Bolt x 8

Step 20

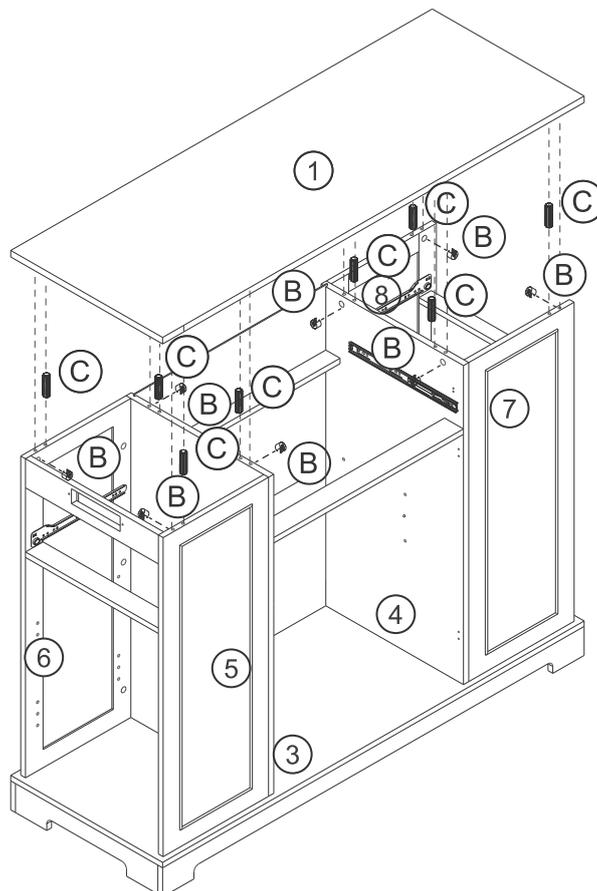

B



Cam lock x 8


C




Dowel x 8

Assembly Instructions

Step 21

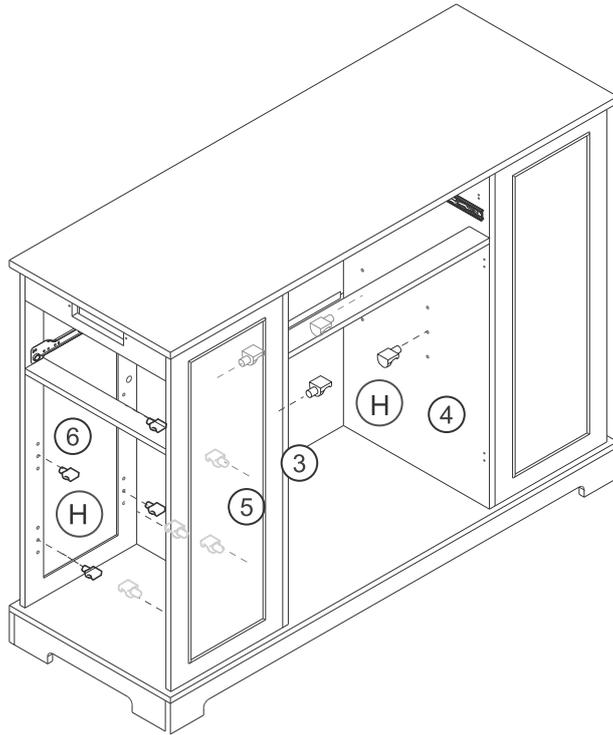


H





Layer bracket x 12

Step 22

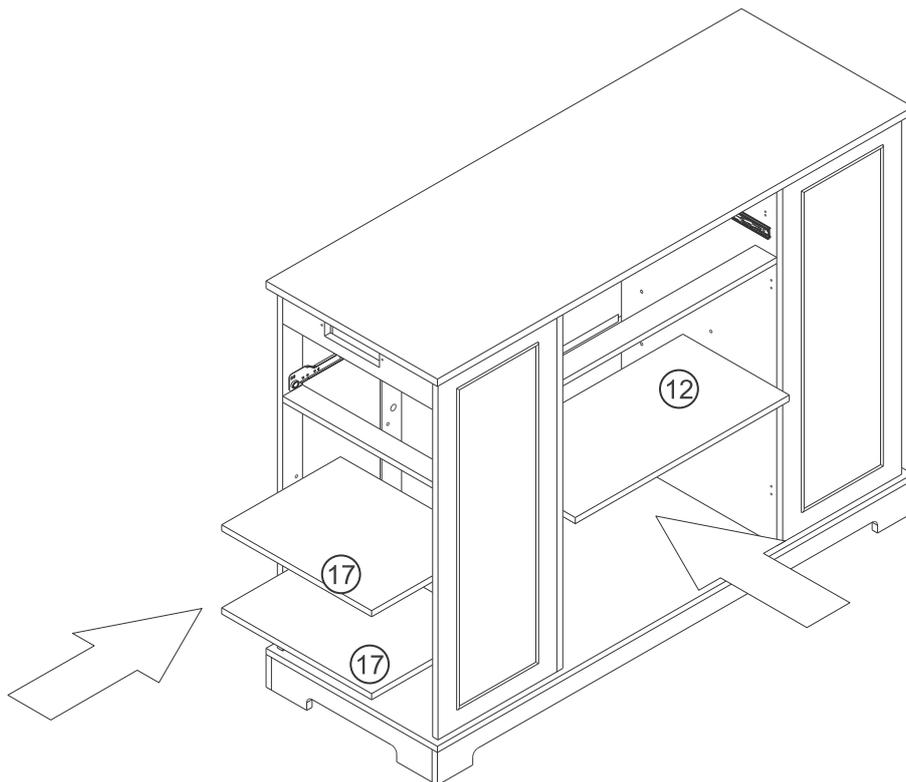


Assembly Instructions

Step 23

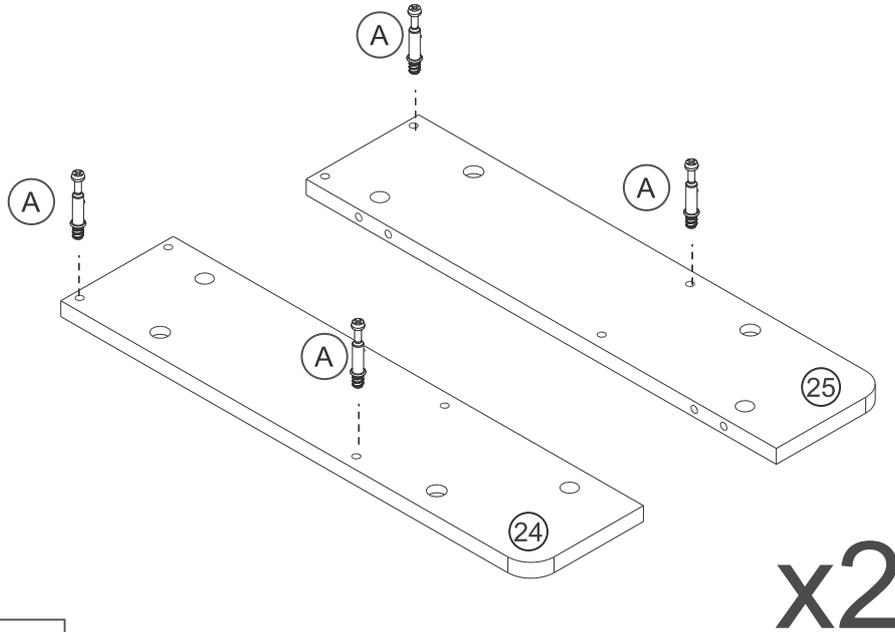


Cam Bolt x 8

Step 24

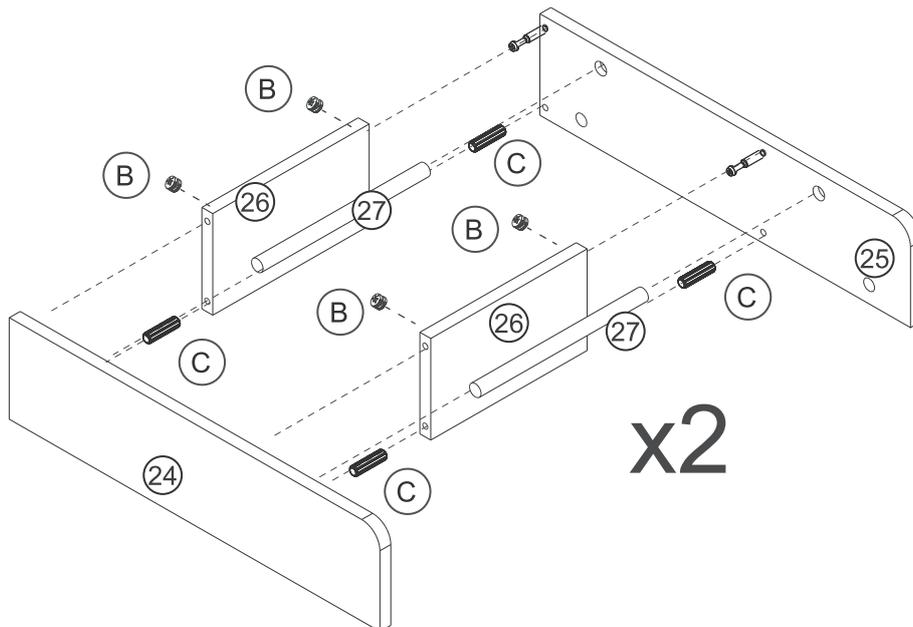




Cam lock x 8




Dowel x 8

Assembly Instructions


Step 25

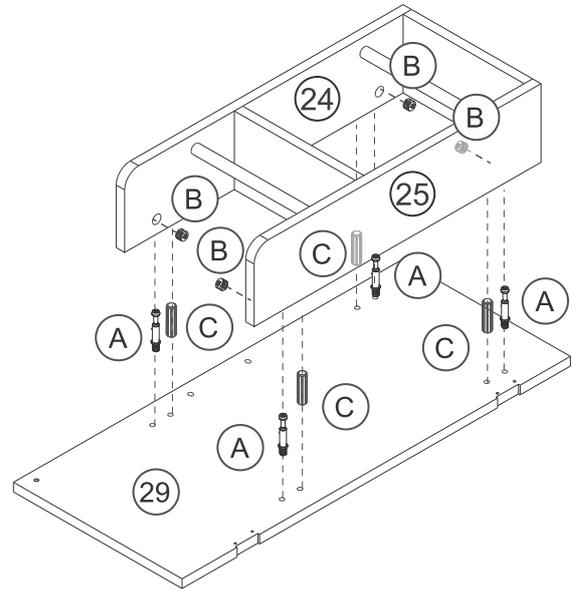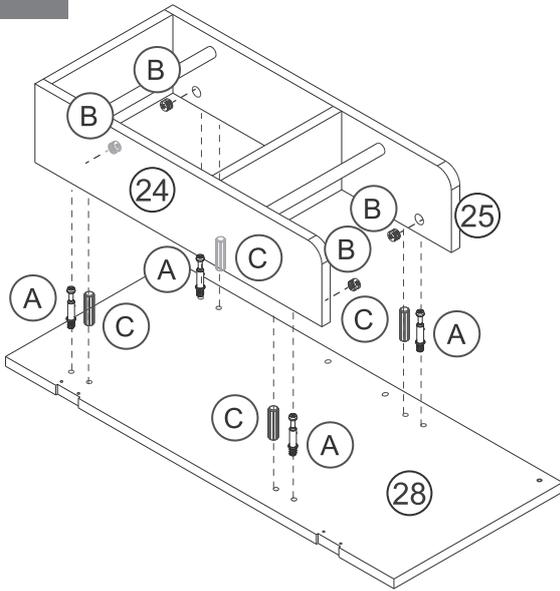

Cam Bolt x 8





Cam lock x 8




Dowel x 8

Step 26

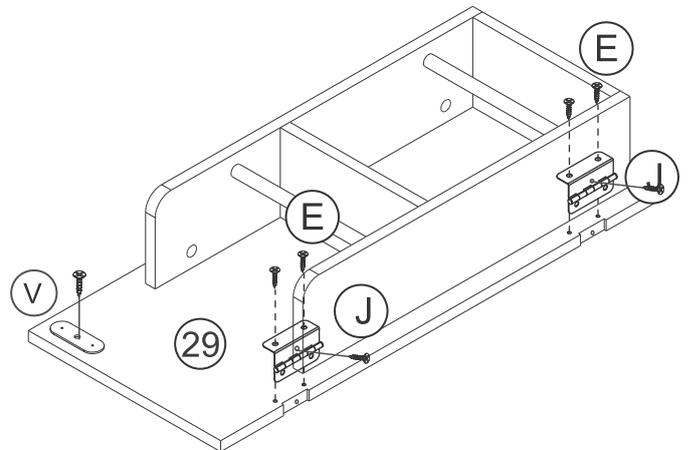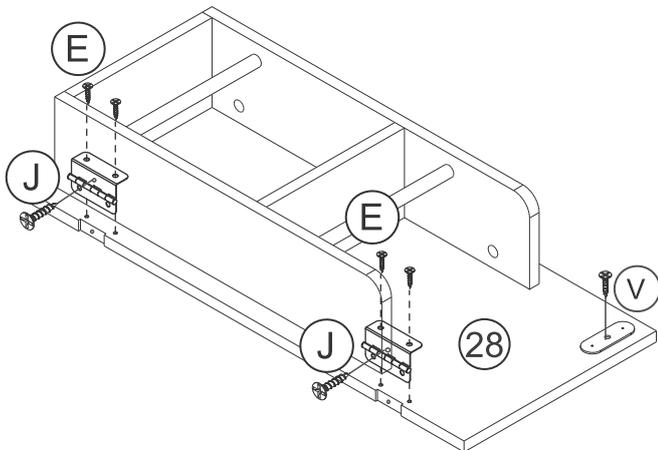

Screw x12




Hinge x 4



3*10mm Screw x 2

Assembly Instructions

Step 27

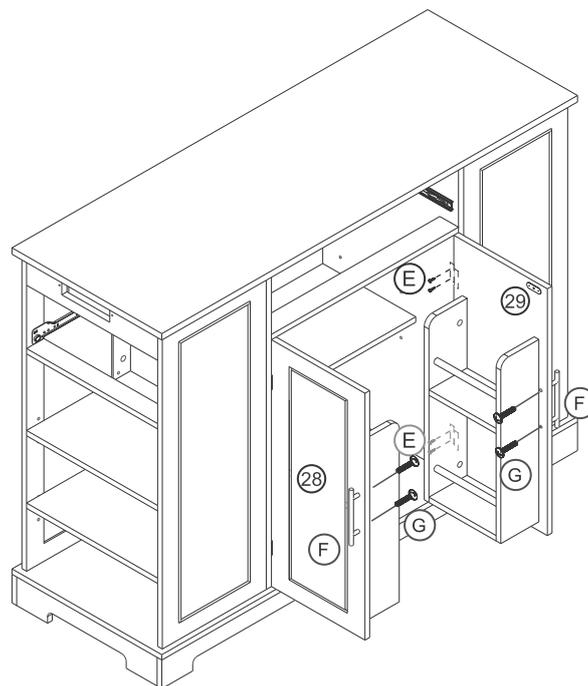


E



Screw x 8

F




Hold hands x2

G



4*20mm Screw x 4

Step 28

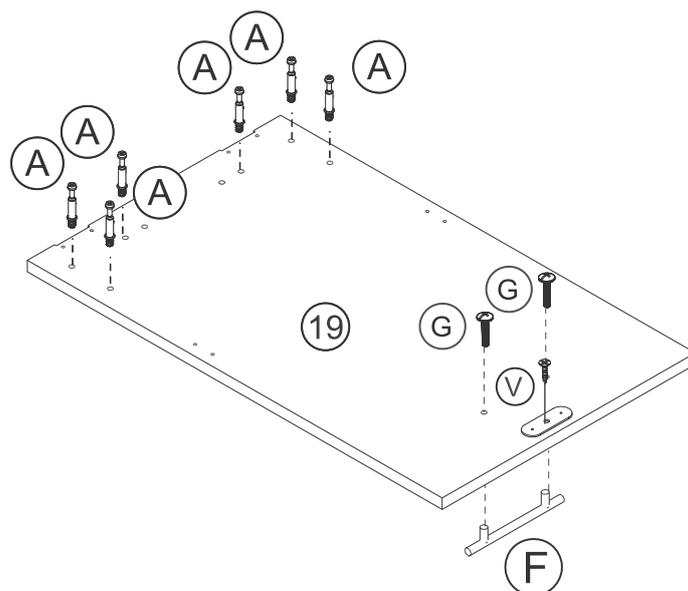

A



Cam Bolt x 6

F




Hold hands x 1

G



4*16mm Screw x 2


V



3*10mm Screw x 1

Assembly Instructions

Step 29

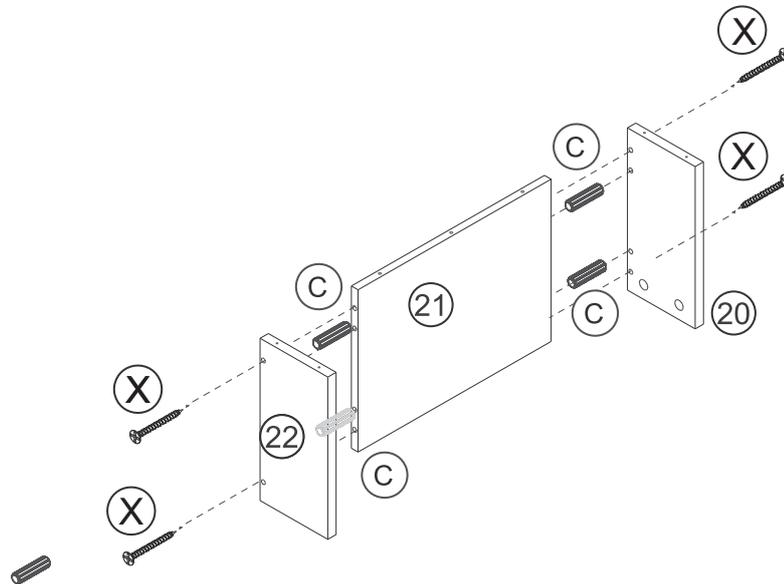

(X)




Screw x 4

(C)



Dowel x 4

Step 30

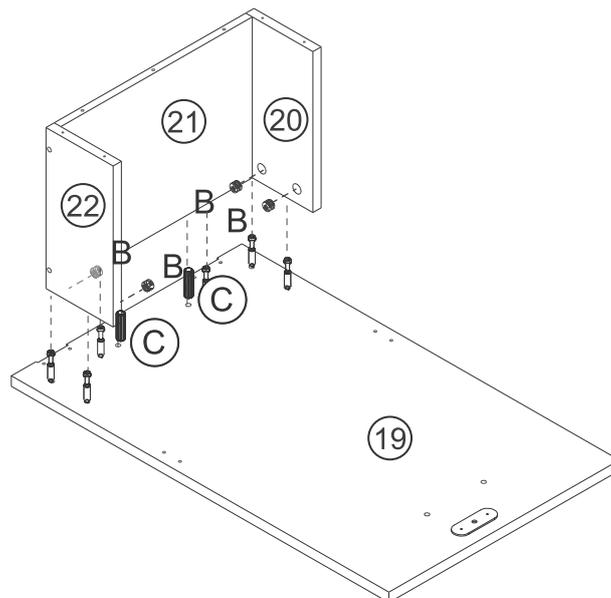

(B)



Cam lock x 6


(C)




Dowel x 2

Assembly Instructions

Step 31

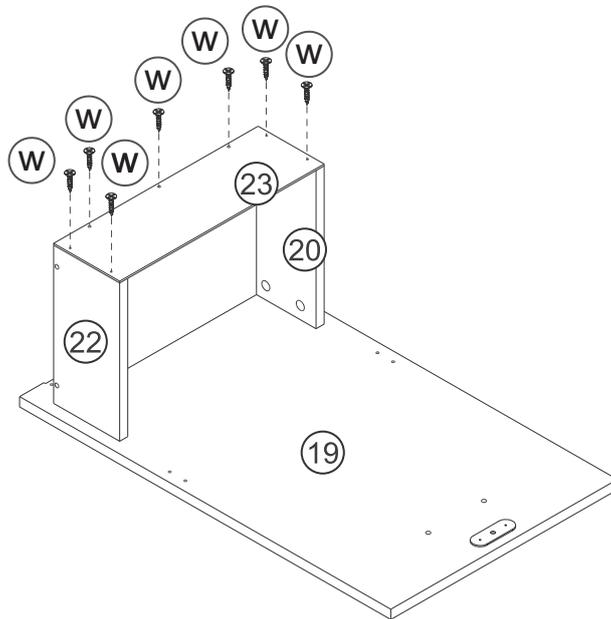


W



Screw x 7

Step 32

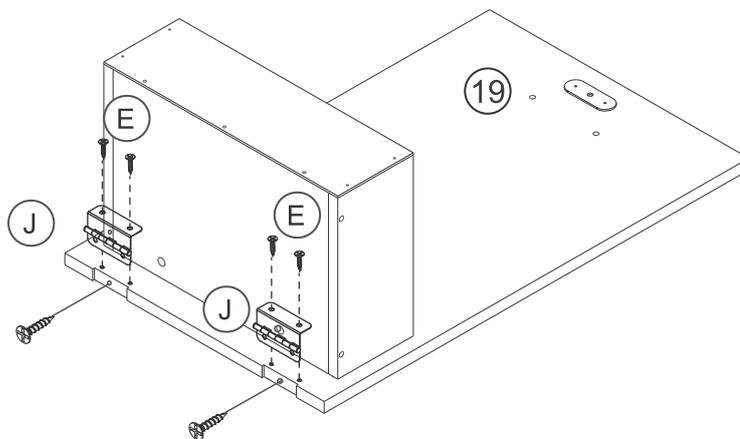


E



Screw x 6



J

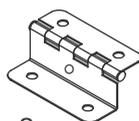

Hinge x 2

Assembly Instructions

Step 33

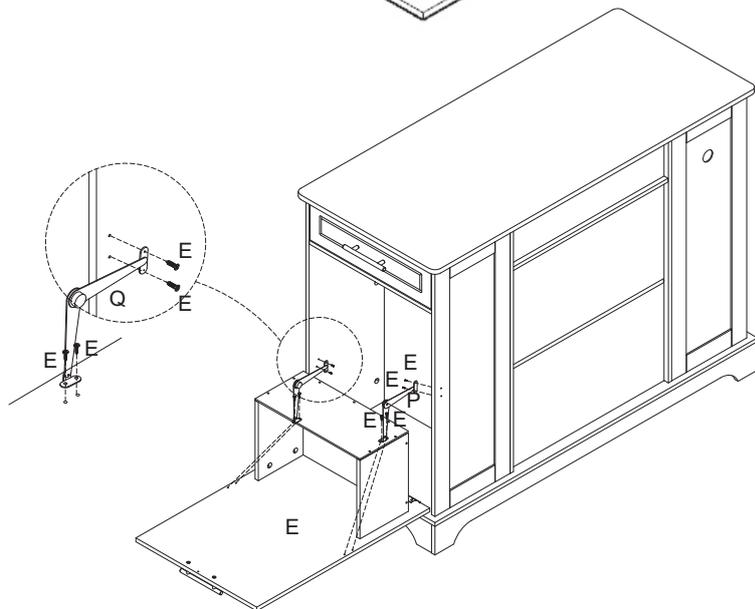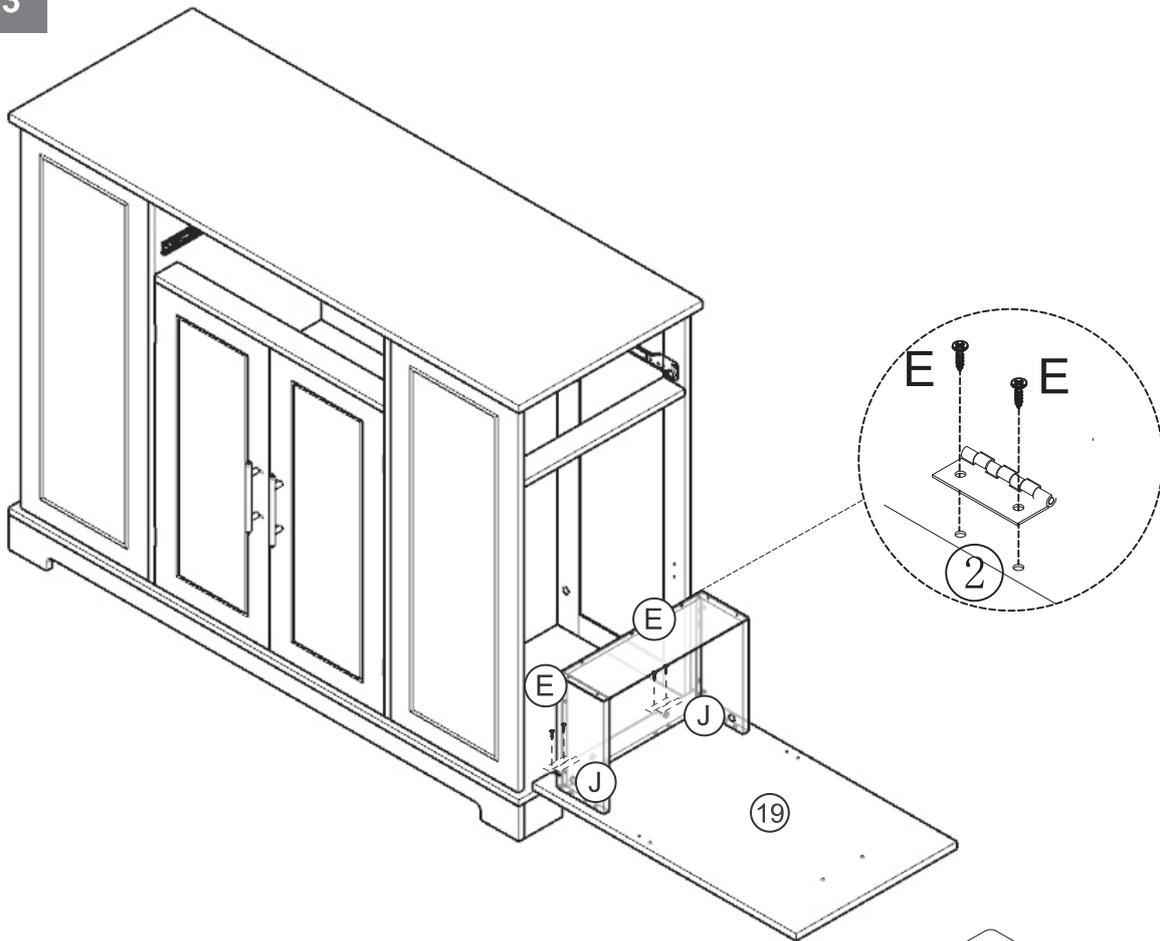

(E)



Screw x 12

(P)



Hinge x 1


(Q)




Hinge x 1

Assembly Instructions

Step 34

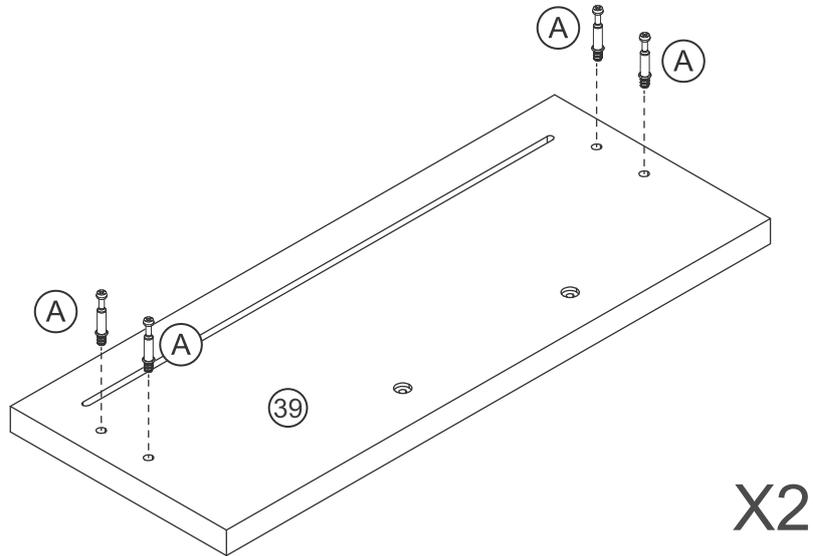


A



Cam Bolt x 8

Step 35

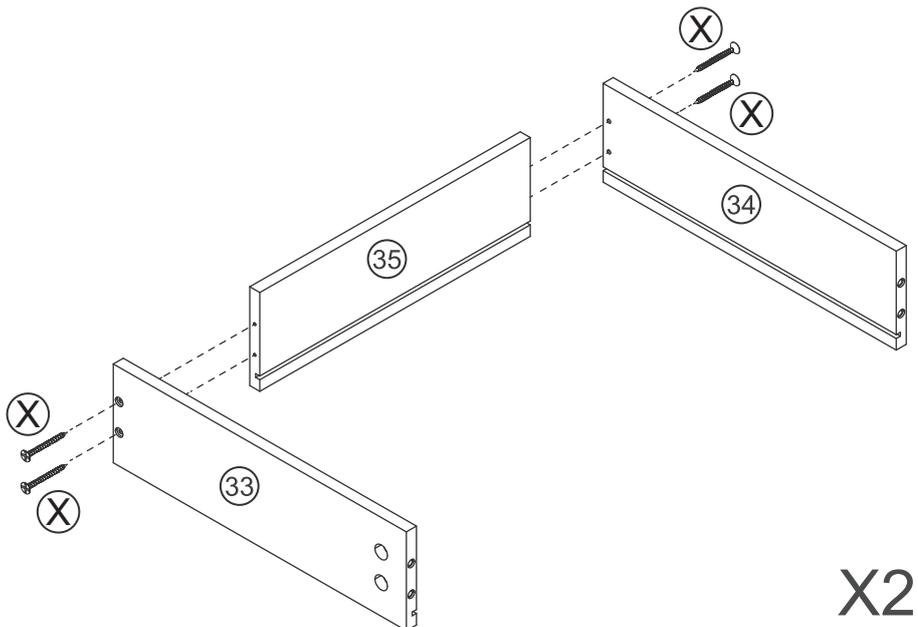


X



Screw x 8


Assembly Instructions

Step 36

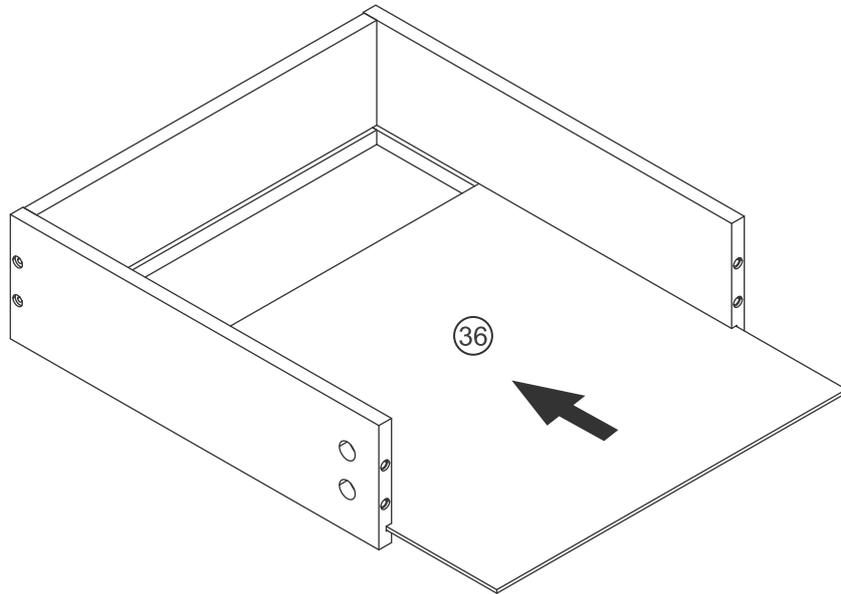

X2

Step 37

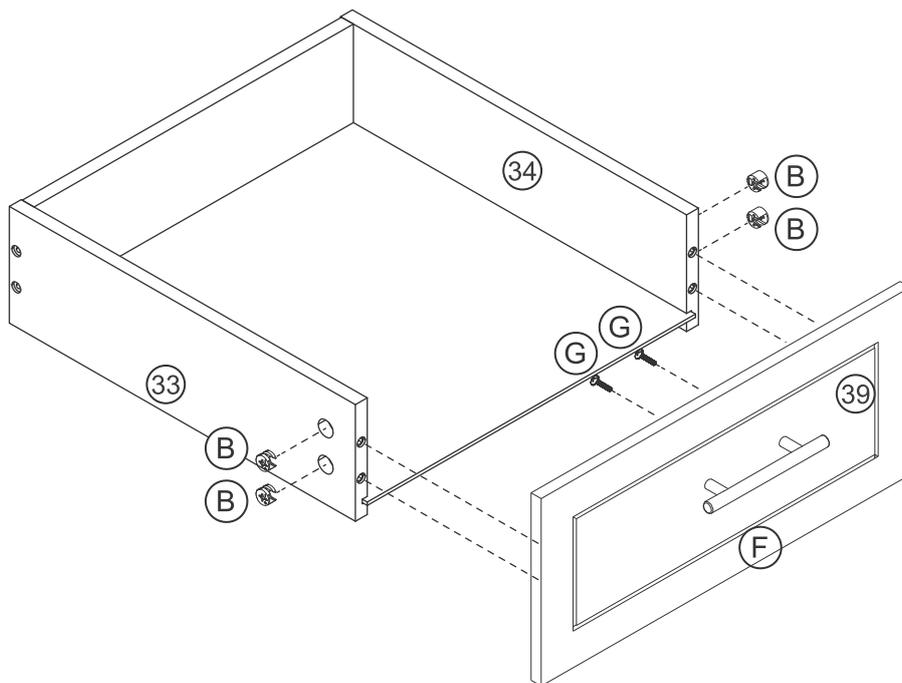


(B)



Cam lock x 8

(F)



Hold hands x 2

(G)




4*16mm Screw x 4

X2

Assembly Instructions

Step 38

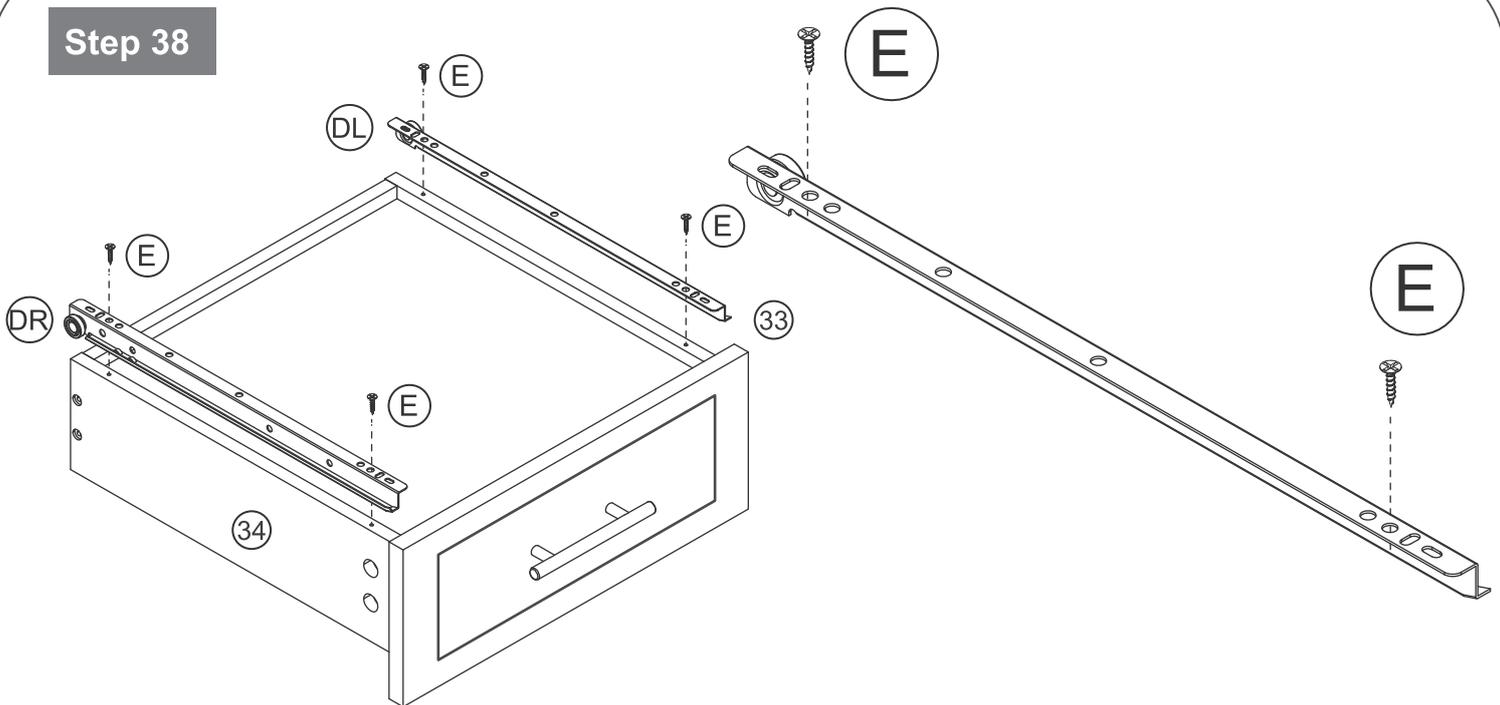


E




Screw x 8

DR



Runner 250mm x 2


DL



Runner 250mm x 2

X2

Step 39

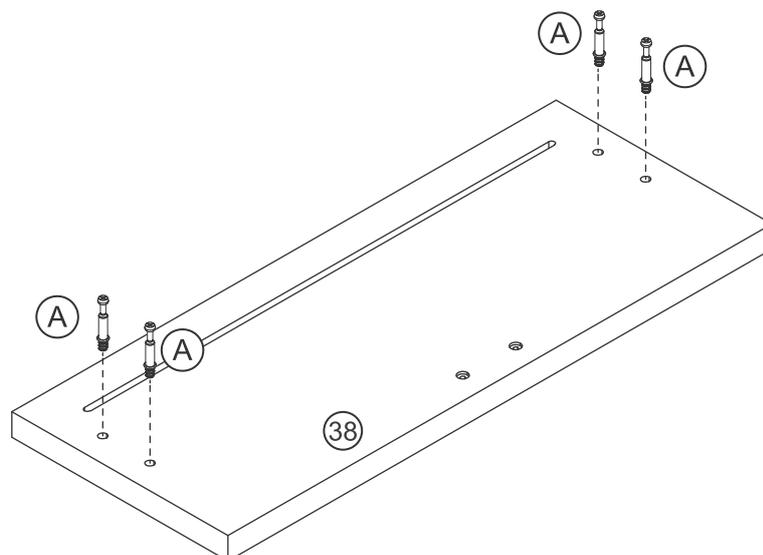


A



Cam Bolt x 4

Assembly Instructions

Step 40

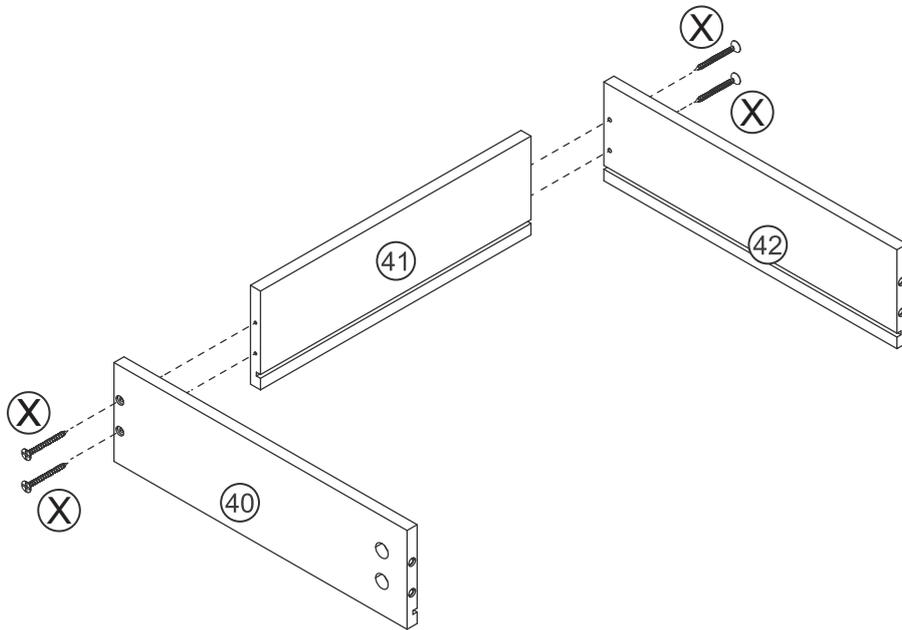


X




Screw x 4

Step 41

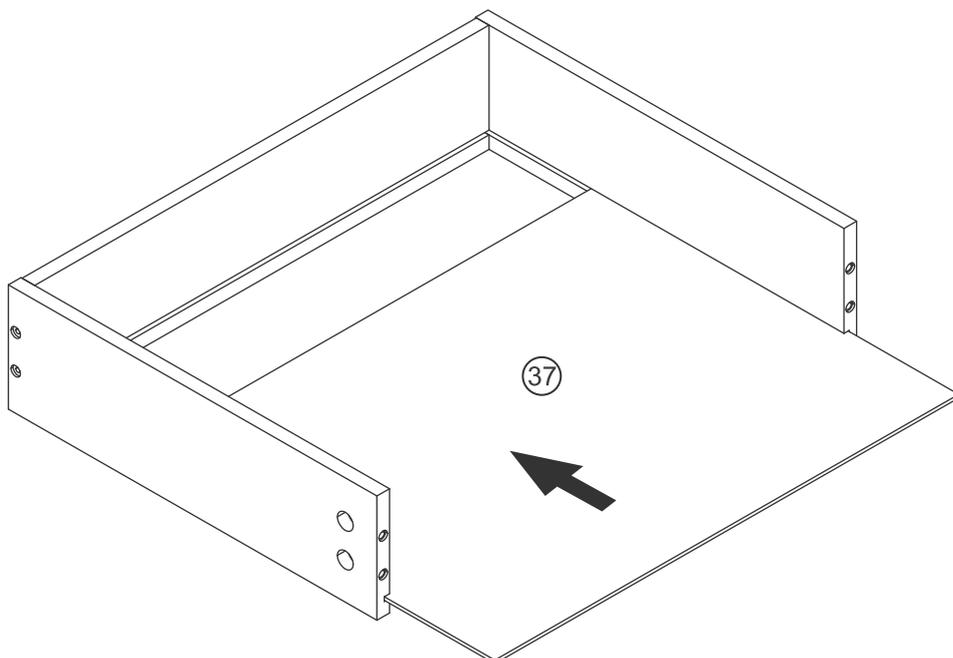

Assembly Instructions

Step 42

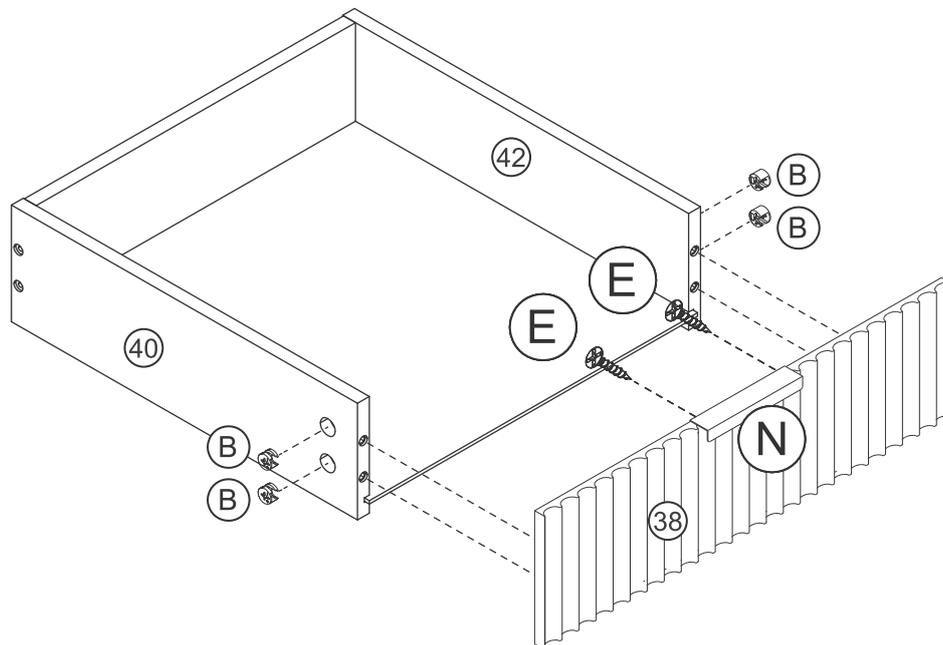

(B)




Cam lock x 4

(E)




Screw x 2

(N)



120mm hands x 1

Step 43

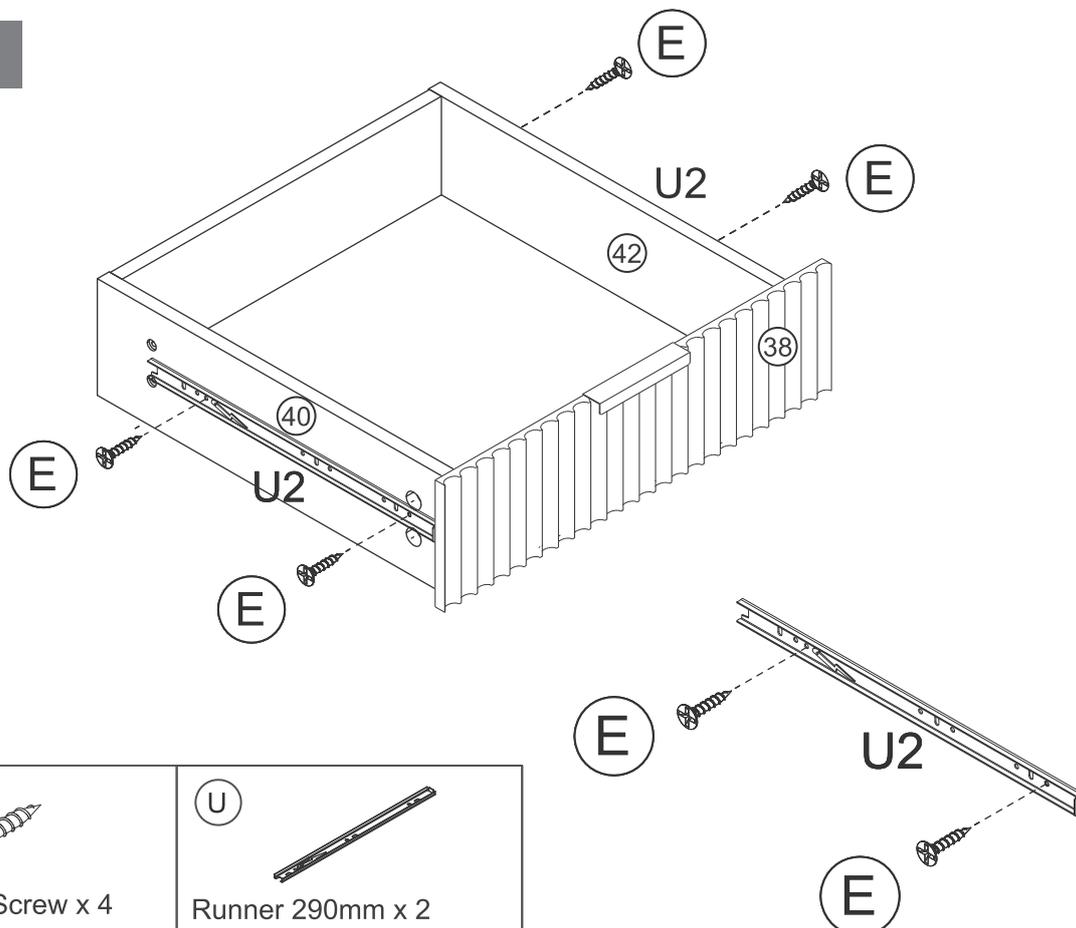

(E)



Screw x 4


(U)




Runner 290mm x 2

Assembly Instructions

Step 44

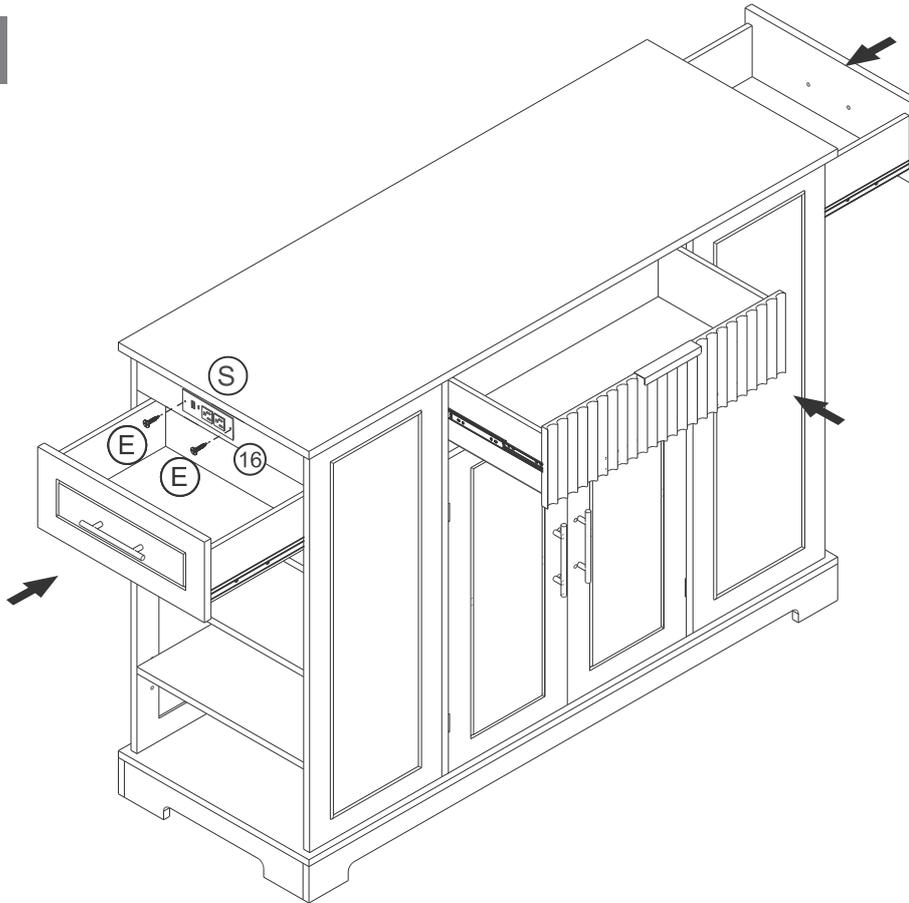

S	
Extension cord x 1	
E	
Screw x 2	

