


# Kitchen Island Carts

Assembly Instructions - Please keep for future reference

SKU: N707P423684/N707P423685

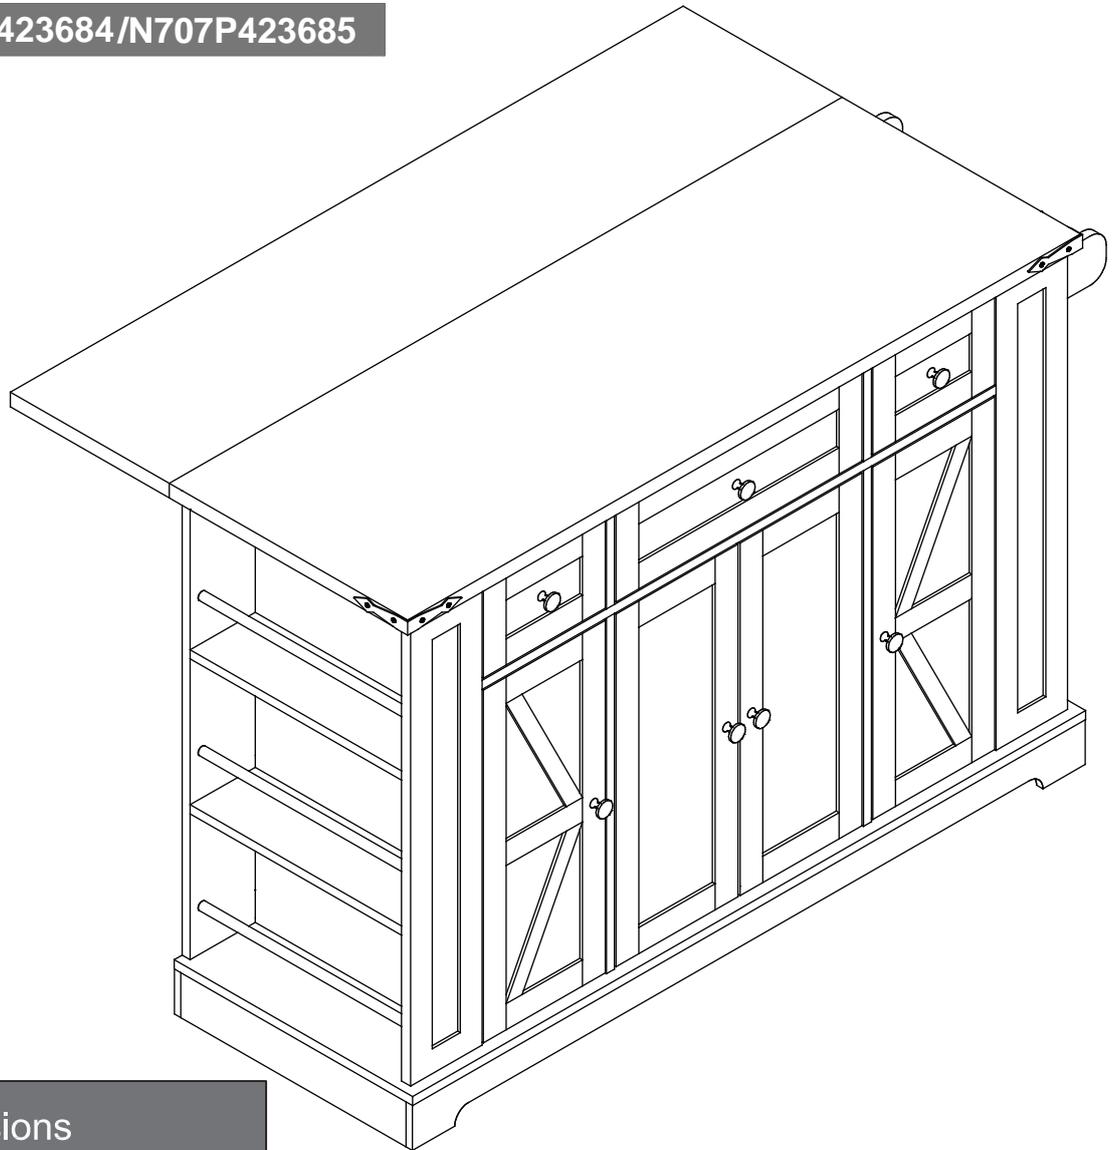

## Dimensions

Width-50inch

Depth-17.75inch+29.5inch

Height-36inch

Important – Please read these instructions fully before starting assembly



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose









Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

# Components - Fittings



Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
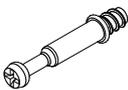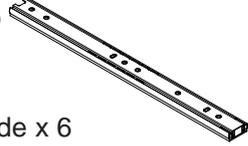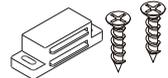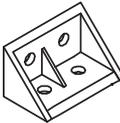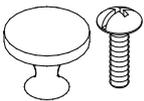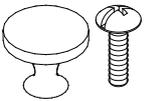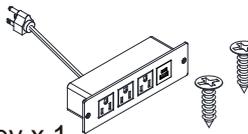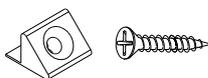
<p><b>A</b></p>  <p>Cam Bolt x 87+2</p>	<p><b>B</b></p>  <p>Cam lock x 87+2</p>	<p><b>C</b></p>  <p>6*40mm Dowel x 30+2</p>	<p><b>D</b></p>  <p>Slide x 6</p>
<p><b>E</b></p>  <p>3*12mm Screw x 108+2</p>	<p><b>F</b></p>  <p>7x40mm Screw x 12</p>	<p><b>G</b></p>  <p>Magnetic impact x 3 3*16mm Screw x 3</p>	<p><b>H</b></p>  <p>Caster x 3</p>
<p><b>I</b></p>  <p>Locking caster x 2</p>	<p><b>J</b></p>  <p>Angle iron x 6</p>	<p><b>K</b></p>  <p>x 8set</p>	<p><b>L</b></p>  <p>Suction sheet x 4</p>
<p><b>M</b></p>  <p>4*18mm Handle x 4set</p>	<p><b>N</b></p>  <p>Laminate support x 12</p>	<p><b>O</b></p>  <p>3.5*35mm Screw x 14</p>	<p><b>P</b></p>  <p>6*25mm Screw x 20</p>
<p><b>Q</b></p>  <p>4*8mm Handle x 3set</p>	<p><b>R</b></p>  <p>Pulley x 1</p>	<p><b>S</b></p>  <p>x 2set</p>	<p><b>T</b></p>  <p>Plastic Nail x 10 3*16mm Screw x 10</p>
<p><b>U</b></p>  <p>6*15mm Screw x 4</p>	<p><b>V</b></p>  <p>3.5*20mm Screw x 6</p>	<p><b>W</b></p>  <p>Perfect fit x26</p>	<p><b>Y</b></p>  <p>Allen key x 1</p>
 <p>Screwdriver x 1</p>			

## Tools required

Ruler - Use this ruler to help correctly identify the screws

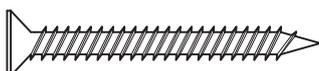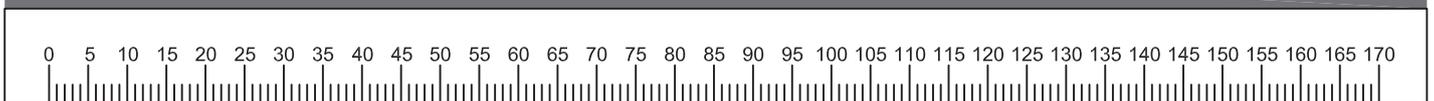

The screws length is measured from the head to the point (35mm screw shown).


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

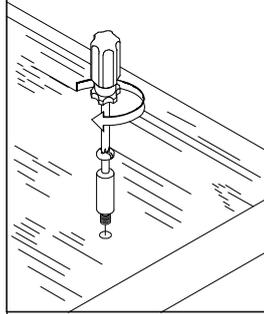

## Step 2

Push the male camlock into the entry hole.

2

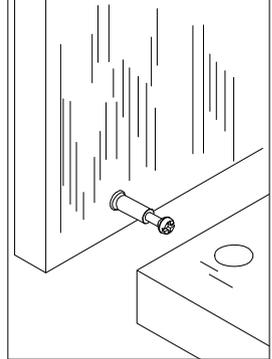


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

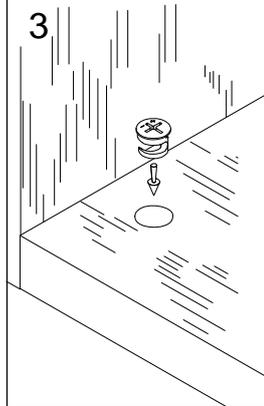


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4



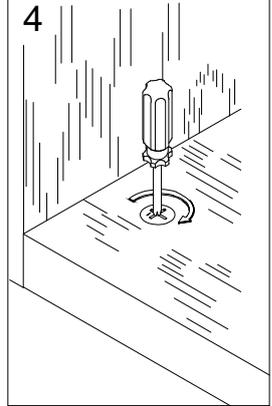










# Assembly Instructions

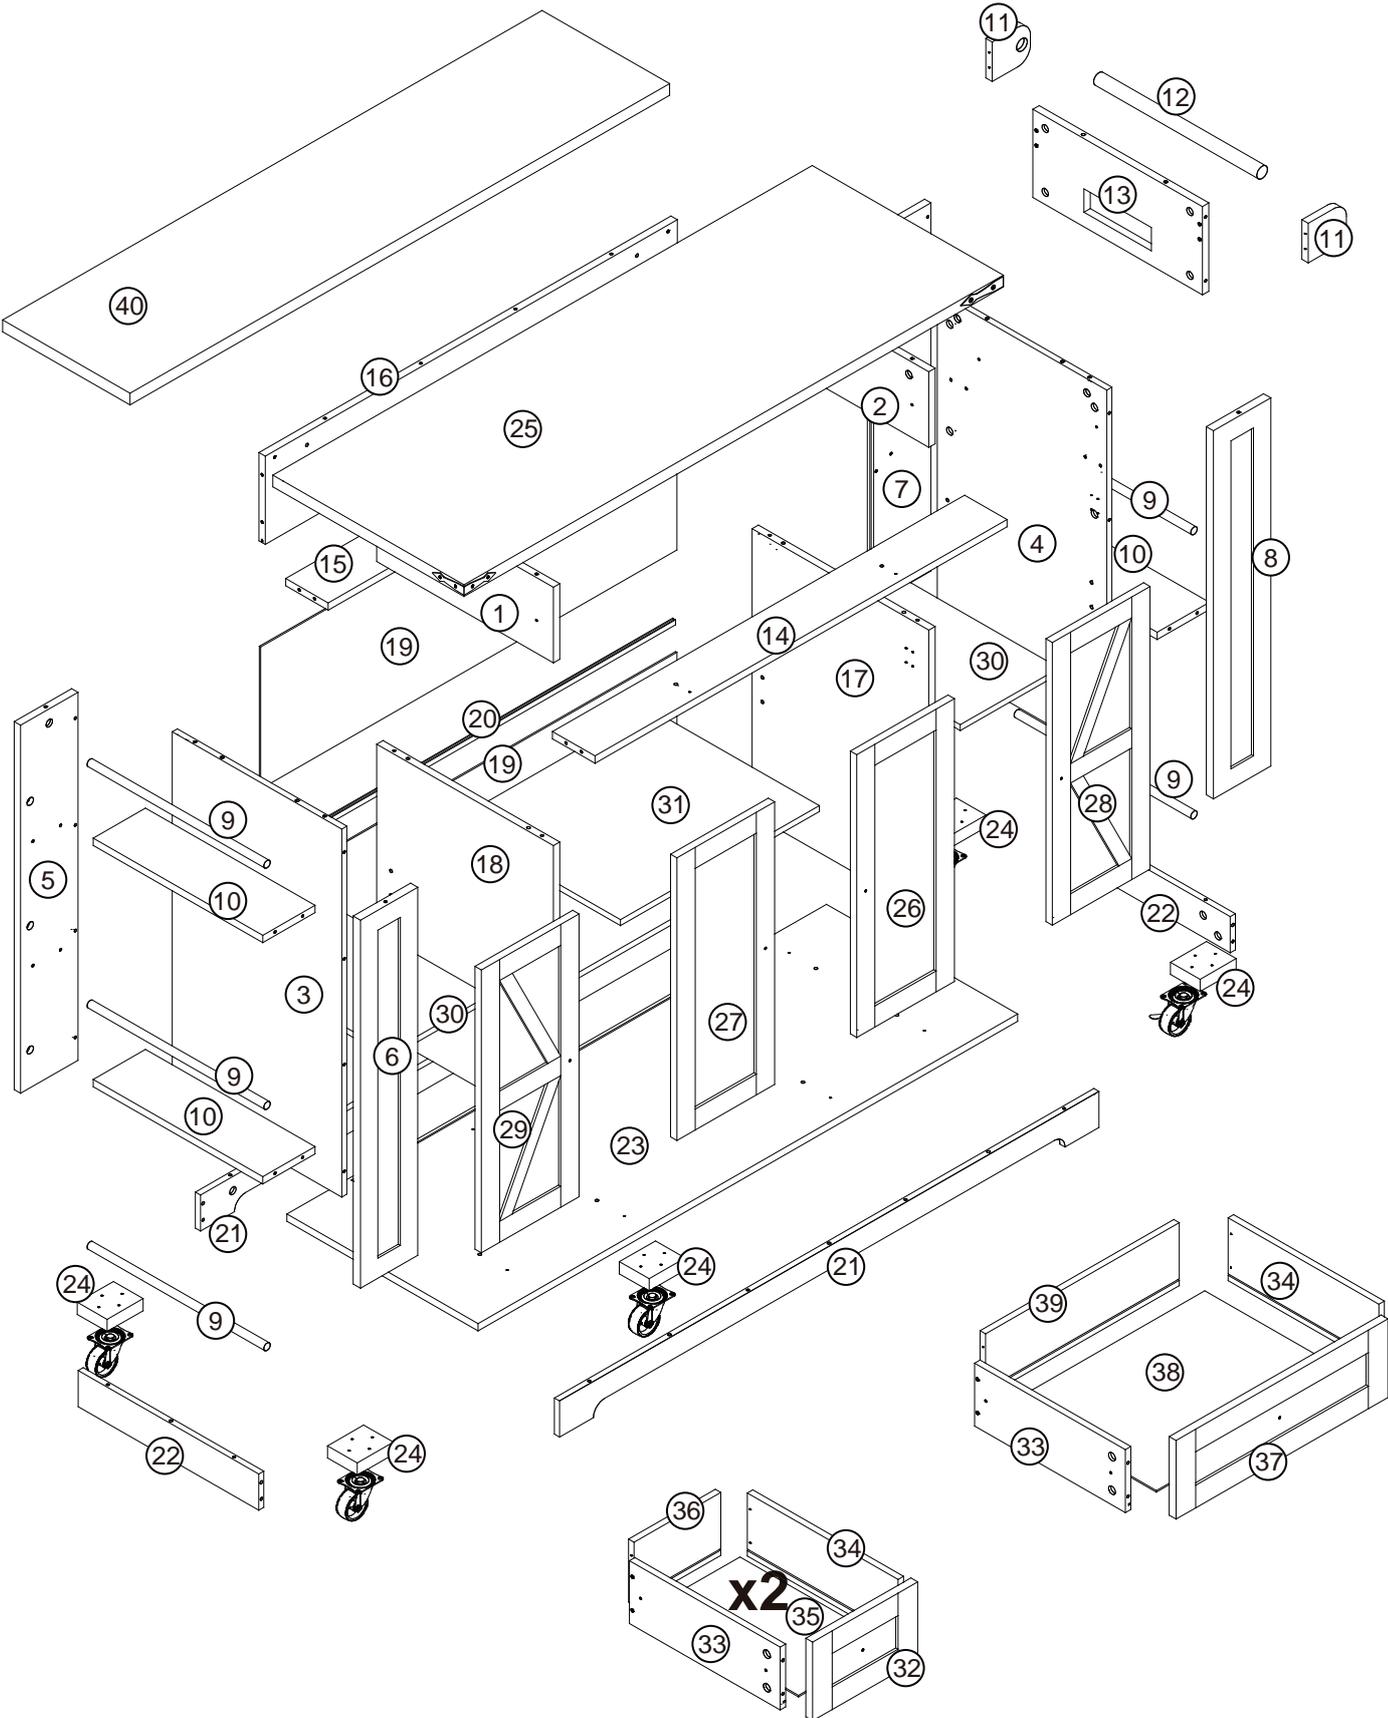



# Assembly Instructions

## BOX A - N707P423684

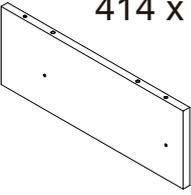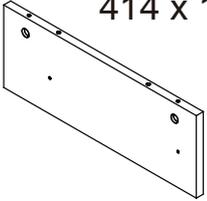
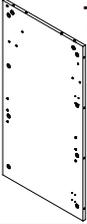
①	 414 x 155 x 15 mm	1
②	 414 x 155 x 15 mm	1
③	 755 x 398 x 12 mm	1
④	 755 x 398 x 12 mm	1
⑤	 755 x 138 x 15 mm	1
⑥	 755 x 138 x 16 mm	1
⑦	 755 x 138 x 15 mm	1
⑧	 755 x 138 x 16 mm	1

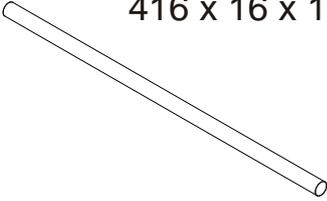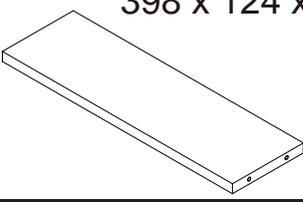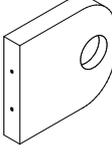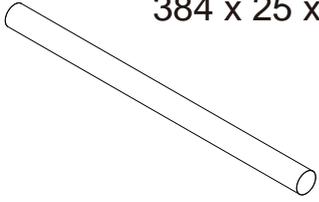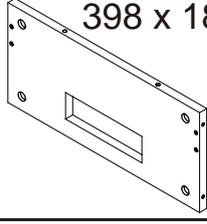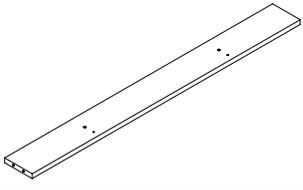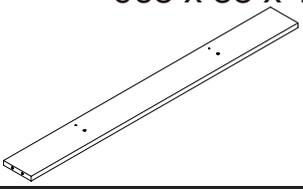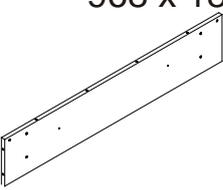⑨	 416 x 16 x 15 mm	5
⑩	 398 x 124 x 15 mm	3
⑪	 90 x 82 x 15 mm	2
⑫	 384 x 25 x 25 mm	1
⑬	 398 x 180 x 15 mm	1
⑭	 968 x 88 x 15 mm	1
⑮	 968 x 88 x 15 mm	1
⑯	 968 x 180 x 15 mm	1






# Assembly Instructions




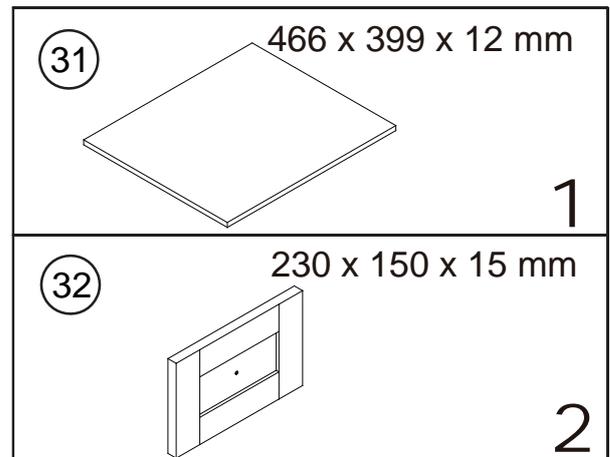
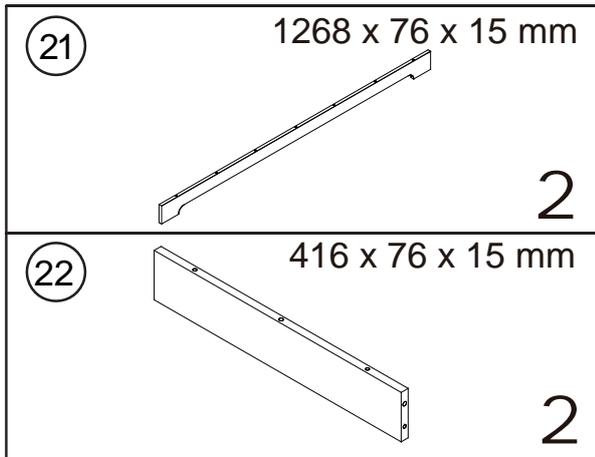



## BOX B - N707P423685

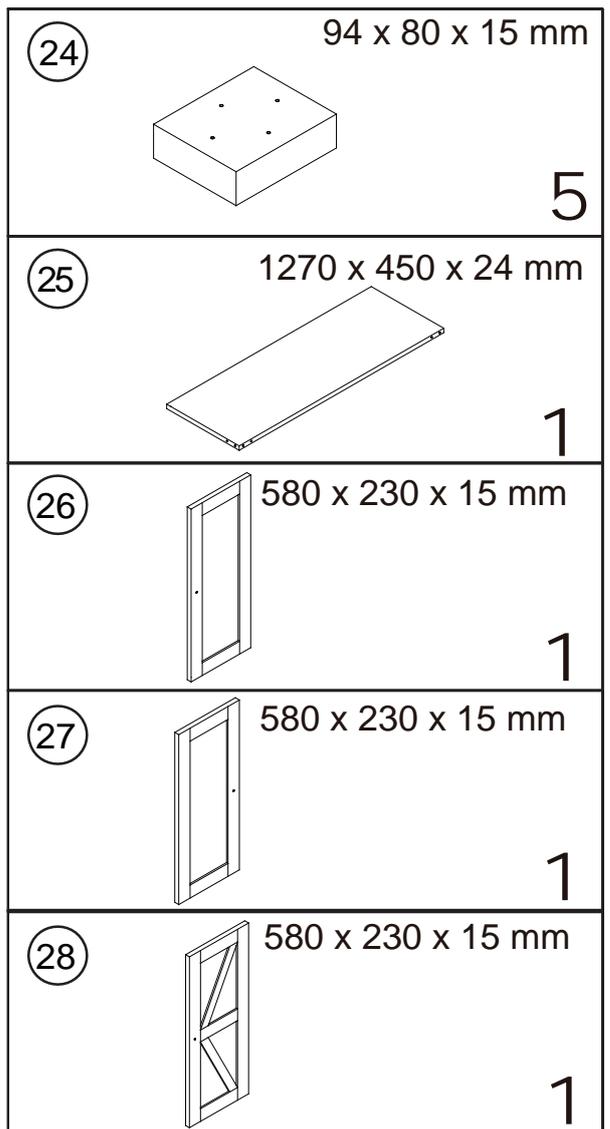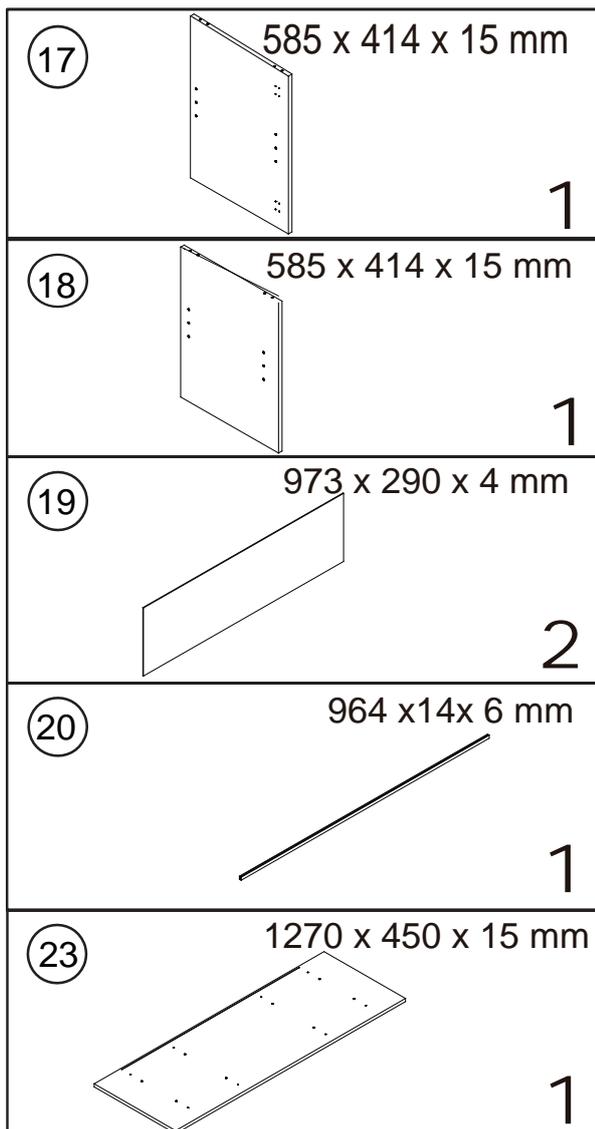

# Assembly Instructions

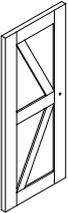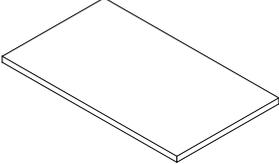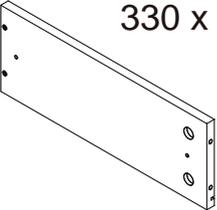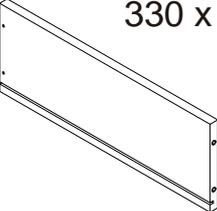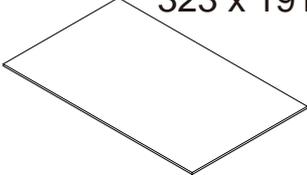 <p>29</p> <p>580 x 230 x 15 mm</p> <p>1</p>
 <p>30</p> <p>399 x 233 x 12 mm</p> <p>2</p>
 <p>33</p> <p>330 x 120 x 12 mm</p> <p>3</p>
 <p>34</p> <p>330 x 118 x 12 mm</p> <p>3</p>
 <p>35</p> <p>323 x 191 x 4 mm</p> <p>2</p>

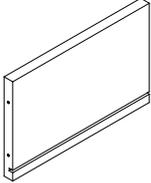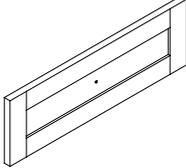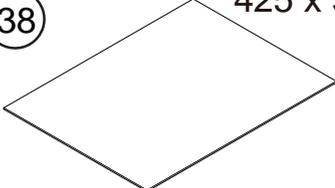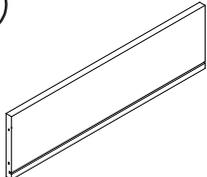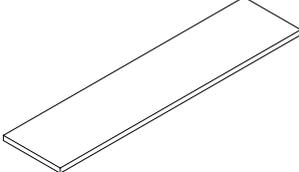 <p>36</p> <p>186 x 118 x 12 mm</p> <p>2</p>
 <p>37</p> <p>463 x 150 x 15 mm</p> <p>1</p>
 <p>38</p> <p>425 x 323 x 4 mm</p> <p>1</p>
 <p>39</p> <p>419 x 118 x 12 mm</p> <p>1</p>
 <p>40</p> <p>1270 x 300 x 24 mm</p> <p>1</p>

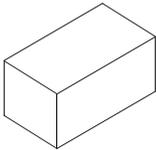
 <p>Hardware kid x1</p> <p>1</p>
---

## SLIDE RAIL

Please split component "Minto "M1" and "K-2" before assembling the slide and then proceed to the next step of assembly



### Step 1

M to each side, and then gently push up the lever of component "M2"


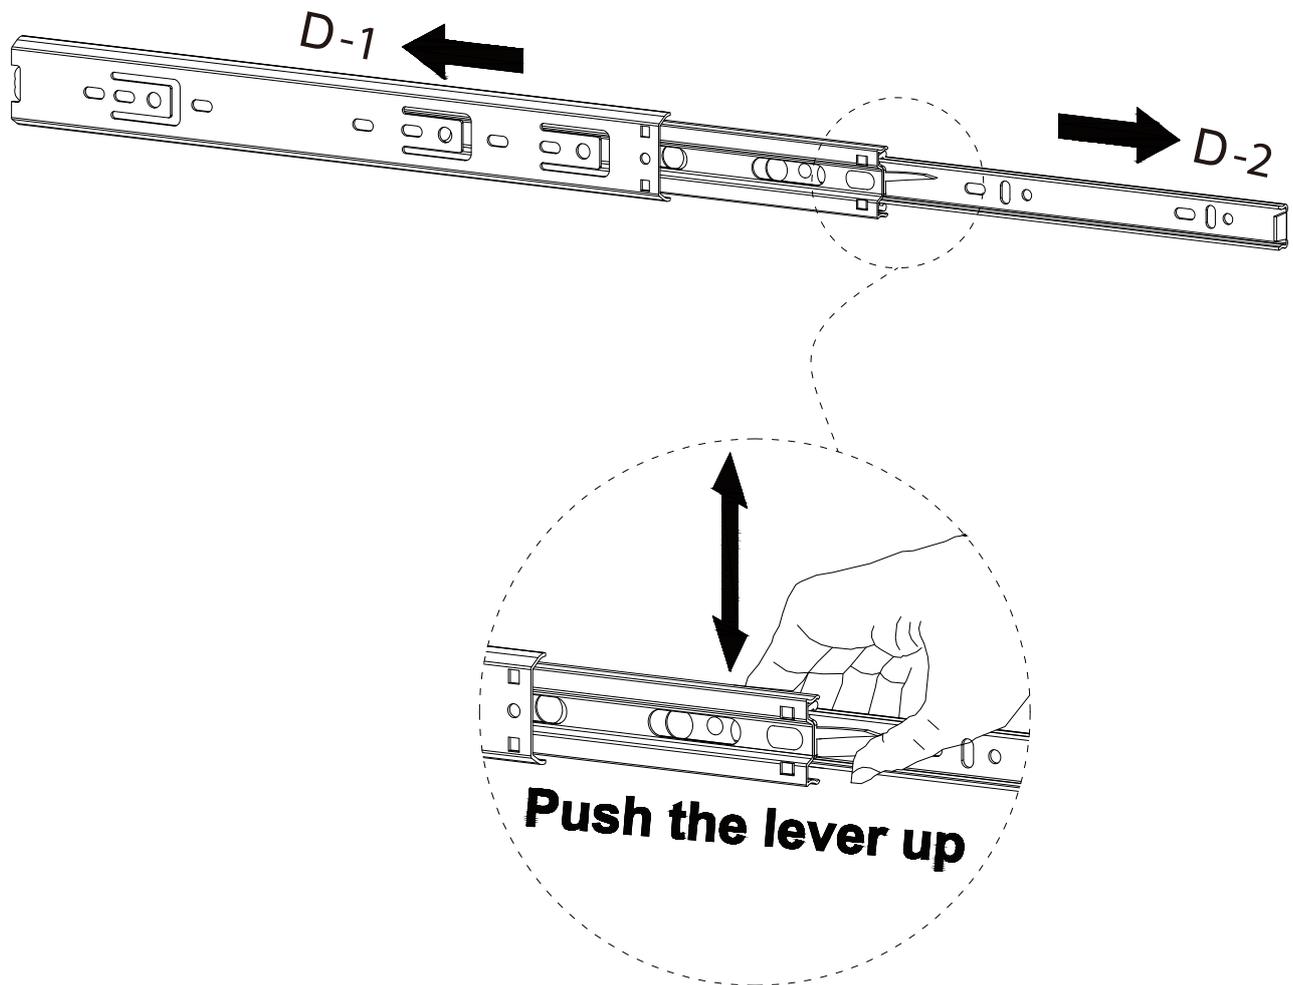


# Assembly Instructions

## Step 1

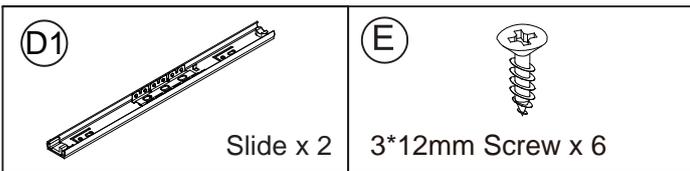
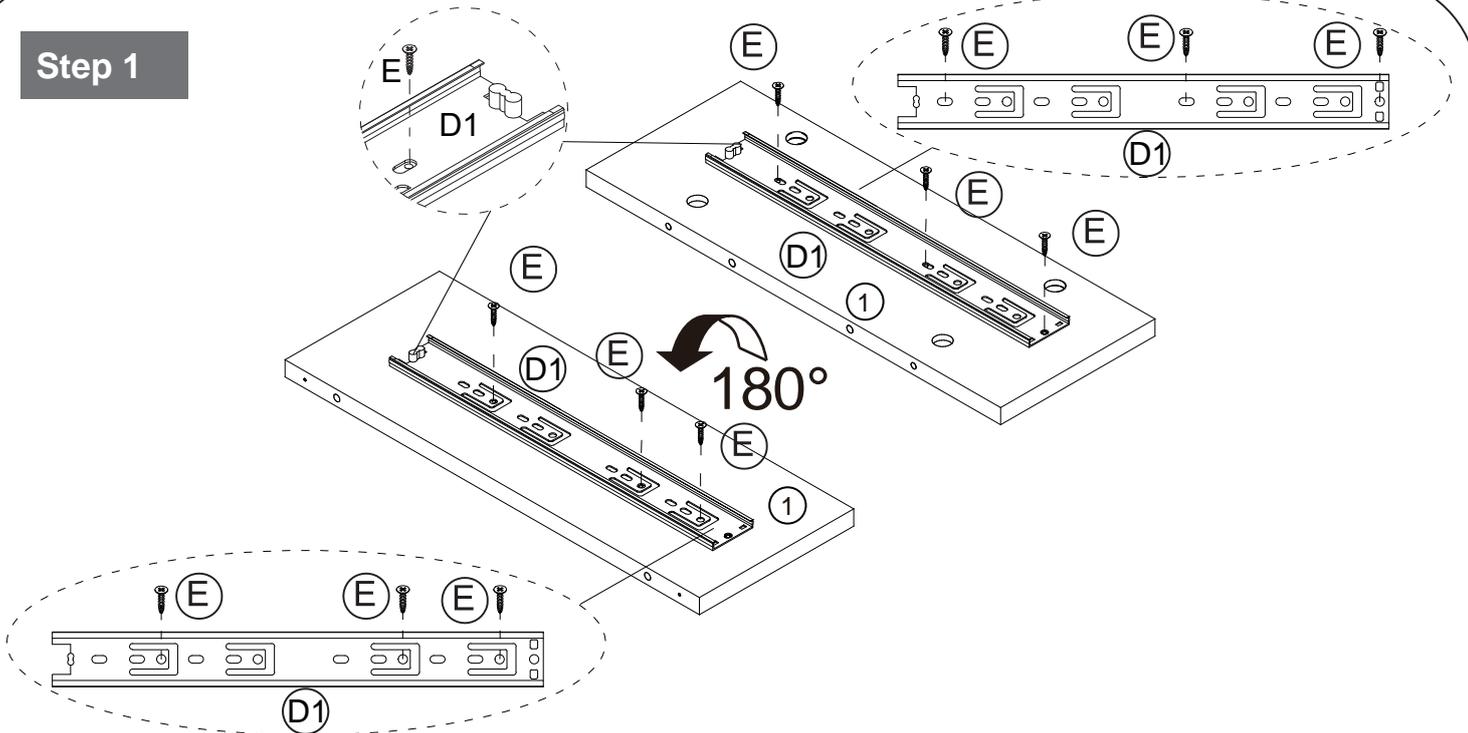


## Step 2

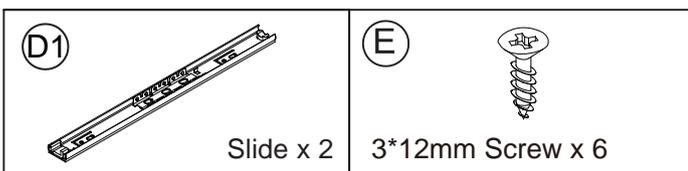
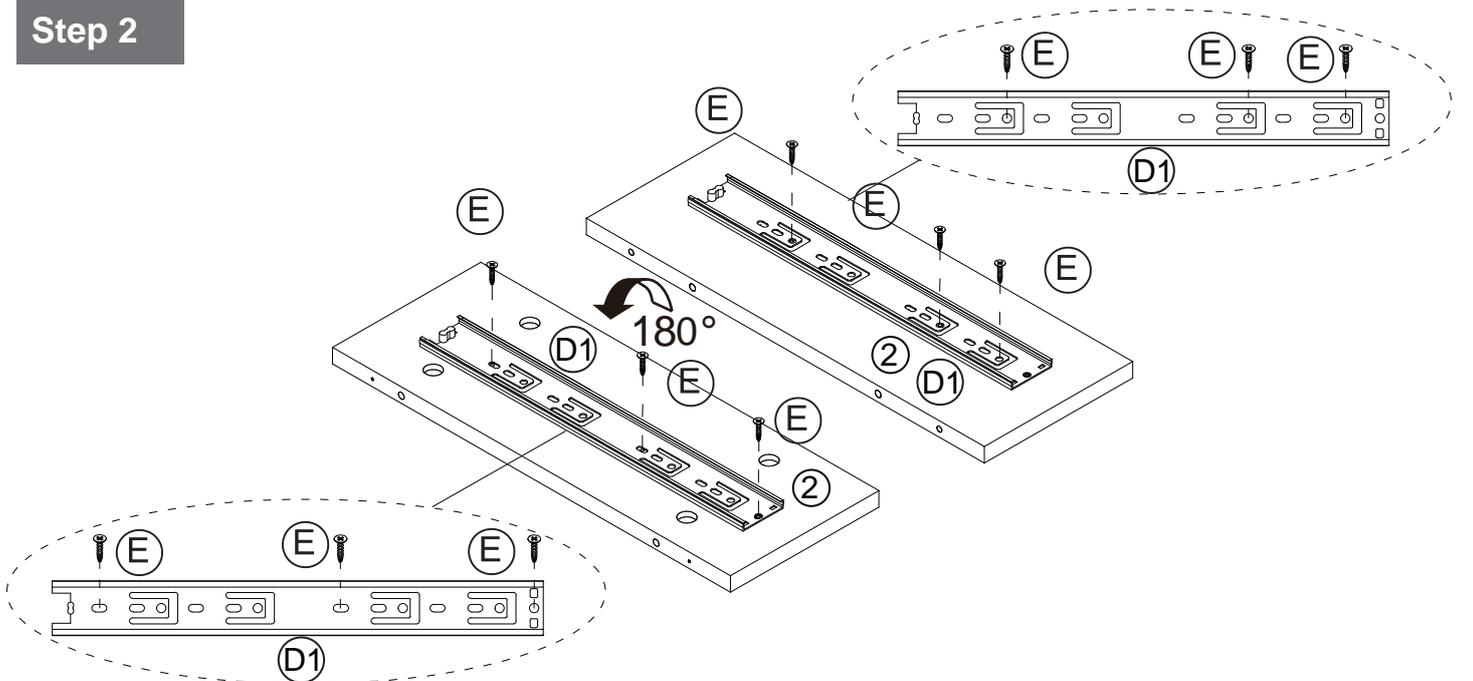


# Assembly Instructions

## Step 3

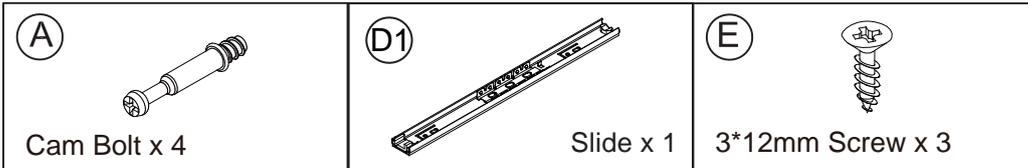
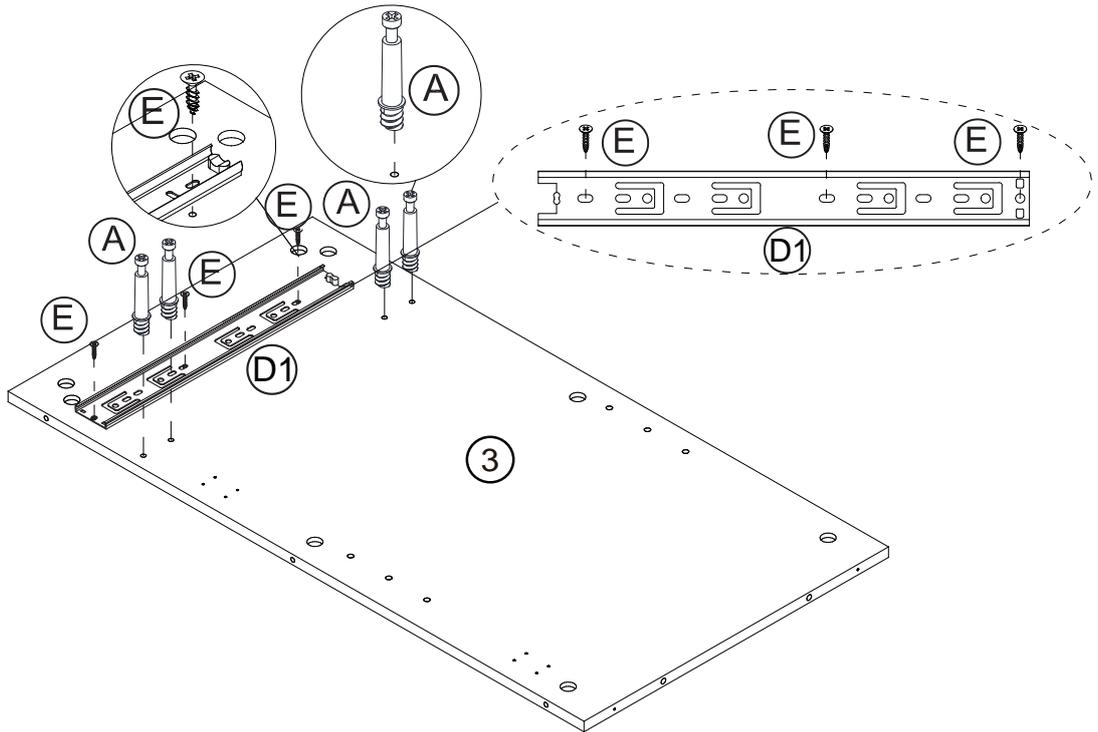


## Step 4

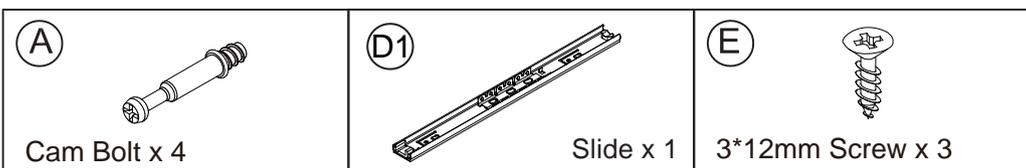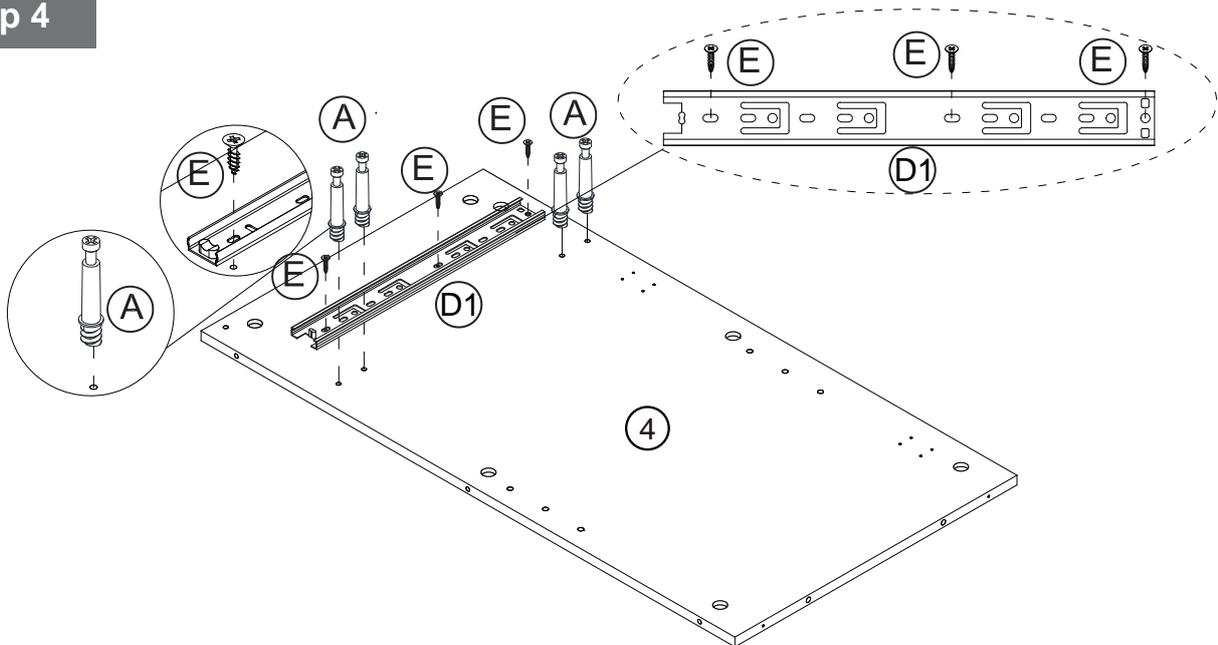


# Assembly Instructions

## Step 5

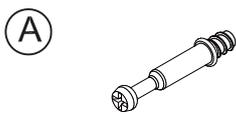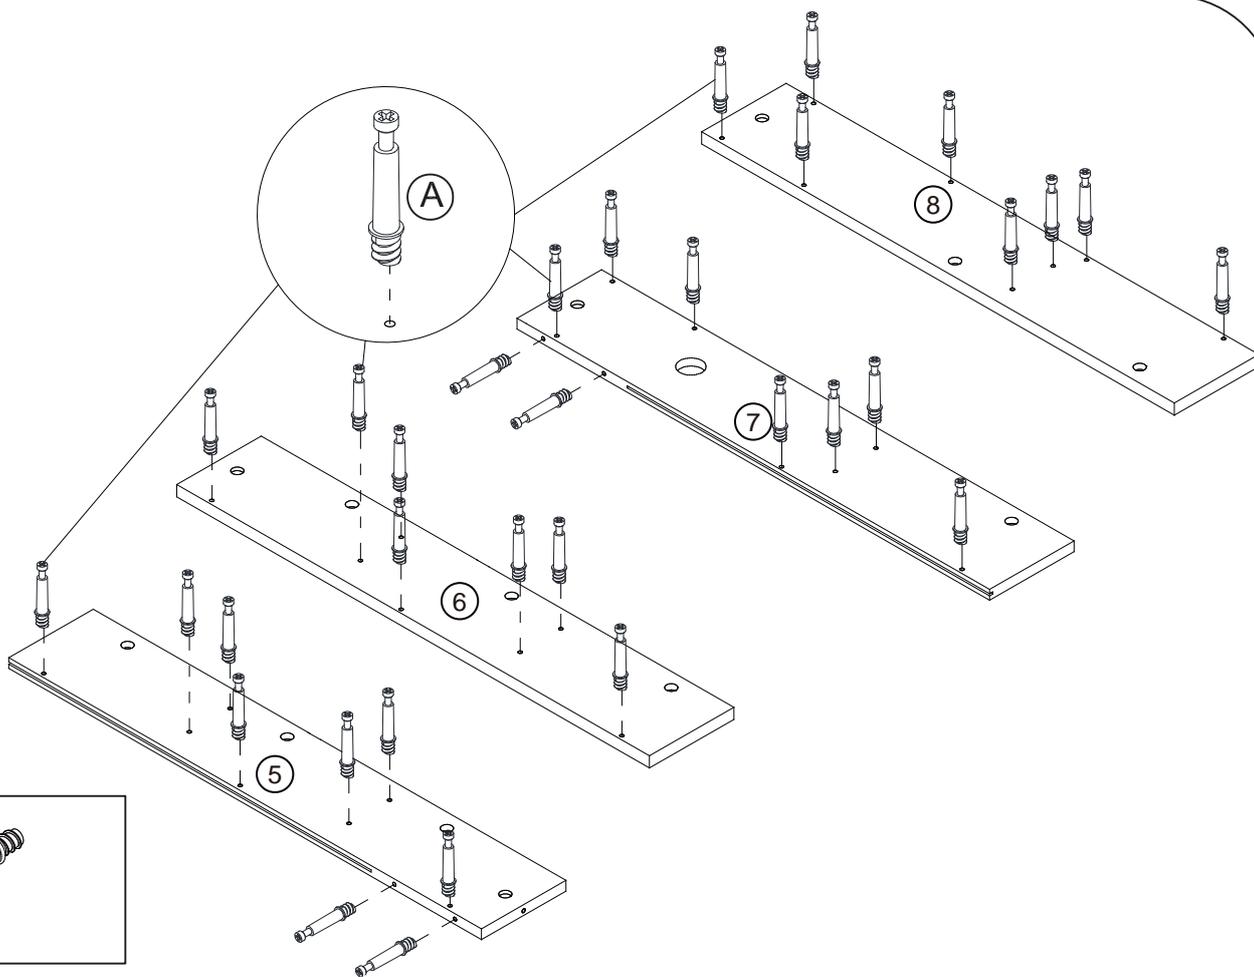

Cam Bolt x 33


## Step 6

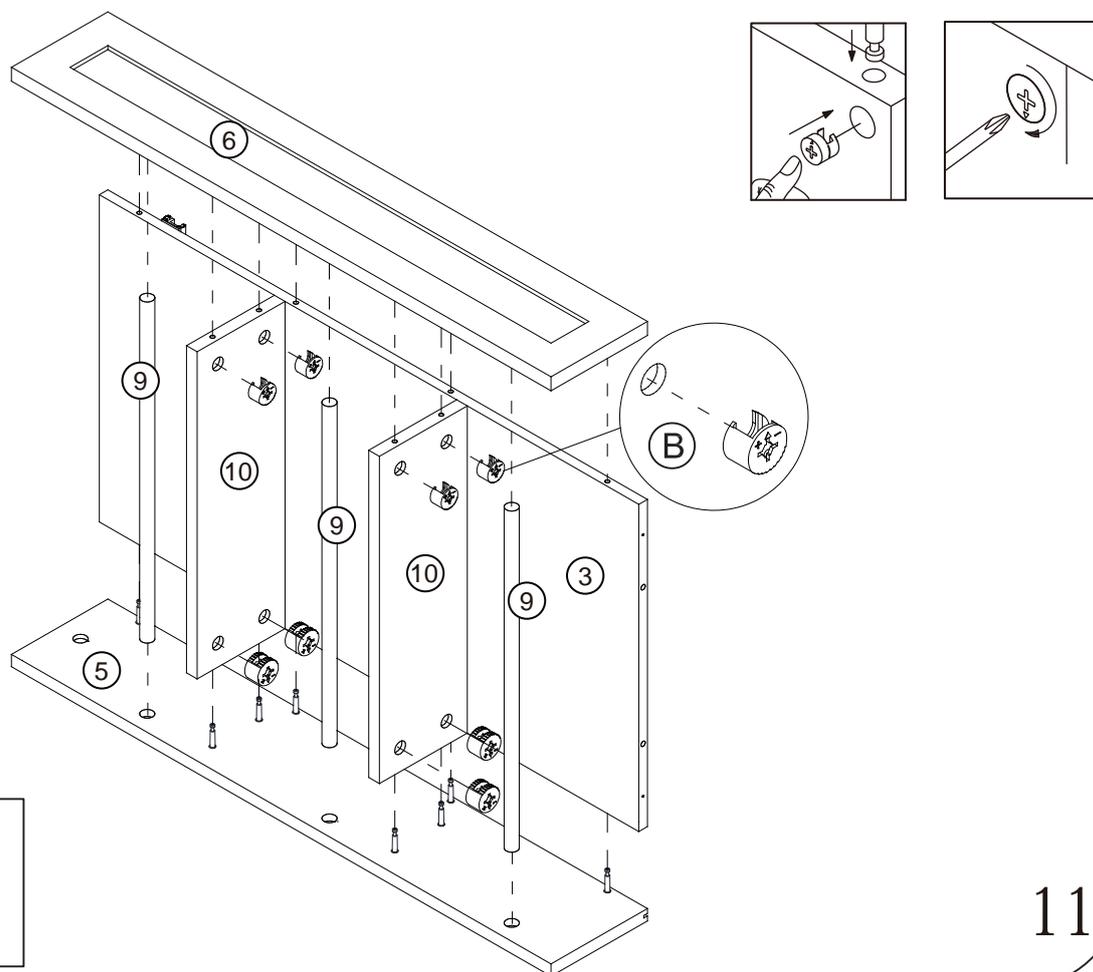


Cam lock x 8

# Assembly Instructions

## Step 7

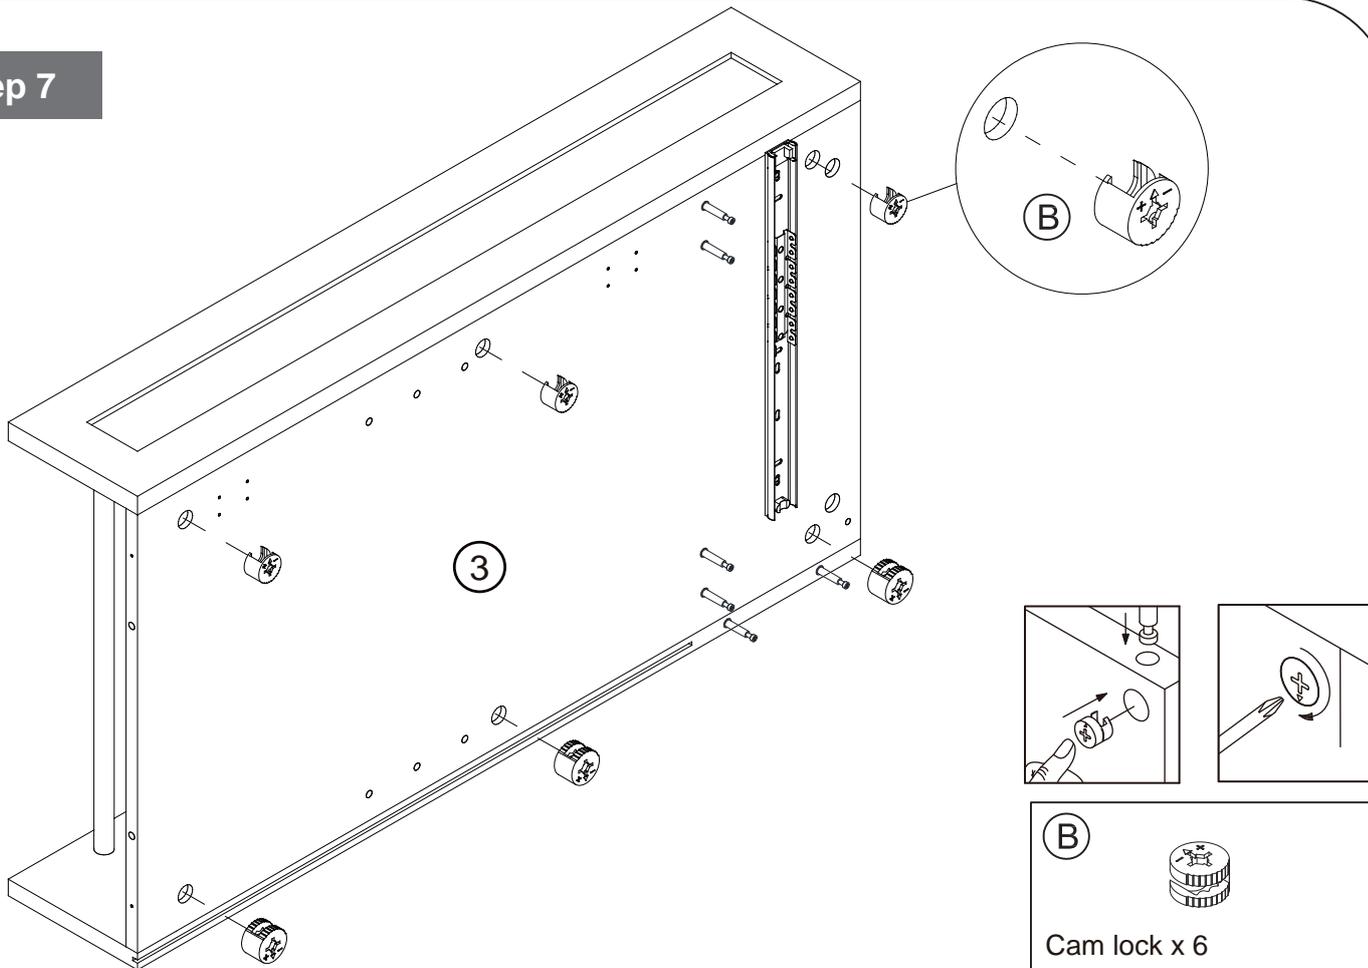


## Step 8

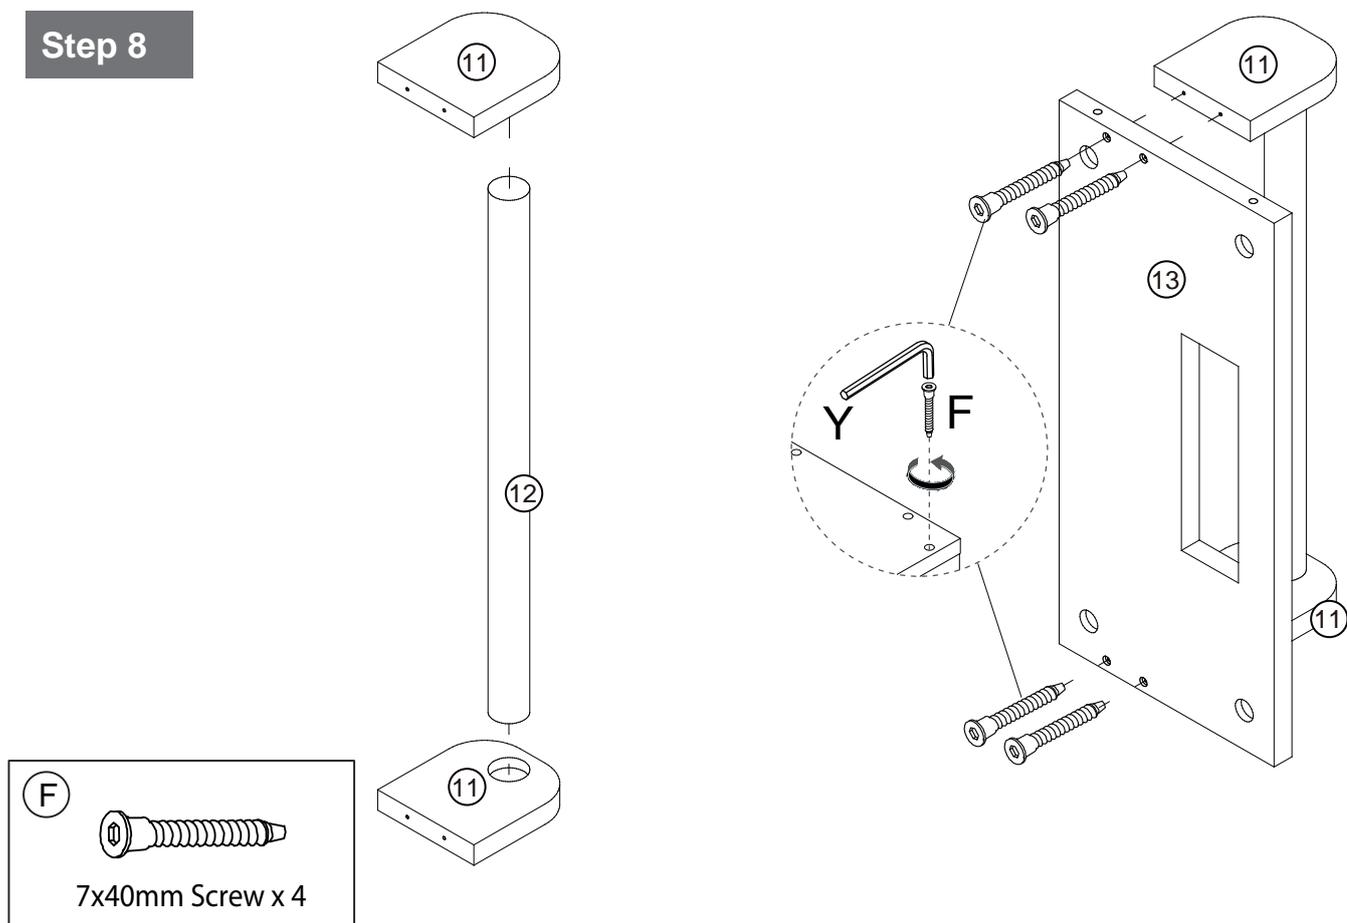

# Assembly Instructions

## Step 9

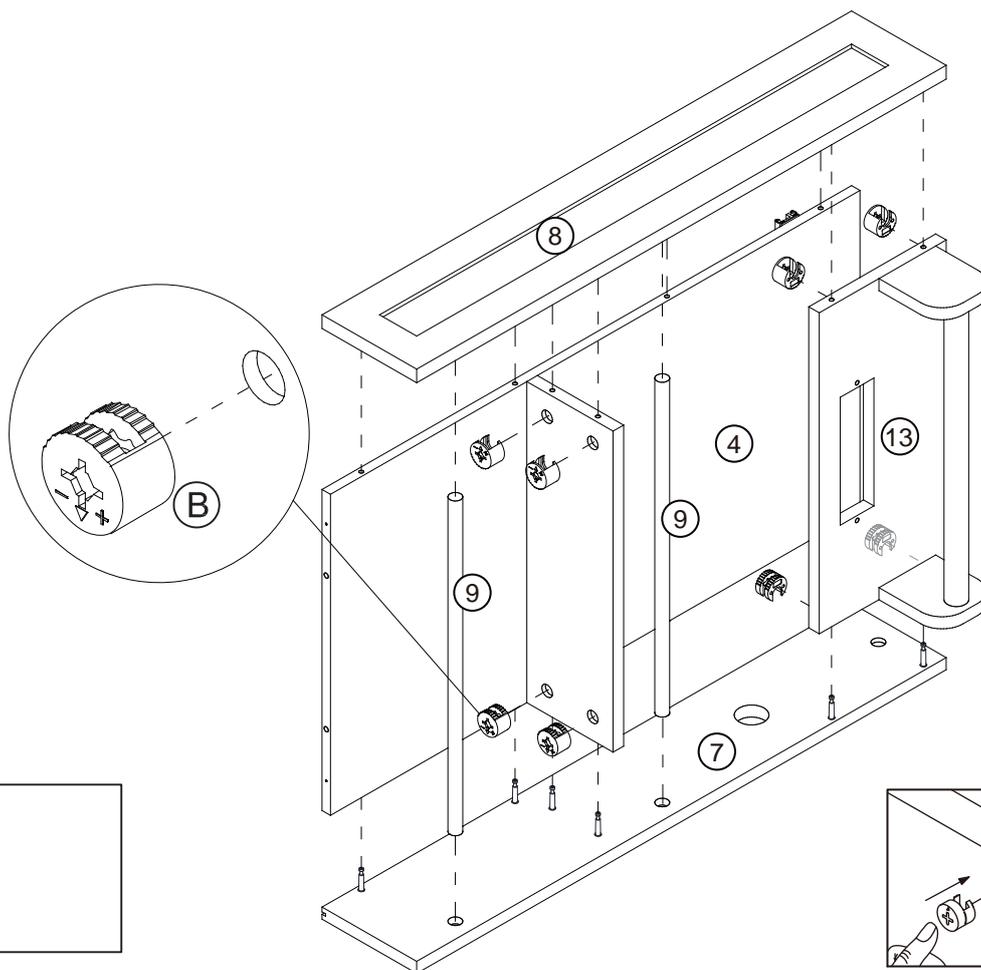


B



Cam lock x 8

## Step 10

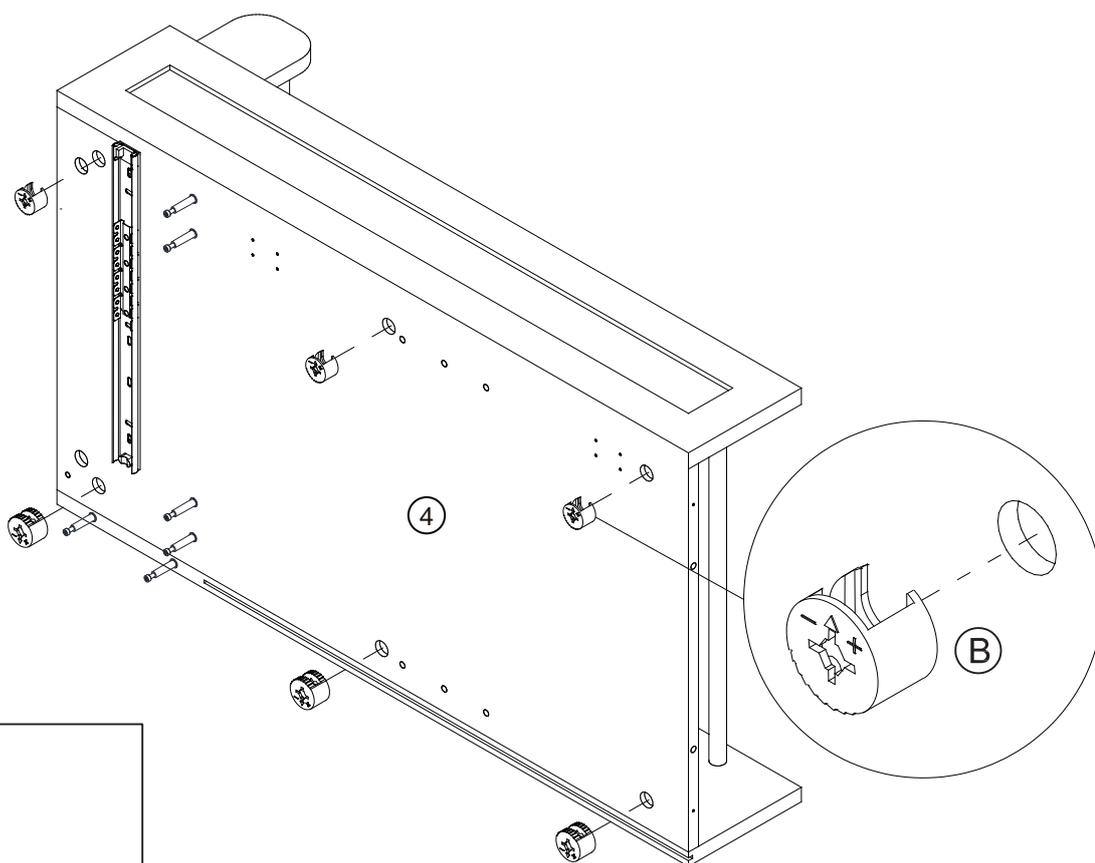


B




Cam lock x 6

# Assembly Instructions

## Step 11

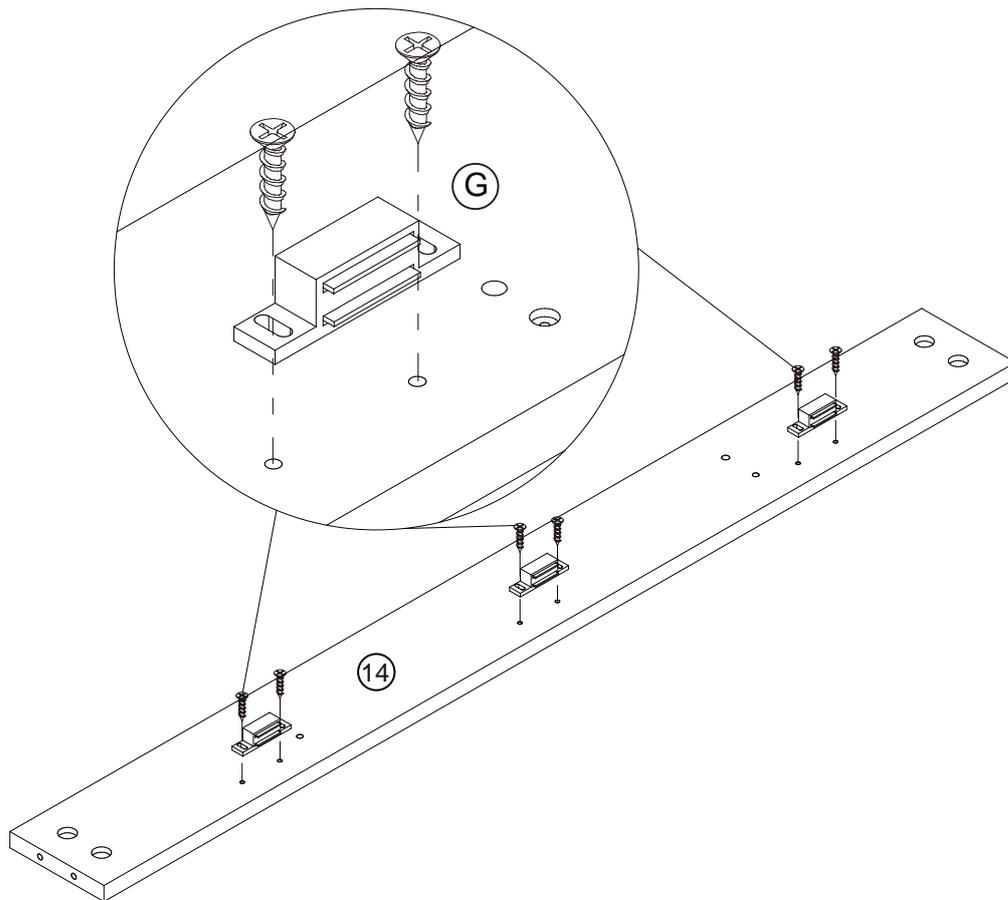


G

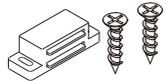

Magnetic impact x 3

## Step 12

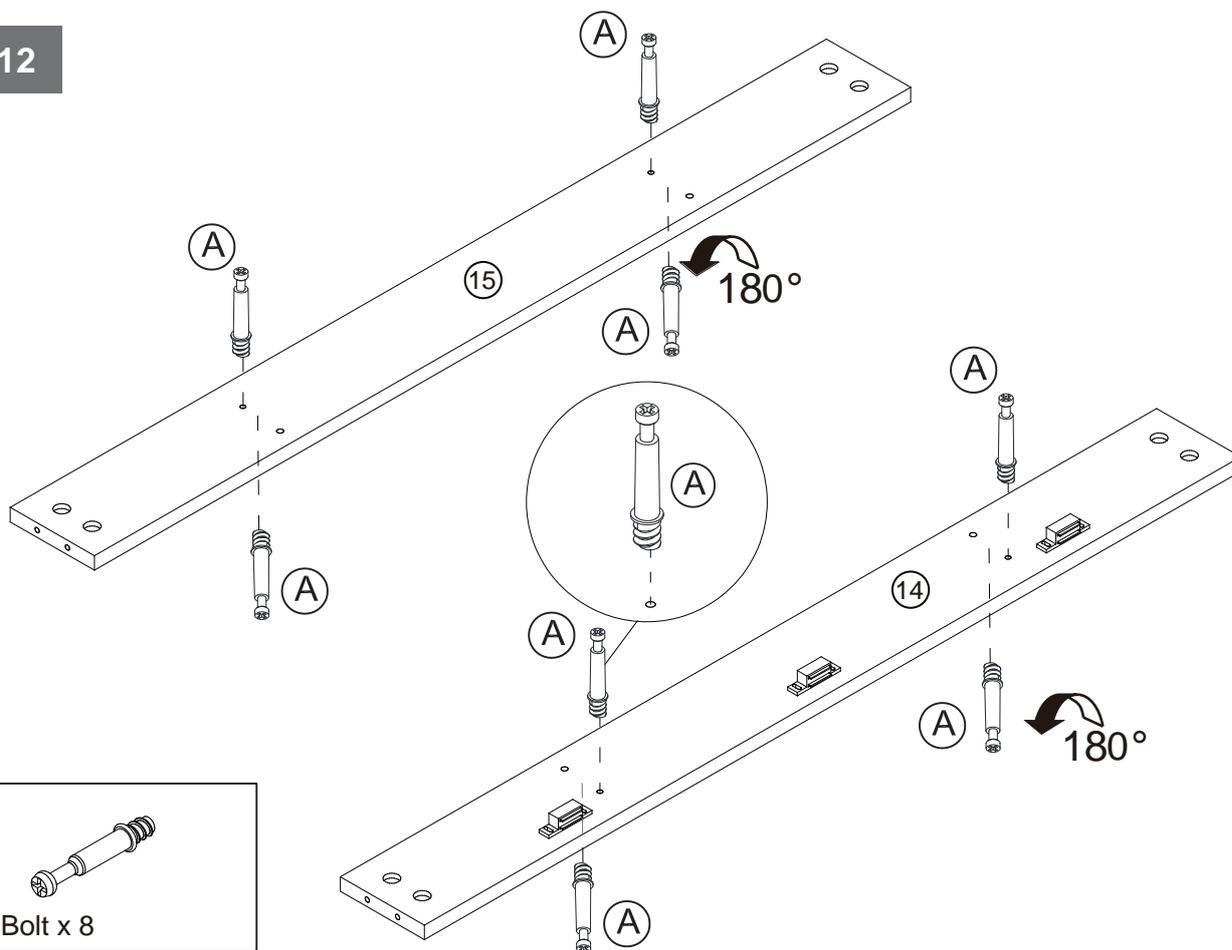


A




Cam Bolt x 8

# Assembly Instructions

## Step 13

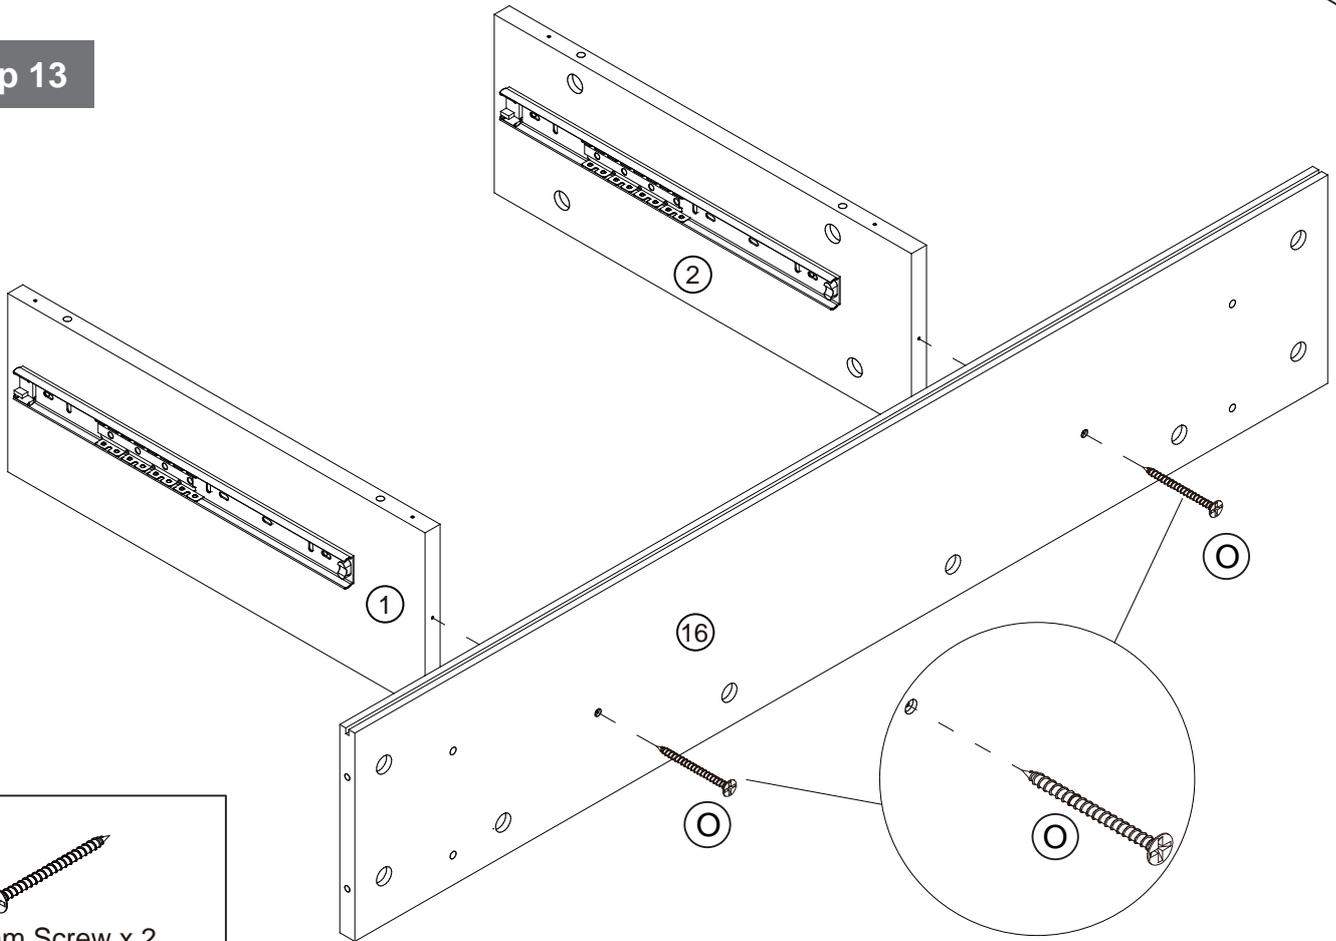


## Step 14

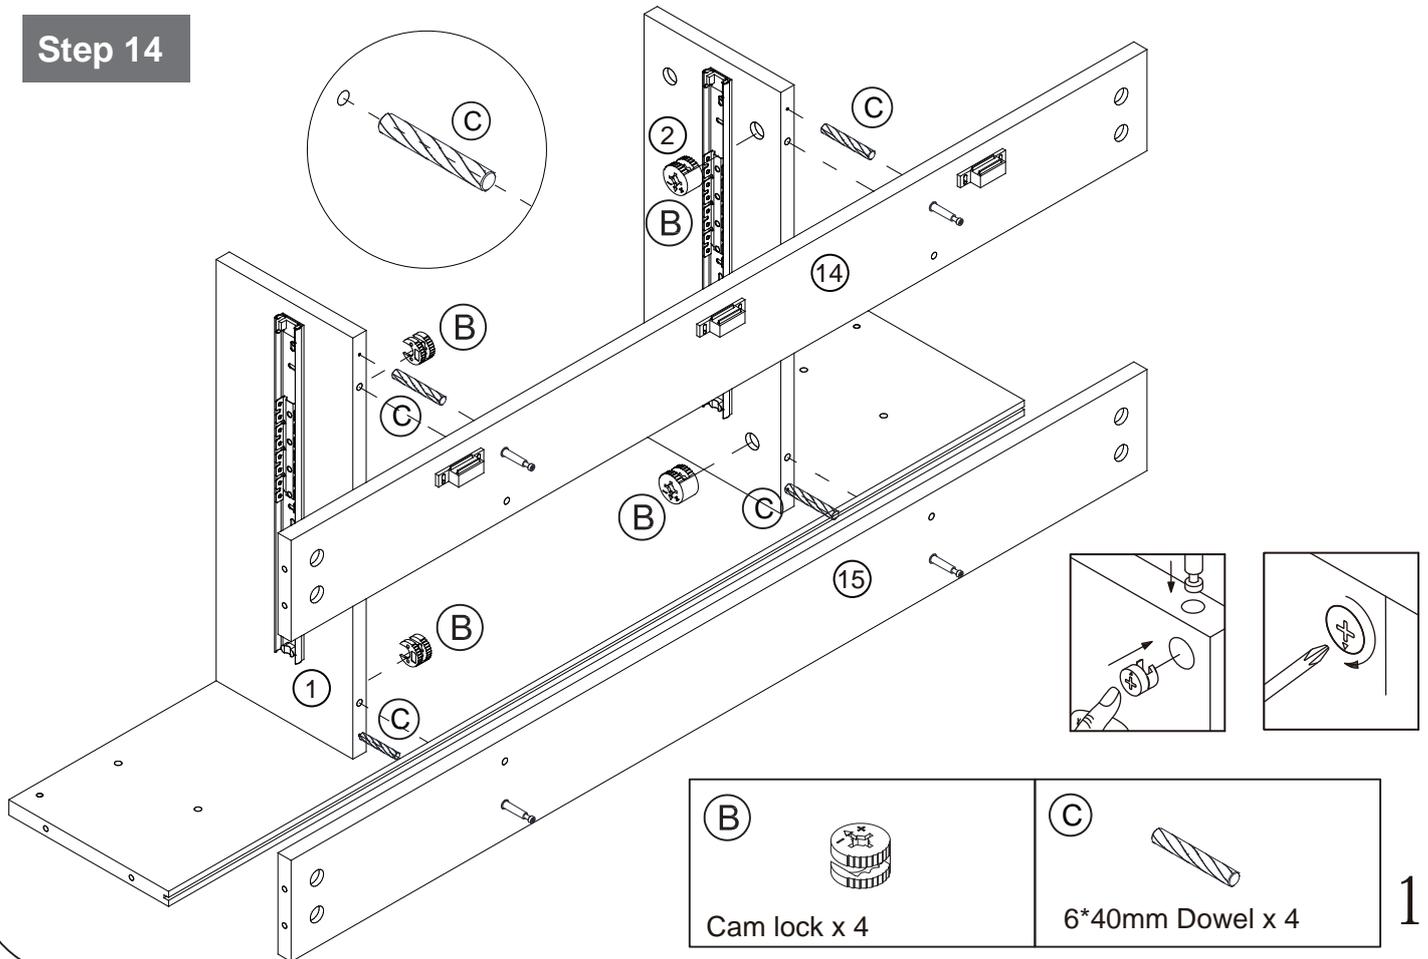


# Assembly Instructions

## Step 15

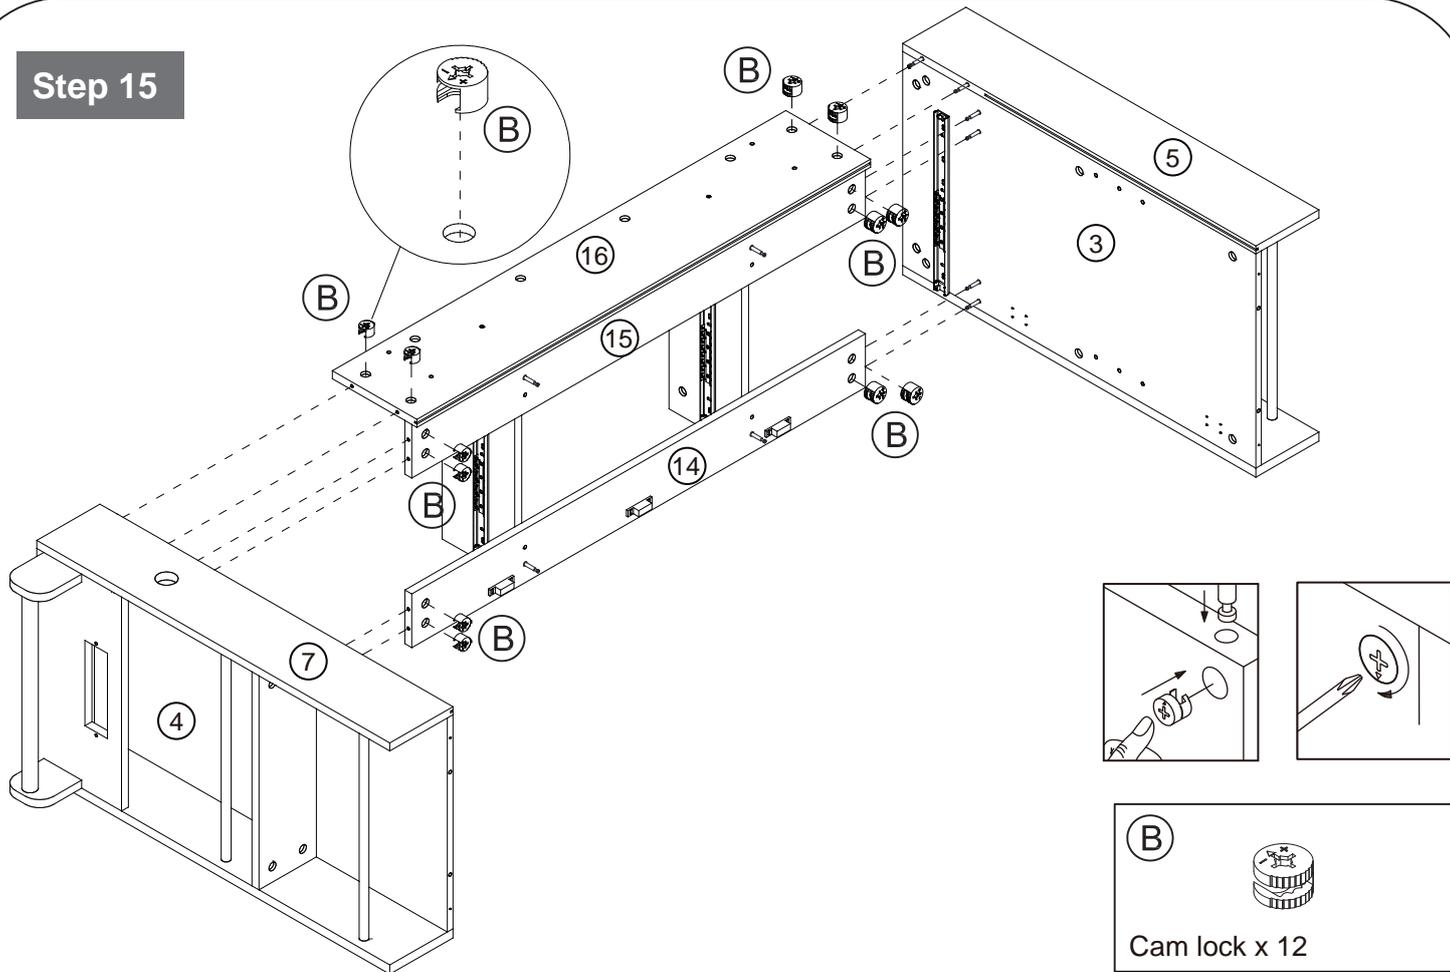


## Step 16

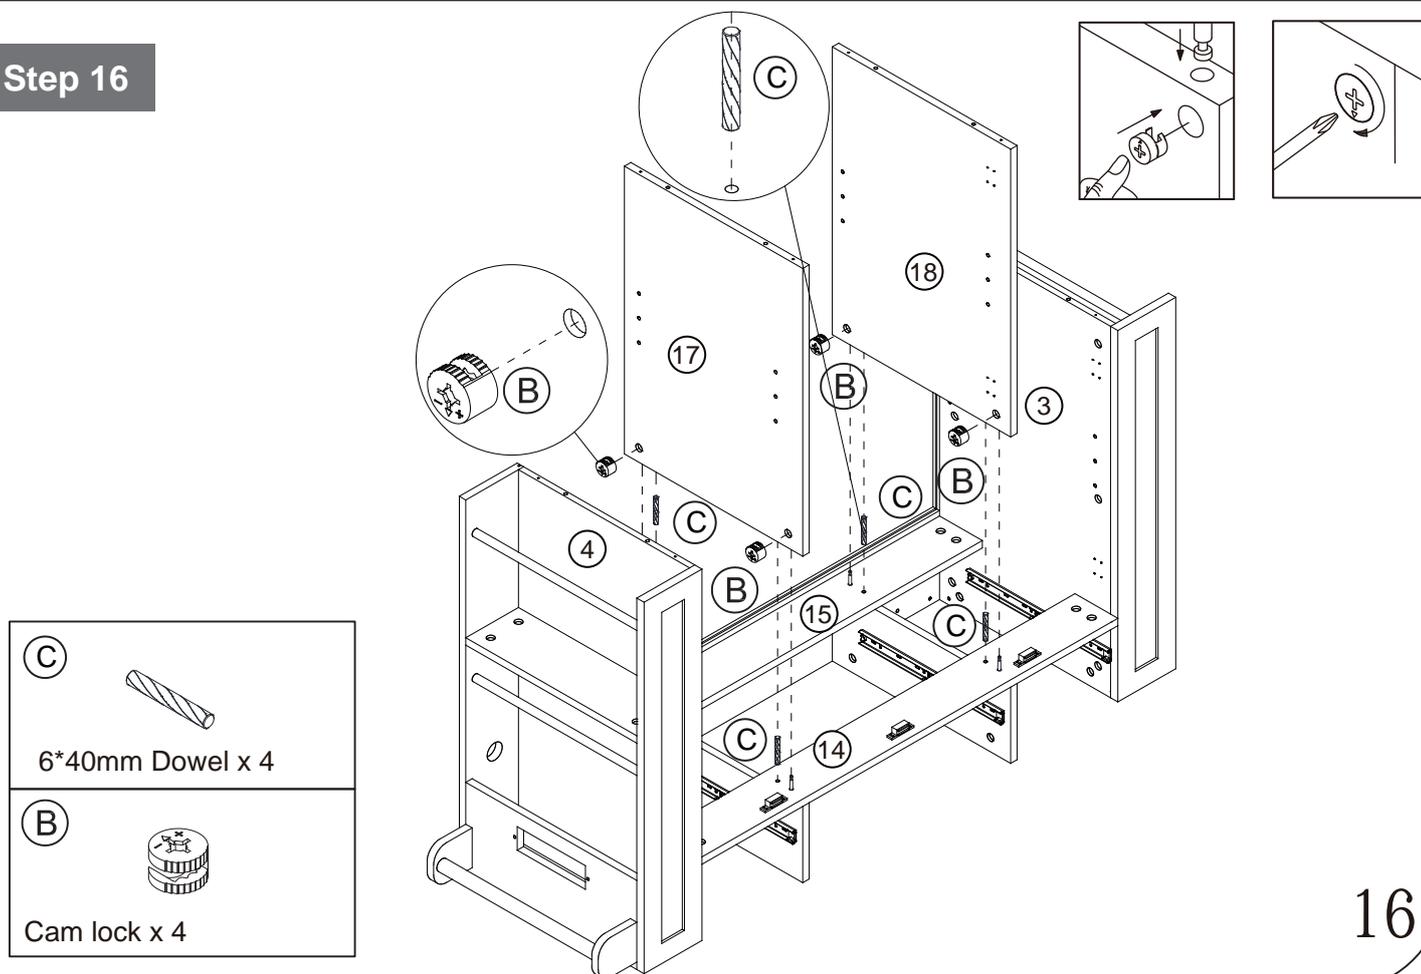


# Assembly Instructions

## Step 17

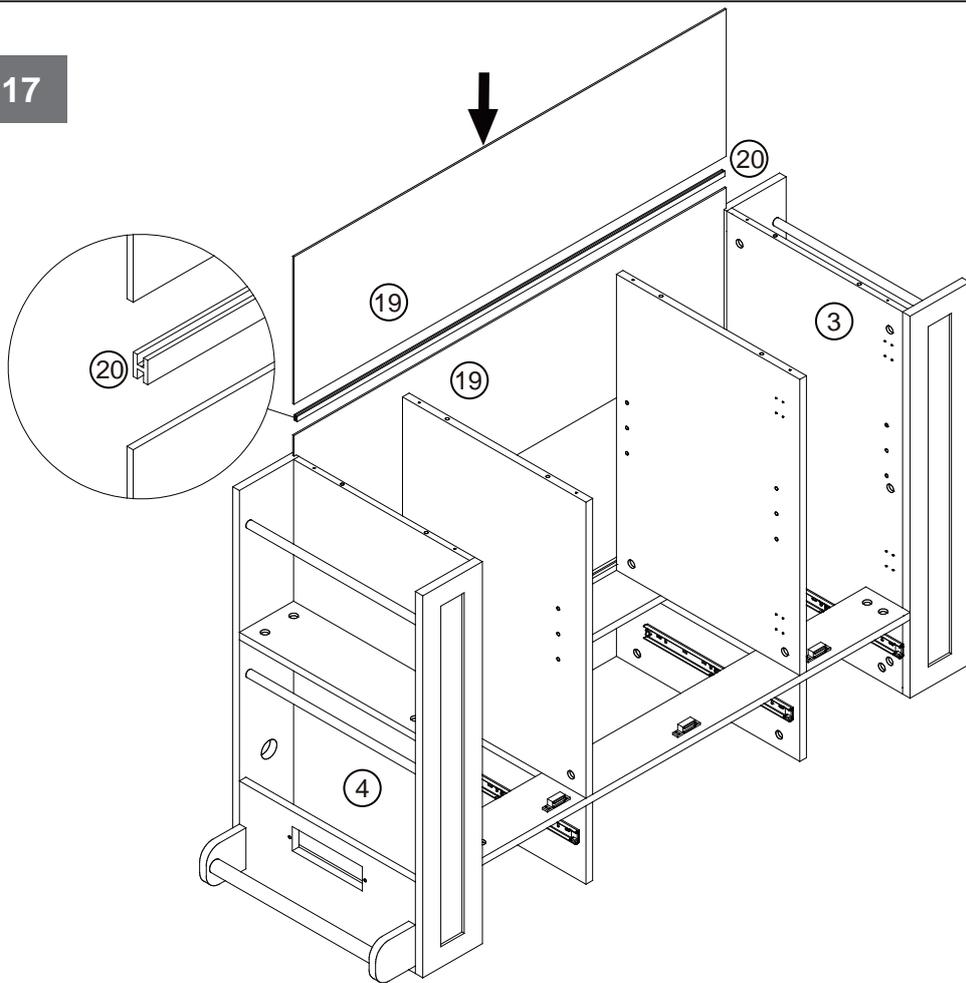





## Step 18

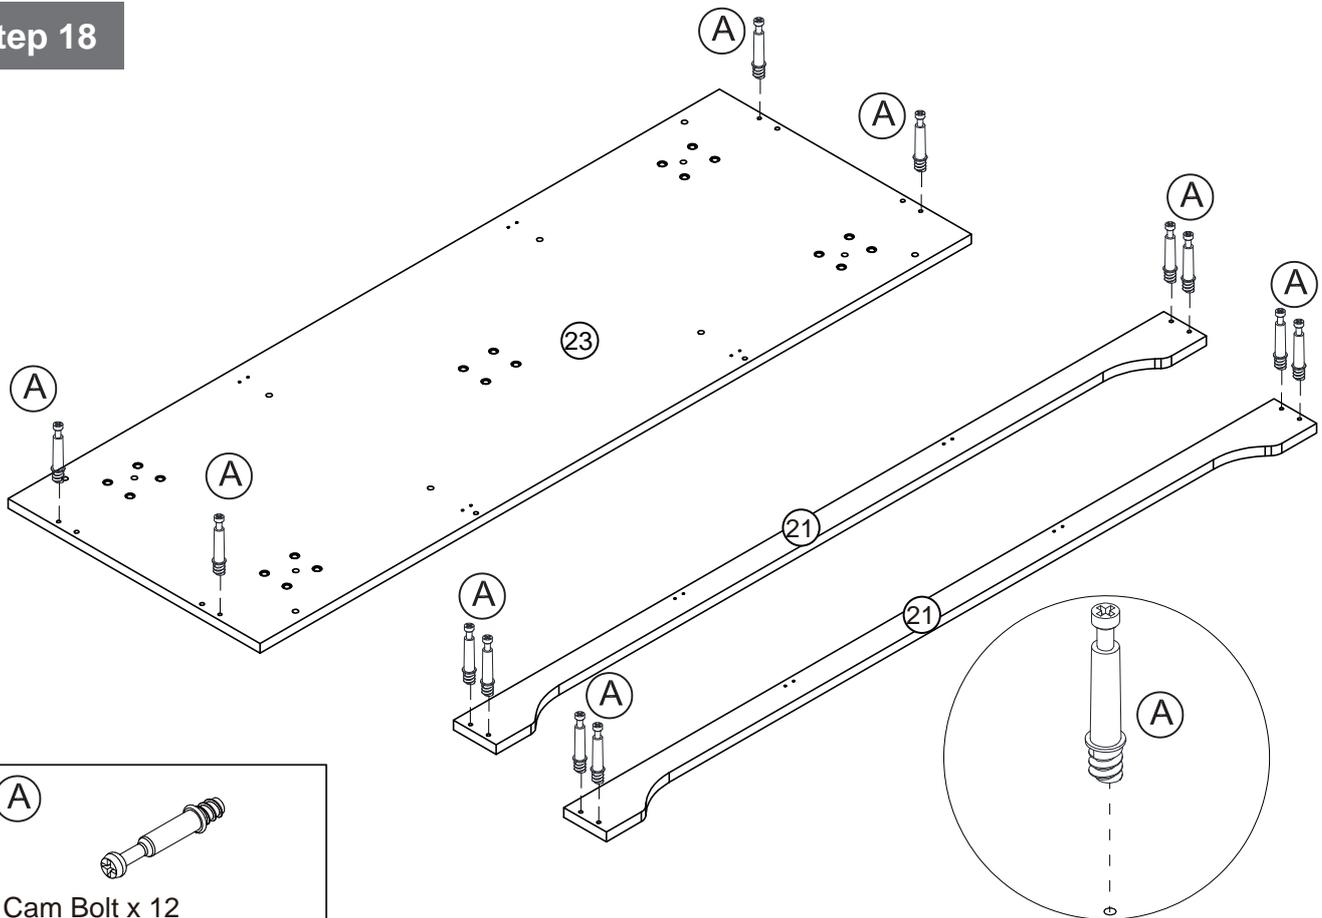





Cam Bolt x 12

# Assembly Instructions

## Step 19

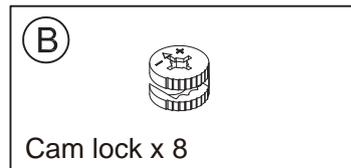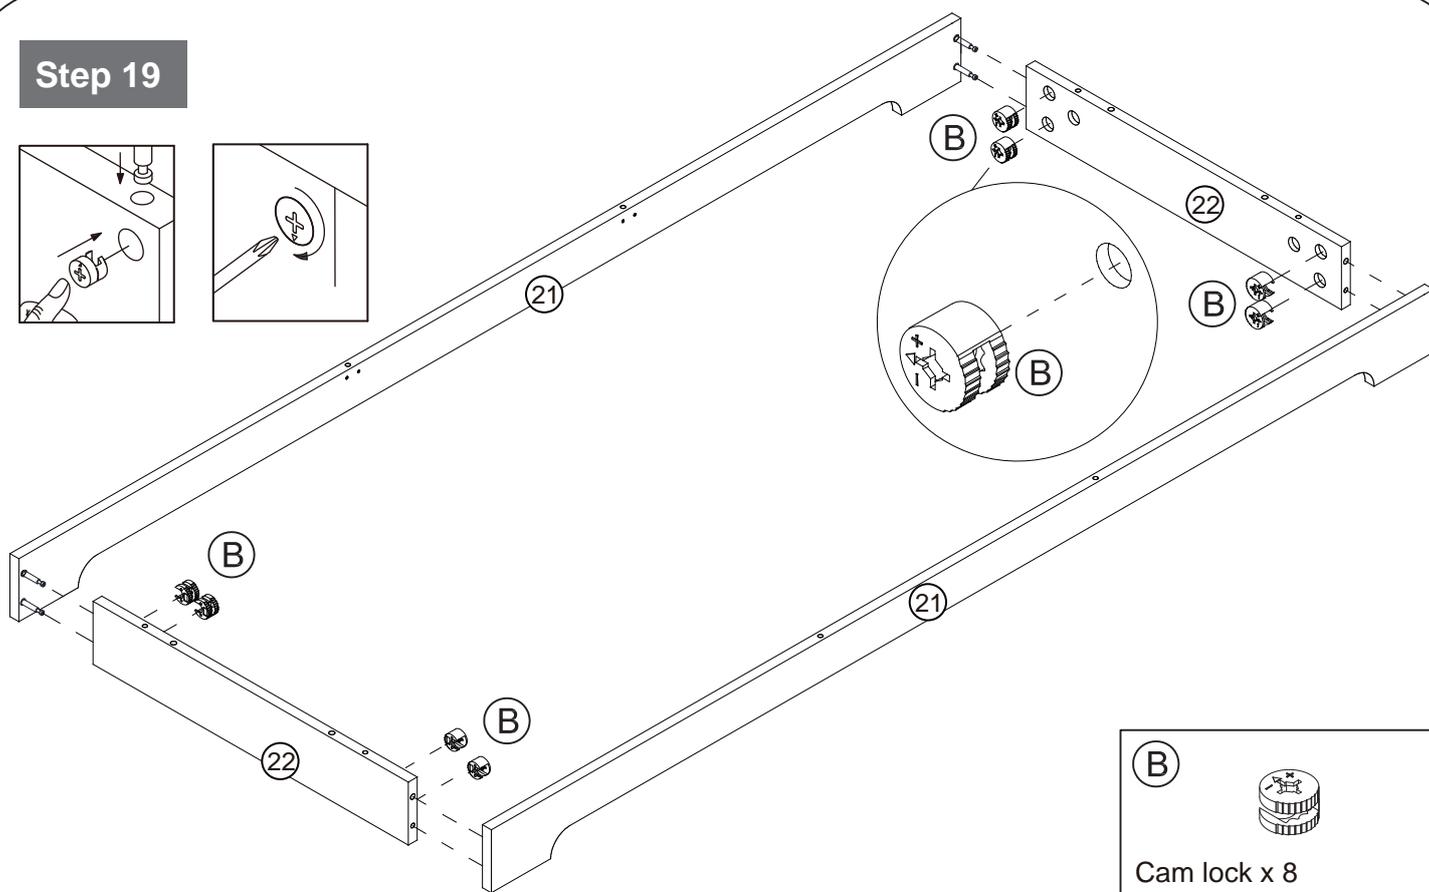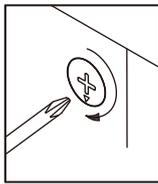
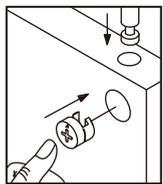


## Step 20

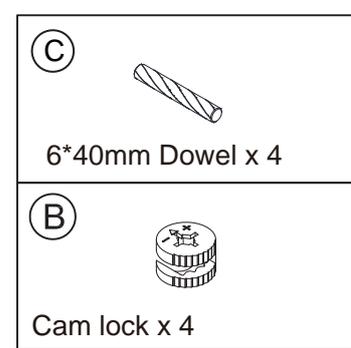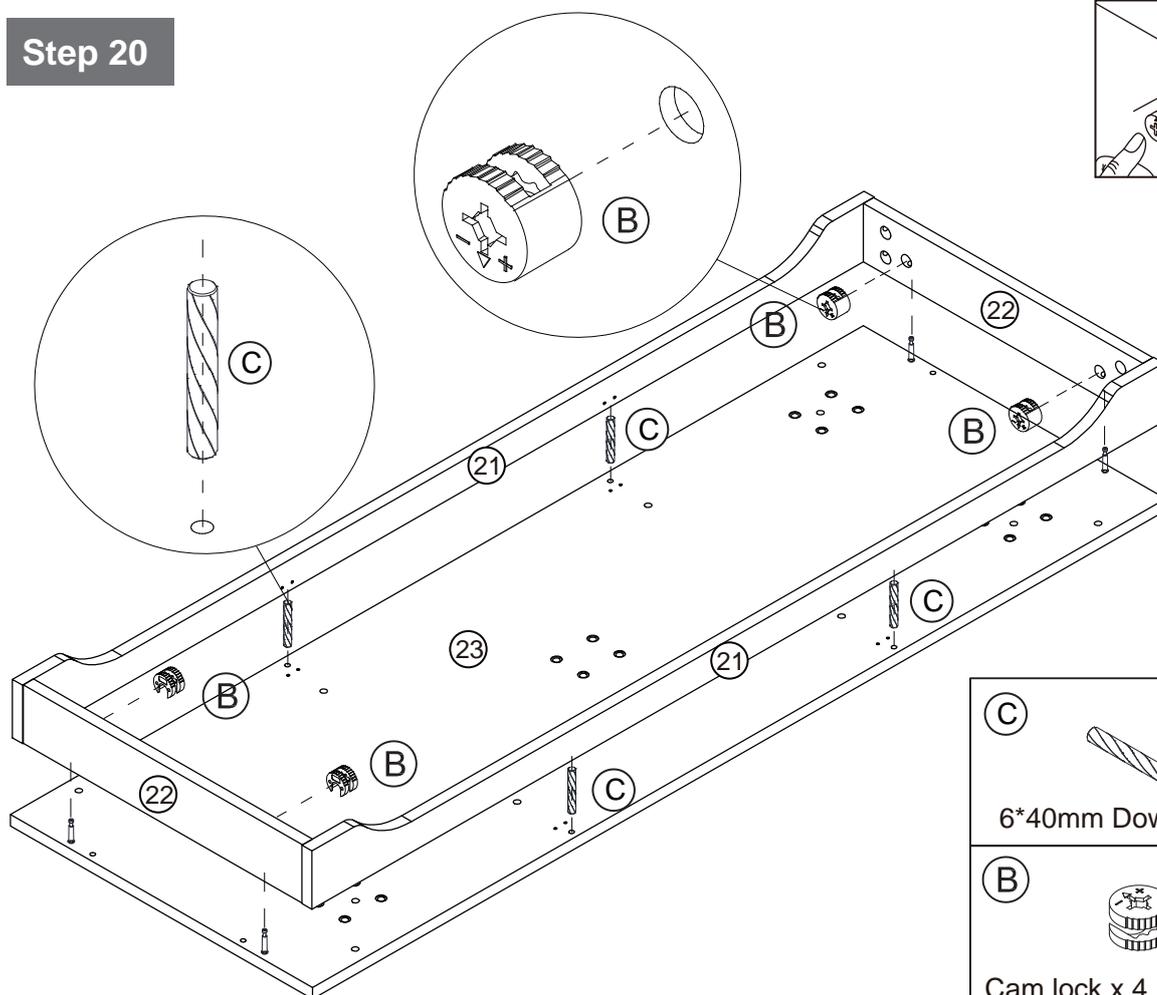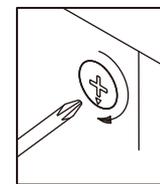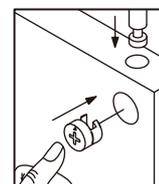

# Assembly Instructions


## Step 21

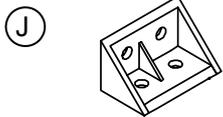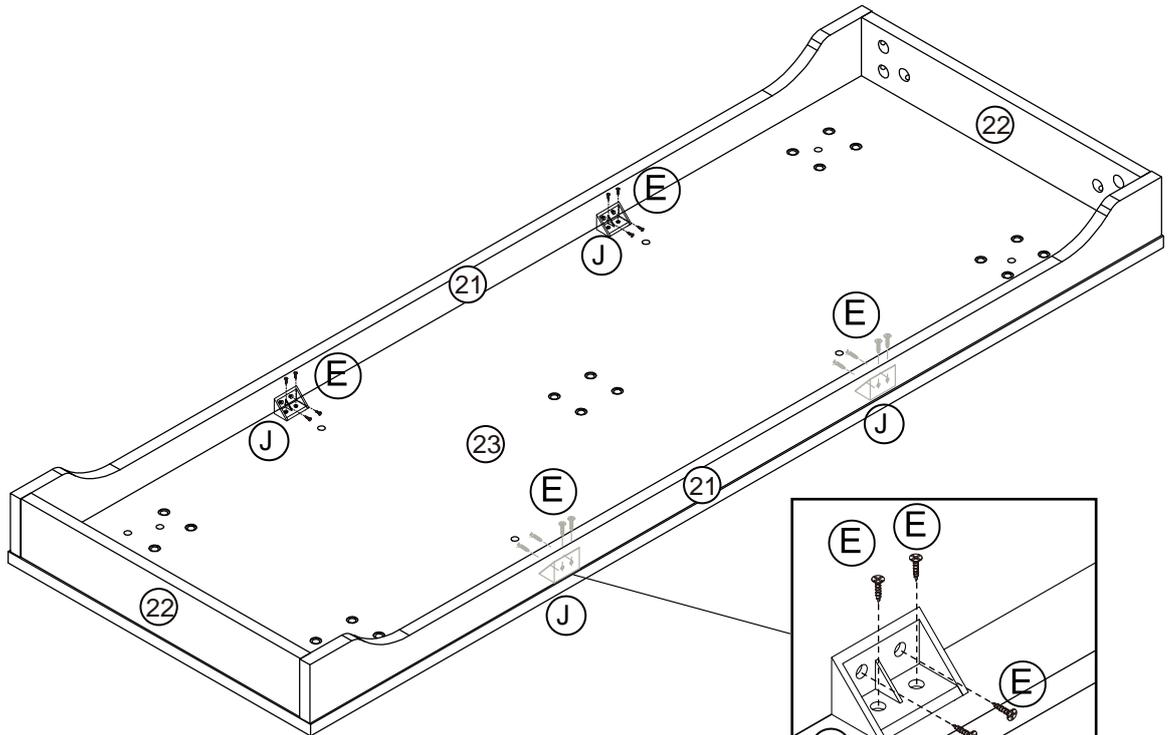


Angle iron x 4



3\*12mm Screw x 16

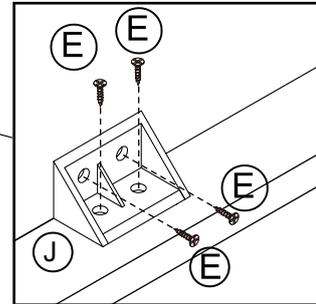

## Step 22

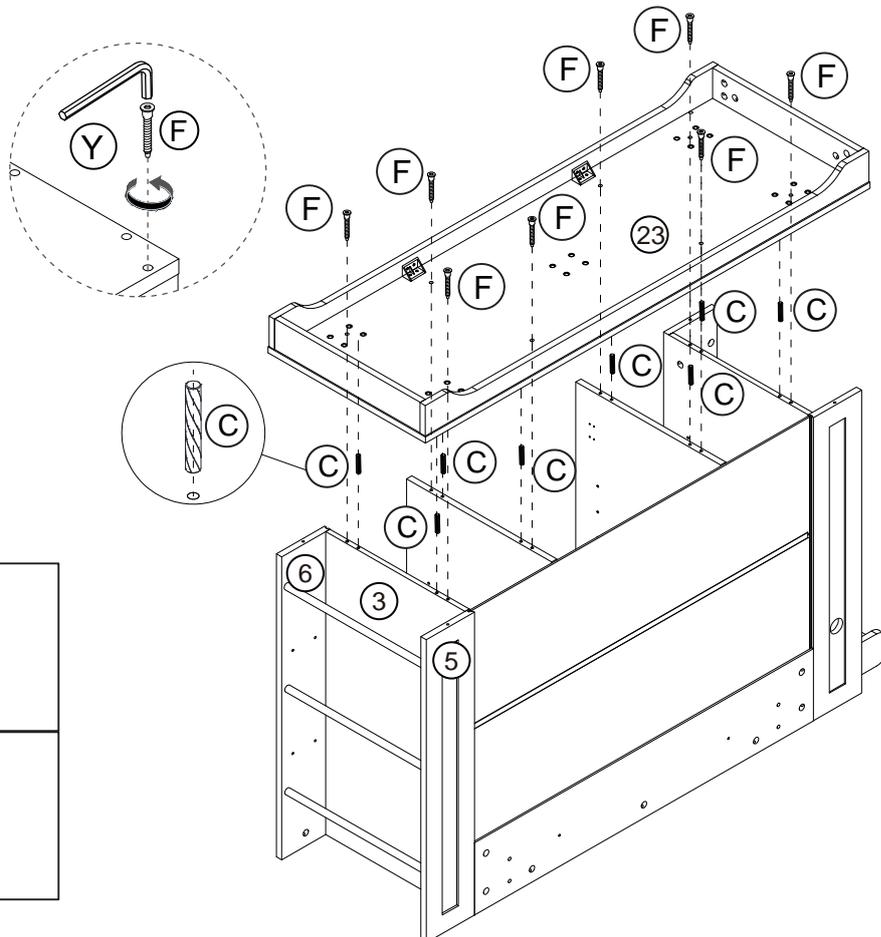



7x40mm Screw x 8



6\*40mm Dowel x 8

# Assembly Instructions

## Step 23

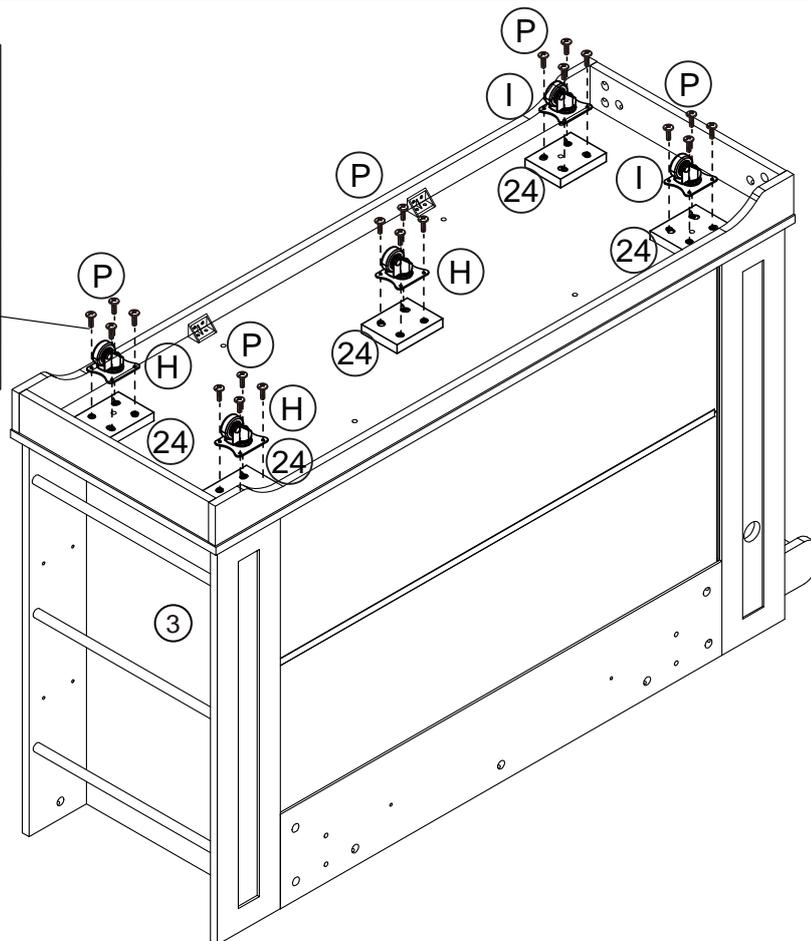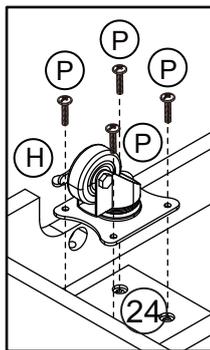

(P)



6\*20mm Screw x 20

(I)





Locking caster x 2

(H)



Caster x 3

## Step 24

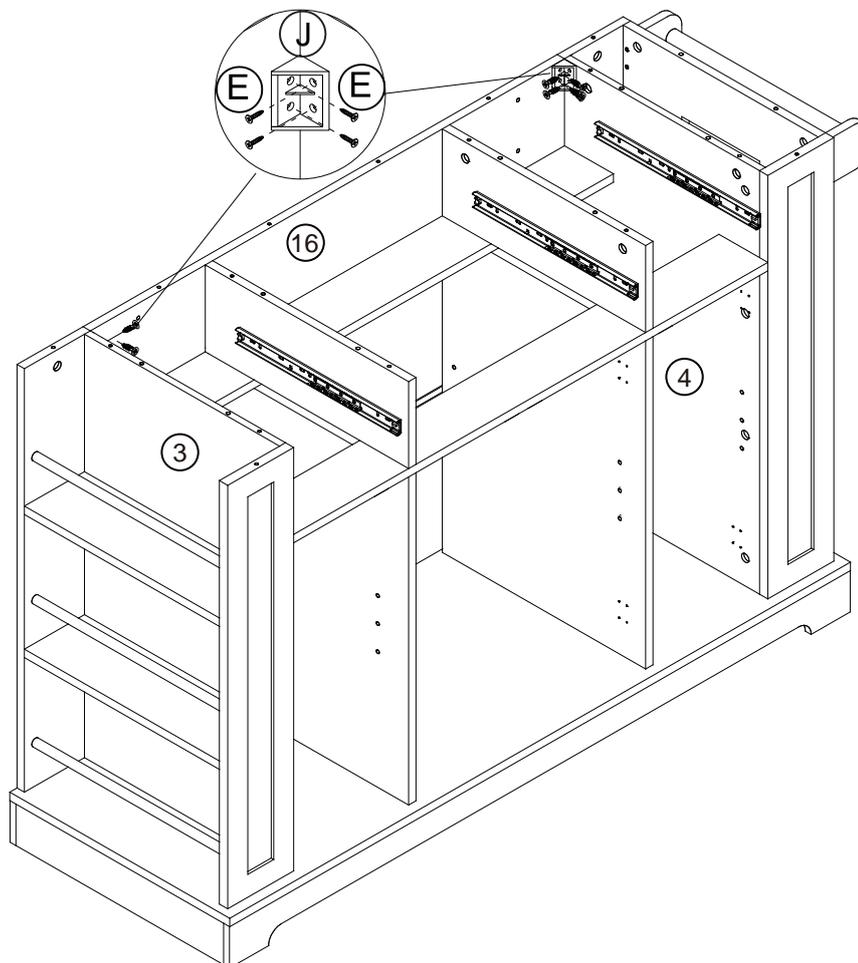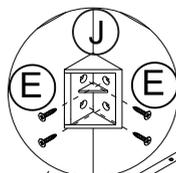


(E)



3\*12mm Screw x 8


(J)

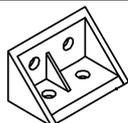


Angle iron x 2

# Assembly Instructions

## Step 25




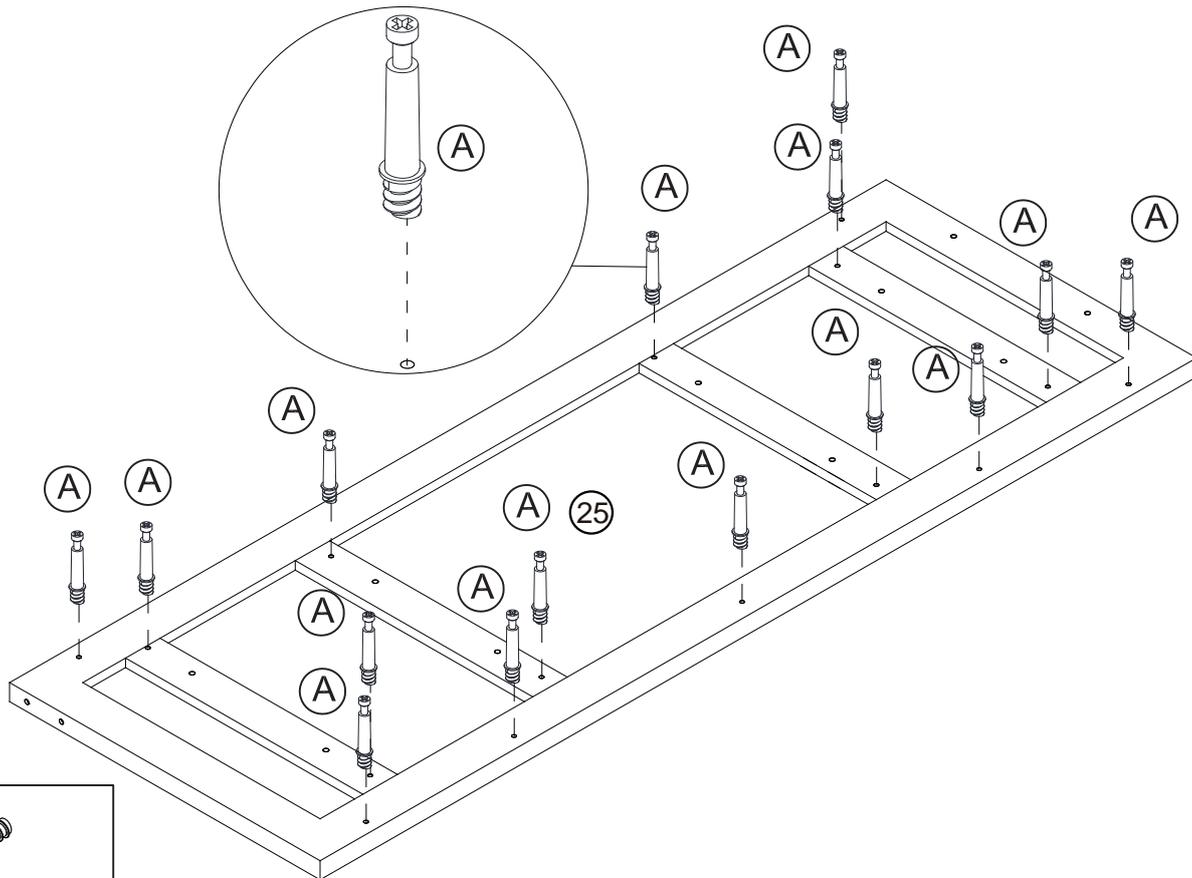


A

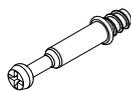

Cam Bolt x 15

## Step 26

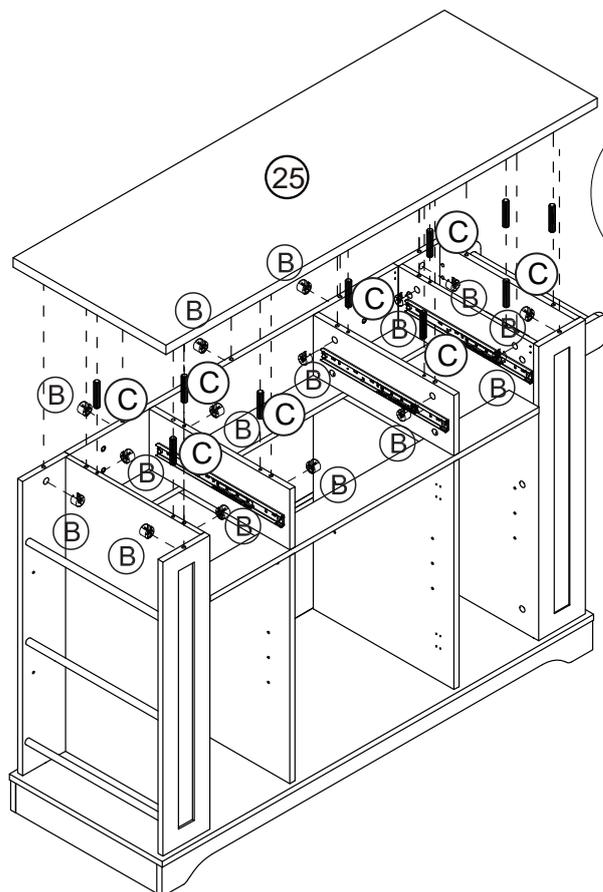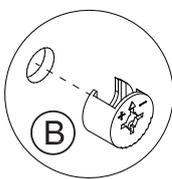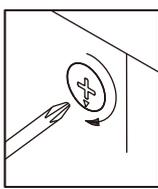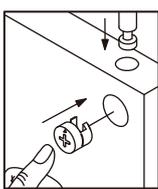

C



6\*40mm Dowel x 10


B



Cam lock x 15

# Assembly Instructions

## Step 27

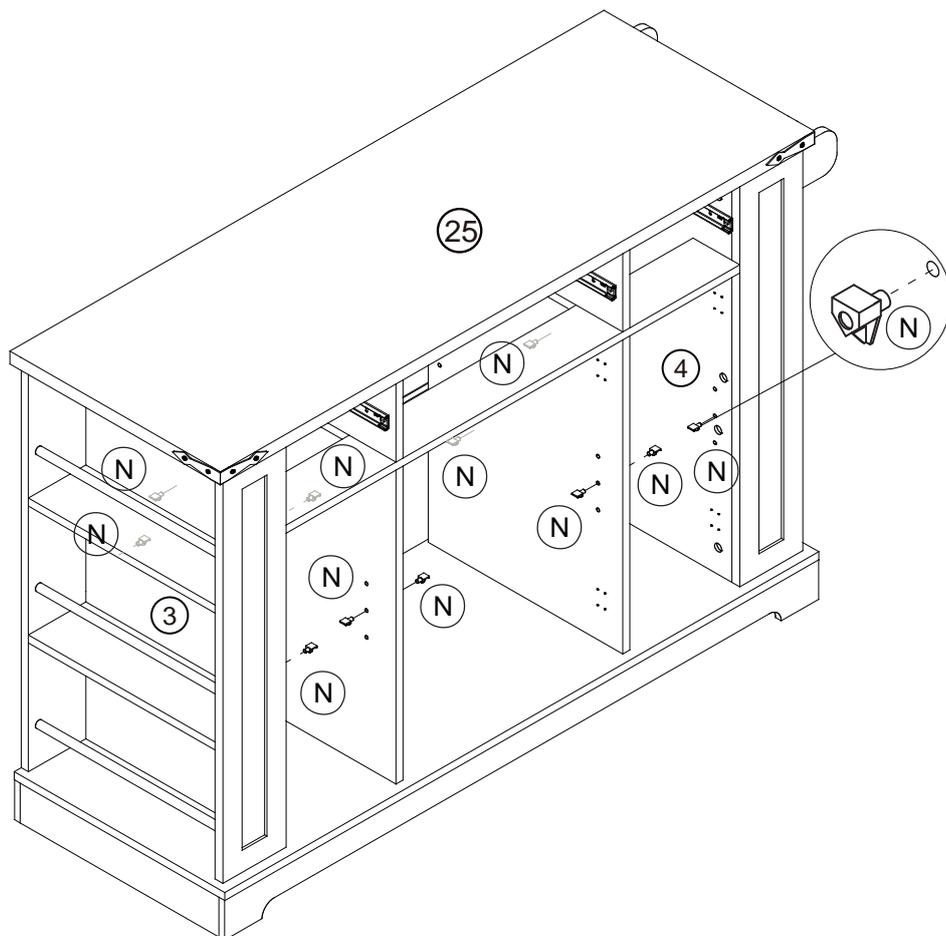


N





Laminate support x 12

## Step 28



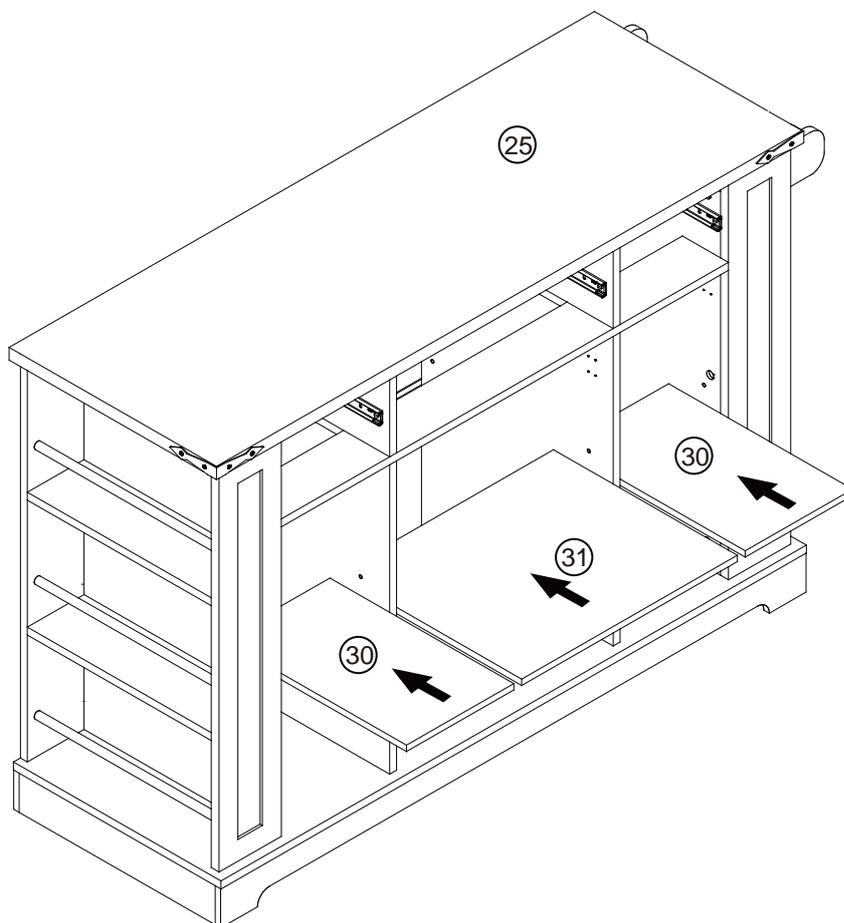


# Assembly Instructions

## Step 29

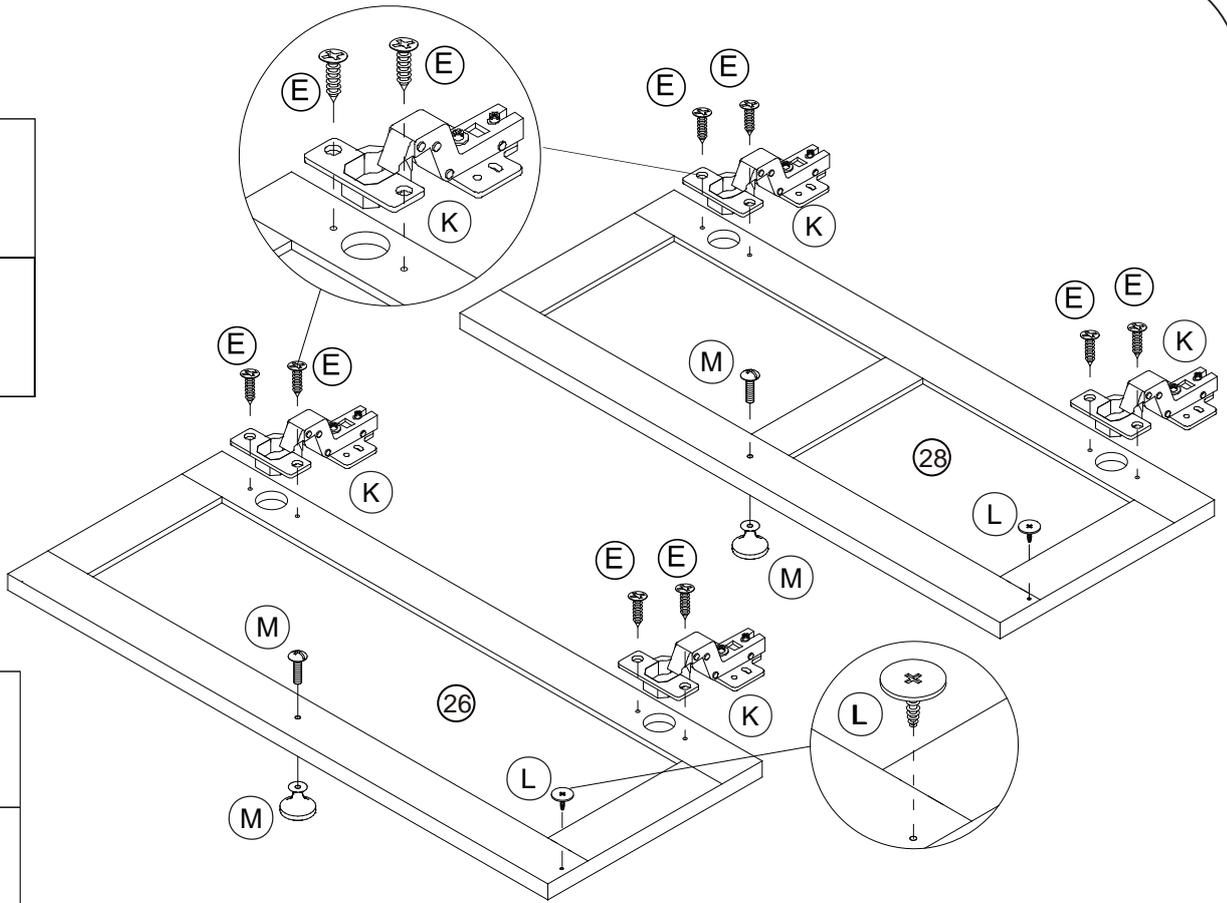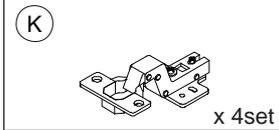


## Step 30

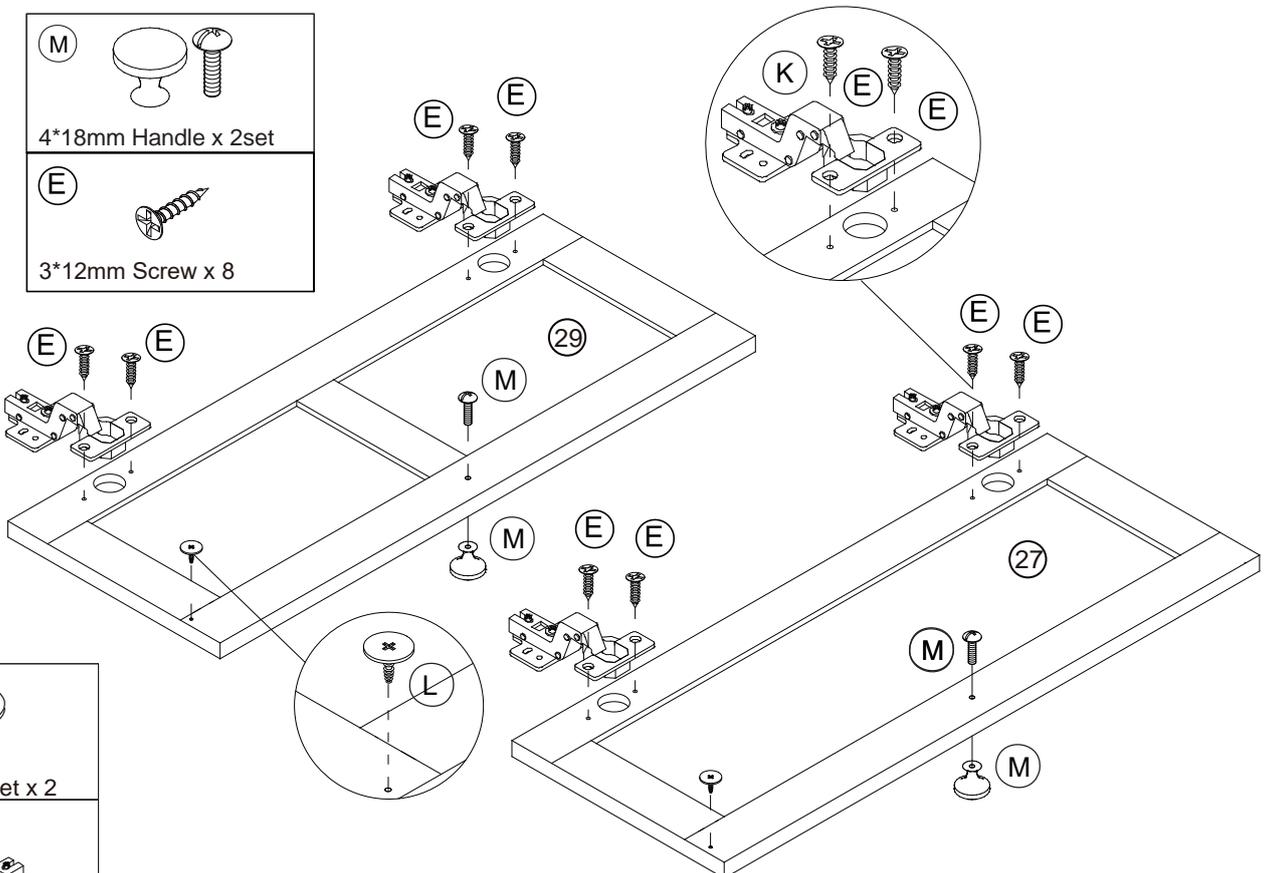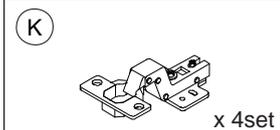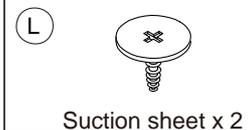


# Assembly Instructions

## Step 31

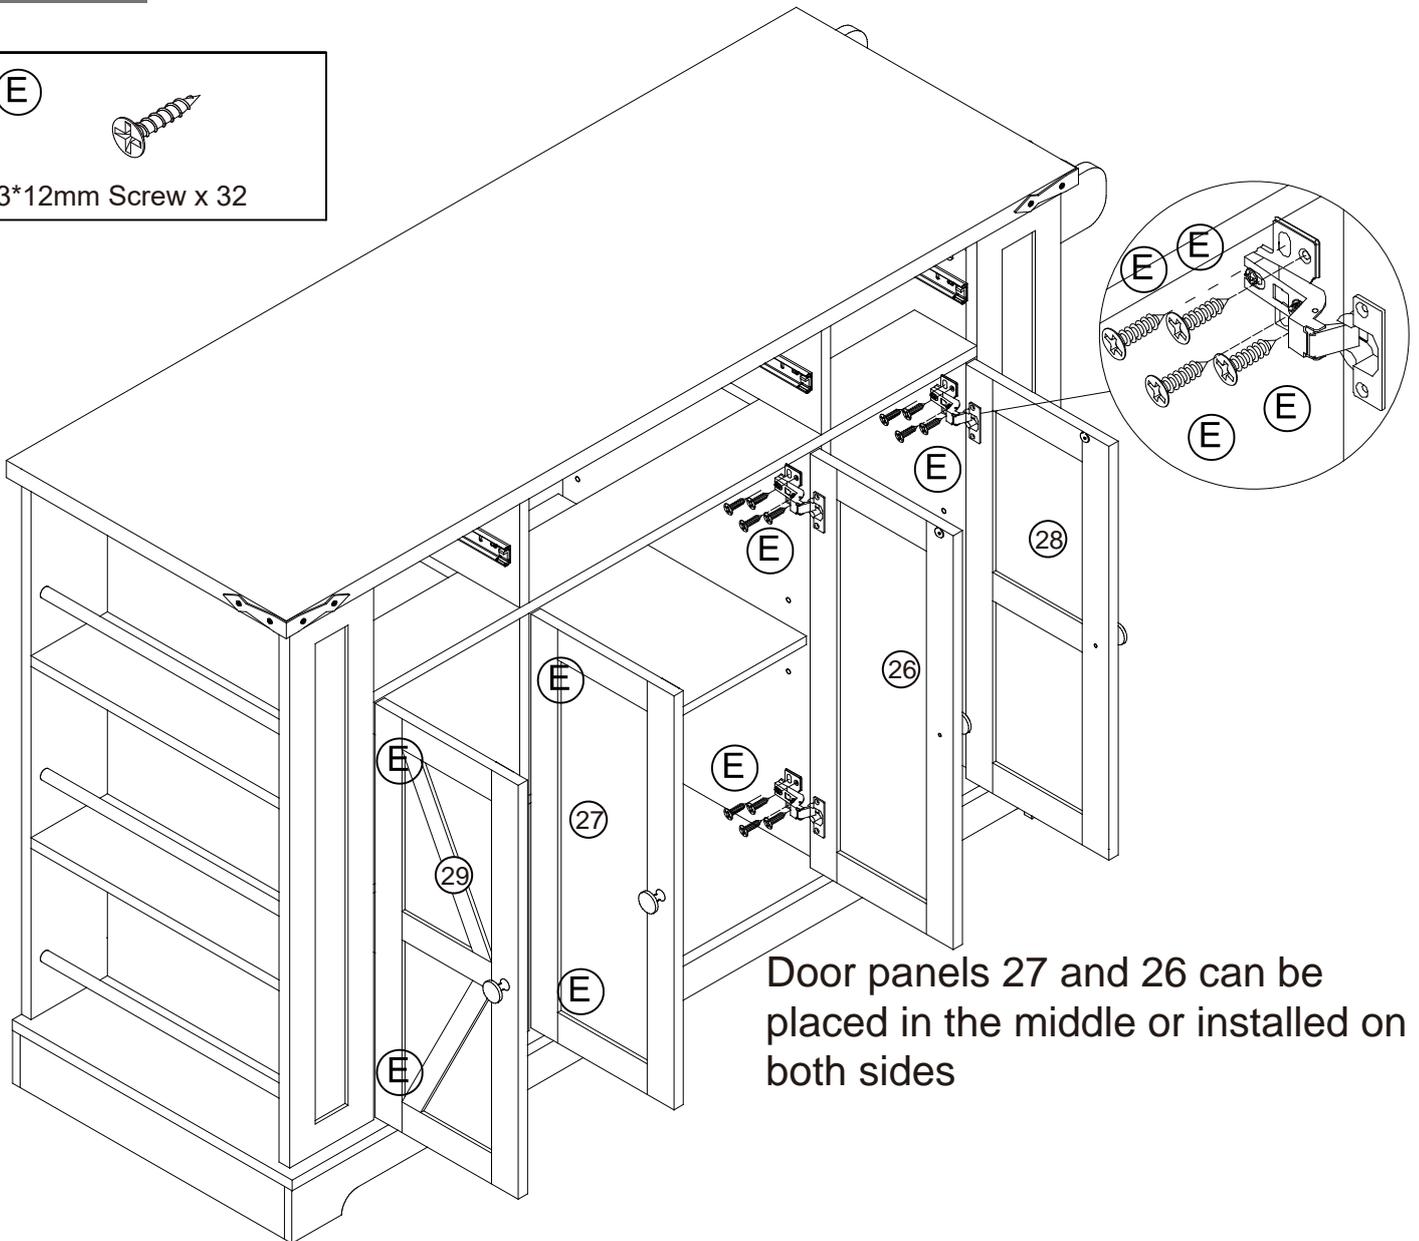


Door panels 27 and 26 can be placed in the middle or installed on both sides


If the door can't close, please adjust the hinges as below.

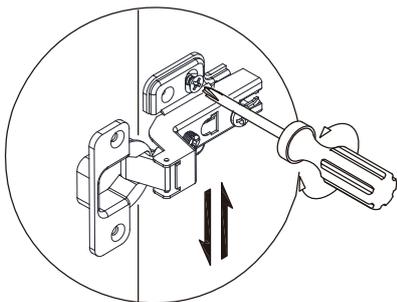

This is used to adjust the door panel in the up and down direction.

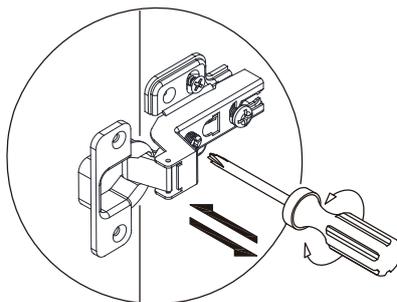


This is used to adjust the door panel in the left and right direction.

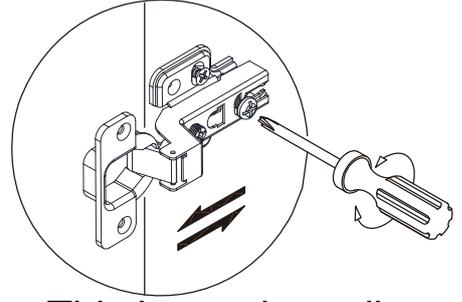

This is used to adjust the door panel in the front and rear.


# Assembly Instructions

## Step 32


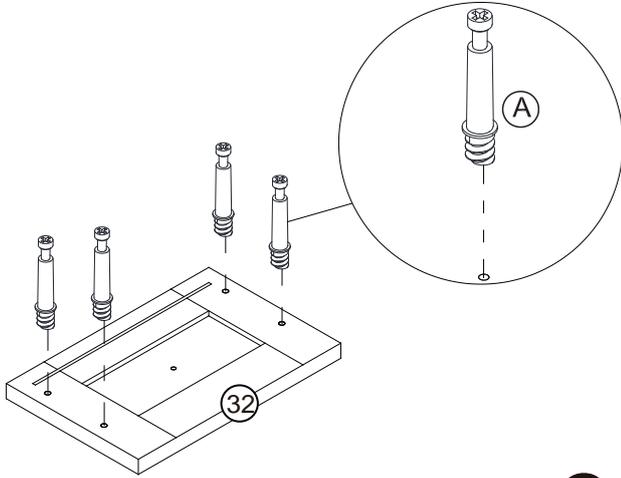


**x2**

(A)

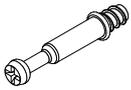

Cam Bolt x 8

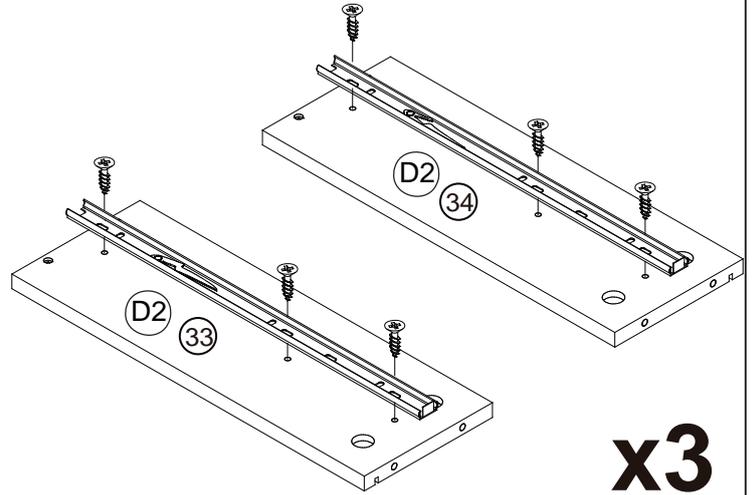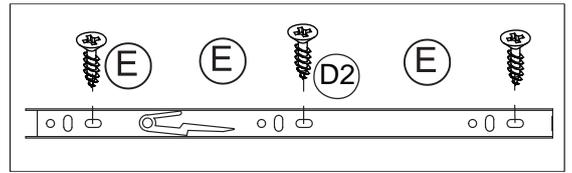


**x3**

(E)




3\*12mm Screw x 18

(D2)

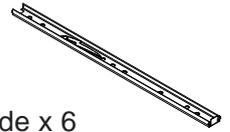


Slide x 6

## Step 33

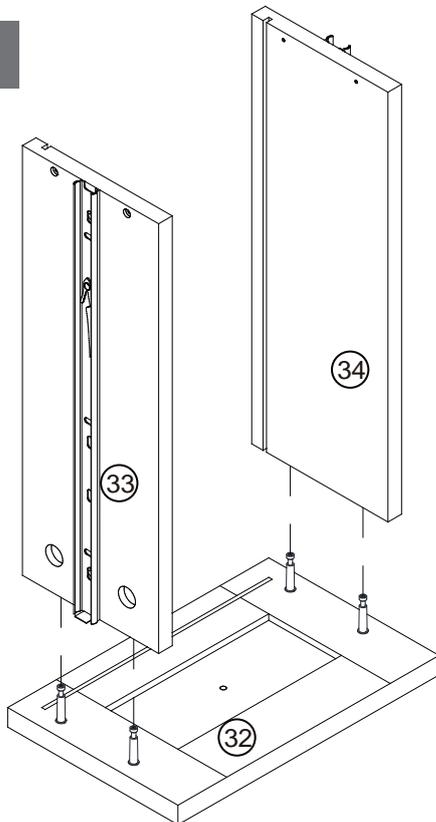

**x2**




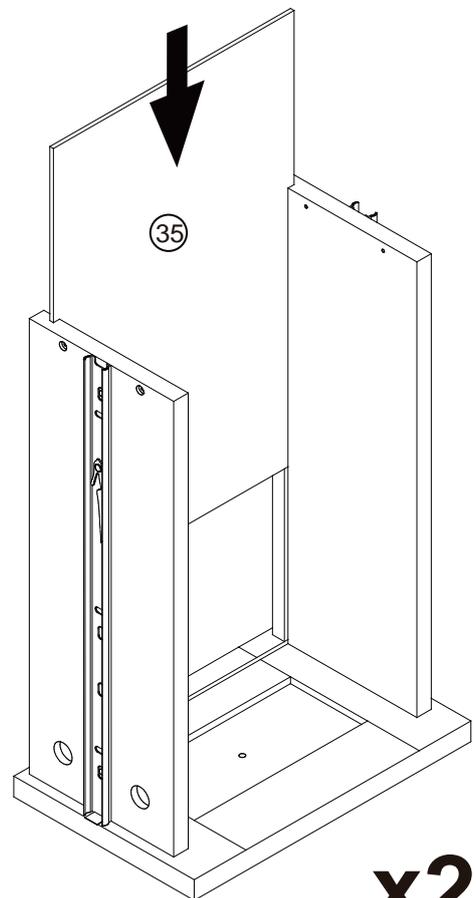


**x2**

# Assembly Instructions




Step 34

x2

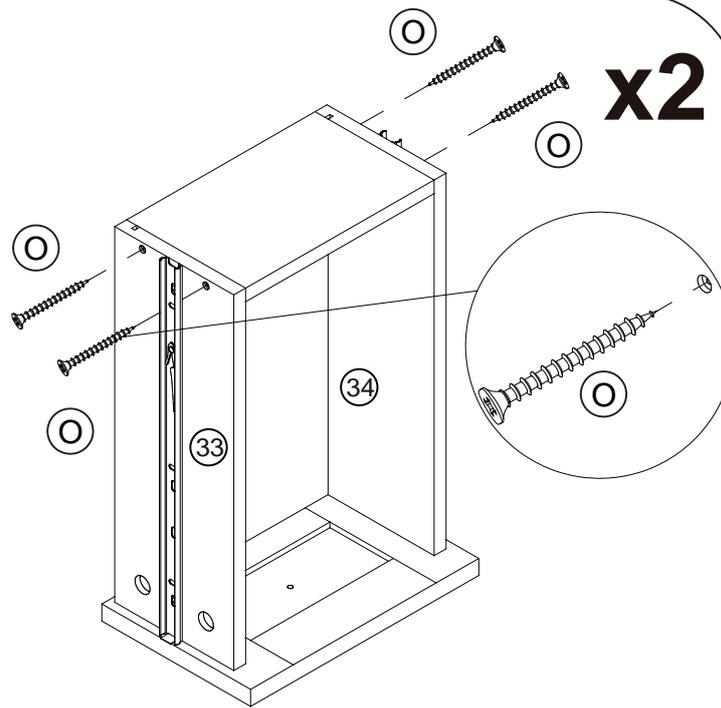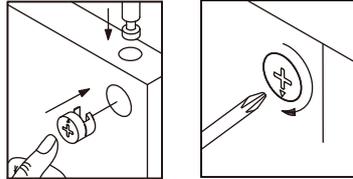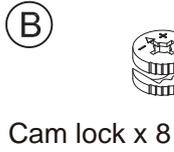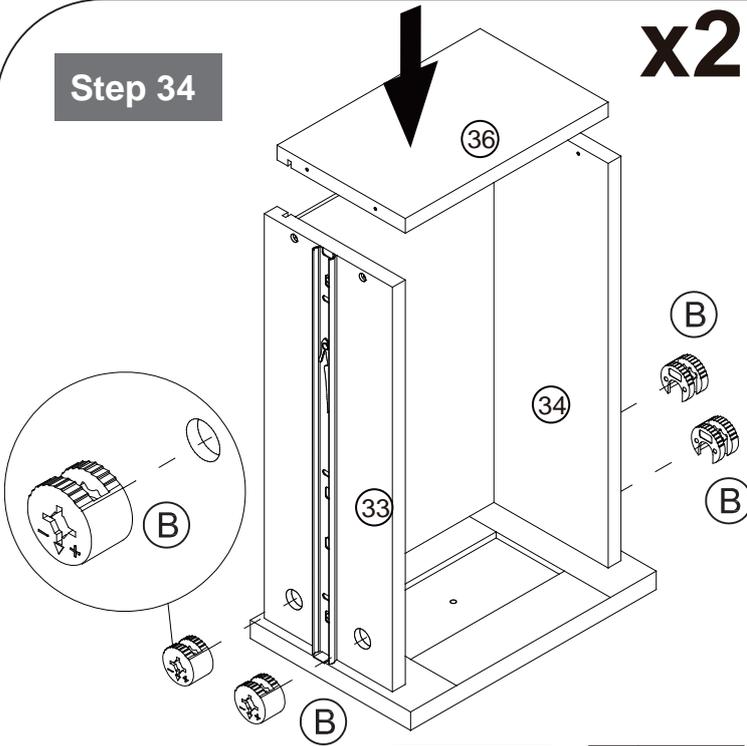



Step 35

x2




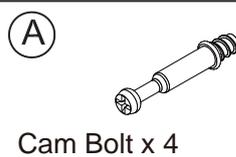
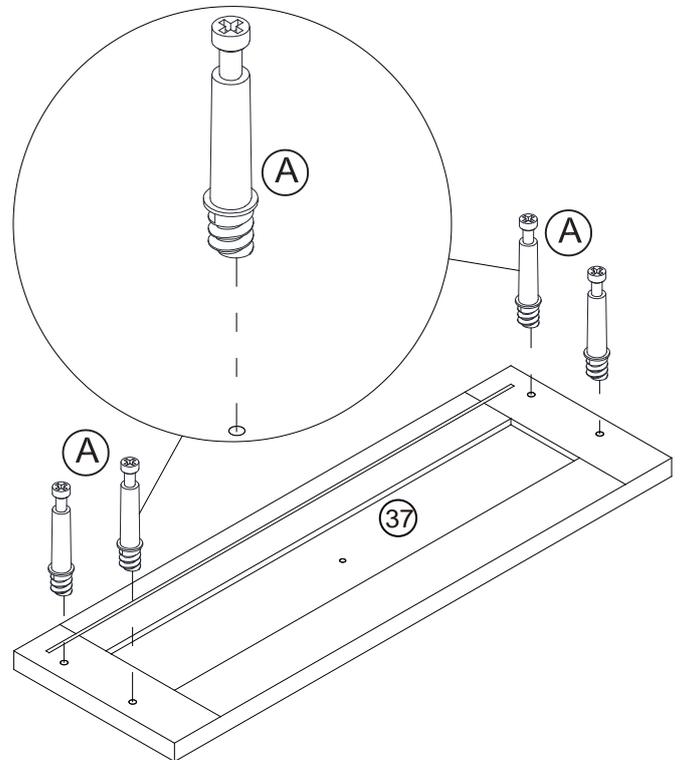
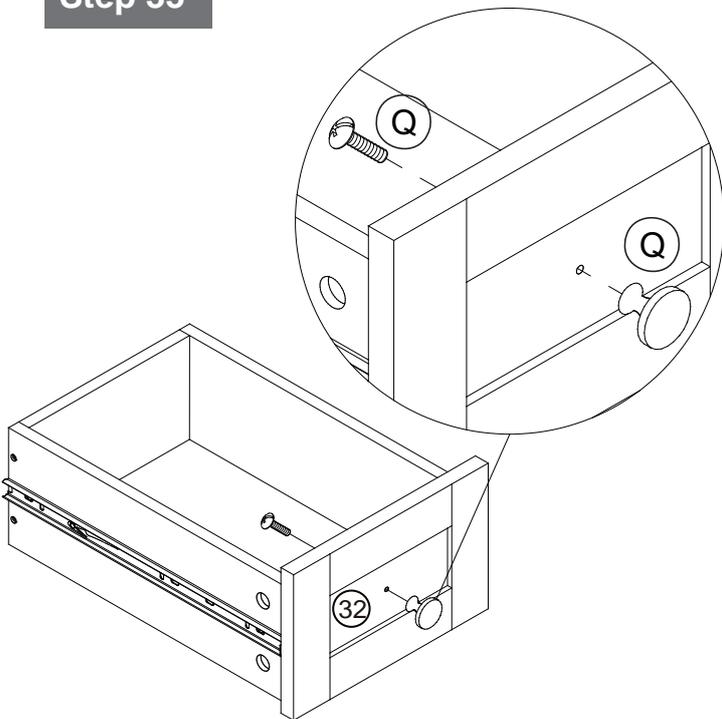


# Assembly Instructions

## Step 36

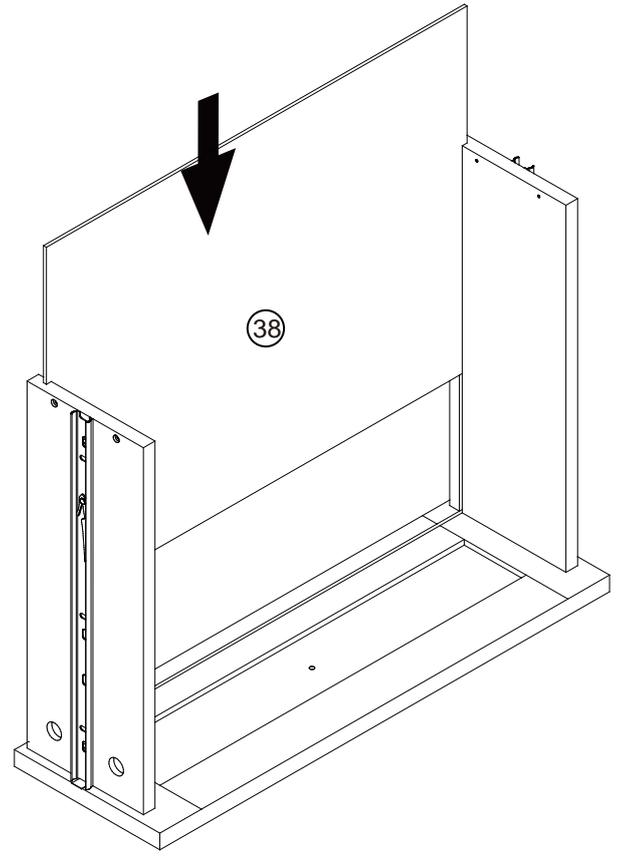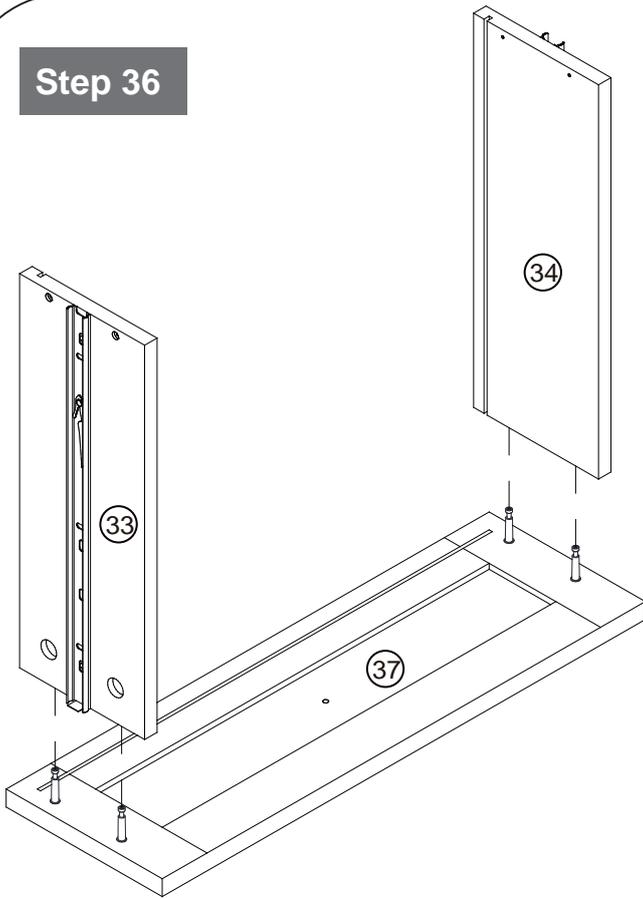


## Step 37

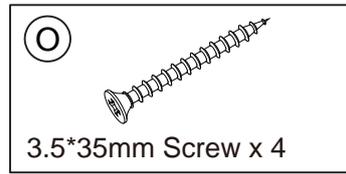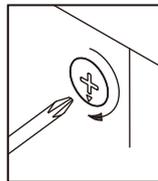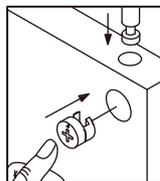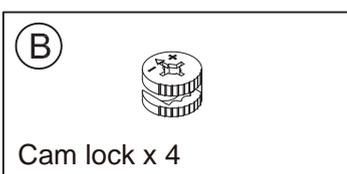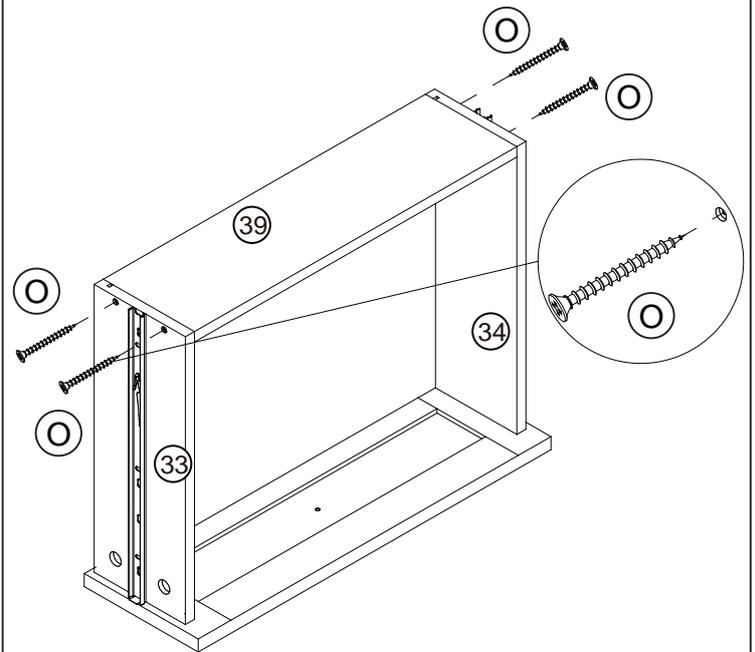
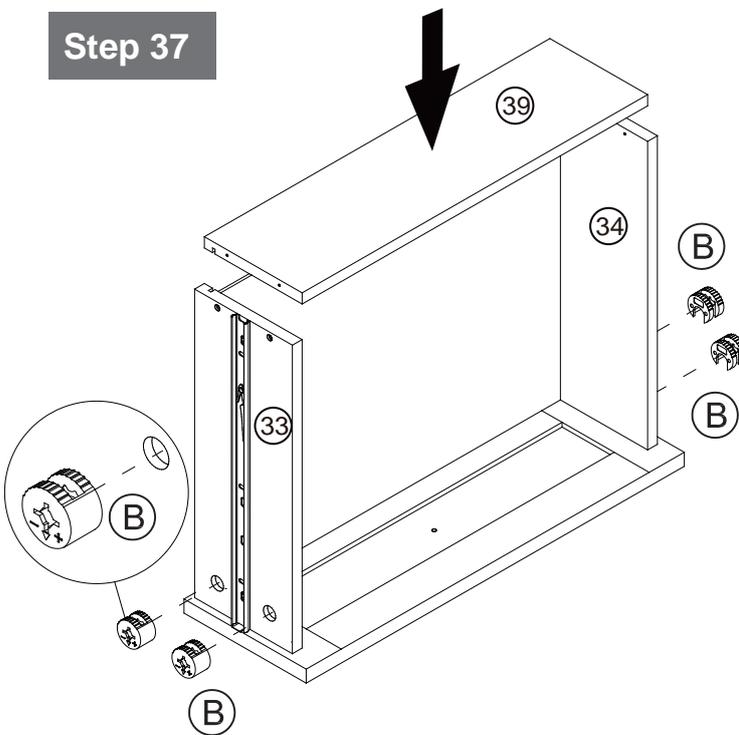


# Assembly Instructions

## Step 38



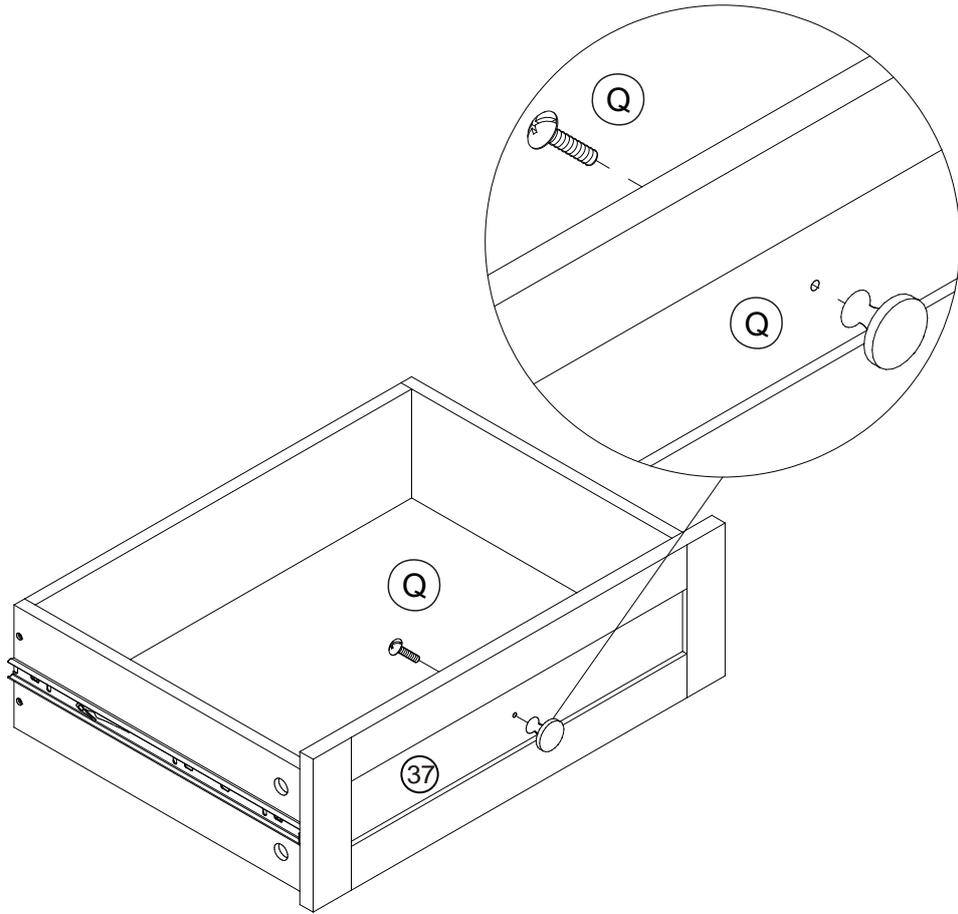


## Step 39

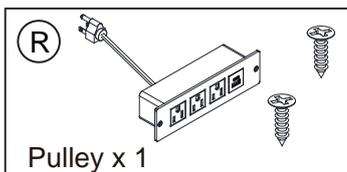
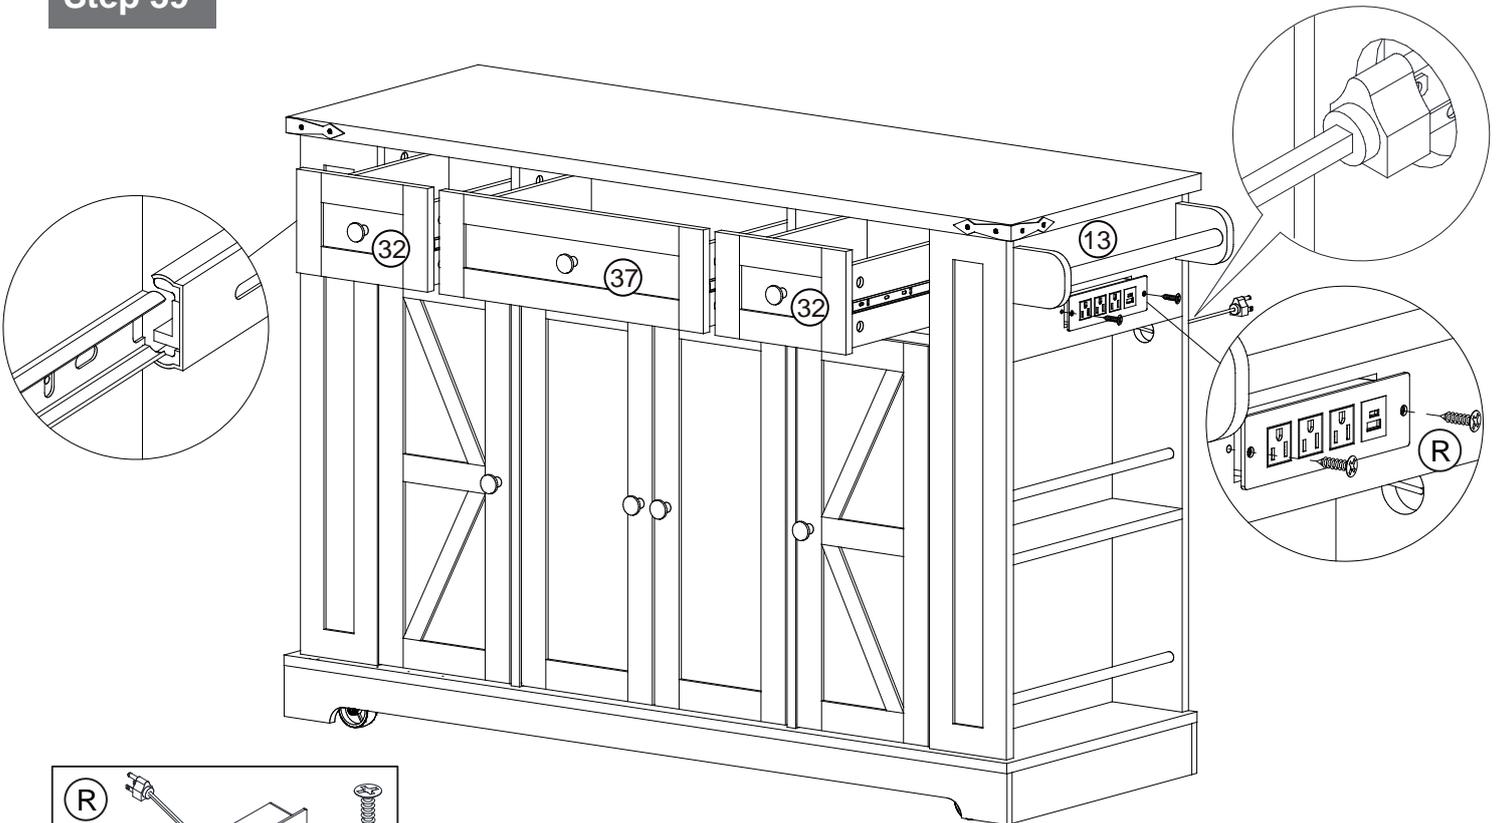


# Assembly Instructions



## Step 40

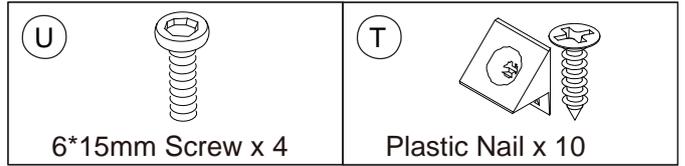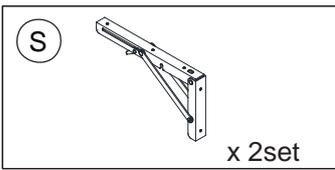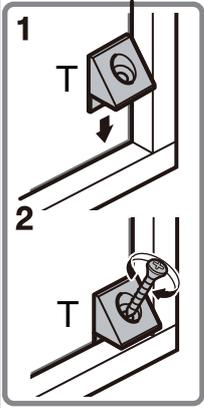

The Backboard Buckle T serves to assist in stabilizing the backboard structure. You can choose to install or not to install at will, This product can be used normally. When you choose to install it, you can directly screw in the screw T at the gap of the backboard.

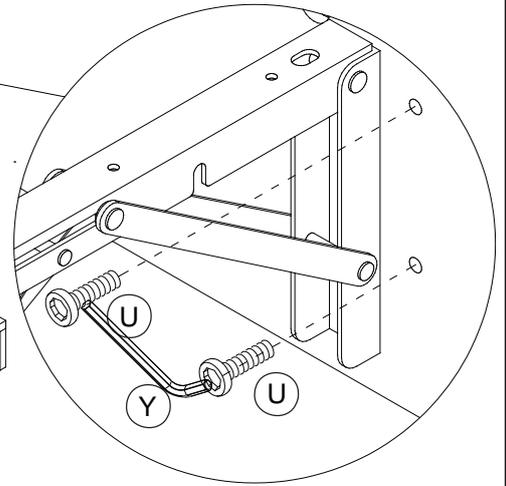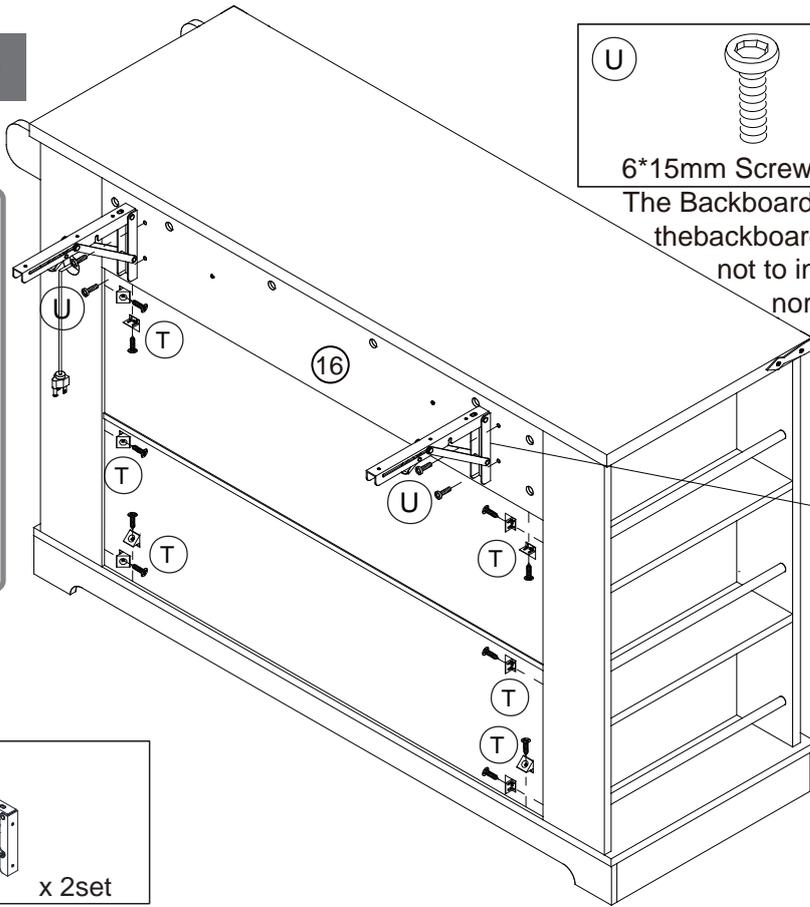


## Step 41

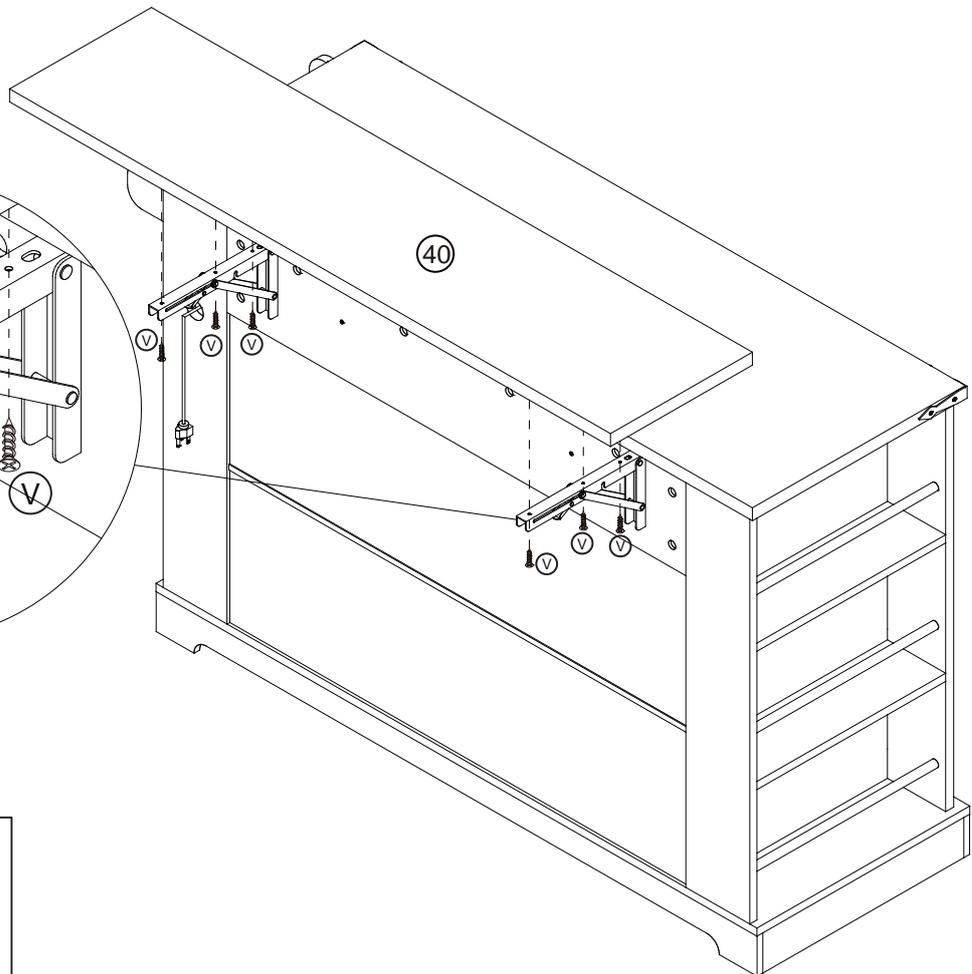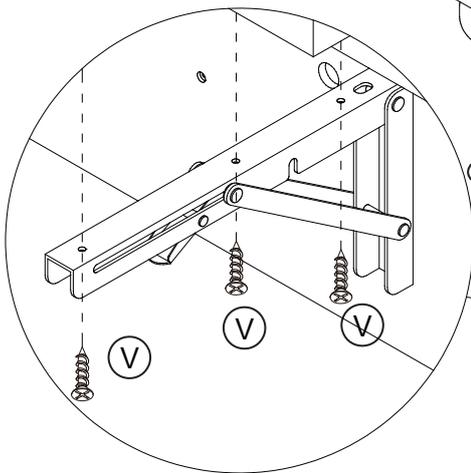

# Assembly Instructions

Step 42

(W)   
Perfect fit x26

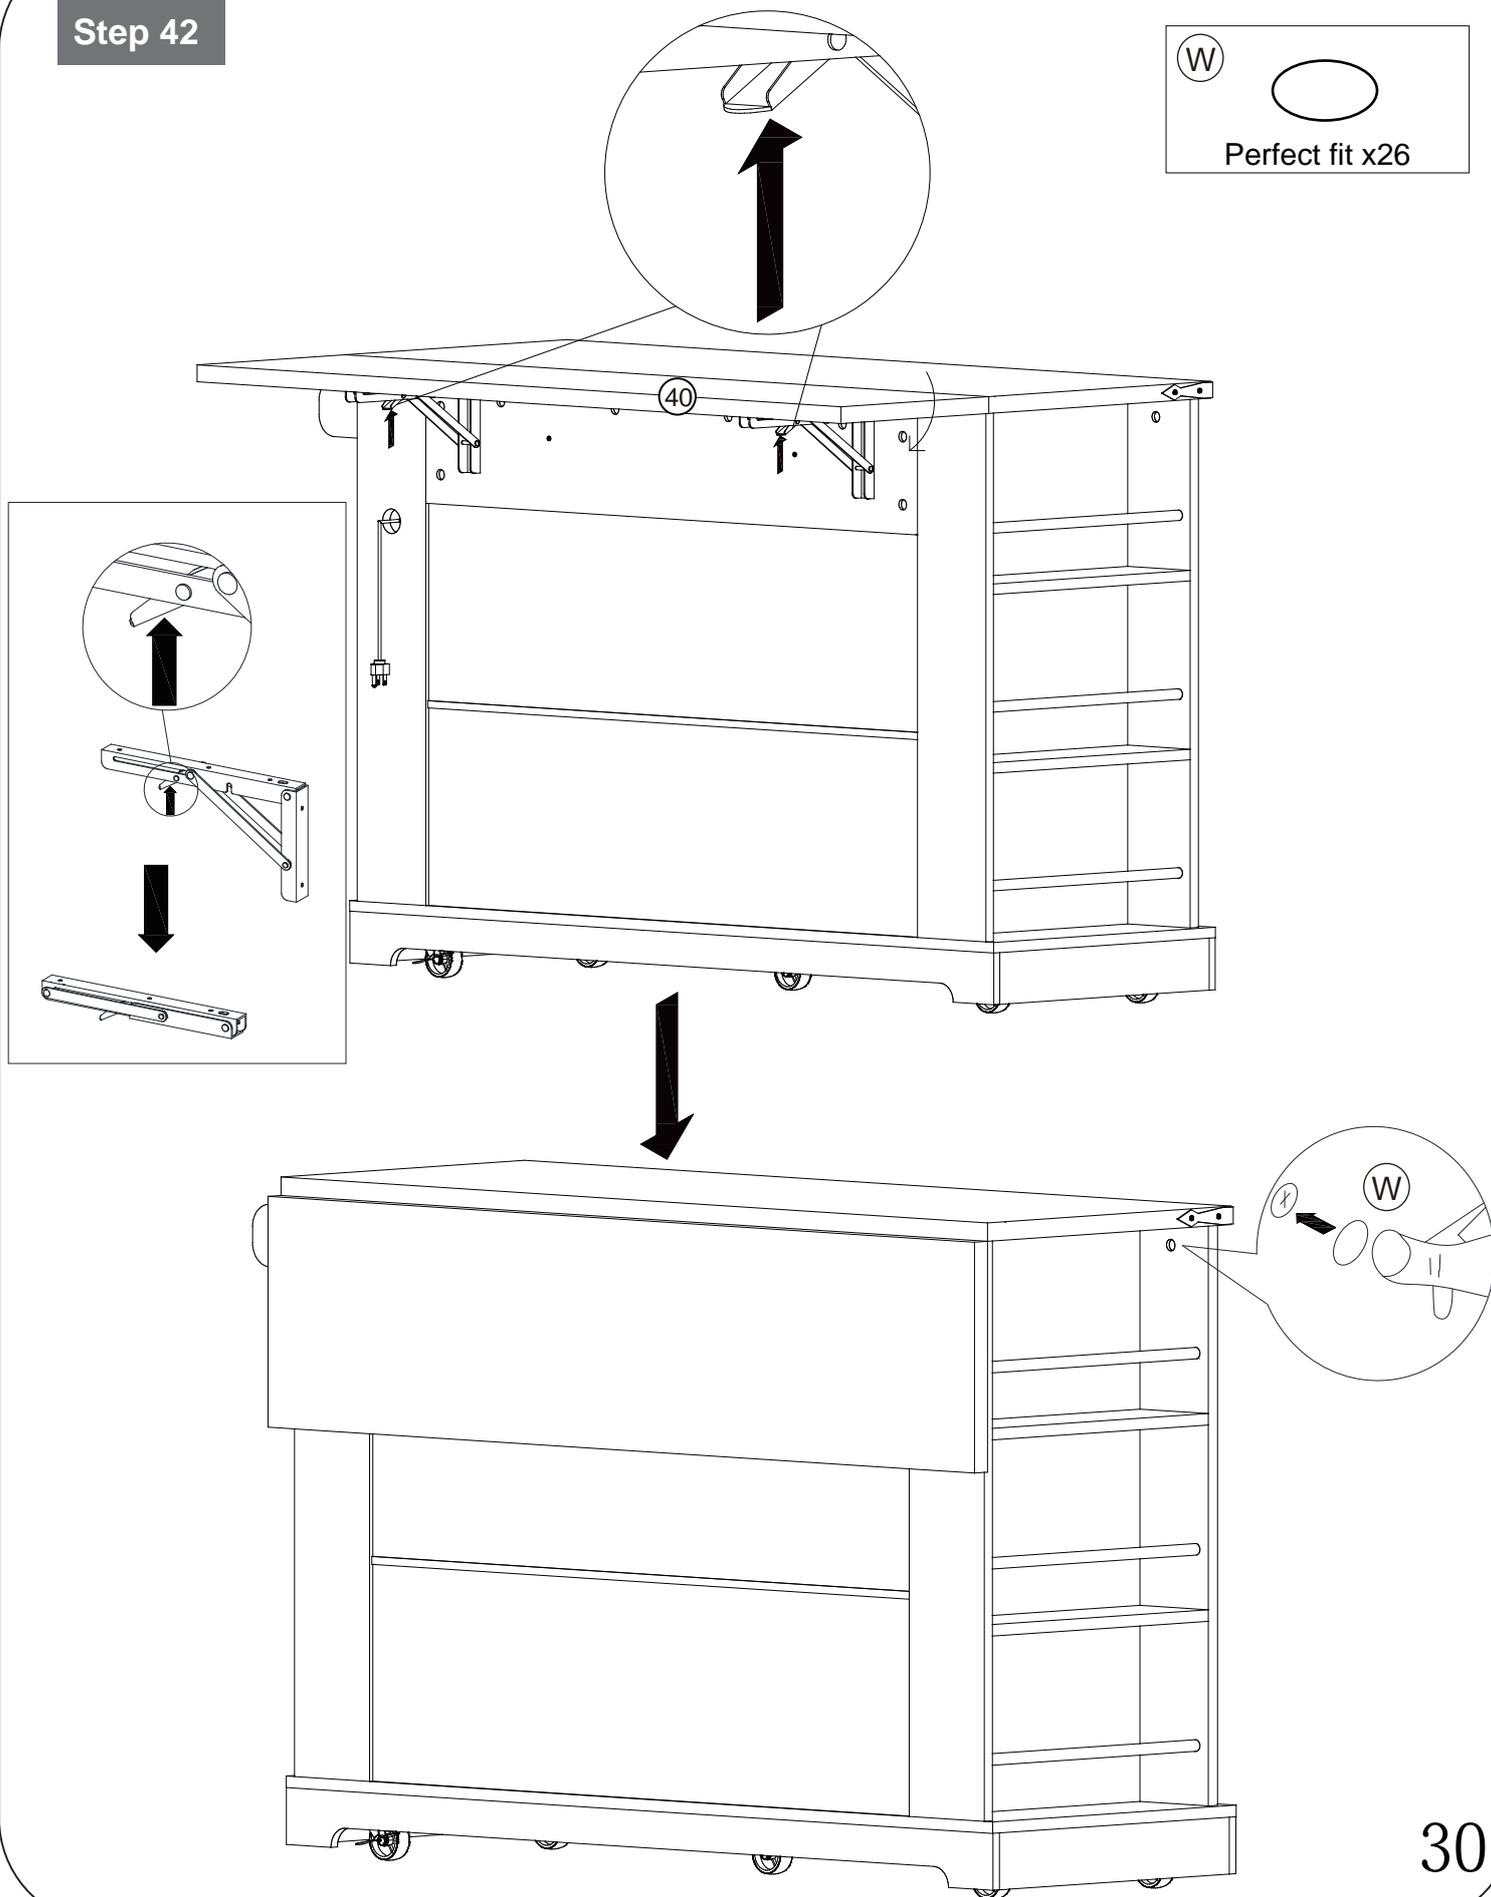

# Assembly Instructions

Step 43

