

Assembly Instructions

Caution : You must read this before you proceed



SAFETY WARNING


Never adjust chaise lounge or recliner backrest while seated.

Always make sure the backrest is flat before moving the chaise lounge.

Keep all limbs clear from under the backrest when it is in a raised position.

Serious finger, hand, or other bodily injuries may result from adjusting the chaise lounge backrest position while seated.

The examples pictured above are non exhaustive and are for your reference only

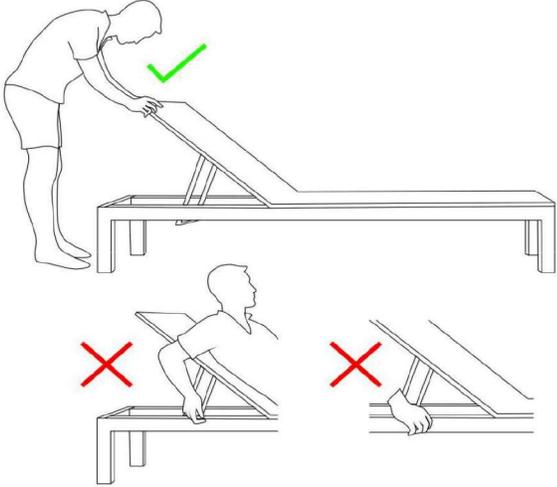


Care & Maintenance

-  ● Do not put hot items directly on furniture surface
-  ● Do not clean furniture with harsh cleansers or polish.
-  ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
-  ● Children should not climb or jump on the furniture.
-  ● Do not write on furniture without a padded barrier to protect the surface.
-  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and/or place under patio or awnings.
-  ● Not for commercial use. For residential use only.
-  ● Stains may be removed with mild soap solution and damp cloth.
-  ● Keep away from sources of ignition.
-  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Assembly Instructions



CAUTION: You must read this Assembly Instructions before you proceed

SUN LOUNGE

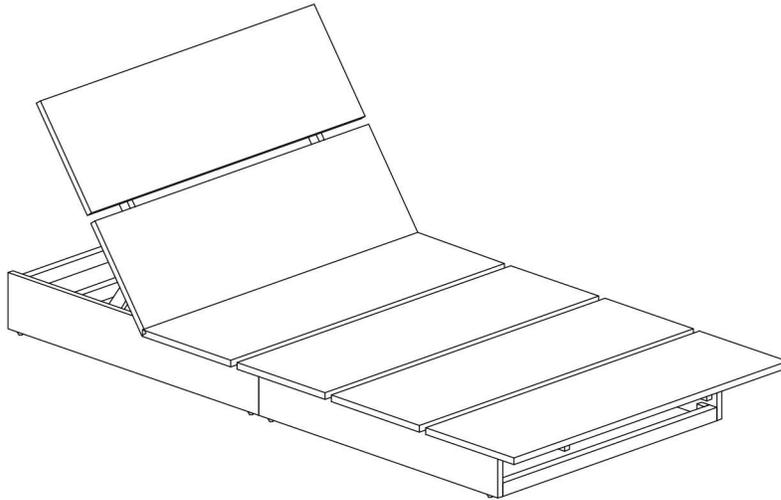

Part List

Label	Picture	Description	QTY
A		Top bed 1	1
B		Top bed 2	1
C		Top bed 3	1
D		Panels 1	1
E		Panels 2	1
F		Panels 3	1


G		Panels 4	1
H		Braced 1	2
I		Braced 2	2
J		Braced 3	2
K		Braced 4	1
L		Braced 5	1
M		Braced 6	3
N		Anti bed	1
O		Block	6

Hardware

Label	Picture	Description	QTY
①		Screw (M6x60mm)	9
②		Screw (M6x40mm)	3
③		Screw (M4x35mm)	27
④		Bolt (M6x40mm)	5
⑤		Allen Wrench	1
⑥		Plastic Washer	2

Assembly Preparation

Before
Beginning
Assembly:

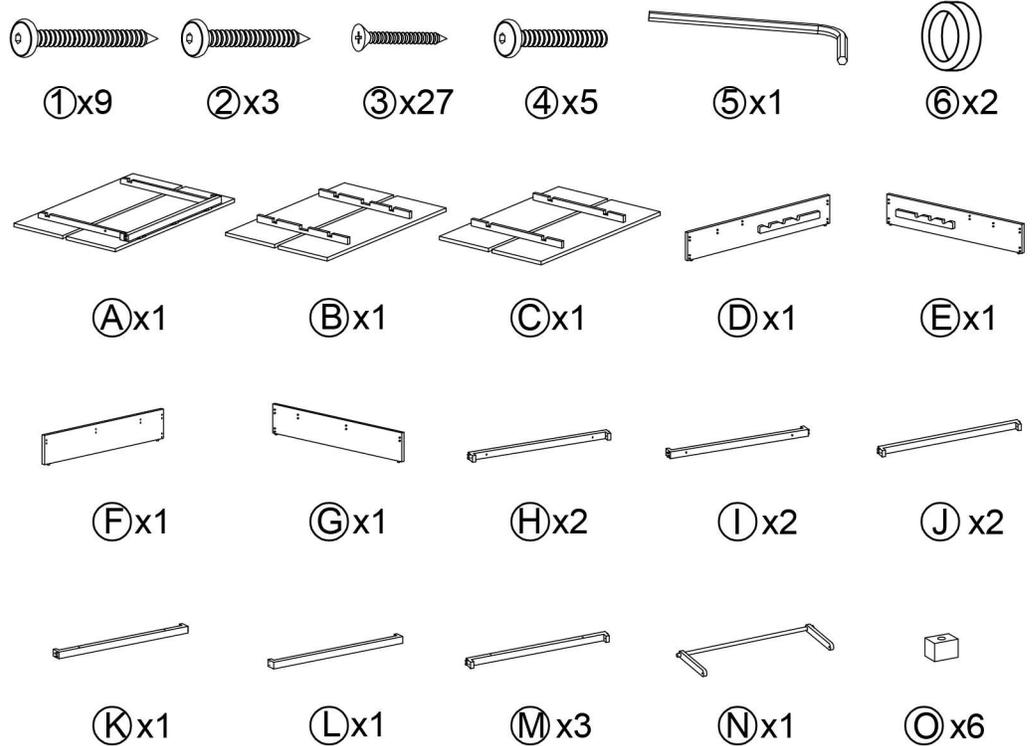

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

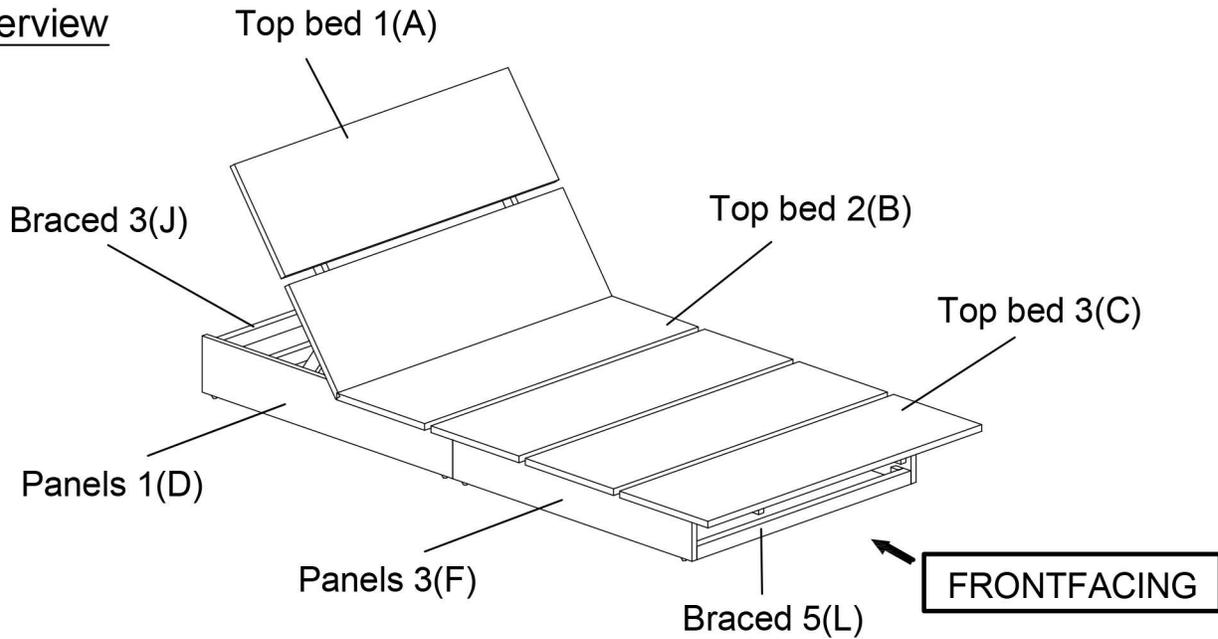


This Sun Lounge can take up to 45 minutes to assemble. To give you an overview of the table parts, the image above will give you a better idea of each part. Please read the instructions below carefully to familiarize yourself with the parts and steps before assembling.

Step 1

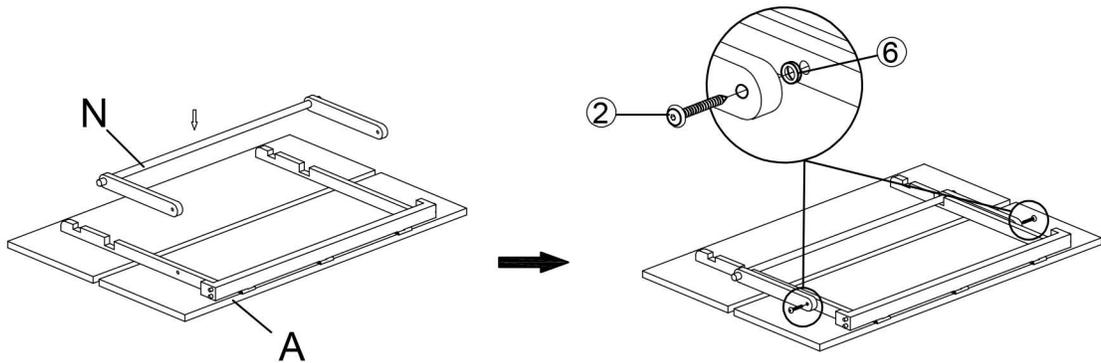


Attach Anti Bed (N) to Top Bed 1(A) using Screw(2) and Plastic Washer(6) with Allen Wrench (5).

Step 2

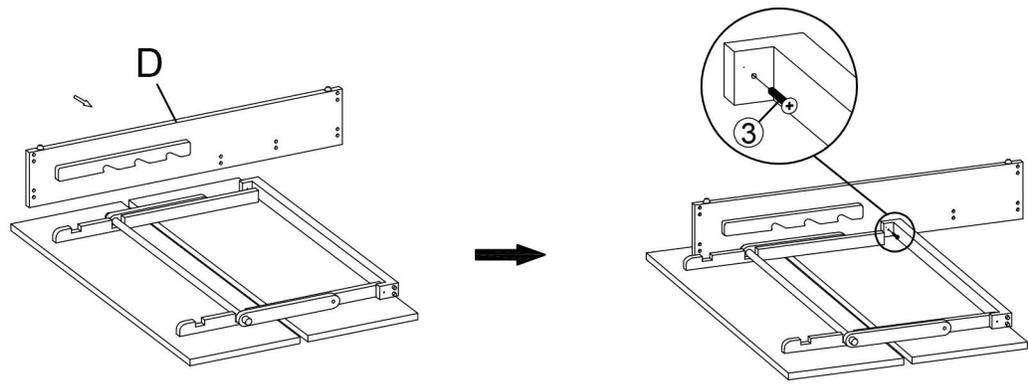


Attach Panels 1(D) to Top Bed(A) using Screw(3) with Screwdriver(Not provided).

Step 3

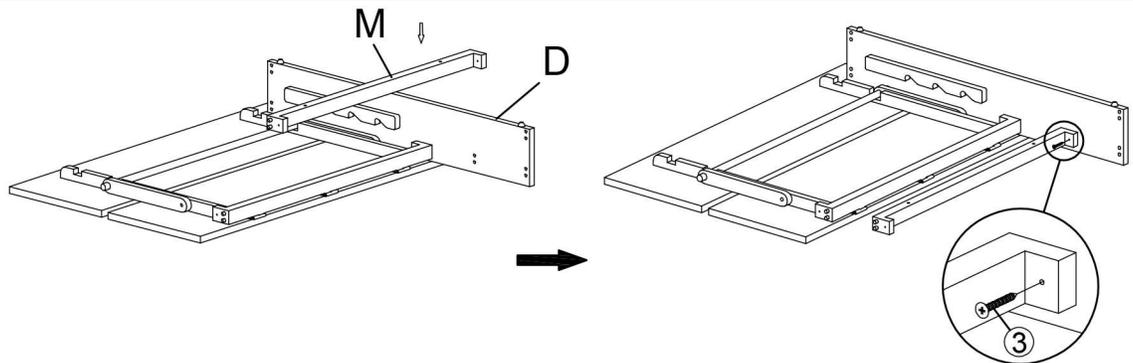


Attach Braced 6(M) to Panels 1(D) using Screw(3) with Screwdriver(Not provided).

Step 4

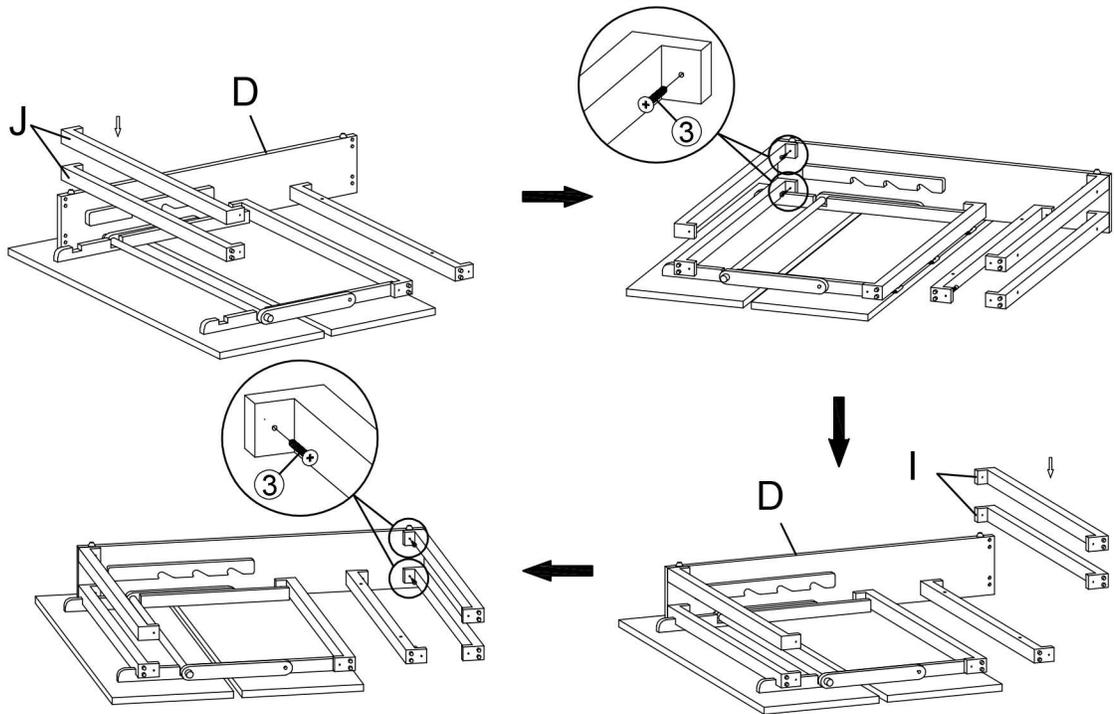


Attach Braced 3(J) to Panels 1(D) using Screw(3) with Screwdriver(Not provided). Similarly Attach Braced 2(I) to Panels 1(D) using Screw(3) with Screwdriver(Not provided).

Step 5

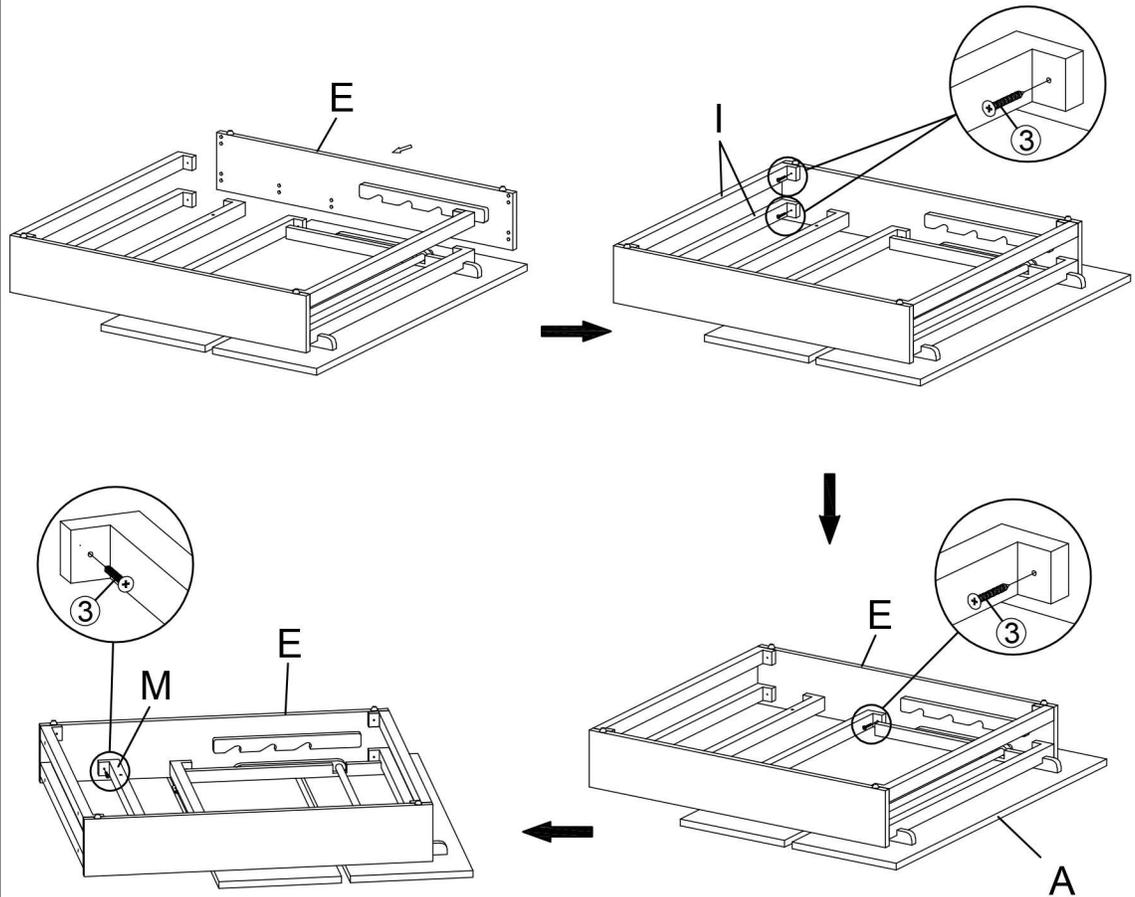


Attach Braced 2(I) to Panels 2(E) using Screw(3) with Screwdriver(Not provided).
Similarly Attach Top Bed 1(A) to Panels 2(E) using Screw(3) with Screwdriver(Not provided).
And Attach Braced 6(M) to Panels 2(E) using Screw(3)with Screwdriver(Not provided).

Step 6

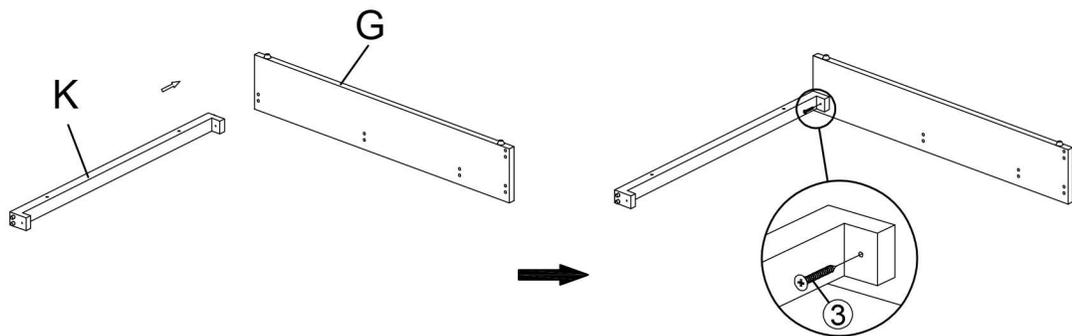


Attach Braced 4 (K) to Panels 4(G) using Screw(3) with Screwdriver(Not provided).

Step 7

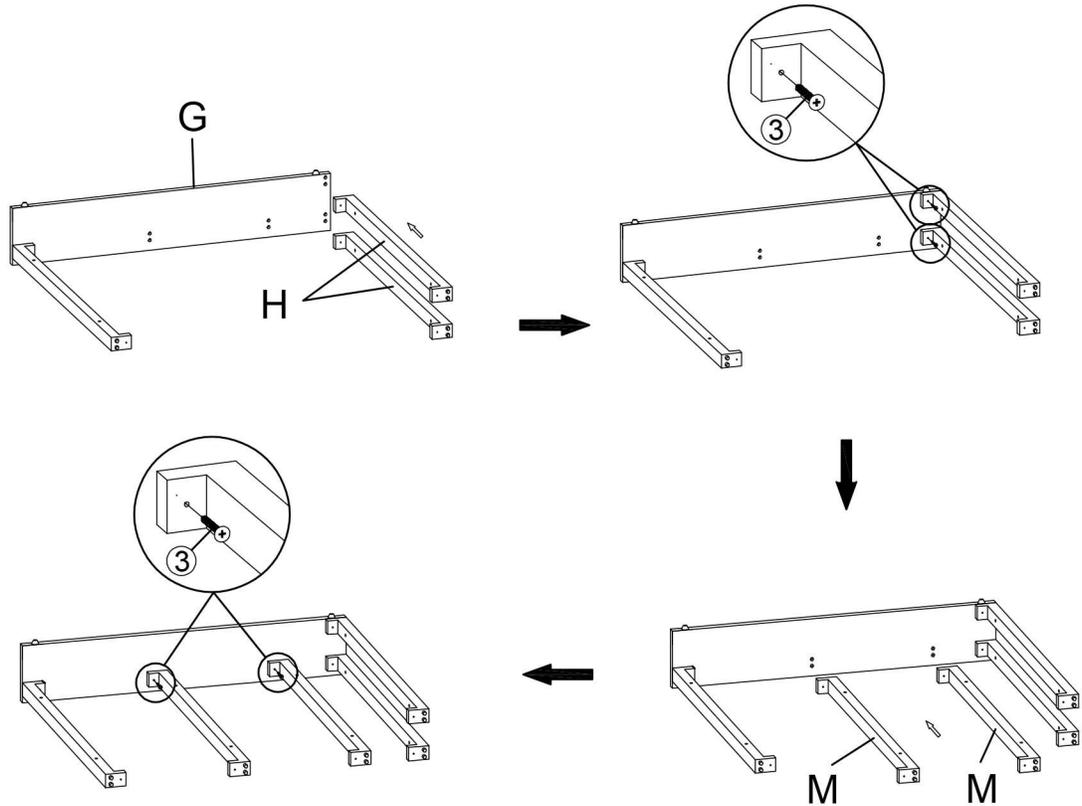


Attach Braced 1(H) to Panels 4(G) using Screw(③) with Screwdriver(Not provided). Similarly Attach Braced 6(M) to Panels 4(G) using Screw(③) with Screwdriver(Not provided).

Step 8

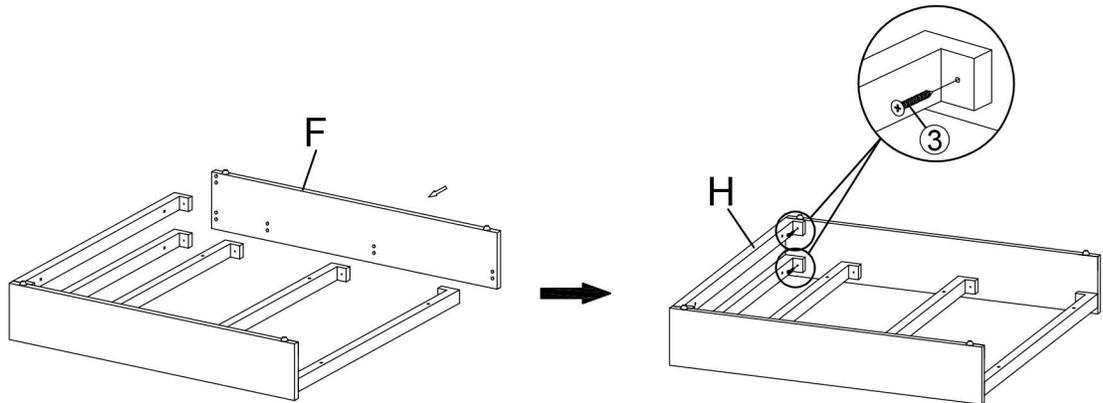


Attach Braced 1(H) to Panels 3(F) using Screw(③) with Screwdriver(Not provided).

Step 9

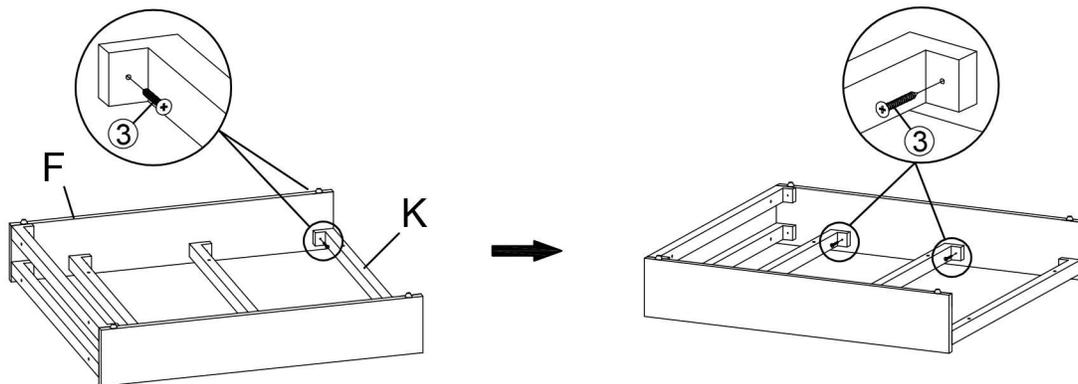


Attach Braced 4(K) to Panels 3(F) using Screw(3) with Screwdriver(Not provided). Similarly Attach Braced 6(M) to Panels 3(F) using Screw(3) with Screwdriver(Not provided).

Step 10

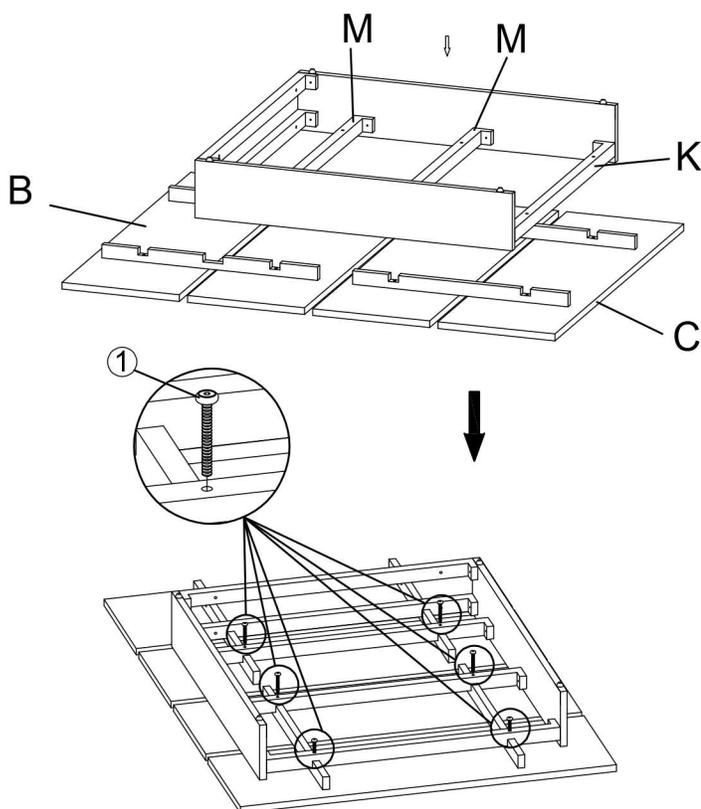


Attach Braced 4(K) to Top Bed 3(C) using Screw(1) with Allen Wrench (5). Attach Braced 6(M) to Top Bed 3(C) using Screw(1) with Allen Wrench (5). Similarly Attach Braced 6(M) to Top Bed 2(B) using Screw(1) with Allen Wrench (5).

Step 11

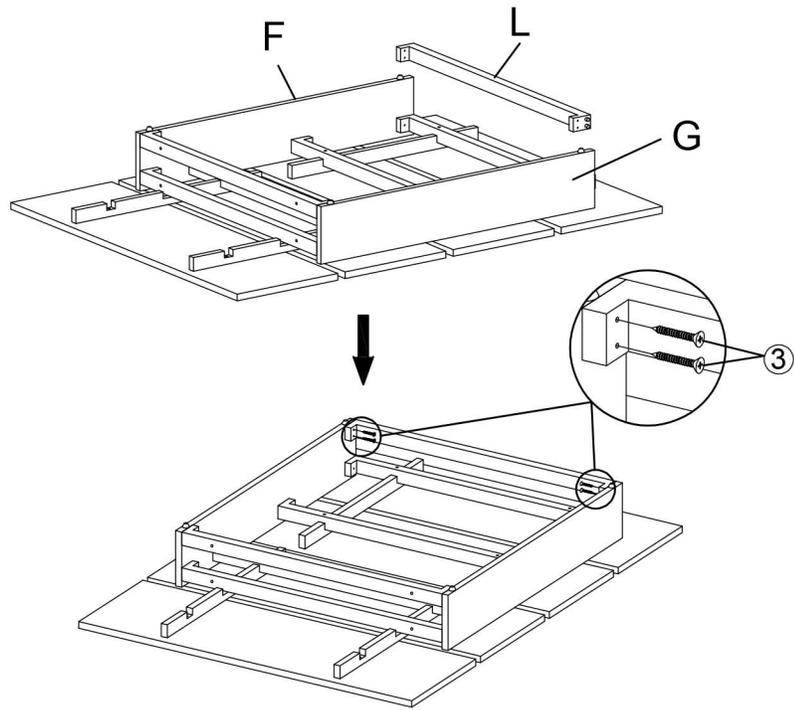


Attach Braced 5(L) to Panels 3(F) using Screw(③) with Screwdriver(Not provided). Similarly Attach Braced 5(L) to Panels 4(G) using Screw(③) with Screwdriver(Not provided).

Step 12

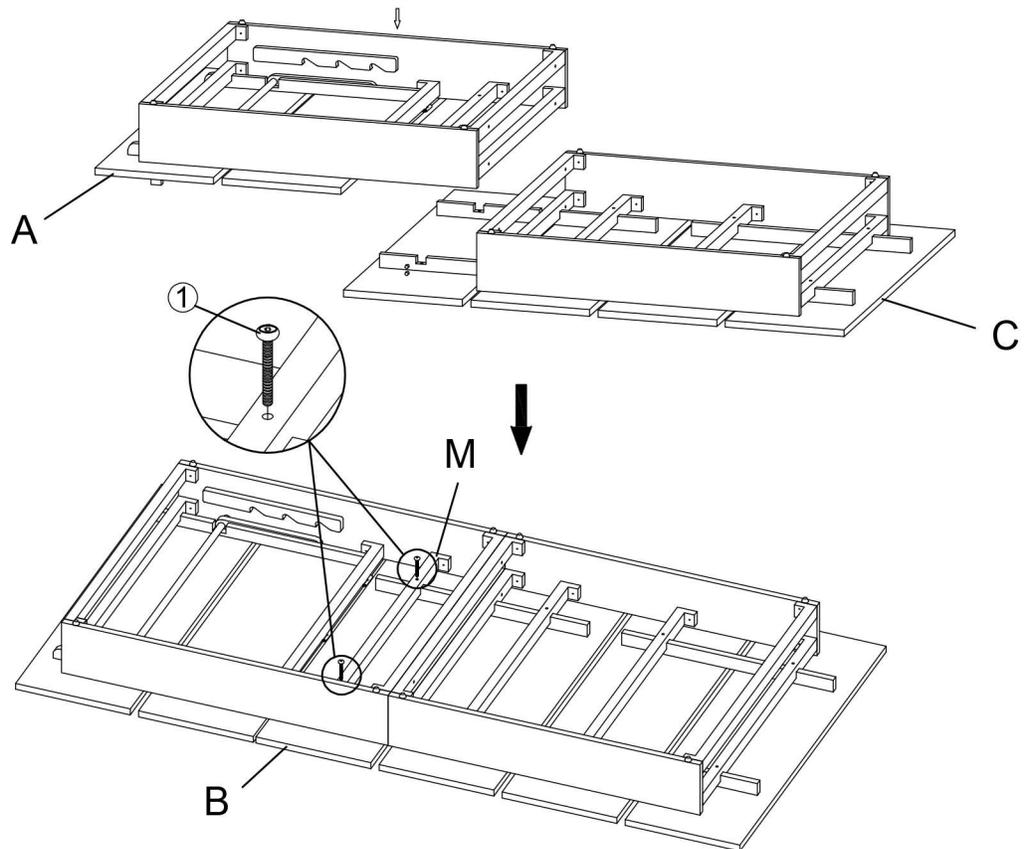

Attach Braced 6(M) to Top bed 2(B) using Screw(①) with Allen Wrench (⑤) .

Step 13

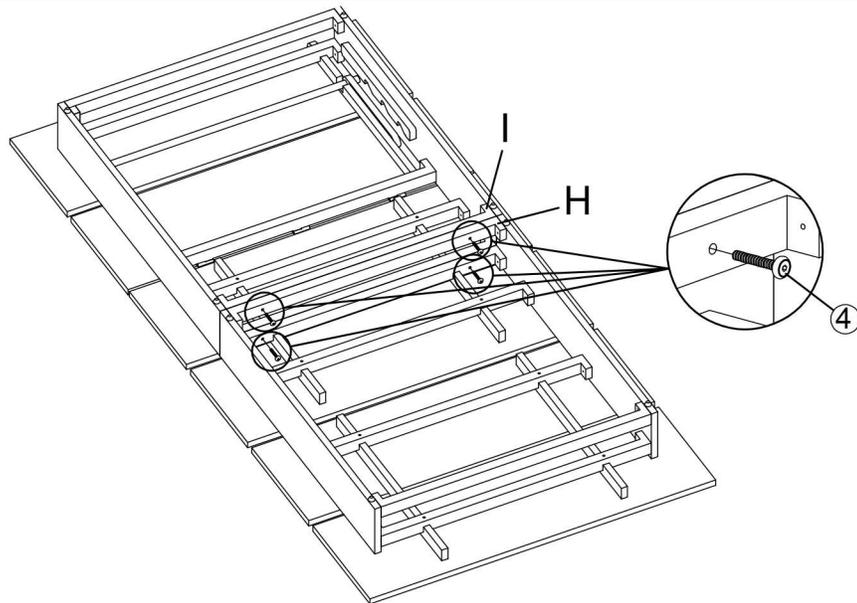

Attach Braced 1(H) to Braced 2(I) using Bolt(④) with Allen Wrench (⑤).


Tighten all the remaining bolt.

Do Not fully tighten a bolt in one go and then move on to the next.

Rather, in a gradual and sequential manner, proceed to fully and securely tighten all Bolts at all joints.

This methodology will ensure maximum evenness once all bolts are fully tightened.

Step 14

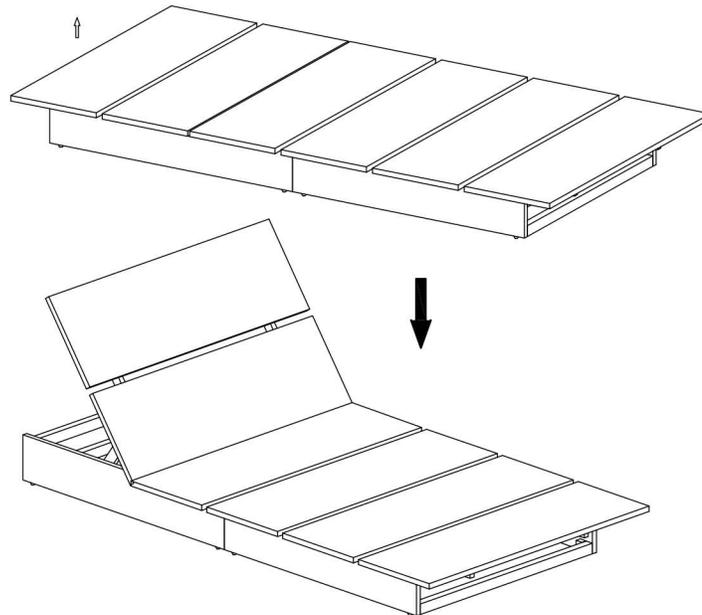

With the assistance of an adult, turn Sun lounge right side up.

CAUTION:When tightening these screws and bolt fully and then move towards the next one.



This could cause the frame to warp.

WARNING!! IF THE SUN LOUNGE IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Your **SUN LOUNGE** is ready for use.

This **SUN LOUNGE** can only be used on a flat, level surface.

Step 15

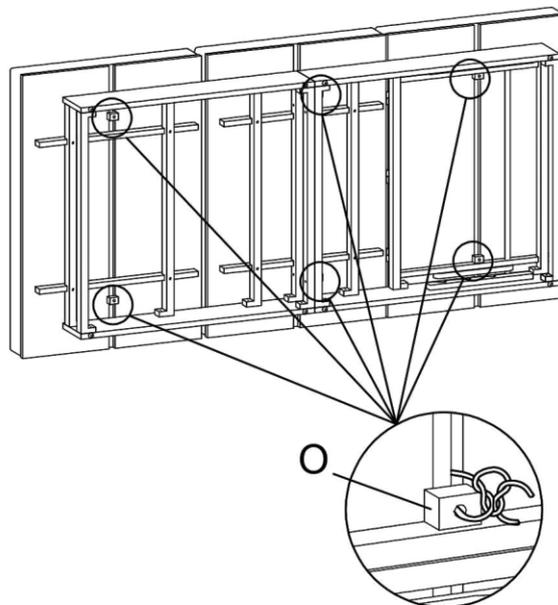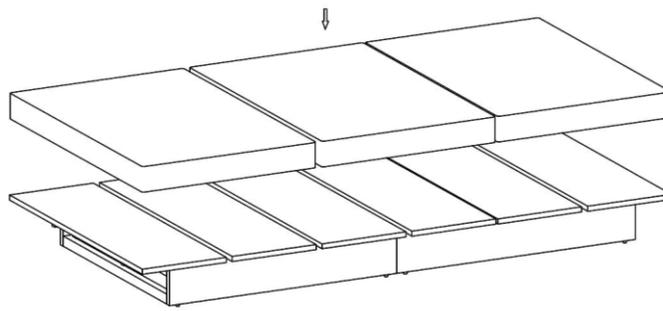

**Attach seat cushion to the Sun Lounge using Block (O).
Seat cushion NOT INCLUDED.
The Block can be slid and to you can freely choose the position of the
cushion**