


Item # : LCREBABLKFG26 / LCREBAAGDU26 Ren Counter Height Non Swivel Stool LCREBABLKFG30 / LCREBAAGDU30 Ren Bar Height Non Swivel Stool

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.

Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.

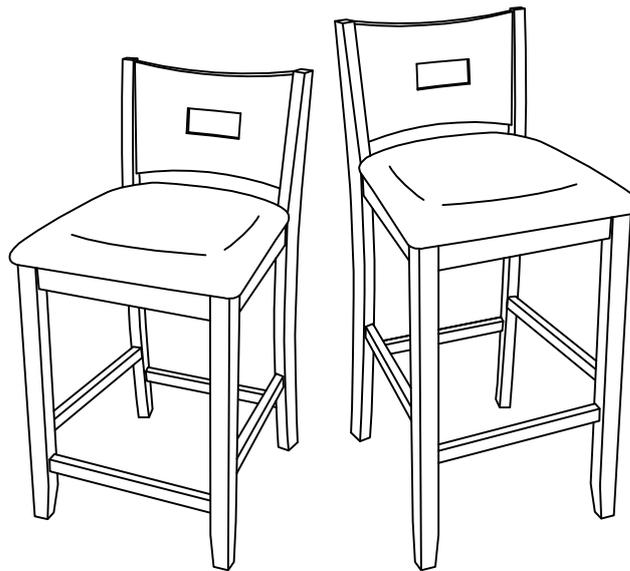


| PARTS LIST | | |
|------------|---|------|
| NO. | COMPONENT | QTY. |
| A | Back Panel  | 1 pc |
| B | Box Seat  | 1 pc |
| C | Front Leg - Left (CL)  | 1 pc |
| D | Front Leg - Right (CR)  | 1 pc |
| E | Side Stretcher - Left (CL)  | 1 pc |
| F | Side Stretcher - Right (CR)  | 1 pc |
| G | Front Stretcher  | 1 pc |
| H | Cushion Seat  | 1 pc |

| HARDWARE LIST | | |
|---------------|---|--------|
| NO. | COMPONENT | QTY. |
| 1 | JCBC Bolt M6 x 35mm  | 2 pcs |
| 2 | JCBC Bolt M6 x 60mm  | 4 pcs |
| 3 | JCBC Bolt M6 x 80mm  | 4 pcs |
| 4 | 1/4" Spring Washer  | 10 pcs |
| 5 | 1/4" x 19mm Flat Washer  | 10 pcs |
| 6 | CB Screw M4 x 32mm  | 5 pcs |
| 7 | CB Screw M4 x 38mm  | 6 pcs |
| 8 | Allen Key M4 x 65mm  | 1 pc |


* Phillips screwdriver not included *

Step 1

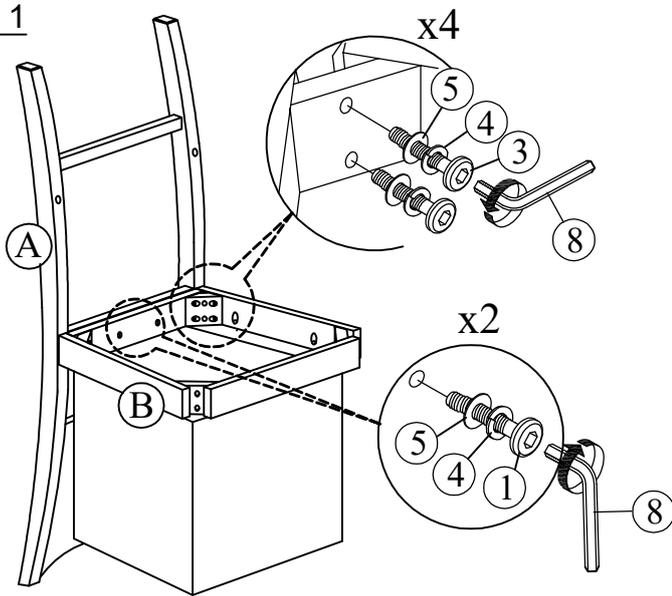


- 1) Attach Box Seat (B) to the Back Panel (A) by using 2pcs JCBC bolts (1) , 2pcs spring washers (4) and 2pcs flat washers (5). Use Allen Key (8) to secure .
- 2) Insert 4pcs JCBC bolts (3) , 4pcs Spring Washers (4) and 4pcs Flat Washers (5) . Use Allen Key (8) to tighten all the bolts securely.


Step 3

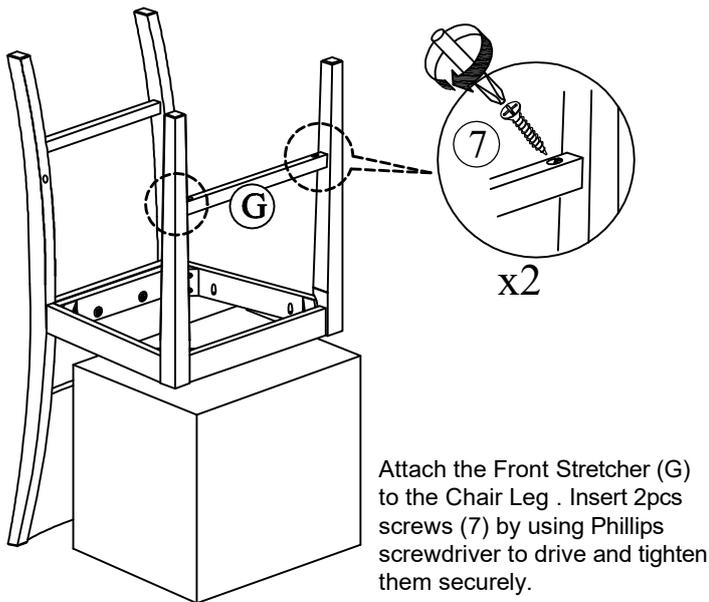

Step 2

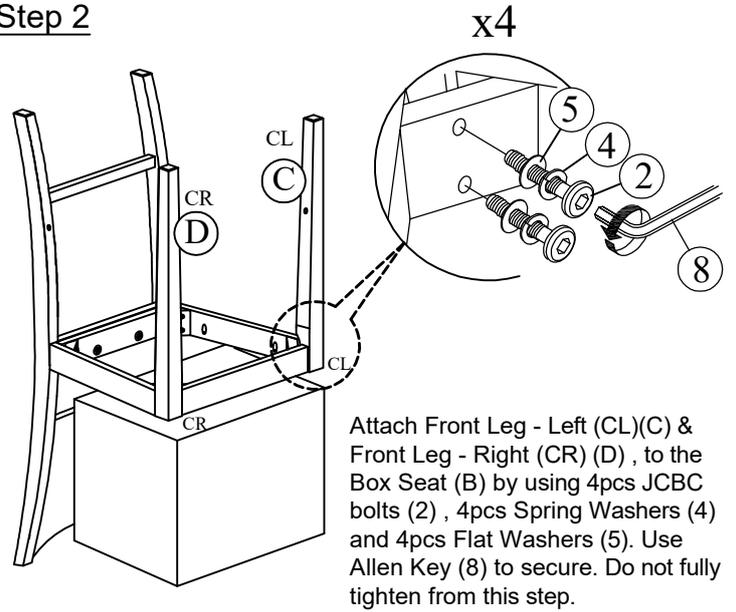

Step 4

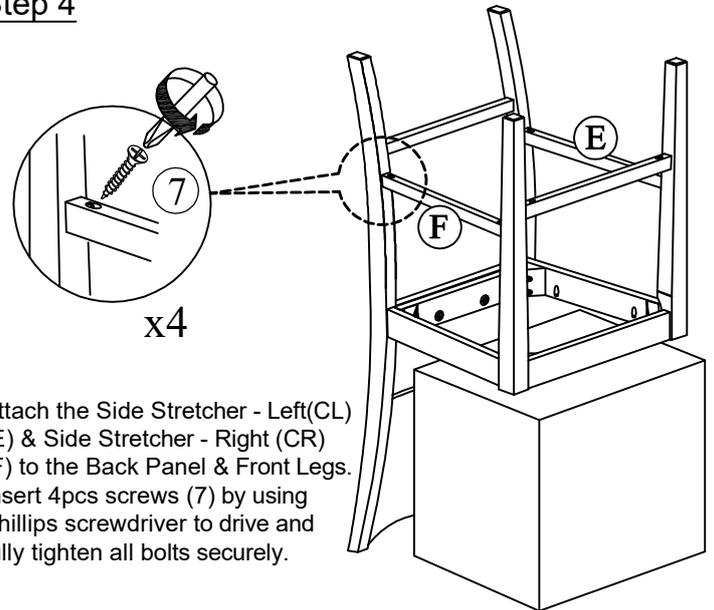

Step 5

