


HDPE Plastic Folding Adirondack Chair Instruction Manual Assembly Instructions

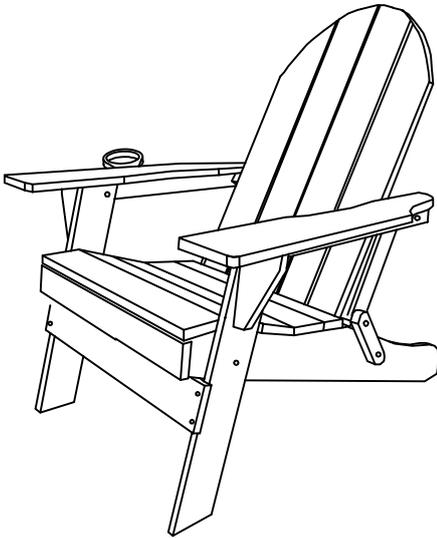

A (1pc)		B (1pc)	
C (1pc)	D (1pc)	E (1pc)	F (1pc)
G (1pc)	H (2pcs)	I (1pc)	J (1pc)
K (4sets)	L (2sets)	M (4pcs)	N (2pcs)
6X50mm	6X60mm	6X60mm	6X80mm
O (4pcs)	P (1pc)	TOOLS & MATERIALS NEEDED	
4X40mm	6X30mm		

Note: Do not tighten all screws until last step

1

A=1PC
E=1PC
F=1PC
I=1PC
K=2SETS
M=2PCS


C=1PC
D=1PC
G=1PC
J=1PC
L=2SETS
O=4PCS
P=1PC

2

A=1PC
E=1PC
F=1PC
I=1PC
K=2SETS
M=2PCS


C=1PC
D=1PC
G=1PC
J=1PC
L=2SETS
O=4PCS
P=1PC

3

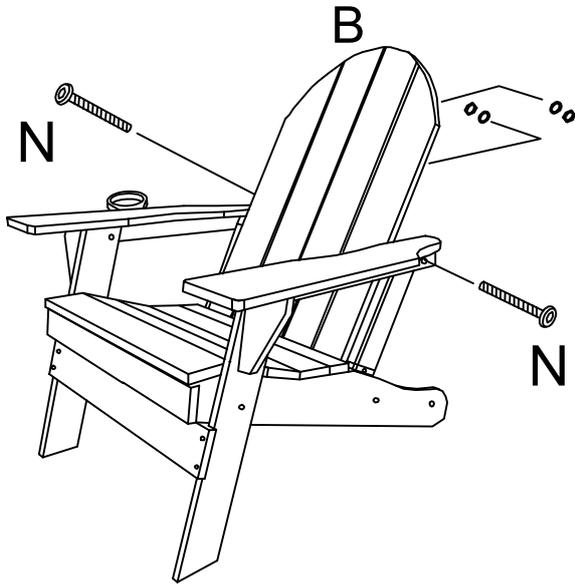


B=1PC
N=2PCS

4

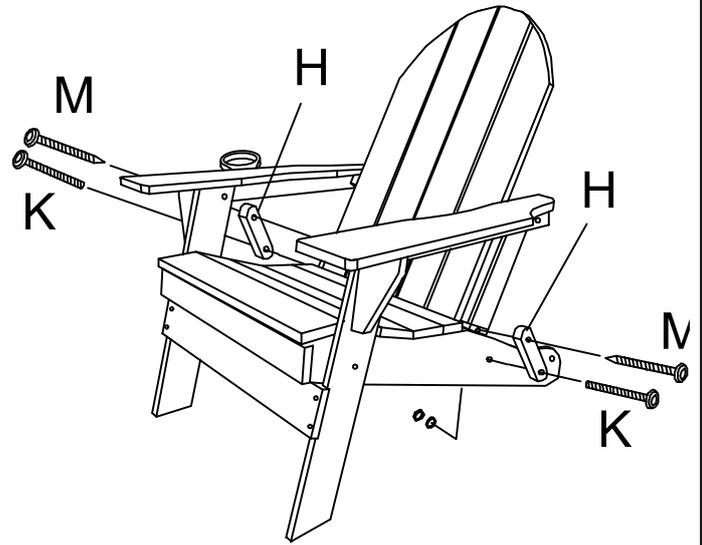

H=2PCS
K=2SETS
M=2PCS

5

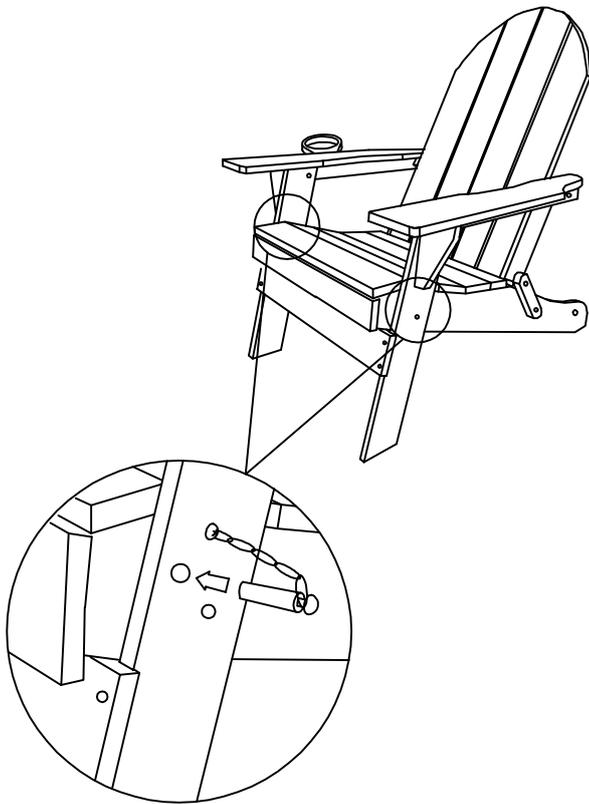

6

