








ASSEMBLY INSTRUCTION

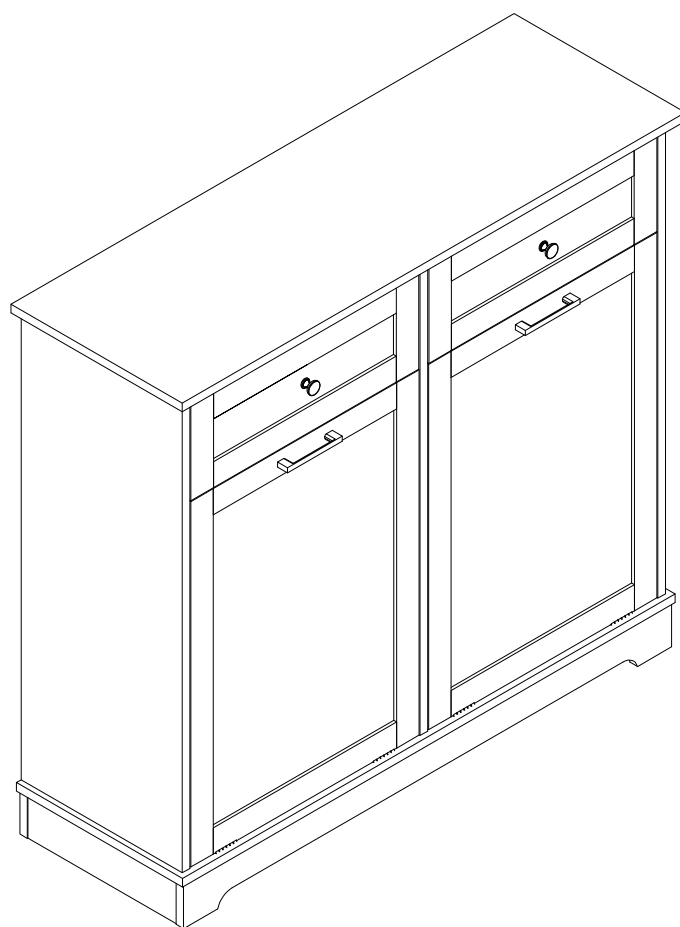





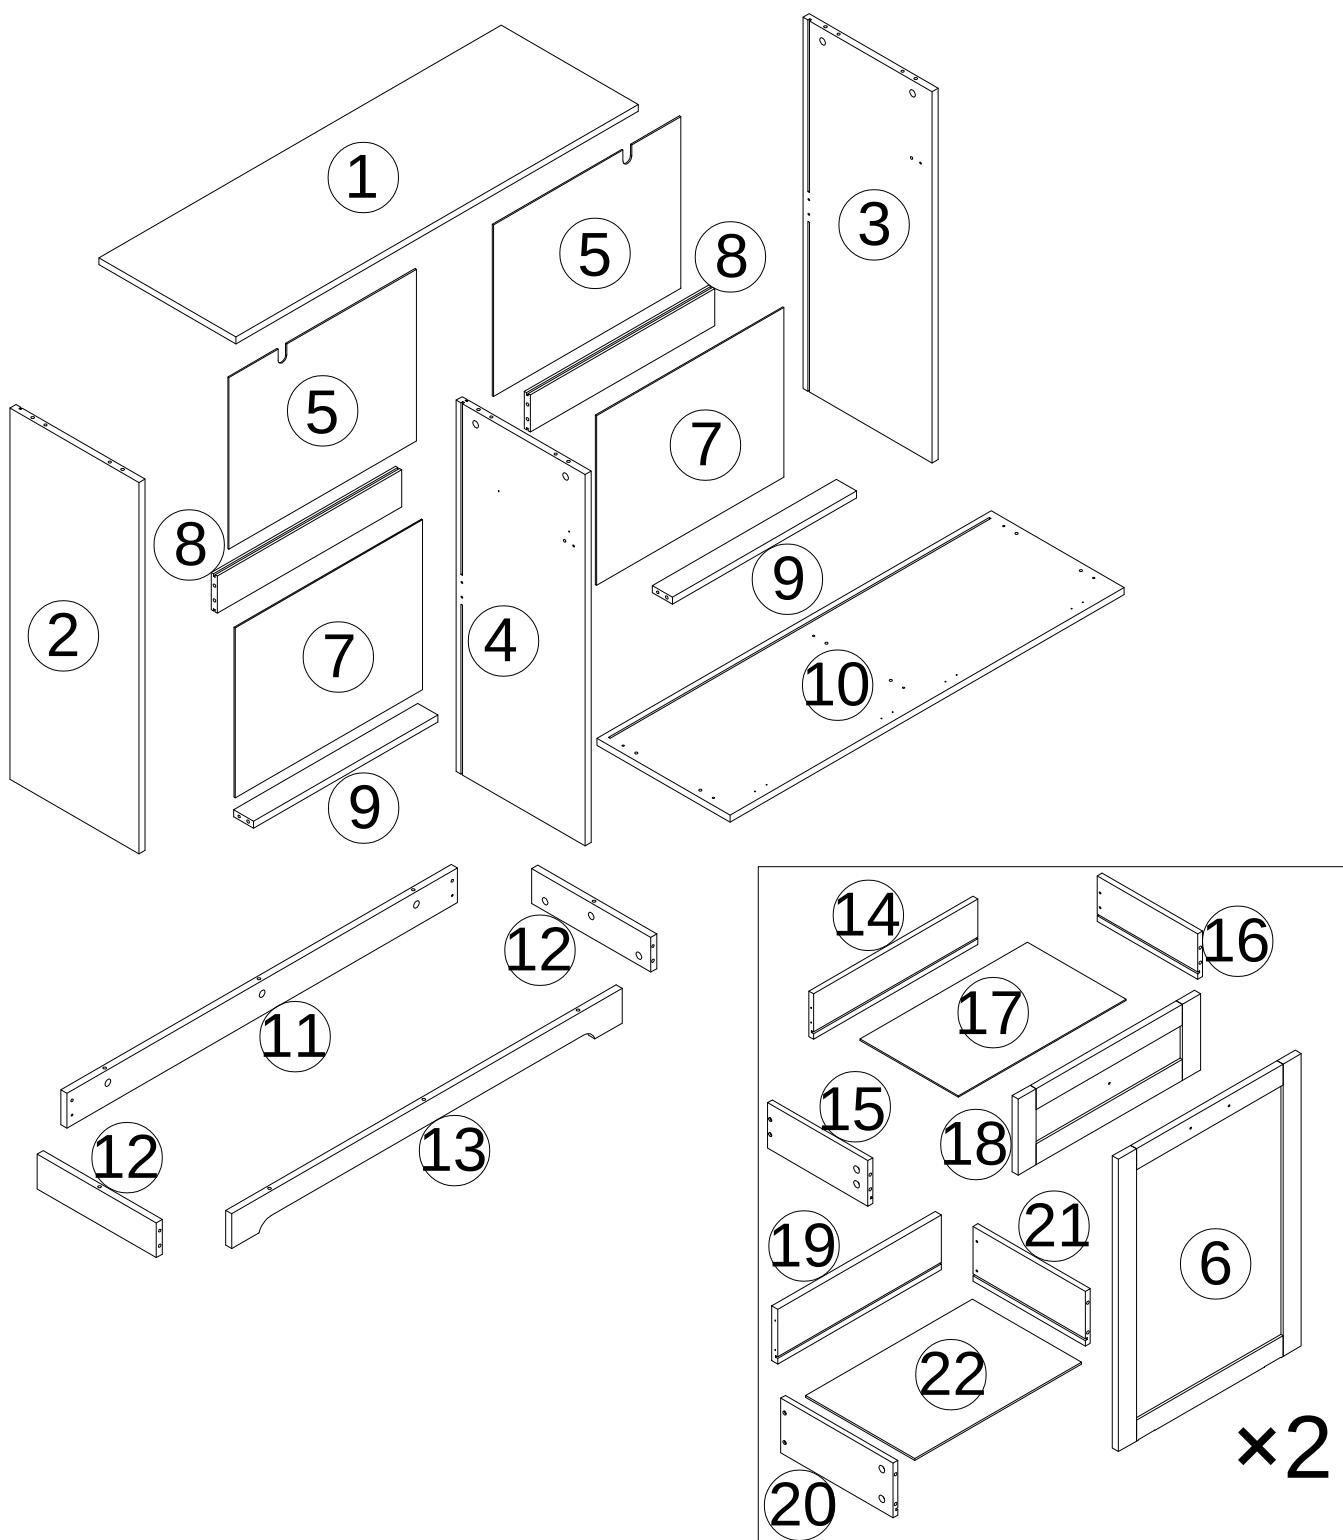


 A×46	 B×46	 C×20	 D×24 3×12mm	 E×16 3×14mm	 F×2 4×12mm	 G×4 4×18mm
 H×18 4×30mm	 I×6 4×35mm	 J×2	 K×2	 L×16	 M×2	 N×4
 O×2	 P×2	 Q×2 4×10mm	 R×16 3.5×12mm	 CL×2	 CR×2	 DL×2
 DR×2	2					



STEP 1

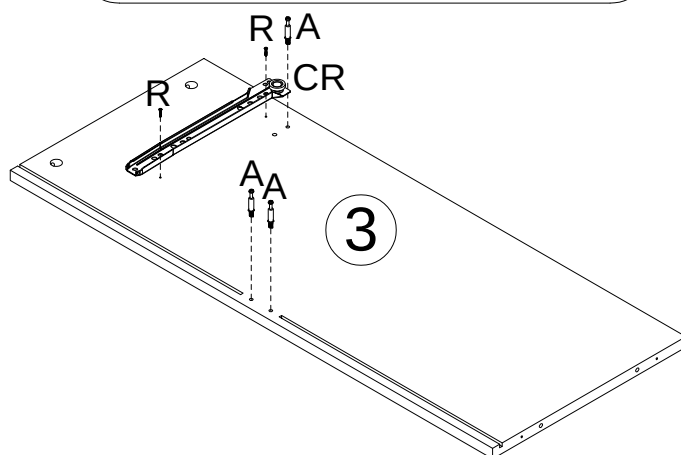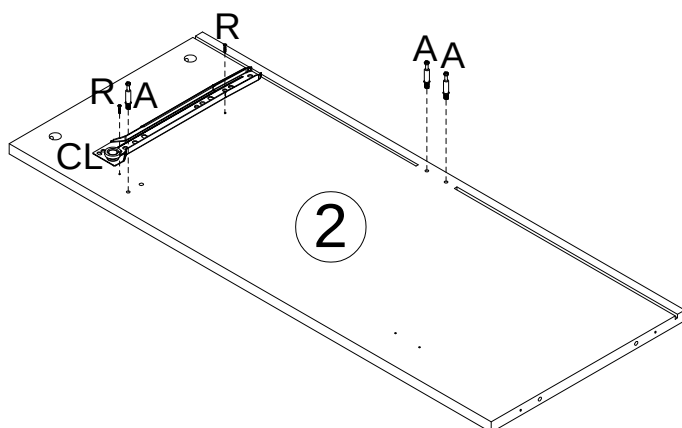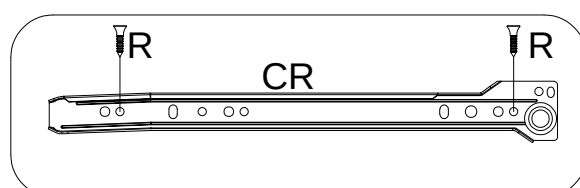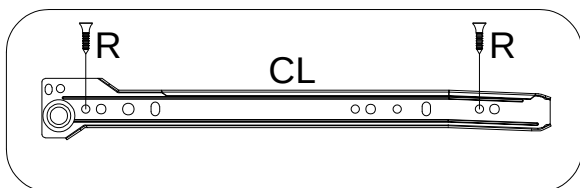



STEP 2

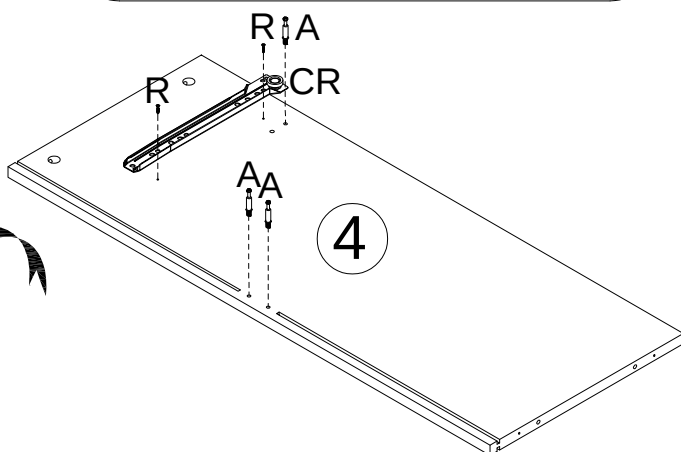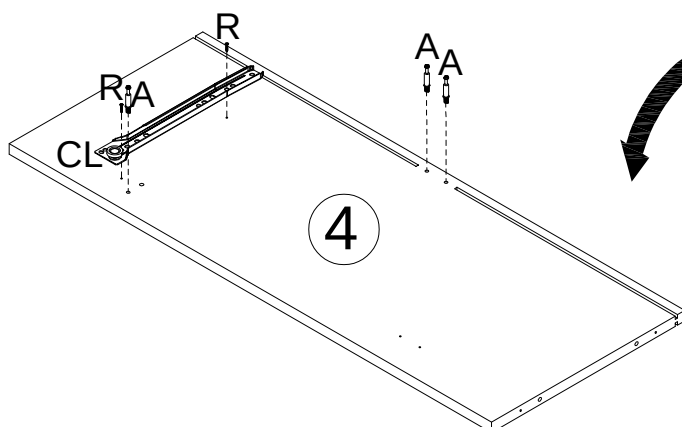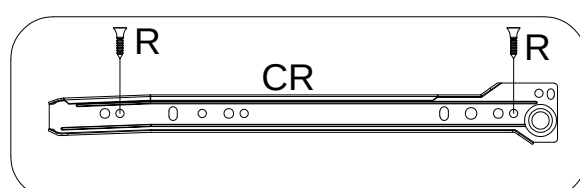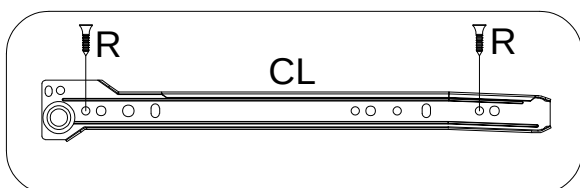


STEP 3

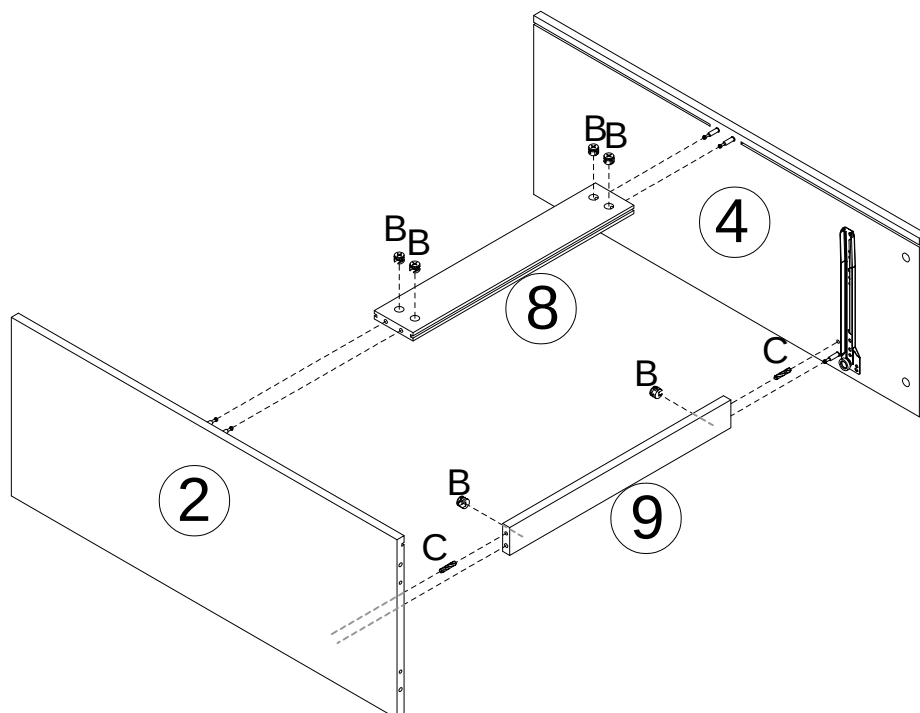



STEP 4

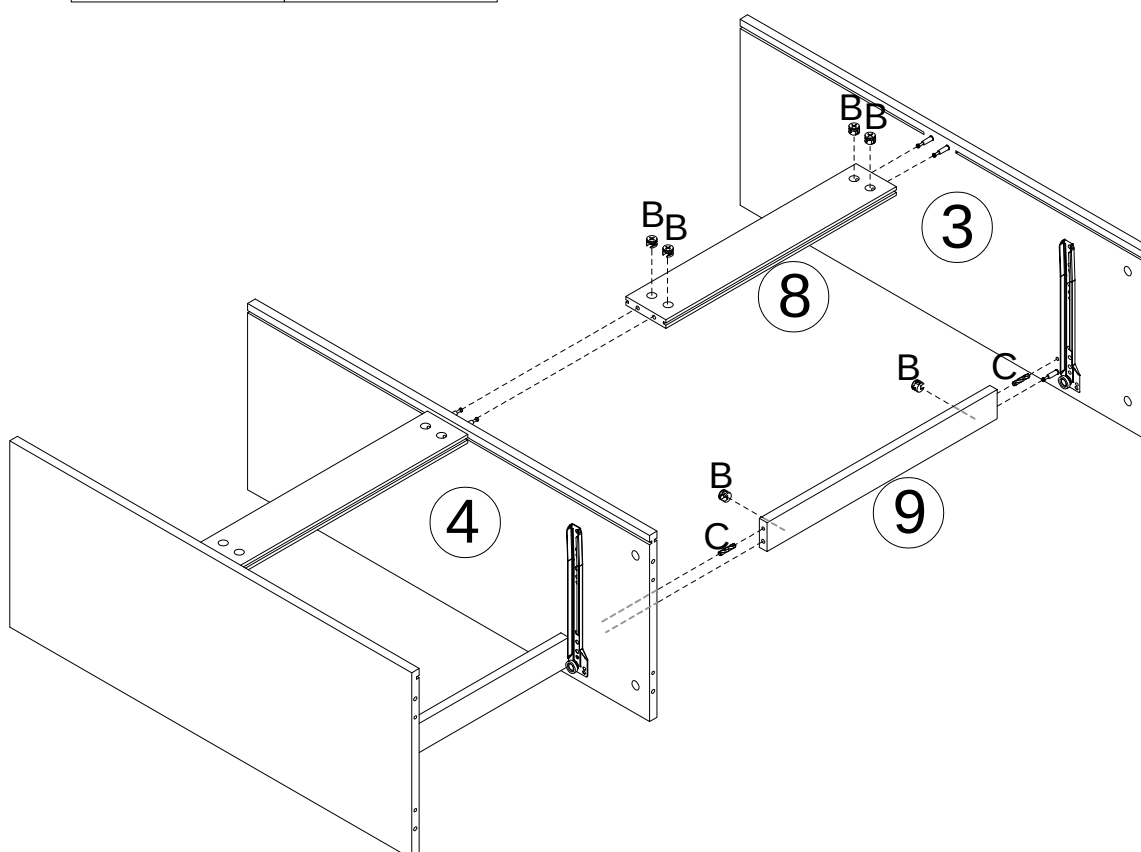



STEP 5

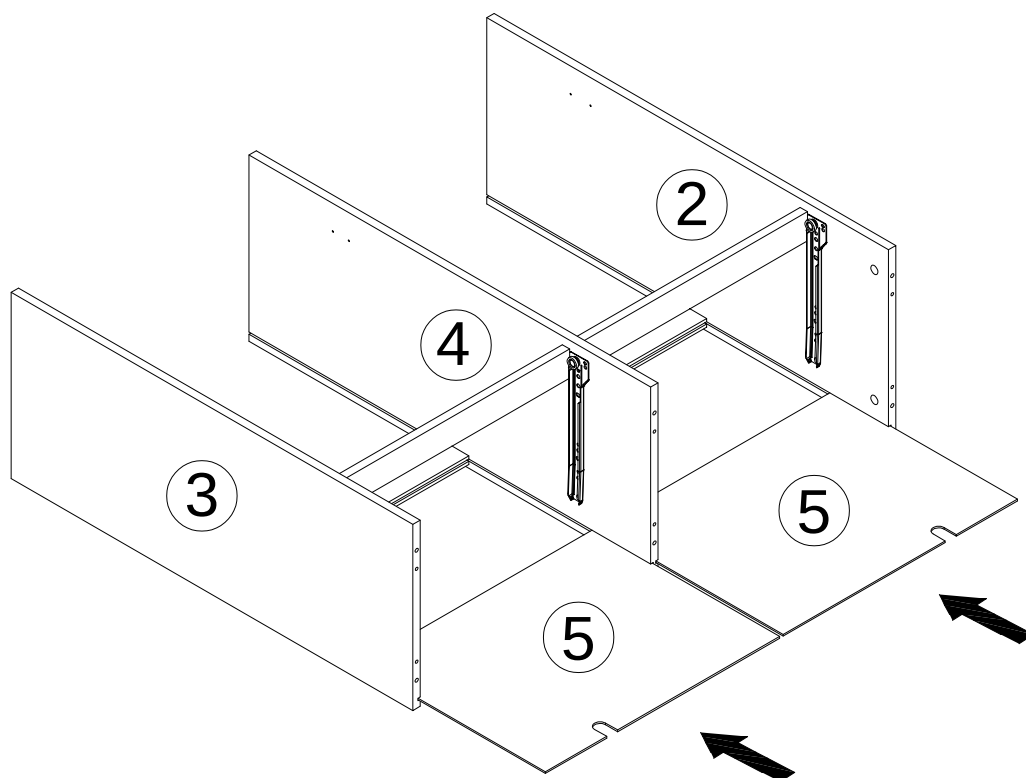


STEP 6

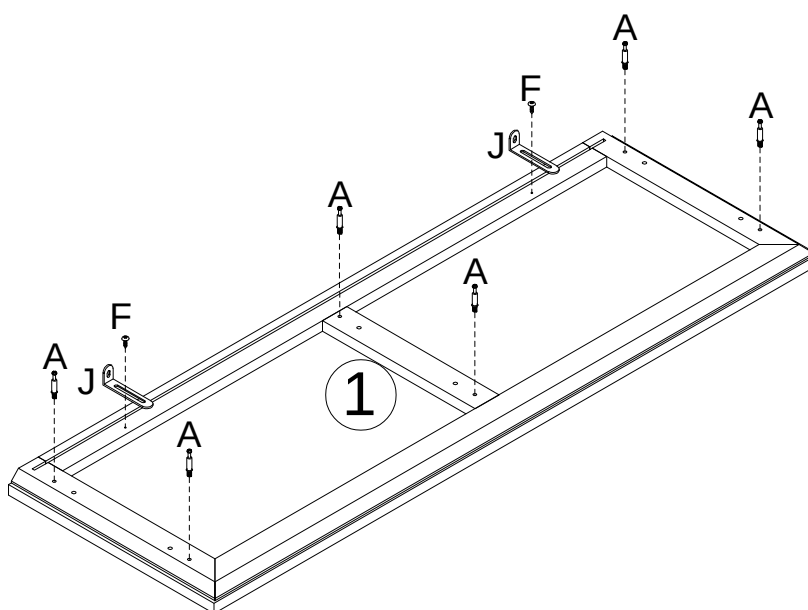



STEP 7

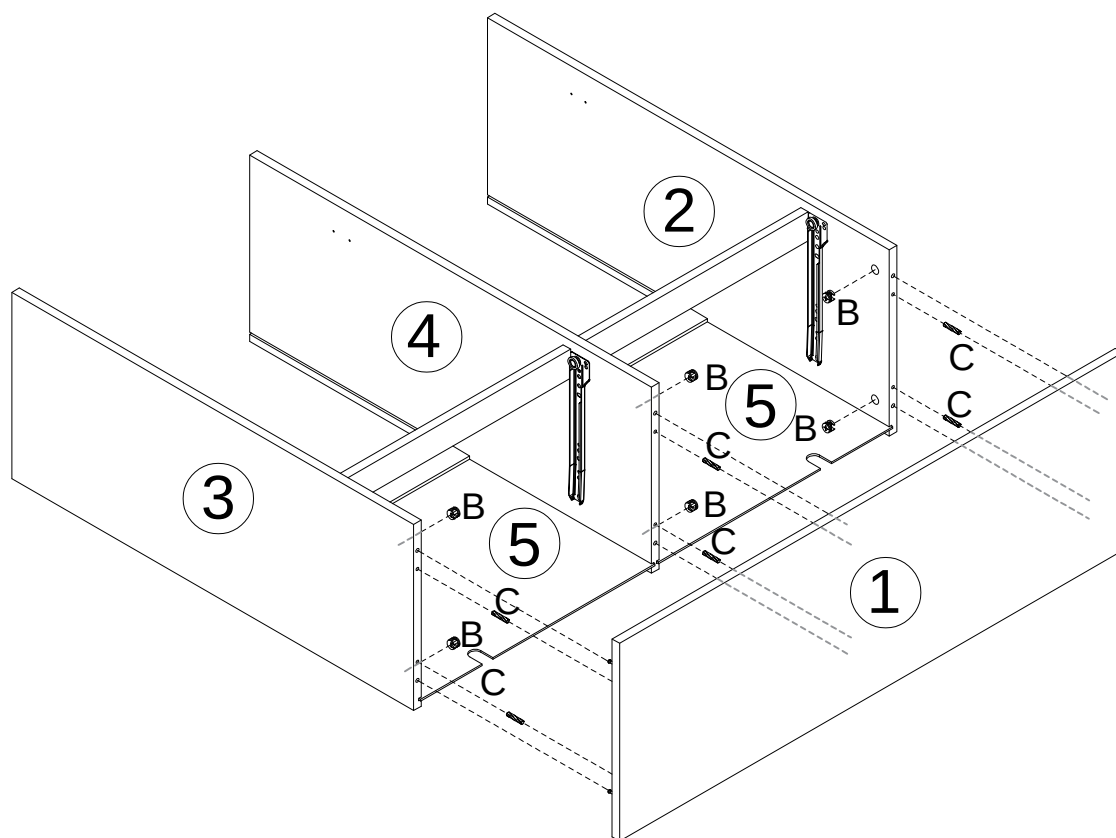



STEP 8

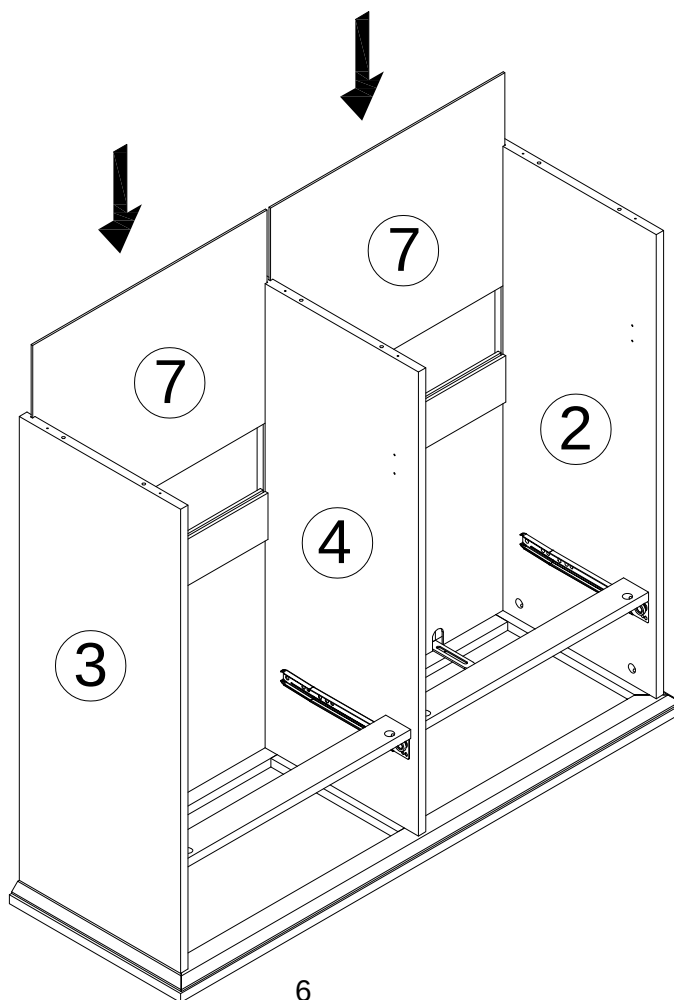


STEP 9

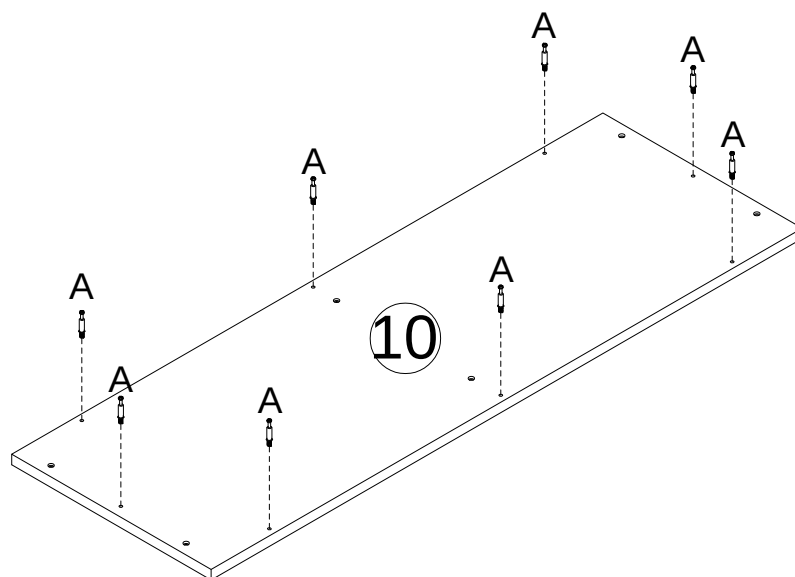


STEP 10

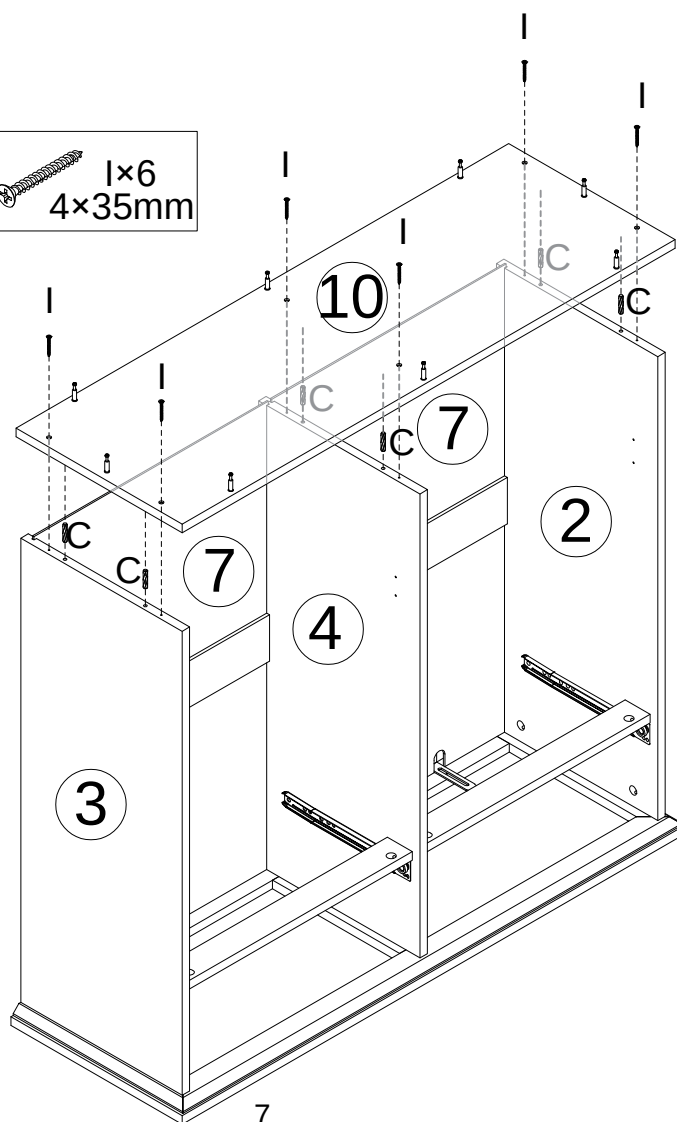



STEP 11

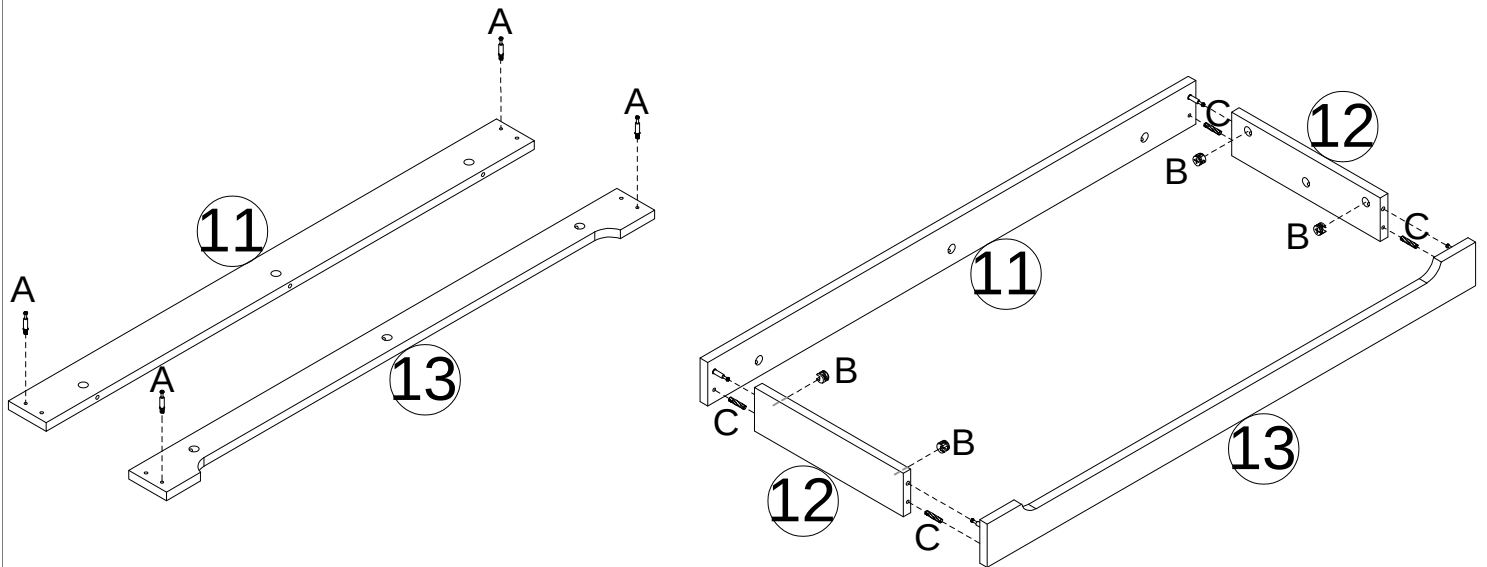




STEP 12

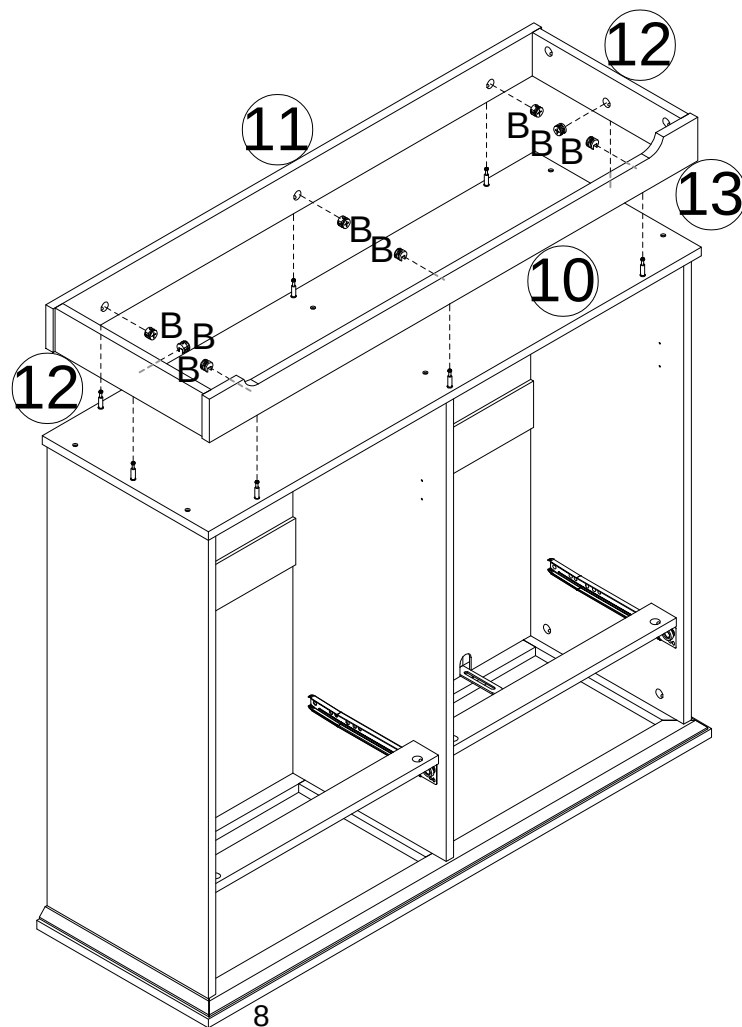



STEP 13

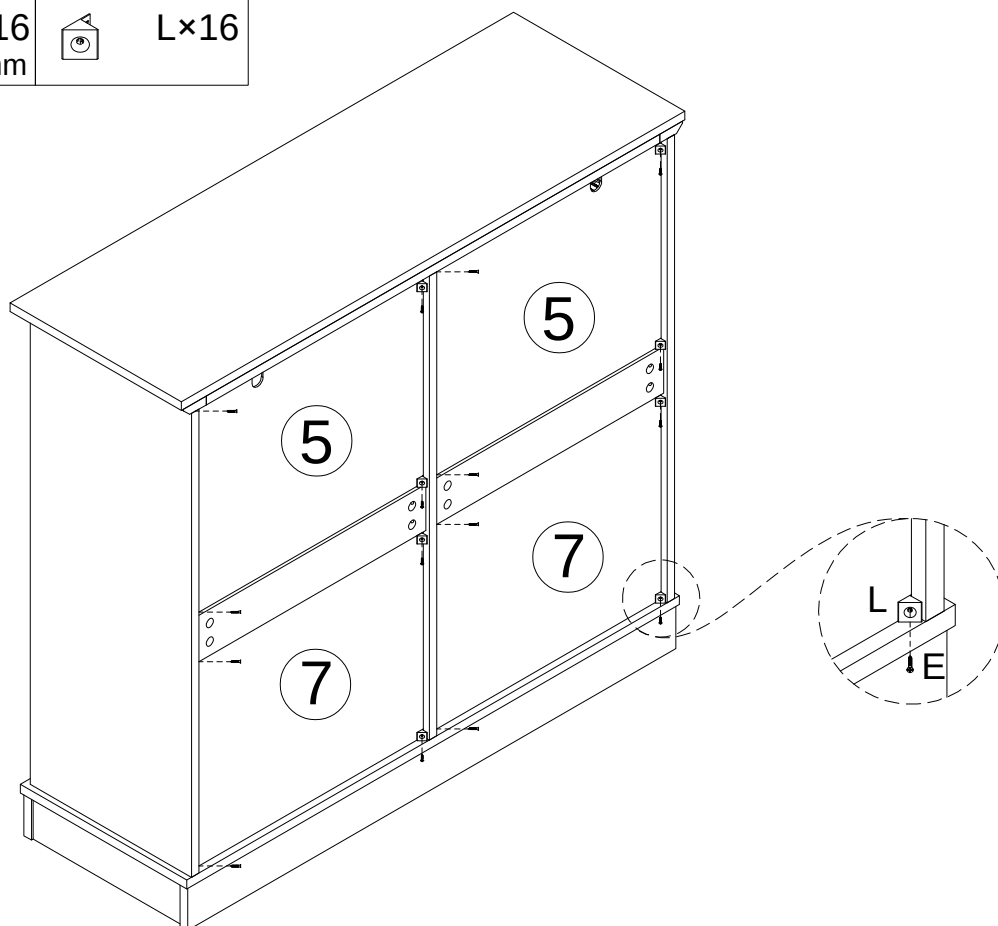

STEP 14

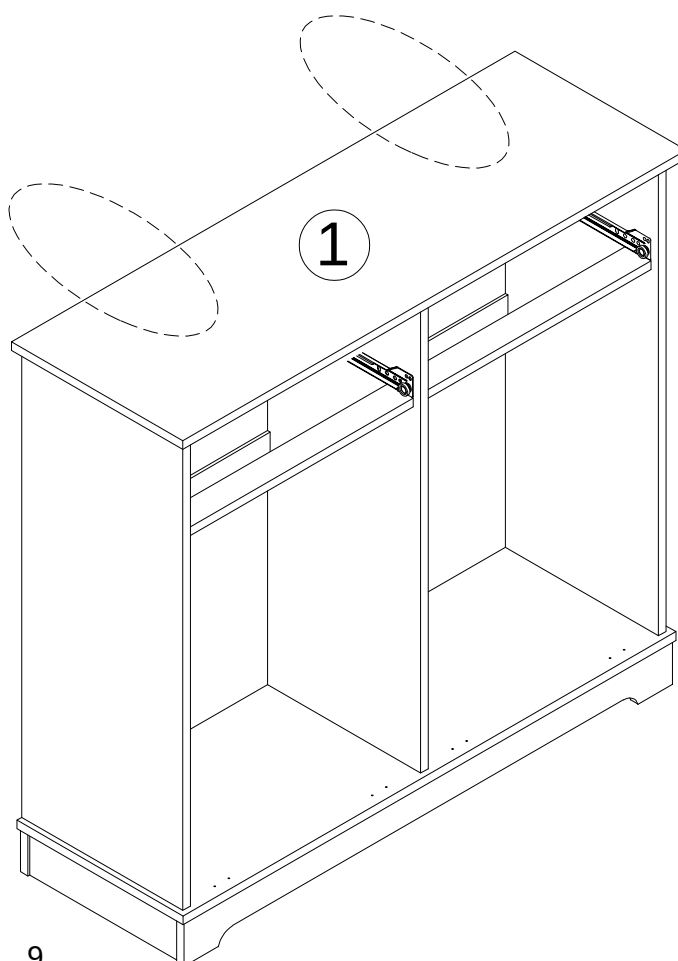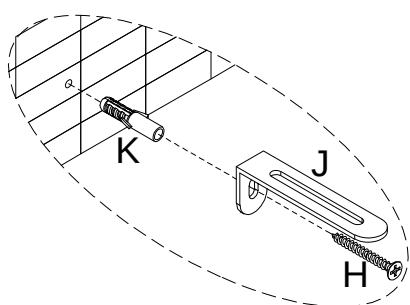



STEP 15

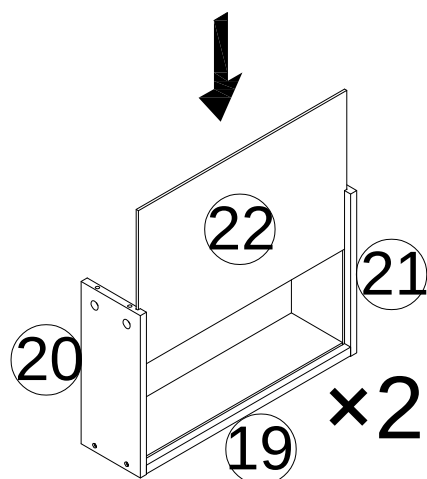
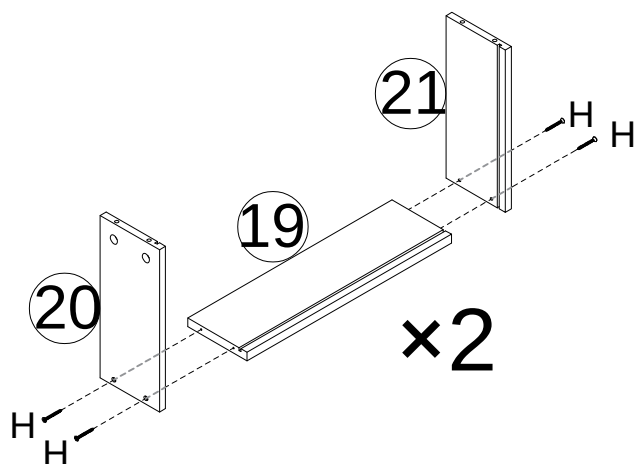


STEP 16




Ax8	Bx8	Dx8 3x12mm	Gx4 4x18mm	Mx2
Nx4				

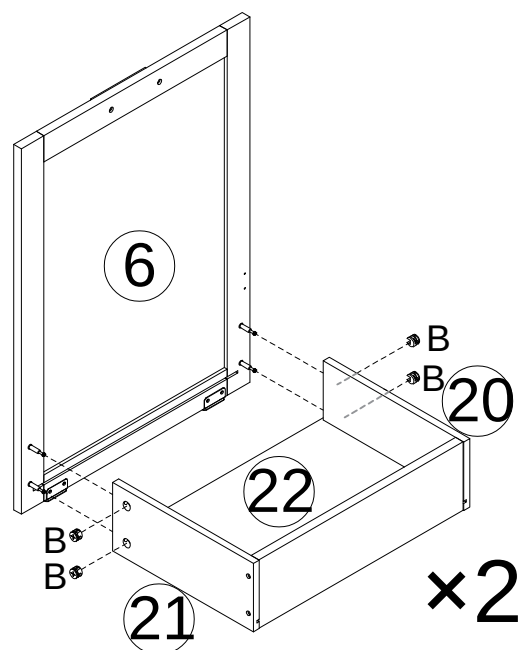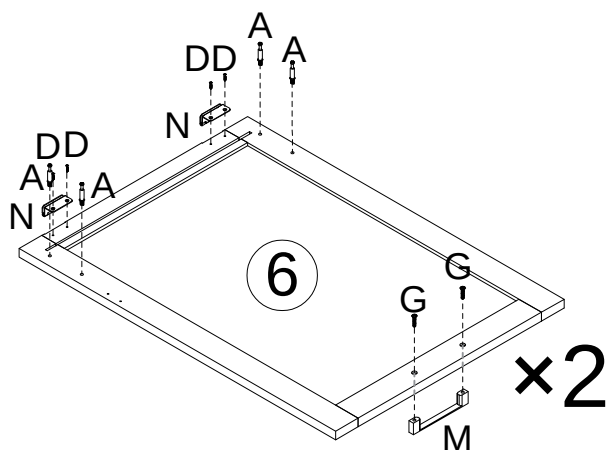

STEP 17

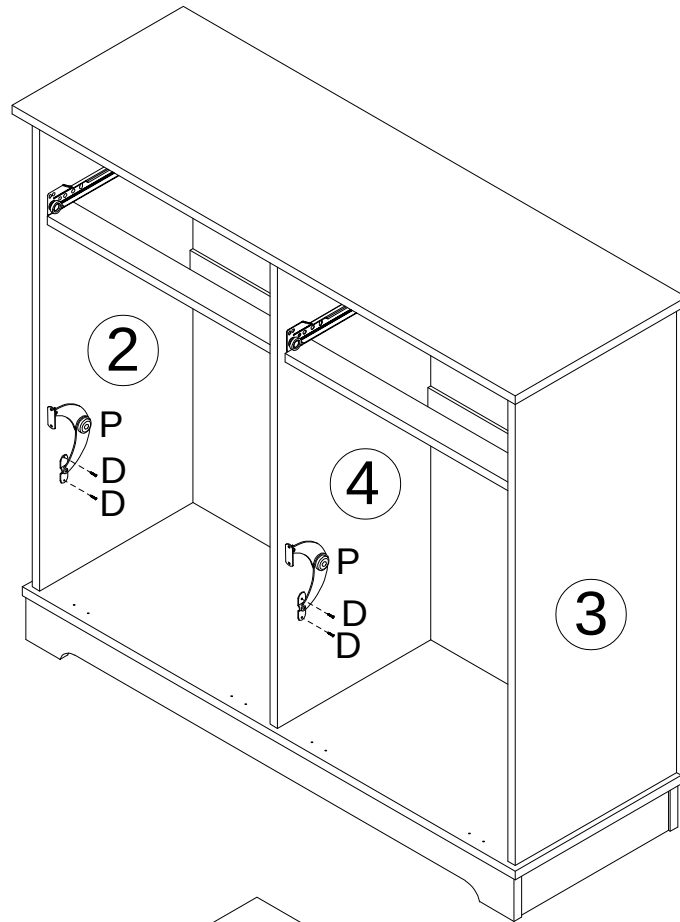


STEP 18

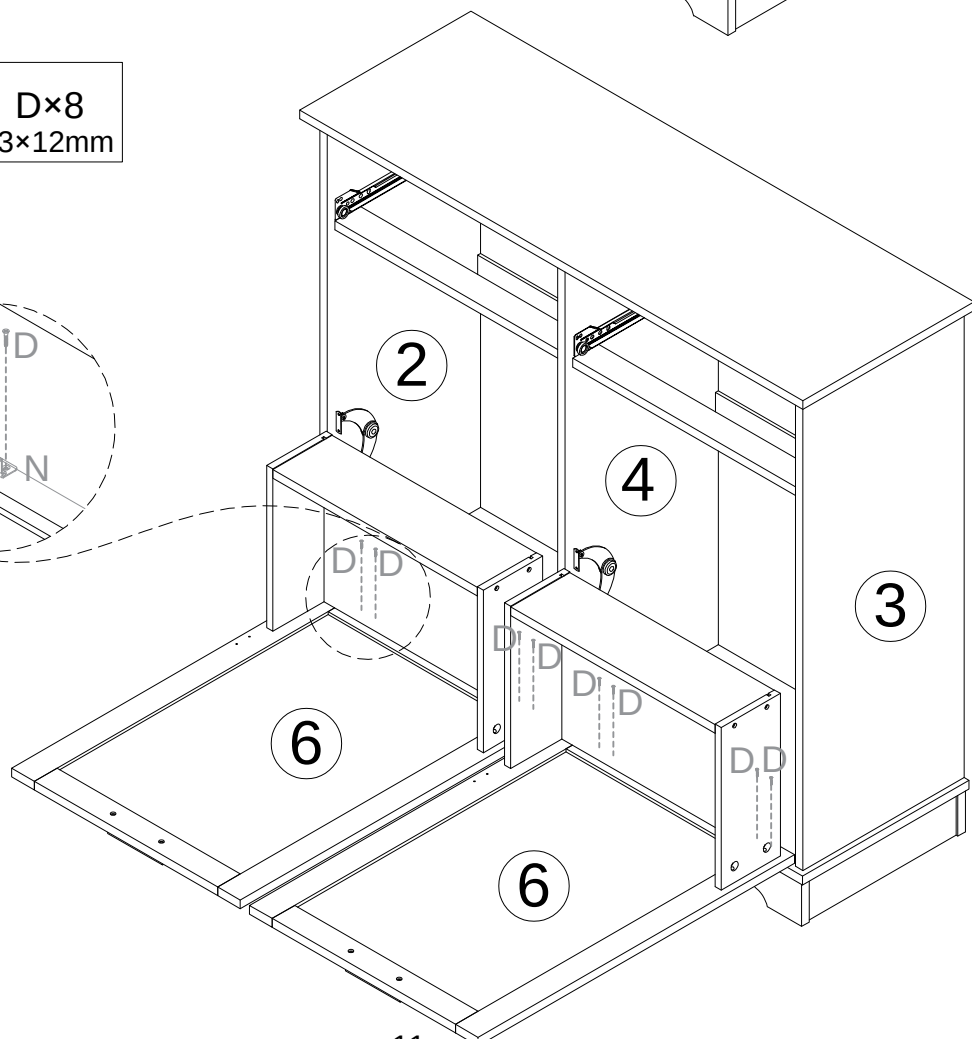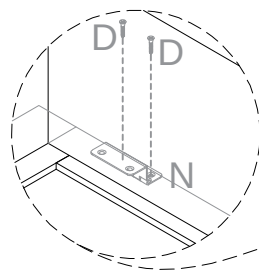

STEP 19



D×4
3×12mm

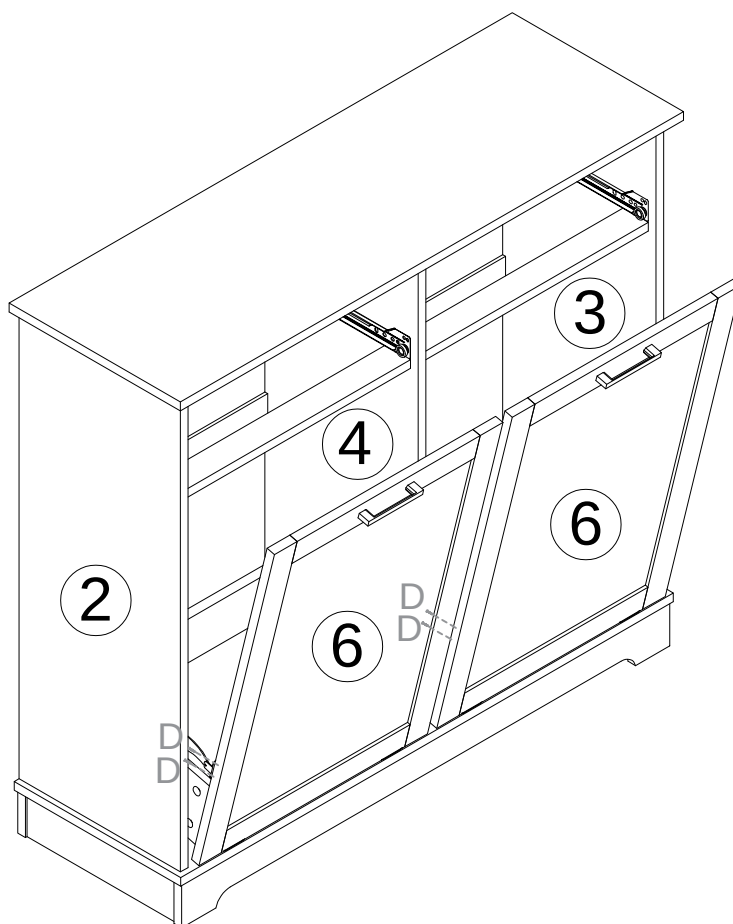

STEP 20



Ax8





H×8
30mm




Ox2





Q×2
×10mm

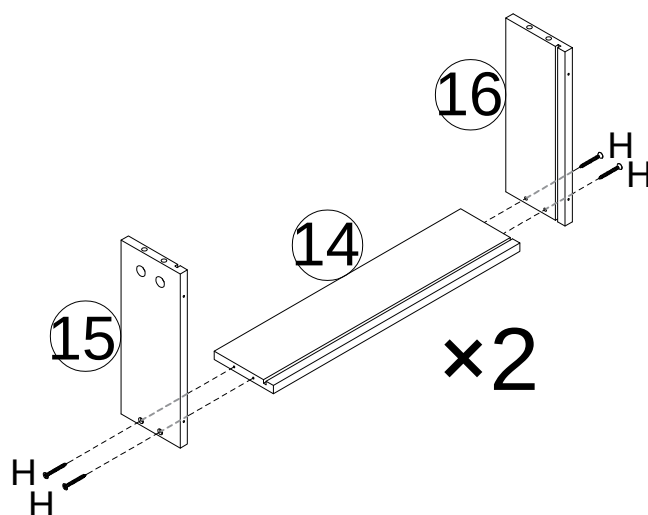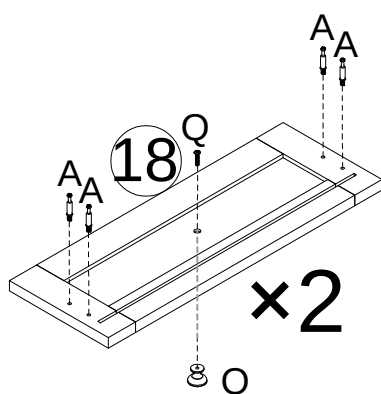

STEP 21

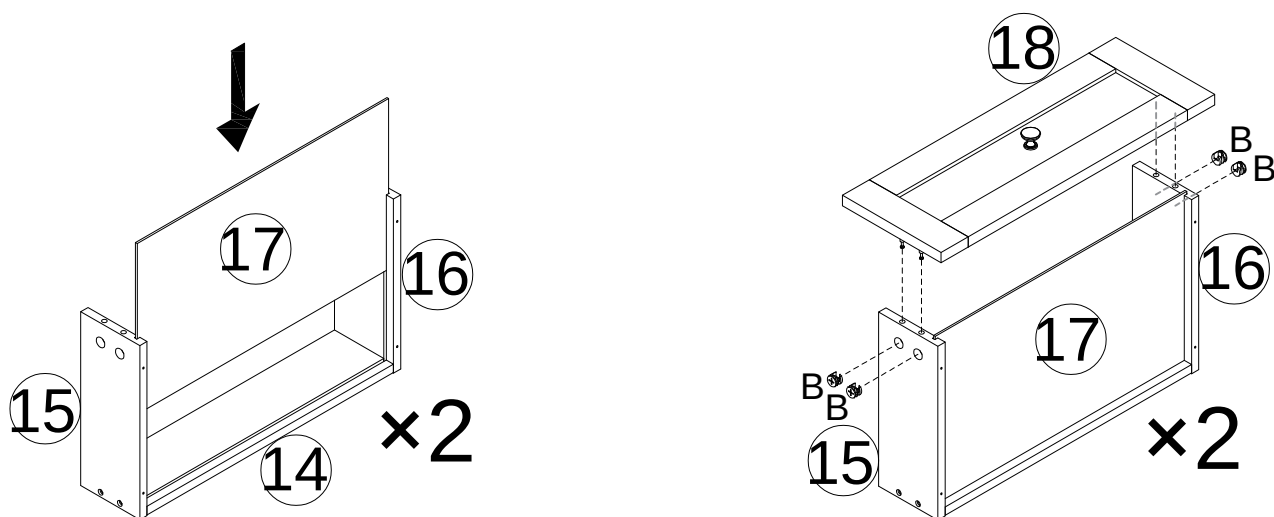

STEP 22

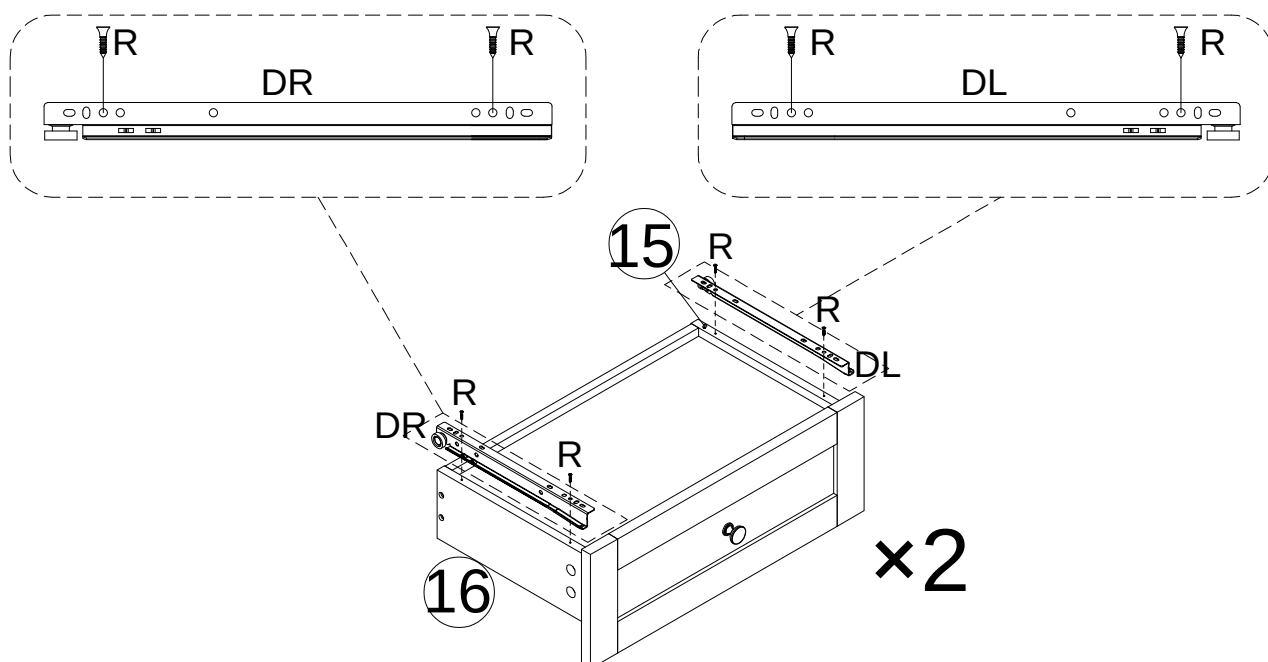

STEP 23

