


ASSEMBLY INSTRUCTION


ITEM NO.:N707P370273

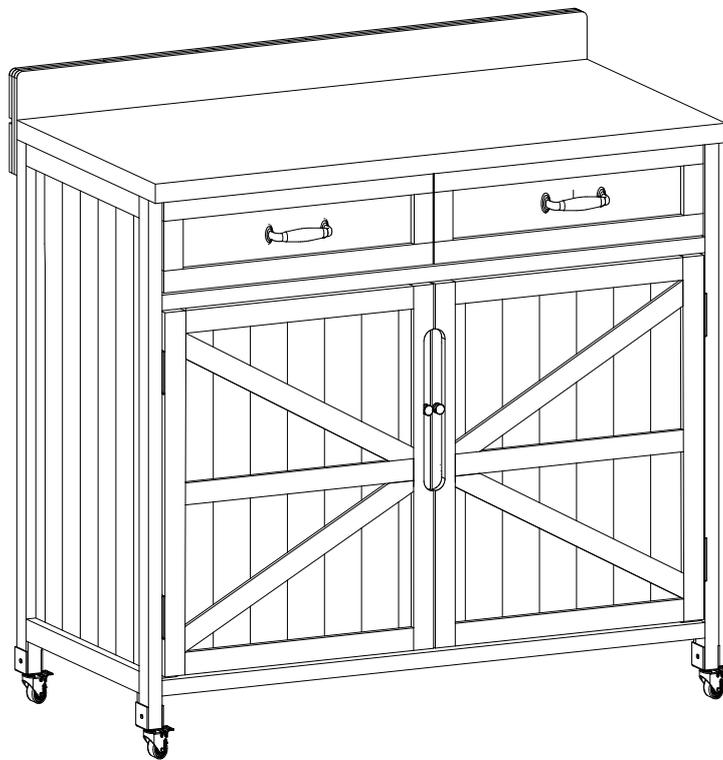













IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.


Detail View

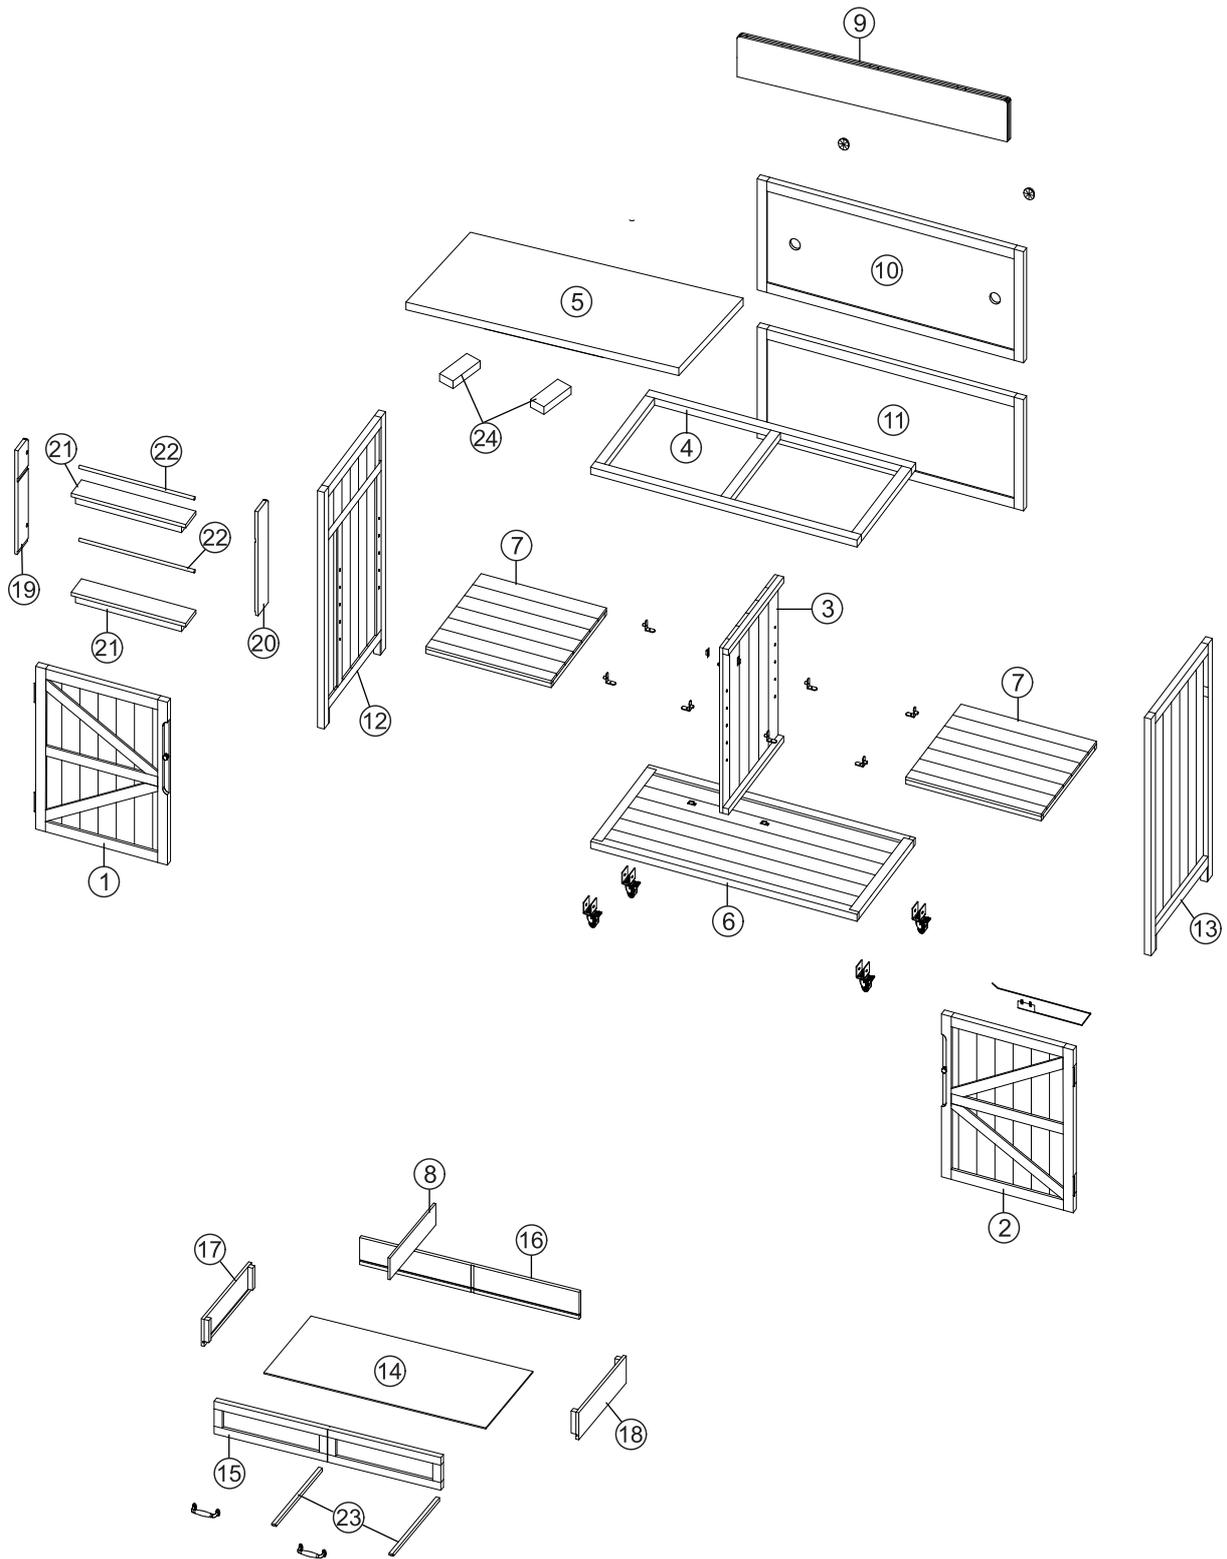

N707P370273

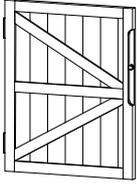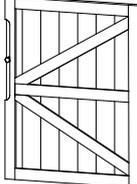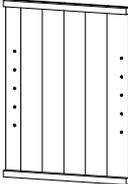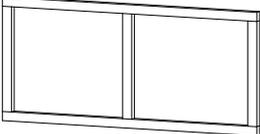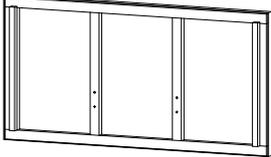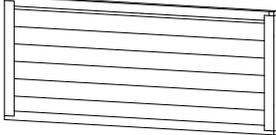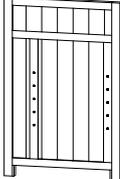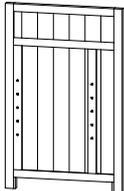1  1x	2  1x	3  1x	4  1x
5  1x	6  1x	7  1x	8  1x
9  1x	10  1x	11  1x	12  1x
13  1x	14  1x	15  1x	16  1x
17  1x	18  1x	19  1x	20  1x
21  2x	22  2x	23  2x	24  2x
25  1x			


Hardware List


A	 Ø3.5*45 19x	B	 Ø3.5*40 4x	C	 Ø3.5*30 8x	D	 Ø3.5*35 16x		
E	 Ø3.0*20 8x	F	 Ø3.0*25 2x	G	 Ø3.0*16 24x	H	 Ø3.0*10 4x		
I	 24x	J	 8x	K	 1x	L	 4x	M	 4x
N	 2x	O	 2x	P	 2x	Q	 2x		

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS !

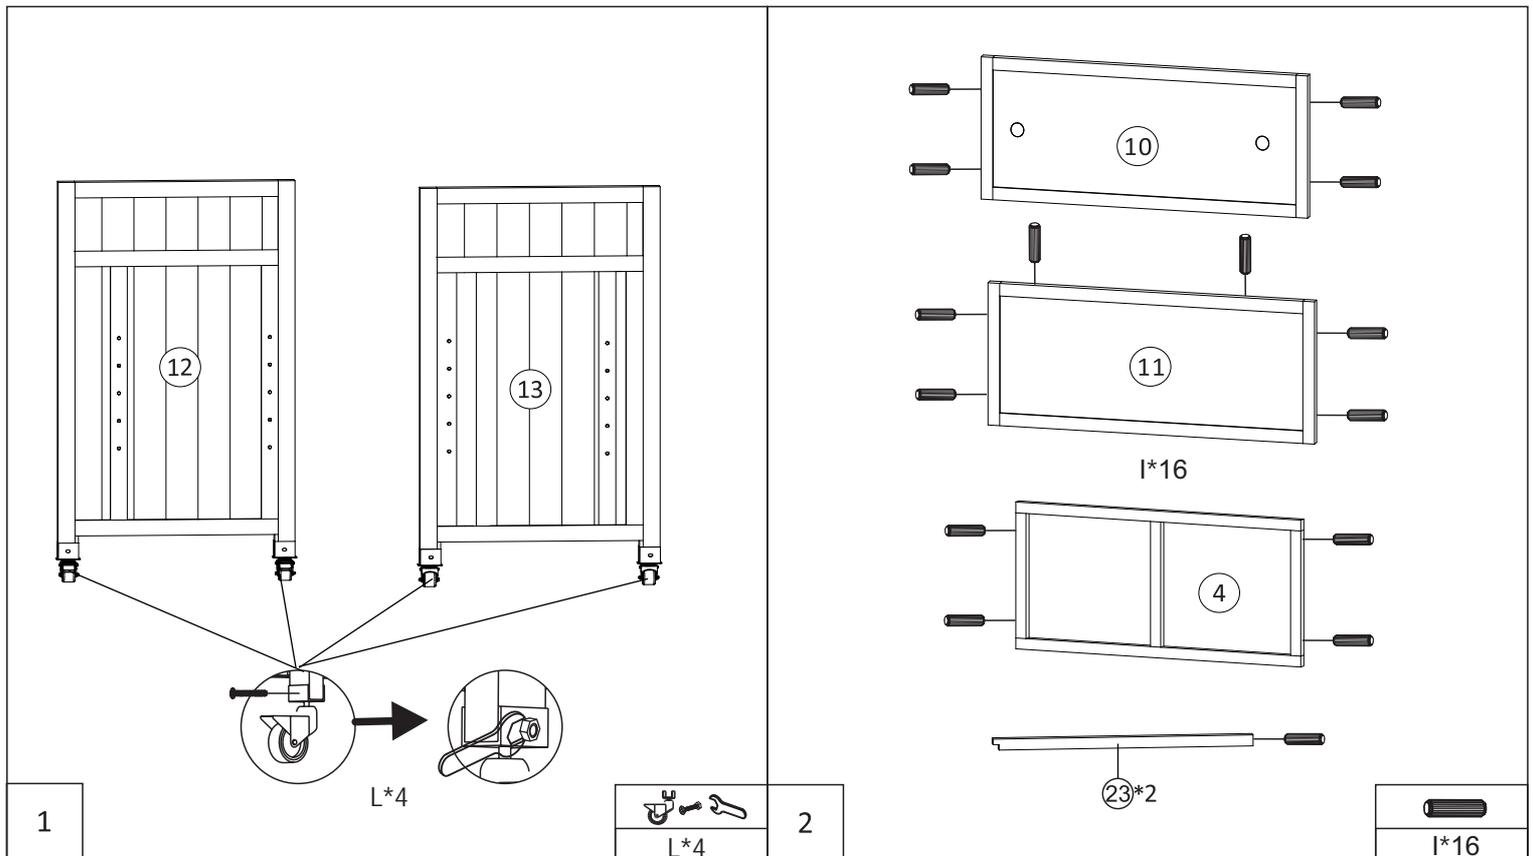


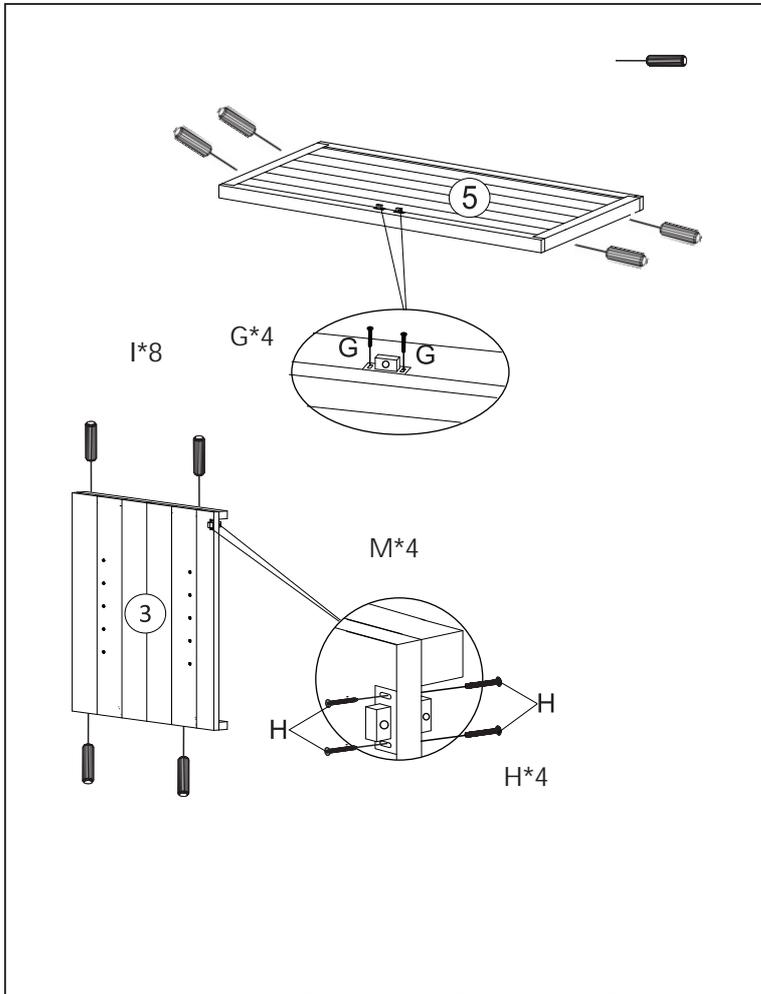


3			3.0*12MM	3.0*16MM
	M*4	I*8	H*4	G*4

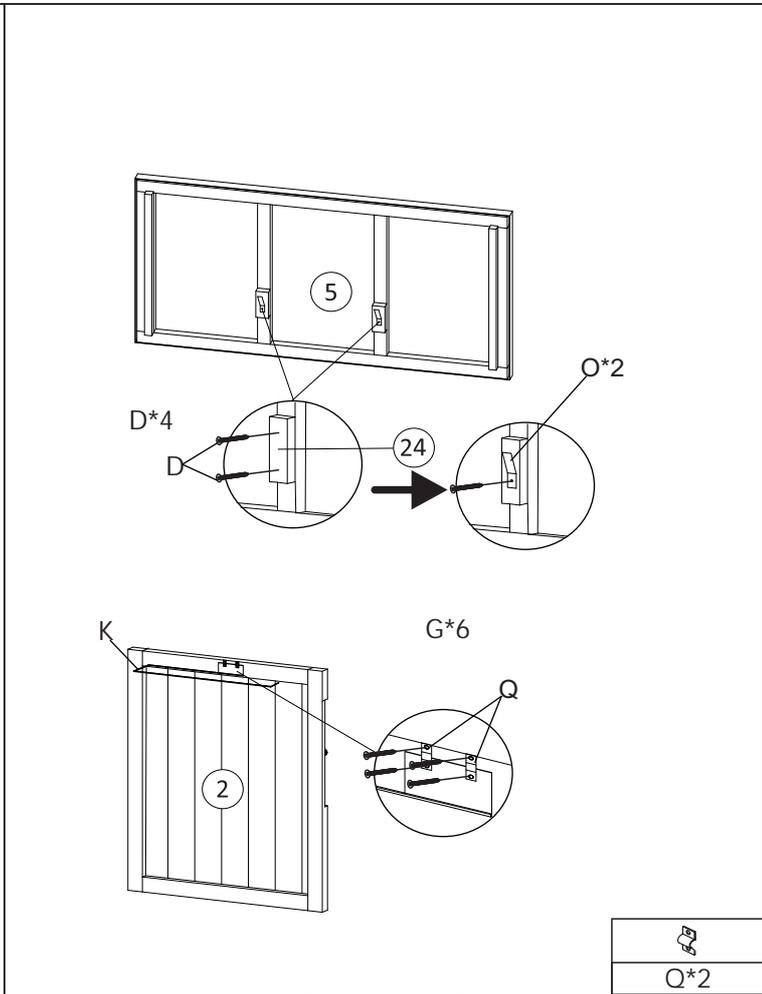


4			3.0*16MM		3.5*35MM
	K*1	O*2	G*6	Q*2	D*4

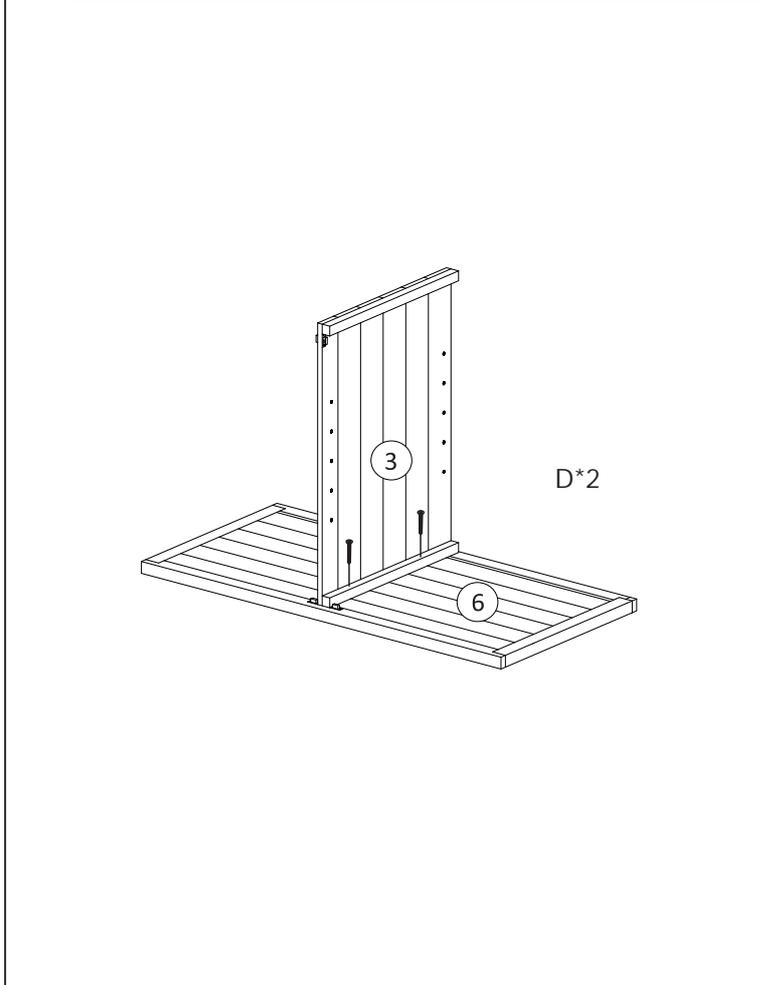

5	3.5*35MM
	D*2

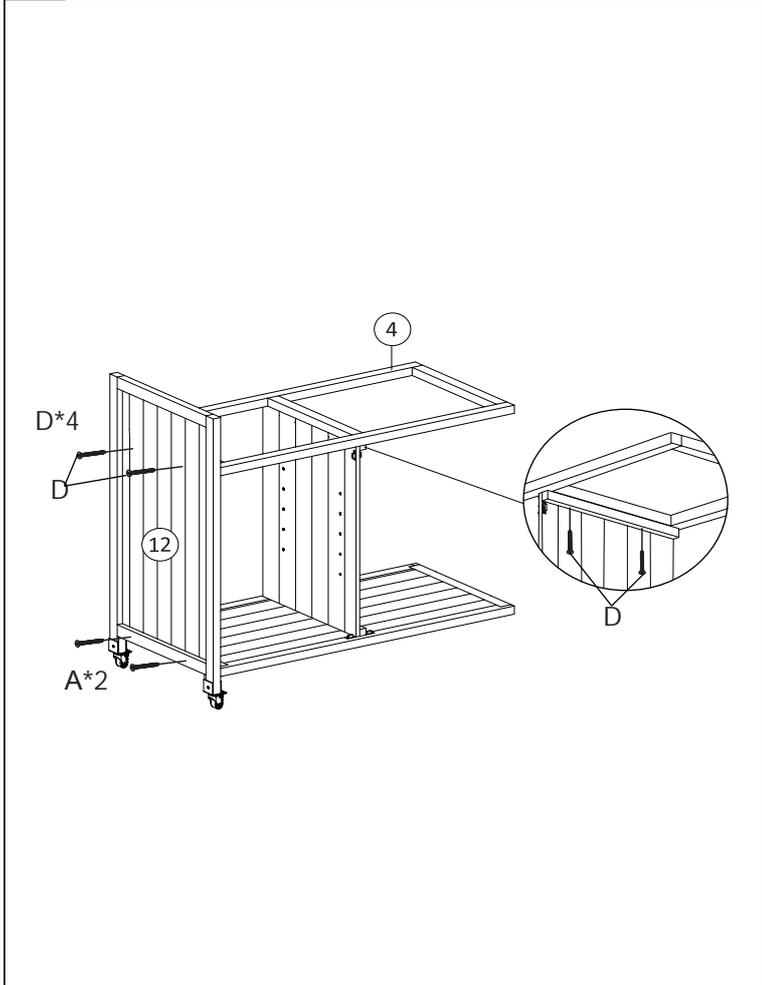


6	3.5*35MM	3.5*45MM
	D*4	A*2

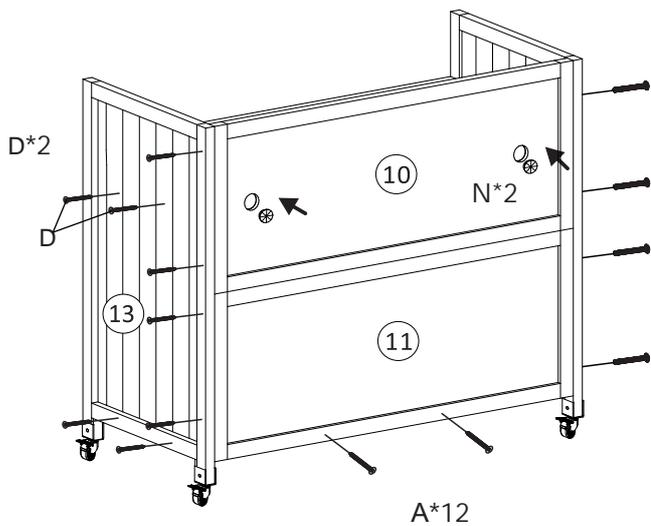


		
3.5*35MM D*2	N*2	3.5*45MM A*12

7

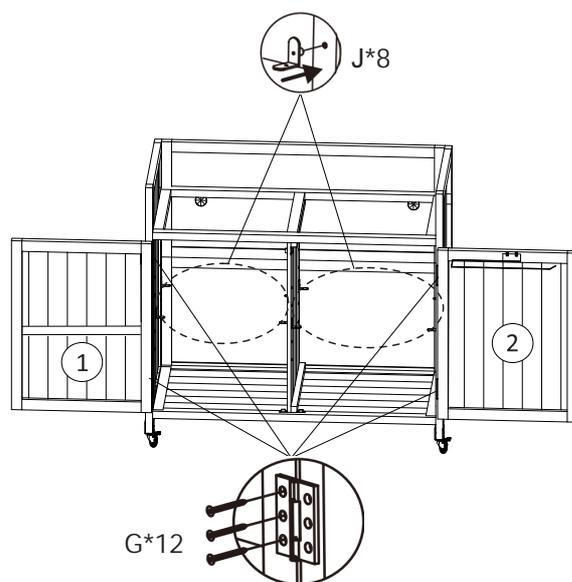


	
J*8	3.0*16MM G*12

8

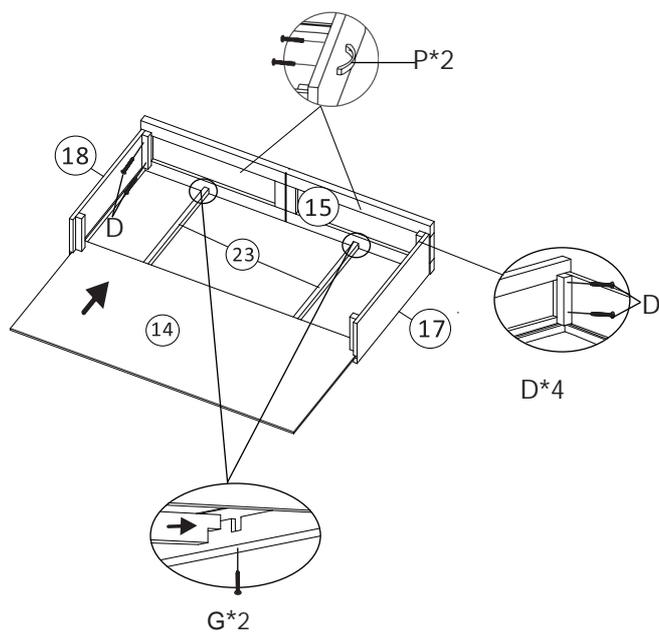


		
3.0*16MM G*2	P*2	3.5*35MM D*4

9

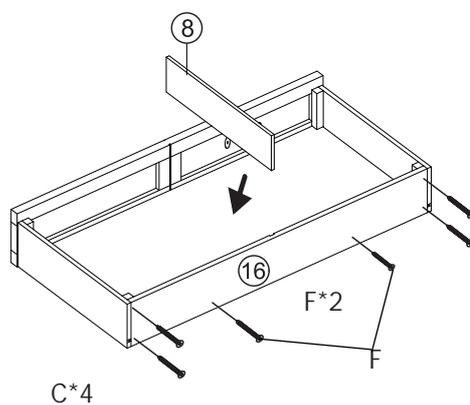


	
3.0*25MM F*2	3.5*30MM C*4

10

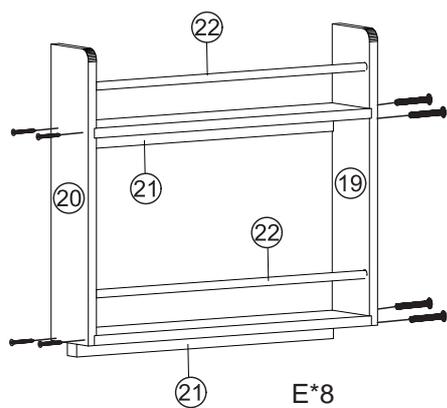


11

3.0*20MM
E*8

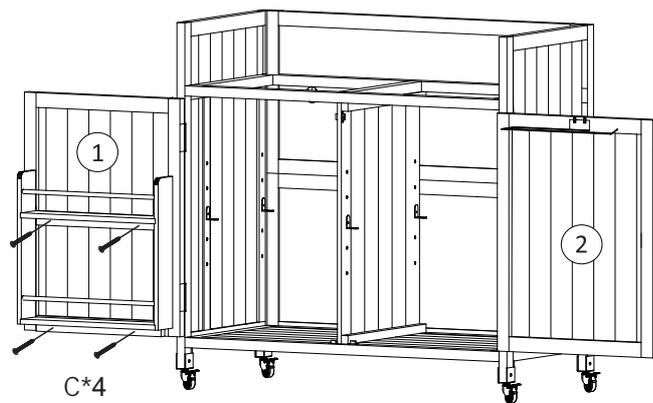


12

3.5*30MM
C*4

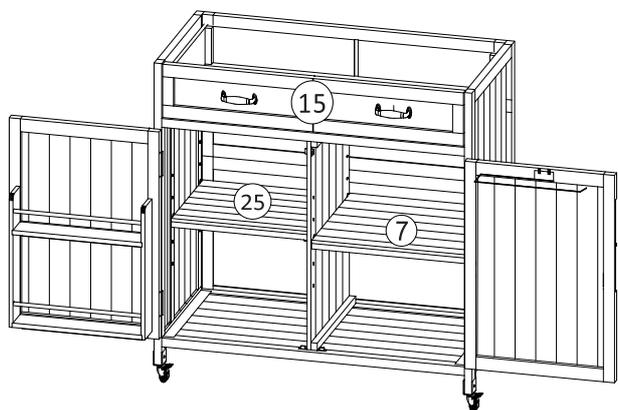


13

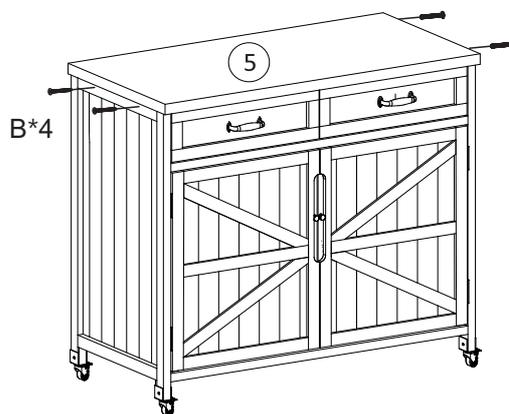

14


3.5*40MM
B*4

A*5

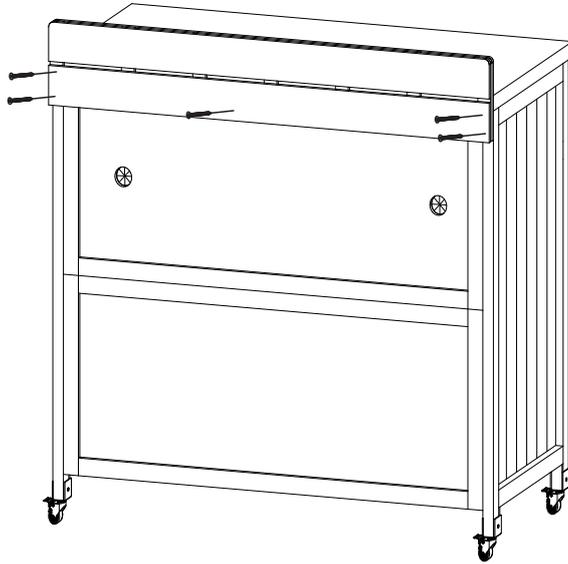


15

3.5*45MM
A*5

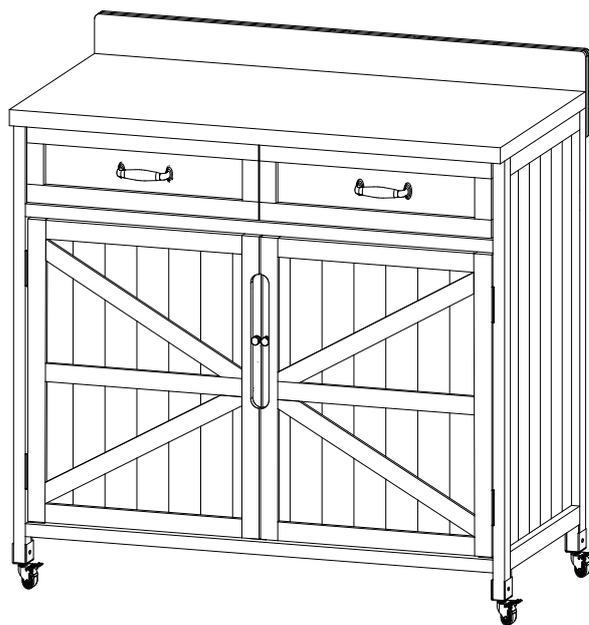

16

This Outdoor kitchen island with drawer unit can be used to add extra workspace and storage to outdoor sink unit (not included).

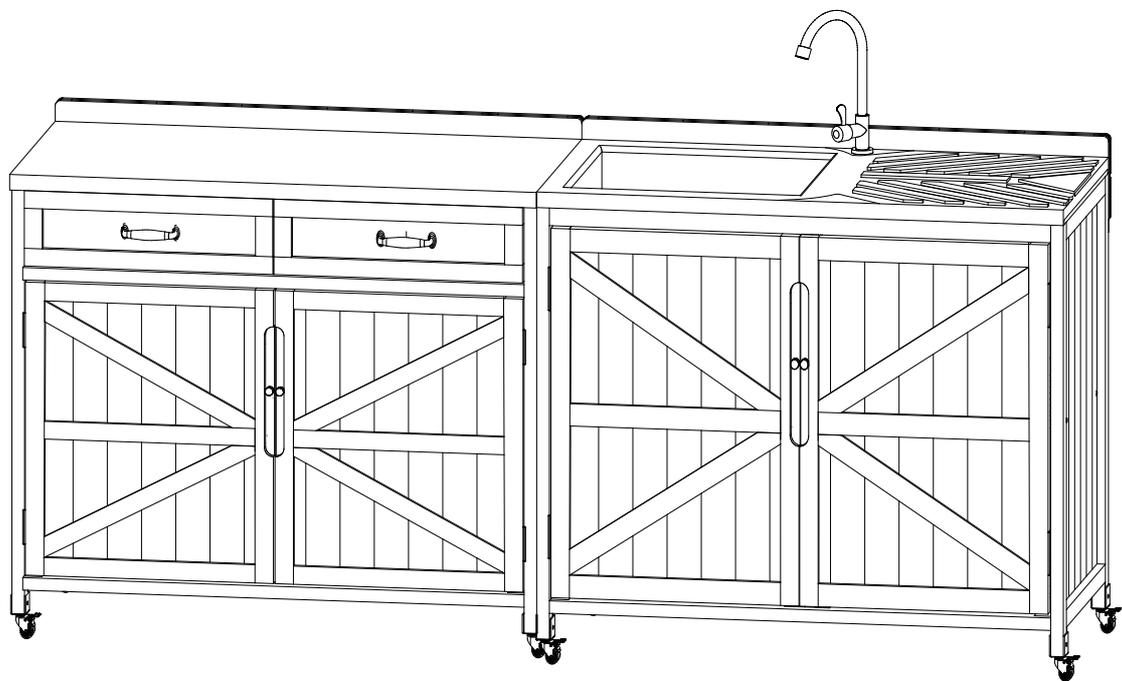

N707P370273

N707P370281