


ASSEMBLY INSTRUCTION


ITEM NO.:N707P370287

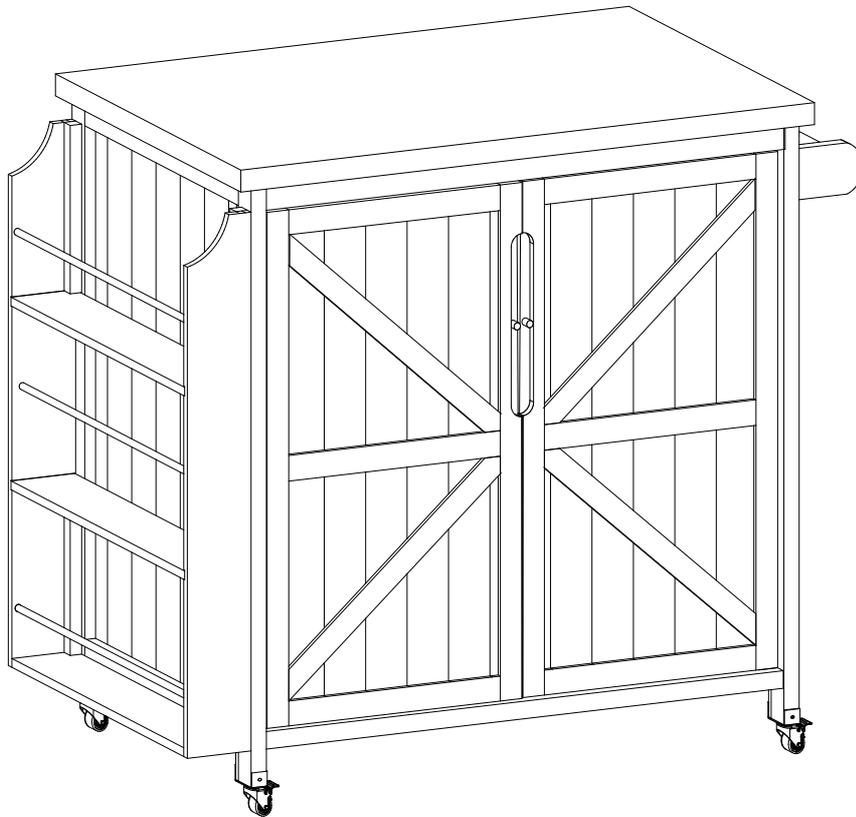










IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.



Detail View

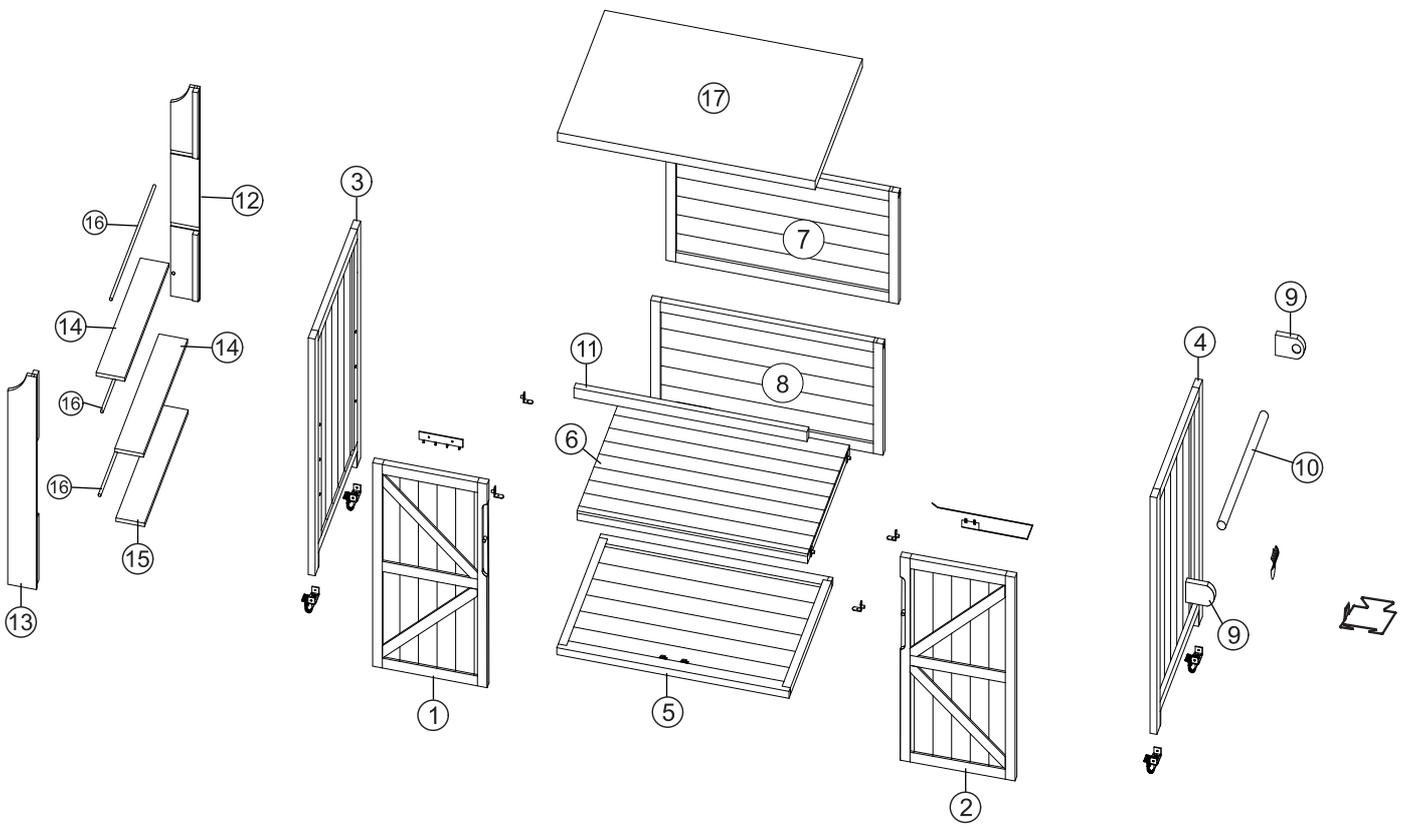


N707P370287

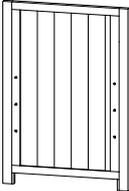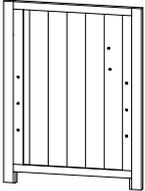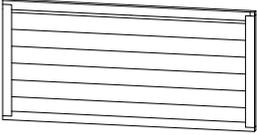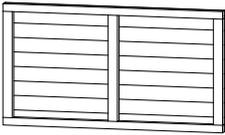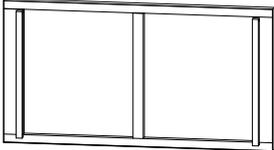1		2		3		4	
	1x		1x		1x		1x
5		6		7		8	
	1x		2x		1x		1x
9		10		11		12	
	2x		1x		1x		2x
13		14		15		16	
	1x		2x		1x		3x
17							







Hardware List

A	 Ø3.5*45 16x	B	 Ø3.5*40 14x	C	 Ø 3.0*30 12x	D	 Ø 3.0*16 20x				
E	 Ø6.0*40 2x	F	 Ø 3.0*10 4x	G	 18x	H	 4x	I	 1x		
J	 4x	K	 1x	L	 2x	M	 2x	N	 2x	O	 4x

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS !

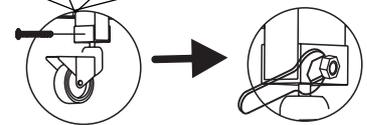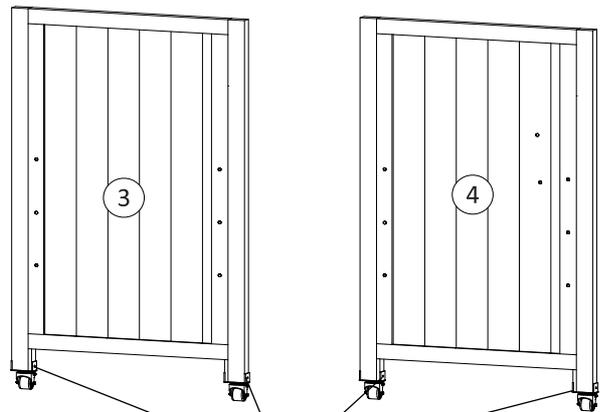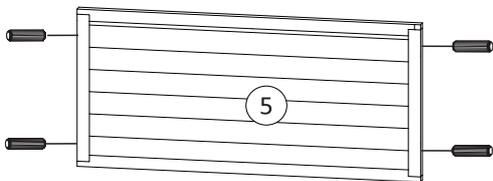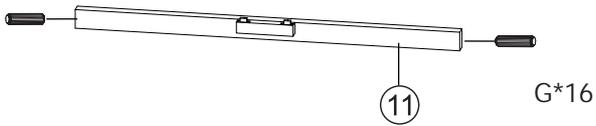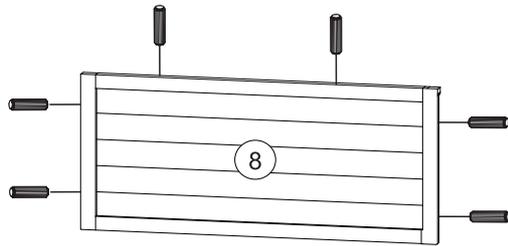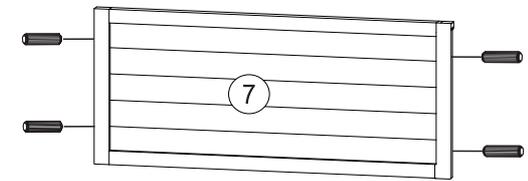

J*4

1





G*16

2




J*4

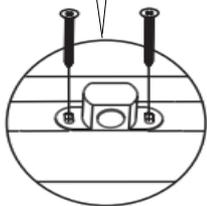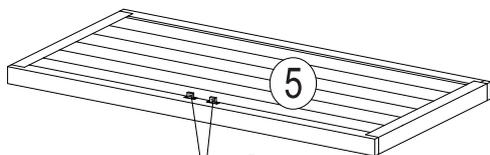

D*4
L*2


5

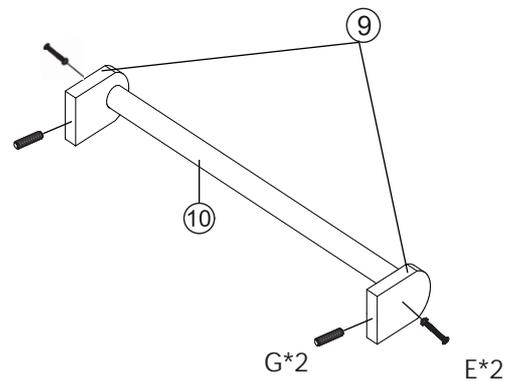

3



L*2



3.0*16MM

D*4

4




G*2




6.0*40MM

E*2

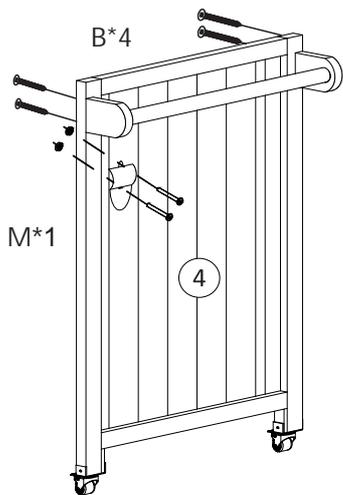


5

	
M*1	3.5*40MM
	B*4

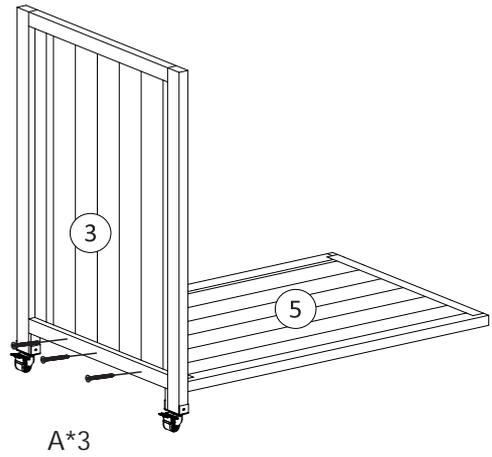


6


3.5*45MM
A*3

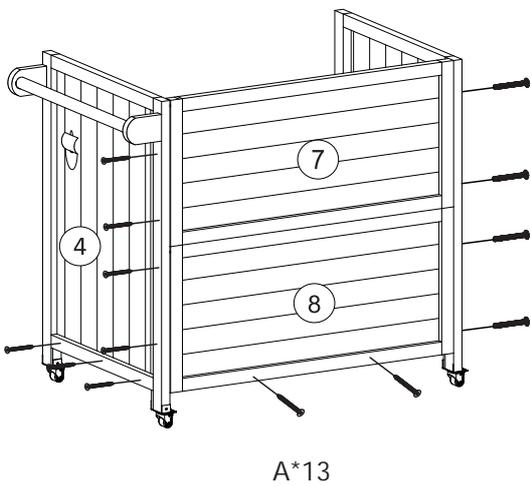


7


3.5*45MM
A*13

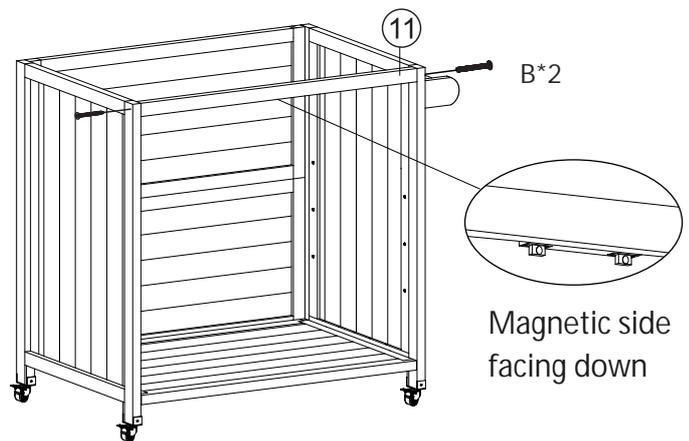


8



3.5*40MM
B*2

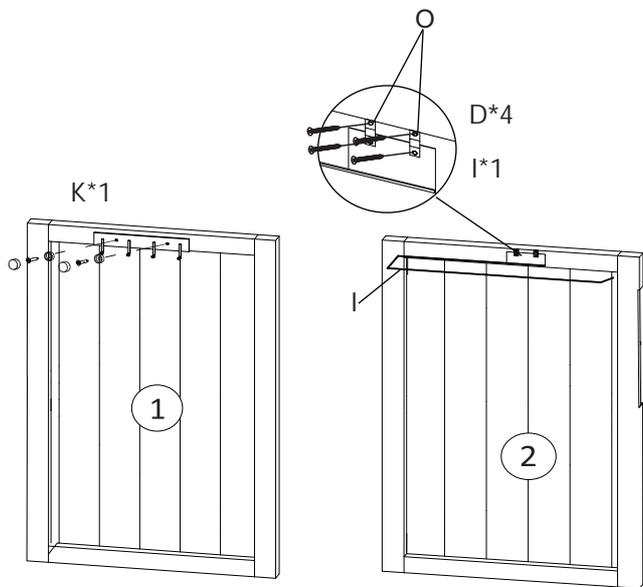


9					10
	O*2	I*1	K*1	D*4	

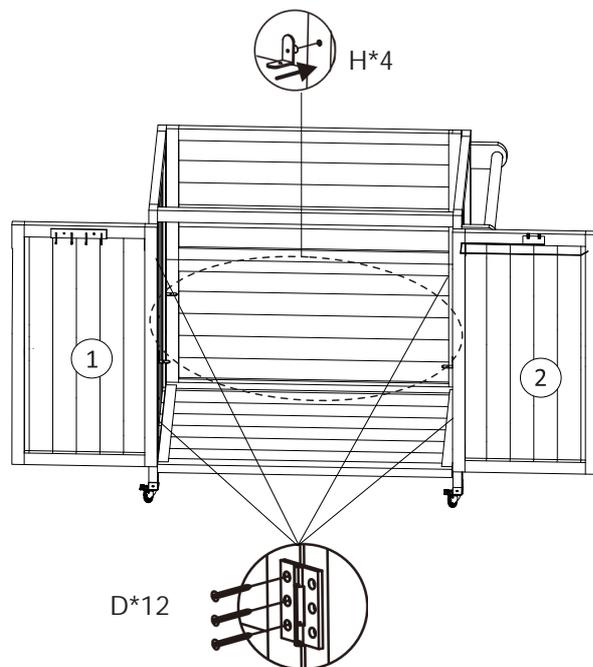

H*4	D*12

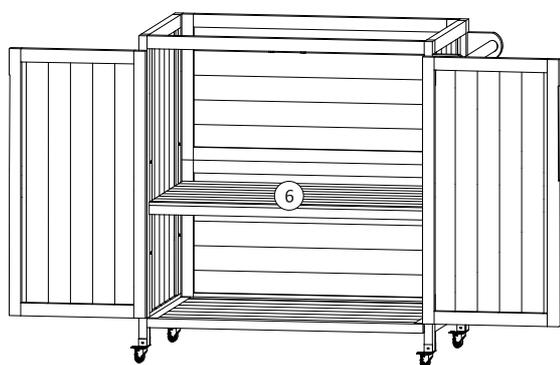


11

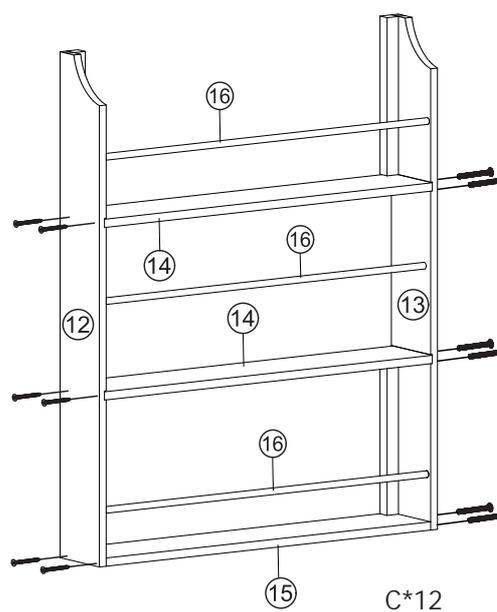


C*12

12

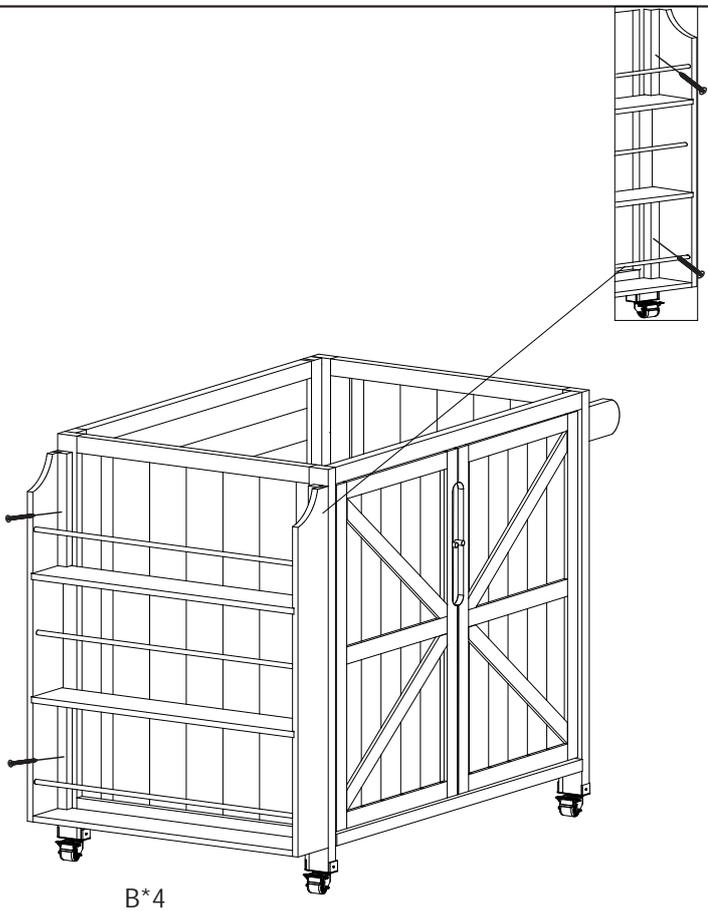

B*4

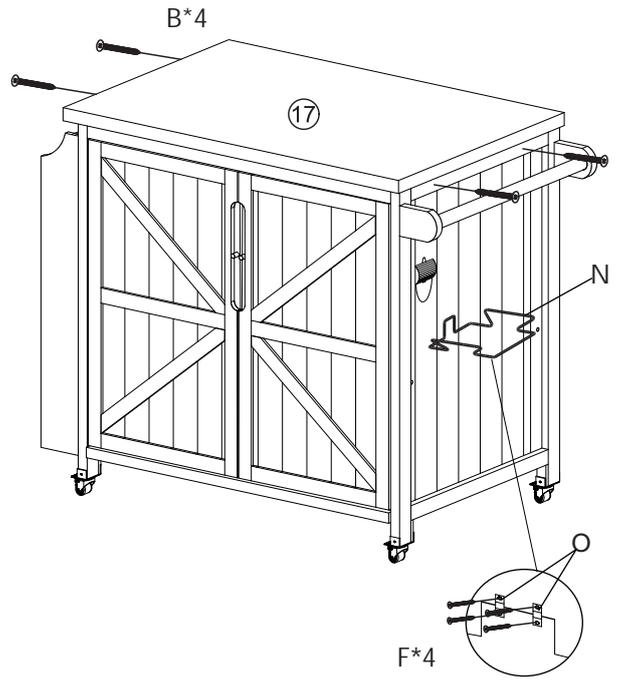


F*4

15

	3.5*40MM
	B*4

16

O*2	N*1	3.5*40MM	3.0*10MM
		B*4	F*4

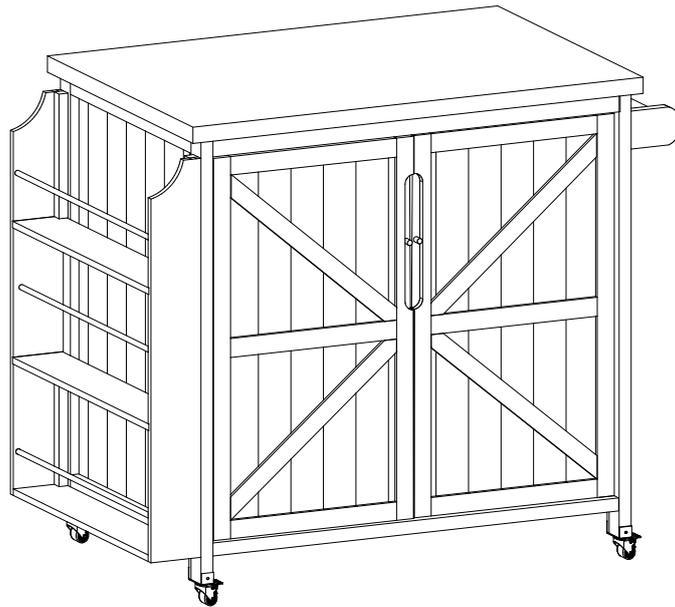

17