


ASSEMBLY INSTRUCTIONS
SKU CODE : N769P407147/N769P407148

Care & Maintenance



- ✓  Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  Do not put hot items directly on furniture surface.
 - ⊘  Do not clean furniture with harsh cleansers or polish.
 - ⊘  Do not place furniture under direct sunlight.
 - ⊘  Do not place furniture near heating or cooling vents.
 - ⊘  Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  Do not place furniture outside. For indoor use only.
 - ⊘  Not for commercial use. For residential use only.
 - ⊘  Stains may be removed with mild soap solution and damp cloth.
 - ⊘  Children should not climb or jump on the furniture.
- ✓  Dust and pick-up spills using a clean, non-colored lint-free cloth.

QUEEN BED

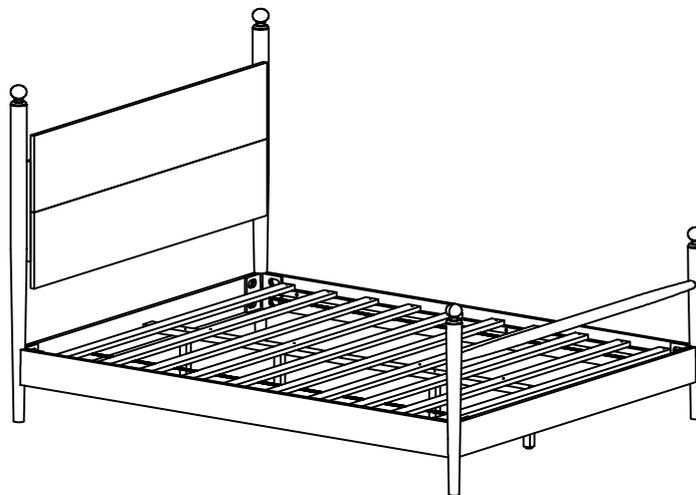

This set included 2 boxes if don't receive full 2 boxes please contact our customer service team



PART LIST FOR 1 BED - N769P407147/N769P407148

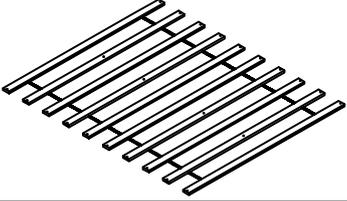Label	Picture	Description	Q.ty
A		Headboard	2
B		Headboard Left Leg	1
C		Headboard Right Leg	1
D		Headboard & Footboard bar	2
E		Headboard support left & right	2
F		Headboard support center	1
G		Footboard Left Leg	1
H		Footboard Right Leg	1
I		Footboard bar	1
J		Side Rails	2
KL		Slats	1
M		Center Legs	4
N		Center bar	1

Assembly Tools Required (Not Included)







HARDWARE LIST BOX 2 - N769P407148

Label	Picture	Description	Q.ty
1		Bolt M8 x 15mm	12
2		Bolt M6 x 35mm	12
3		Hang Bolt M8 x 70mm	16
4		Lock washer 6x8 - 12pcs	12
5		Flat washer 6x13	12
6		Lock washer 8x11 - 12pcs	12
7		Flat washer 8x16	12
8		Crescent Spacer - 16pcs	16
9		Nut M8 - 16pcs	16
10		Wood Screws M4 x 15mm	8
11		Wood Screws M4 x 20mm	4
12		Wood Screws M4 x 30mm	24
13		Bracket	2
14		Metal Connector	4
15		Bracket	2
16		Allen Key M4	1
17		Wrench	1

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !




PART LIST BOX 1 - N769P407147

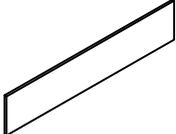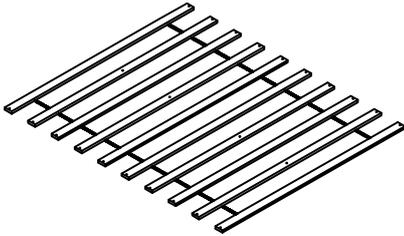Label	Picture	Description	Q.ty
A		Headboard	2
B		Headboard Left Leg	1
C		Headboard Right Leg	1
D		Headboard & Footboard bar	2
G		Footboard Left Leg	1
H		Footboard Right Leg	1
KL		Slats	1

Assembly Tools Required (Not Included)



PART LIST BOX 2 - N769P407148


Label	Picture	Description	Q.ty
E		Headboard support left & right	2
F		Headboard support center	1
I		Footboard bar	1
J		Side Rails	2
M		Center Legs	4
N		Center bar	1

Assembly Tools Required (Not Included)



Assembly Preparation


Before Beginning Assembly

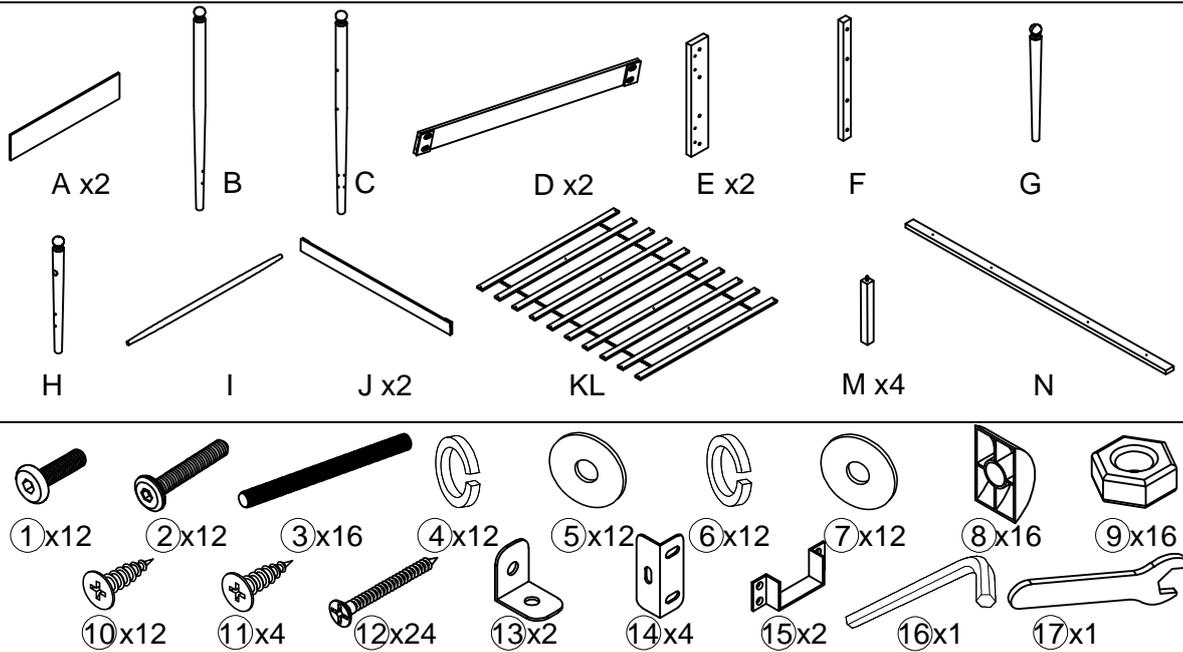

- Read instructions, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.

Assembly Steps

Over view

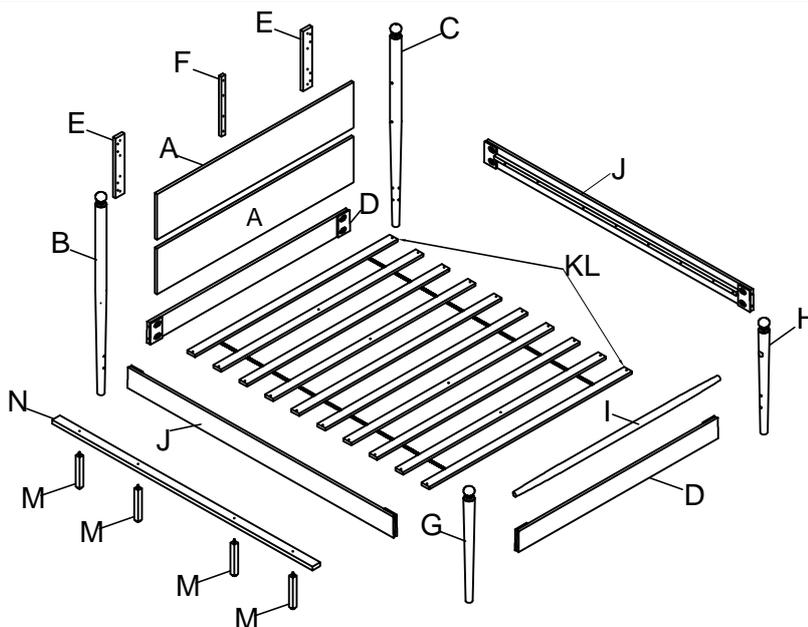


This Bed has multiple parts and may require up to 30 minutes to assemble. To give you overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

STEP 1 :


- Attach the support (E & F) to the Headboard panel (Ax2) using Bolt (2), Spring washer (4) Flat washer (5) by Allen Key (16) as show in Figure, Don't tight fully.
- When the Headboard panel (Ax2) and the Support (E & F) fixed, please fully tighten all Bolt (2).


2 	4 	5 
12(pcs)	12(pcs)	12(pcs)

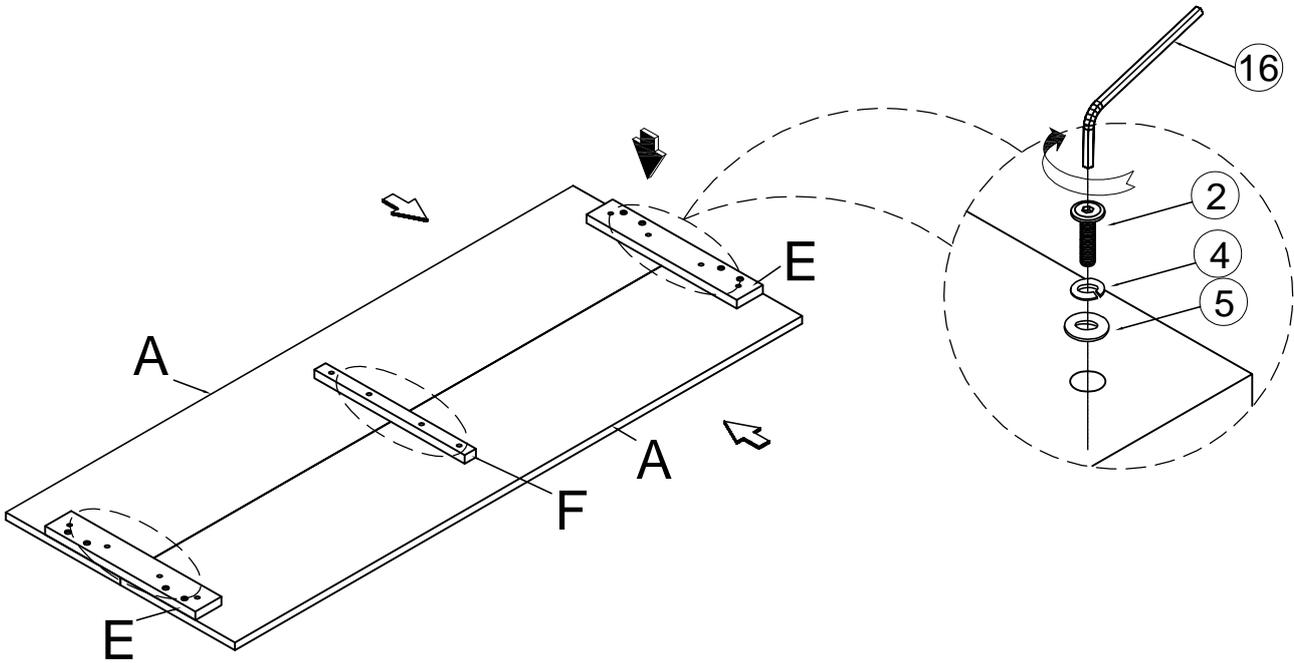

STEP 2 :

- Attach the Hang Bolt (3) to the Headboard Left Leg (B) & Headboard Right Leg (C)


3 
4(pcs)

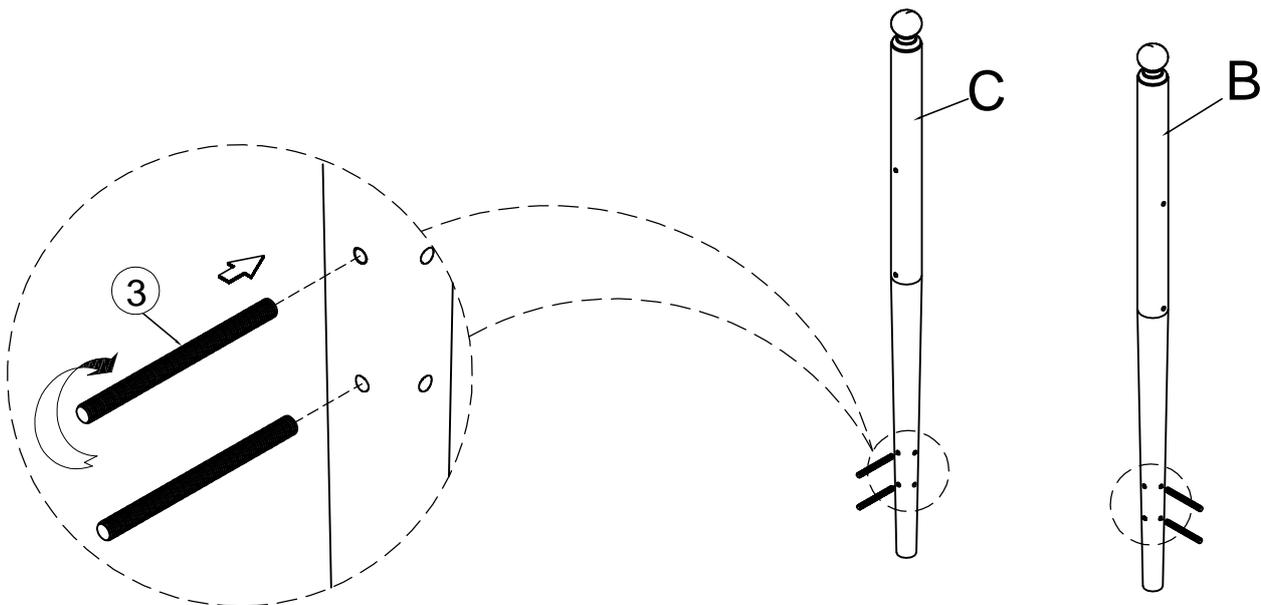

STEP 3 :

- Attach the Headboard bar (D) to the Headboard Leg (B & C) using Crescent Spacer (8), and Nut (9). Tighten with Wrench (17) as show in Figure, Don't tight Nut (9) fully.
- When Headboard bar (D) and Headboard Legs (B & C) fixed, please fully tighten all Nut (9).


8	9
	
4(pcs)	4(pcs)

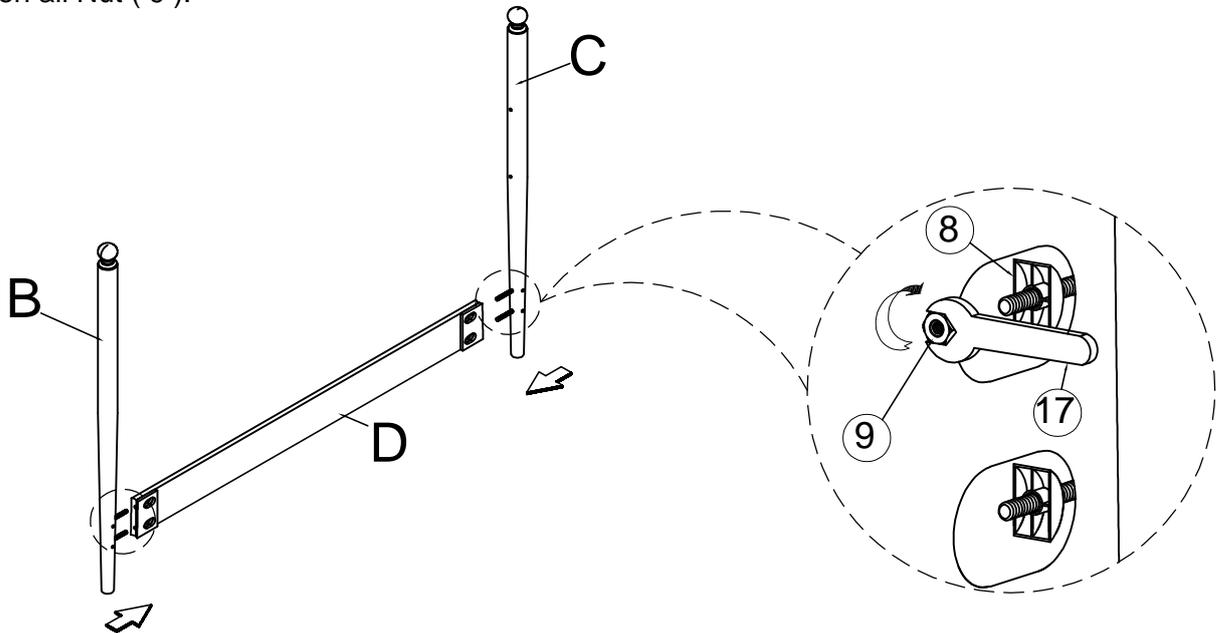

STEP 4 :

- Attach the Headboard panel frame (A,E & F) to the Headboard Legs (B & C) using Bolt (1), Spring washer (6) Flat washer (7) and the Metal Connector (14) by Allen Key (16) as show in Figure, Don't tight fully.
- When tHeadboard panel frame (A,E & F) the Headboard Legs (B & C) fixed, please fully tighten all Bolt (1).


1	6	7	14
			
12(pcs)	12(pcs)	12(pcs)	4(pcs)

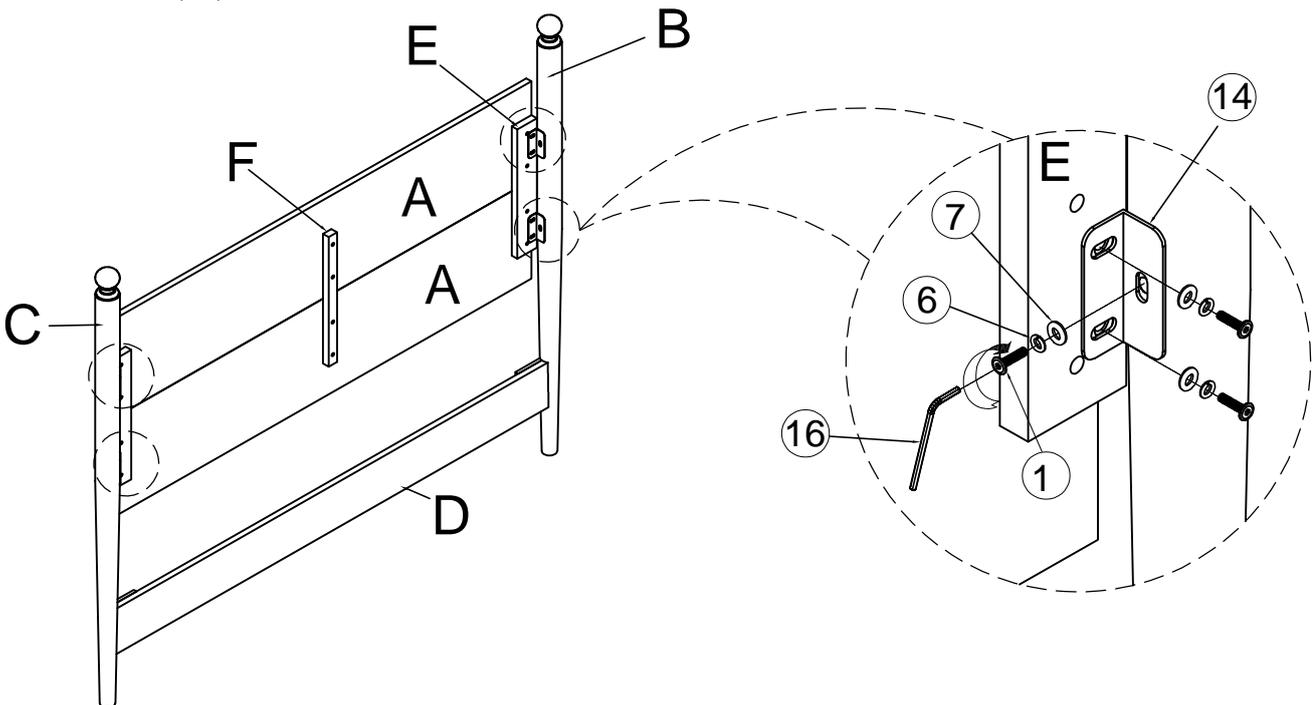

STEP 5 :

- Attach the Hang Bolt (3) to the Footboard Left Leg (G) & Footboard Right Leg (H)


3
4(pcs)

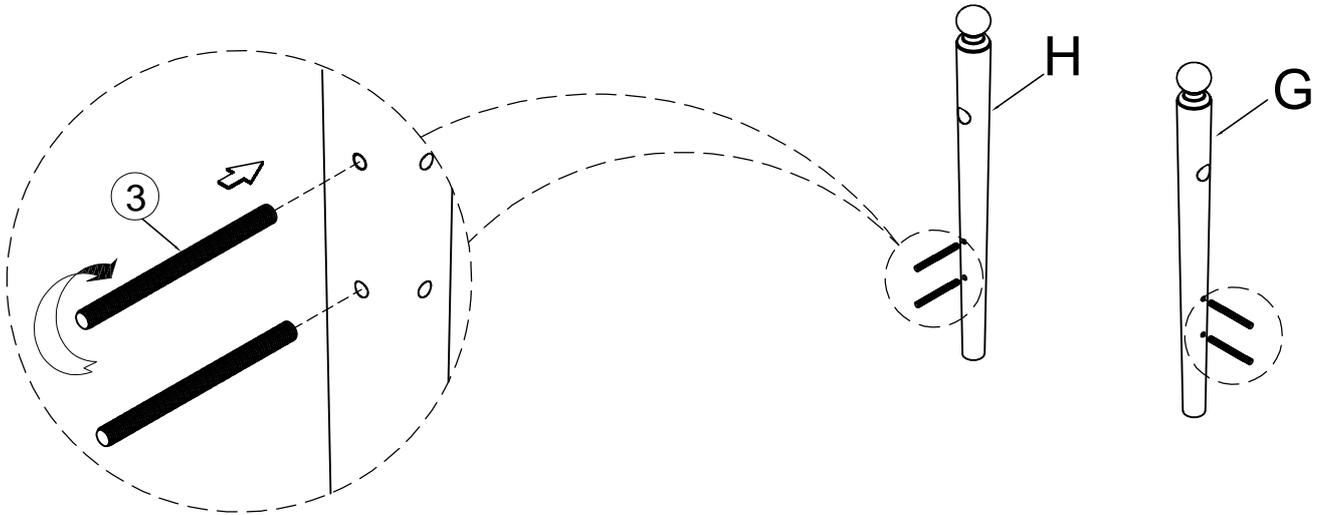

STEP 6 :

- Attach the Footboard bar (D & I) to the Footboard Leg (G & H) using Crescent Spacer (8), and Nut (9). Tighten with Wrench (17) as show in Figure, Don't tight Nut (9) fully.
- When Footboard bar (D & I) and Footboard Legs (G & H) fixed, please fully tighten all Nut (9).
- Attach the Footboard bar (I) to the Footboard Leg (G & H) using Bracket (13) and Screws(11).

8	9	11	13
8(pcs)	8(pcs)	4(pcs)	2(pcs)

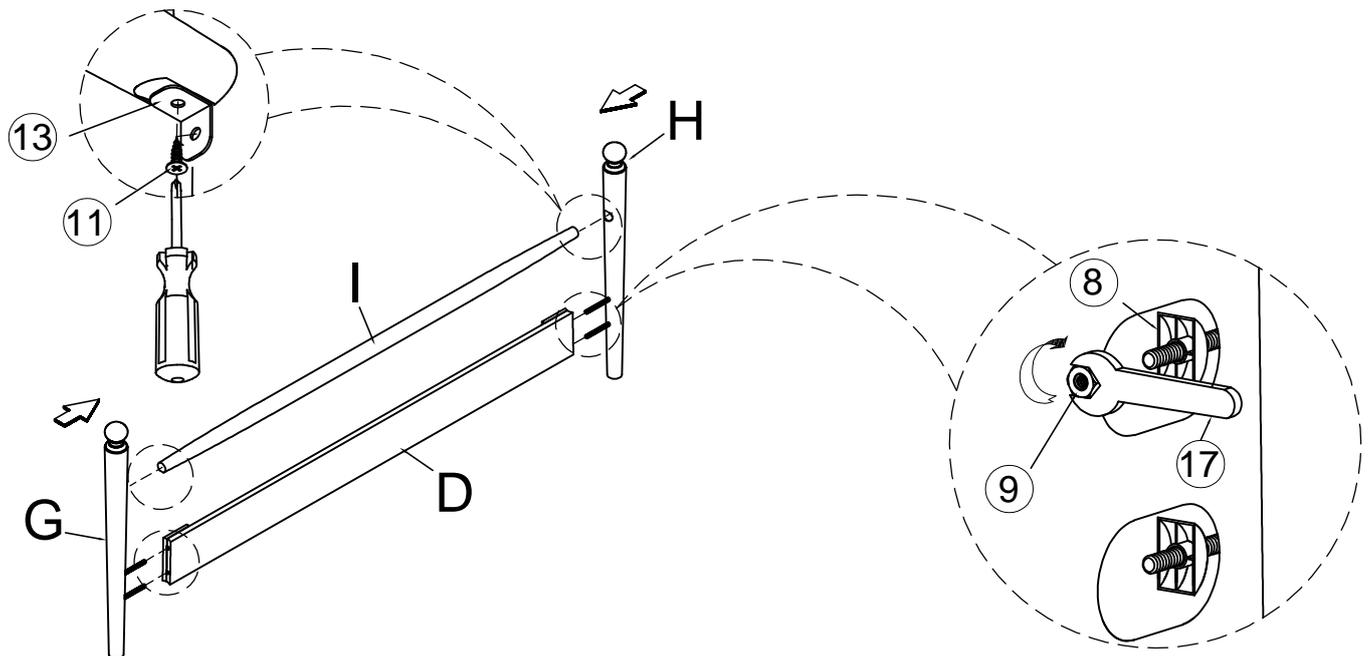


STEP 7 :

- Attach the Hang Bolt (3) to the Headboard Left Leg (B) & Headboard Right Leg (C)
- Attach the Hang Bolt (3) to the Footboard Left Leg (G) & Footboard Right Leg (H)

3


8(pcs)

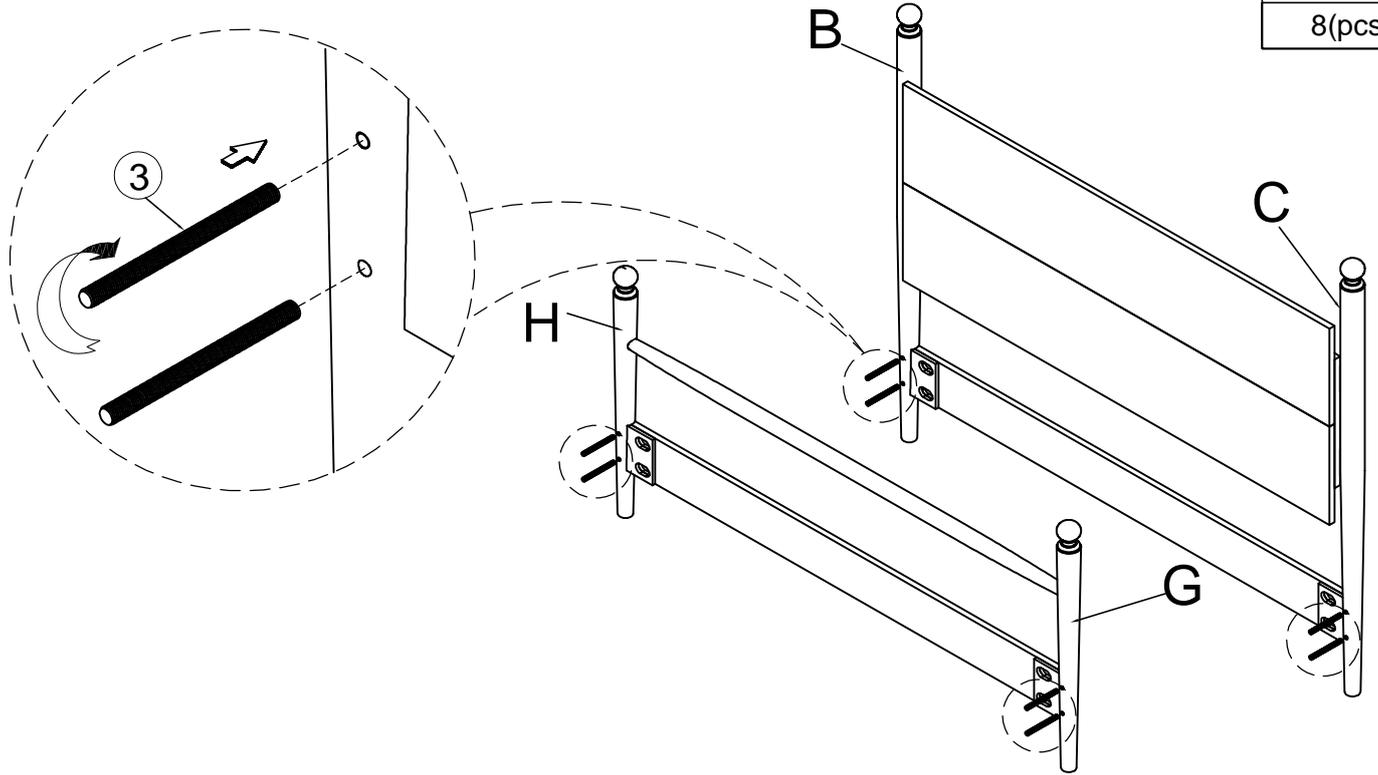

STEP 8 :

- Attach the Side Rail (J) to the Headboard (A,B,C,D,E & F) and Footboard (G,H,D & I) using Crescent Spacer (8), and Nut (9). Tighten with Wrench (17) as show in Figure, Don't tight Nut (9) fully.
- When Headboard (A,B,C,D,E & F), Footboard (G,H,D & I) and Side rail (J) fixed, please fully tighten all Nut (9).


8	9
	
8(pcs)	8(pcs)

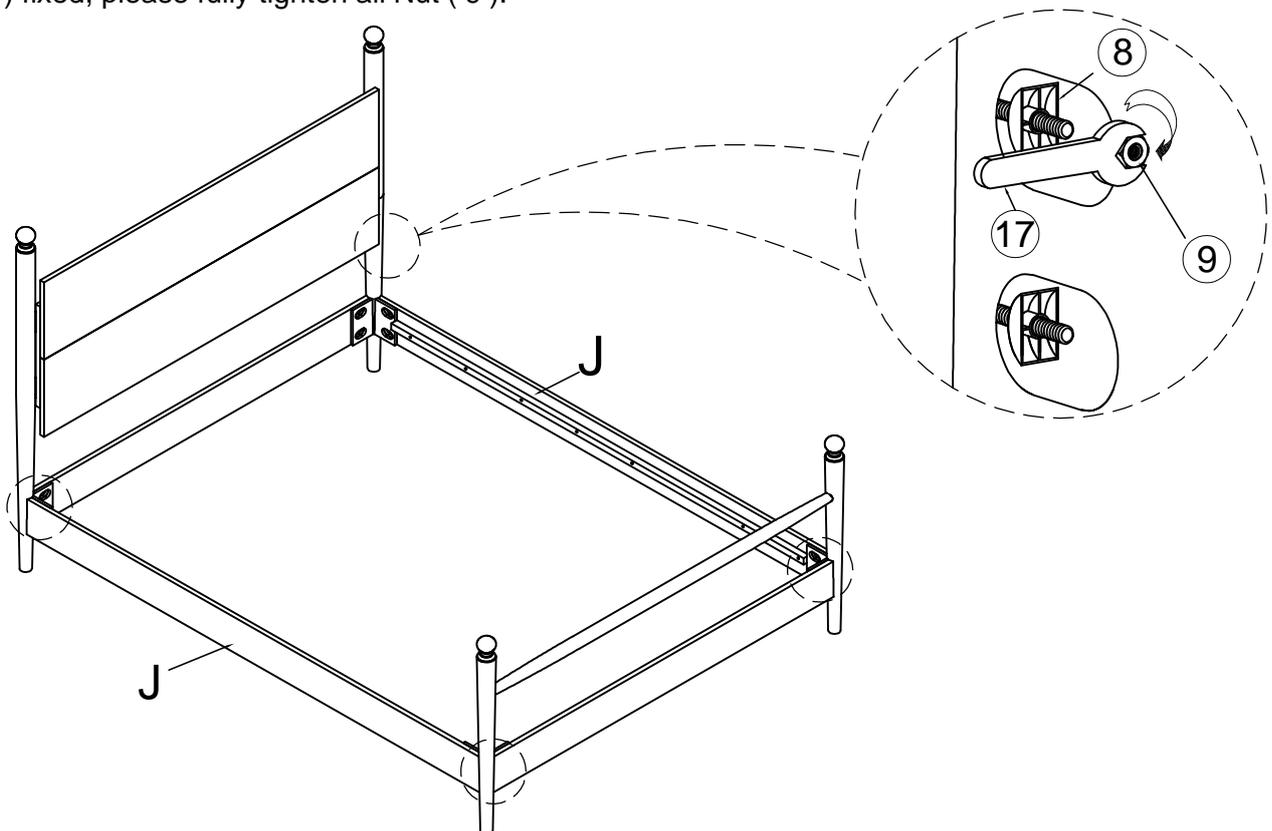

STEP 9 :


- Attach the Bracket (15) to the Headboard & Footboard bar (D) using Screws (10)

10 	15 
8(pcs)	2(pcs)

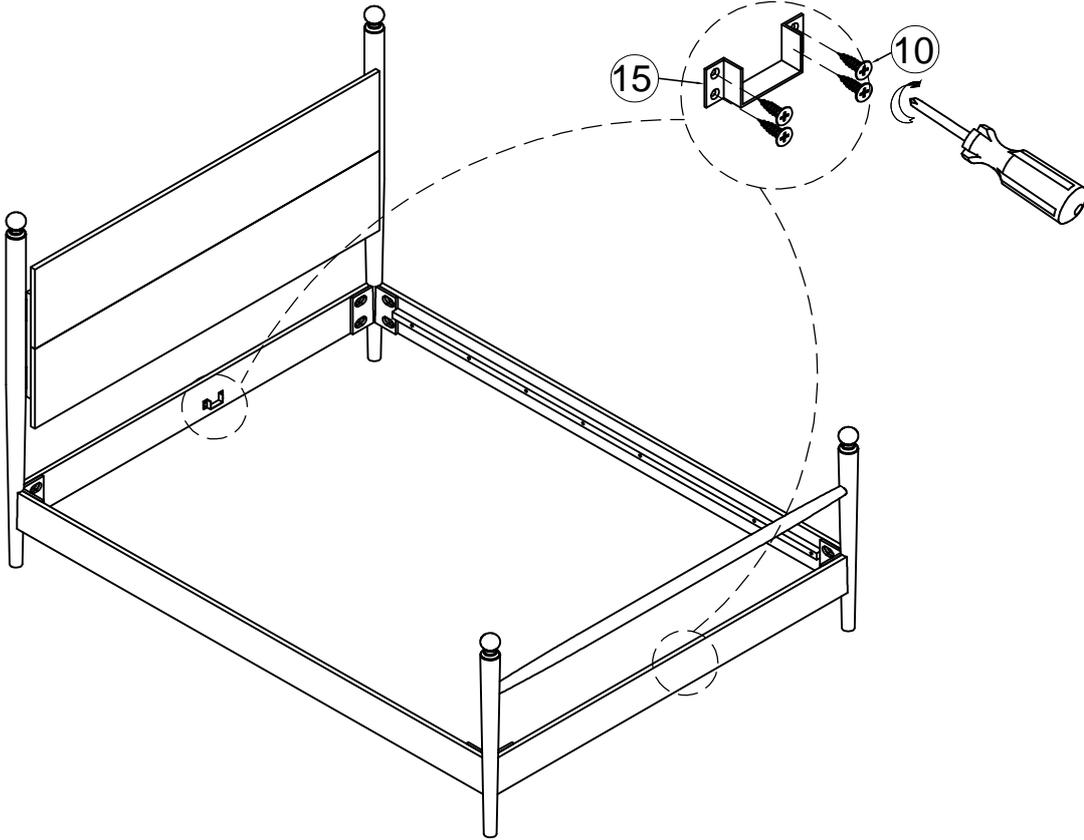

STEP 10 :

- Attach the Center Legs (M) to the Center bar (N)

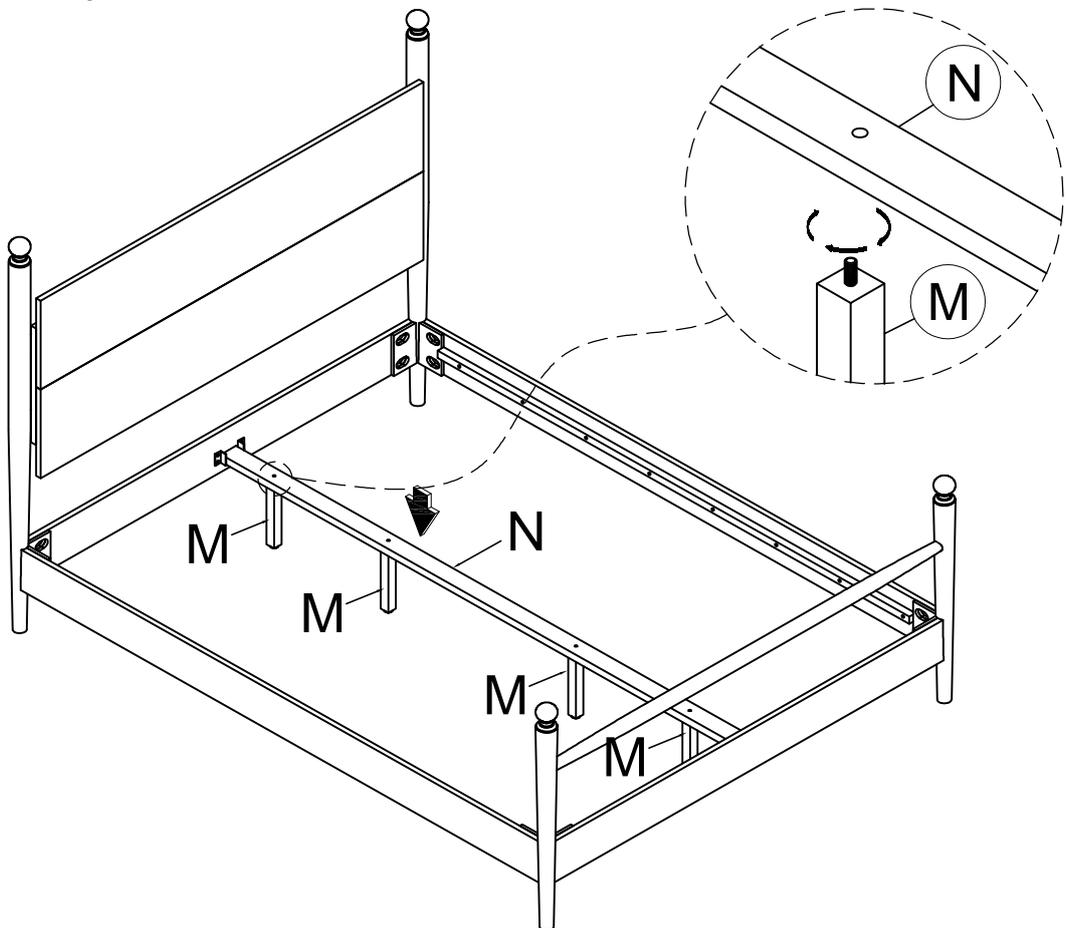


STEP 11 :


- Attach the Slat (KL) to the Side Rail (J) and the Center Bar (N) using Screws (12)

12

24(pcs)

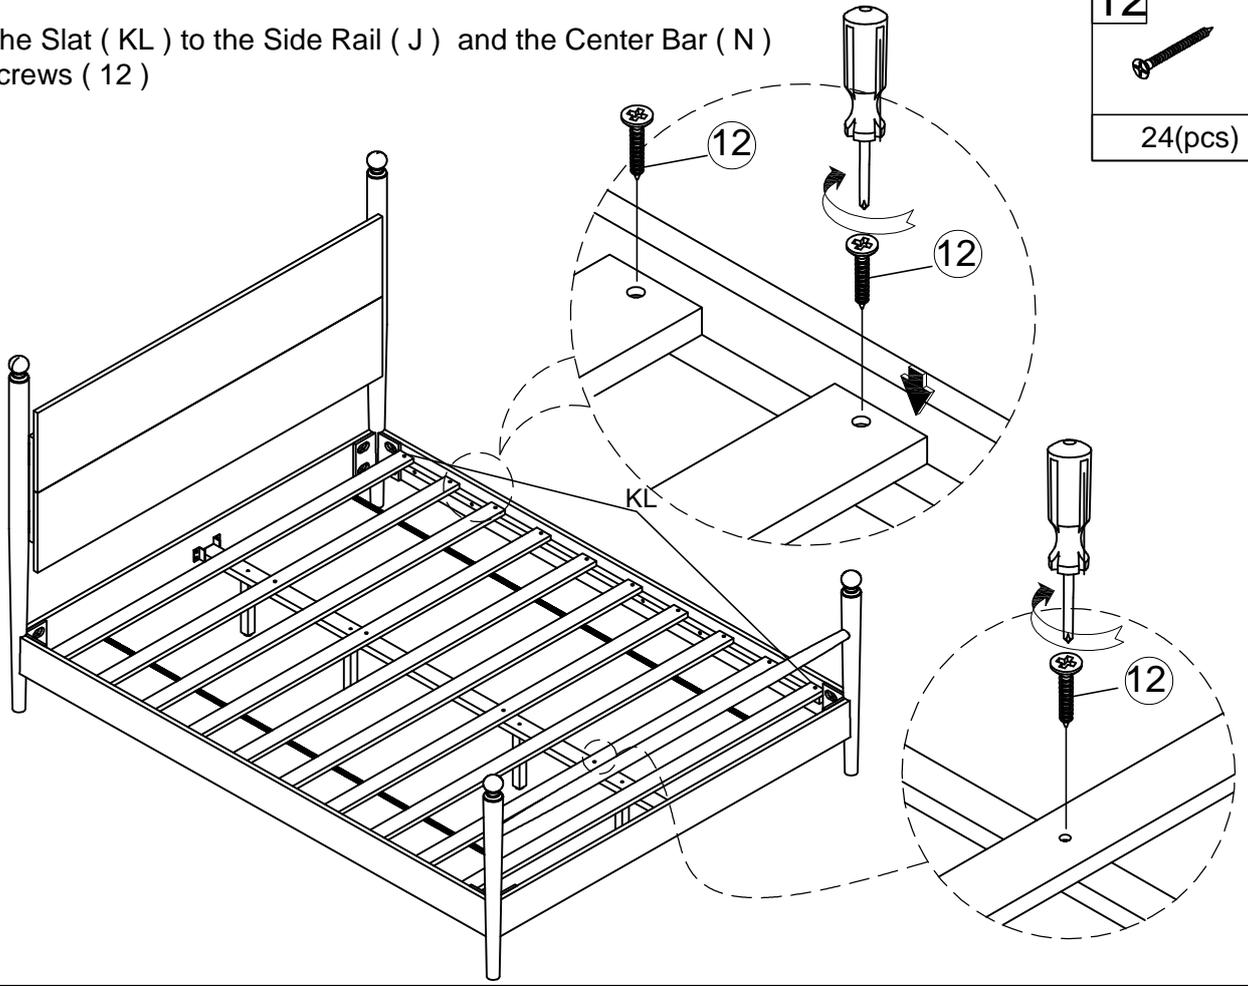

Finished :

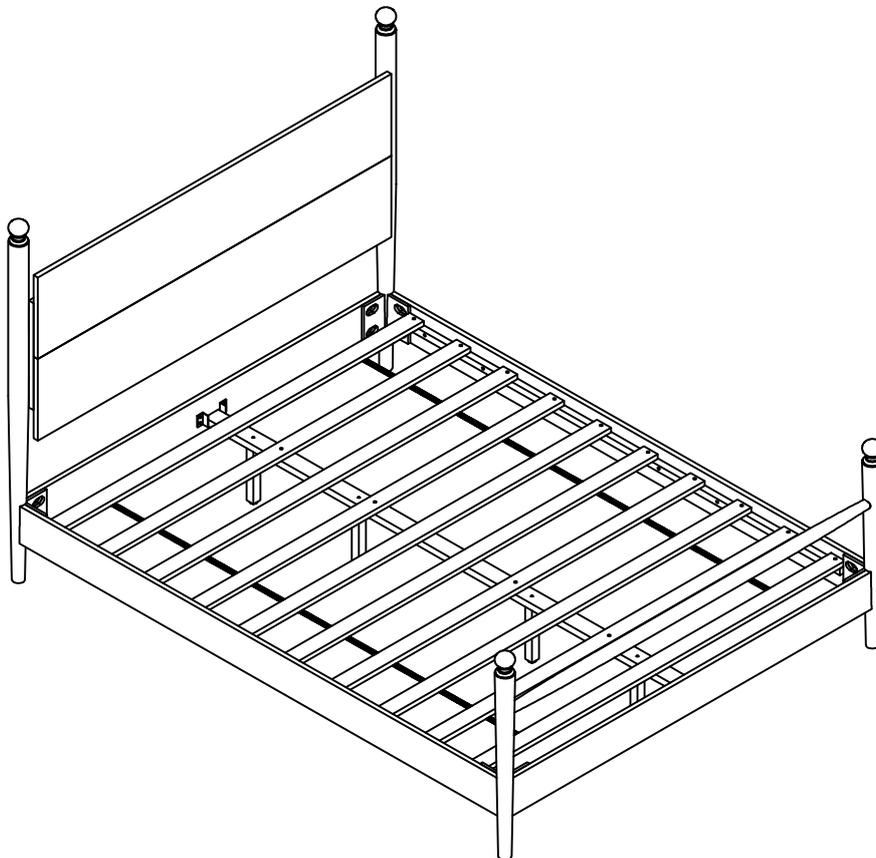

Please note : this Bed can only be used on the flat, level surface