



Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance


	● Not for commercial use. For residential use only.
	● Do not put hot items directly on furniture surface.
	● Do not clean furniture with harsh cleansers or polish.
	● Do not place furniture under direct sunlight.
	● Do not place furniture near heating or cooling vents.
	● Do not write on furniture without a padded barrier to protect the surface.
	● Do not place furniture outside . For indoor use only.
	● Stains may be removed with mild soap solution and damp cloth.
	● Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Corner carton for hardware packs .

Assembly Instructions

SIDE BOARD

Item No: N758P412506

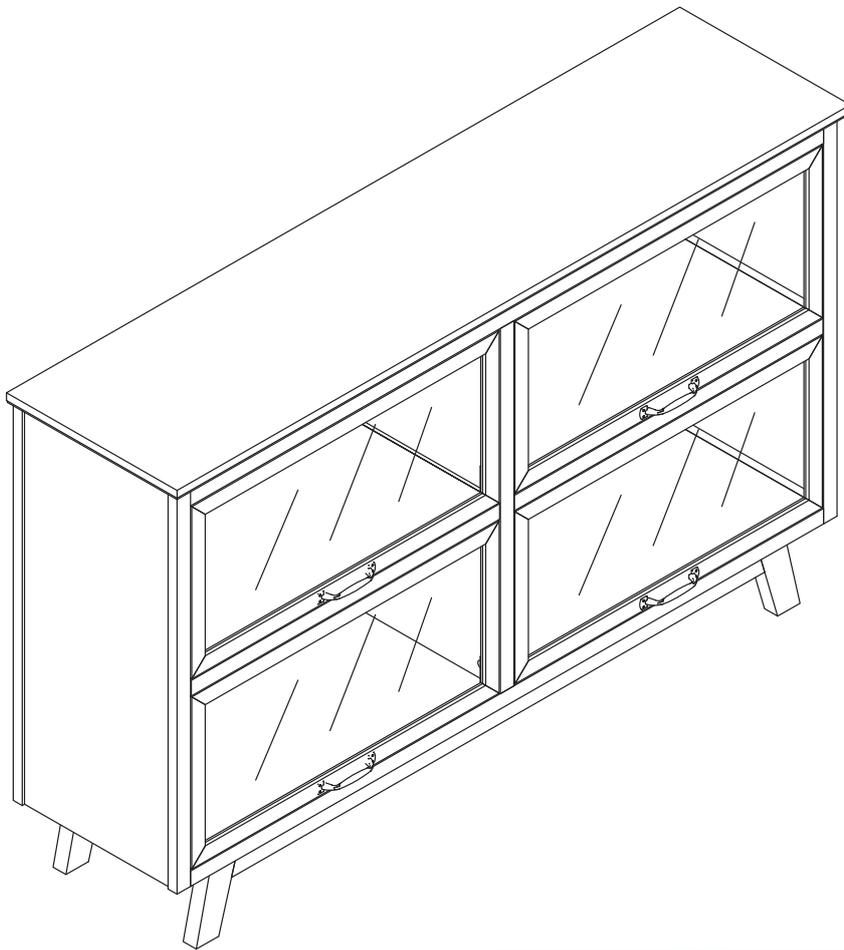












! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Caution: This Side Board is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Sideboard and to prevent damage to the Sideboard, two adults may be needed to execute these actions.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412506





Parts List

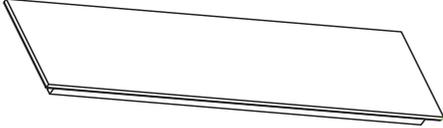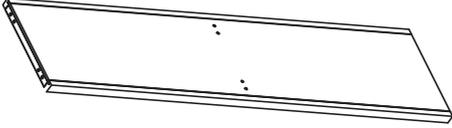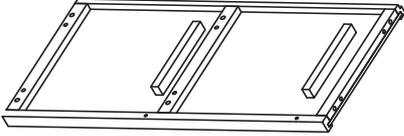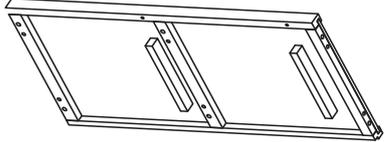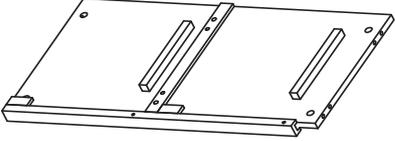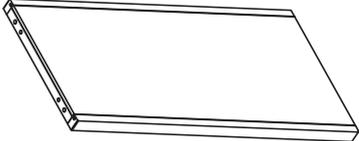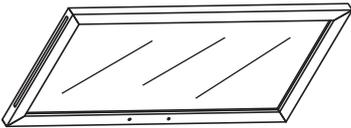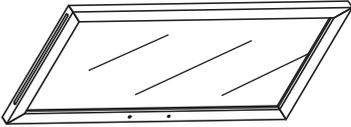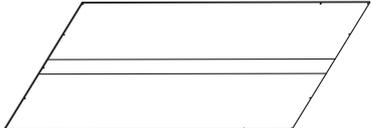Label	Picture	Description	QTY
A		Top	1
B		Bottom	1
C		Right Panel	1
D		Left Panel	1
E		Middle Panel	1
F		Shelf	2
G		Leg	2
H		Cross Bar	2
I		Left Door	2
J		Right Door	2
K		Back Panel	1

ASSEMBLY INSTRUCTION


ITEM NO. N758P412506

Hardware

Label	Picture	Description	QTY
①		Metal Pin 6 x 20	9
②		Wooden Dowel 8 x 28	21
③		Cam Bolt 6 x 28	5
④		Cam Lock 10 x 15	5
⑤		Bolt 1/4" x 25	17
⑥		Bolt 1/4" x 38	13
⑦		Spring Washer 6 x 13	29
⑧		Flat Washer 6 x 13	29
⑨		Mushroom Screw 3 x 15	27
⑩		Handle	4
⑪		Bolt of Handle M4 x 25	9
⑫		Allen Wrench (K4 x 80)	1
⑬		Screwdriver	NOT PROVIDED
⑭		Anti tip Kit	2 sets
⑭.1		Plastic Anchor	2
⑭.2		Metal Bracket	4
⑭.3		Long Screw 4 x 40	2
⑭.4		Short Screw 4 x 15	2
⑭.5		Steel Wire	2

Assembly Preparation

Before Beginning Assembly:

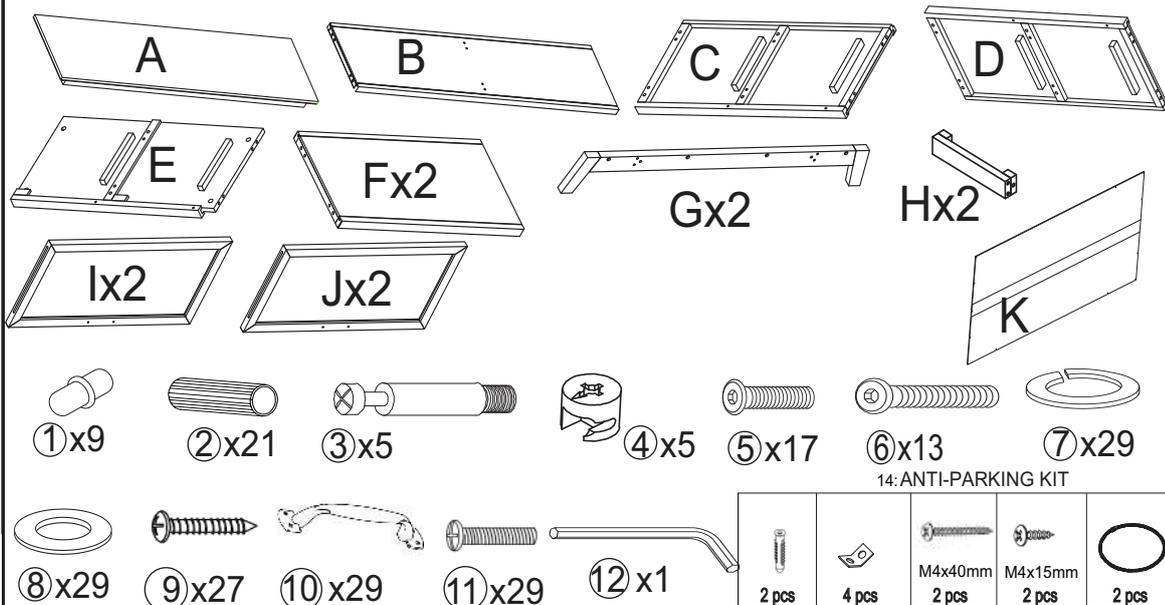


- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps

Overview

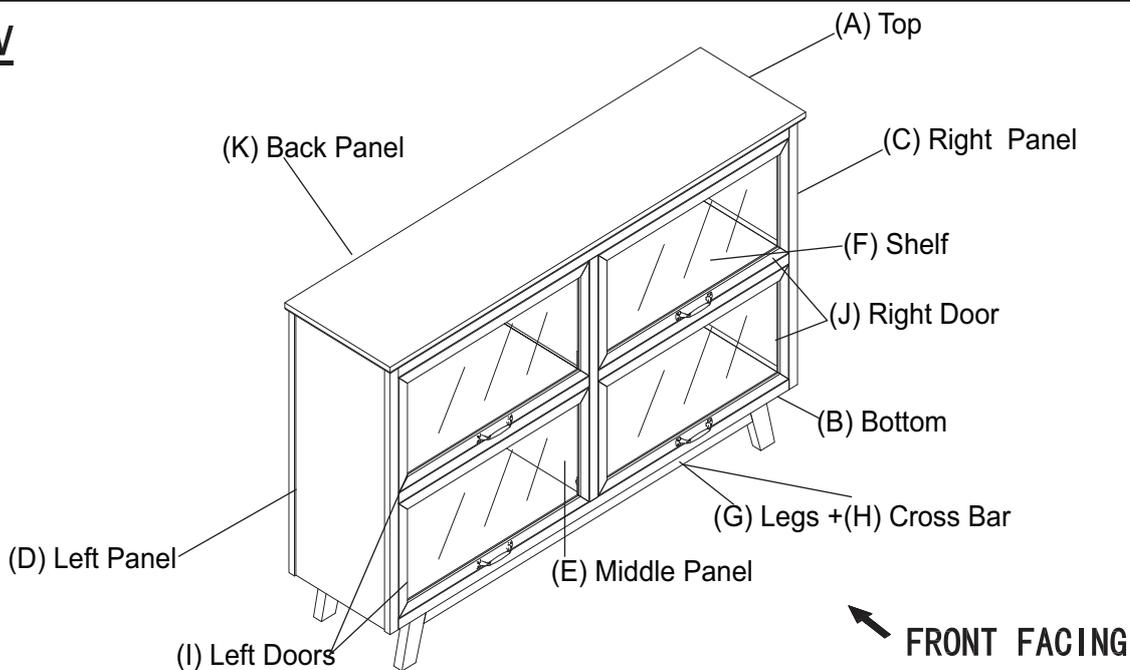


This Sideboard has multiple parts and may require up to some 45 minutes to assemble. To give you an overview of the SideBoard parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412506

Step 1

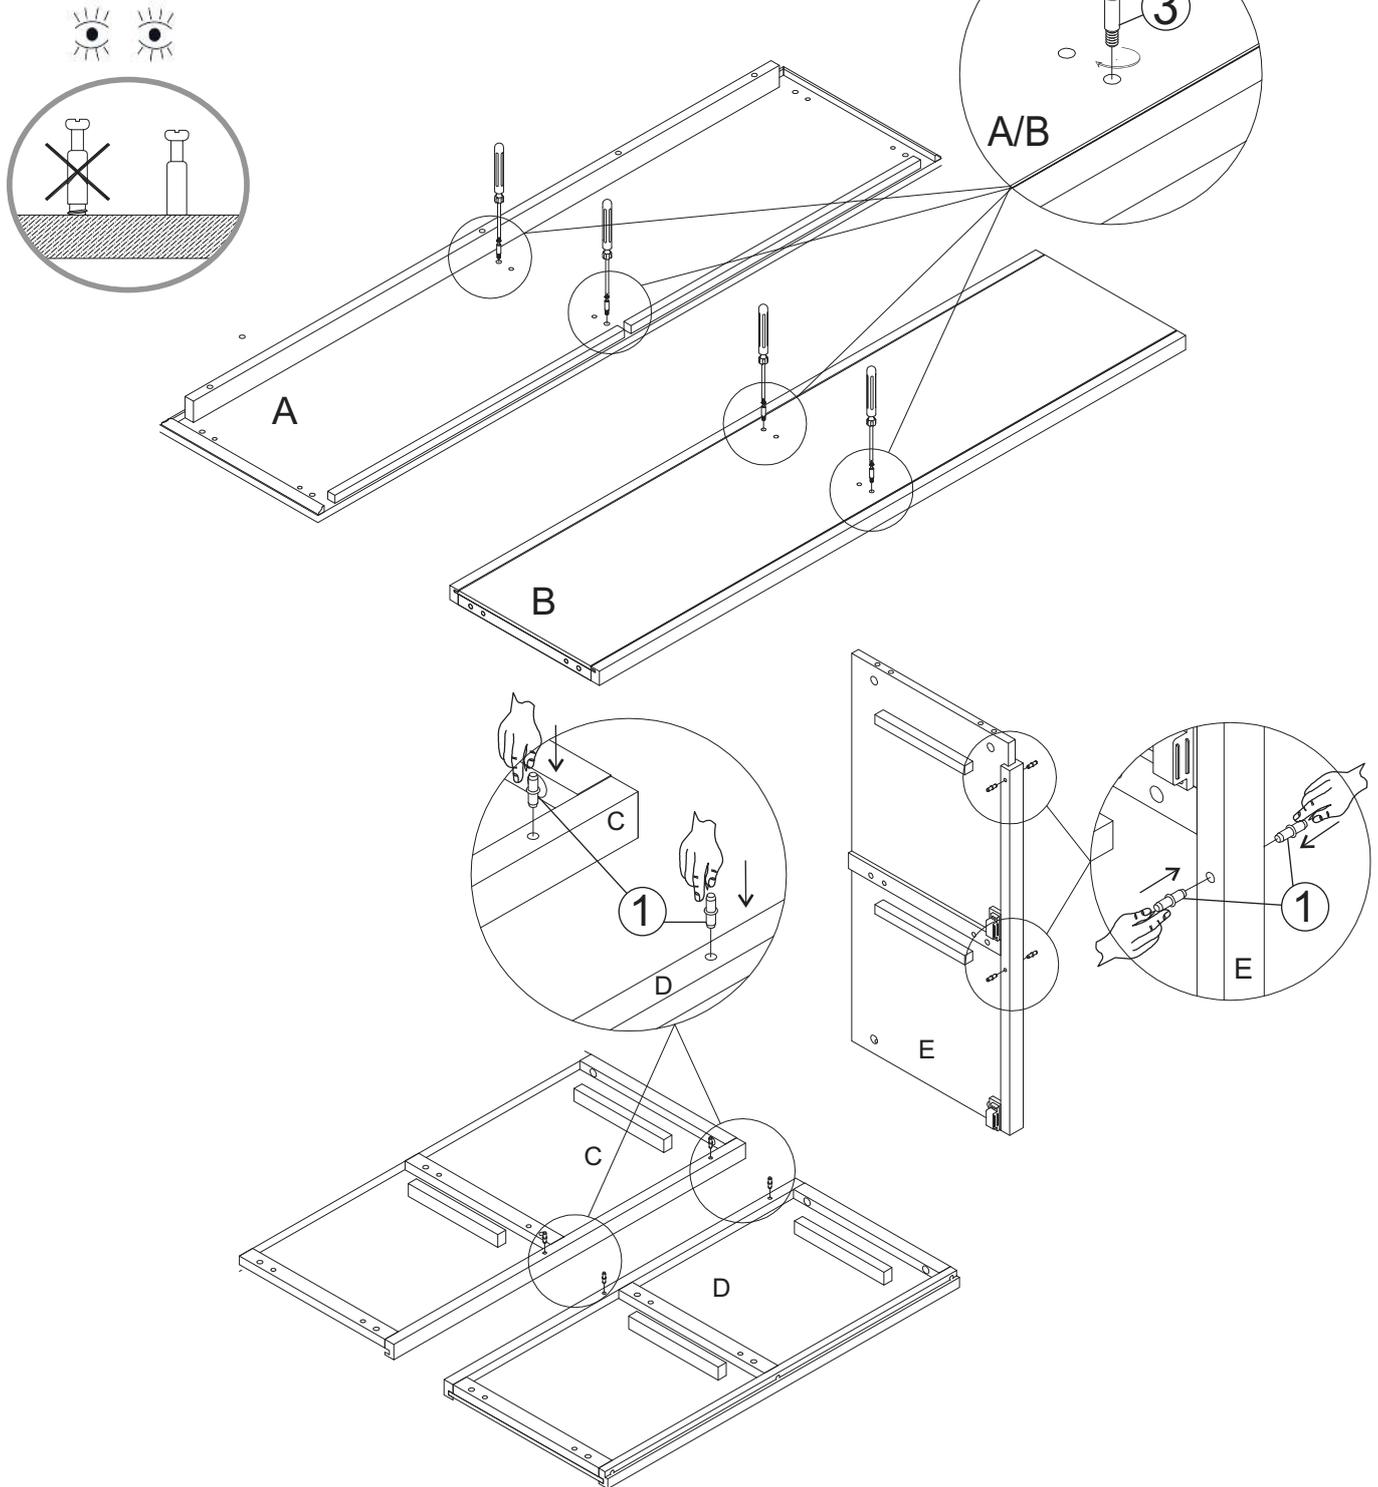

Unpack and place all parts on clean, non - marring surface.

Install the cam bolts into Top A and Bottom B using a screwdriver


Install the Metal Pin (1) into Right Panel ©, Left Panel (D) and Middle Panel (E) by hand as picture

At this step, fully tighten the Bolt.

ASSEMBLY INSTRUCTION


ITEM NO. N758P412506

Step 2

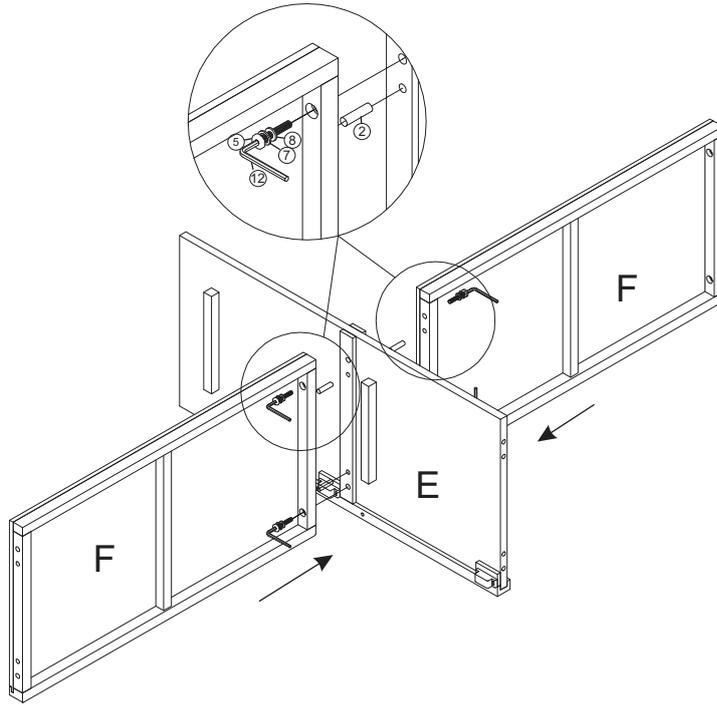

Align the mounting position for the Shelf (F) to Middle panel (E) with wooden dowel (2) .
Affix the Shelf(F) to Middle panel (E) by using the Bolt (5), Spring washer (7) , Flat washer (8)
with Allen Wrench (12).

Step 3

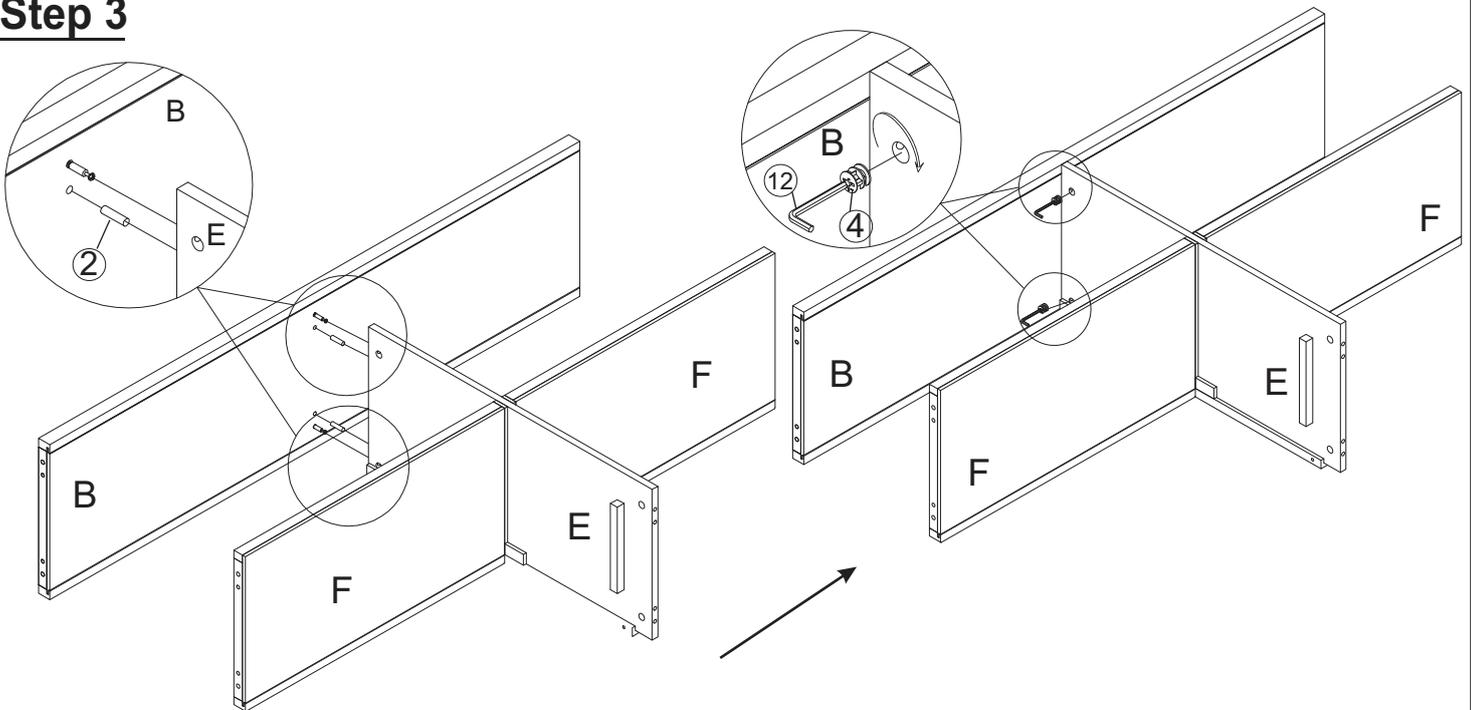


Next, Attach the Bottom (B) onto Middle panel (E). Align the mounting position with wooden
dowel (2) and Affix them by using the Cam lock (4) with Allen Wrench (12)

At this step, fully tighten the Bolt.

ASSEMBLY INSTRUCTION


ITEM NO. N758P412506

Step 4

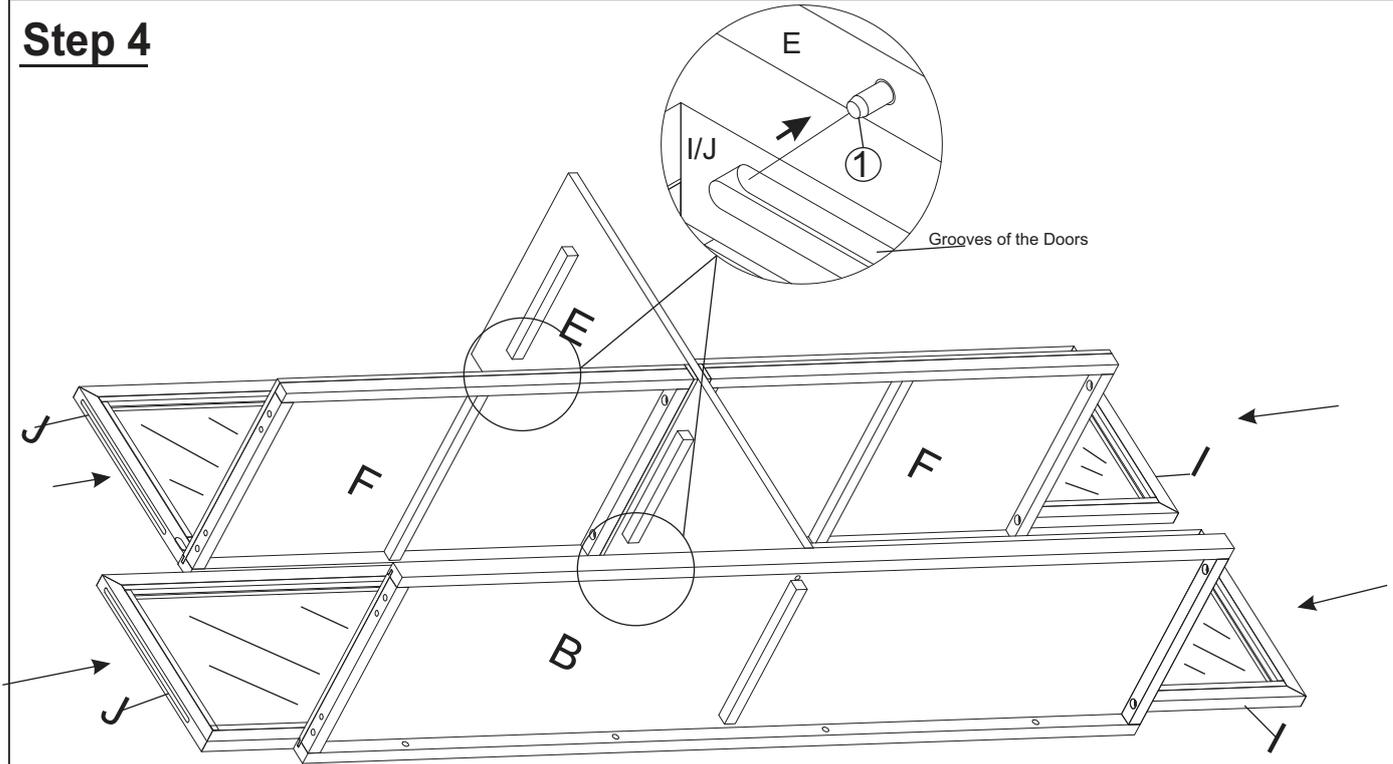

Next, insert the Left Door (I) and Right doors (J) into the Middle panel (E), making sure that the grooves on the doors properly engage with the metal pins (1) installed in Step 1.

Step 5

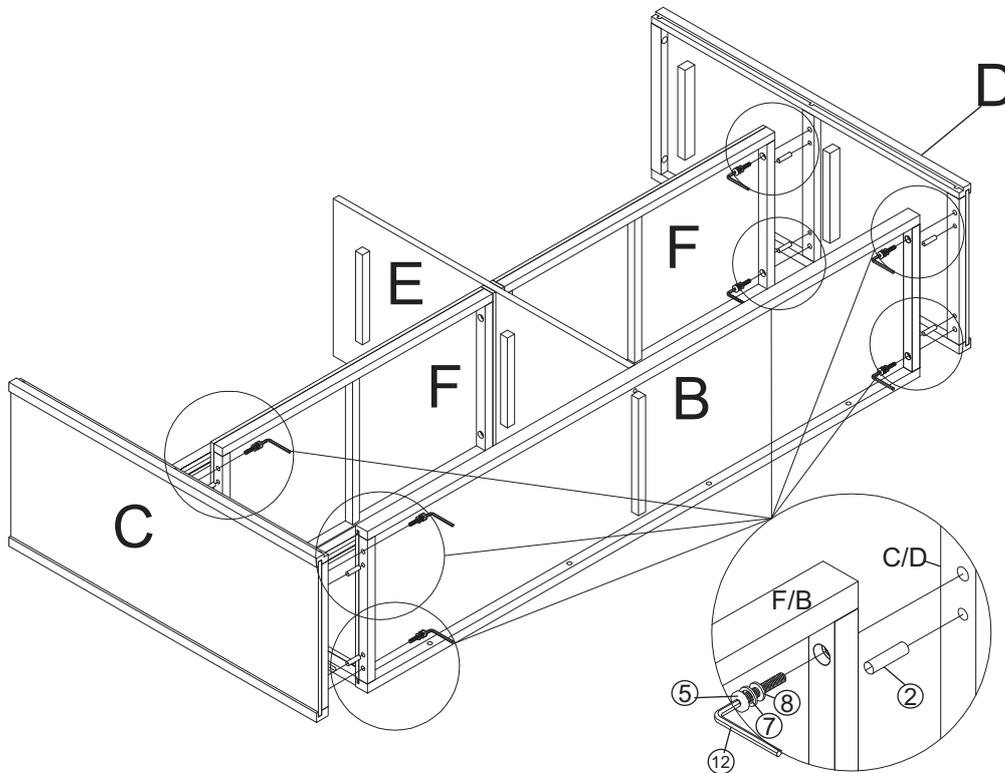


Next step, Attach the Right panel (C) and the Left Panel (D) onto the Bottom panel (B) and the Shelf (F), Align the mounting position with wooden dowel (2) and ensure that the metal pin(1) fit into the groove of the Doors. Affix them by using the Bolt (5), Spring Washer (7), Flat washer (8) and Allen Wrench (12) . **At this step, fully tighten the Bolt.**

ASSEMBLY INSTRUCTION

ITEM NO. N758P412506


Step 6

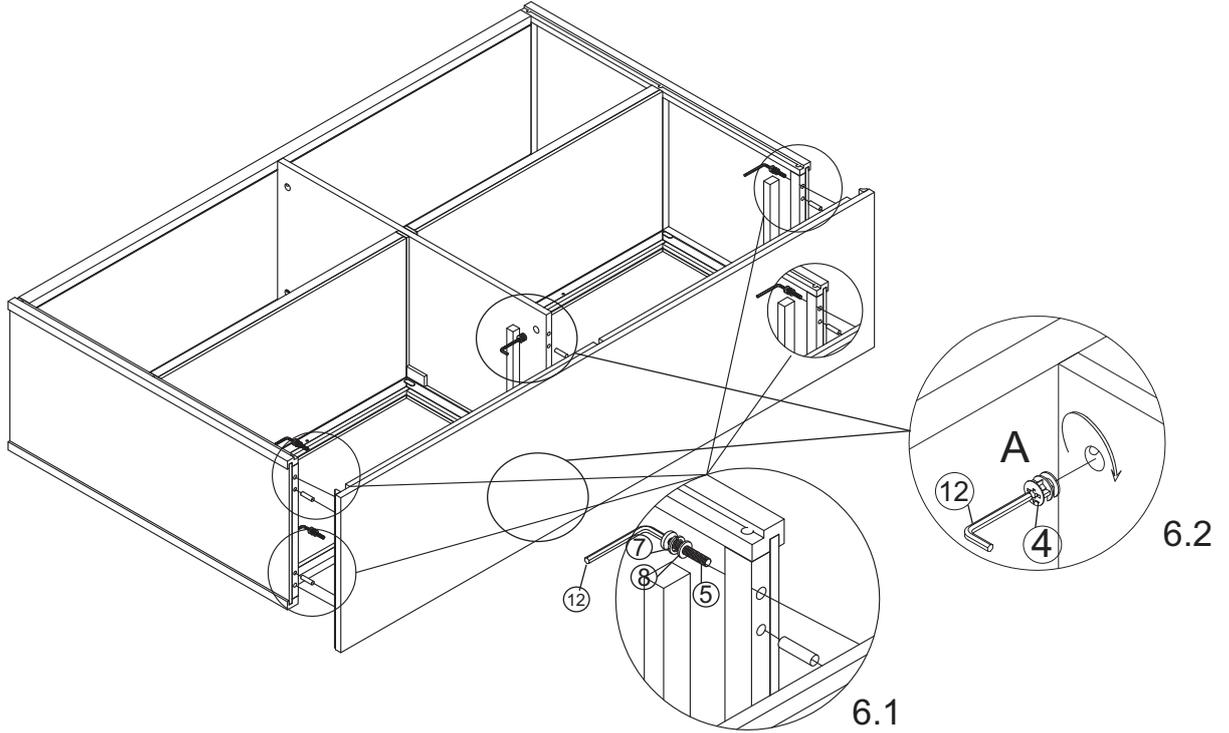

6.1, Attach the Top (A) onto the Right Panel (C) and Left Panel (D) and Middle Panel (E) aligning them with the wooden 8×30 (2). Affix the Top (A) to side Panel (C&D) by using the Bolt (5), Spring Washer (7), Flat washer (8) and Allen Wench (12)

6.2. Affix the Top (A) to Middle Panel (E) by using the Allen Wrench (12) and Cam locks (4).

Step 7

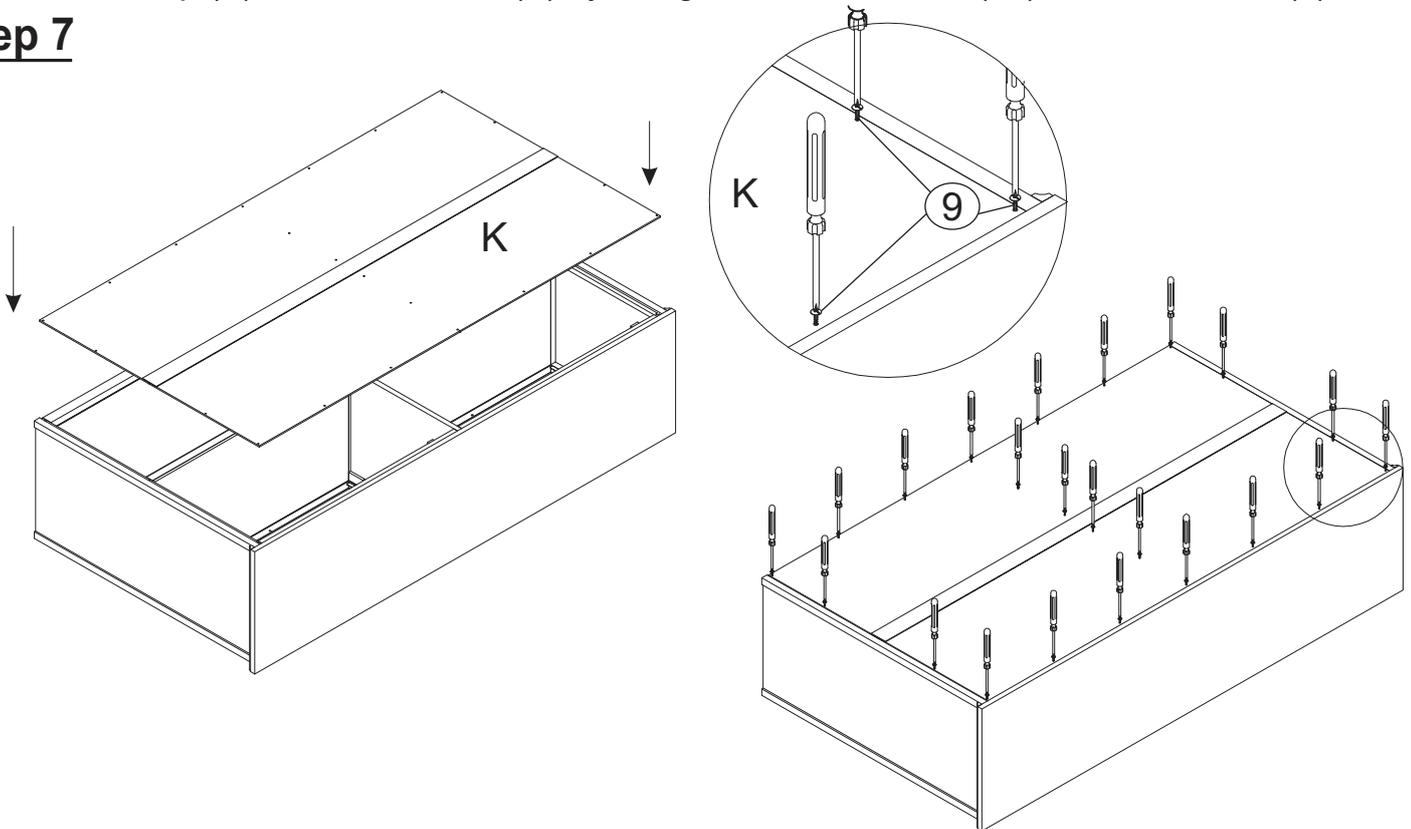


Use the Screwdriver (13) and Mushroom screw (9) to assemble The Back Panel (K) onto Sideboard

ASSEMBLY INSTRUCTION


ITEM NO. N758P412506

Step 8

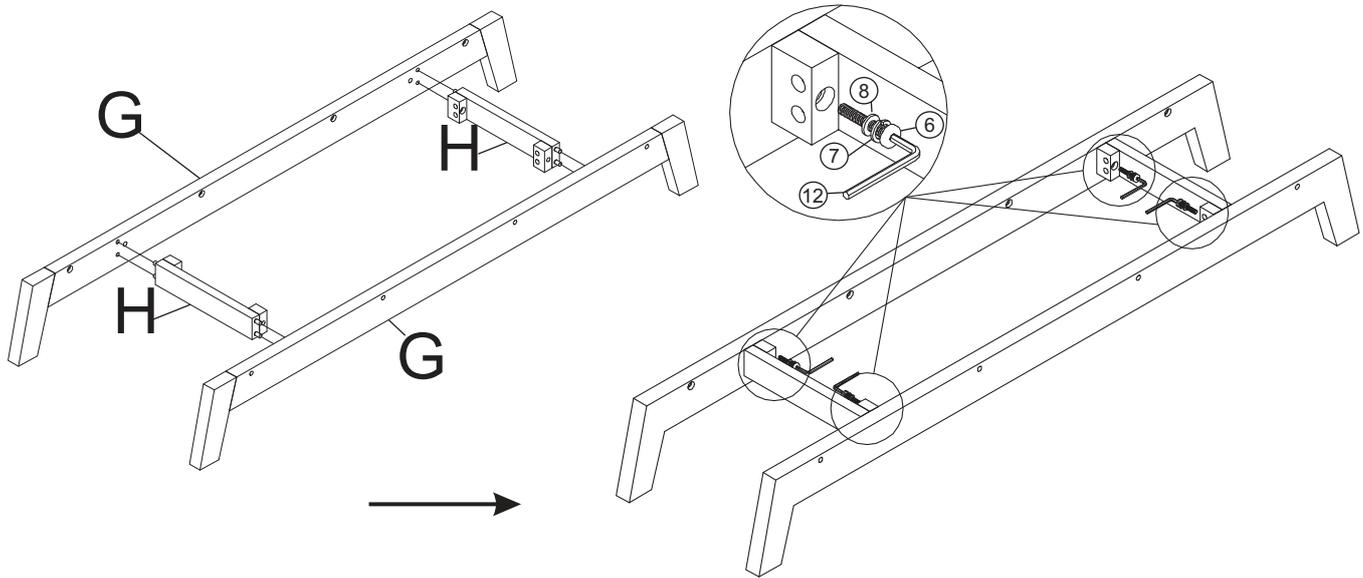

Next, Attach the Cross Bar (H) onto the Legs (G) by using the Bolt (6), Spring Washer (7), Flat Washer (8) and Allen Wrench (12) **At this step, DO NOT tighten the Bolt.**


Step 9

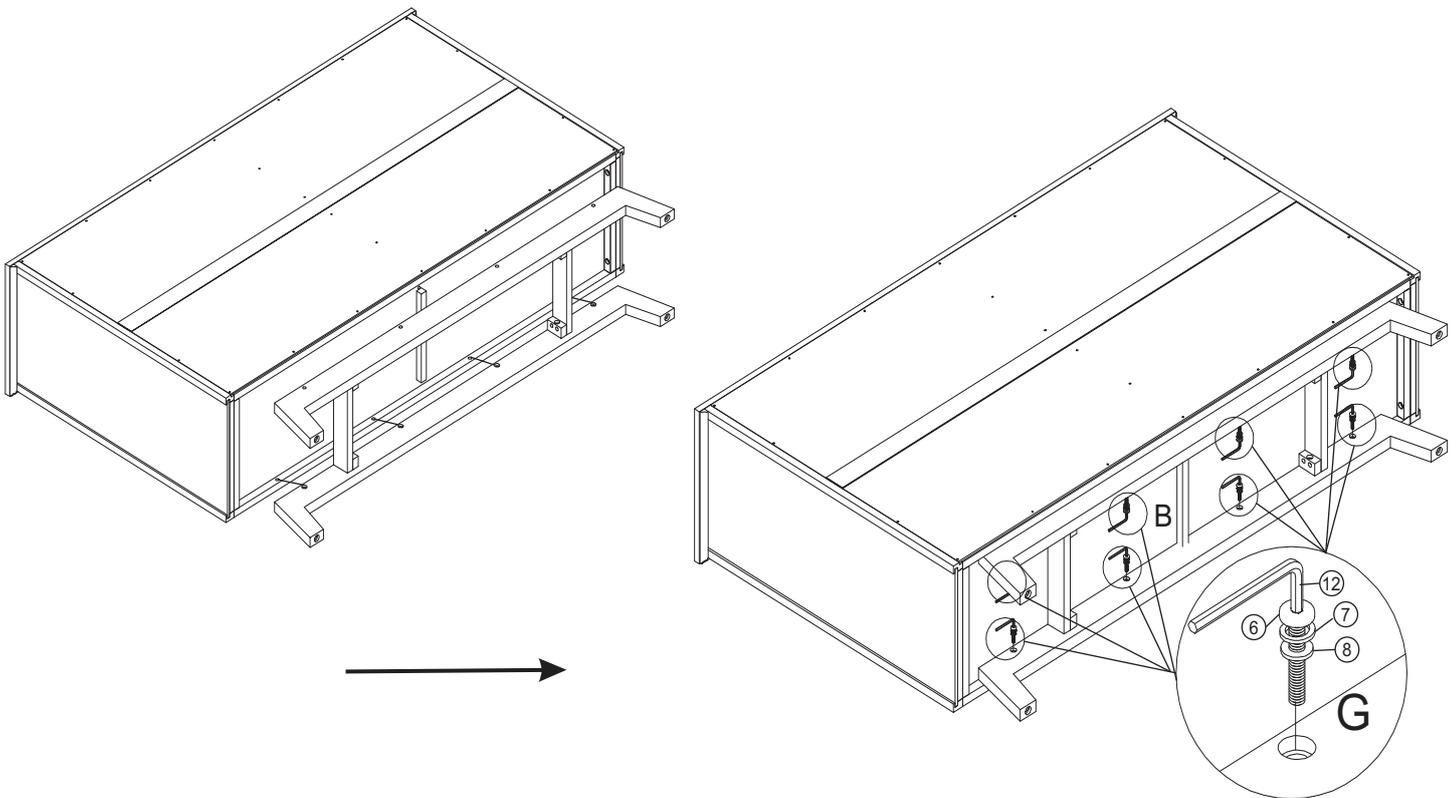

Next, Attach the Leg frame (H+G) assembled in Step 7 into the bottom panel frame (B). by using the Bolt (6), Spring Washer (7), Flat Washer (8) and Allen Wrench (12) **At this step, fully tighten the Bolt.**

ASSEMBLY INSTRUCTION
ITEM NO. **N758P412506**


Step 10

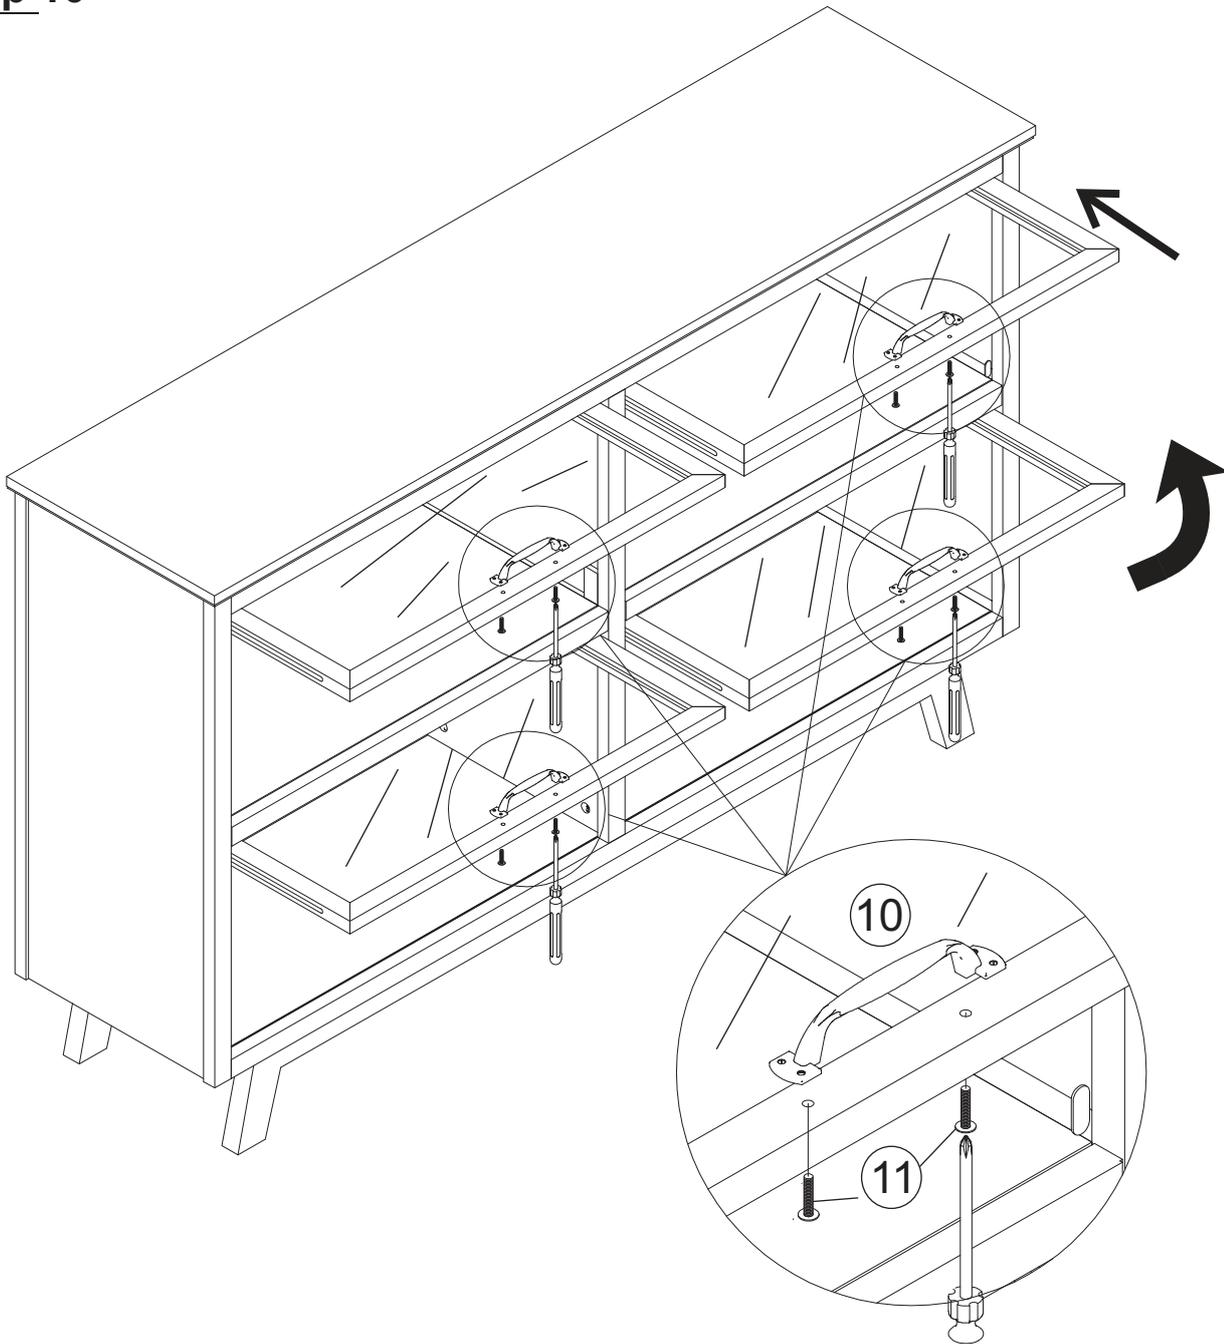

Carefully rotate the unit so that the top side is facing upward with the assistance of two adults. swing the doors (I and J) outward and push them inward into the cabinet. Attach the Handle (10) to Doors by using Bolt (11) with Screwdriver.

ASSEMBLY INSTRUCTION
ITEM NO. **N758P412506**



Step 11

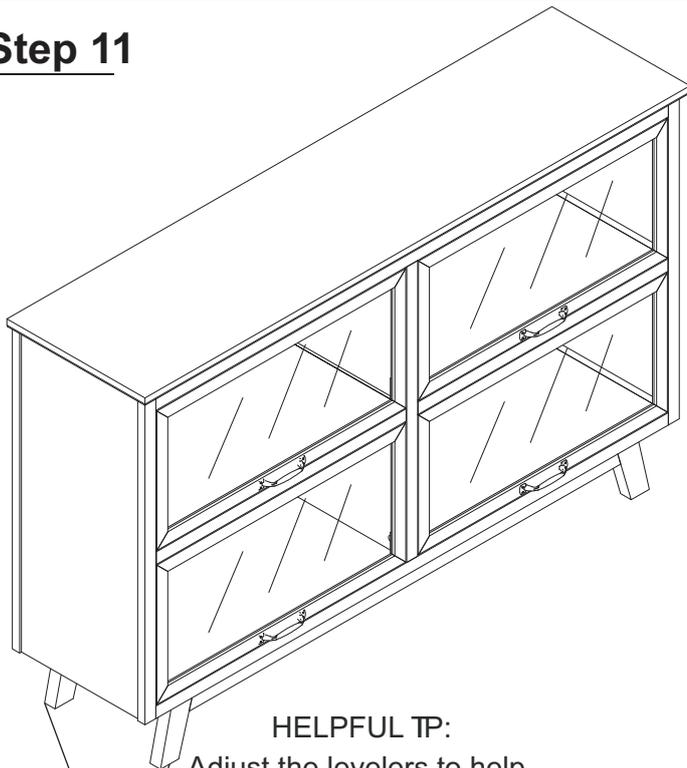

Close the Door

HELPFUL TP:

Adjust the levelers to help
balance the Sideboard, if need be.

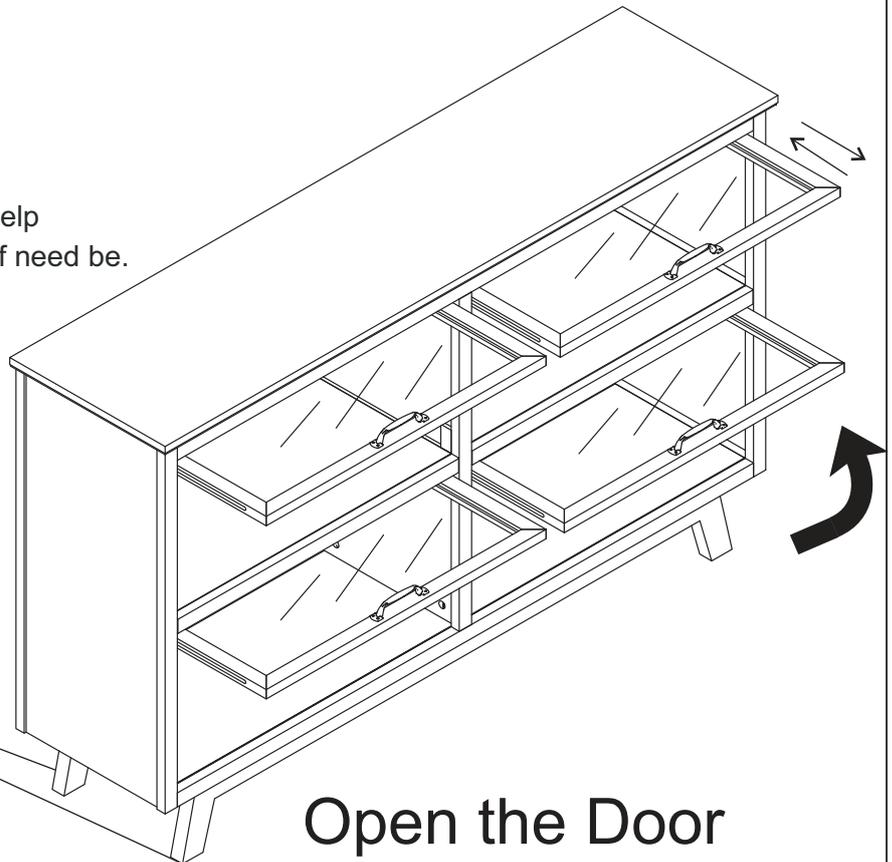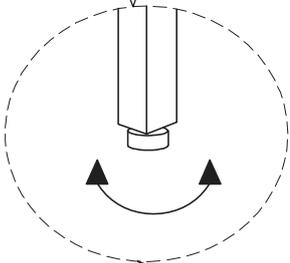

Open the Door

Exert pressure floorwards onto the Table top of Sideboard with both your hands. This pressure will help the Legs and Table Top reach full alignment status. Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts and screws in a sequential manner until evenly secured.

Your Sideboard is ready for use,

This Sideboard can only be used on the flat, level surface




ASSEMBLY INSTRUCTION

ITEM NO N758P412506

Step 12

14: ANTI-PARKING KIT

14.1	14.2	14.3	14.4	14.5
				
2 pcs	4 pcs	M4x40mm 2 pcs	M4x15mm 2 pcs	2 pcs

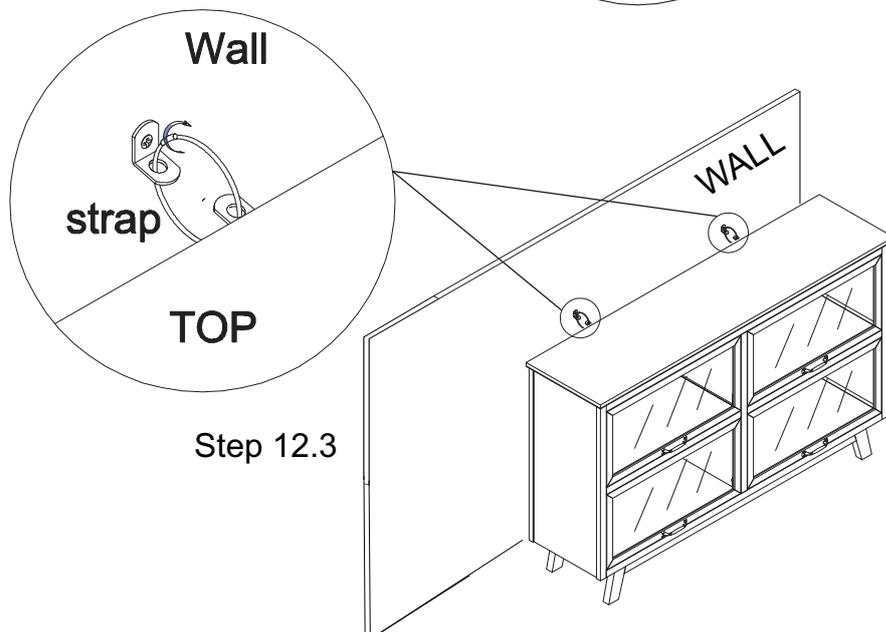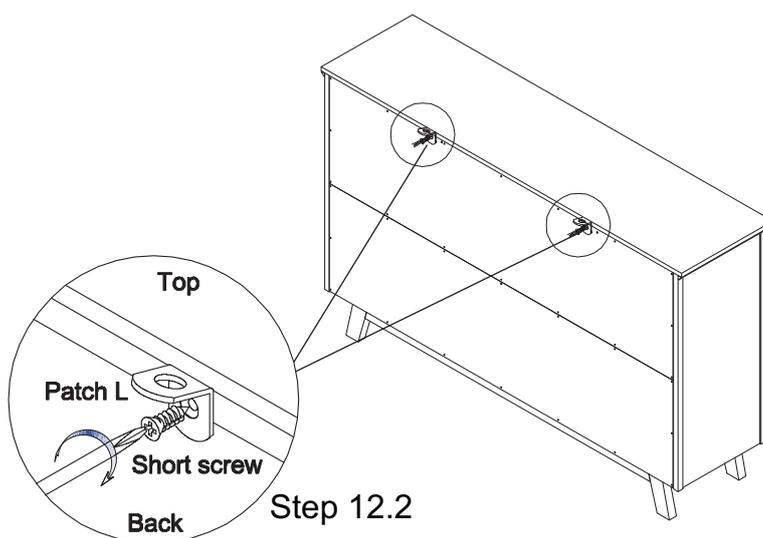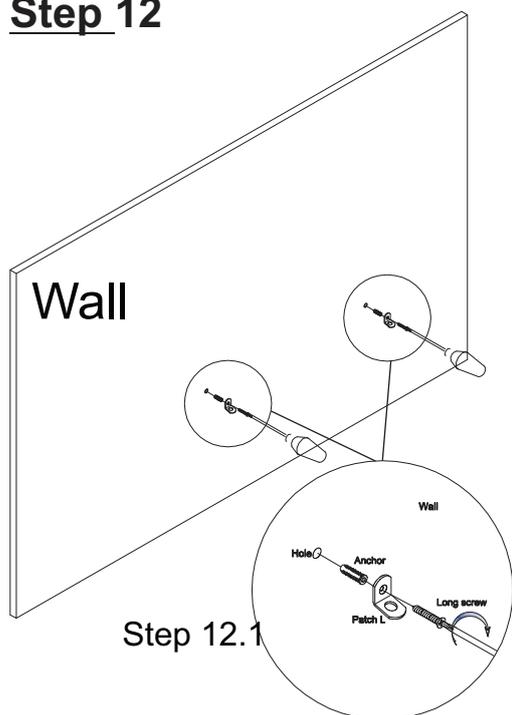

12.1: Find the location of the screw holes on the wall. Move the Sideboard back to the wall. Mark two points the same height as the Sideboard on the wall.

NOTE: The metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder (not provided) if needed to locate the Wall Frame. Insert the Plastic Anchors (14.1) into the wall and attach Metal Brackets (14.2) to Plastic Anchors (14.1) using long screw (14.3) with Screwdriver.

12.2: Attach the Metal Brackets (14.2) to the Sideboard using the short screw (14.4) with Screwdriver.

12.3: Thread the Strap (14.5) through the 2pcs Metal Brackets (14.2) to secure the Sideboard to the wall.

CAUTION: Restraint Strap (14.5) between the product and Metal Brackets (14.2) on the wall should be within 3.5"