



Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

	● Not for commercial use. For residential use only.
	● Do not put hot items directly on furniture surface.
	● Do not clean furniture with harsh cleansers or polish.
	● Do not place furniture under direct sunlight.
	● Do not place furniture near heating or cooling vents.
	● Do not write on furniture without a padded barrier to protect the surface.
	● Do not place furniture outside . For indoor use only.
	● Stains may be removed with mild soap solution and damp cloth.
	● Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in Corner carton for hardware packs and Legs.

Assembly Instructions

Please look in the Bottom Box for Hardware packs and Legs

CABINET WITH SHELF

Item No: N758P404669










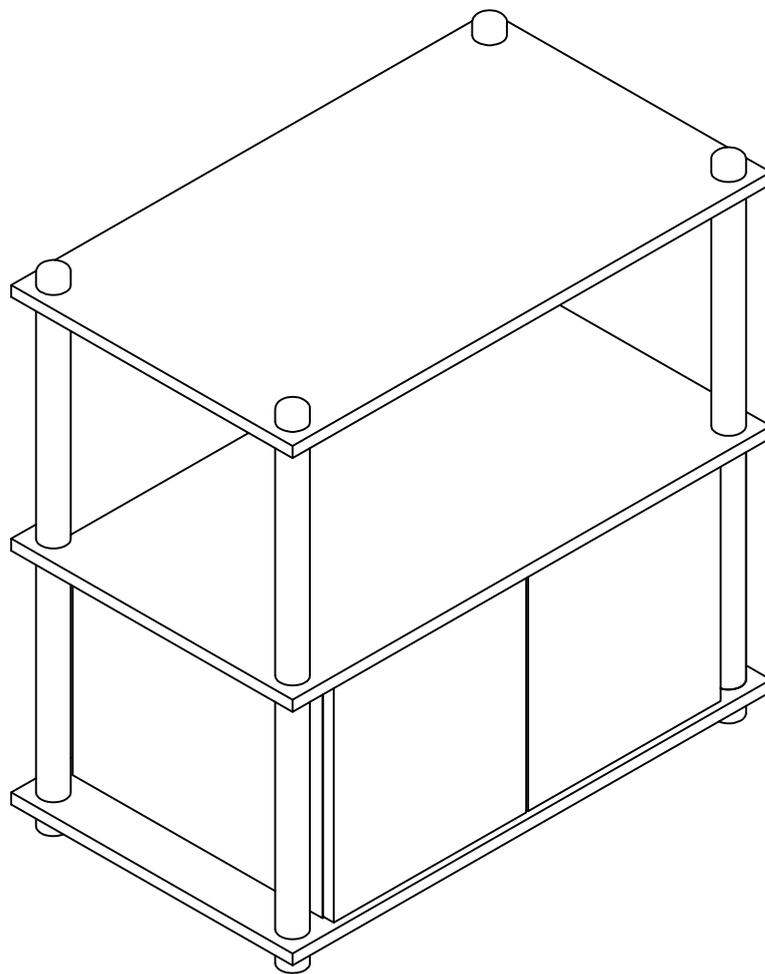


Caution: This cabinet is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Cabinet and to prevent damage to the cabinet, two adults may be needed to execute these actions.

ASSEMBLY INSTRUCTION

ITEM NO. N758P404669





Parts List

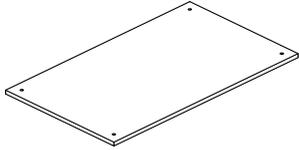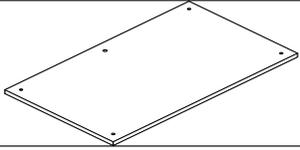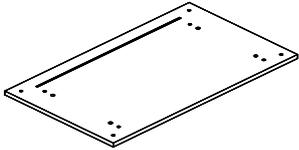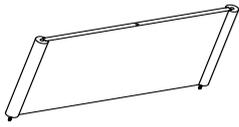Label	Picture	Description	QTY
A		Top	1
B		Shelf	1
C		Bottom	1
D		Back partition	1
E		Back Panel	1
F		Right Panel	1
G		Left Panel	1
H		Right Door	1
I		Left Door	1
J		Legs	6
K		Base leg	4
L		Leg cap	4

ASSEMBLY INSTRUCTION


ITEM NO. N758P404669

Hardware

Label	Picture	Description	QTY
①		Magnetic Push Latch	2
②		Flat Screw 3 x 15	33
③		Wooden Dowel 8 x 30	9
④		Cam Bolt 6 x 28	11
⑤		Cam Lock 10 x 15	11
⑥		Hingle	4
⑦		Allen Wrench (K4 x 80)	1
⑧		Screwdriver	NOT PROVIDED
⑨		Anti tip Kit	2 set
⑨.1		Plastic Anchor	2
⑨.2		Metal Bracket	4
⑨.3		Long Screw 4 x 40	2
⑨.4		Short Screw 4 x 15	2
⑨.5		Steel Wire	2

Assembly Preparation


Before Beginning Assembly:

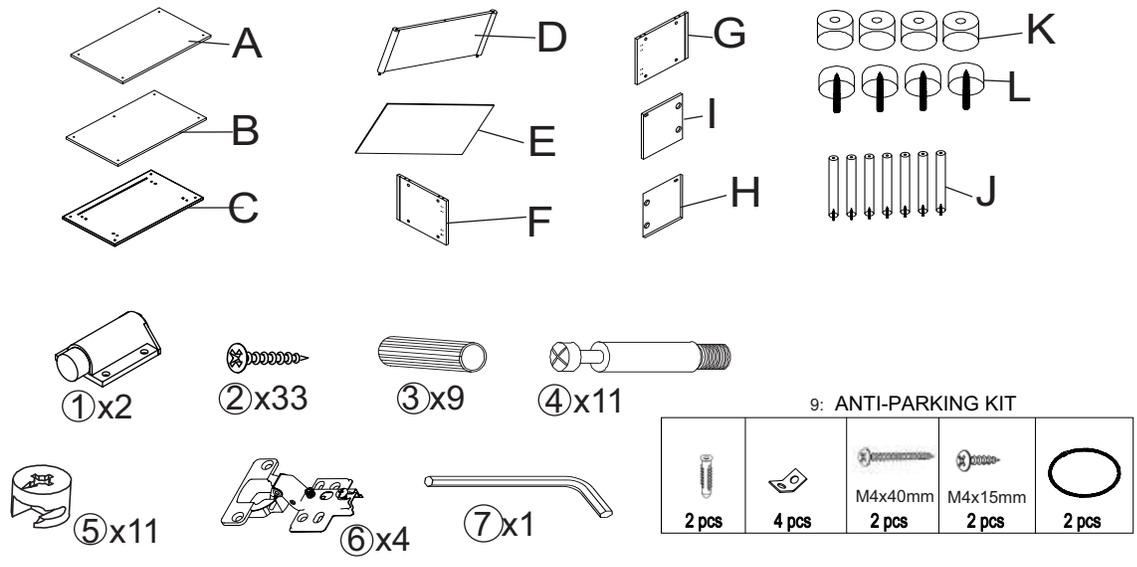

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps

Overview

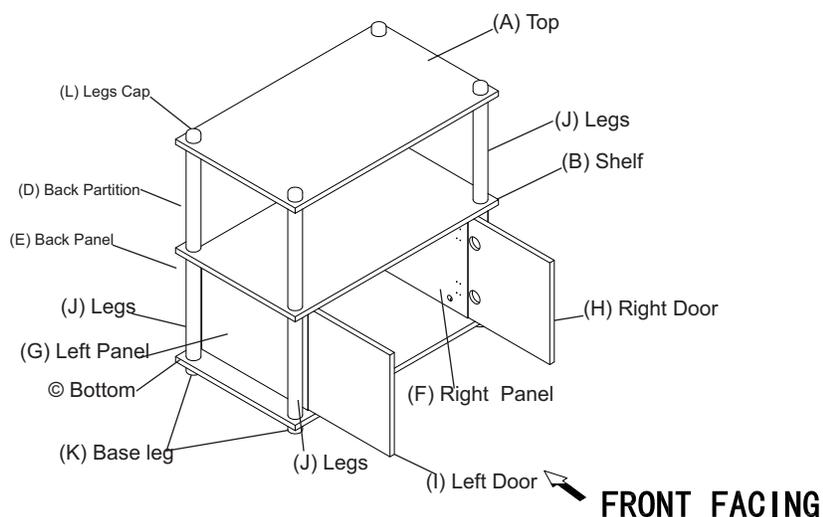


This Cabinet has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION

ITEM NO. N758P404669

Step 1

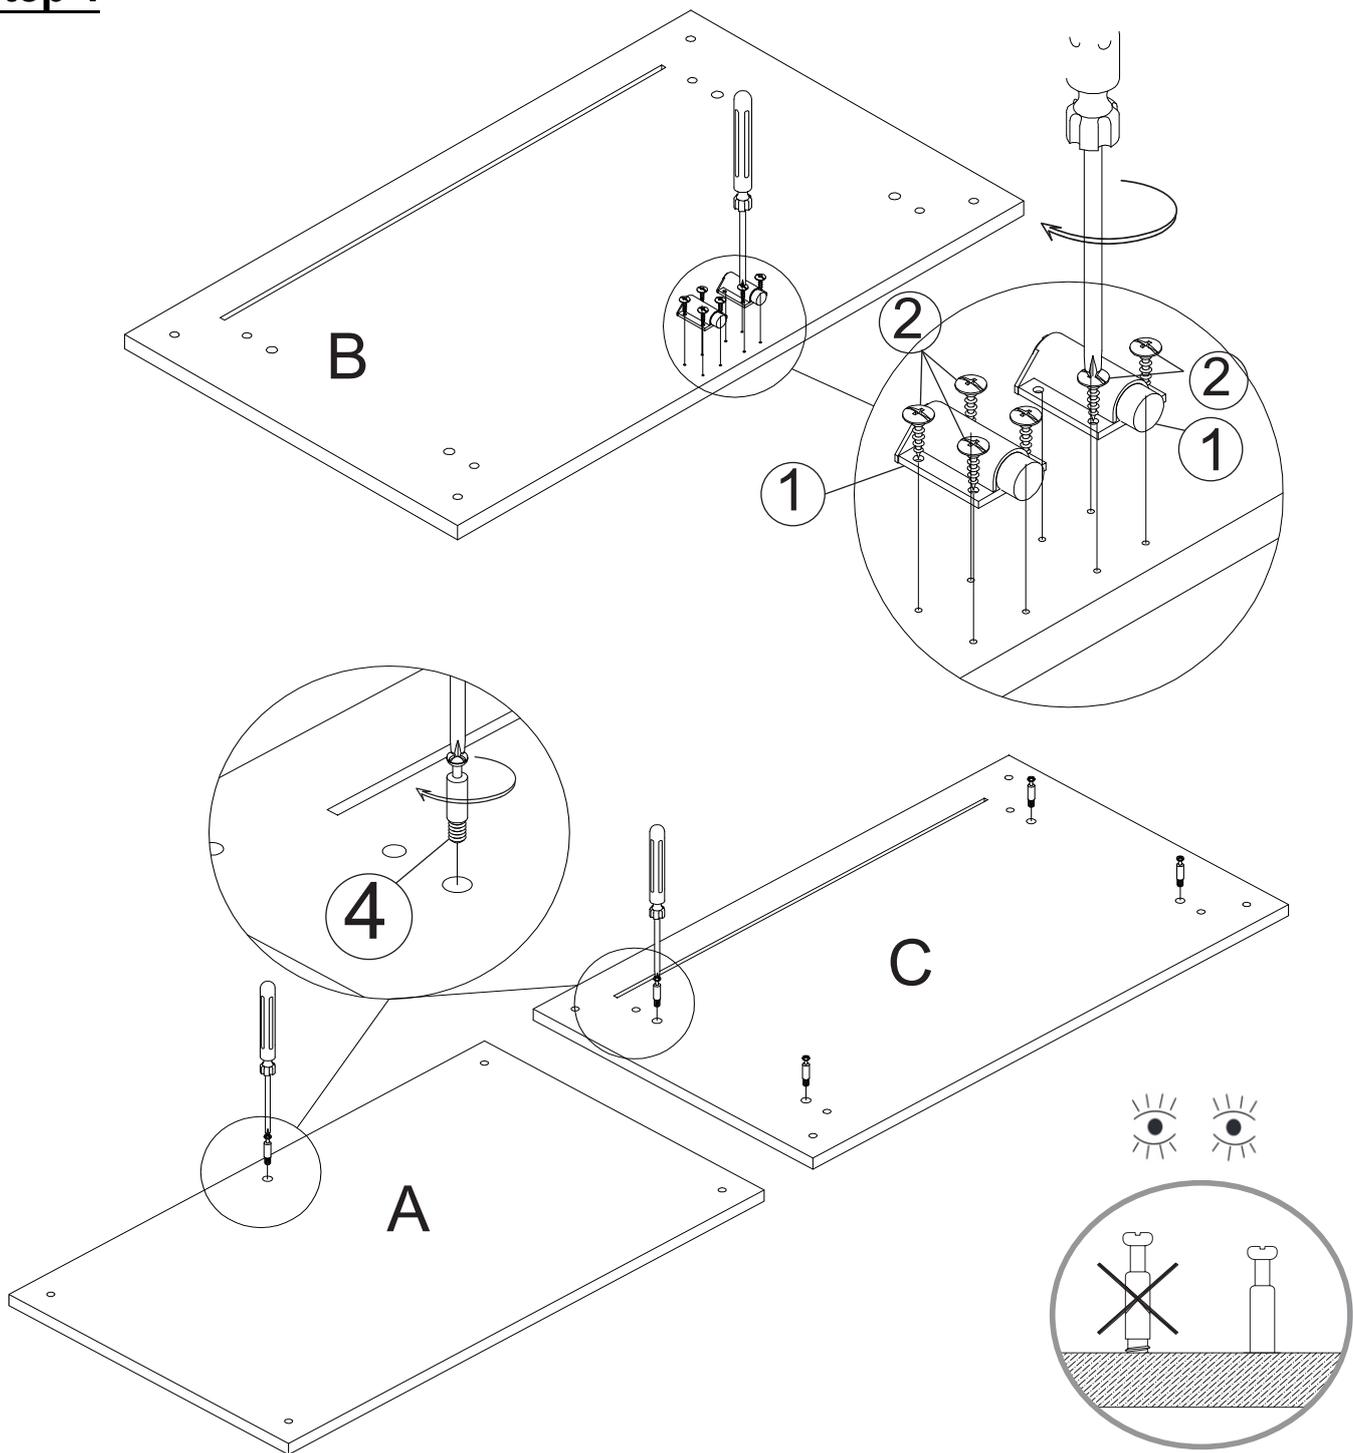

Unpack and place all parts on clean, non - marring surface.

First, use the screwdriver and flat screw (2) to fasten the Magnetic Push Latch (1) to the underside of panel (B).


Next, use a screwdriver to secure the cam bolts (4) into the bottom panel (C) and the underside of the top panel (A).”

At this step, fully tighten the Bolt.

ASSEMBLY INSTRUCTION


ITEM NO. N758P404669

Step 2

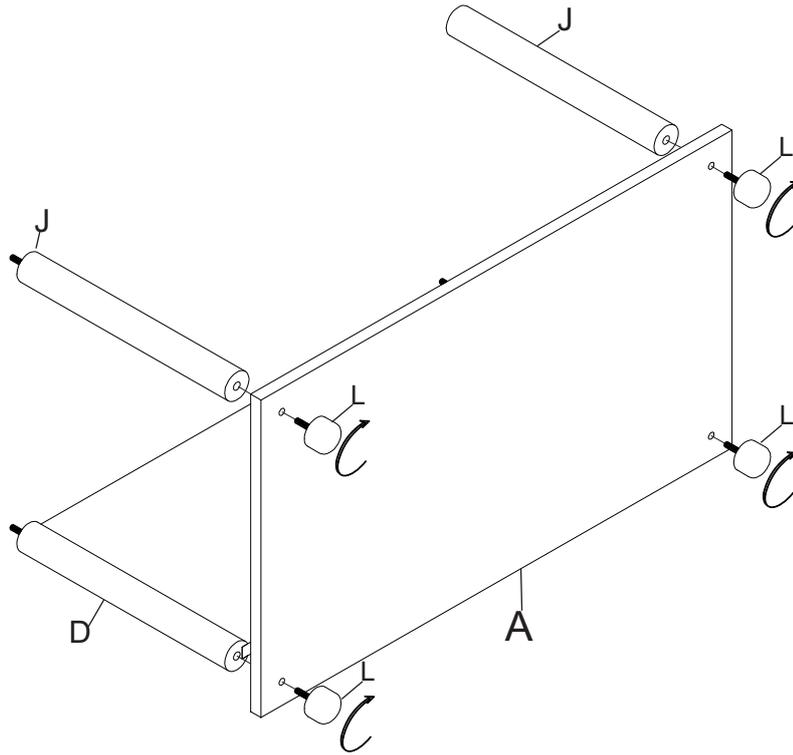

Next, Screw the leg caps (L) into the mounting position on the Top (A) to assemble the legs (J), also Screw the leg caps (L) into the mounting position on the Top (A) to assemble the back partition (D) as shown above. Secure them firmly by hand.

Step 3

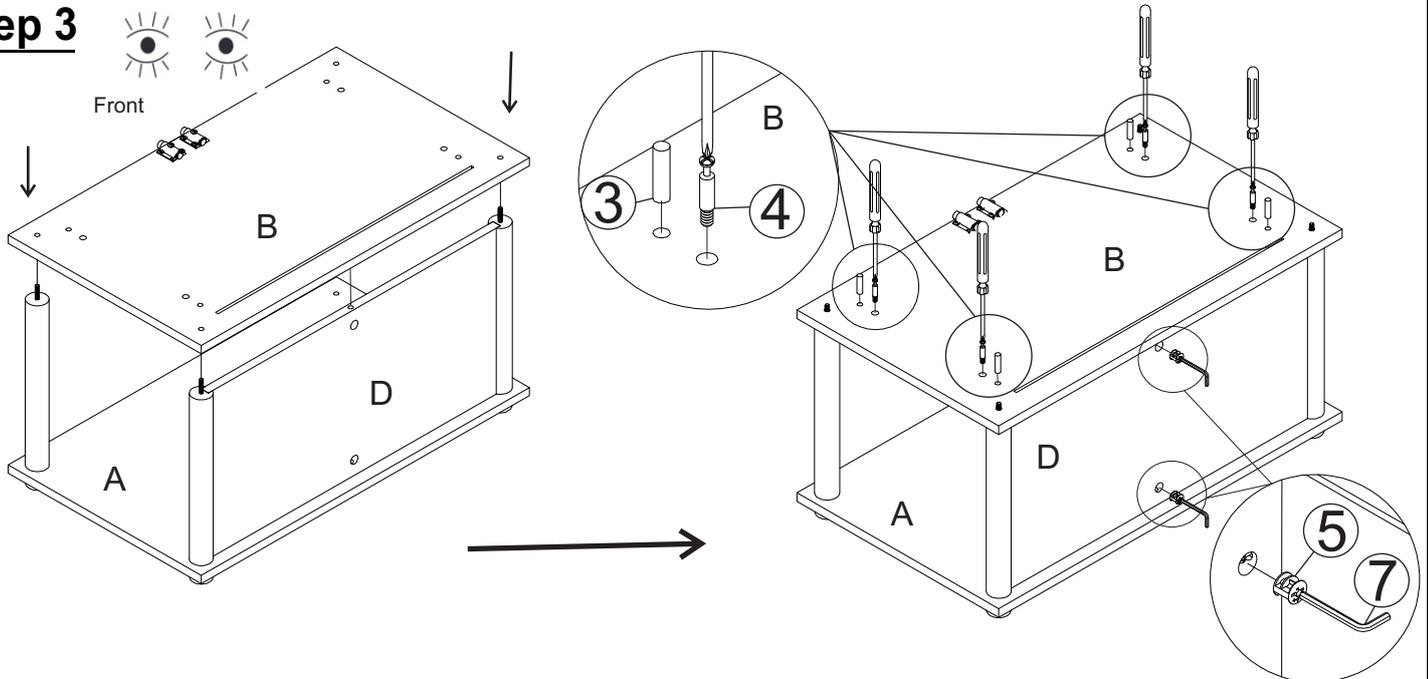


Attach the Shelf (B) to the Legs (J) and rear legs of the back partition (D). Make sure the Magnetic Push Latch is always facing forward. Use the Allen Wrench (7) and cam locks (5) to connect the Top Panel (A), the Shelf (B) and the Back Partition (D) together.

Then, use a screwdriver to assemble the cam bolts (4) and wooden dowels (3) onto the shelf (B). **At this step, fully tighten the Bolt.**

ASSEMBLY INSTRUCTION


ITEM NO. N758P404669

Step 4

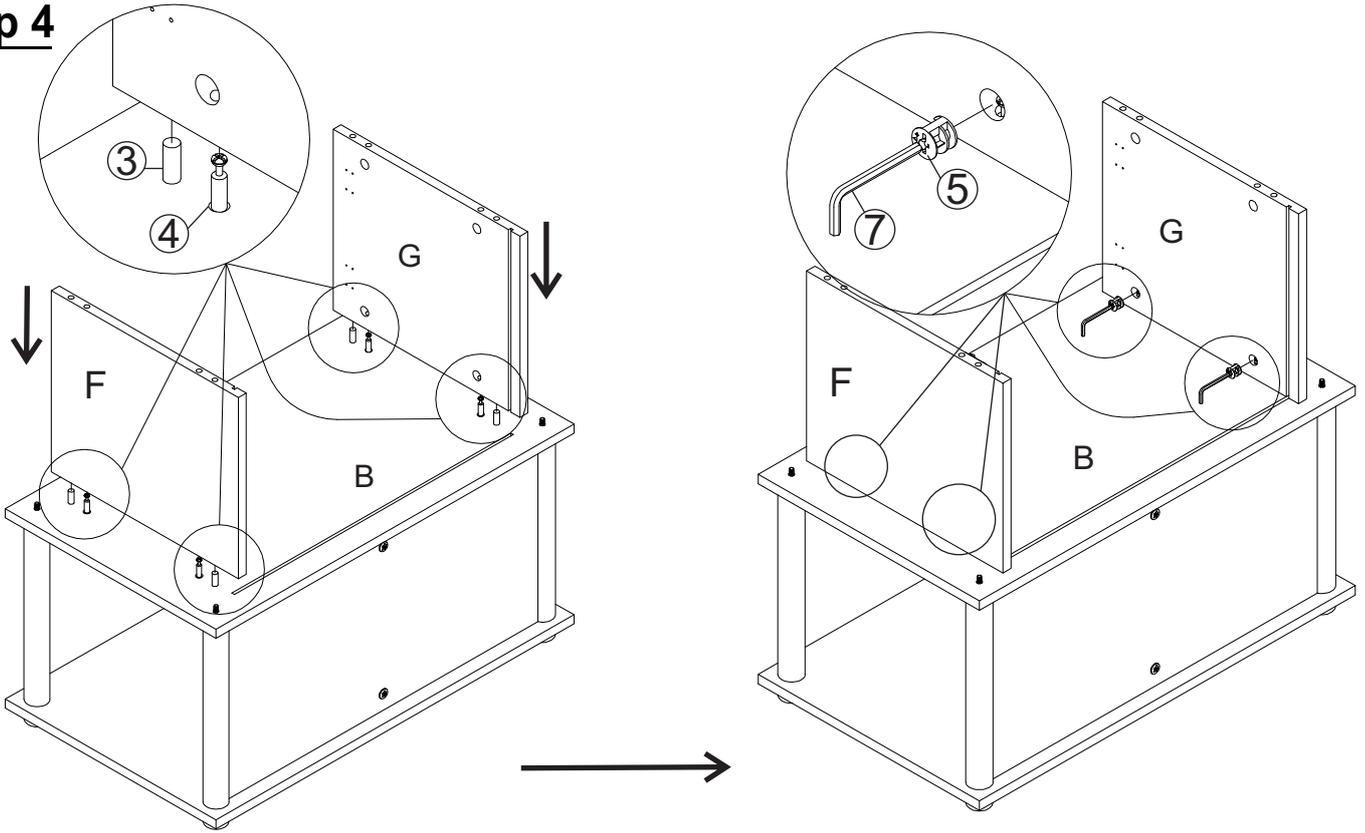

Next, Attach the Left (G) and Right panel (F) onto the Shelf panel (B), aligning it with the wooden dowels $8 \times 30(3)$. Then, use the Allen Wrench (7) and Cam locks (5) to secure it in place.

Step 5

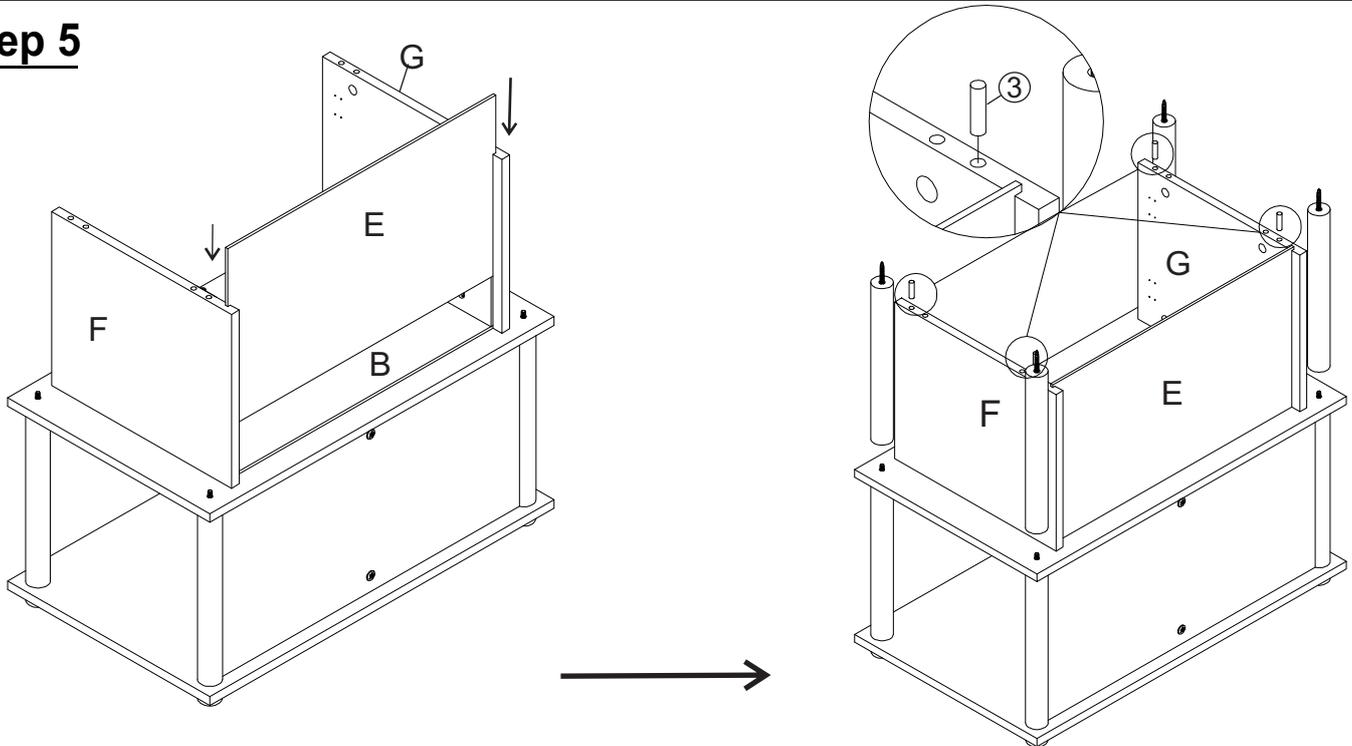


5.1: Slide the back panel (E) between the left panel (G) and the right panel (F). Gently push it by hand until it fits into the groove on the shelf panel (B)

5.2: Insert the Wooden dowels 8×30 (3) onto the Left Panel(G) and Right panel (F) as shown above.

ASSEMBLY INSTRUCTION

ITEM NO. N758P404669


Step 6

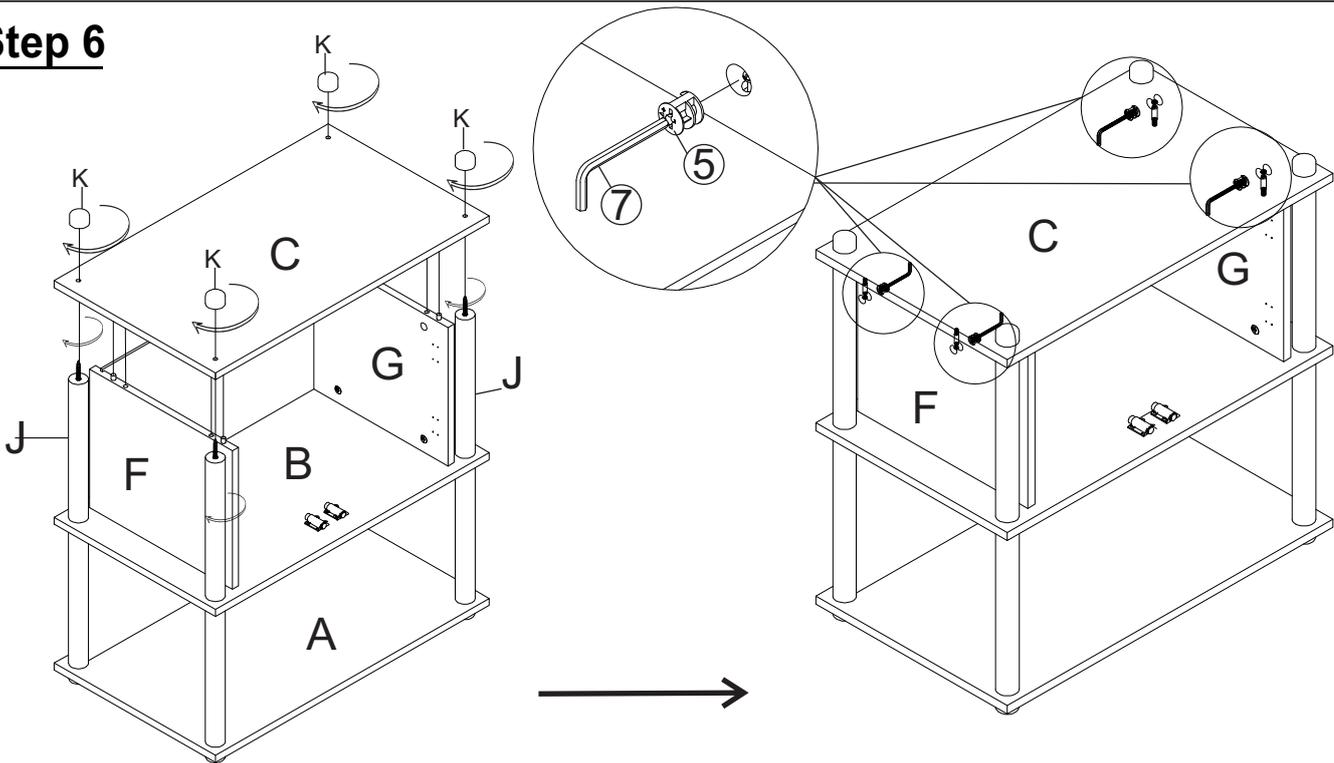

6.1: Attach the Legs (J) to 4 corners of the shelf panel (B). Align the mounting position of Bottom (C), Legs (J) and side panels (G&F), screw the Base Legs (K) to the bolt on Leg (J) to connect the Bottom (C) to Legs (J) and side panels (G&F) by hand.

6.2: Secure the Bottom C onto the Left panel (G) and Right panel (F) by using Cam lock (5) with Allen Wrench (7).

Step 7

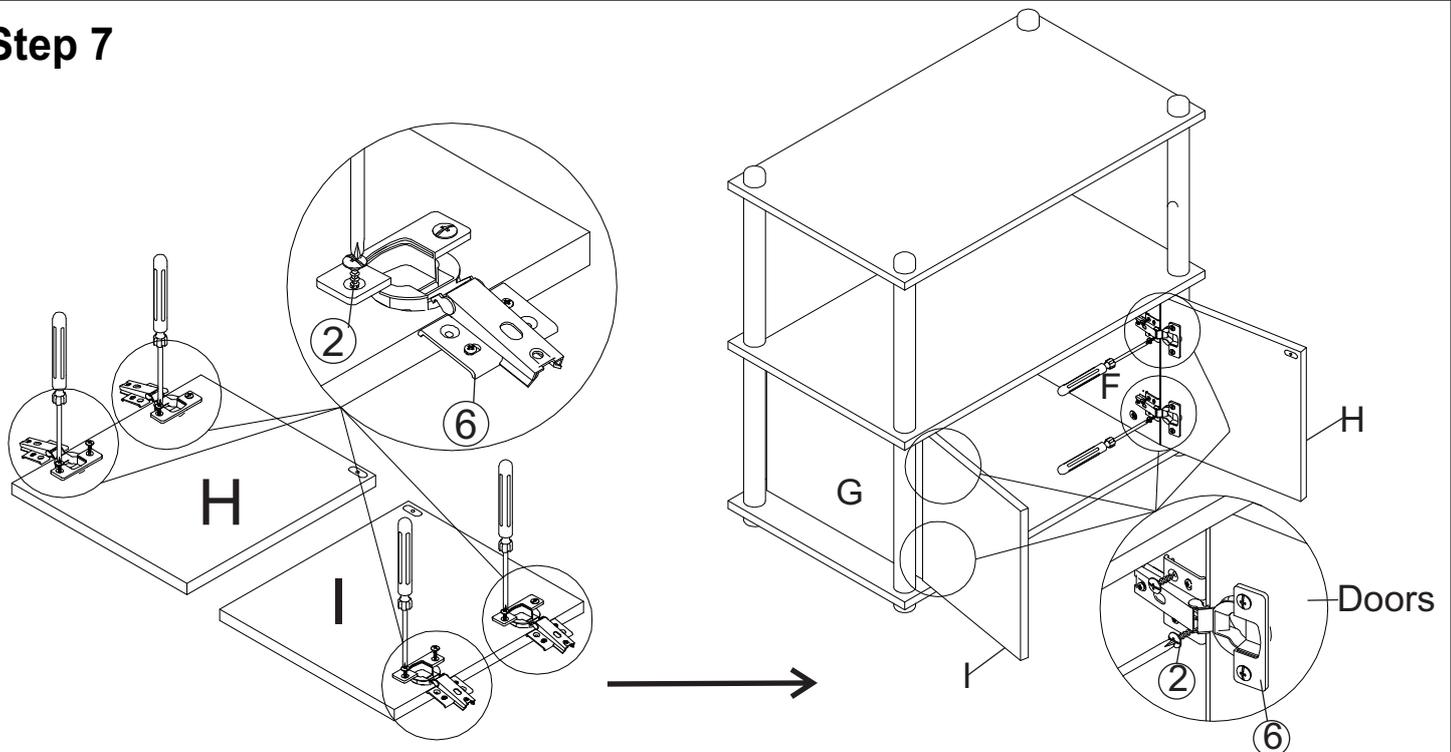


Now, Carefully rotate the unit so that it's facing up

Next, Using the Screw driver and Flat screw (2) to assemble the Hinge (6) onto the Doors (H,I)
Then, Using the Screw driver and Flat screw (2) to assemble the Right Doors (H) onto Right Side (F) and Left Door (I) onto the Left Side (G)


ASSEMBLY INSTRUCTION
ITEM NO. N758P404669

Step 8

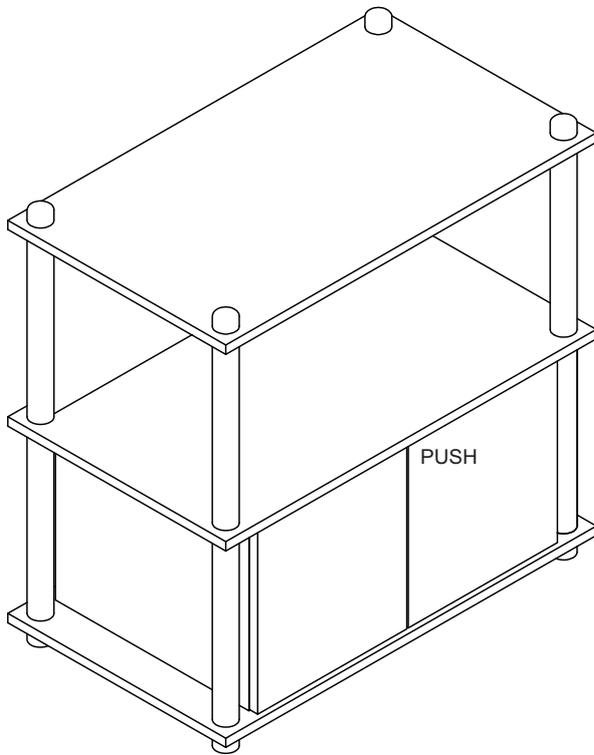

Please push the door with your hand to open it.

Close the Door

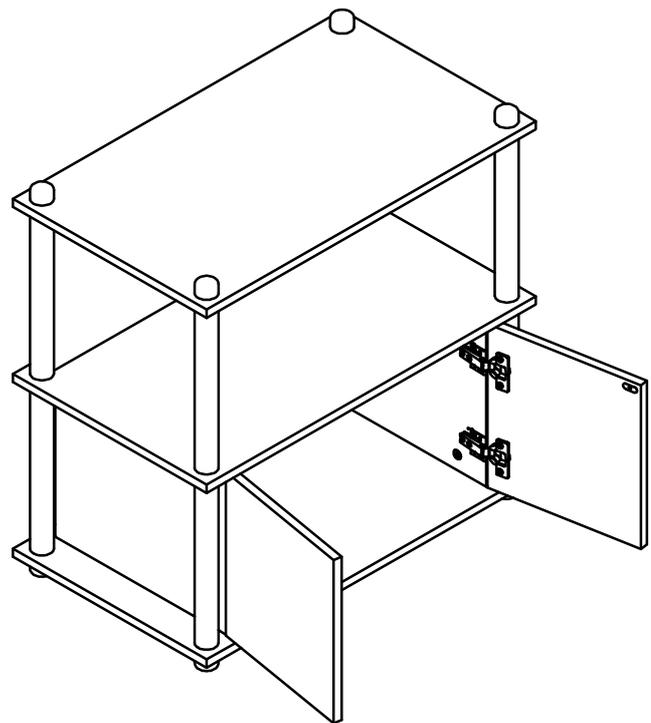

Opent the Door

Exert pressure floorwards onto the Table top of Cabinet with both your hands. This pressure will help the Legs and Table Top reach full alignment status. Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts and screws in a sequential manner until evenly secured.

Your Cabinet is ready for use,


This Cabinet can only be used on the flat, level surface




ASSEMBLY INSTRUCTION

ITEM NO. N758P404669

Step 9

9: ANTI-PARKING KIT

9.1  2 pcs	9.2  4 pcs	9.3  M4x40mm 2 pcs	9.4  M4x15mm 2 pcs	9.5  2 pcs
---	--	--	--	---

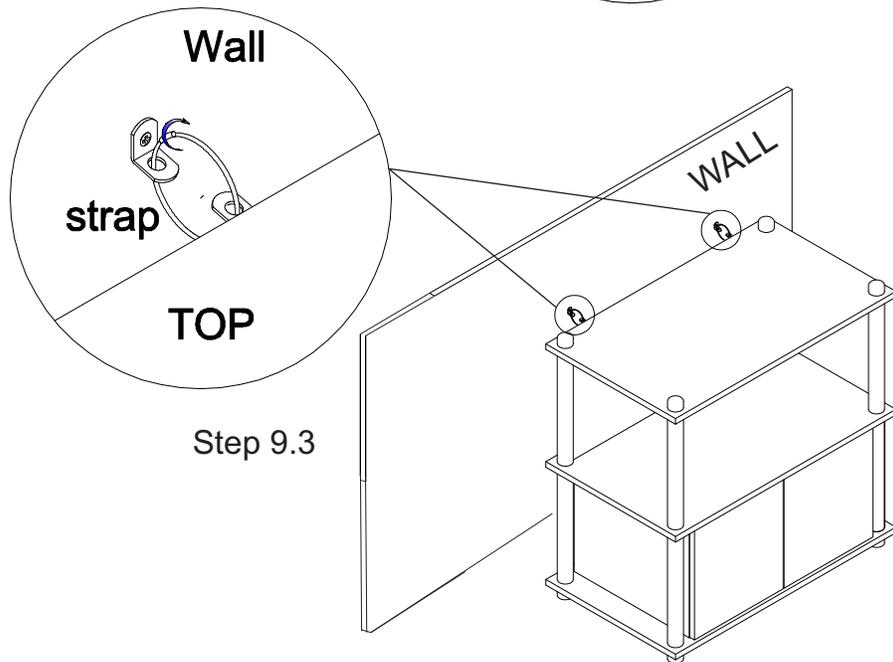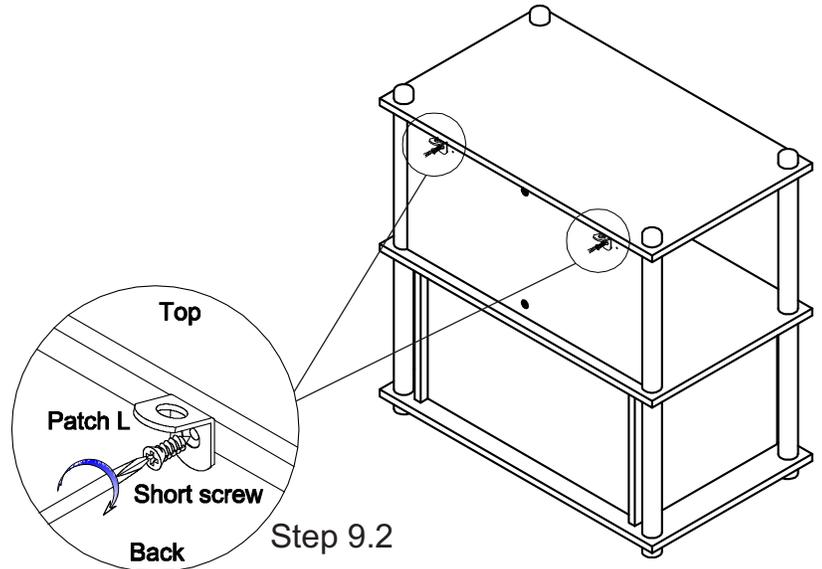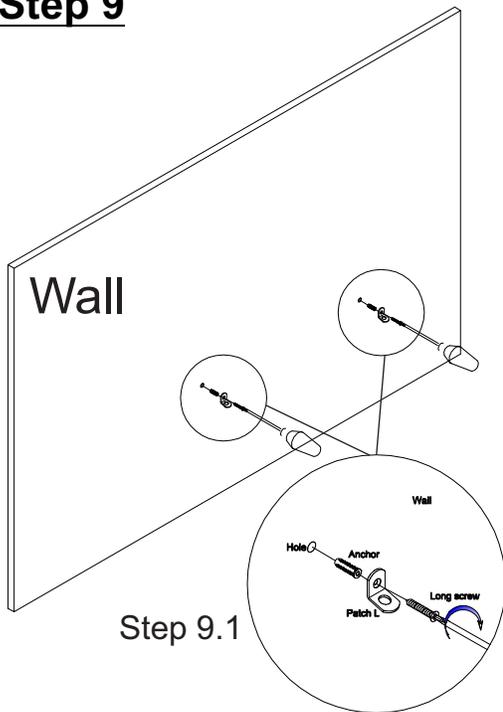

9.1: Find the location of the screw holes on the wall. Move the cabinet back to the wall. Mark one points the same height as the cabinet on the wall.

NOTE: The metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder (not provided) if needed to locate the Wall Frame. Insert the Plastic Anchors (9.1) into the wall and attach Metal Brackets (9.2) to Plastic Anchors (9.1) using long screw (9.3) with Screwdriver.

9.2: Attach the Metal Brackets (9.2) to the Cabinet using the short screw (9.4) with Screwdriver.

9.3: Thread the Strap (9.5) through the 2pcs Metal Brackets (9.2) to secure the Cabinet to the wall.

CAUTION: Restraint Strap (9.5) between the product and Metal Brackets (9.2) on the wall should be within 3.5"