



Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

	<ul style="list-style-type: none">• Not for commercial use. For residential use only.
	<ul style="list-style-type: none">• Do not put hot items directly on furniture surface.
	<ul style="list-style-type: none">• Do not clean furniture with harsh cleansers or polish.
	<ul style="list-style-type: none">• Do not place furniture under direct sunlight.
	<ul style="list-style-type: none">• Do not place furniture near heating or cooling vents.
	<ul style="list-style-type: none">• Do not write on furniture without a padded barrier to protect the surface.
	<ul style="list-style-type: none">• Do not place furniture outside . For indoor use only.
	<ul style="list-style-type: none">• Stains may be removed with mild soap solution and damp cloth.
	<ul style="list-style-type: none">• Children should not climb or jump on the furniture.
	<ul style="list-style-type: none">• Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in Bottom carton for hardware packs and Legs.

Assembly Instructions

Please look in the Bottom Box for Hardware packs and Legs

NIGHTSTAND/CABINET

Item No: N758P386959


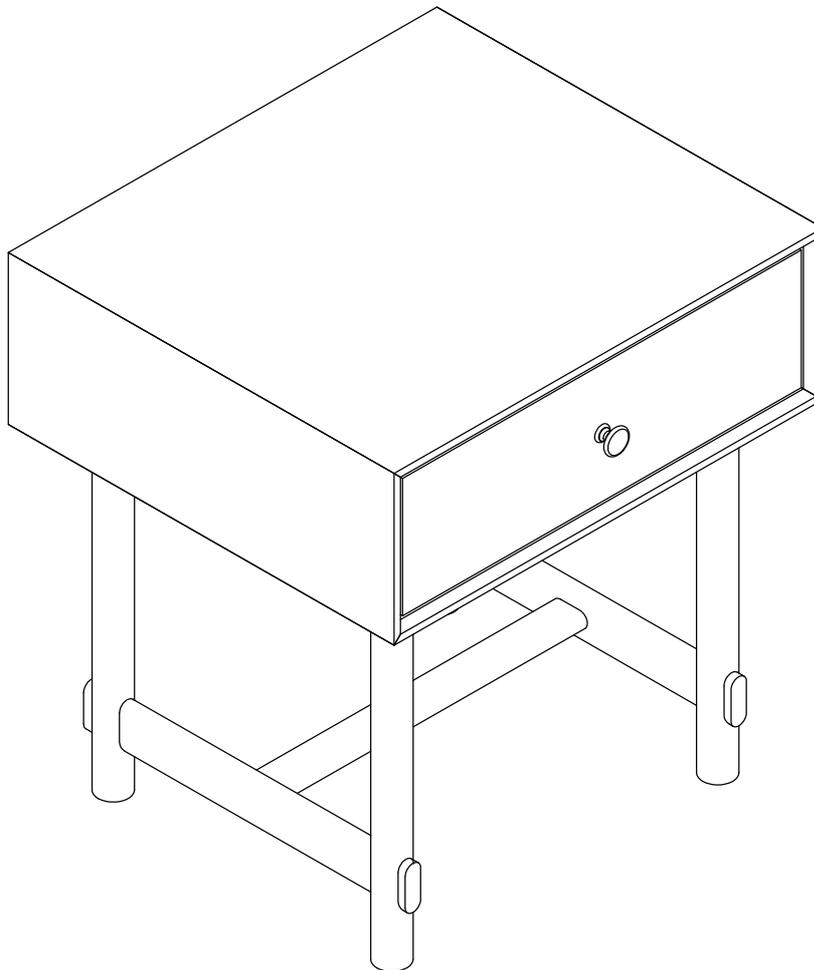


Caution: This cabinet is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Cabinet and to prevent damage to the cabinet, two adults may be needed to execute these actions.



ASSEMBLY INSTRUCTION

ITEM NO. N758P386959

Parts List

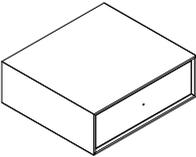
Label	Picture	Description	QTY
A		Top Frame	1
B		Legs	2
C		Stretcher	1

Hardware

Label	Picture	Description	QTY
①		Bolt (1/4" x 50mm)	3
②		Bolt (1/4" x 25mm)	5
③		Haft moon Nut 20 x 10	3
④		Spring Washer (φ6) x 13	5
⑤		Flat Washer (φ6) x 13	5
⑥		Allen Key (K4 x 80)	5
		SCREWDRIVER	NOT PROVIDED
⑦		Anti Tip Kit	1 set
⑦.1		Plastic Anchor	1
⑦.2		Metal Bracket	2
⑦.3		Long screw M4x40mm	1
⑦.4		Short screw M4x15mm	1
⑦.5		Strape	1

Assembly Preparation


Before Beginning Assembly:

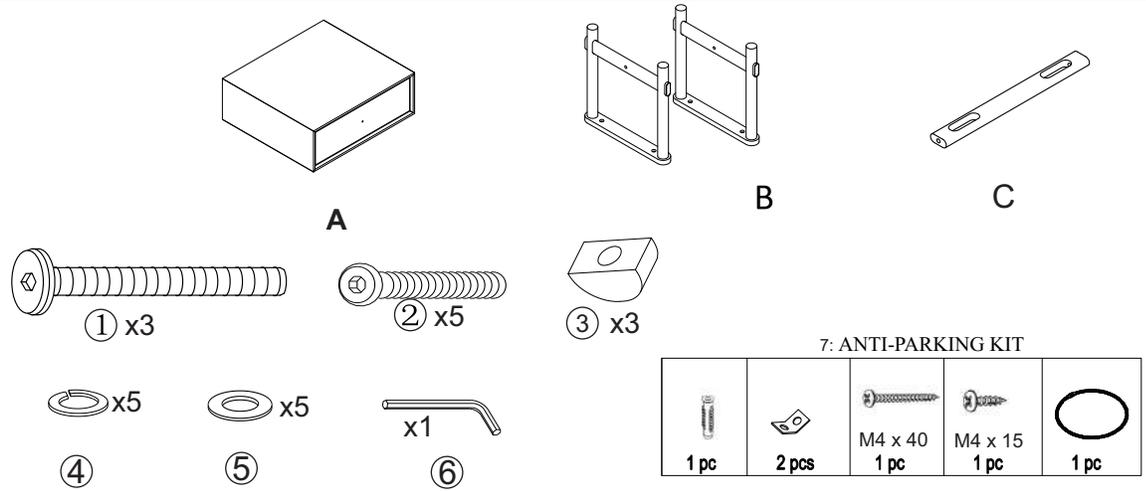

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps

Overview


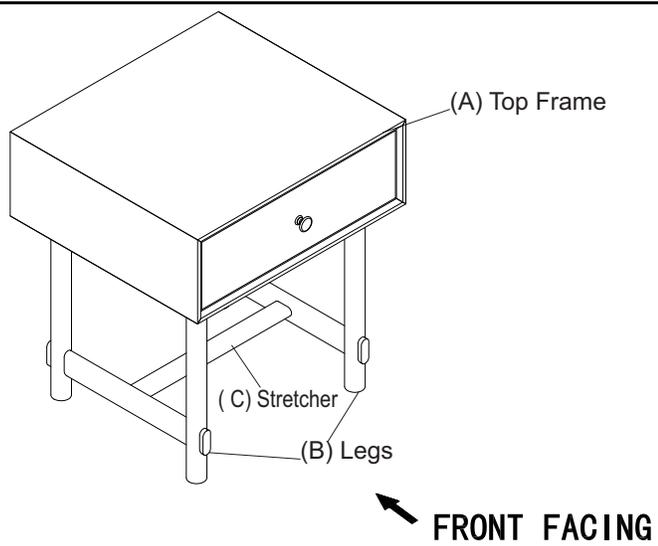


This Cabinet has multiple parts and may require up to some 20 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION

ITEM NO. N758P386959

Step 1

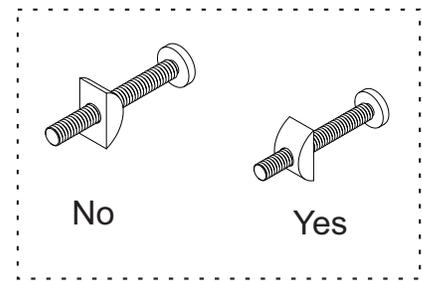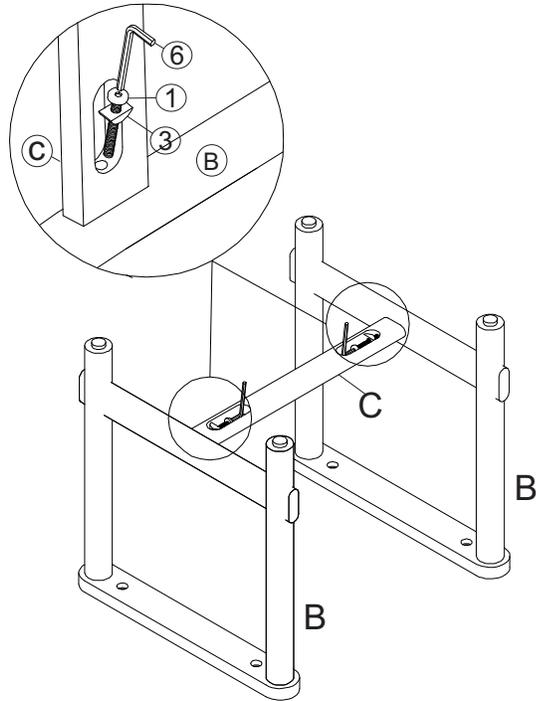


Unpack and place all parts on clean, non - marring surface.

Place the Legs (B) upside down as show above.

Attach the Stretcher (C) to the 2pcs Legs (B) by using Bolts (①), Haft moon nut (③) with Allen Wrench (⑥).

At this step, DO NOT fully tighten the Bolt.

Step 2

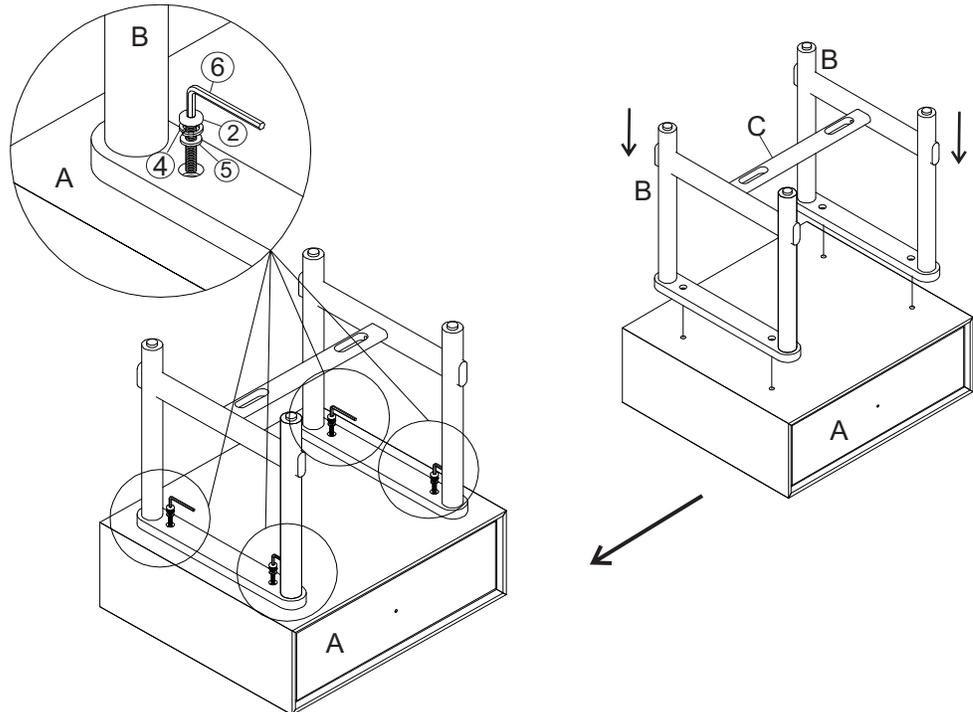


Place the Top frame (A) upside down as show above.

Attach the Stretcher (C) and 2pcs Legs (B) to the Top frame (A) by using Bolts (②), Spring Washer (④) and Flat Washer (⑤) with Allen Wrench (⑥). DO Not fully tighten the Bolt.

ASSEMBLY INSTRUCTION

ITEM NO. N758P386959


Step 3

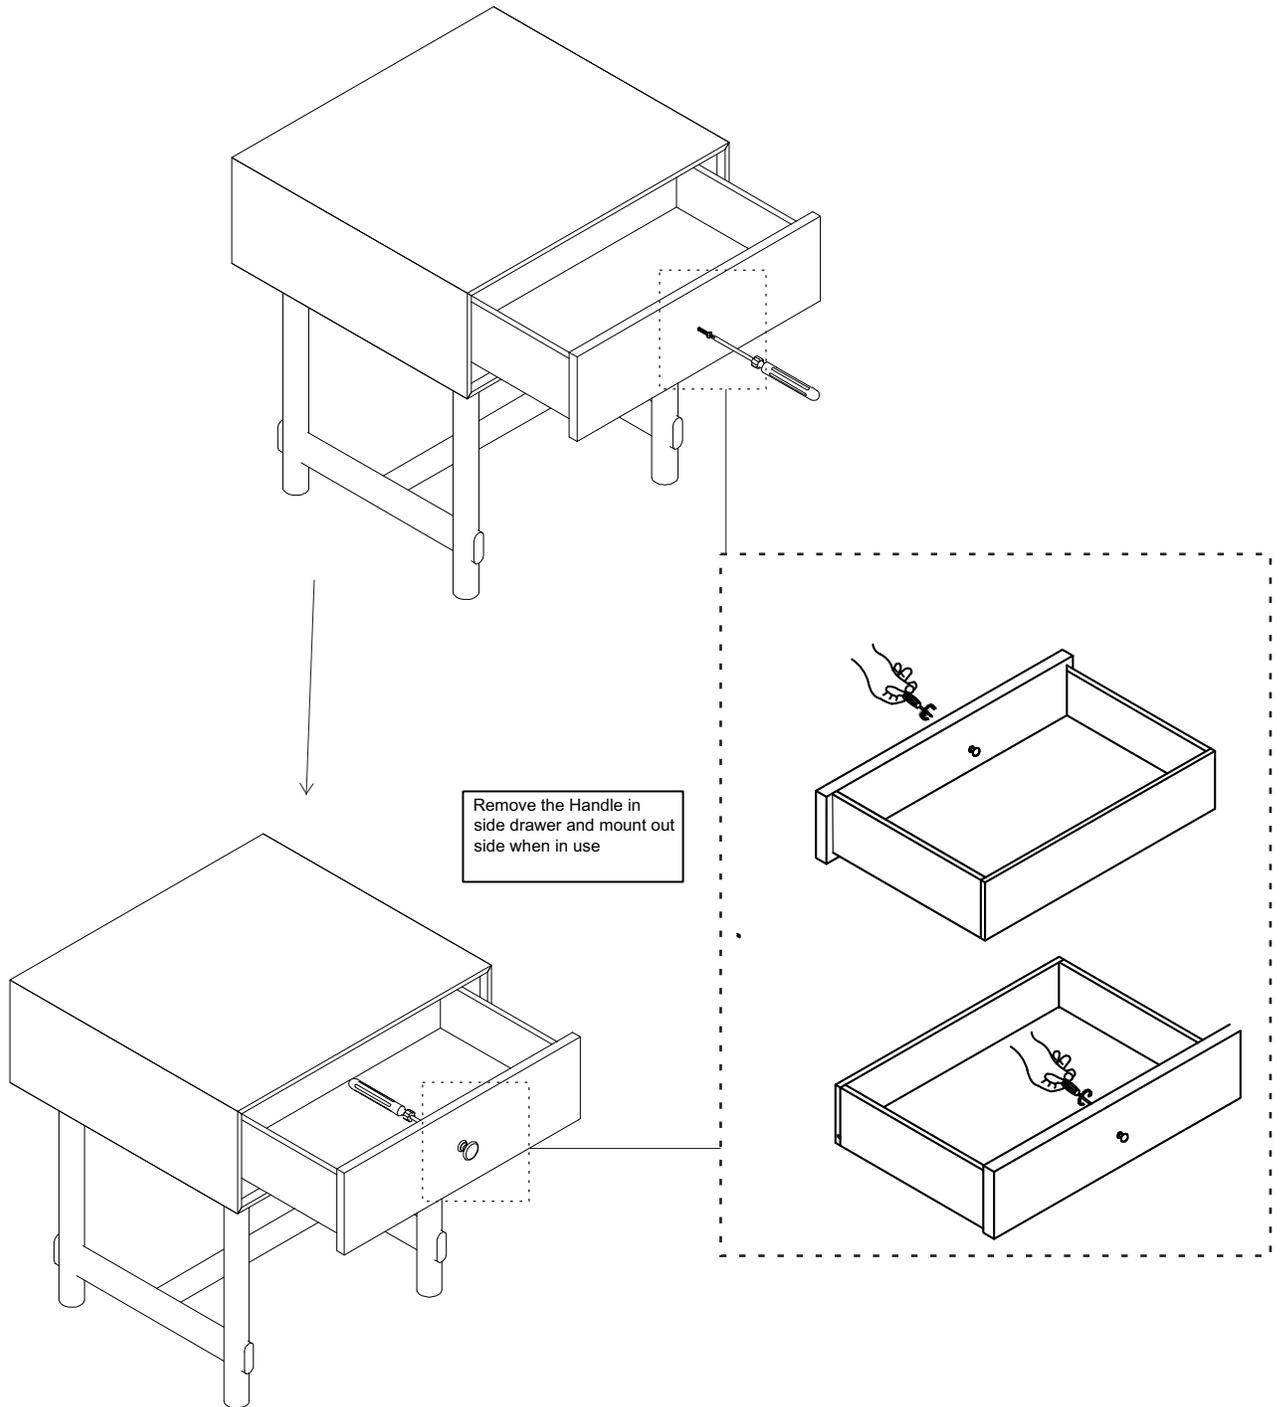

Stand the cabinet on it right side up.
Sliding the drawers to open it and remove the Handle inside the drawers and attach them to the mounting position on the outside of drawers with Screwdriver (Not provided).

ASSEMBLY INSTRUCTION
ITEM NO. N758P386959

Step 4

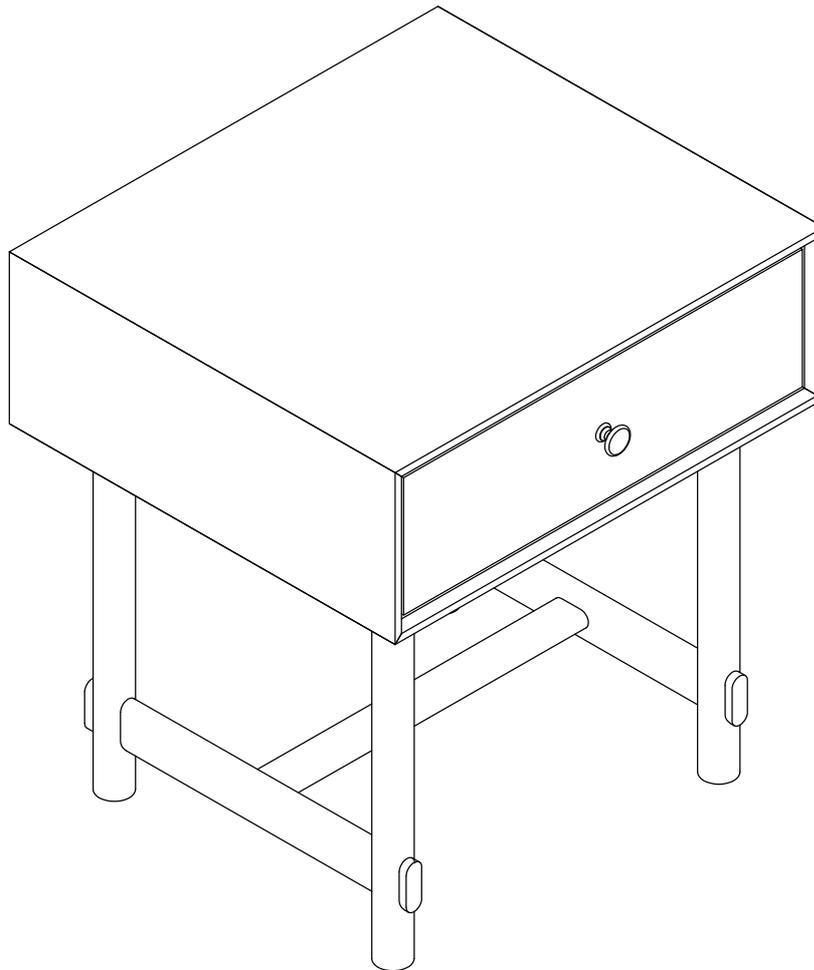


Exert pressure floorwards onto the Cabinet with both your hands.
This pressure will help the Legs and Cabinet Top reach full alignment
status. Check for wobbles on a LEVEL surface.
If no wobbles are found proceed to tighten the Bolts and screws in a
sequential manner until evenly secured.
Your Cabinet is ready for use.
This Cabinet can only be used on the flat, level surface.




AITI-TIP DEVICE INSTALLATION

It is optional, install if necessary

Step 5

7: ANTI-PARKING KIT

7.1  1 pc	7.2  2 pcs	7.3  M4 x 40 1 pc	7.4  M4 x 15 1 pc	7.5  1 pc
--------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------

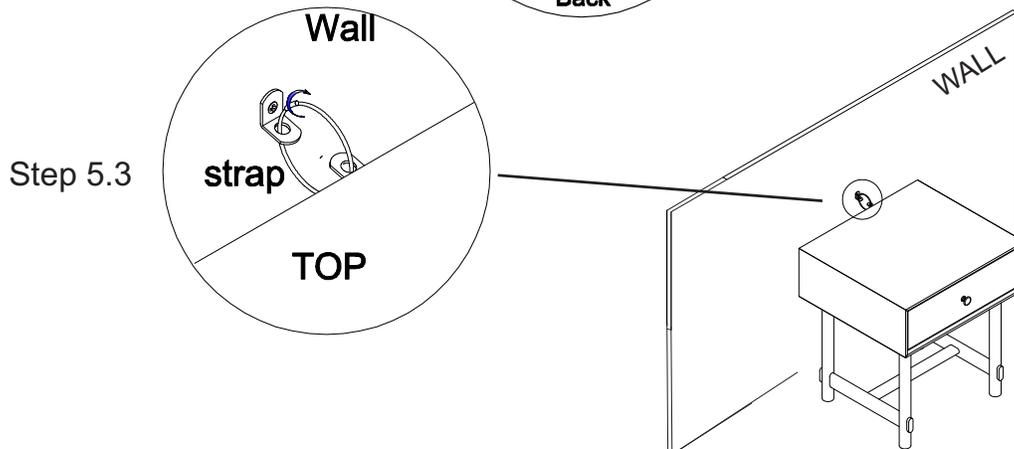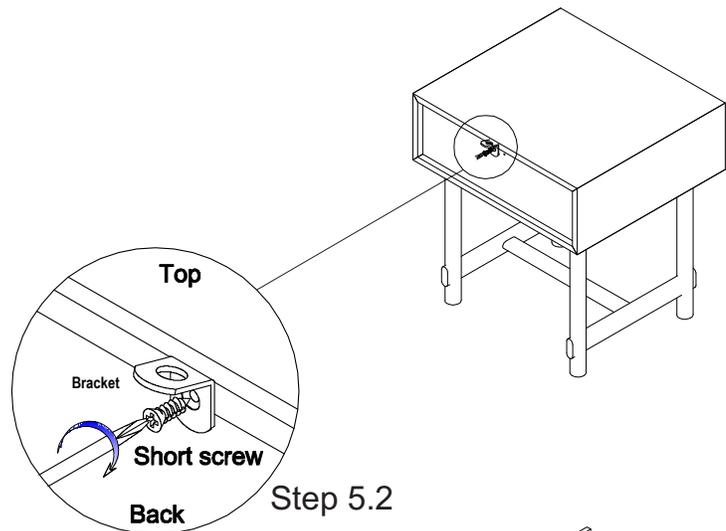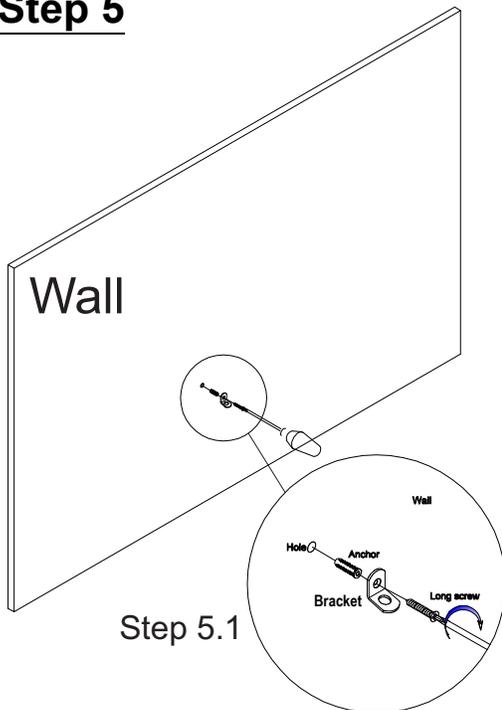

5.1: Find the location of the screw holes on the wall. Move the cabinet back to the wall. Mark one points the same height as the cabinet on the wall.

NOTE: The metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder (not provided) if needed to locate the Wall Frame. Insert the Plastic Anchors (7.1) into the wall and attach Metal Brackets (7.2) to Plastic Anchors (7.1) using long screw (7.3) with Screwdriver.

5.2: Attach the Metal Brackets (7.2) to the Cabinet using the short screw (7.4) with Screwdriver.

5.3: Thread the Strap (7.5) through the 2pcs Metal Brackets (7.2) to secure the Cabinet to the wall.

CAUTION: Restraint Strap (7.5) between the product and Metal Brackets (7.2) on the wall should be within 3.5"