

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

 	● Not for commercial use. For residential use only.
 	● Do not put hot items directly on furniture surface.
 	● Do not clean furniture with harsh cleansers or polish.
 	● Do not place furniture under direct sunlight.
 	● Do not place furniture near heating or cooling vents.
 	● Do not write on furniture without a padded barrier to protect the surface.
 	● Do not place furniture outside . For indoor use only.
 	● Stains may be removed with mild soap solution and damp cloth.
 	● Children should not climb or jump on the furniture.
 	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in Corner carton for hardware packs and Legs.

Assembly Instructions

Please look in the Bottom Box for Hardware packs and Legs

CABINET

Item No: N758P412497







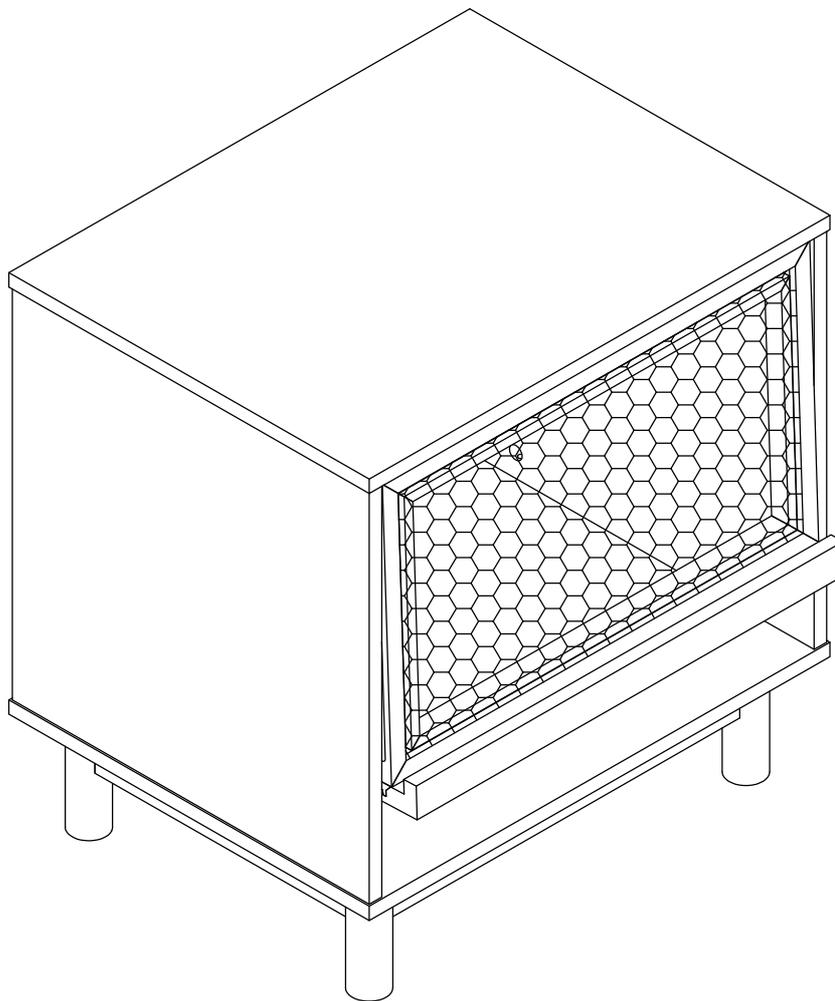


Caution: This cabinet is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Cabinet and to prevent damage to the cabinet, two adults may be needed to execute these actions.

ASSEMBLY INSTRUCTION



ITEM NO. N758P412497

Parts List

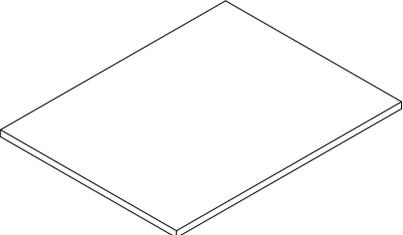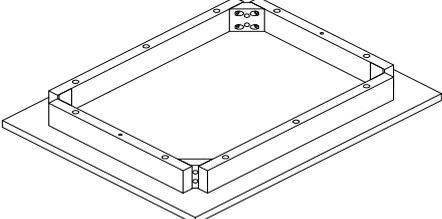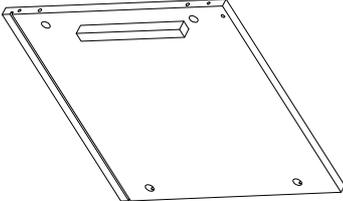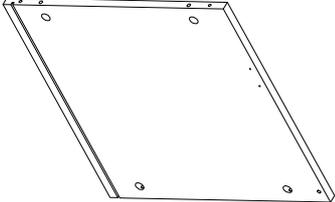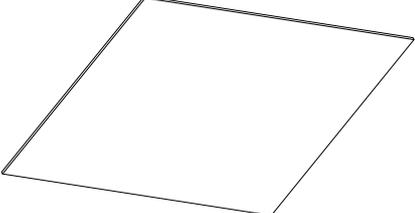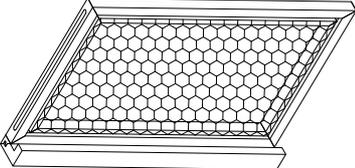Label	Picture	Description	QTY
A		Top	1
B		Bottom	1
C		Right Side	1
D		Left Side	1
E		Back Panel	1
F		Door	1
G		Legs	4


ASSEMBLY INSTRUCTION

ITEM NO. N758P412497

Hardware			
Label	Picture	Description	QTY
①		Doorstop 14 x 17 x 44	1
②		Flat Screw 3 x 15	3
③		Metal Pin 6 x 20	3
④		Wooden Dowel 8 x 30	9
⑤		Cam Bolt 6 x 28	9
⑥		Cam Lock 10 x 15	9
⑦		Bolt 1/4" x 45	9
⑧		Spring Washer 6 x 13	9
⑨		Flat Washer 6 x 19	9
⑩		Allen Wrench (K4 x 80)	1
		Screwdriver	NOT PROVIDED
⑪		Anti tip Kit	1 set
⑪.1		Plastic Anchor	1
⑪.2		Metal Bracket	2
⑪.3		Long Screw 4 x 40	1
⑪.4		Short Screw 4 x 15	1
⑪.5		Steel Wire	1

Assembly Preparation


Before Beginning Assembly:

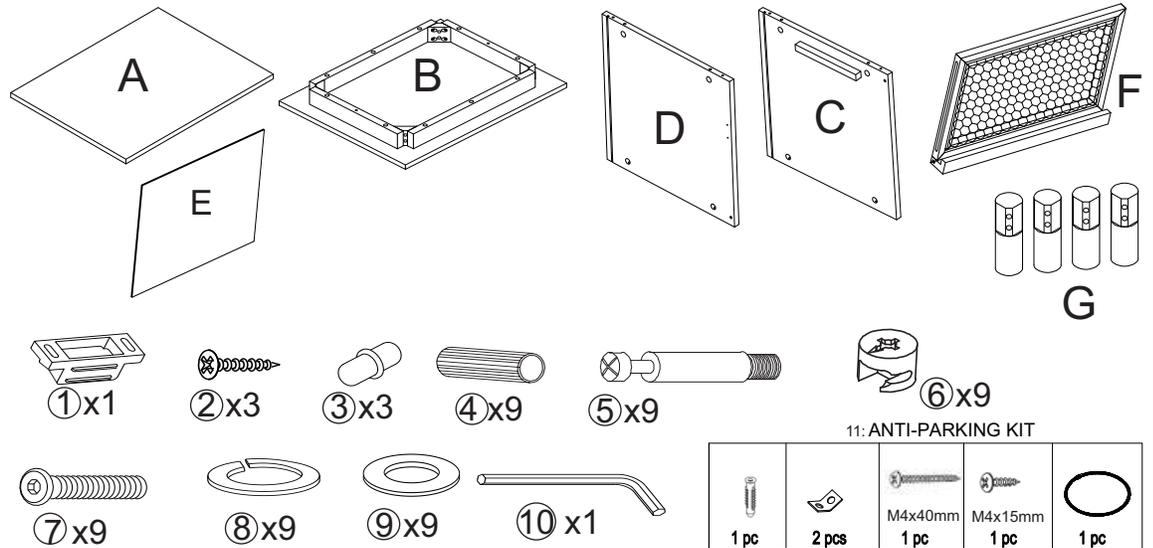

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps

Overview

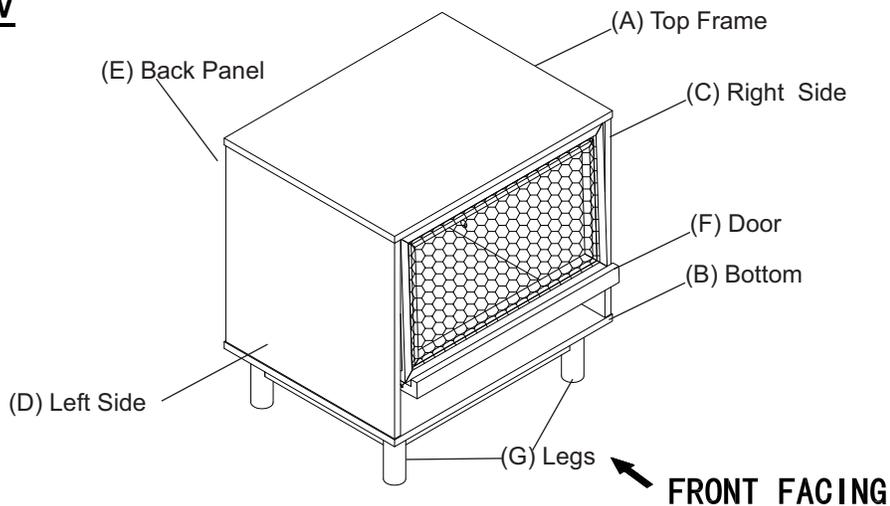


This Cabinet has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412497

Step 1

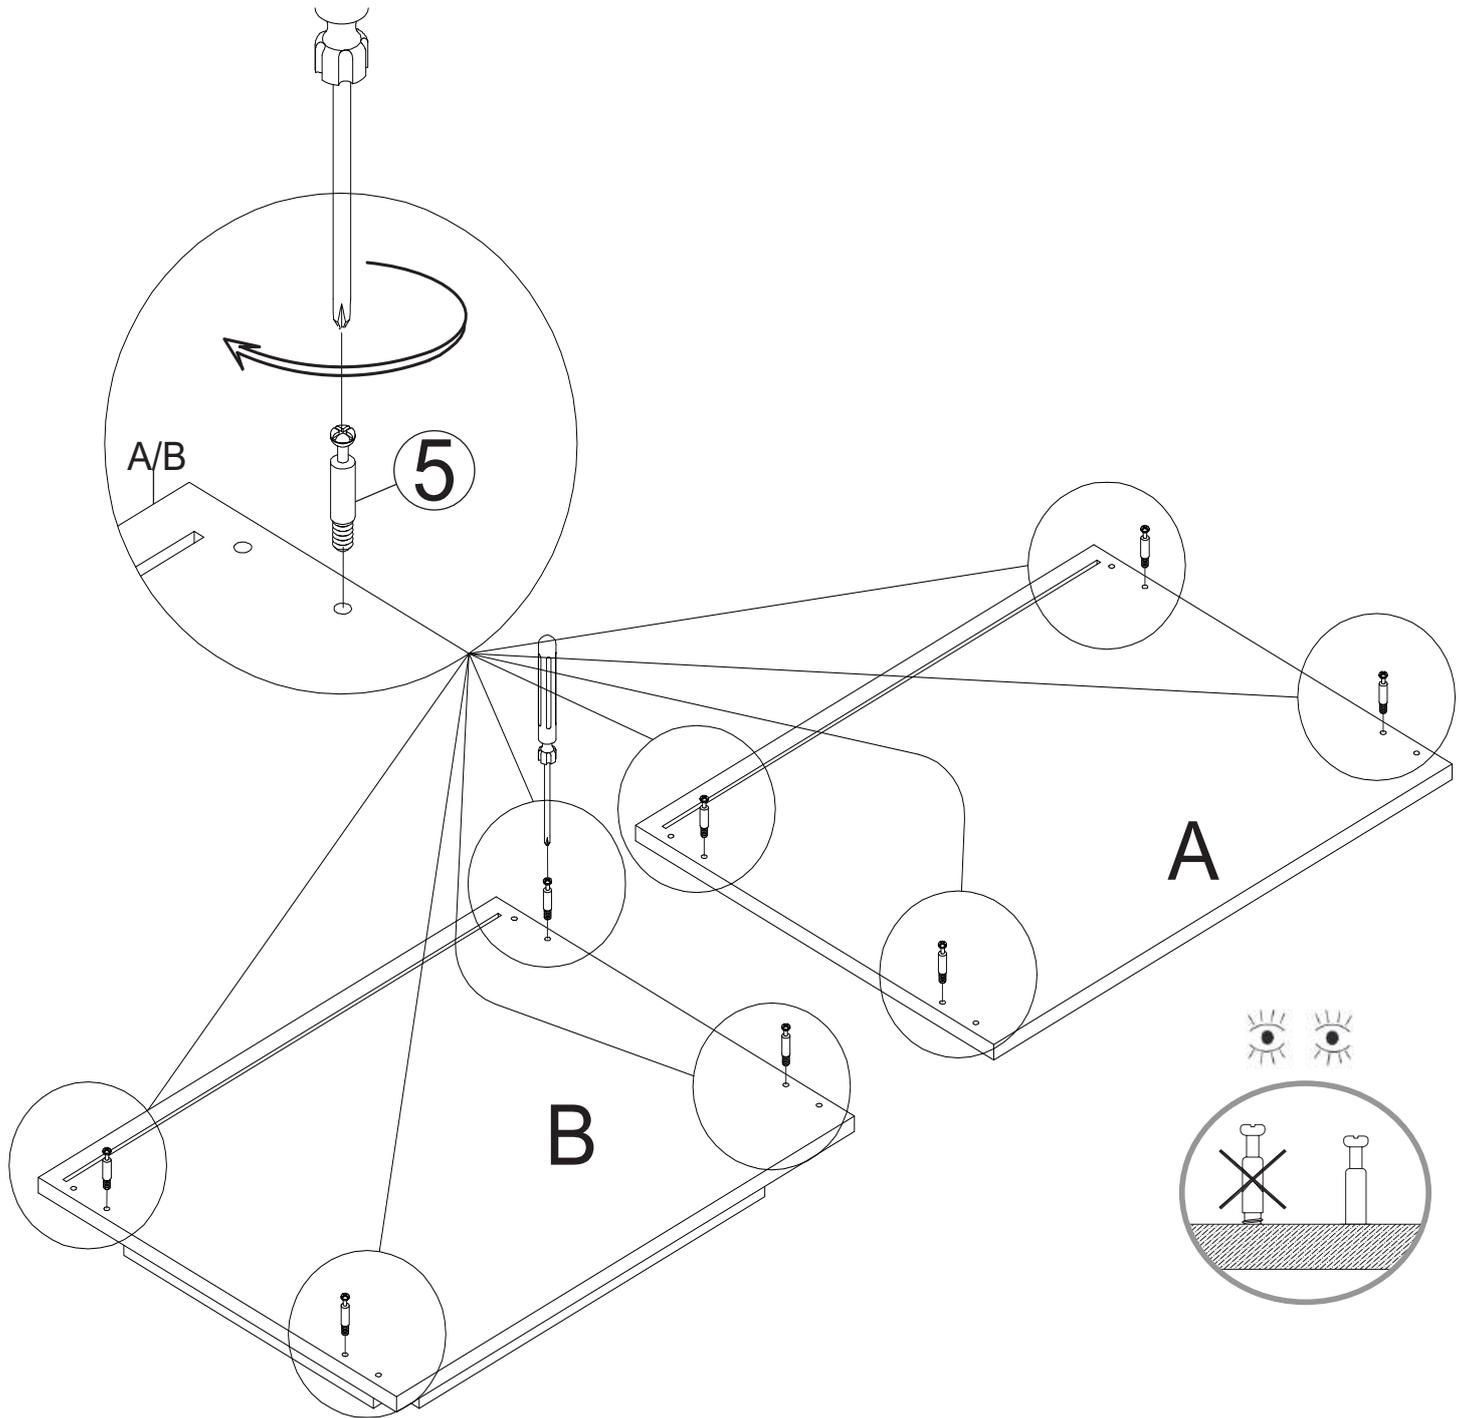

Unpack and place all parts on clean, non - marring surface.


Install the cam bolts (5) into the back side of Top (A) and Bottom (B) using Screwdriver.

At this step, fully tighten the Screws.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412497

Step 2

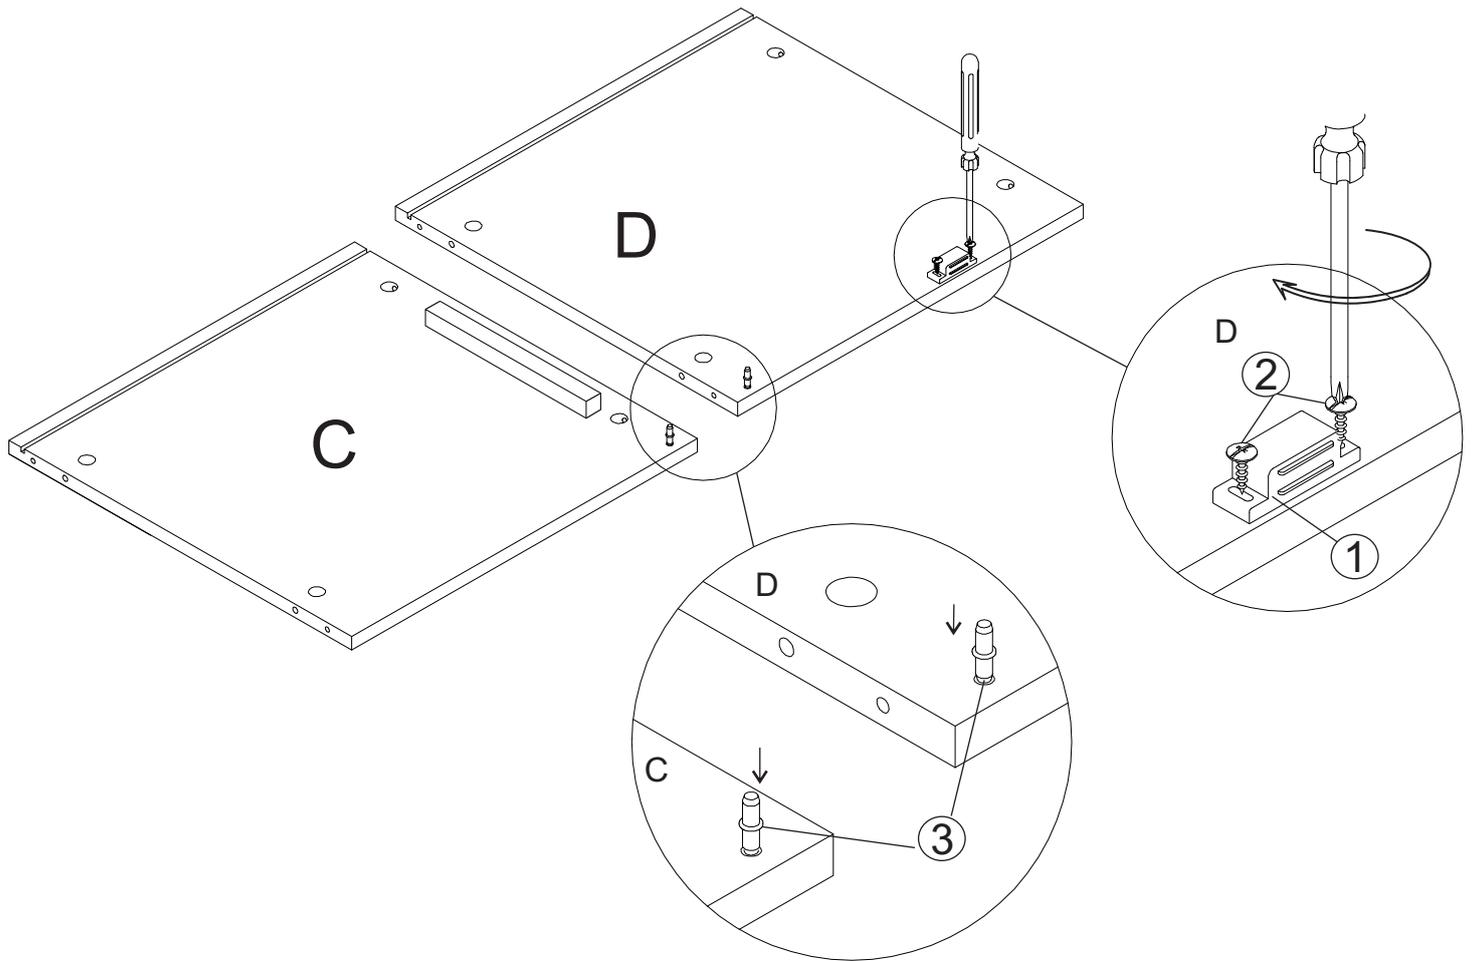

Next, install the door stopper (①) onto the left side panel (D). Use a screwdriver to secure it with the screw (②).


Then, install the metal pins (③) into the two upper corners of side panels (C) and (D) to serve as the door guide.

At this step, fully tighten the Screws.

ASSEMBLY INSTRUCTION


ITEM NO. N758P412497

Step 3

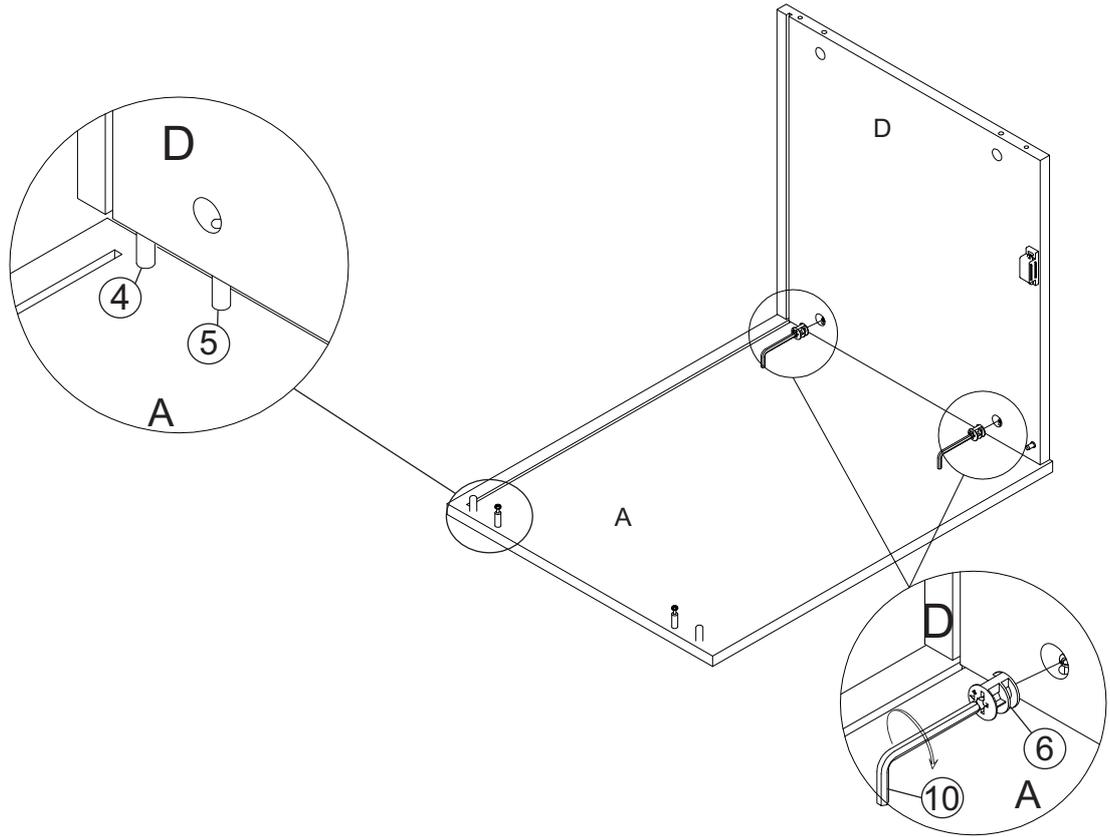

Attach the left side panel (D) onto the top panel (A), aligning it with the wooden dowels (4).
Use the Allen Wrench (10) and Cam locks (6) to secure it in place.

Step 4

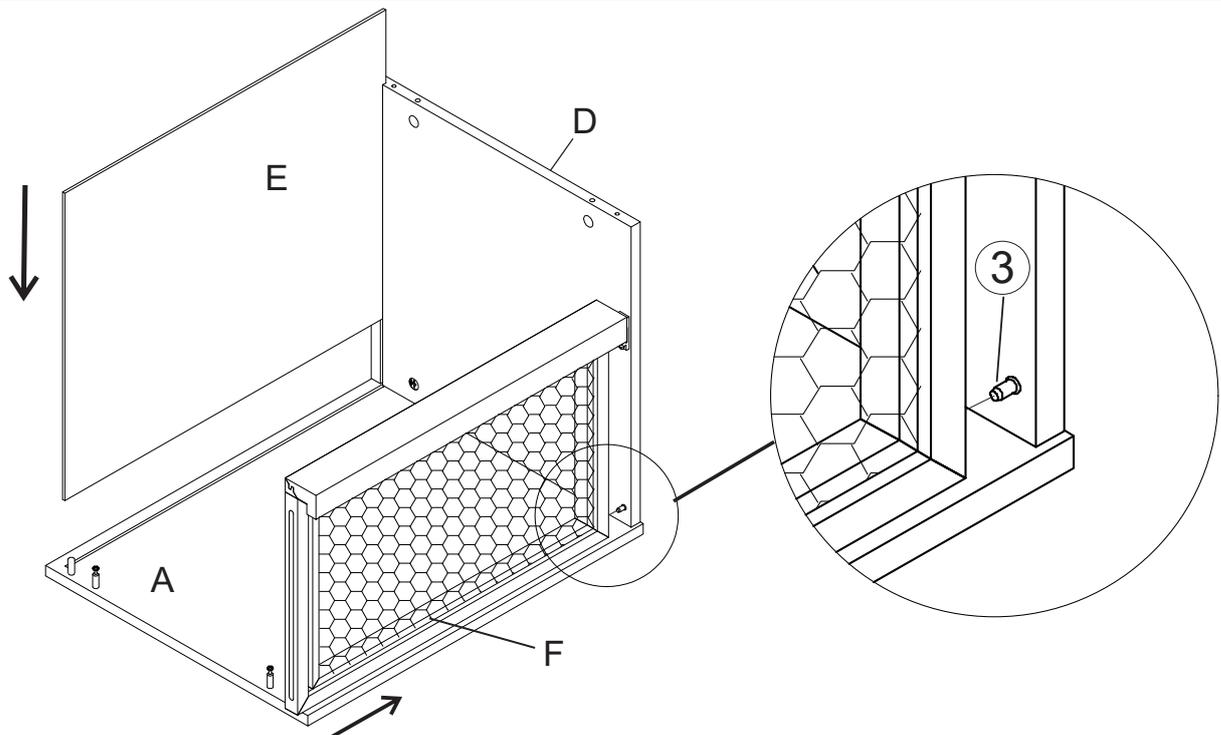


Next, install the Back panel (E) and the Door (F) onto the top panel (A) and the Left side panel (D), as shown in the illustration.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412497

Step 5

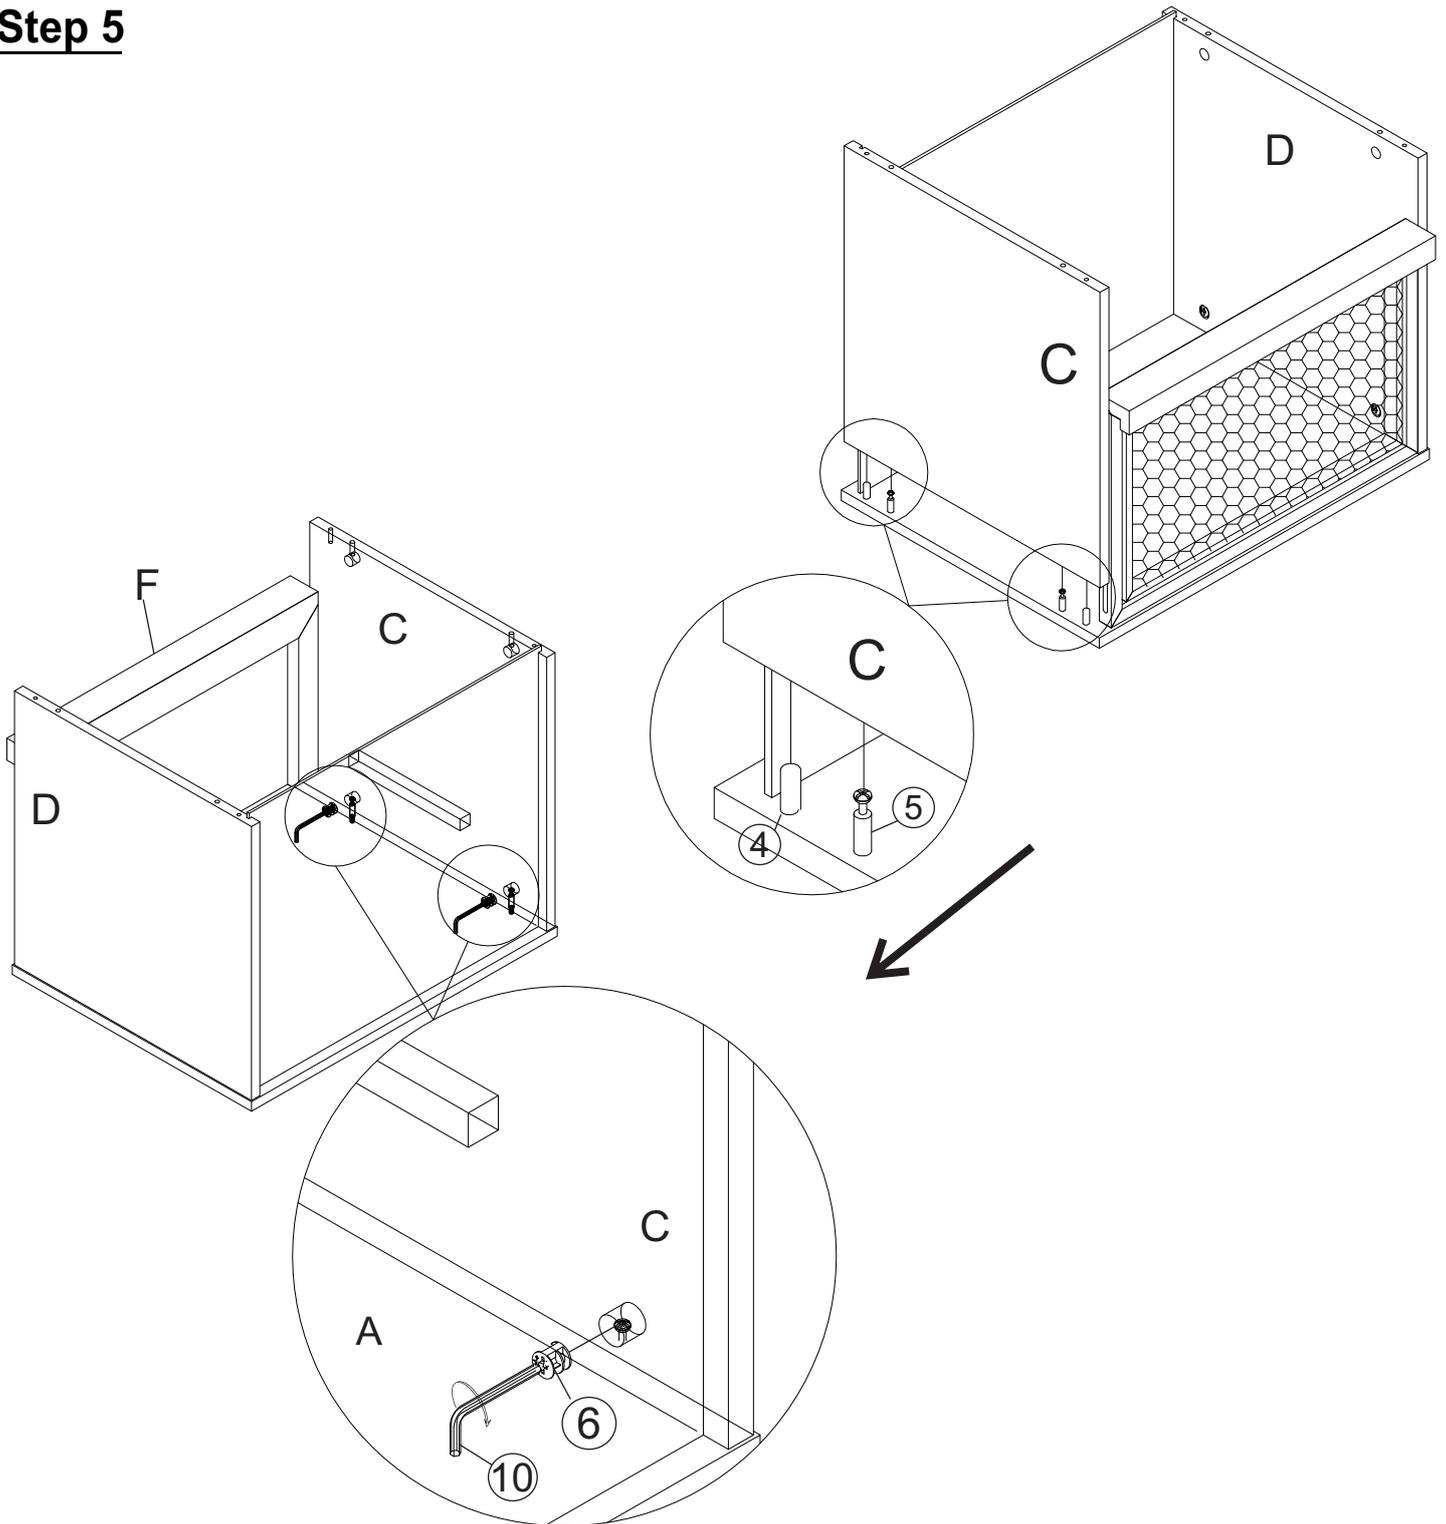


Attach the left side panel (C) to the top panel (A), aligning it with the wooden dowels (④). Then, use the Allen Wrench (⑩) and Cam locks (⑥) to secure it in place.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412497

Step 6

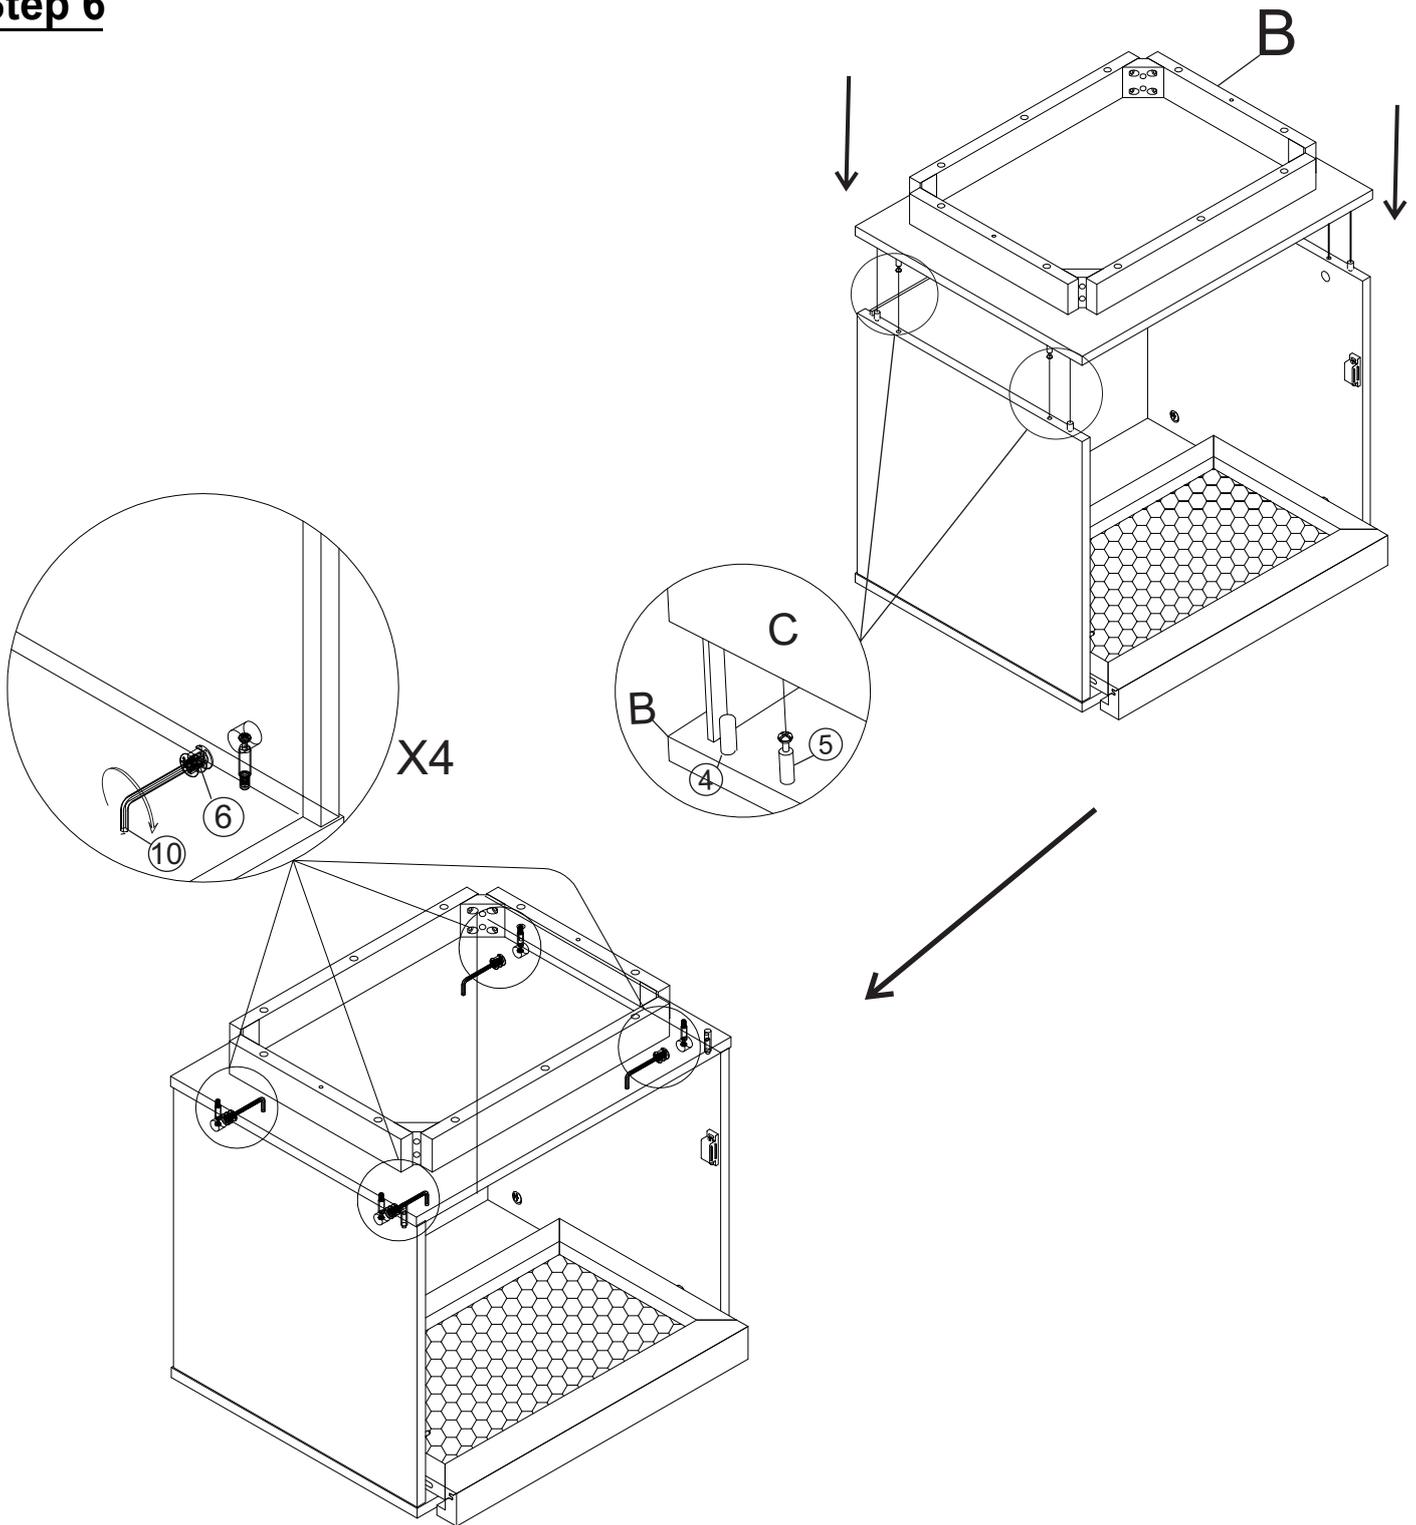


Attach the bottom panel (B) to the Right Side panel (C) and Left Side panel (D). Align and position them using the wooden dowels (④), secure them with the cam locks (⑥) using the Allen wrench (⑩).

At this Step, Don't fully tighten the Bolts.

ASSEMBLY INSTRUCTION

ITEM NO. N758P412497

Step 7

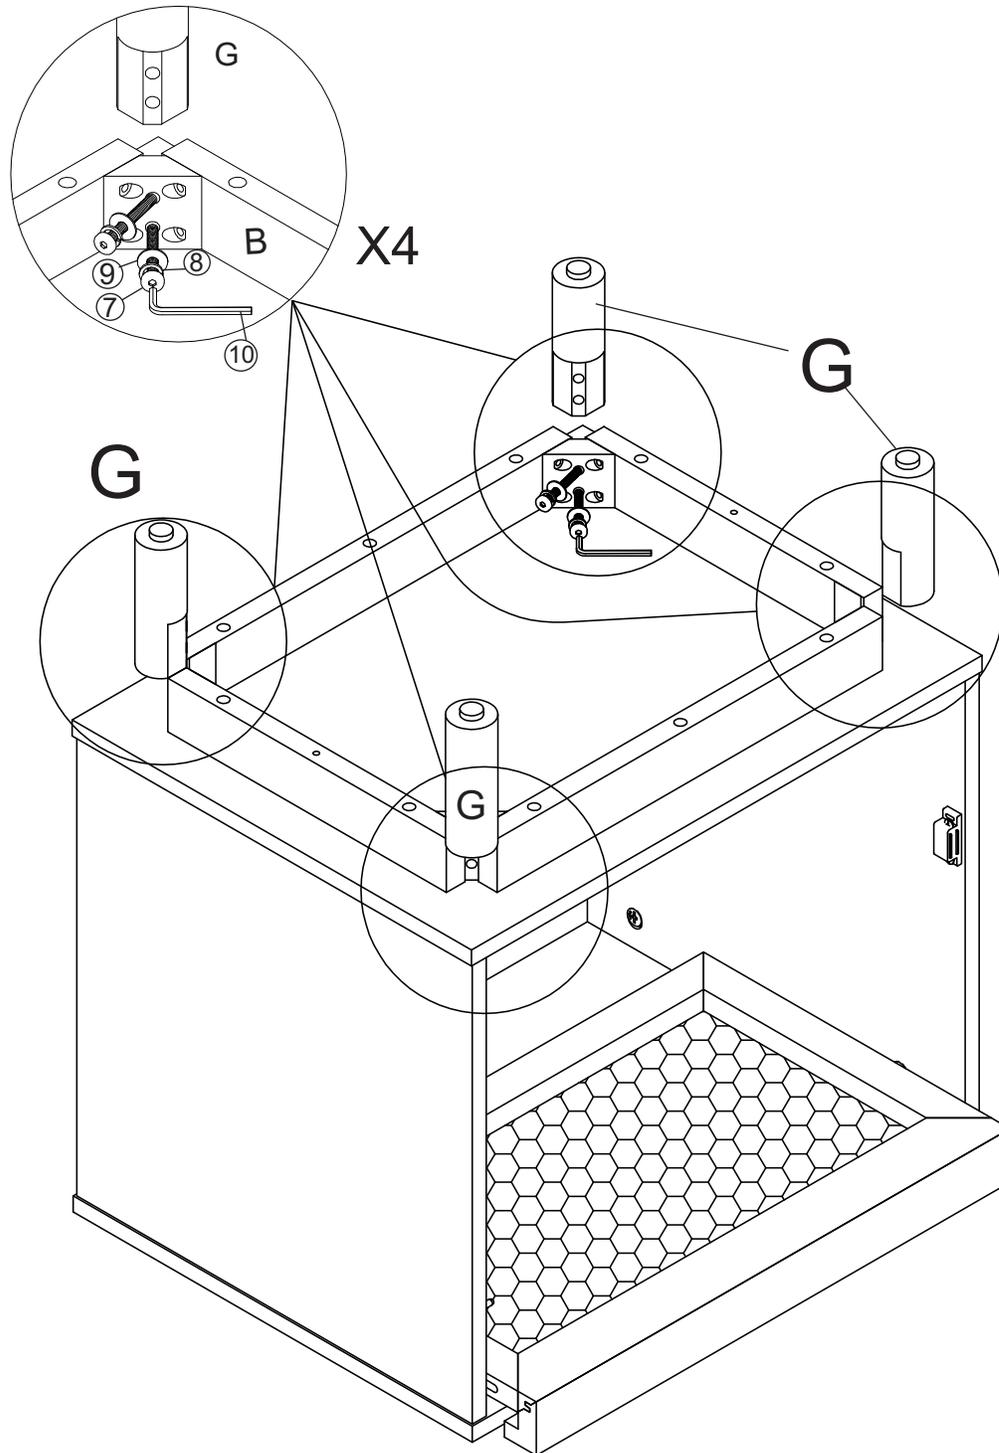


Attach the Legs (G) to the Bottom. (B) by Using Bolts (7), Spring washer (8), Flat Washer (9) with Allen Wrench (10).


At this Step, Don't fully tighten the Bolts.

ASSEMBLY INSTRUCTION
ITEM NO. **N758P412497**

Step 8

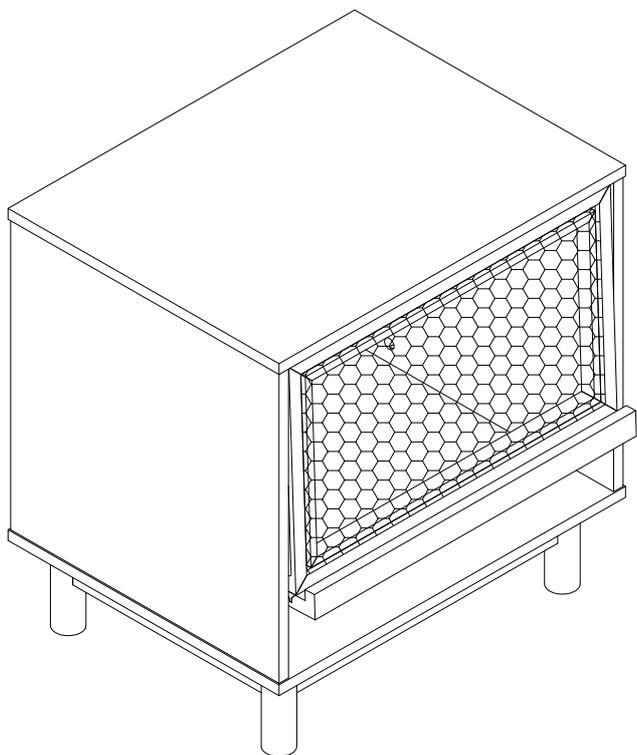

Close the Door

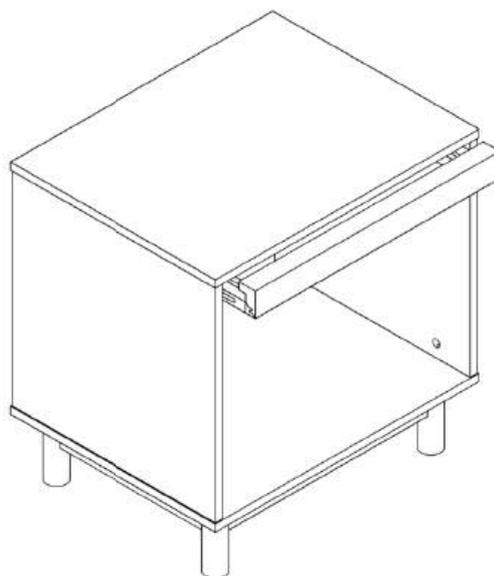

Opent the Door

Exert pressure floorwards onto the Table top of Cabinet with both your hands. This pressure will help the Legs and Table Top reach full alignment status. Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts and screws in a sequential manner until evenly secured.

Your Cabinet is ready for use,

This Cabinet can only be used on the flat, level surface




AITI-TIP DEVICE INSTALLATION

It is optional, install if necessary

Step 9

11: ANTI-PARKING KIT

11.1  1 pc	11.2  2 pcs	11.3  M4x40mm 1 pc	11.4  M4x15mm 1 pc	11.5  1 pc
---	---	--	--	---

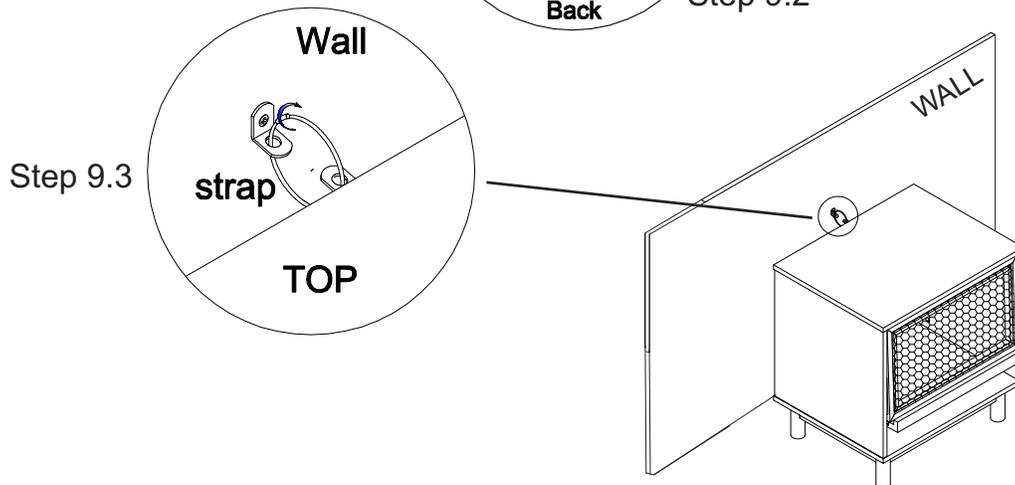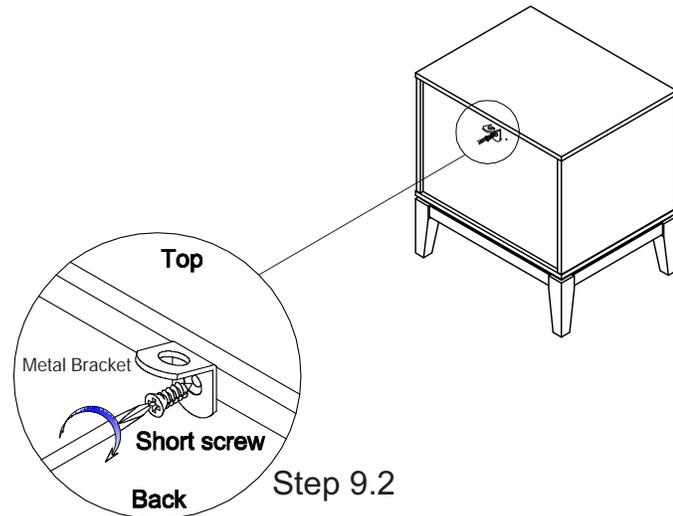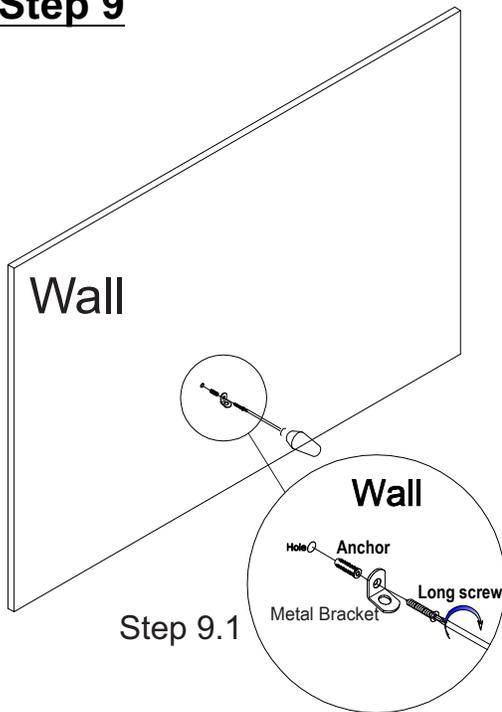

- 9.1: Find the location of the screw holes on the wall. Move the cabinet back to the wall. Mark one points the same height as the cabinet on the wall.
NOTE: The metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder (not provided) if needed to locate the Wall Frame.
 Insert the Plastic Anchors (11.1) into the wall and attach Metal Brackets (11.2) to Plastic Anchors (11.1) using long screw (11.3) with Screwdriver.
 4.2: Attach the Metal Brackets (11.2) to the Cabinet using the short screw (11.4) with Screwdriver.
 4.3: Thread the Strap (11.5) through the 2pcs Metal Brackets (11.2) to secure the Cabinet to the wall.
CAUTION: Restraint Strap (11.5) between the product and Metal Brackets (11.2) on the wall should be within 3.5"