

Hall Tree


Assembly Instructions - Please keep for future reference

SKU: N721P428445/N721P428446

! WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

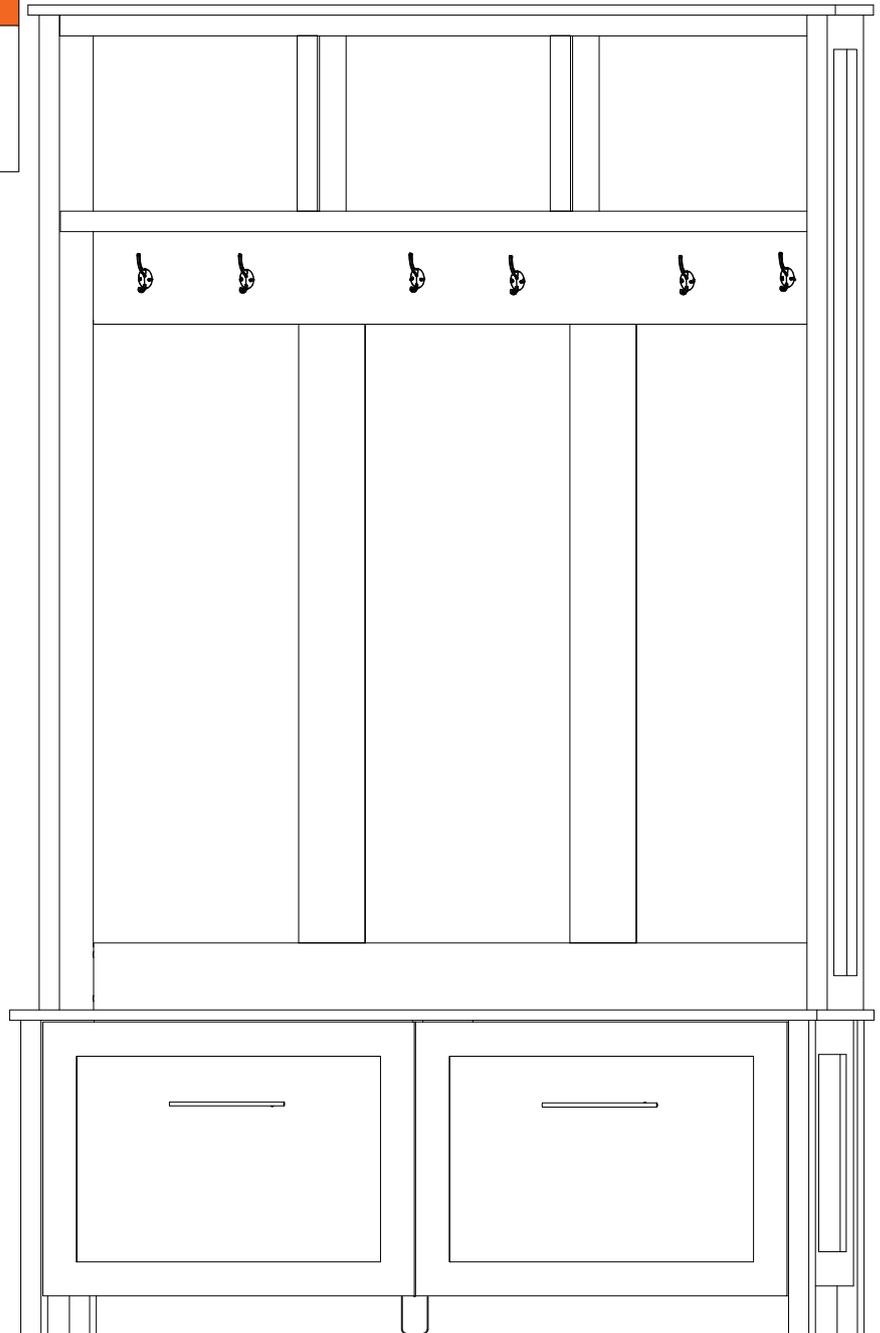

Dimensions

Width-47.2 inch

Depth-15.5 inch

Height-76.6 inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

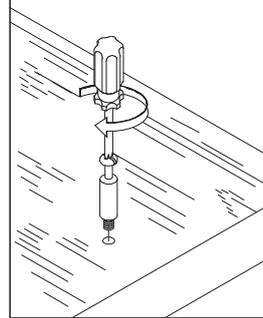

Step 2

Push the male camlock into the entry hole.

2

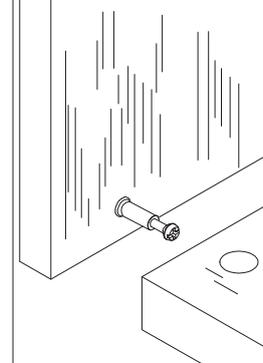


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

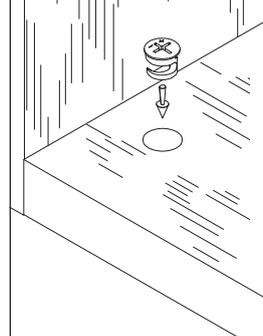


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4













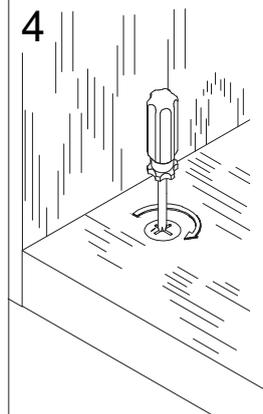


Assembly Instructions

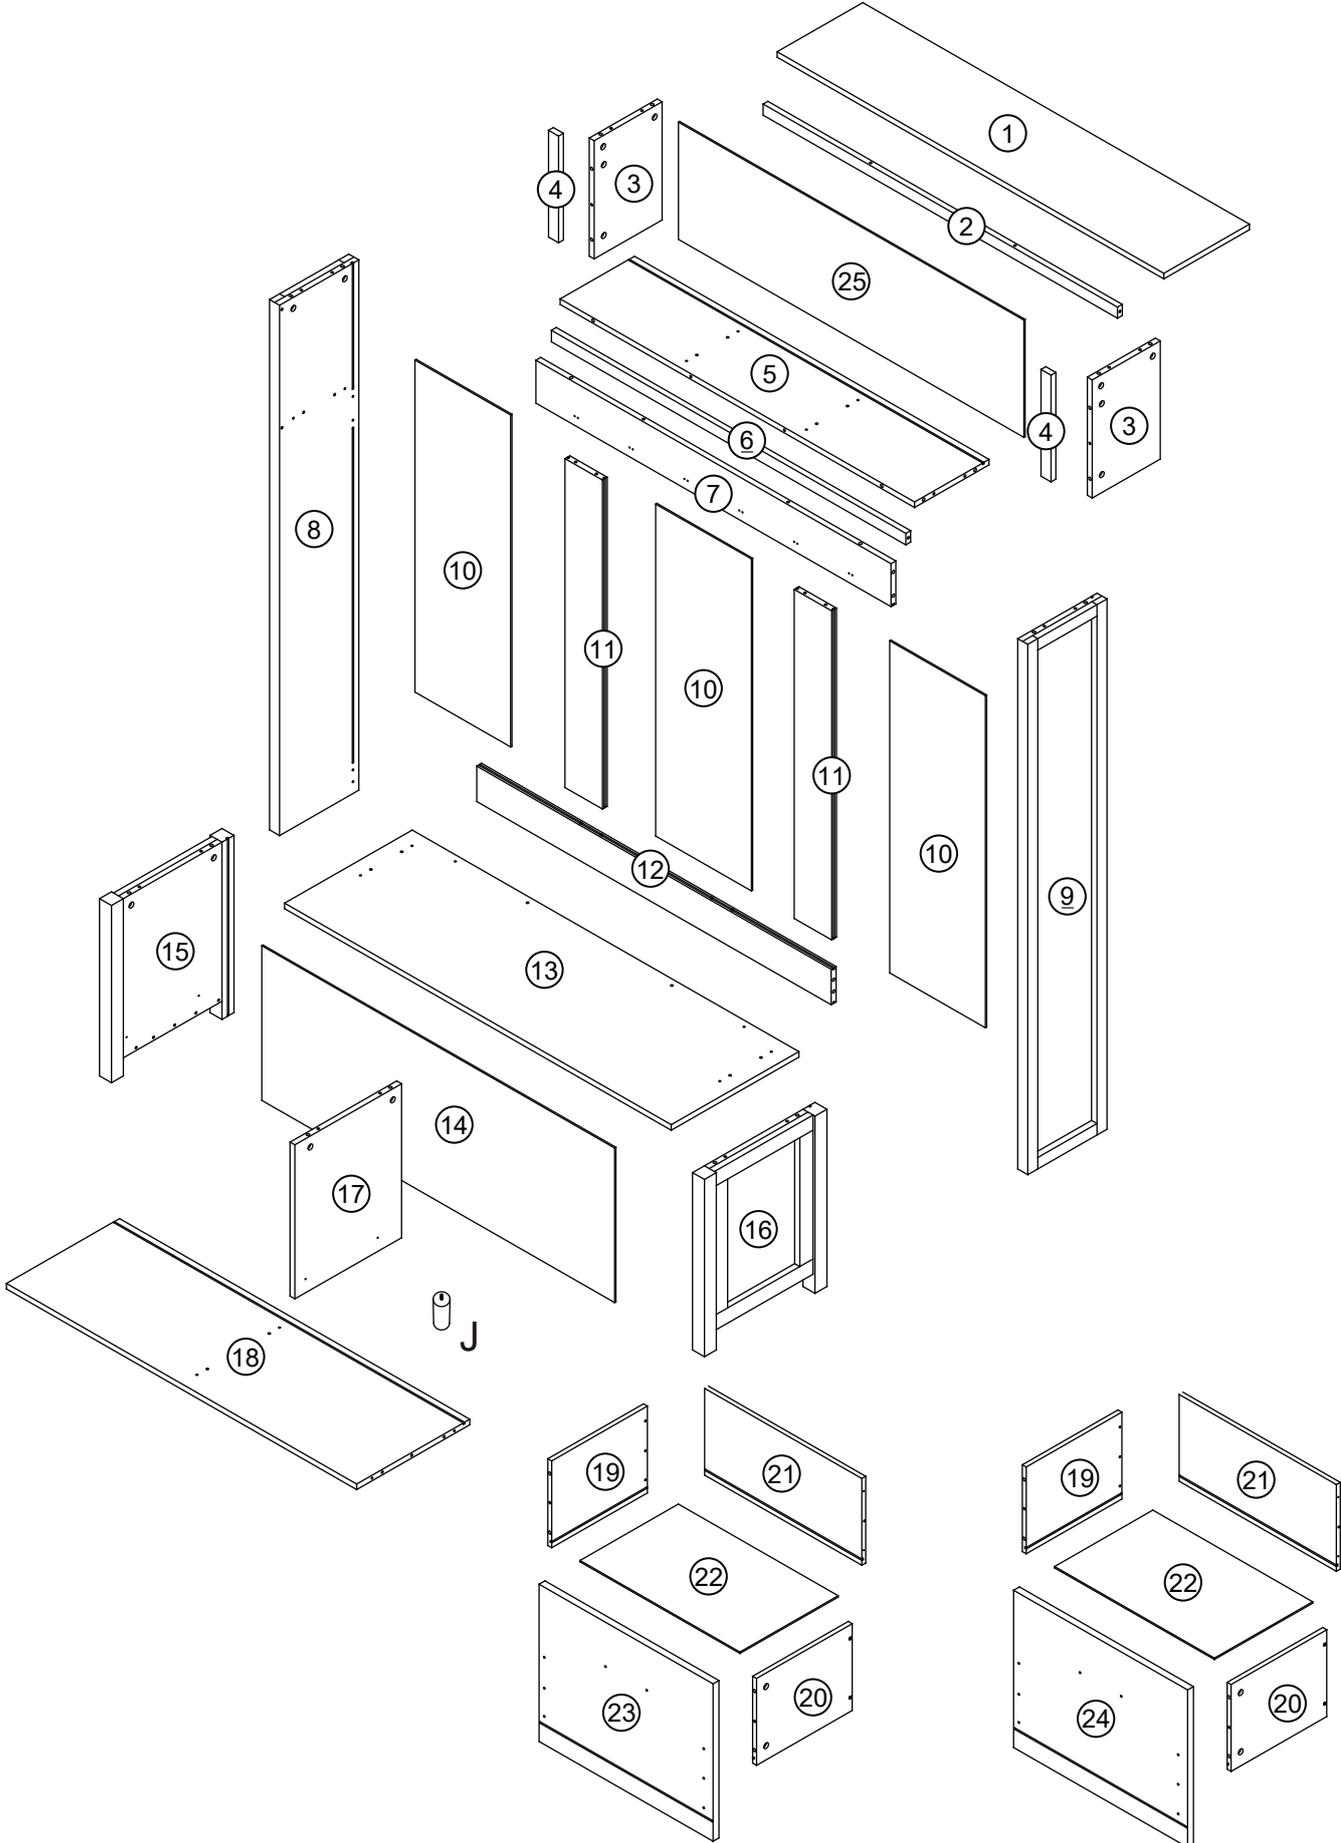










Assembly Instructions

BOX A- N721P428445

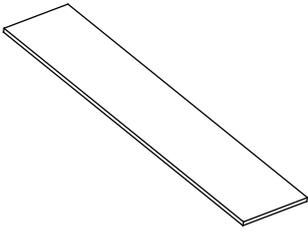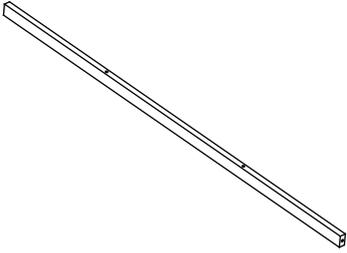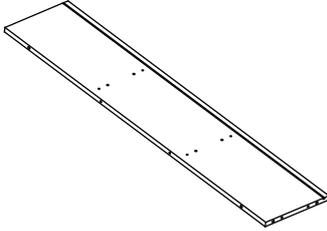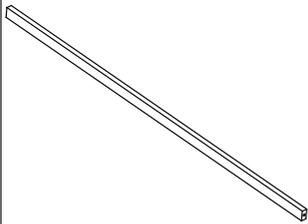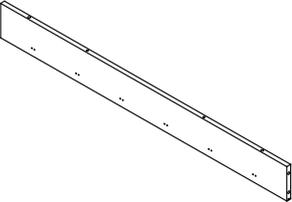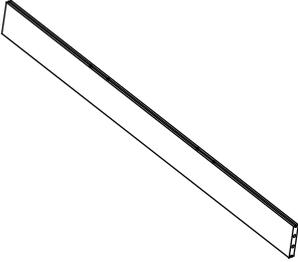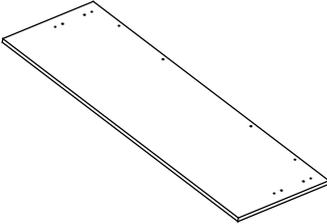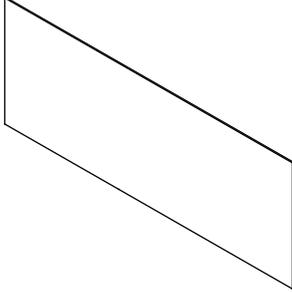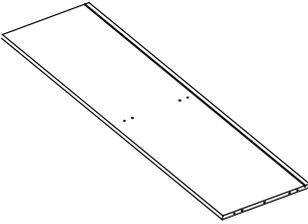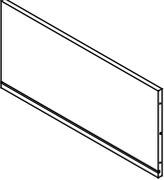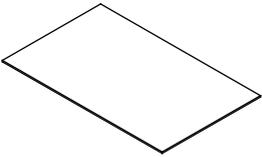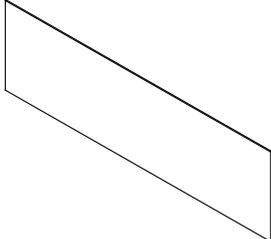			
1200*263*15mm	1090*40*15mm	1090*234*15mm	1090*40*15mm
① x 1	② x 1	⑤ x 1	⑥ x 1
			
1090*147*15mm	1453*250*40mm	1453*250*40mm	905*307.5*3mm
⑦ x 1	⑧ x 1	⑨ x 1	⑩ x 3
			
894*100*15mm	1090*110*15mm	1200*395*15mm	1101*370*3mm
⑪ x 2	⑫ x 1	⑬ x 1	⑭ x 1
			
1090*362*15mm	482.5*240*15mm	493.5*294*3mm	1101*297*3mm
⑱ x 1	⑳ x 2	㉒ x 2	㉓ x 1

Assembly Instructions










BOX B- N721P428446

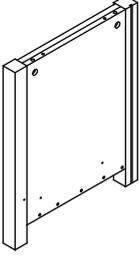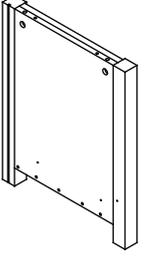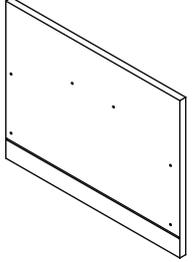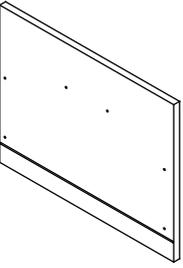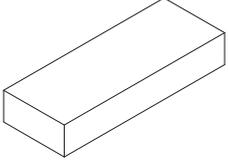			
287*221*15mm	246*40*15mm	463*382*40mm	463*382*40mm
③ x 2	④ x 2	⑮ x 1	⑯ x 1
			
360*348*15mm	300*240*15mm	300*240*15mm	540*405*18mm
⑰ x 1	⑲ x 2	⑳ x 2	㉓ x 1
			
540*405*18mm			
⑳ x 1	Hardware Kit X1		

Components-Fittings



Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

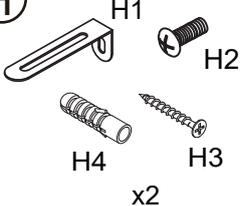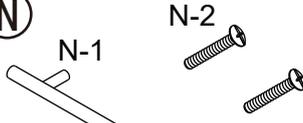


<p>(A)</p>  <p>Cam Bolt x 66+3</p>	<p>(B)</p>  <p>Cam Lock x 66+3</p>	<p>(C)</p>  <p>6*40mm Dowel x 30+2</p>	<p>(D)</p>  <p>7*40mm Screw x 10+2</p>
<p>(E)</p>  <p>3.5*14mm Screw x 36+2</p>	<p>(F)</p>  <p>6*30mm Dowel x 2+1</p>	<p>(G)</p>  <p>Clothes-hook x 6</p>	<p>(H)</p>  <p>H1 H2 H3 H4 x2</p>
<p>(J)</p>  <p>Middle Leg x 1</p>	<p>(K)</p>  <p>Leveler x 1+1</p>	<p>(L)</p>  <p>Iron Sheet x 1</p>	<p>(M)</p>  <p>3x16mm Screw x 24+2 Plastic Nail x 24+2</p>
<p>(N)</p>  <p>N-1 N-2 Handle x 2</p>	<p>(O)</p>  <p>Hole to stick x 12+2</p>	<p>(P)</p>  <p>Allen Wrench x 1</p>	<p>(Q)</p>  <p>3.5*35mm Screw x 8+2</p>
<p>(CR)</p>  <p>Runner 300mm x 2</p>	<p>(CL)</p>  <p>Runner 300mm x 2</p>	<p>(DR)</p>  <p>Runner 300mm x 2</p>	<p>(DL)</p>  <p>Runner 300mm x 2</p>
 <p>Screwdriver x 1</p>			

Assembly Instructions

Step 1



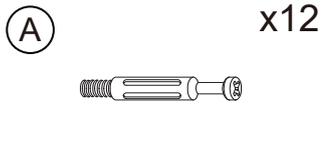
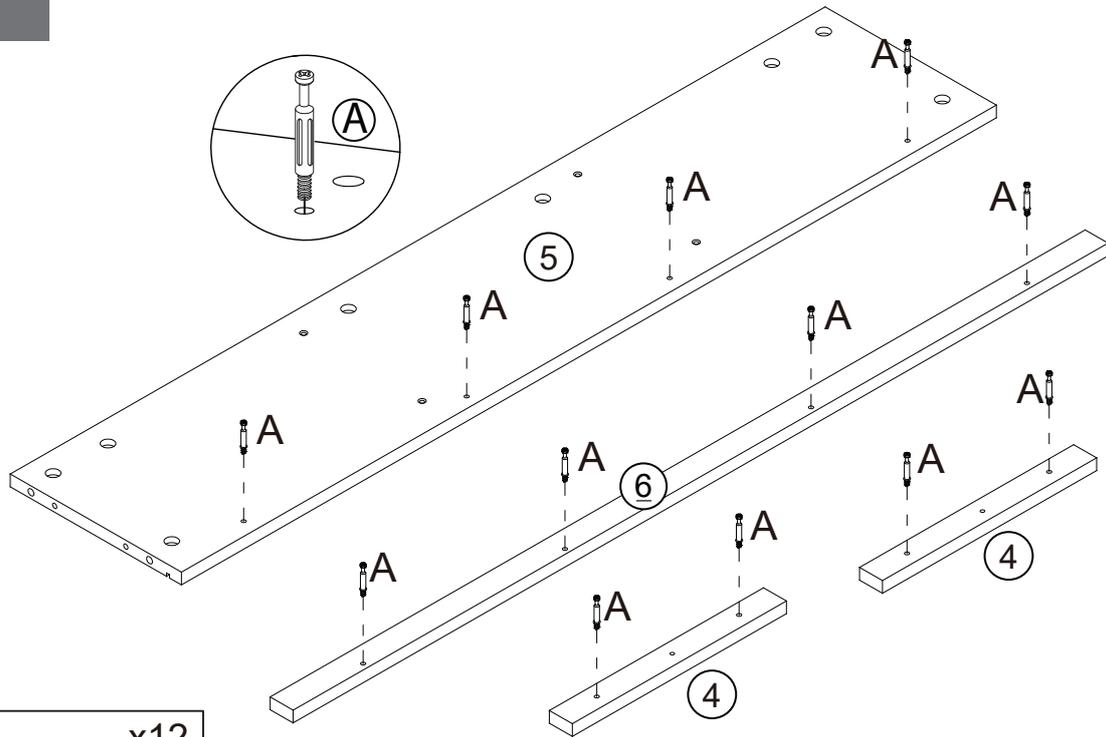


Step 2



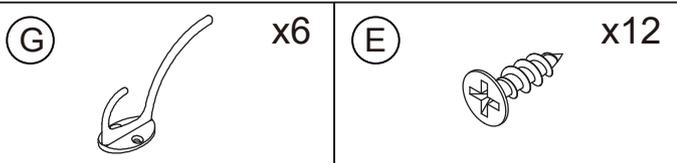
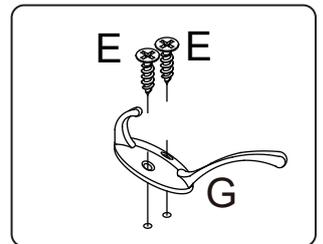
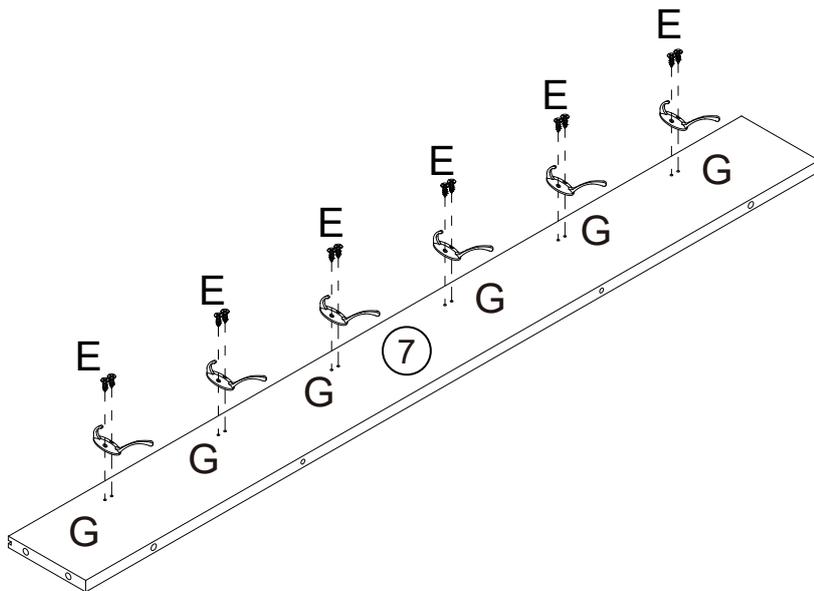


Assembly Instructions

Step 3

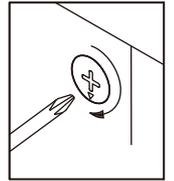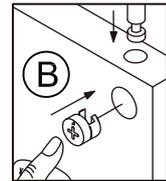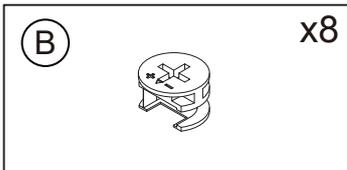
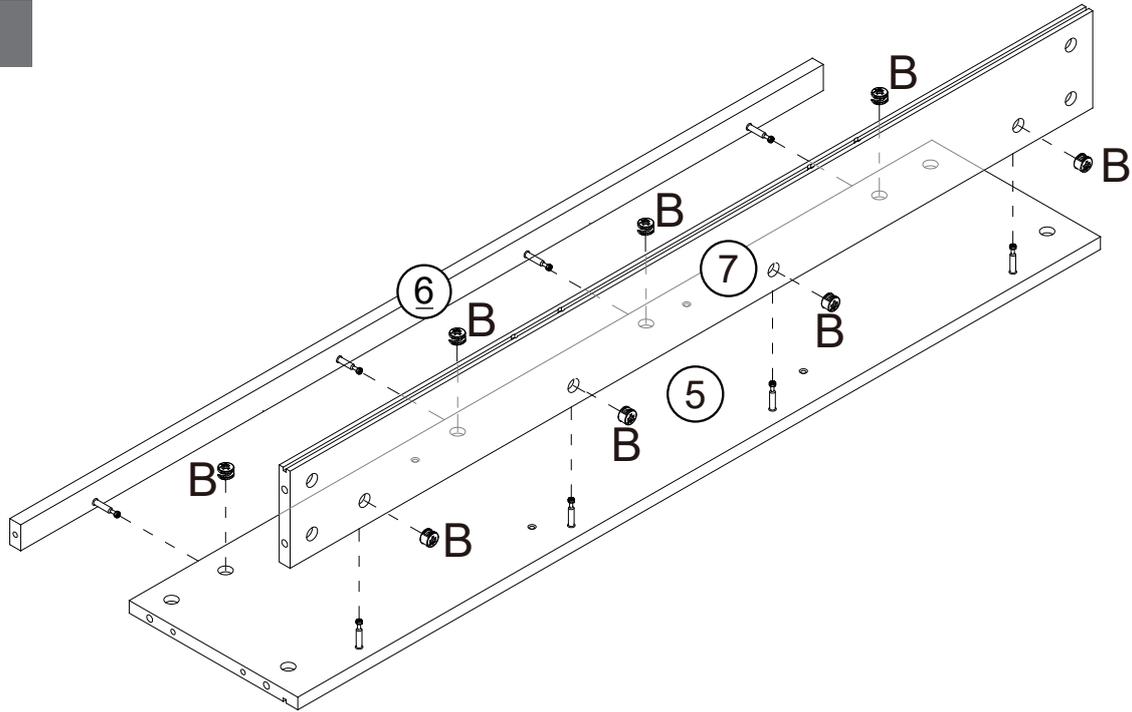


Step 4

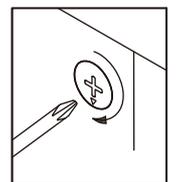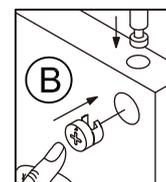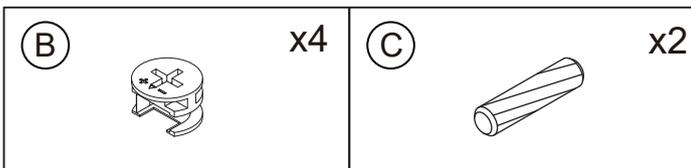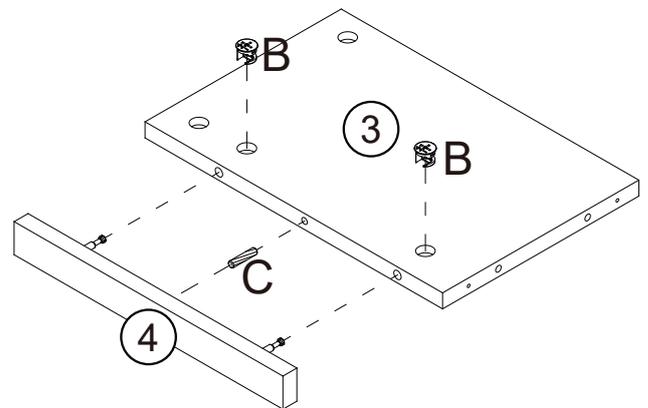
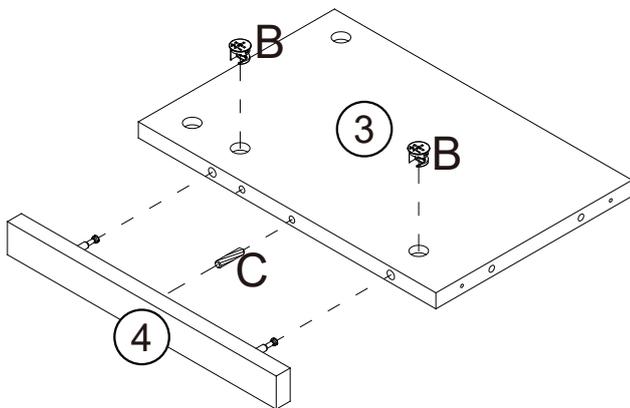


Assembly Instructions

Step 5


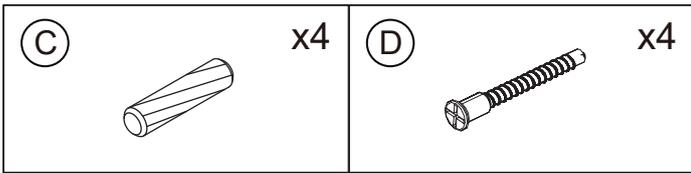
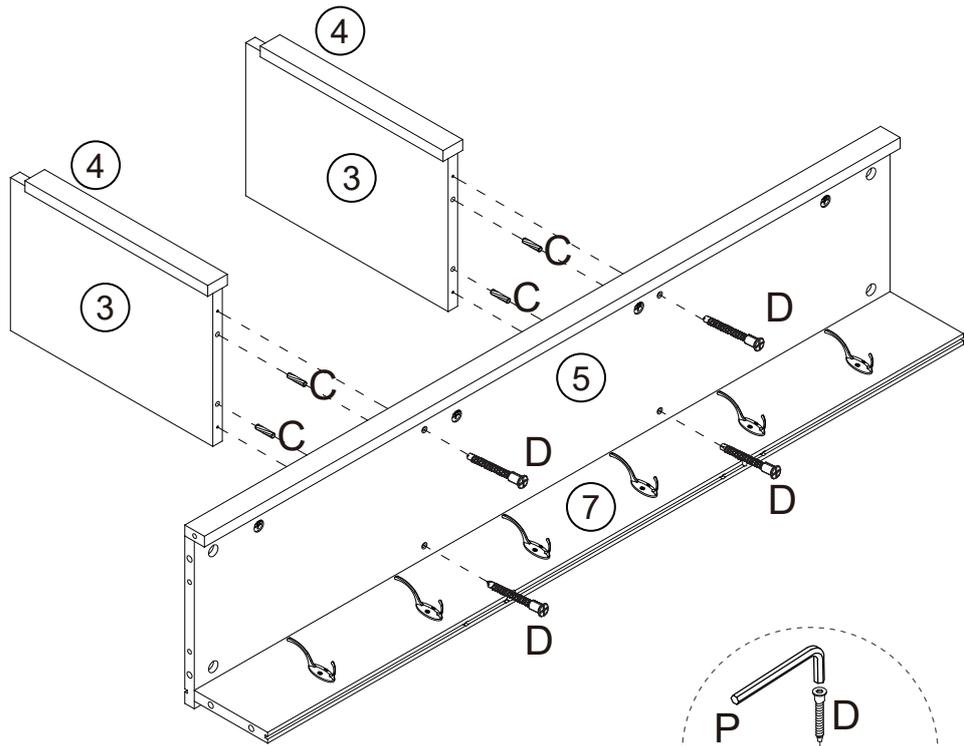



Step 6

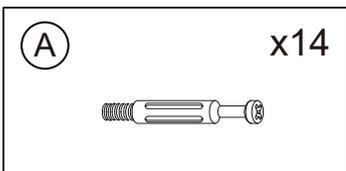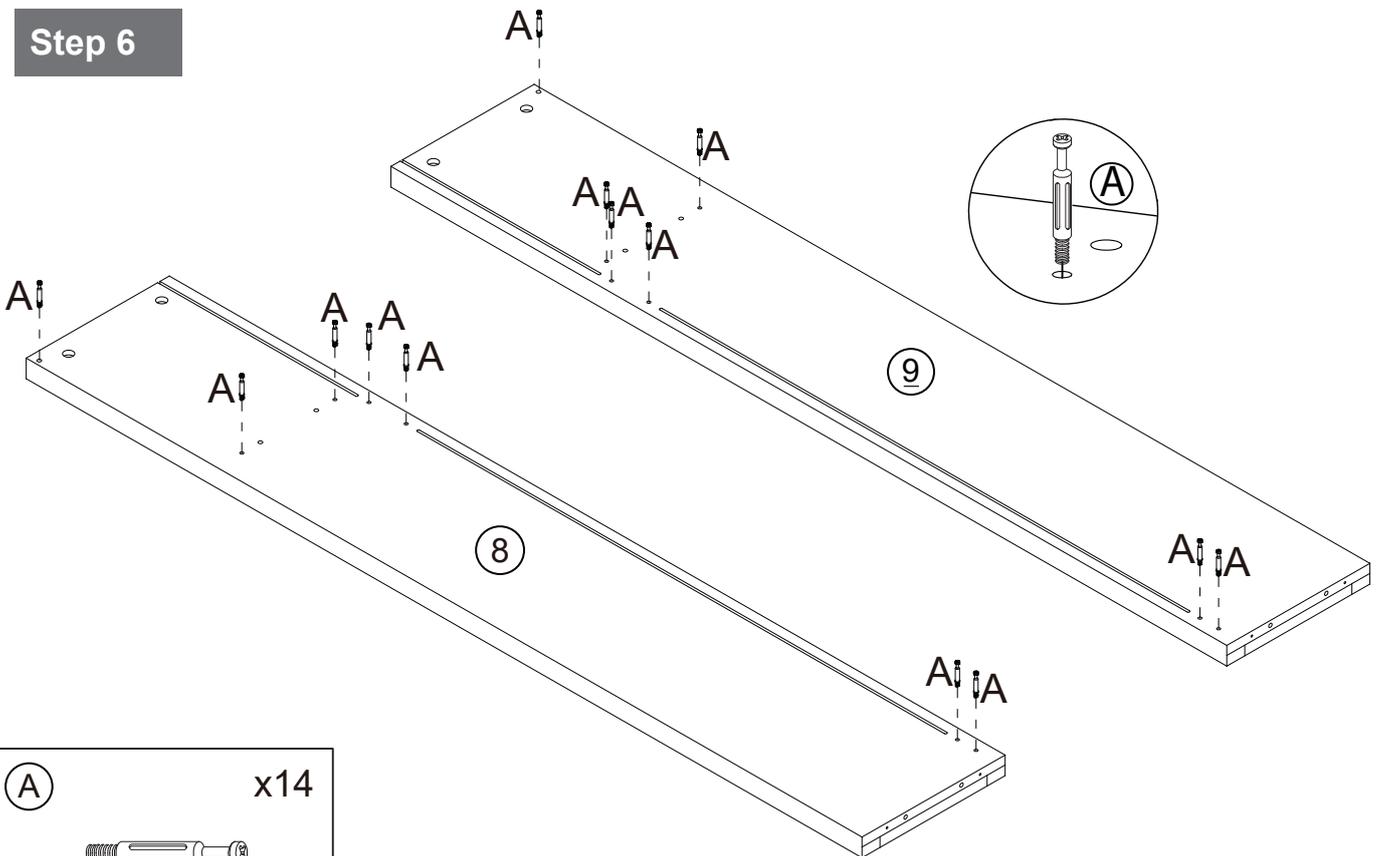

Assembly Instructions



Step 7

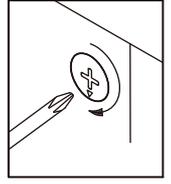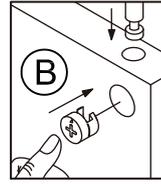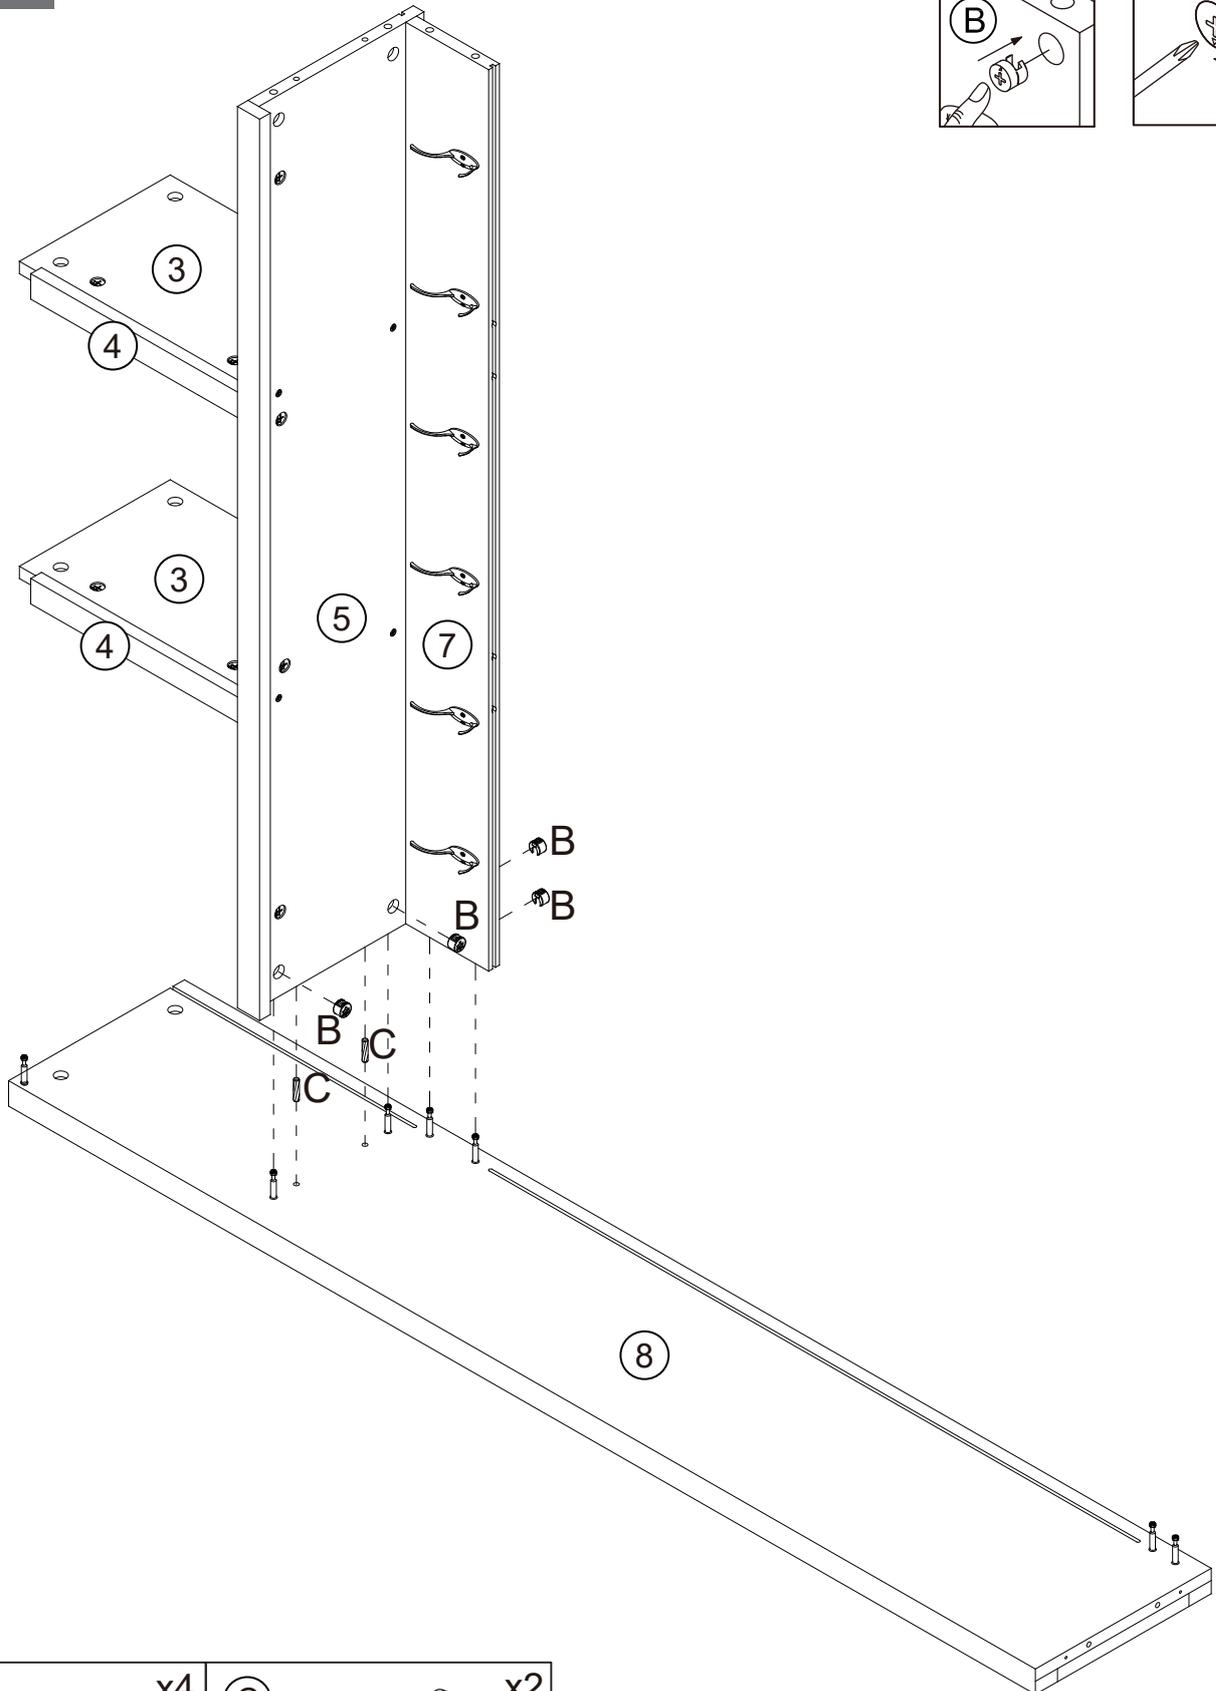

 (B)  x4	 (C) x2
--	---

Assembly Instructions




Step 8

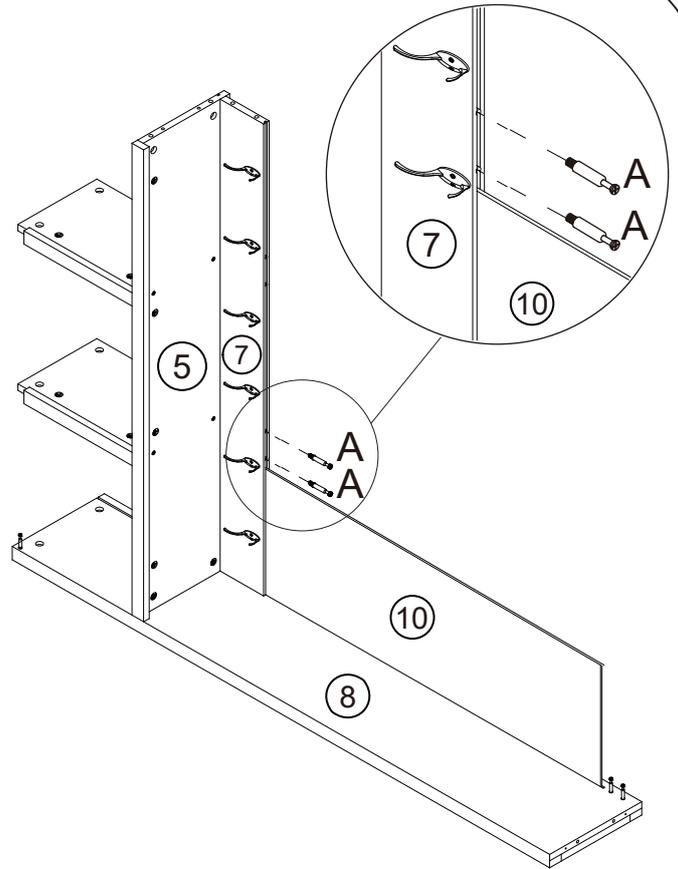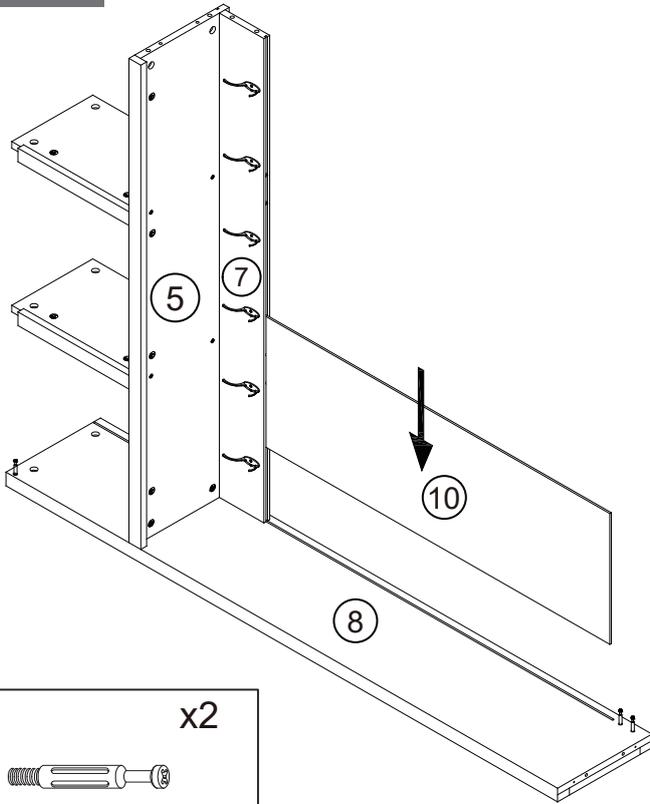

(A) x2



Step 9

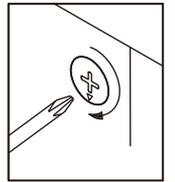
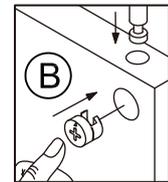
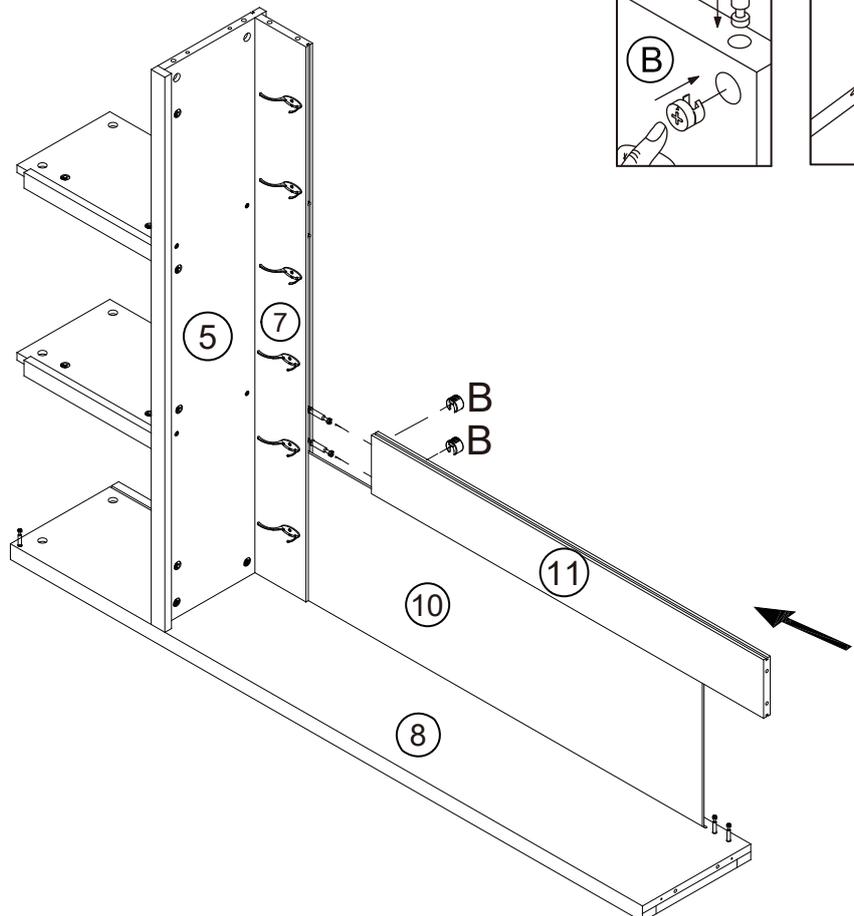


(B) x2





Assembly Instructions

Step 10

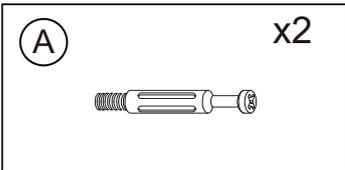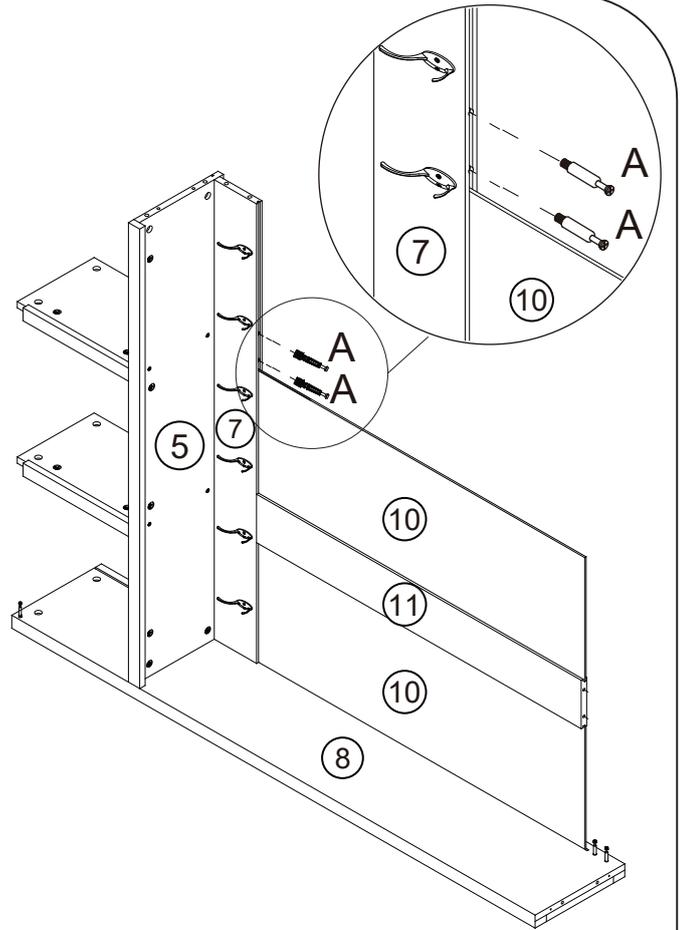
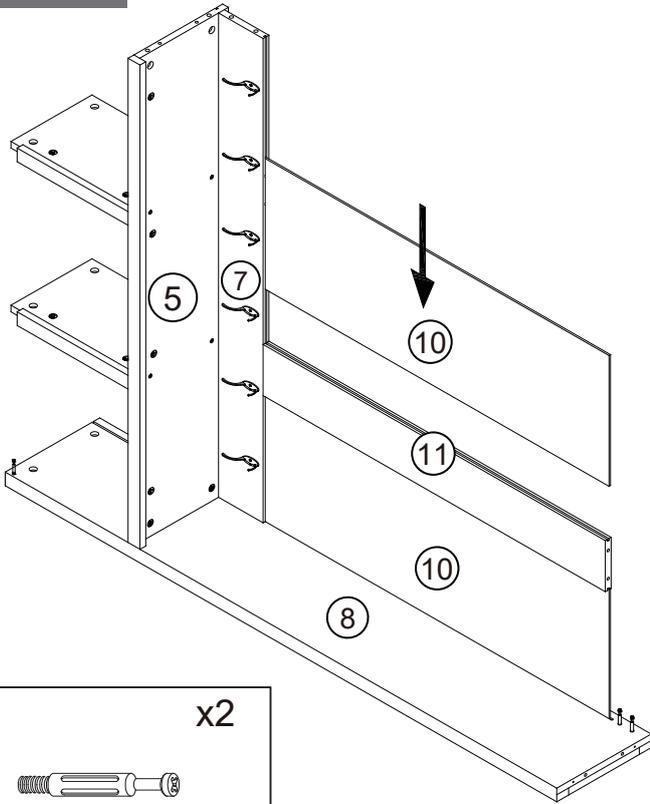


Step 11

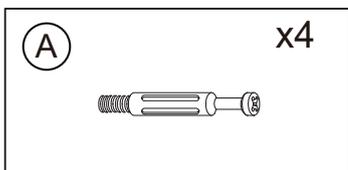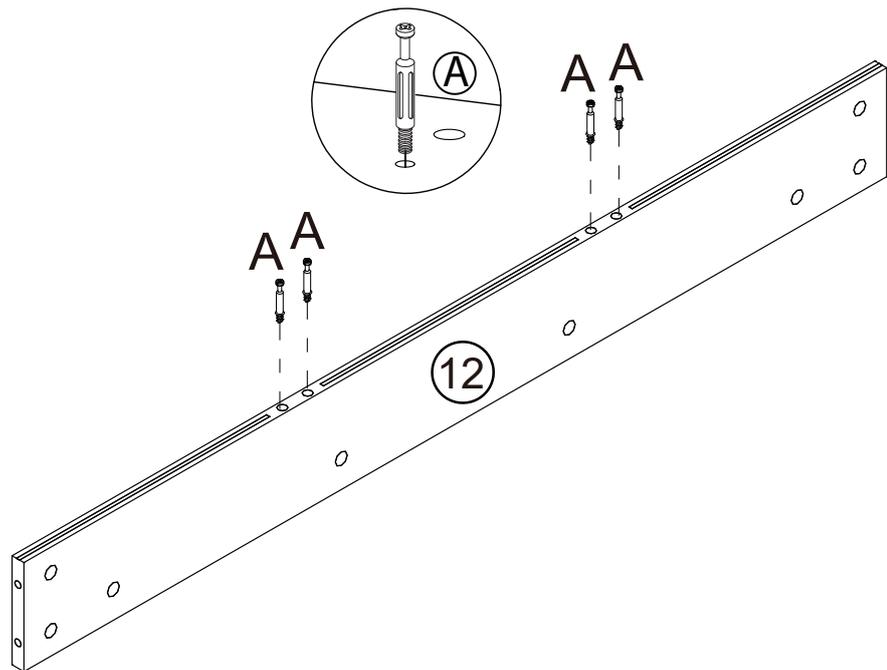


Assembly Instructions

Step 12


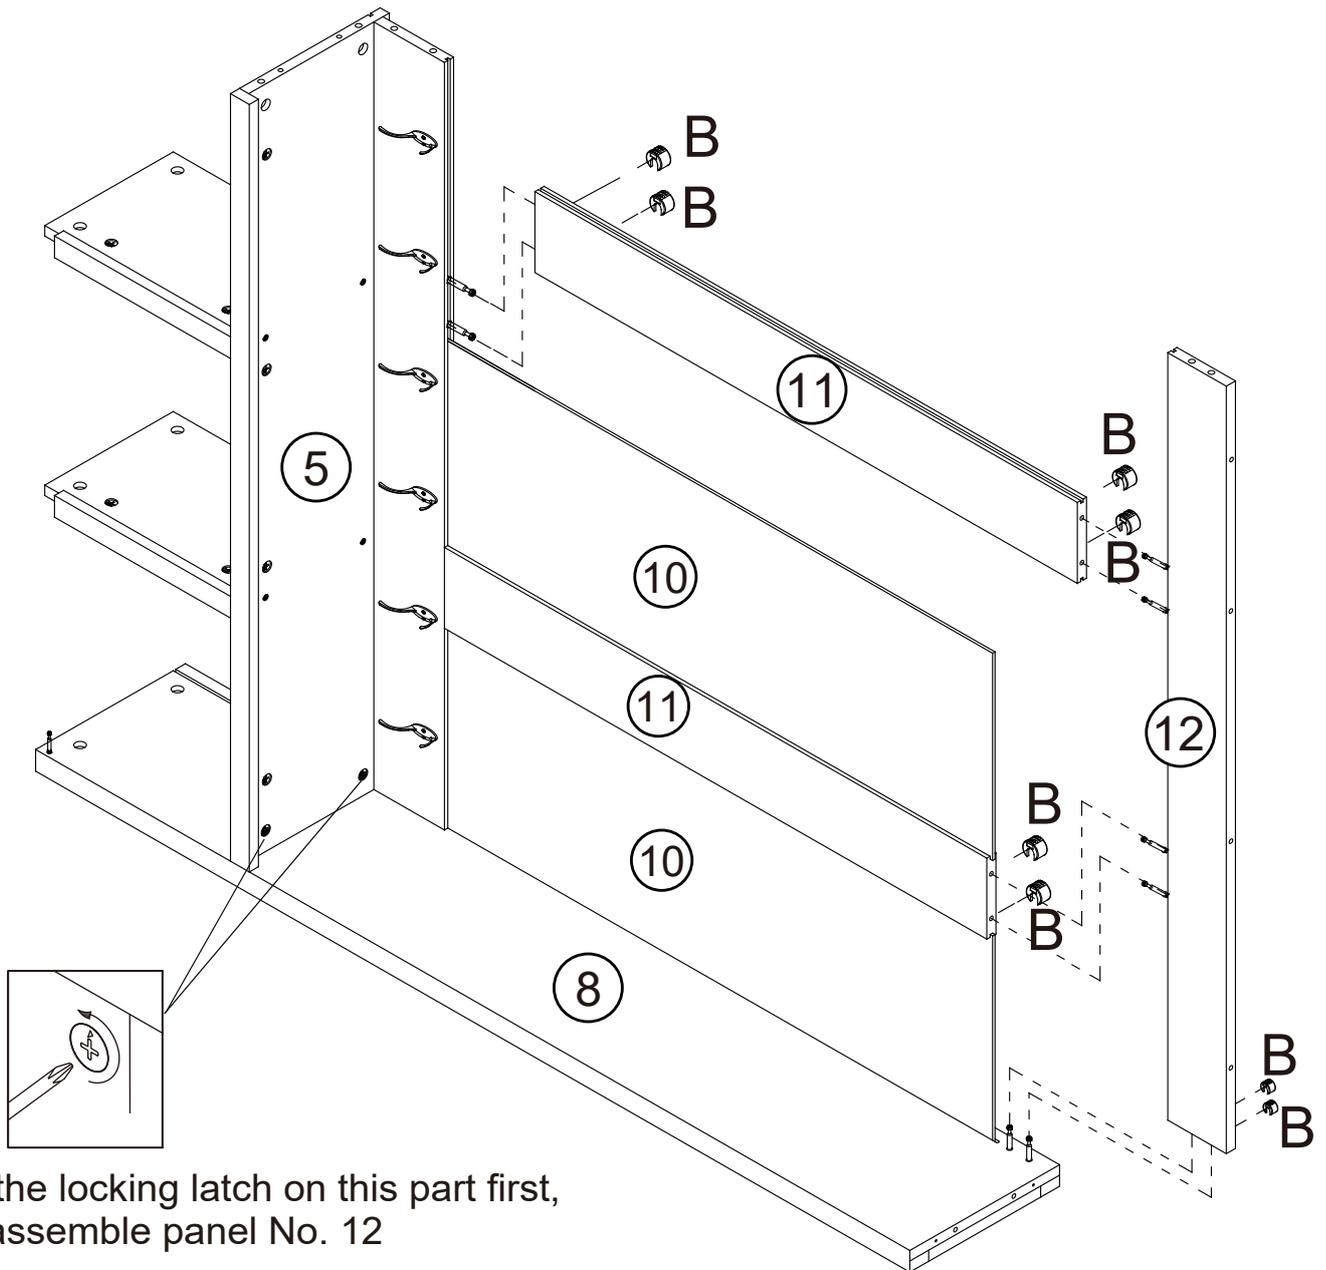
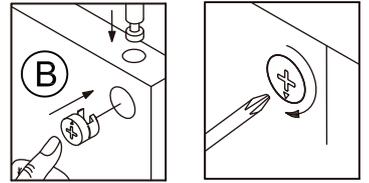


Open the locking latch on this part first,
then assemble panel No. 12

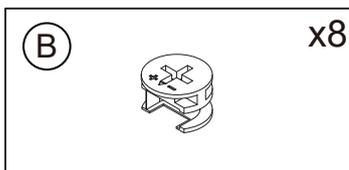


Assembly Instructions

Step 13

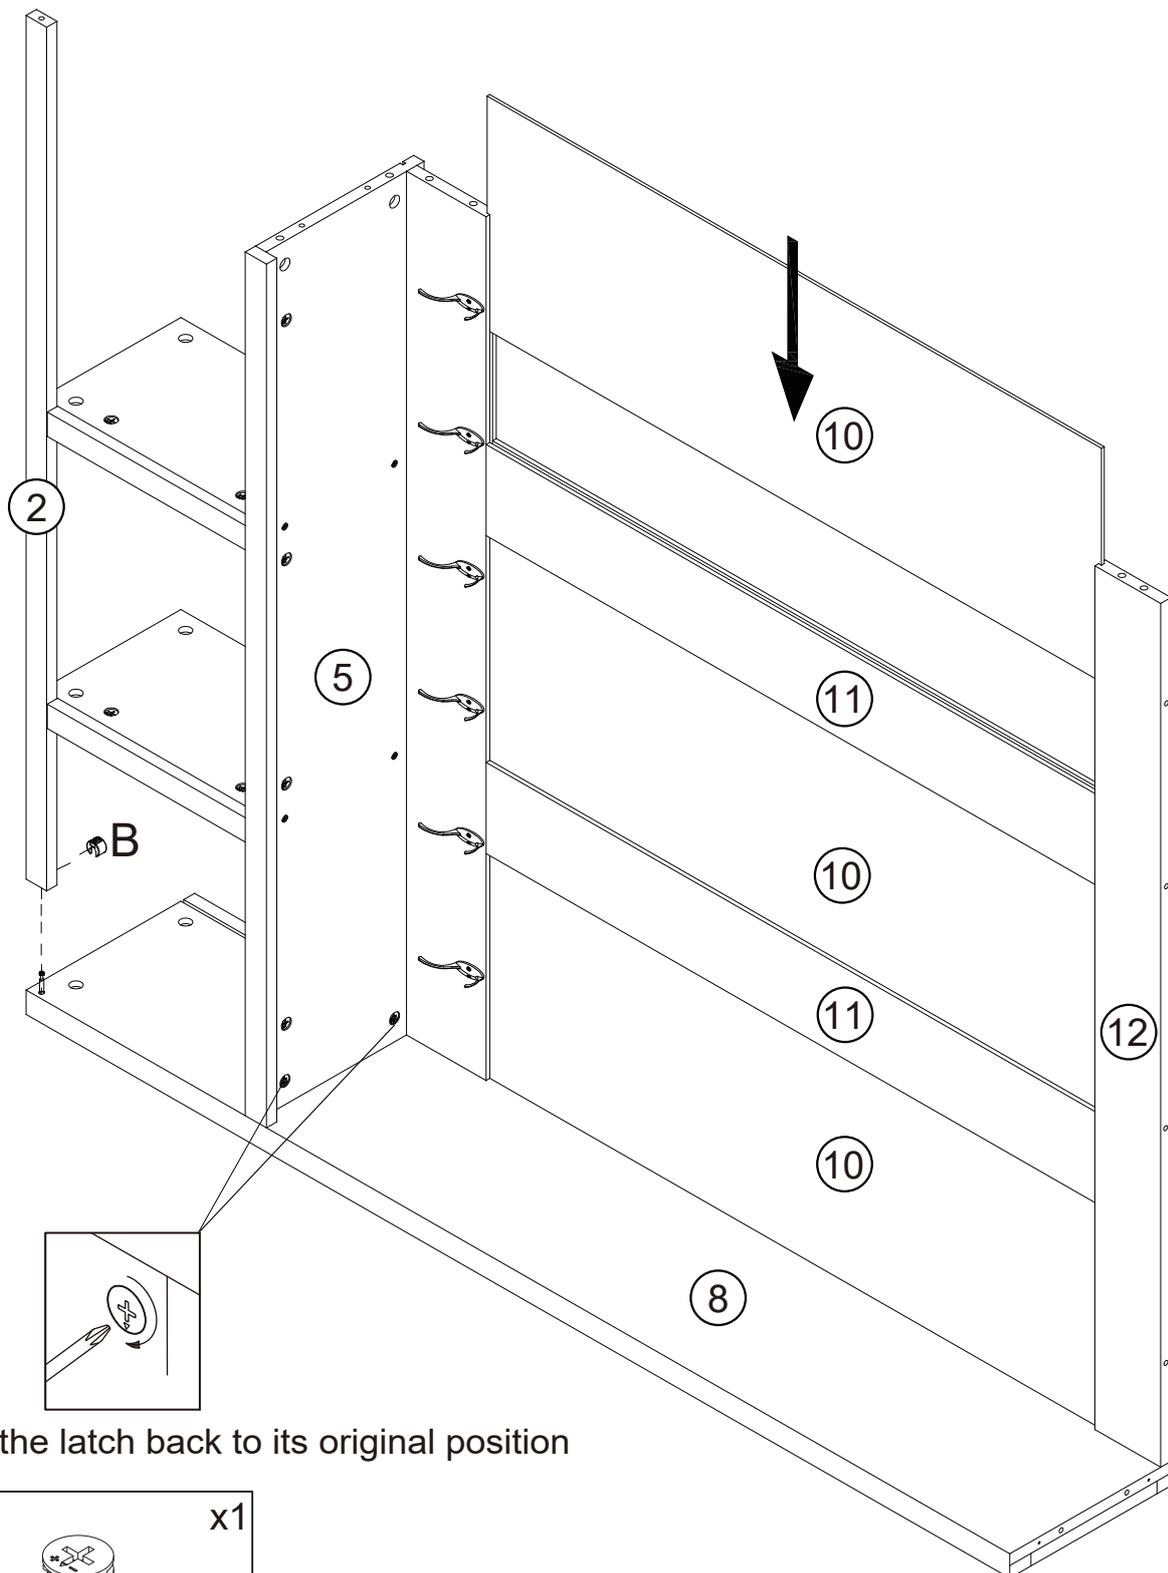
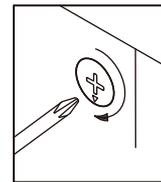
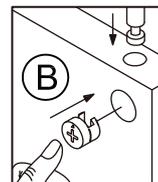



Lock the latch back to its original position

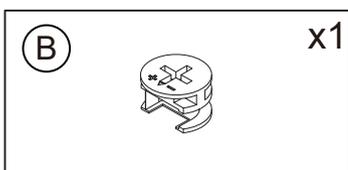

Assembly Instructions



Step 14

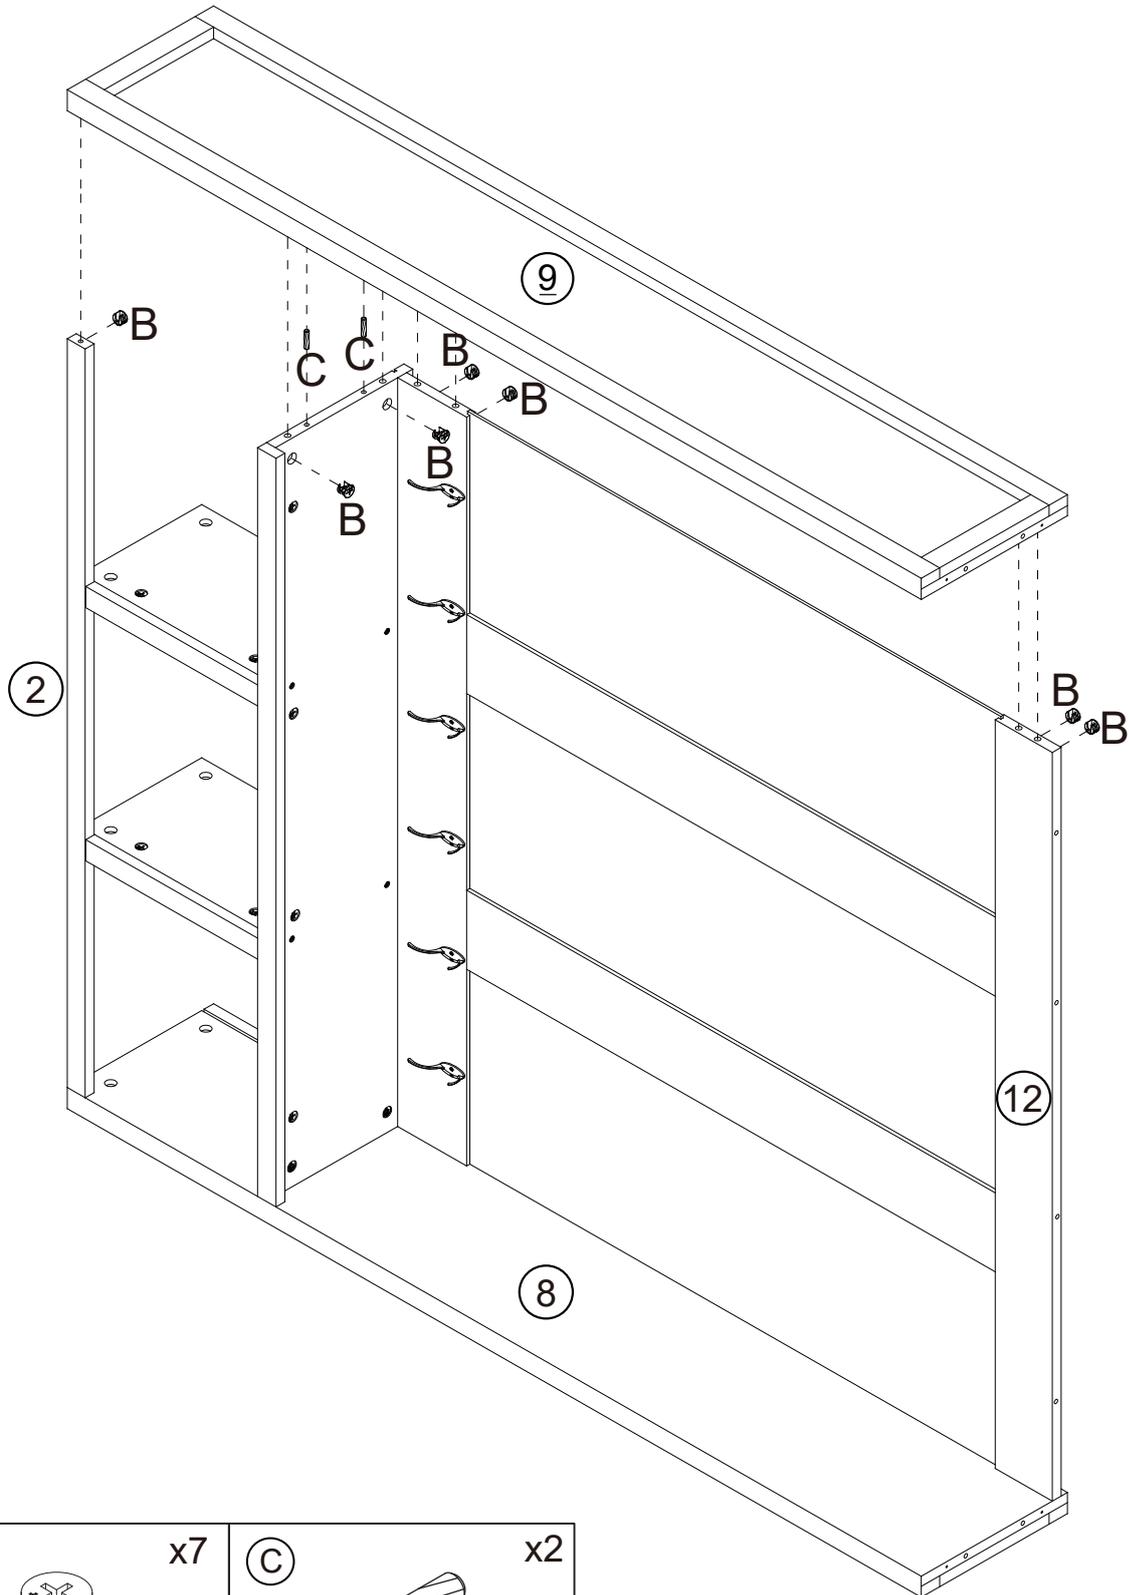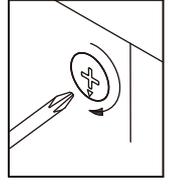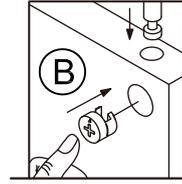




 (B)  x7	 (C)  x2
--	---

Assembly Instructions

Step 15




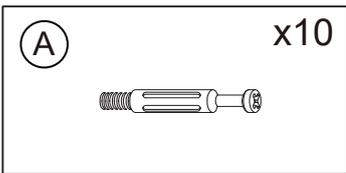
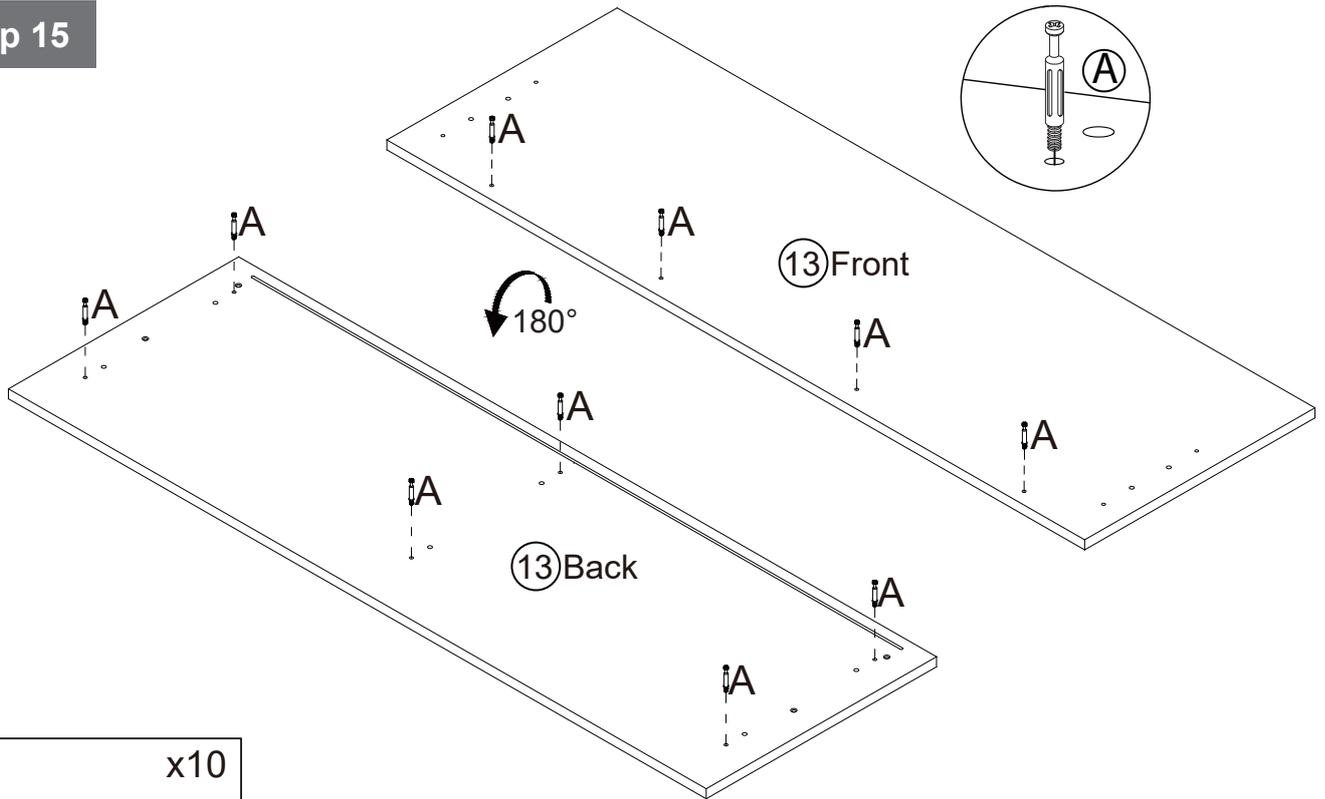


Step 16

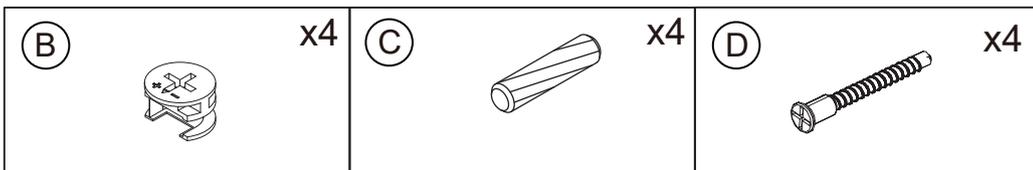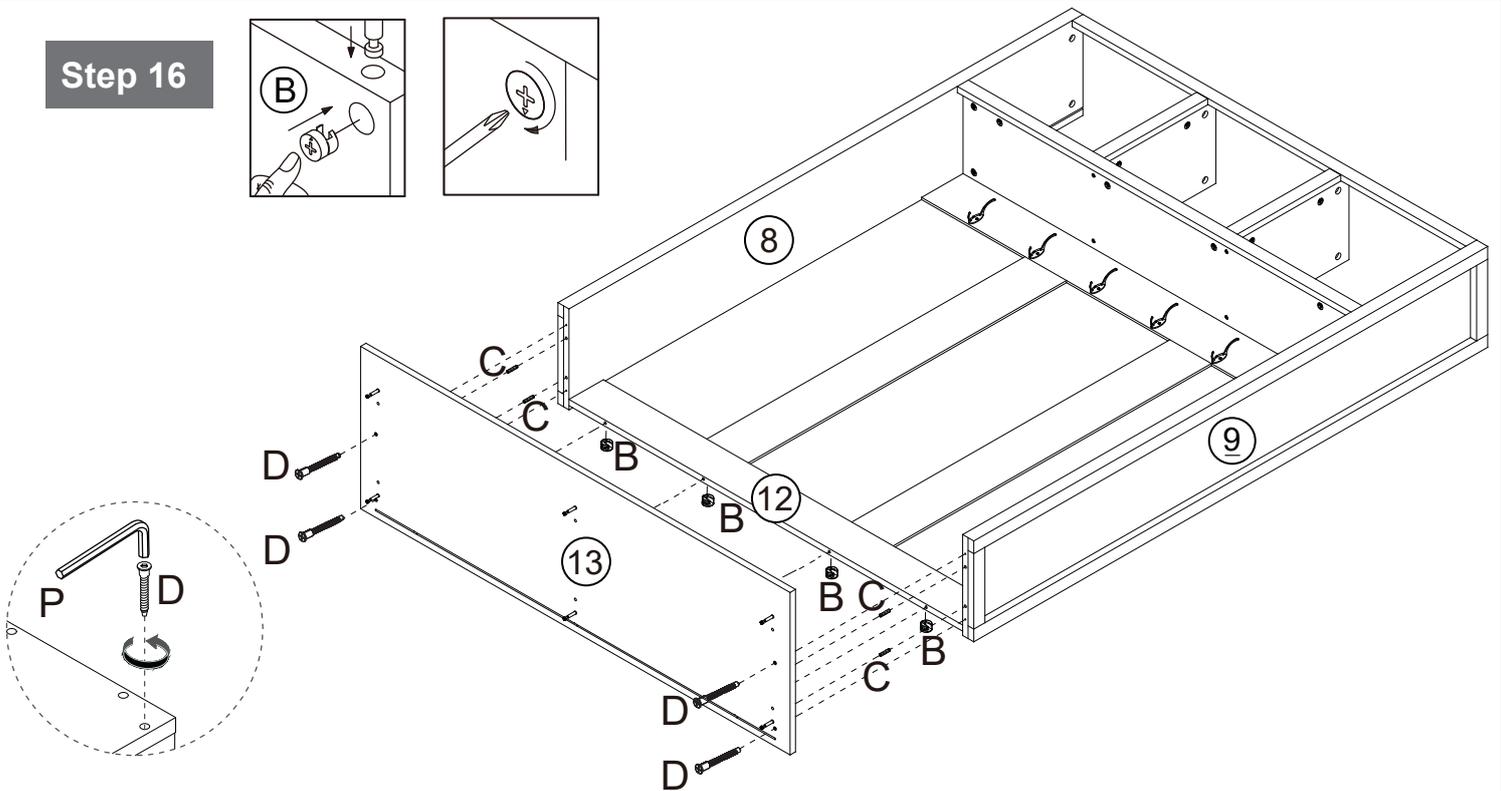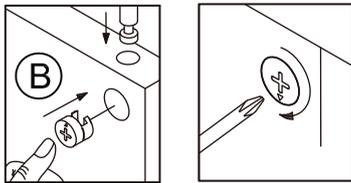







Assembly Instructions

Step 17

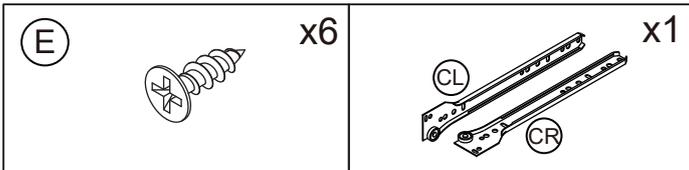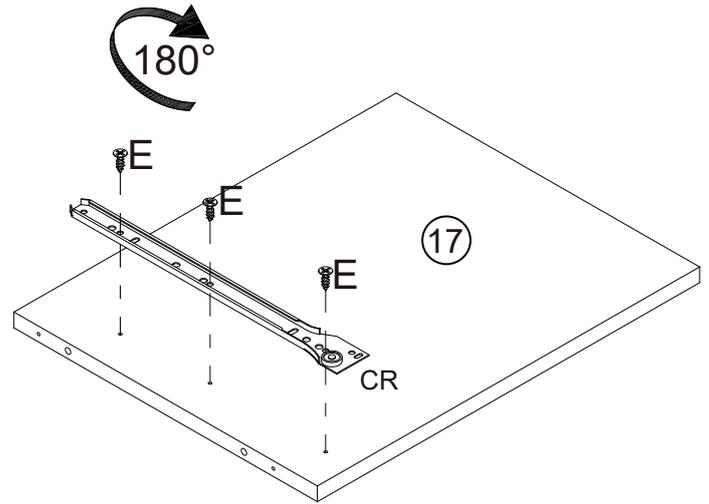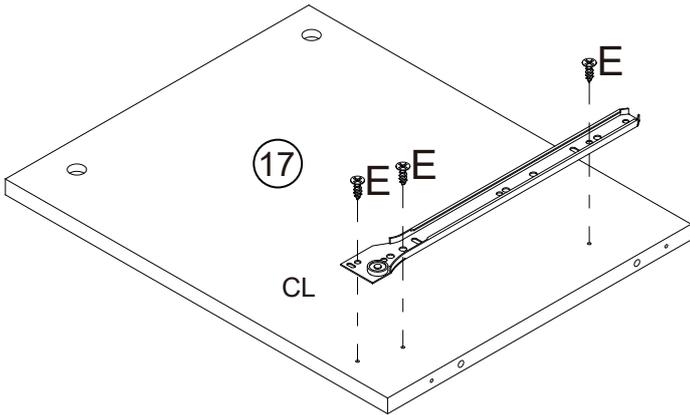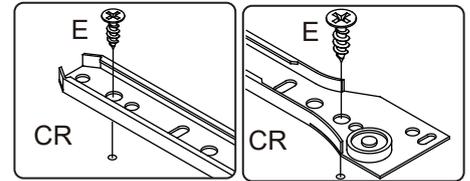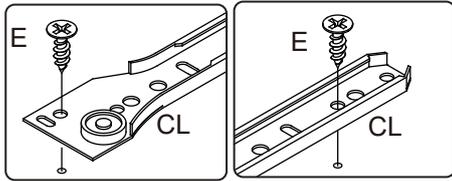



Both sides of board#17 need to be installed in this step

Step 18

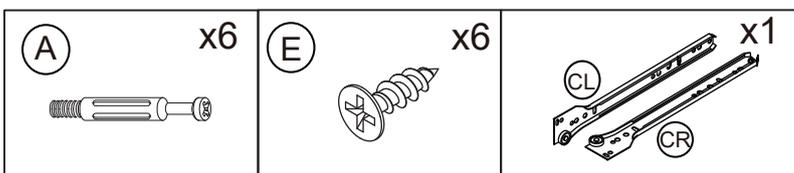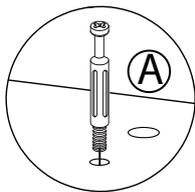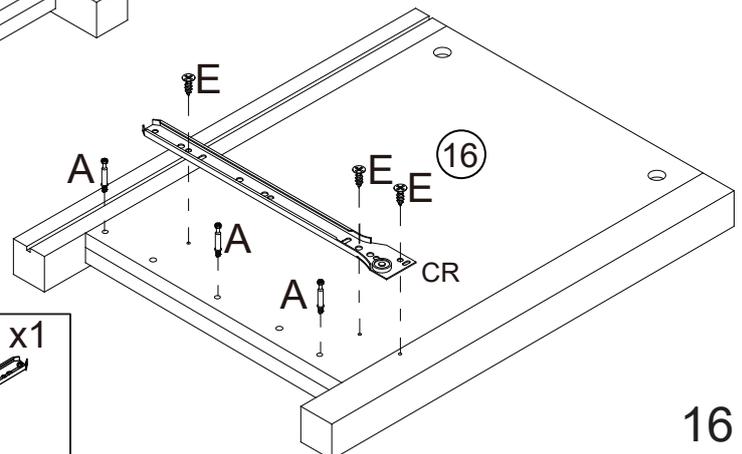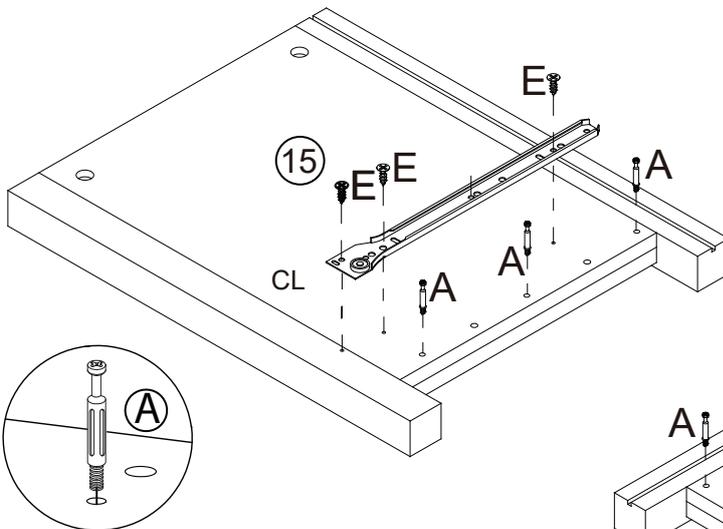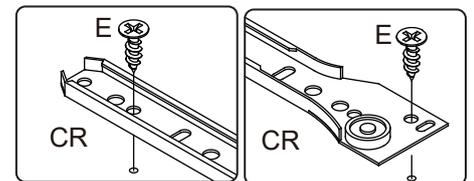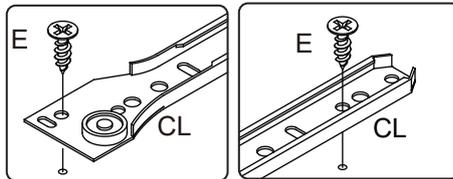


Assembly Instructions


Step 19

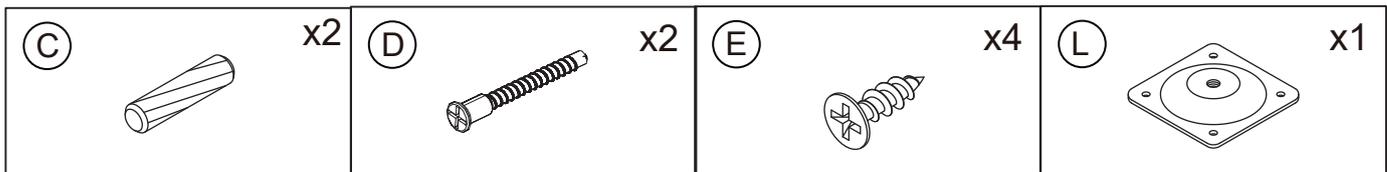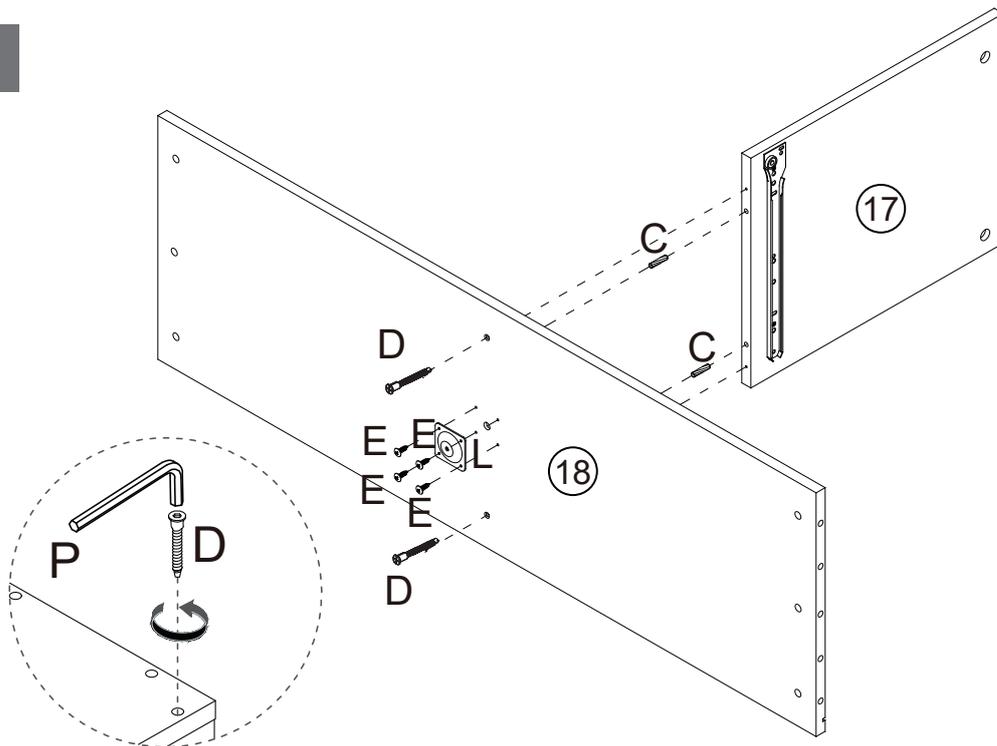

Step 20

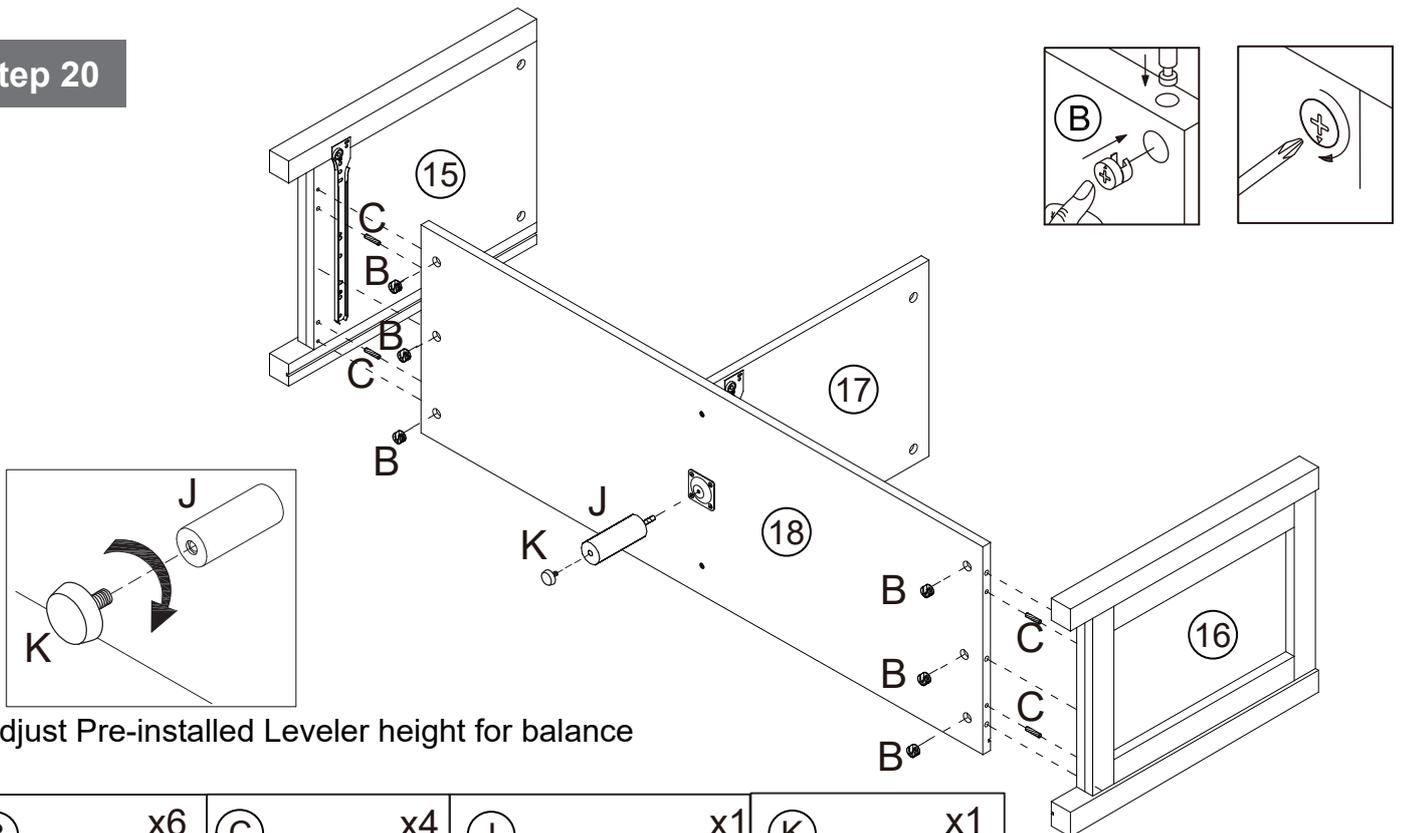


Adjust Pre-installed Leveler height for balance


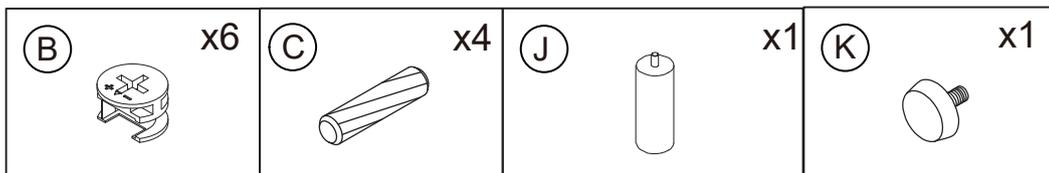


Assembly Instructions

Step 21




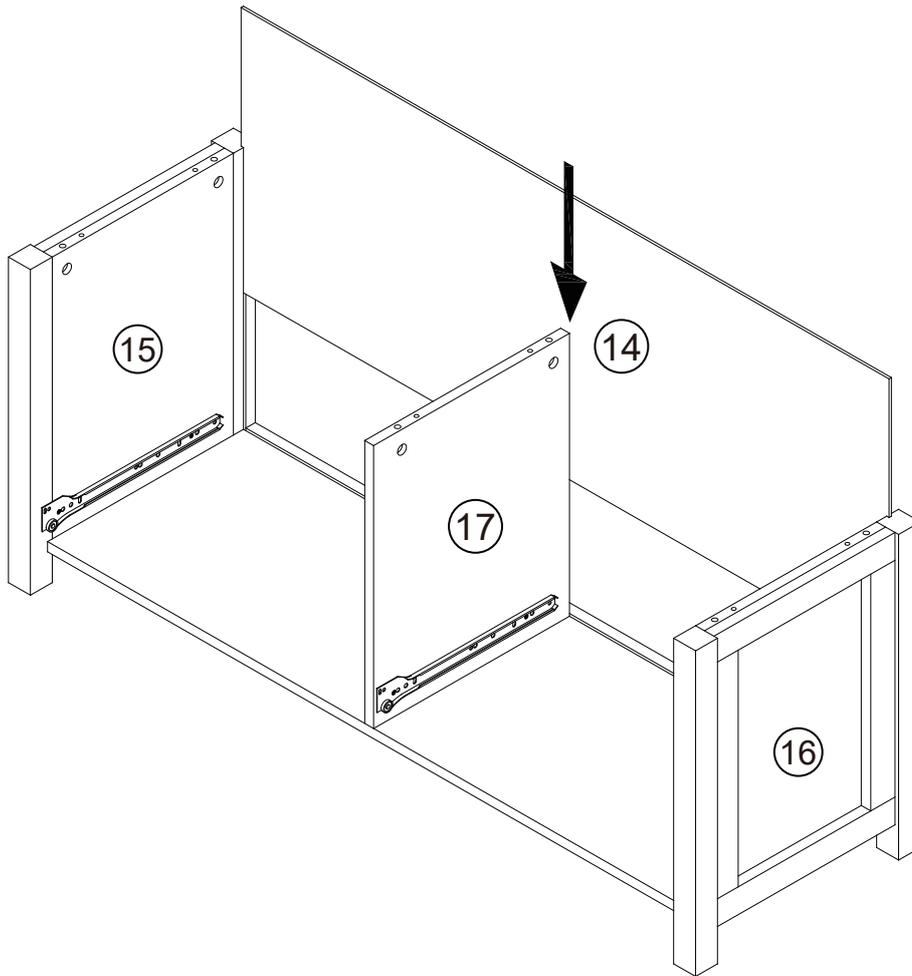


Step 22

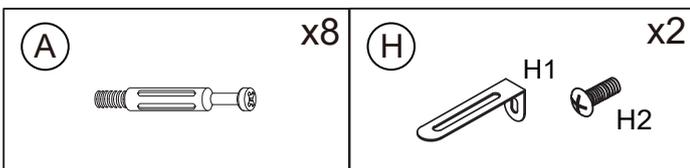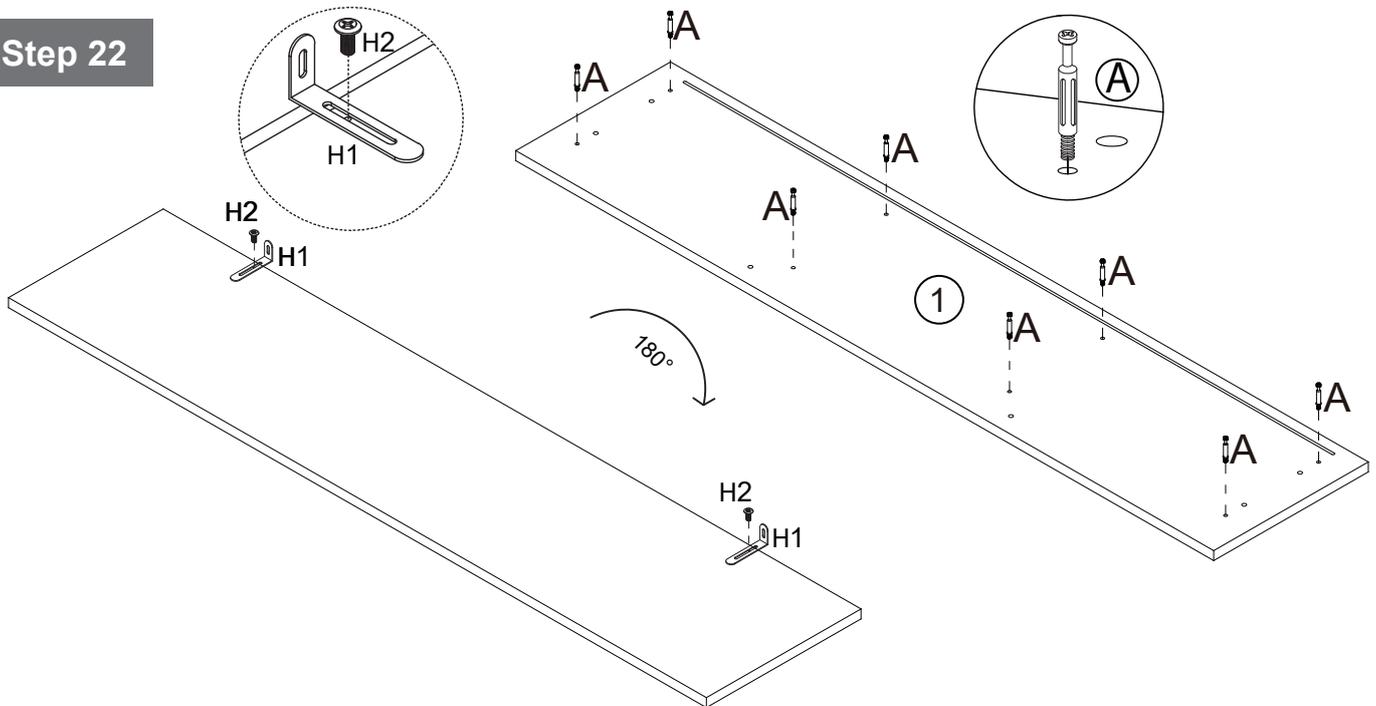



Assembly Instructions



Step 23

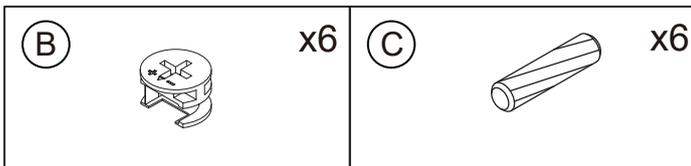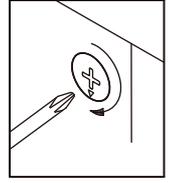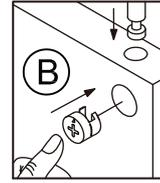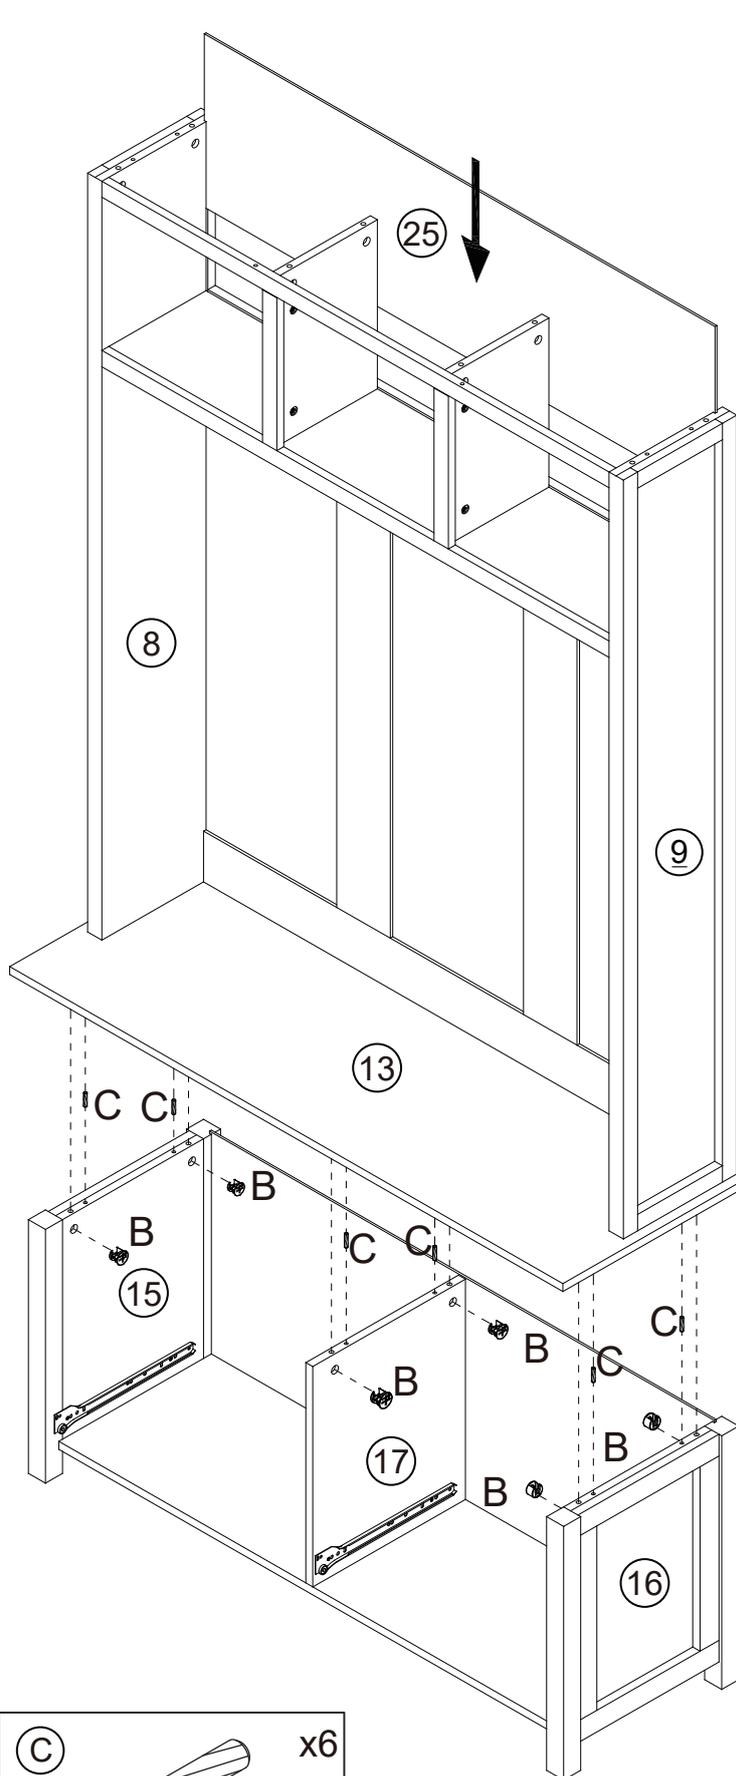

Assembly Instructions



Step 24

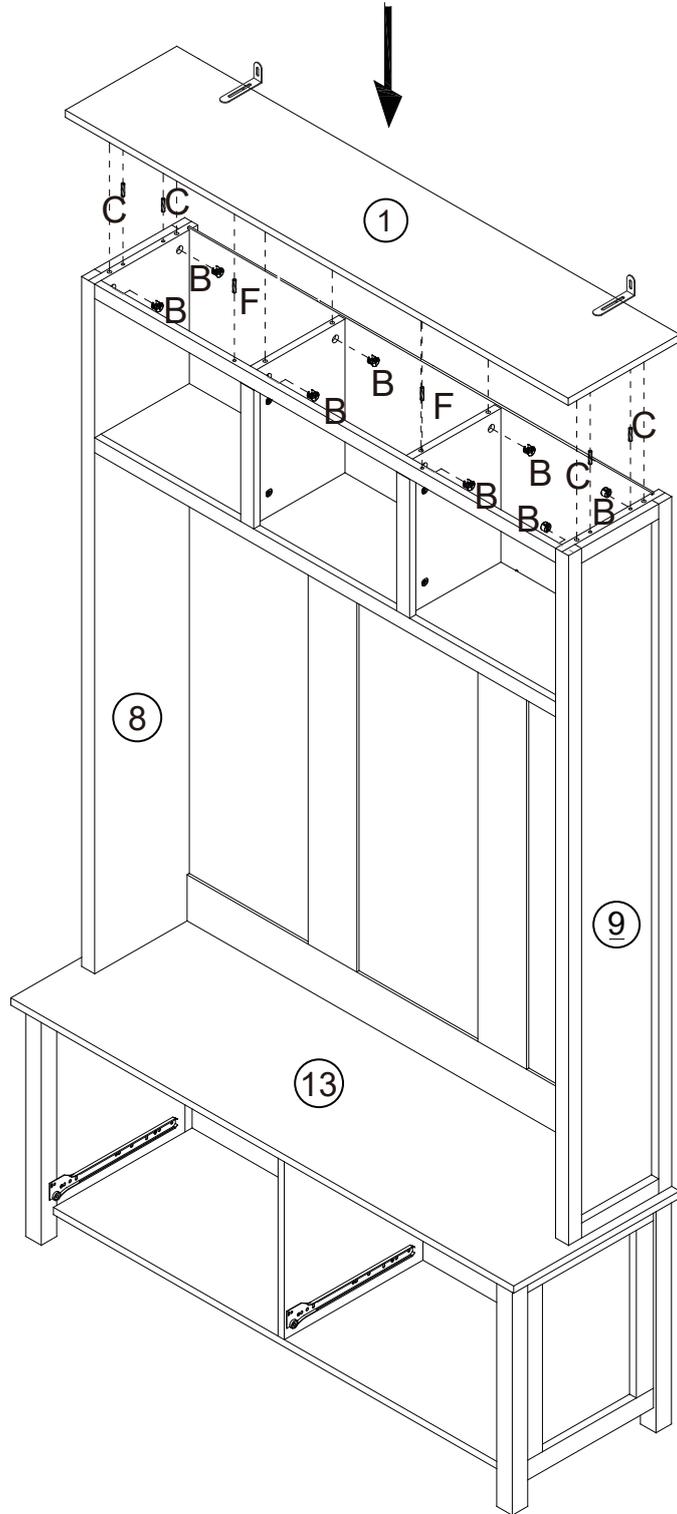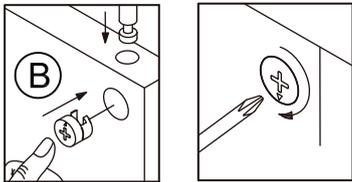



(B)		x8	(F)		x2	(C)		x4
------------	---	----	------------	---	----	------------	--	----

Assembly Instructions

Step 25



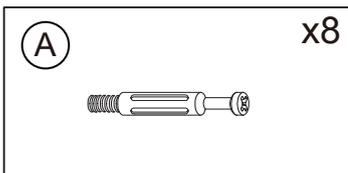
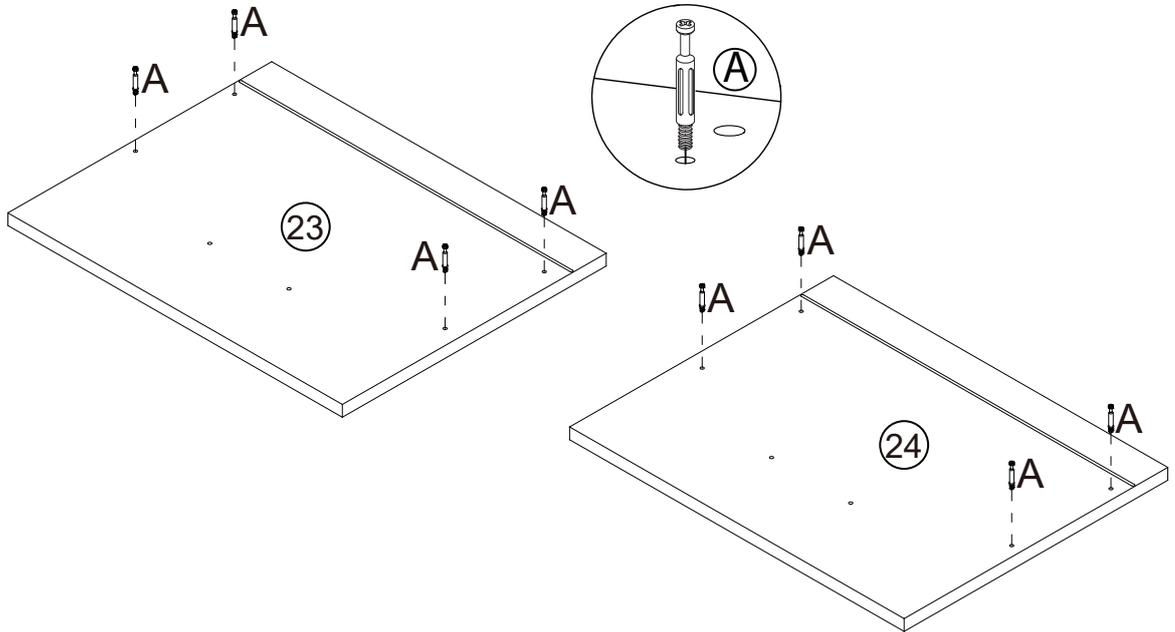


Step 26

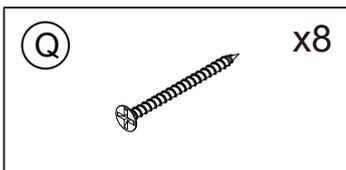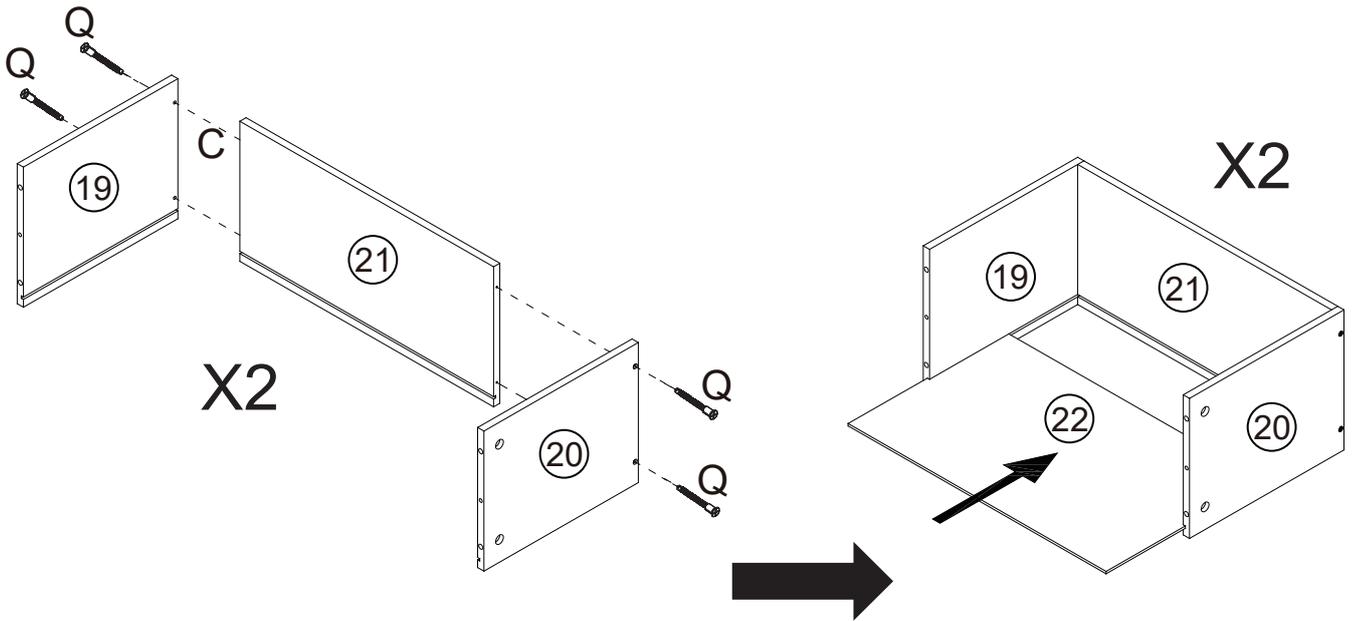





Assembly Instructions



Step 27

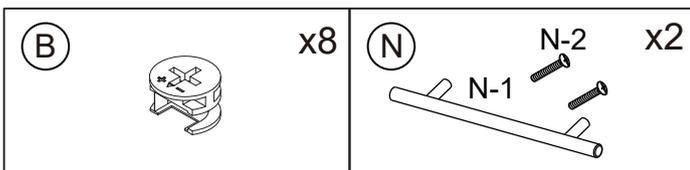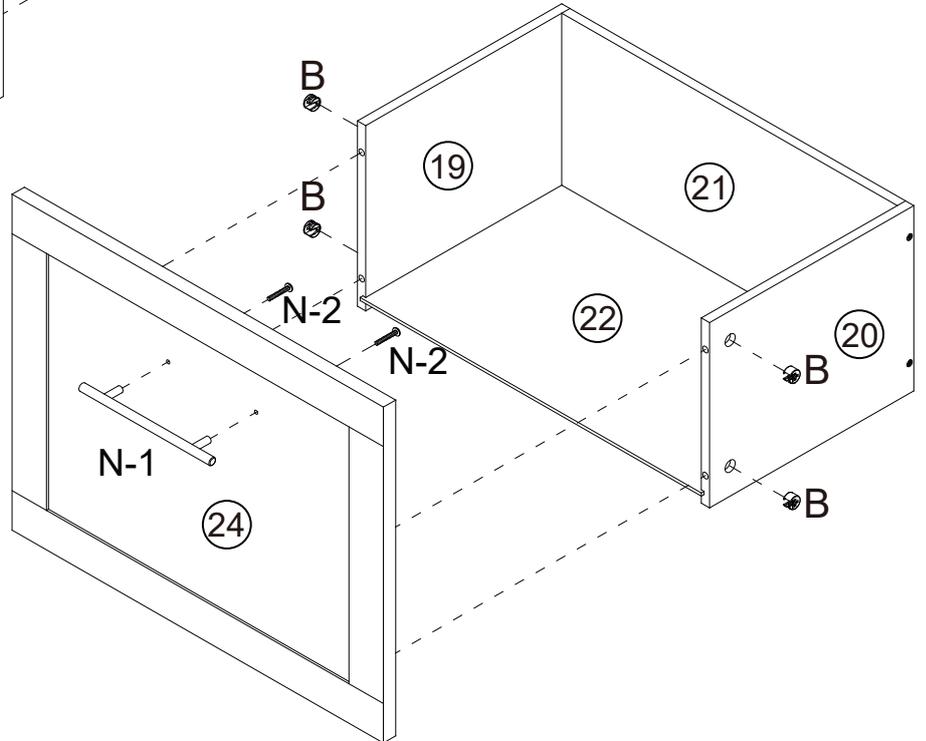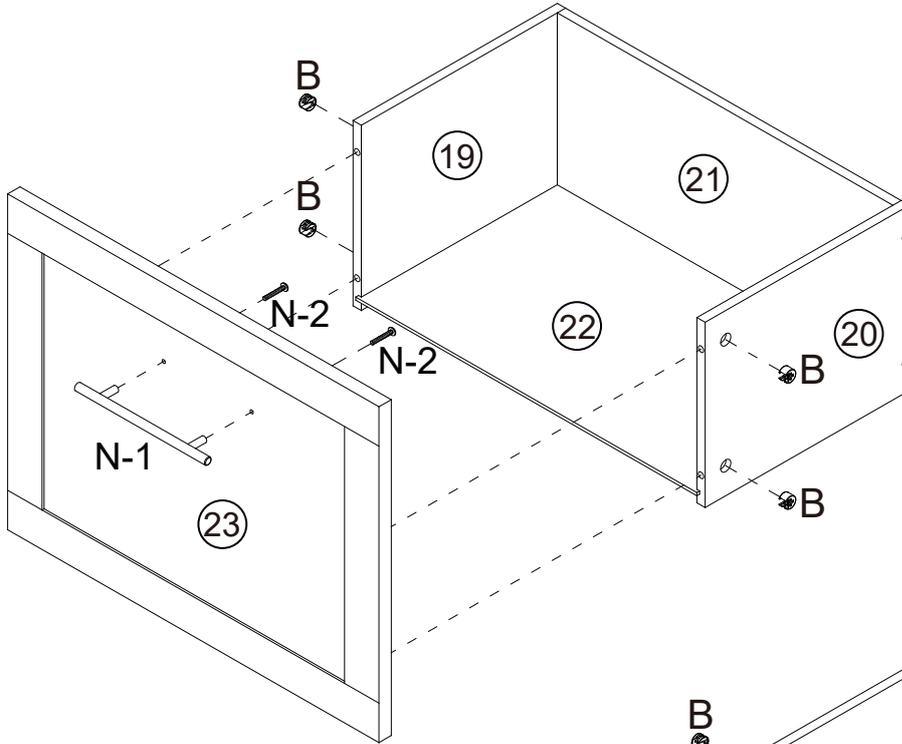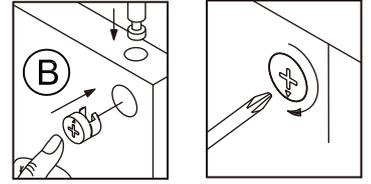

Assembly Instructions




Step 28

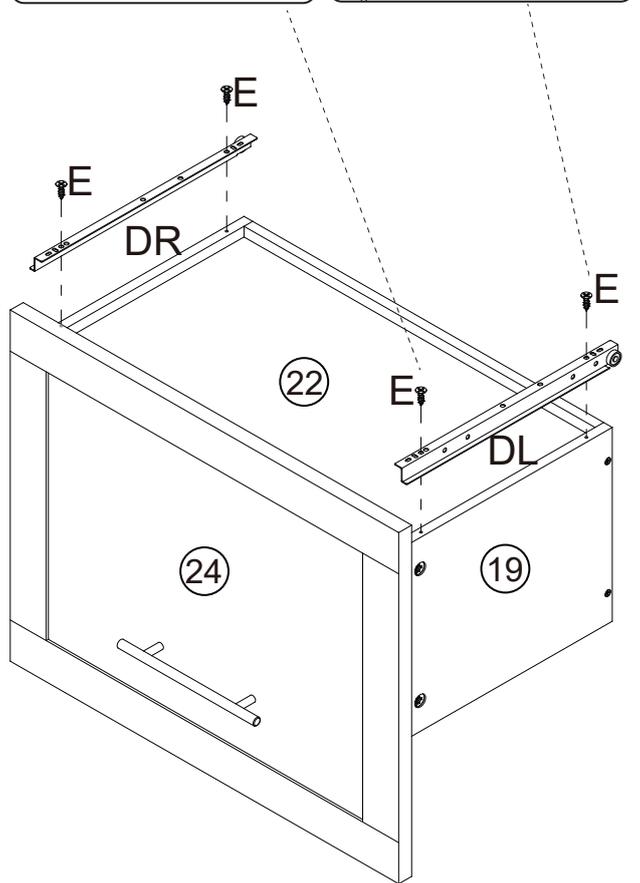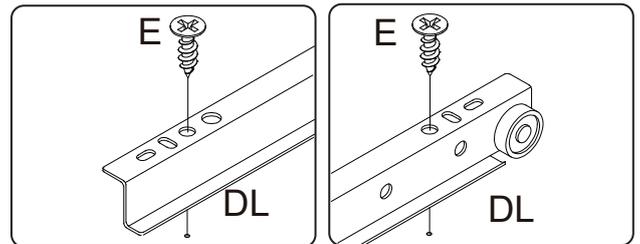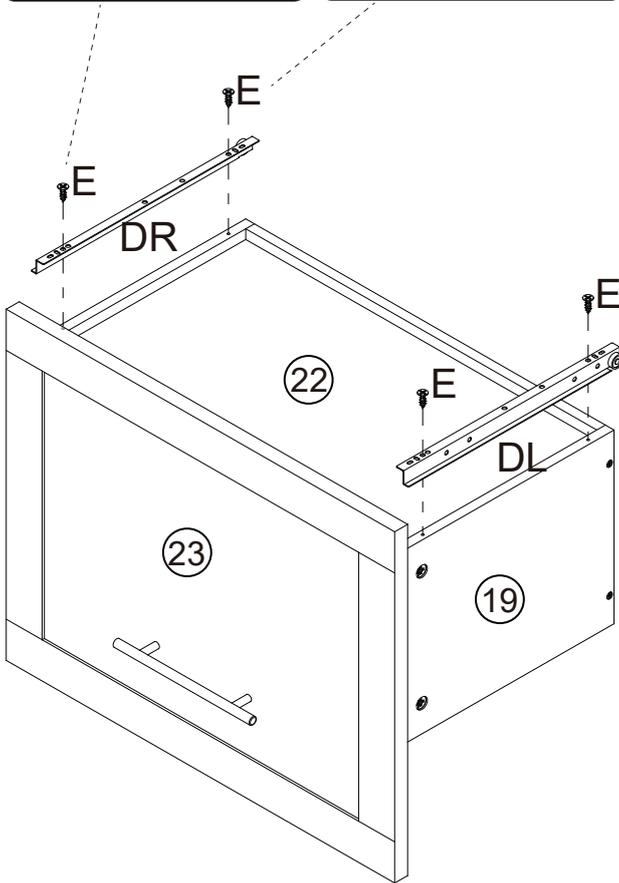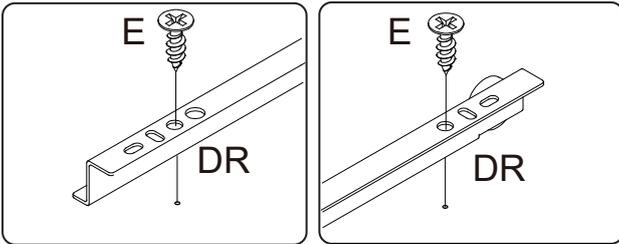

 E	x8	 DR	Runner 300mm x 2	 DL	Runner 300mm x 2
--	----	---	------------------	--	------------------

Assembly Instructions


Step 29

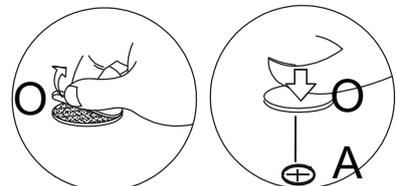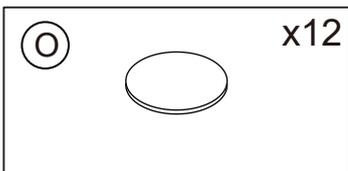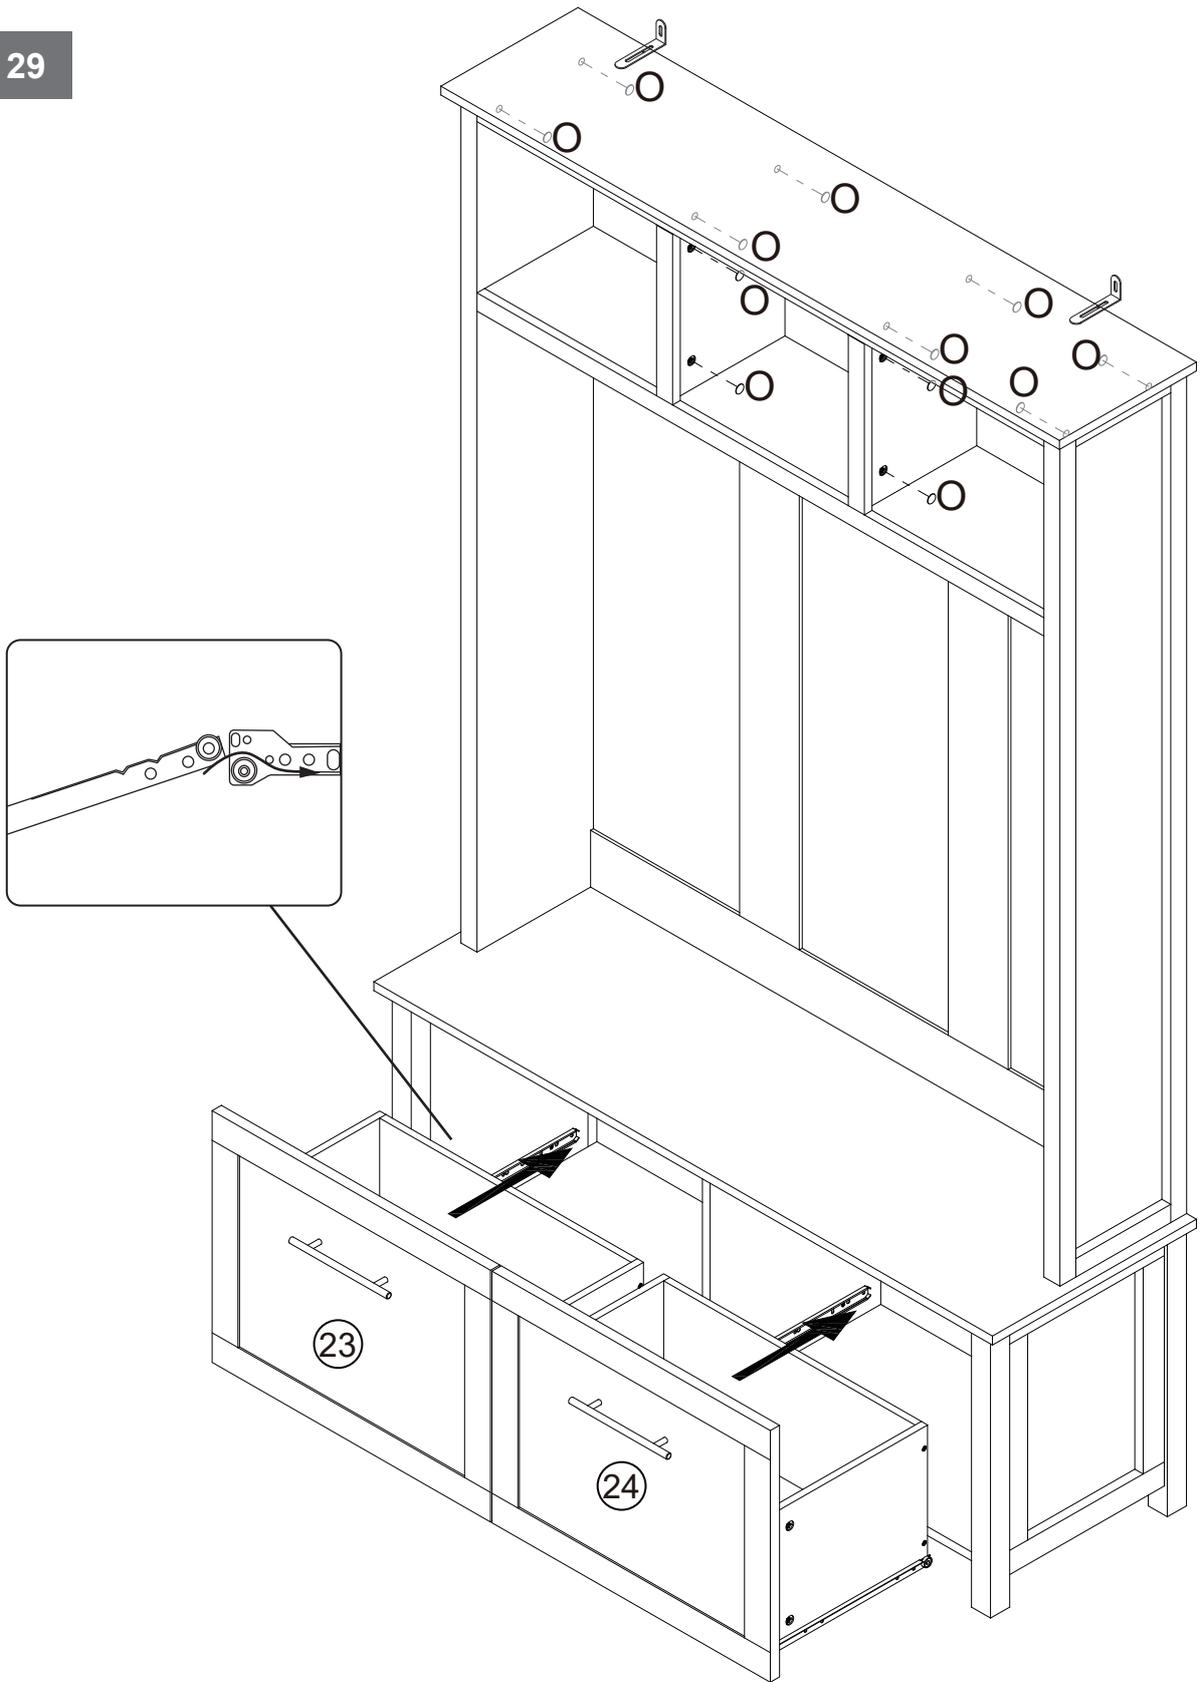


Please stick the hardware "O" on the exposed cam lock hole that makes your product more beautiful.

Assembly Instructions

Step 30



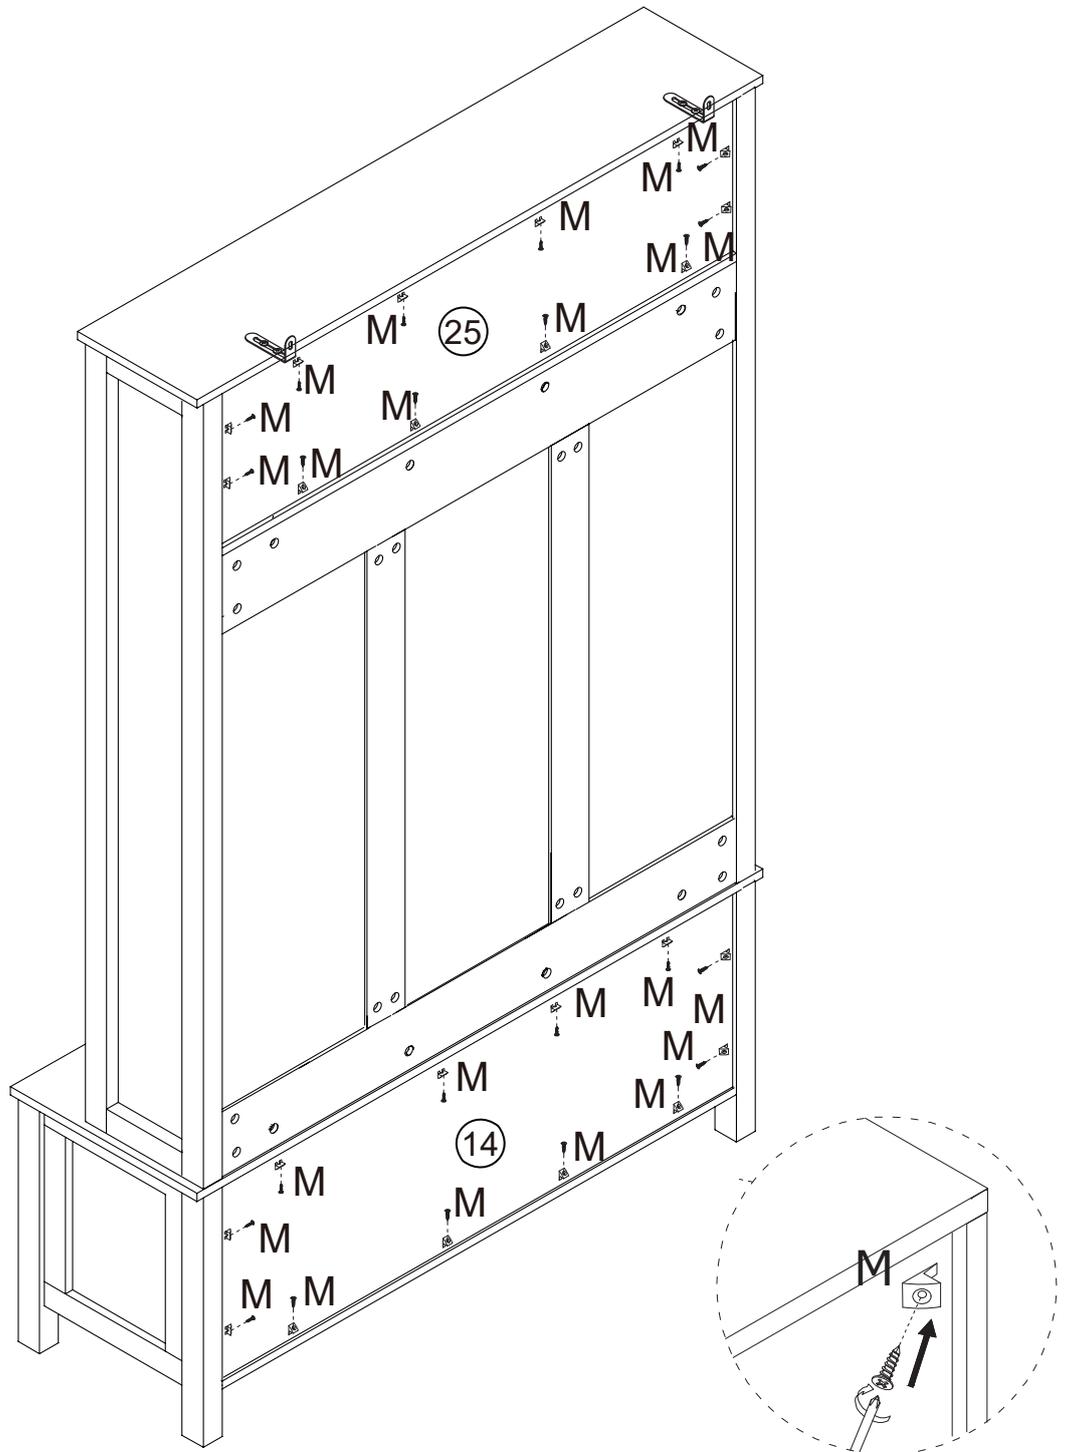


As the picture shows,
Fix hardware "M" into the gap with screws
to make the back panel more stable.

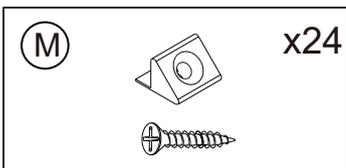

Assembly Instructions

Step 31

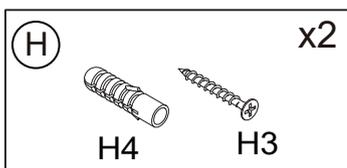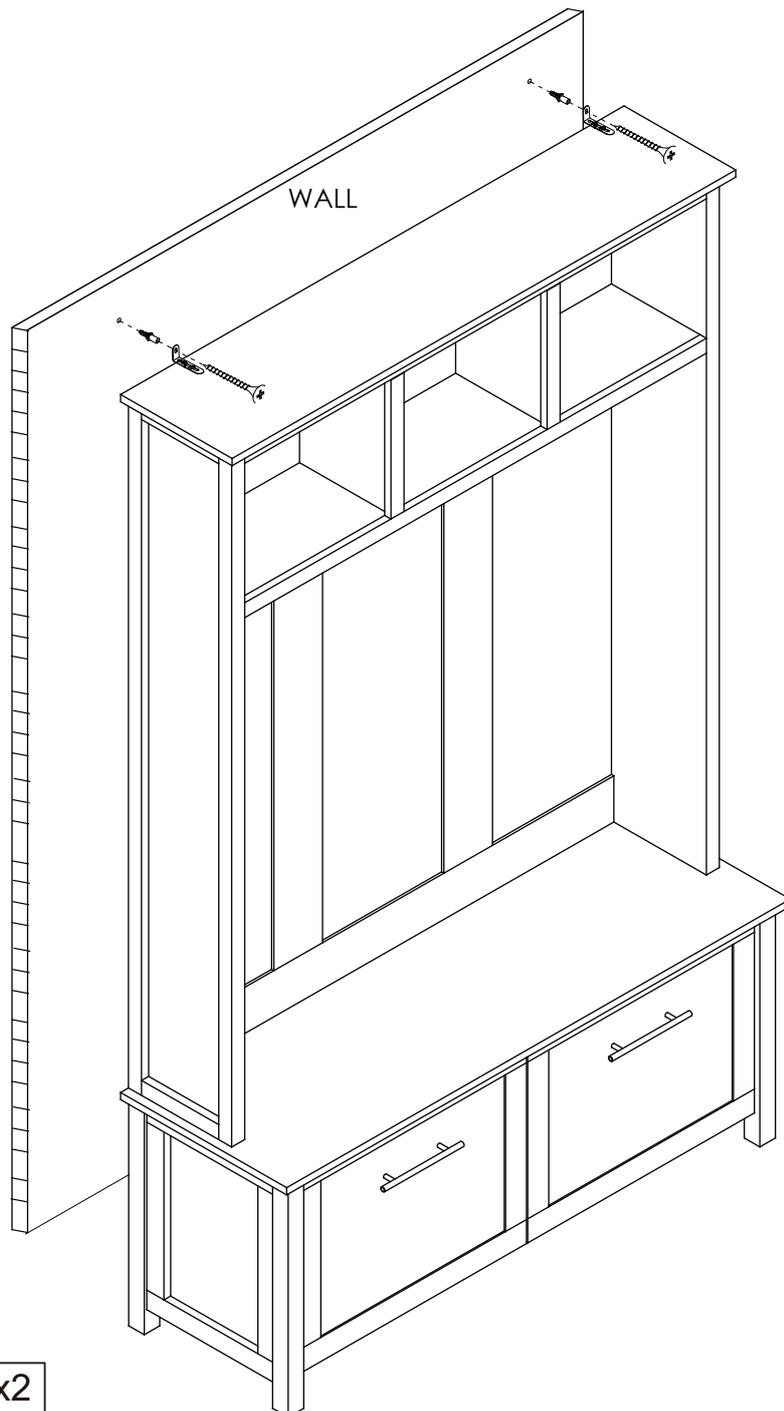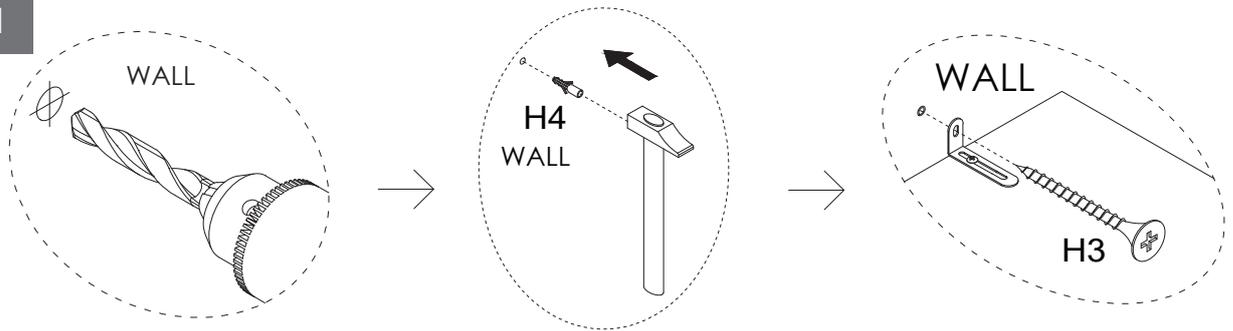

Assembly Instructions

Step 32

