

Hall tree


Assembly Instructions - Please keep for future reference

SKU: N721P428436/N721P428437

! WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

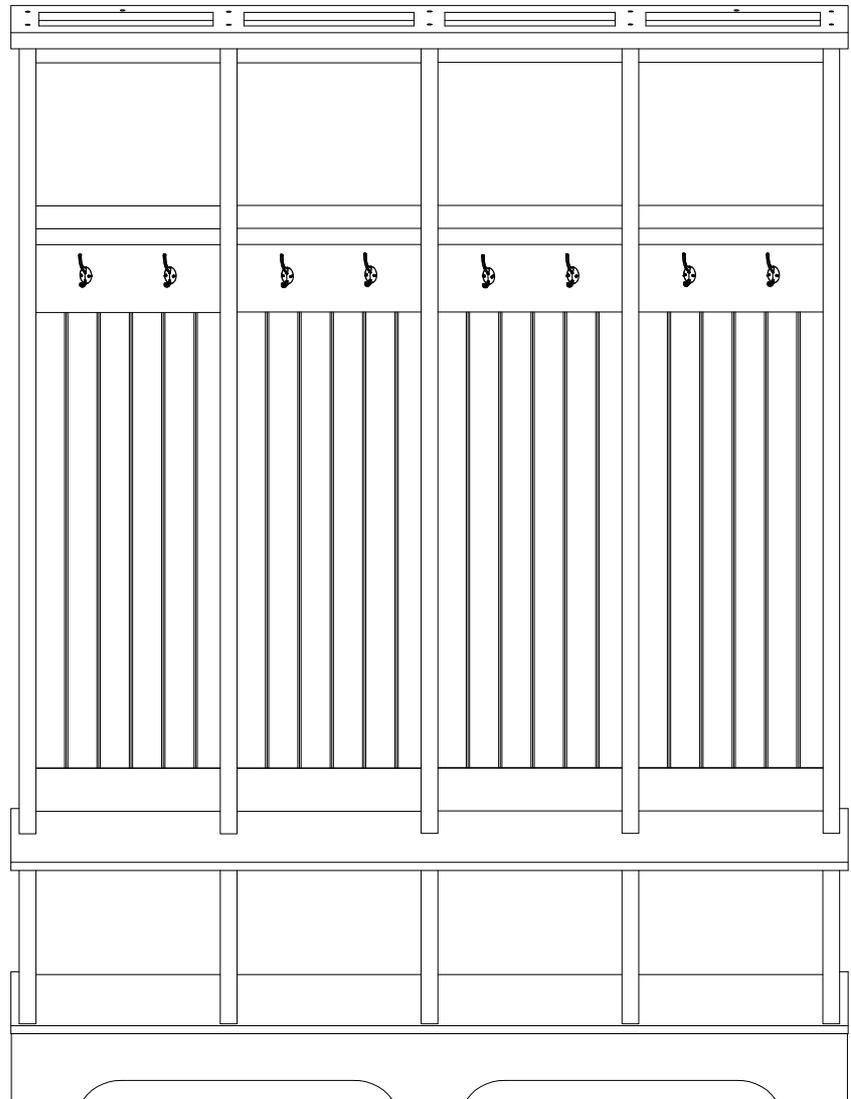

Dimensions

Width-59inch
Depth-15.7inch
Height-76.8inch

Important-Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions





To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose







Components - Fittinas

Please check you have all the panels listed below

BOX A - N721P428436
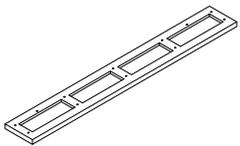
<p>① x1</p>  <p>1500x200x30mm</p>	<p>② x1</p>  <p>1470x185x30mm</p>	<p>③ x1</p>  <p>1470x185x30mm</p>	<p>④ x3</p>  <p>1470x185x30mm</p>	<p>⑪ x1</p>  <p>1500x398x15mm</p>	<p>⑨ x4</p>  <p>336x346x4mm</p>
<p>⑮ x1</p>  <p>1500x398x15mm</p>	<p>⑯ x1</p>  <p>1417x297x4mm</p>	<p>⑰ x3</p>  <p>364x128x15mm</p>	<p>⑱ x1</p>  <p>1498x128x15mm</p>	<p>⑲ x1</p>  <p>1498x128x15mm</p>	






BOX B - N721P428437
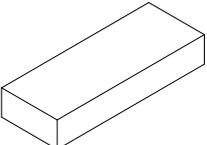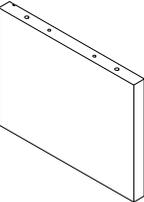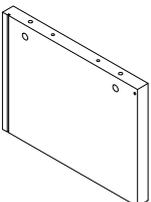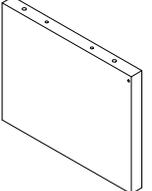
<p>⑤ x8</p>  <p>330x30x15mm</p>	<p>⑥ x4</p>  <p>330x184x30mm</p>	<p>⑦ x4</p>  <p>330x168x15mm</p>	<p>⑧ x4</p>  <p>330x80x15mm</p>	<p>Hardware Kit x1</p> 
<p>⑩ x4</p>  <p>858x336x4mm</p>	<p>⑫ x1</p>  <p>290x384x30mm</p>	<p>⑬ x1</p>  <p>290x384x30mm</p>	<p>⑭ x3</p>  <p>290x364x30mm</p>	


Components - Fittinas

Please check you have all the panels listed below

Note : The quantitie below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.
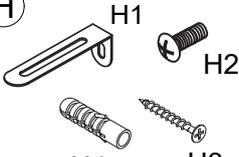
<p>(A)</p>  <p>Ø15*12mm Cam Bolt x 84+1</p>	<p>(B)</p>  <p>Ø15*9.5mm Cam lock x 84+1</p>	<p>(C)</p>  <p>7*50mm Screw x 30+1</p>	<p>(D)</p>  <p>6*40mm Dowel x 98+2</p>	<p>(E)</p>  <p>3*16mm Screw x 16+1</p>
<p>(F)</p>  <p>Clothes-Hook x 8</p>	<p>(G)</p>  <p>x 1</p>	<p>(H)</p>  <p>H1 H2 H3 H4 x2</p>	<p>(I)</p>  <p>3x16mm Screw x 40 Plastic Nail x 40+2</p>	<p>(K)</p>  <p>Allen Wrench x 1</p>

Tools required

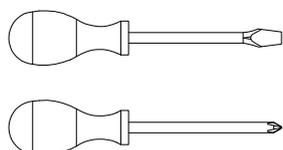

Phillips screwdriver
(medium large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

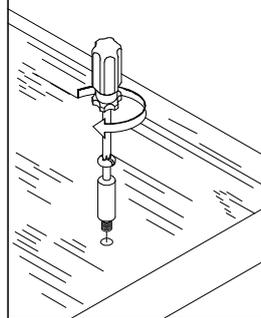

Step 2

Push the male camlock into the entry hole.

2

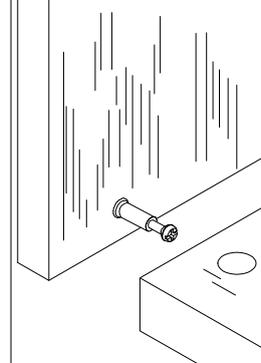


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

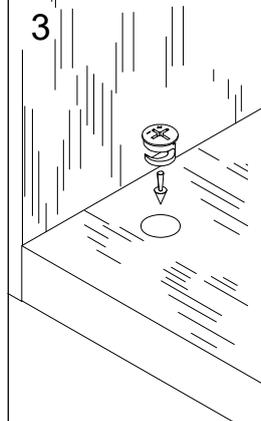


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

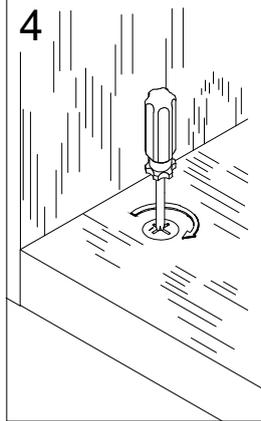


Assembly Instructions

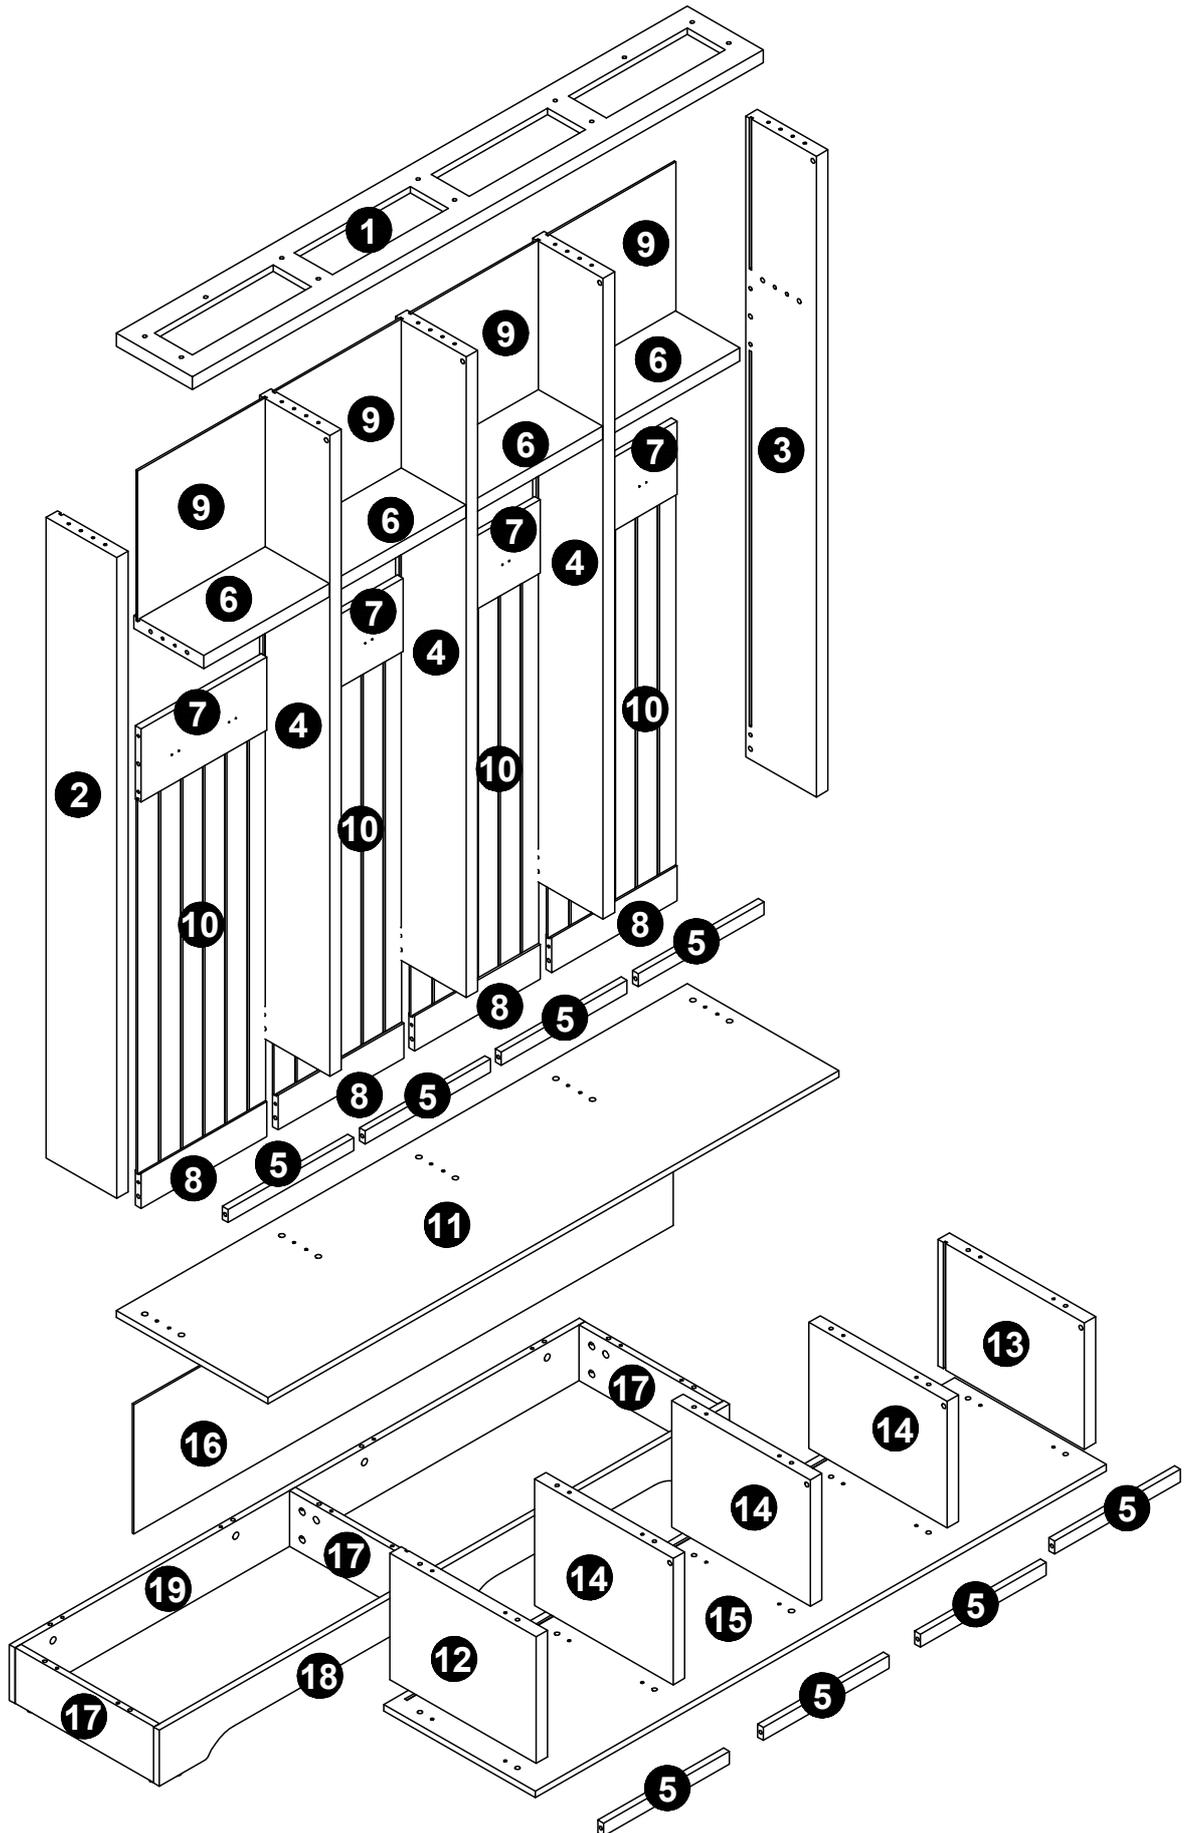


Assembly Instructions

step 1

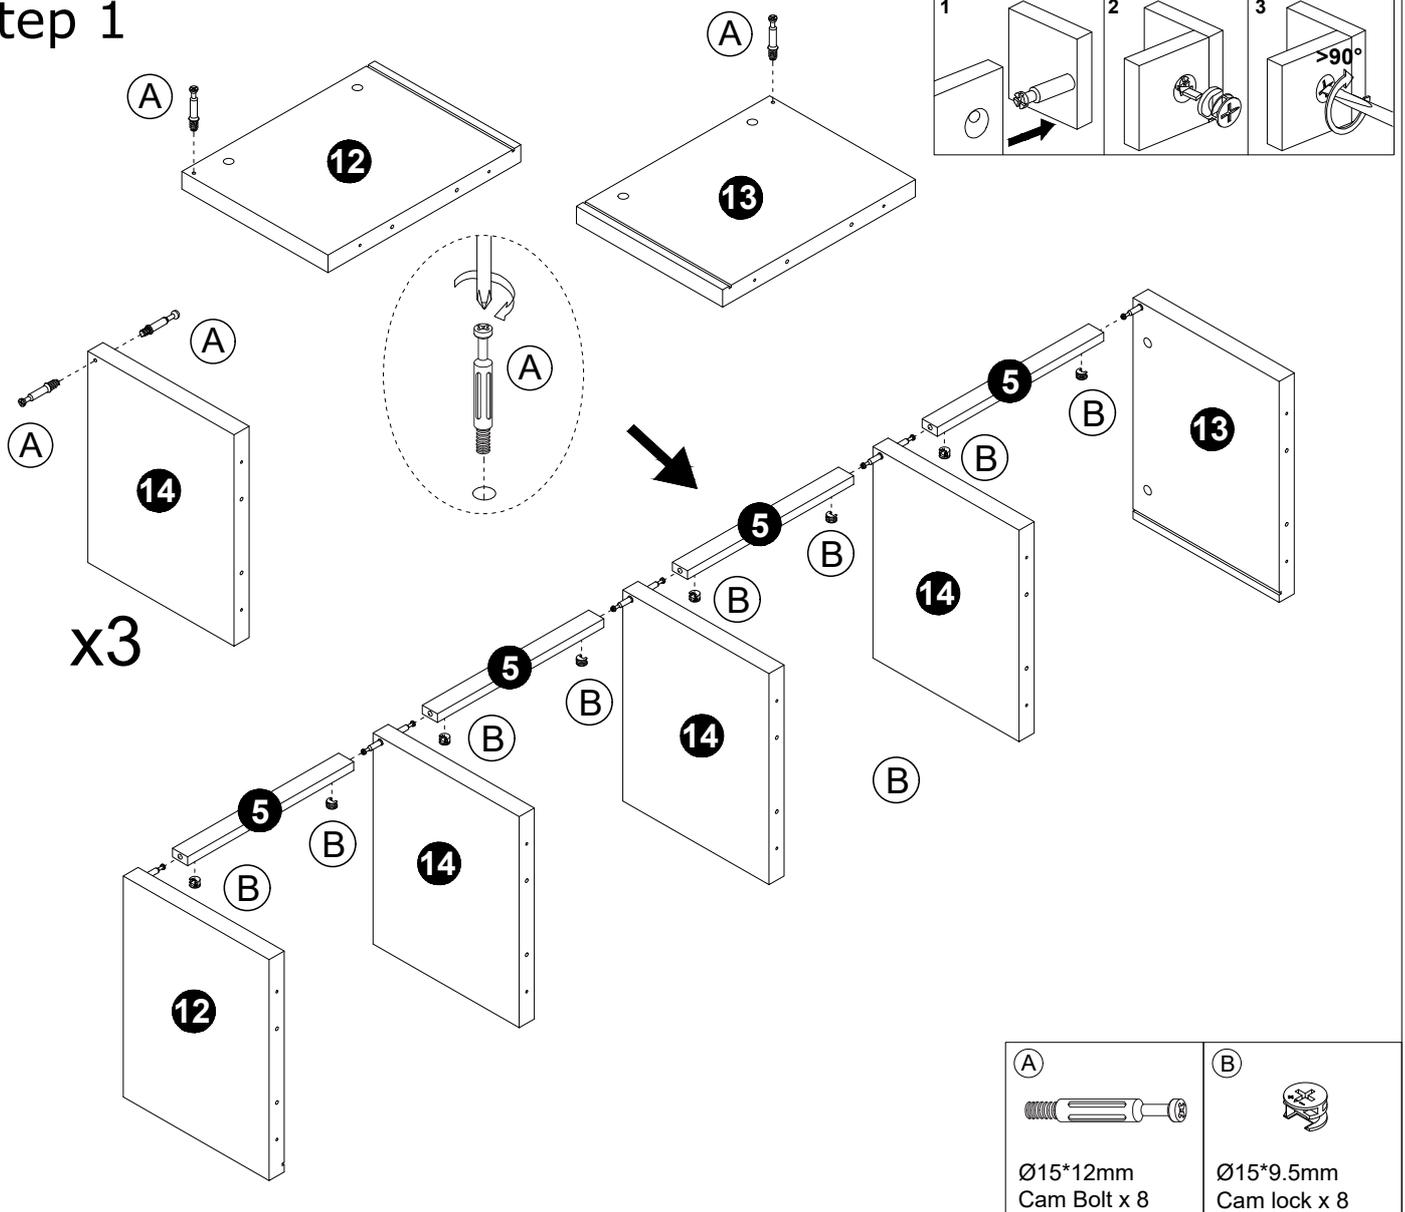


step 2

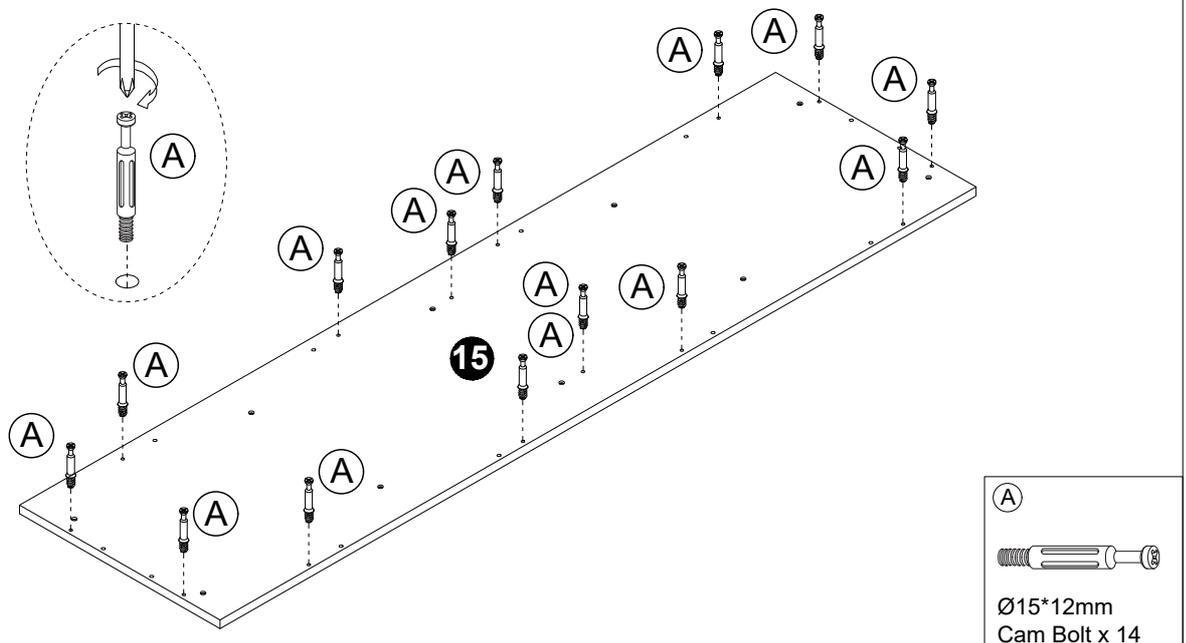

Assembly Instructions


step 3

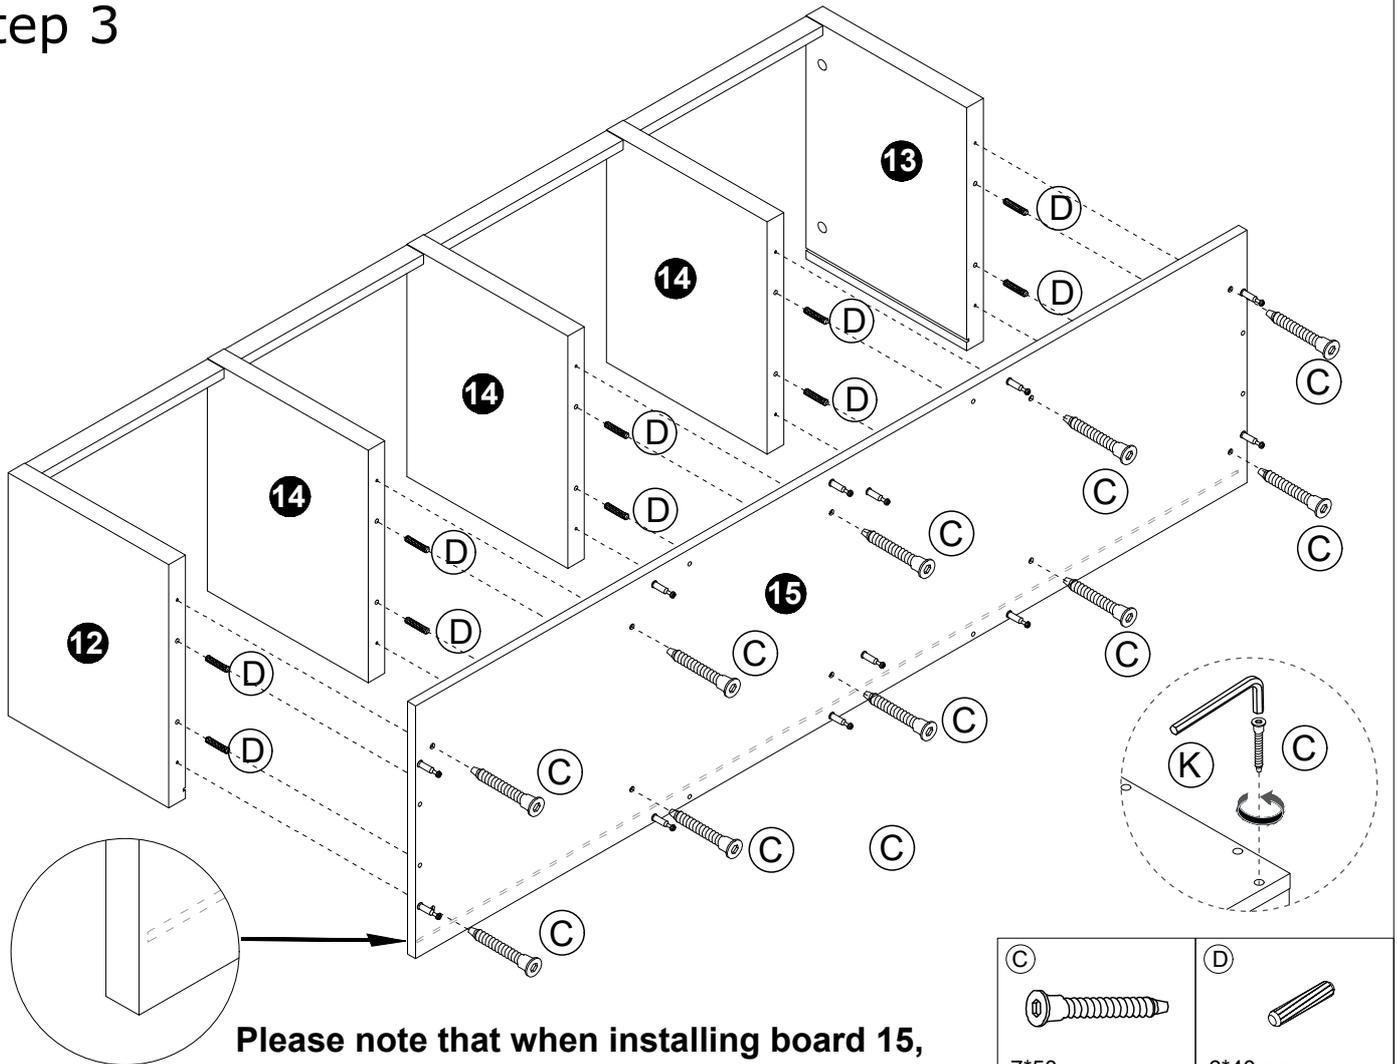

Please note that when installing board 15, the slot on the board is at the bottom.

(C)	(D)
7*50mm Screw x 10	6*40mm Dowel x 10



step 4

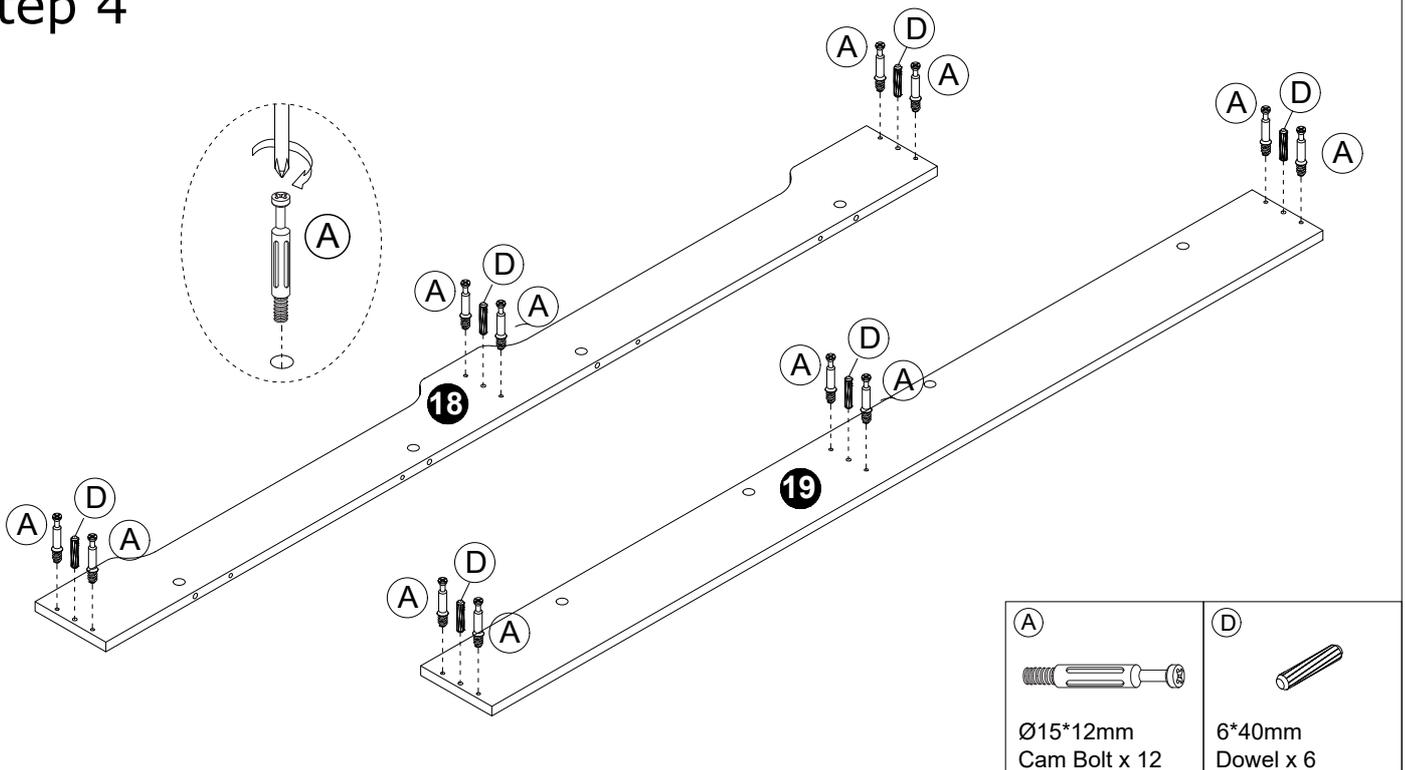




(A)	(D)
Ø15*12mm Cam Bolt x 12	6*40mm Dowel x 6

Assembly Instructions

step 5

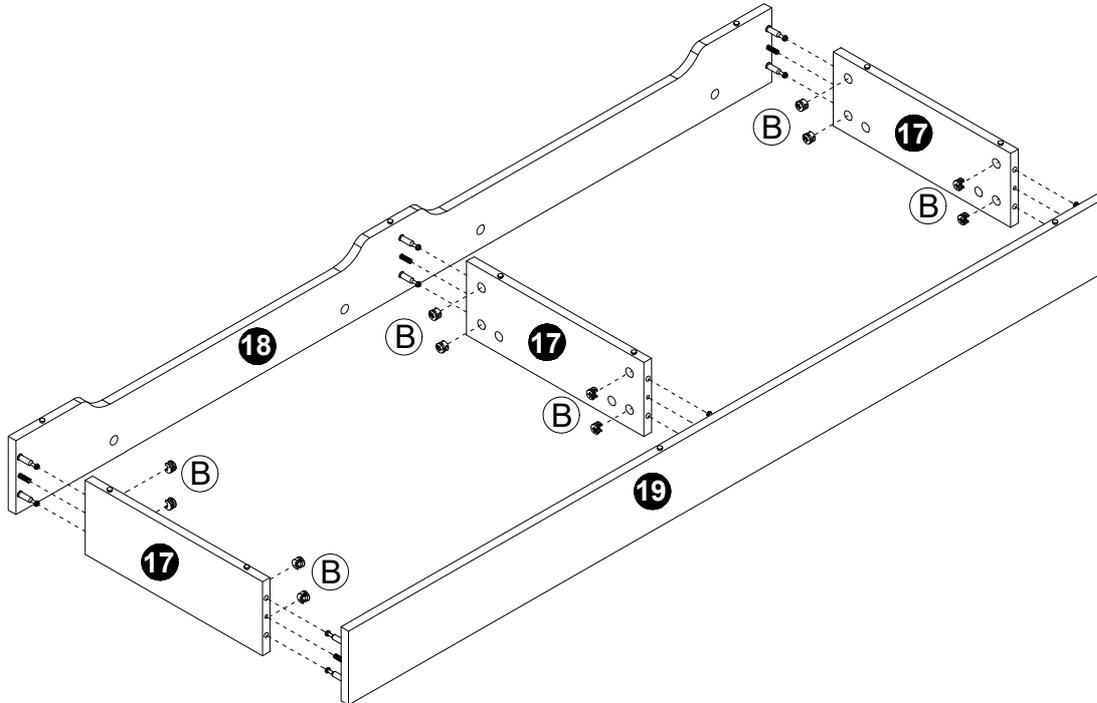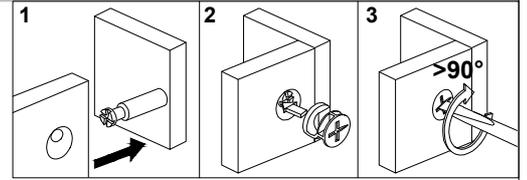


step 6

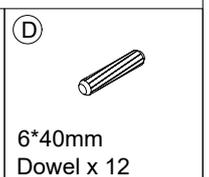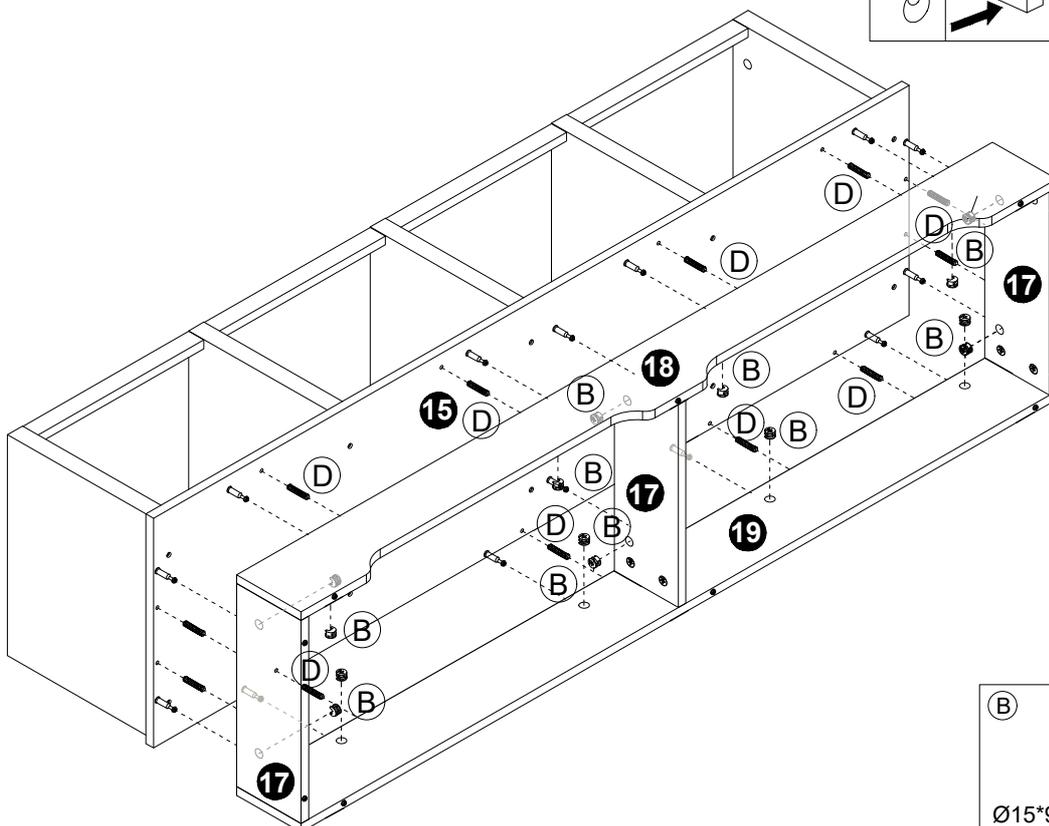
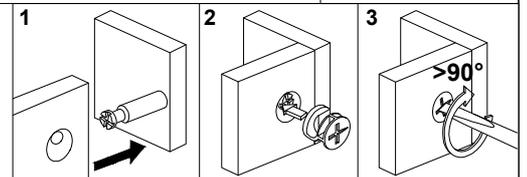


Assembly Instructions

step 7


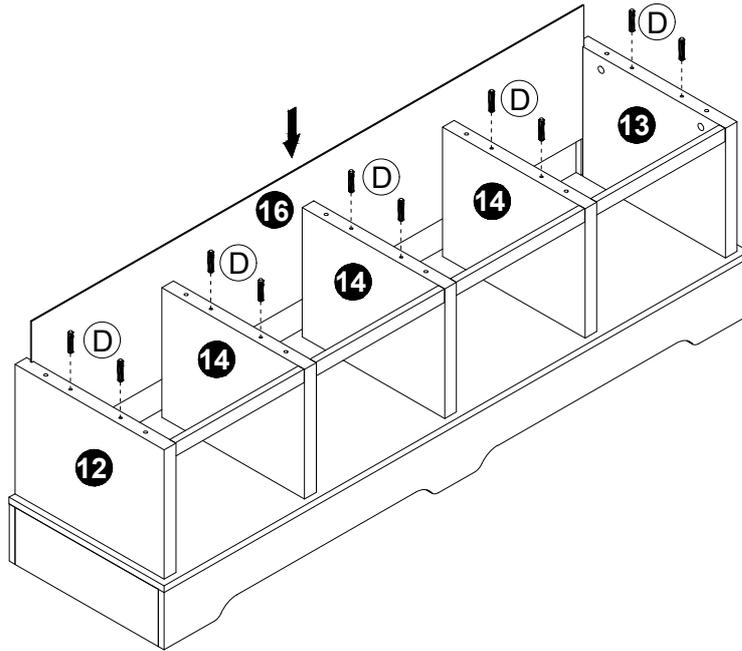


step 8

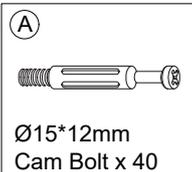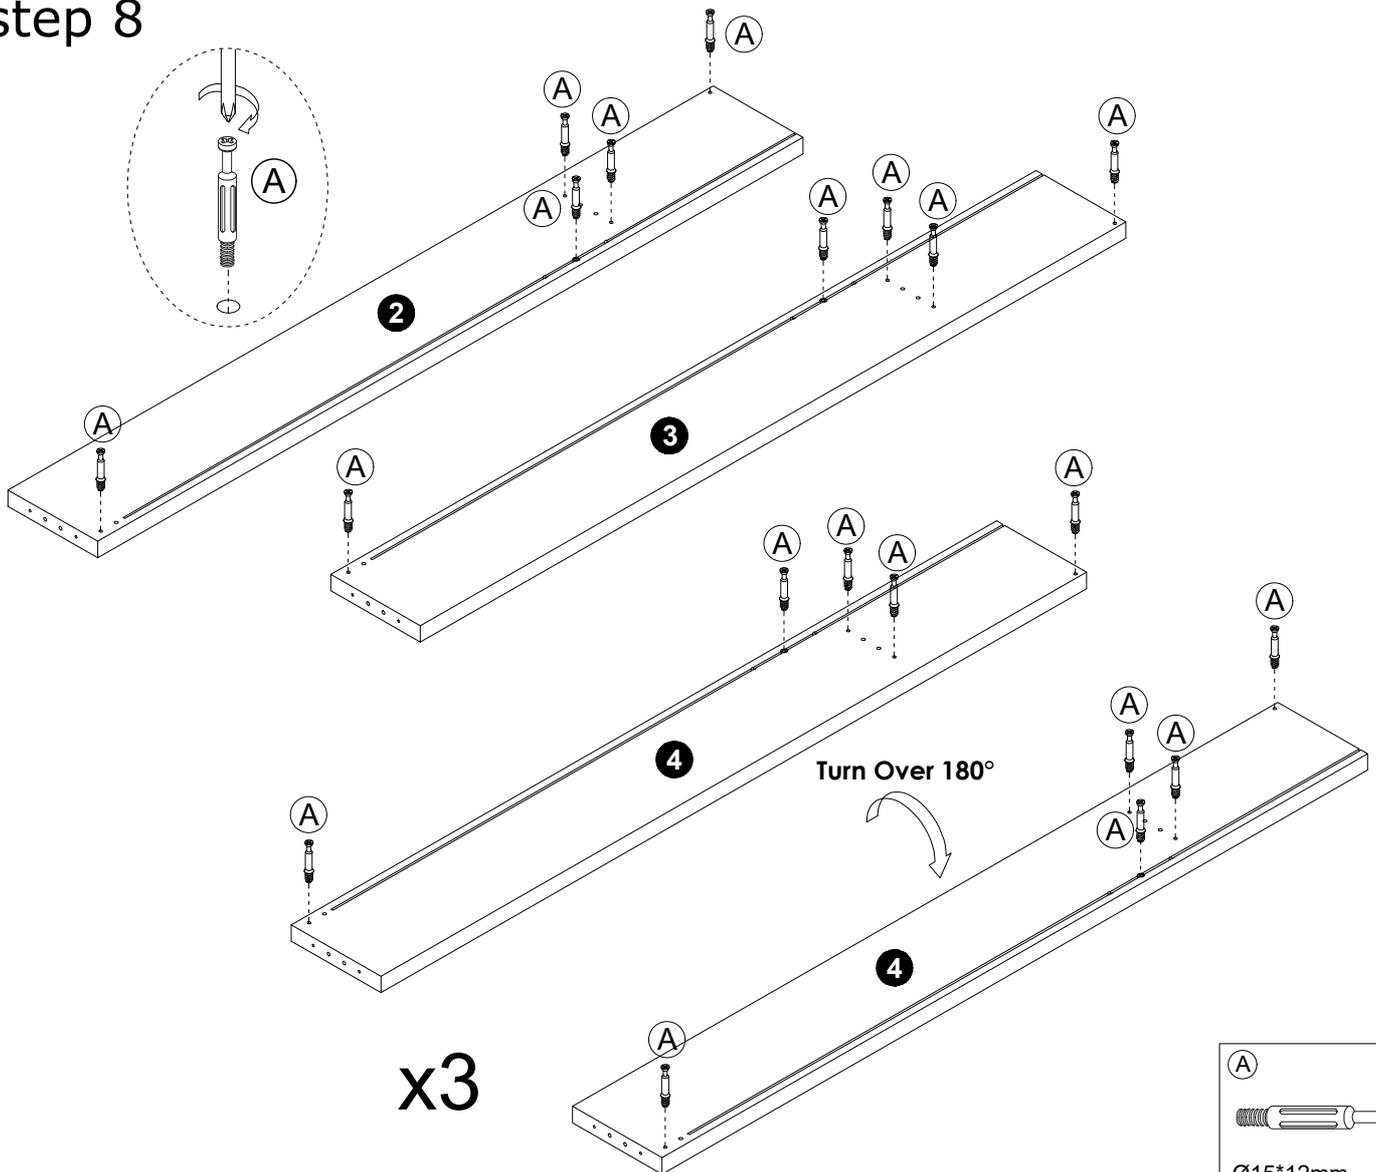


Assembly Instructions



step 9

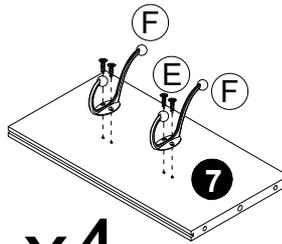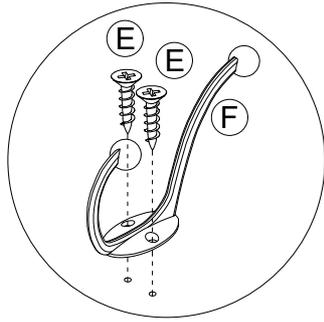


x4

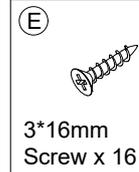

step 10

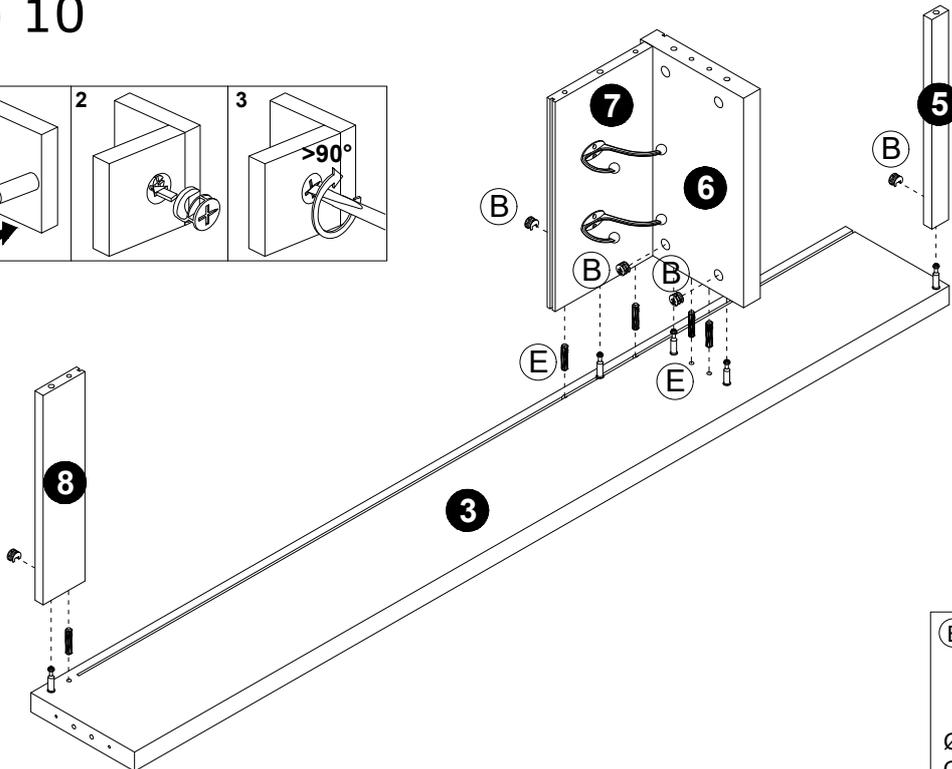
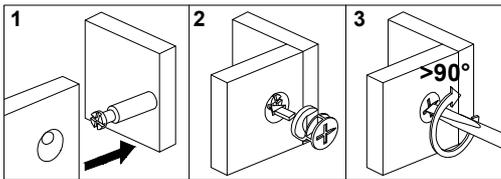


step 11

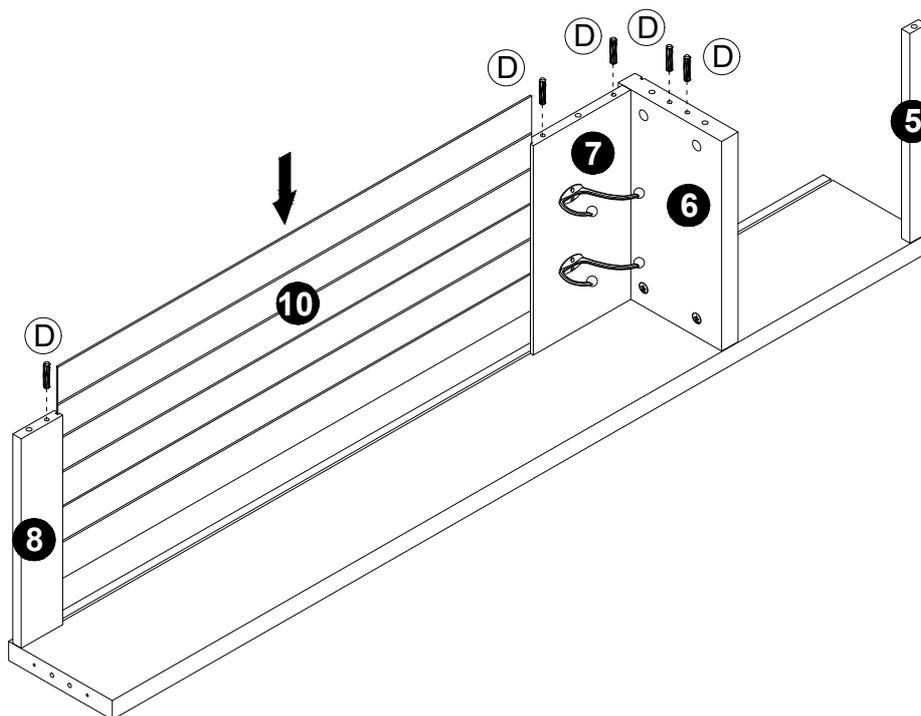


Assembly Instructions

step 12

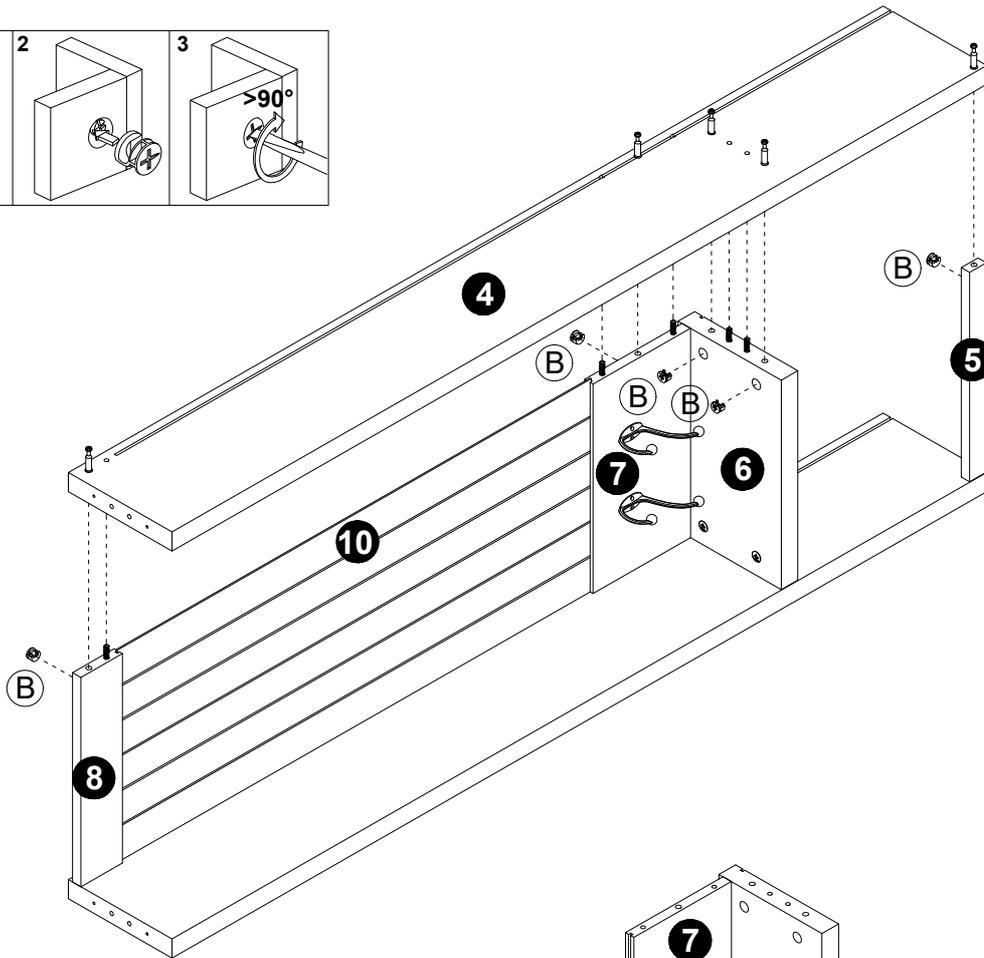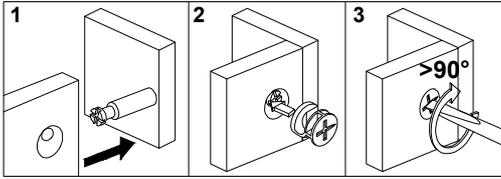

(B) 
Ø15*9.5mm
Cam lock x 5

step 13


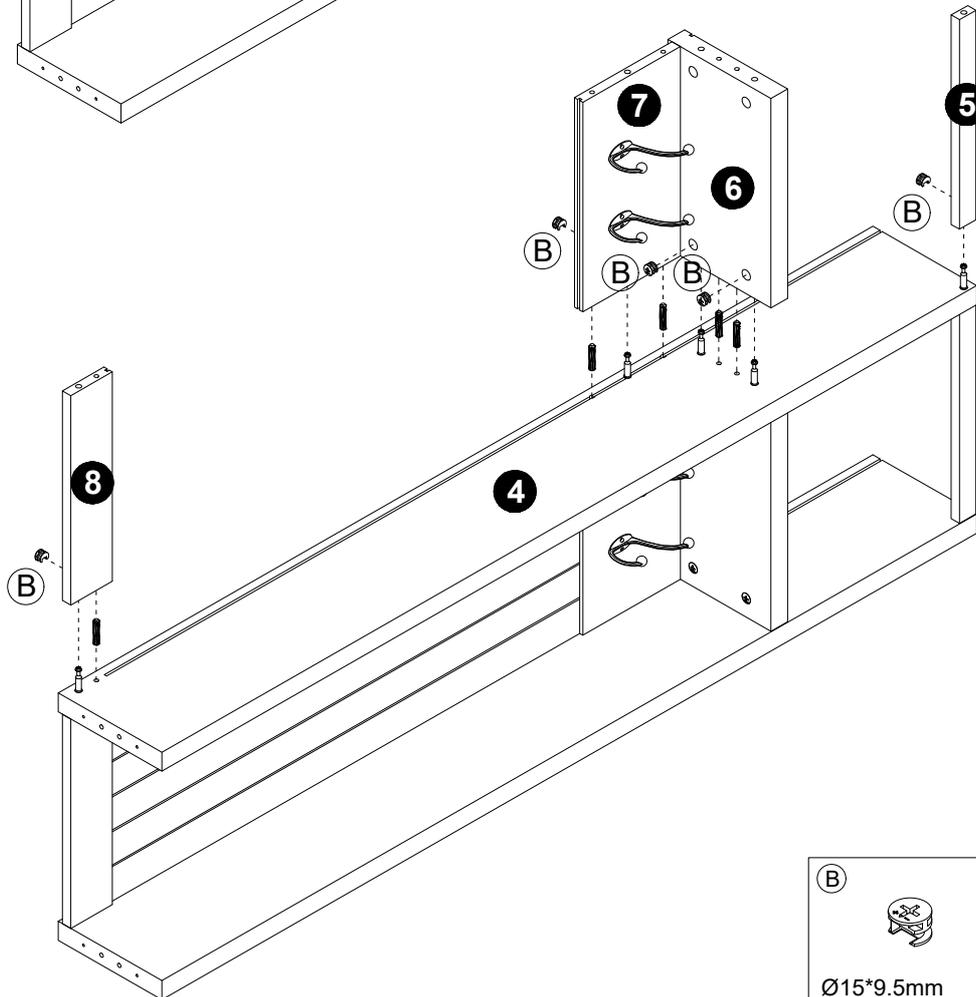


(B) 
Ø15*9.5mm
Cam lock x 5



(D) 
6*40mm
Dowel x 5

Assembly Instructions

step 14

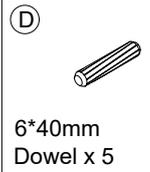
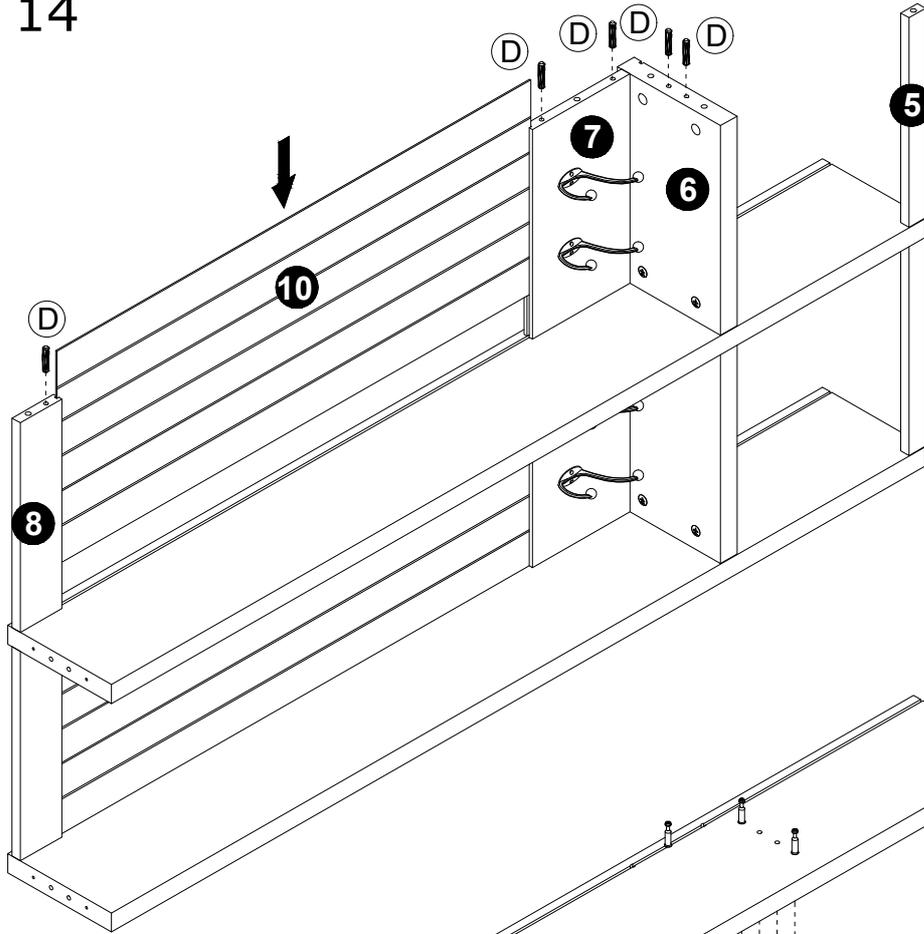


step 15

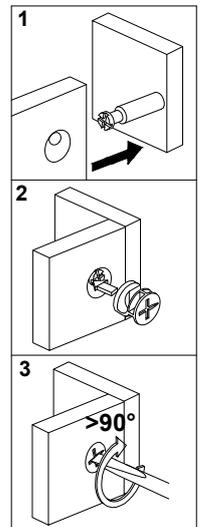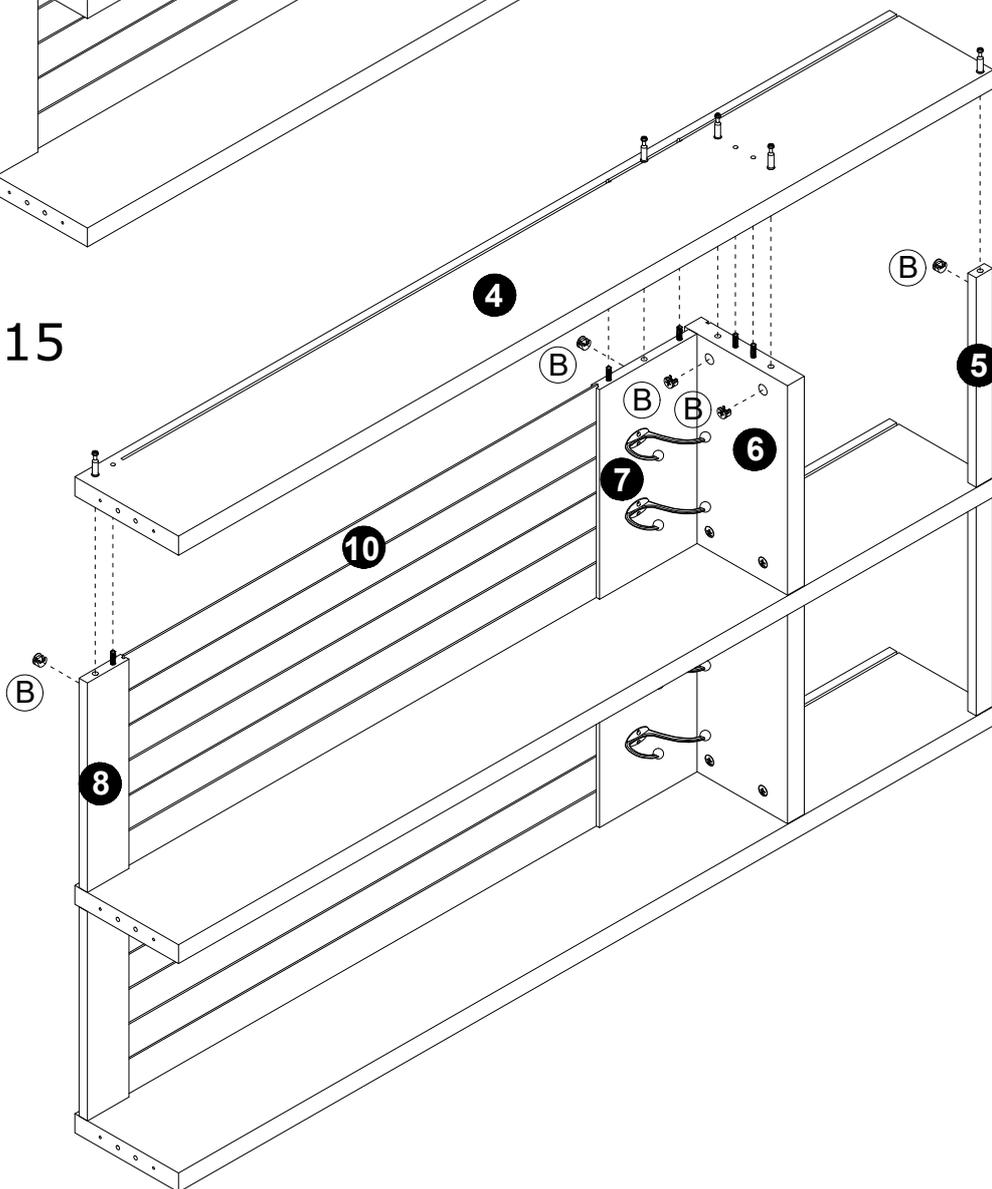


Assembly Instructions

step 16

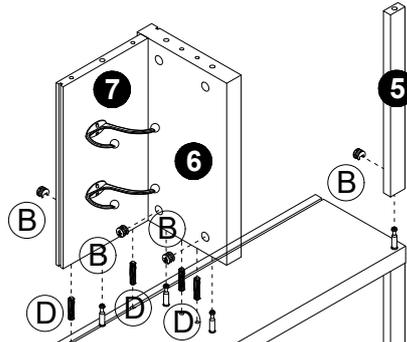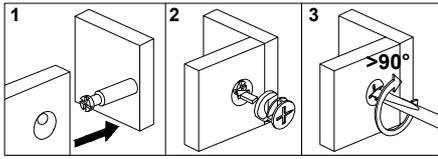


(B) 
Ø15*9.5mm
Cam lock x 5

(D) 
6*40mm
Dowel x 5

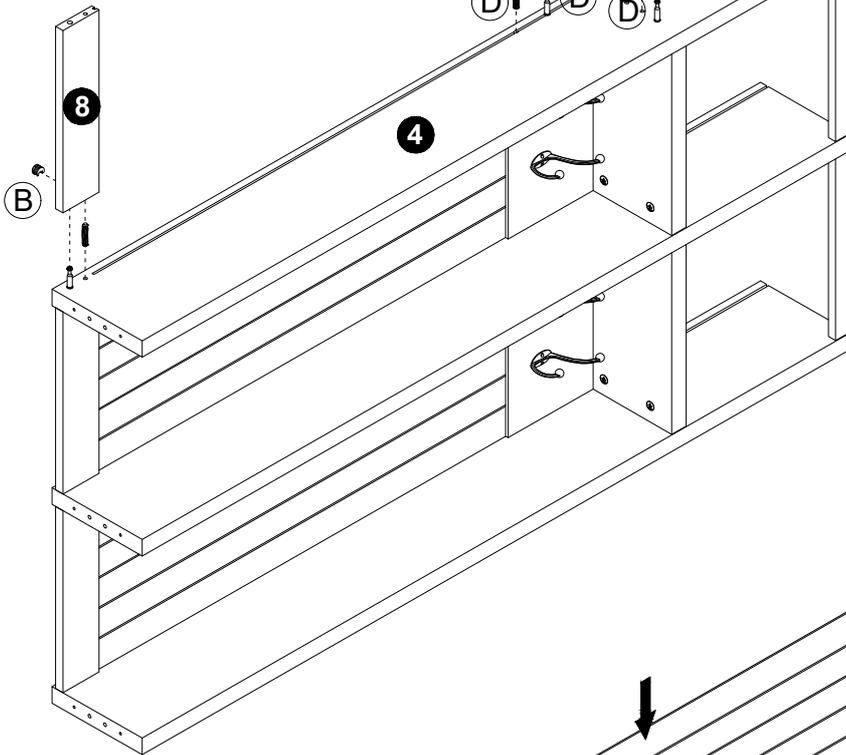


step 17

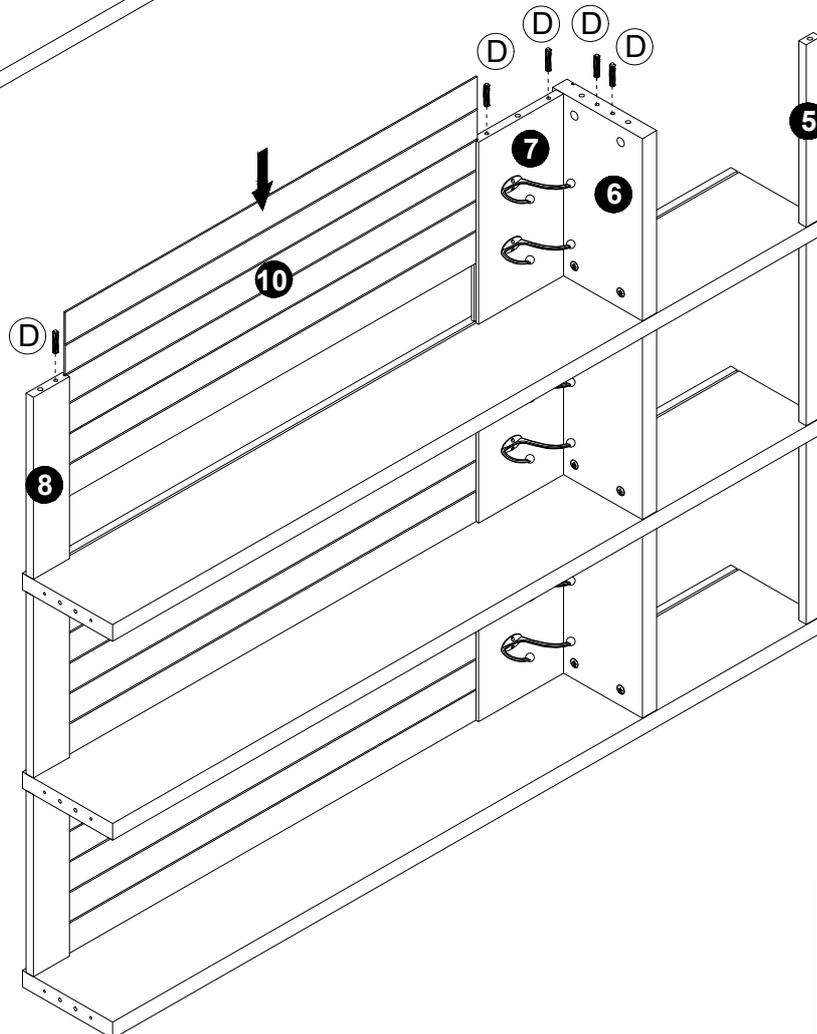

(D) 
6*40mm
Dowel x 5

Assembly Instructions

step 18


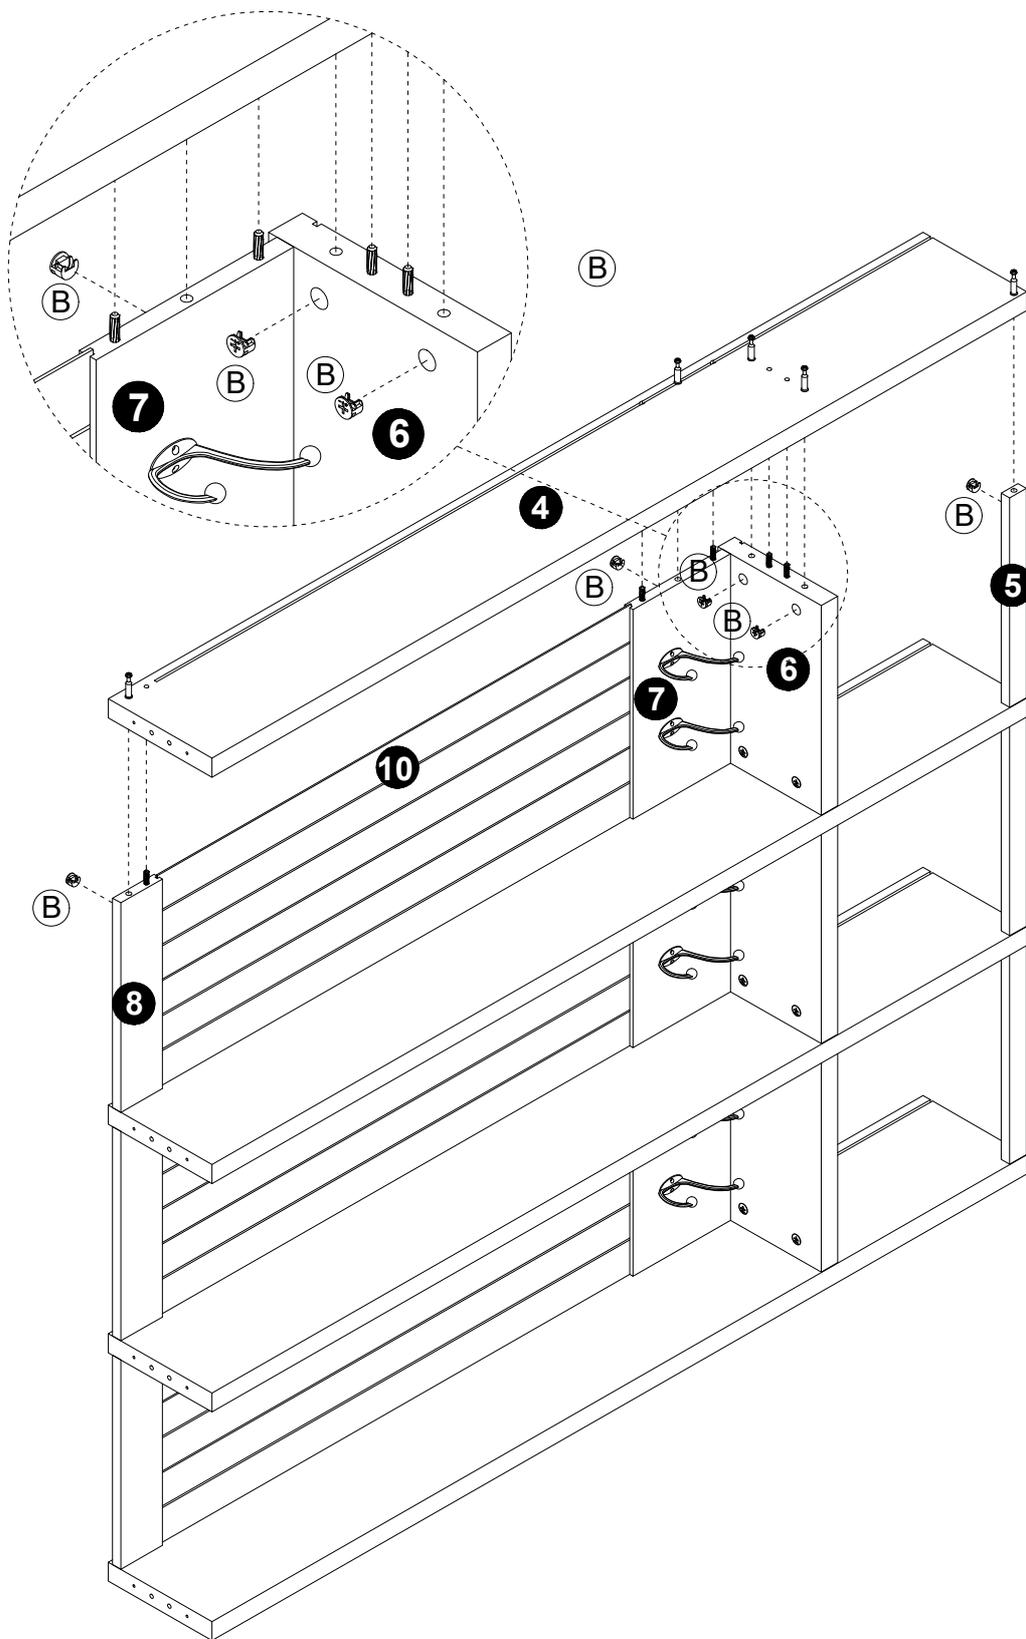


ⓑ

Ø15*9.5mm
Cam lock x 5

Assembly Instructions



step 19

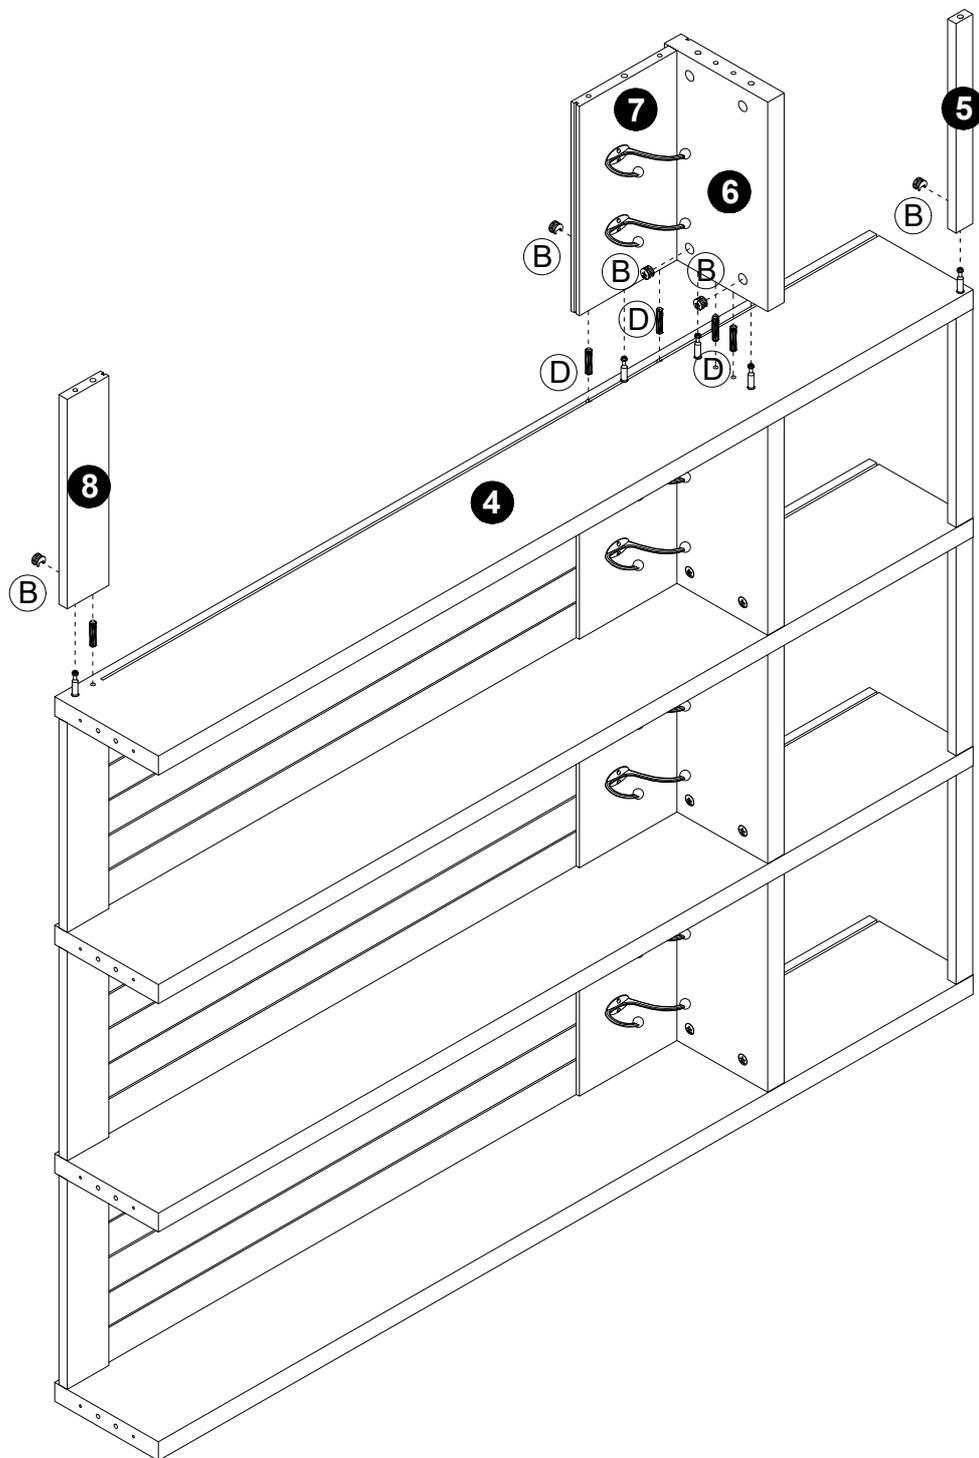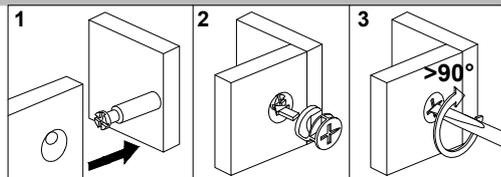

<p>(B)</p>  <p>Ø15*9.5mm Cam lock x 5</p>	<p>(D)</p>  <p>6*40mm Dowel x 5</p>
--	--


Assembly Instructions

step 20

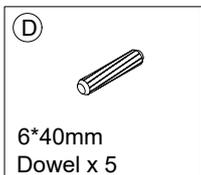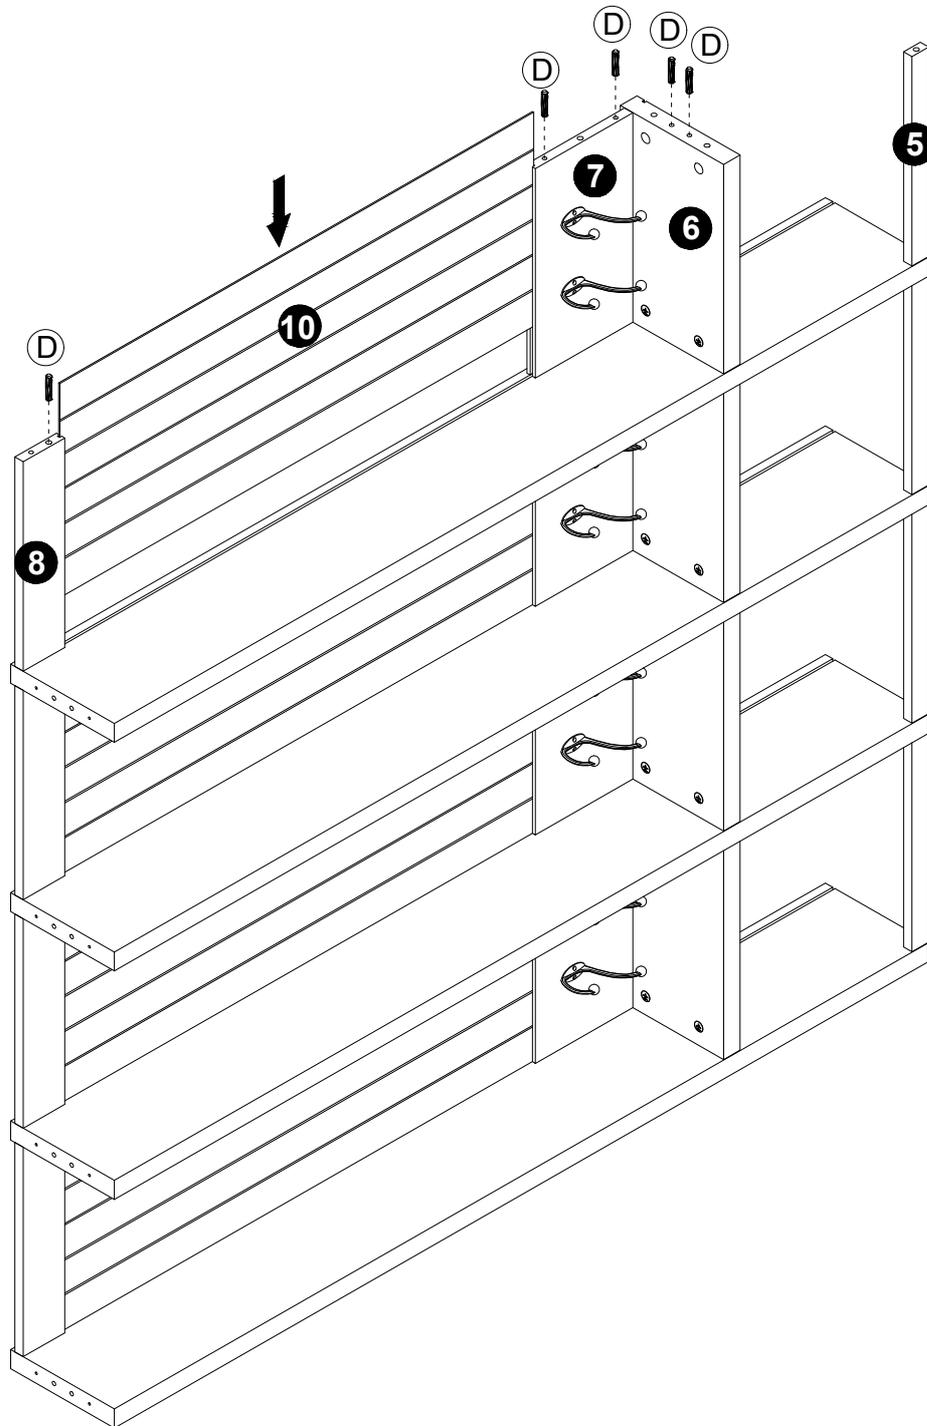

Assembly Instructions

step 21

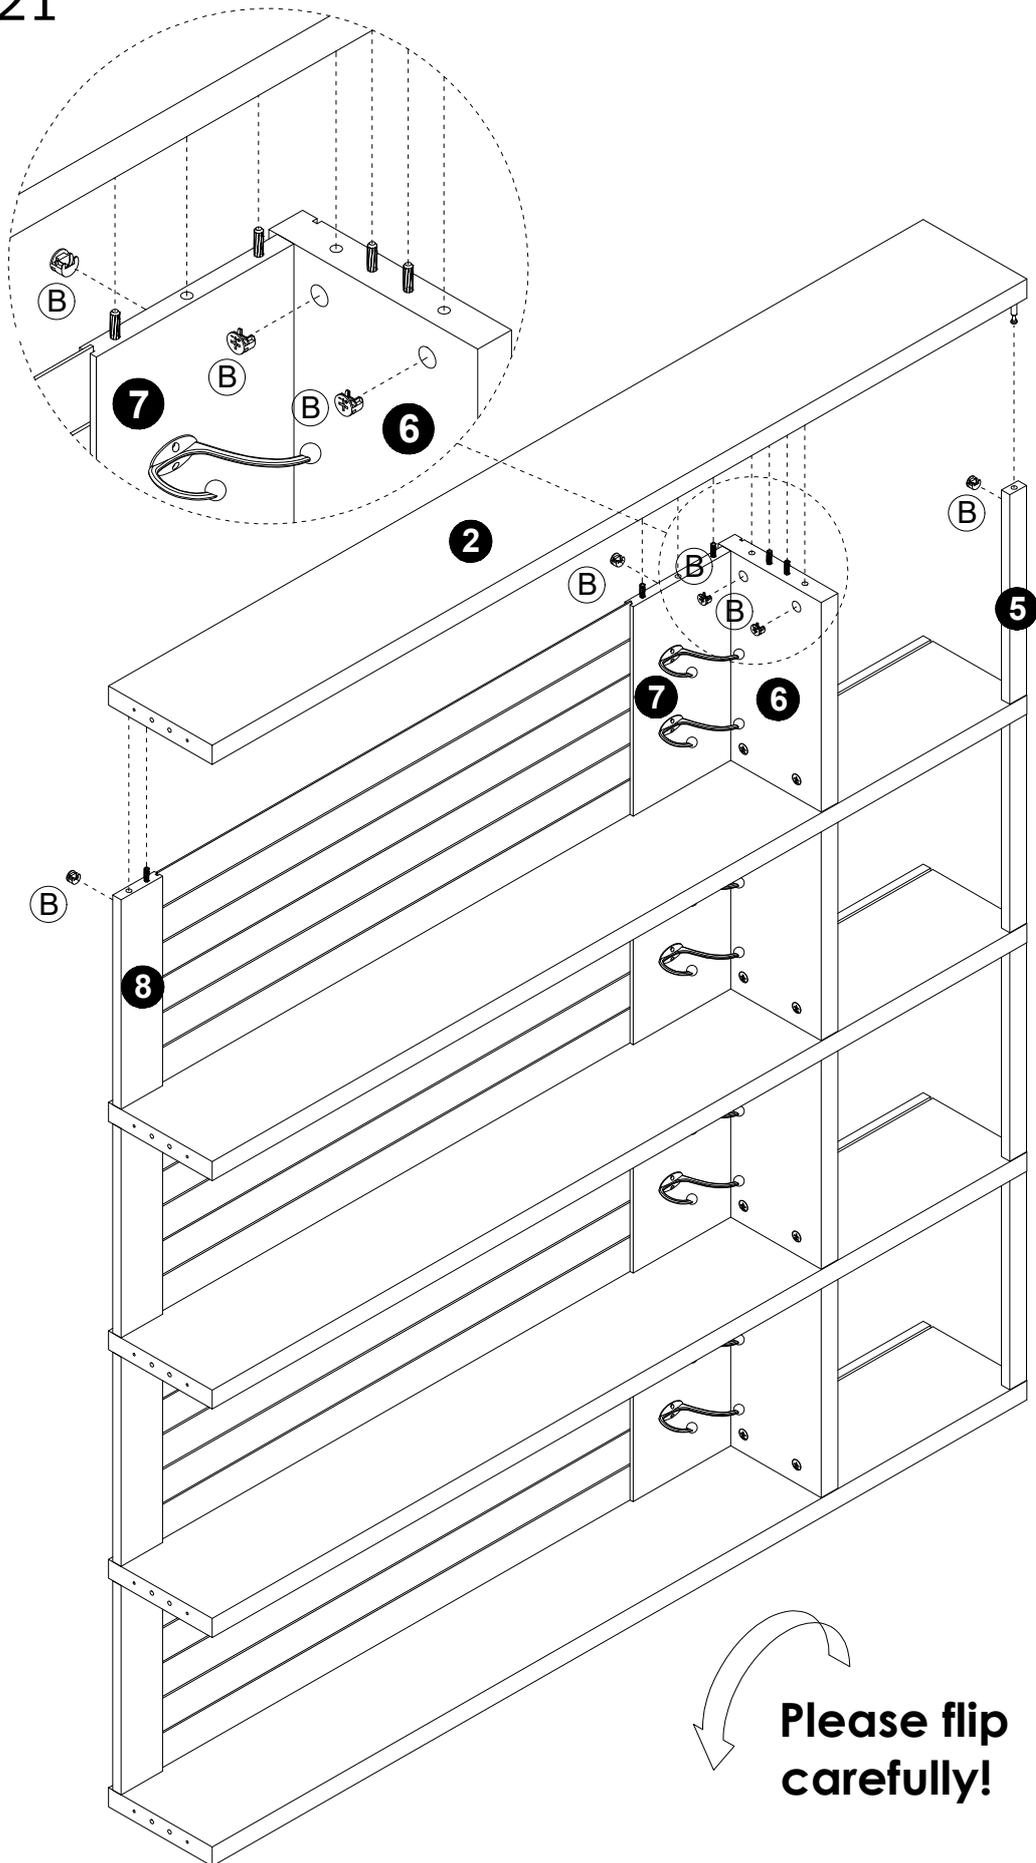


Please flip
carefully!

B



Ø15*9.5mm
Cam lock x 5

Assembly Instructions

step 22


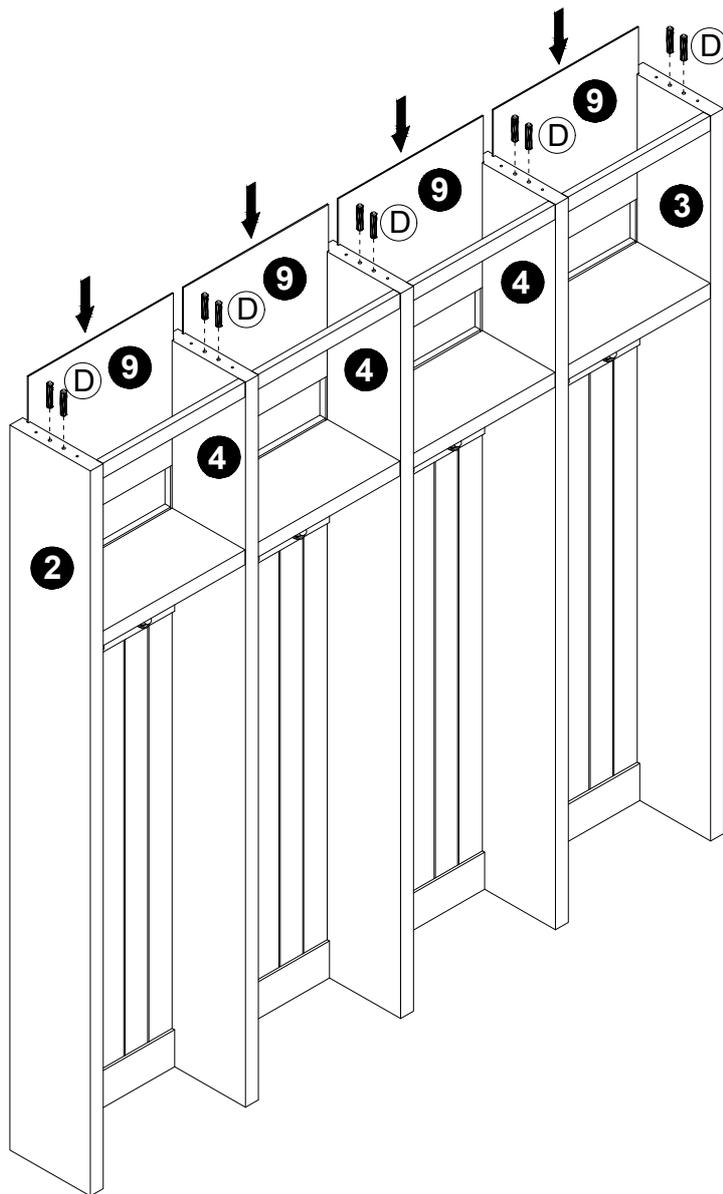


step 23

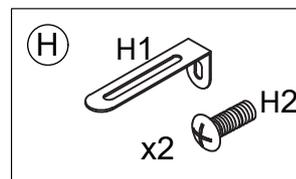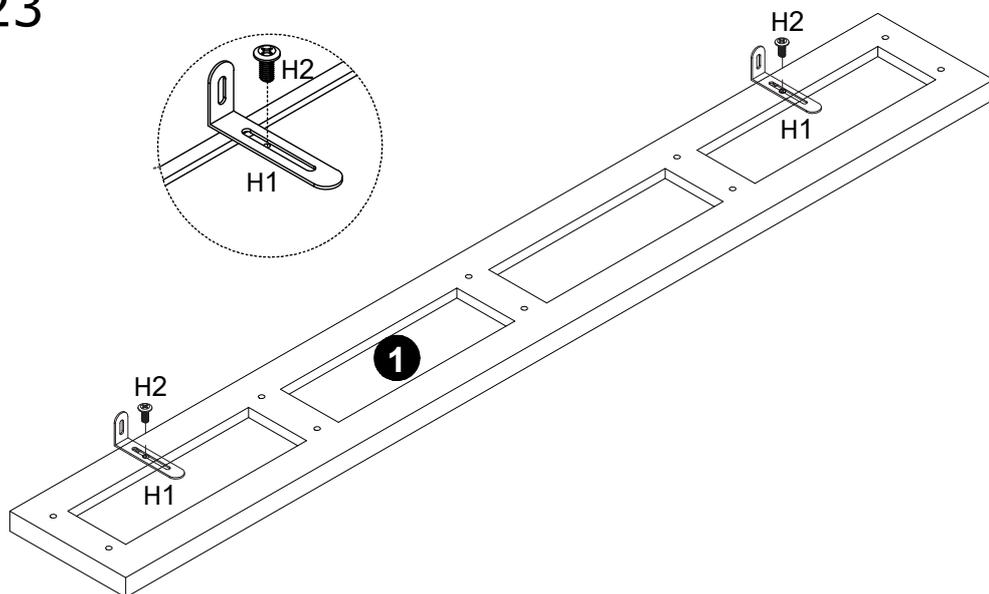


Assembly Instructions

step 24

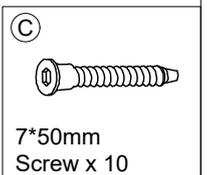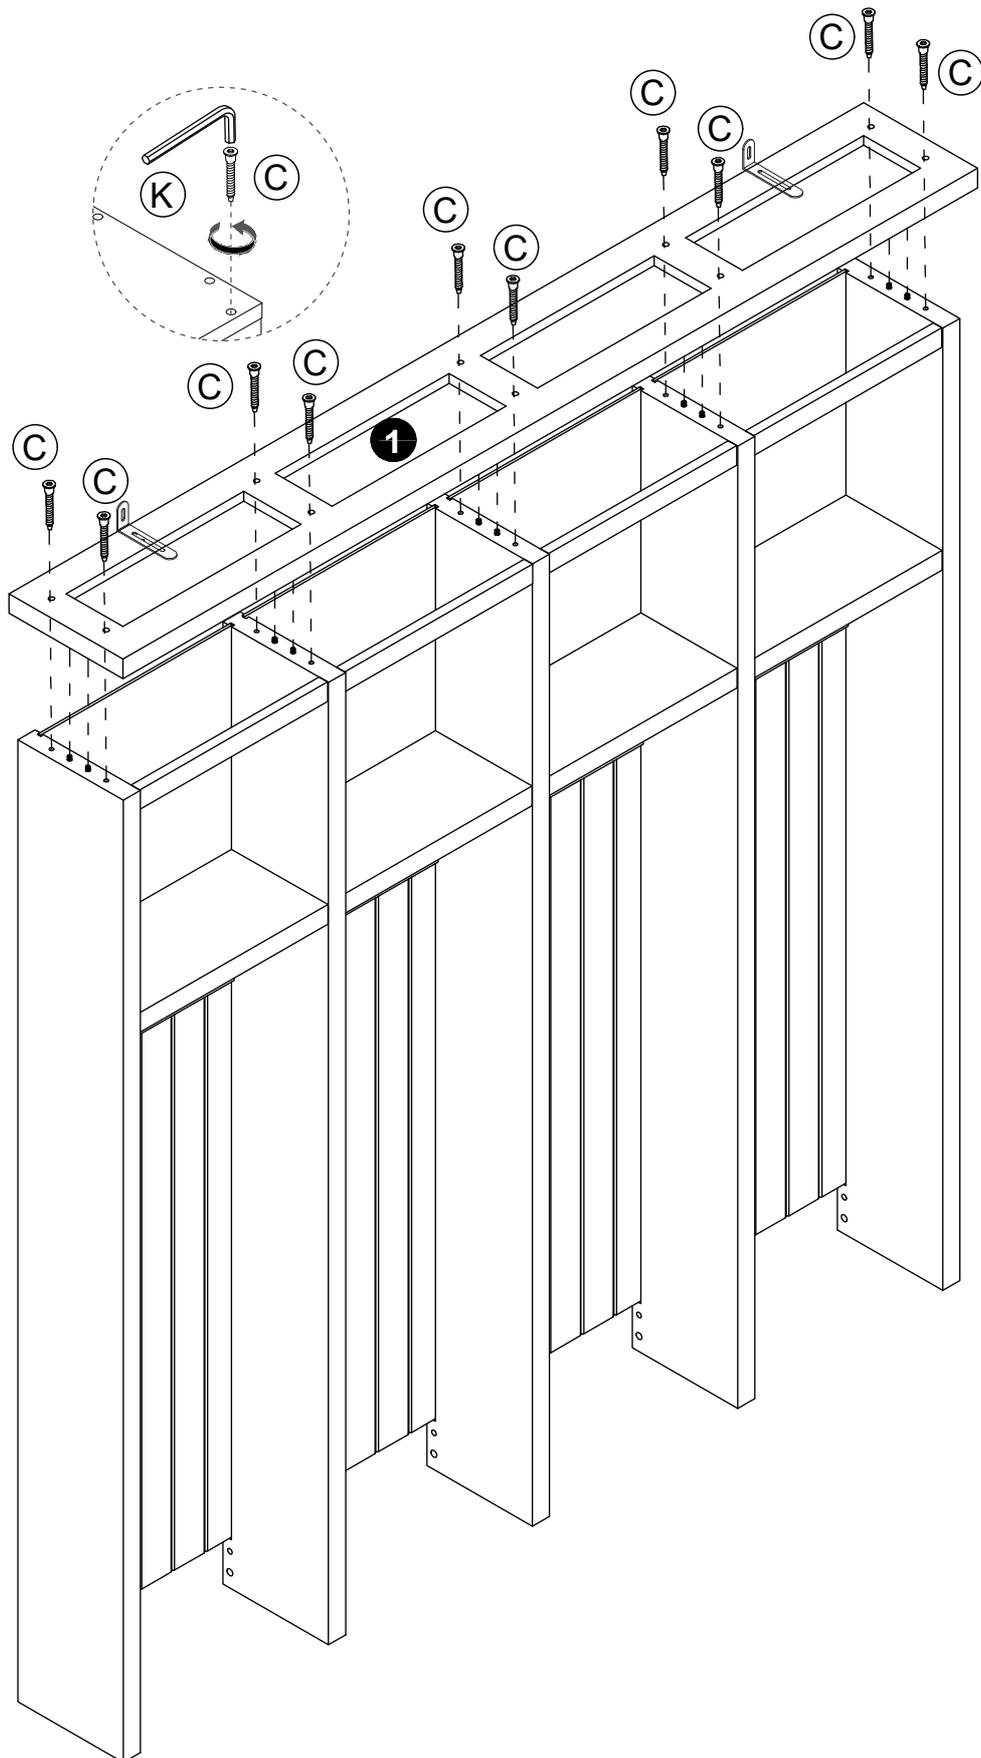


Assembly Instructions

step 25


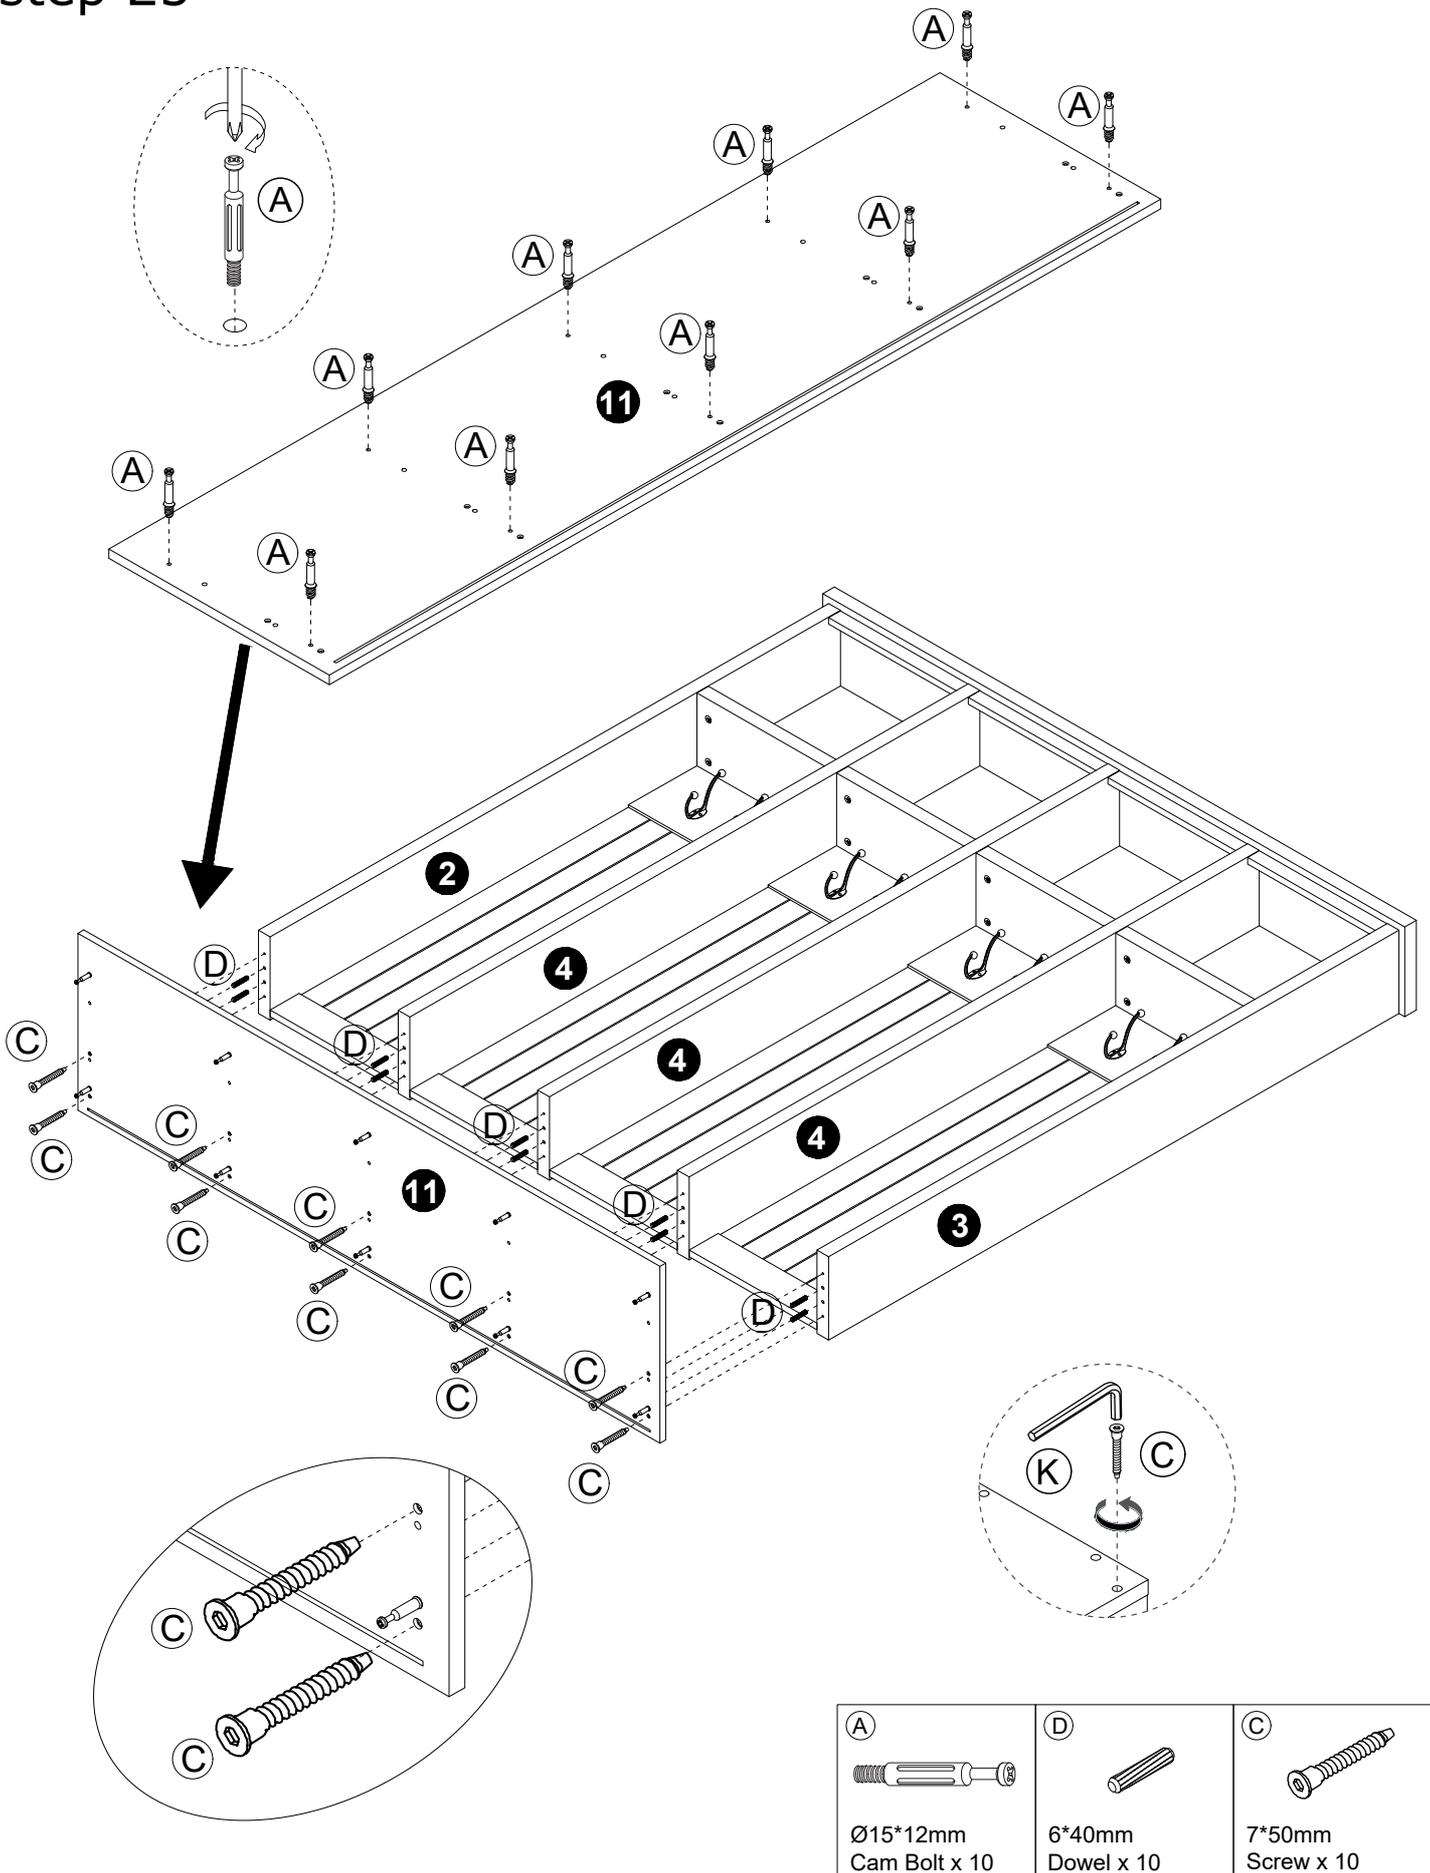


Assembly Instructions

step 26

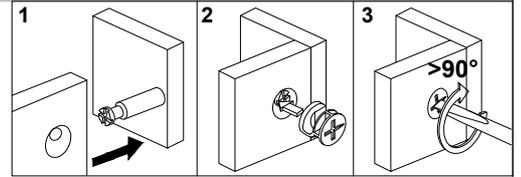


This step is best done with two or more people.

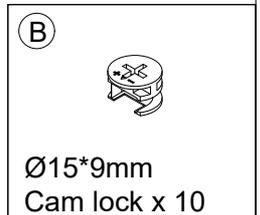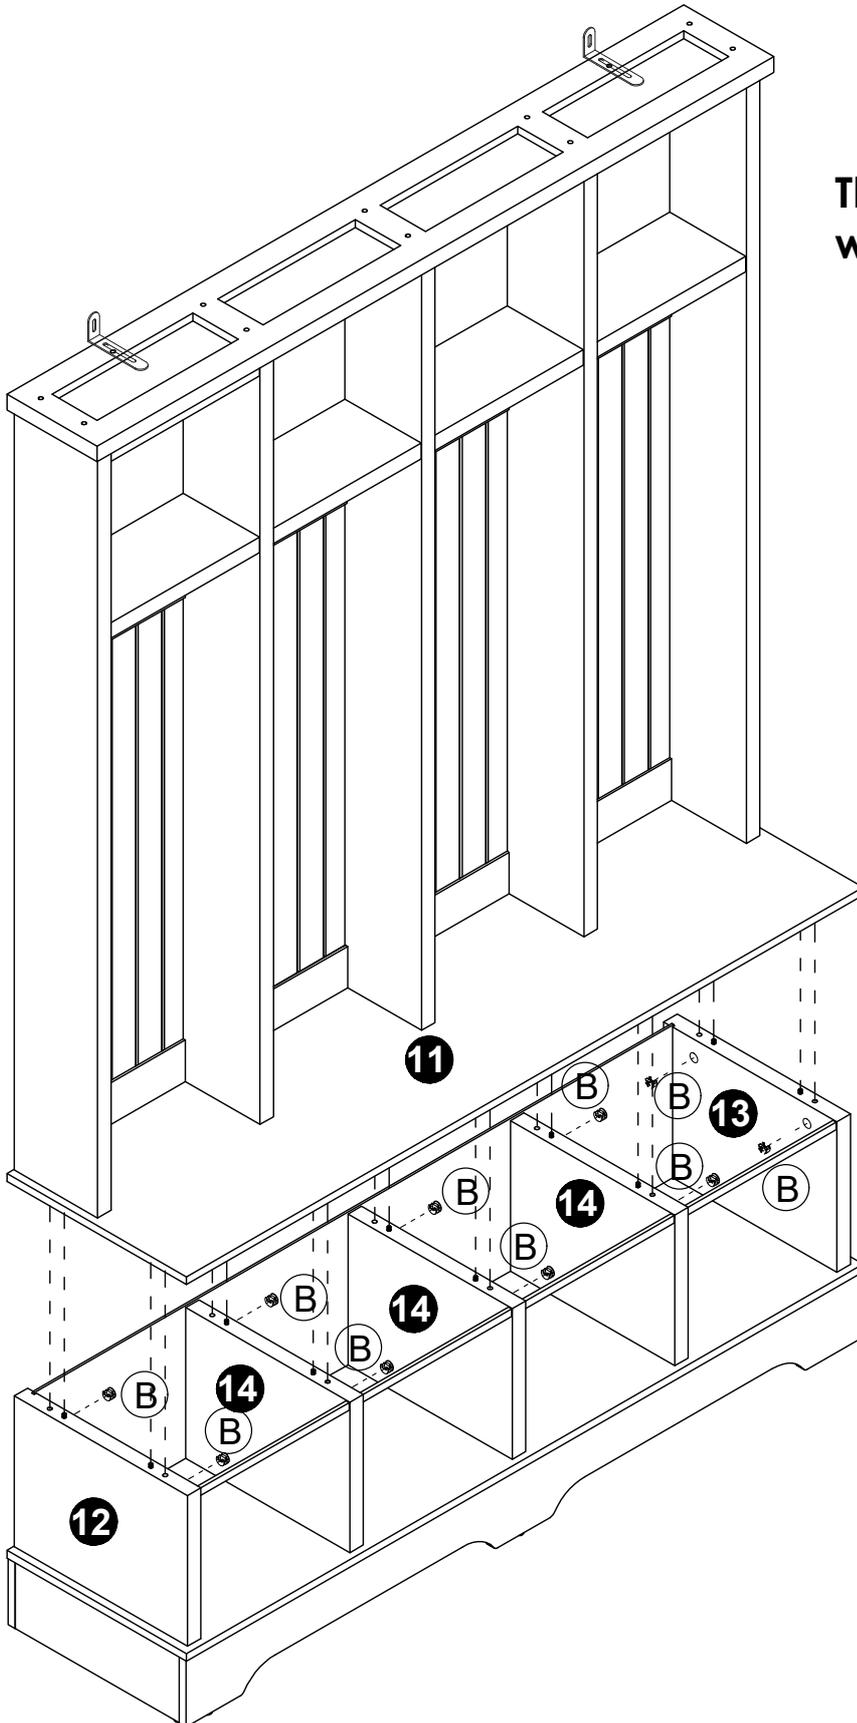






Assembly Instructions

step 27

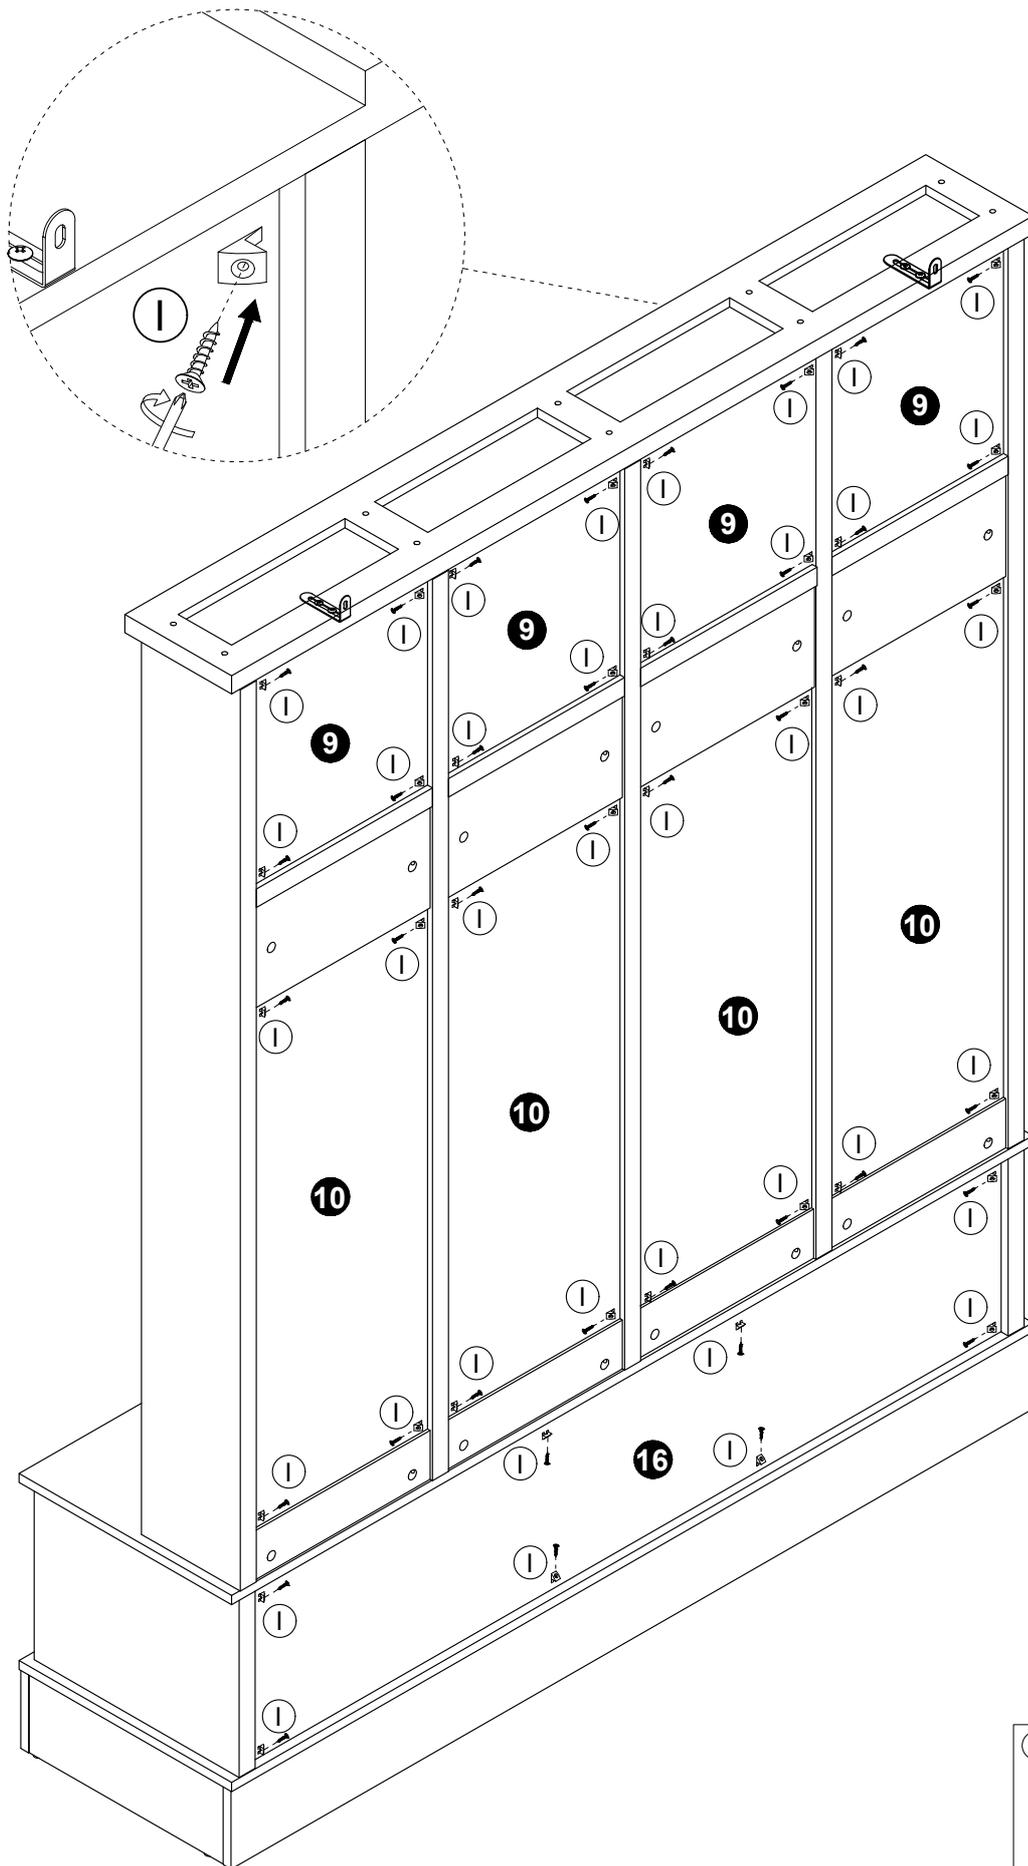

Assembly Instructions

step 28

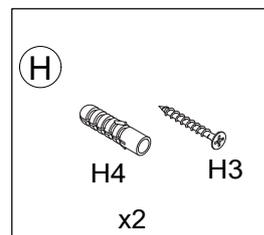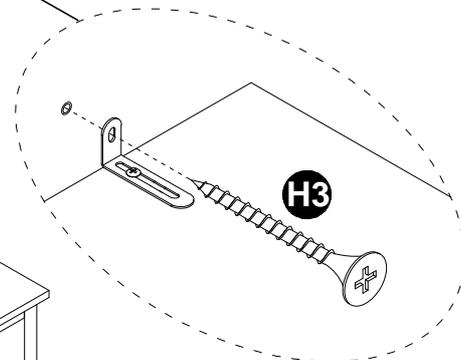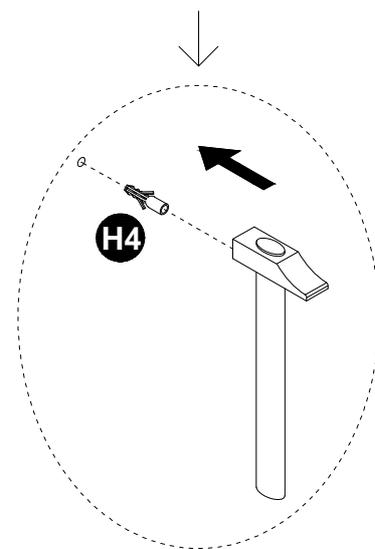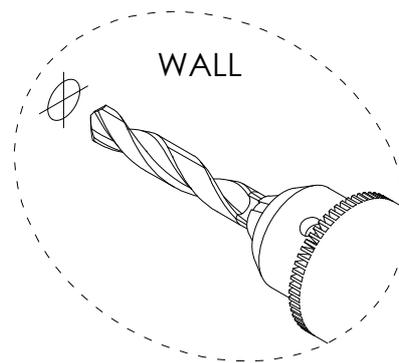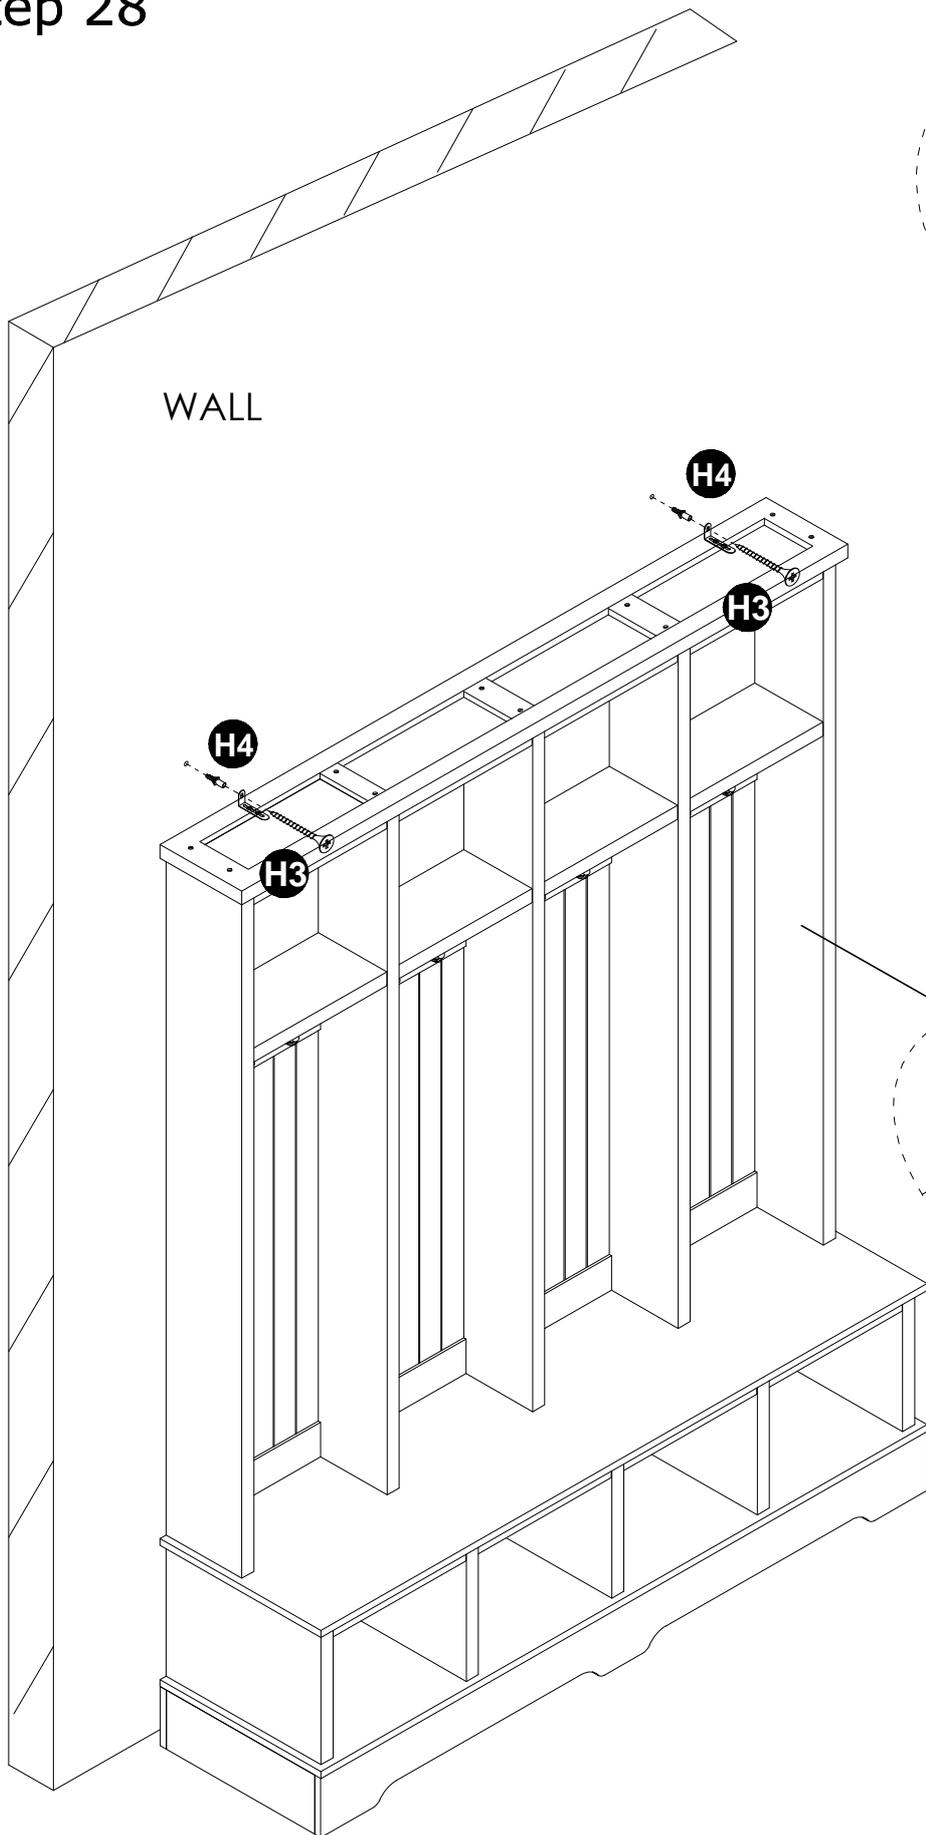

Assembly Instructions

