


YB807-914#

Bathroom cabinet

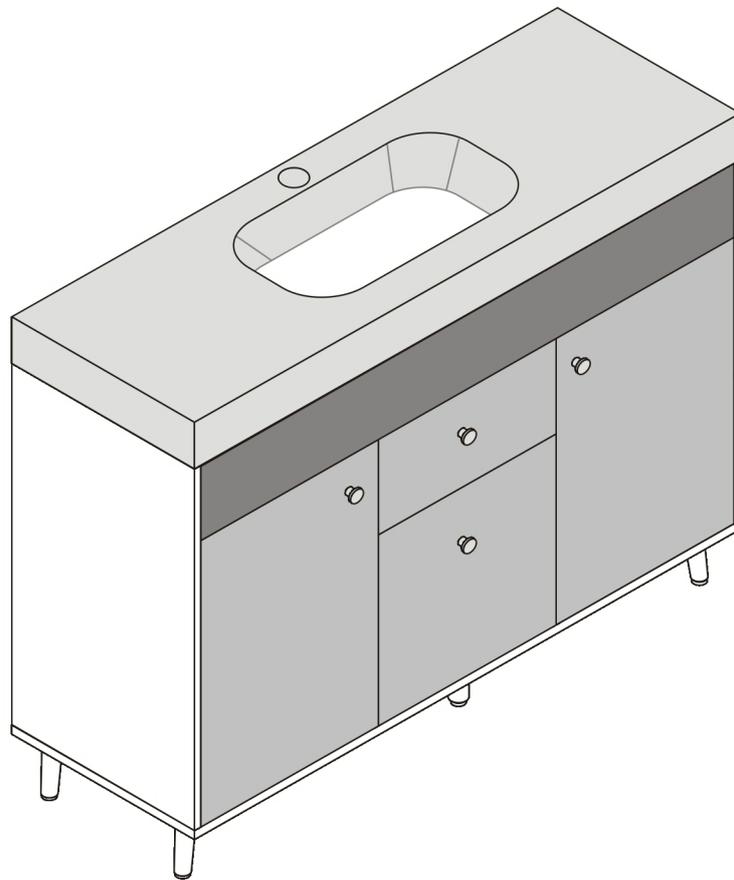


2 Persons


L906*W455*H593MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

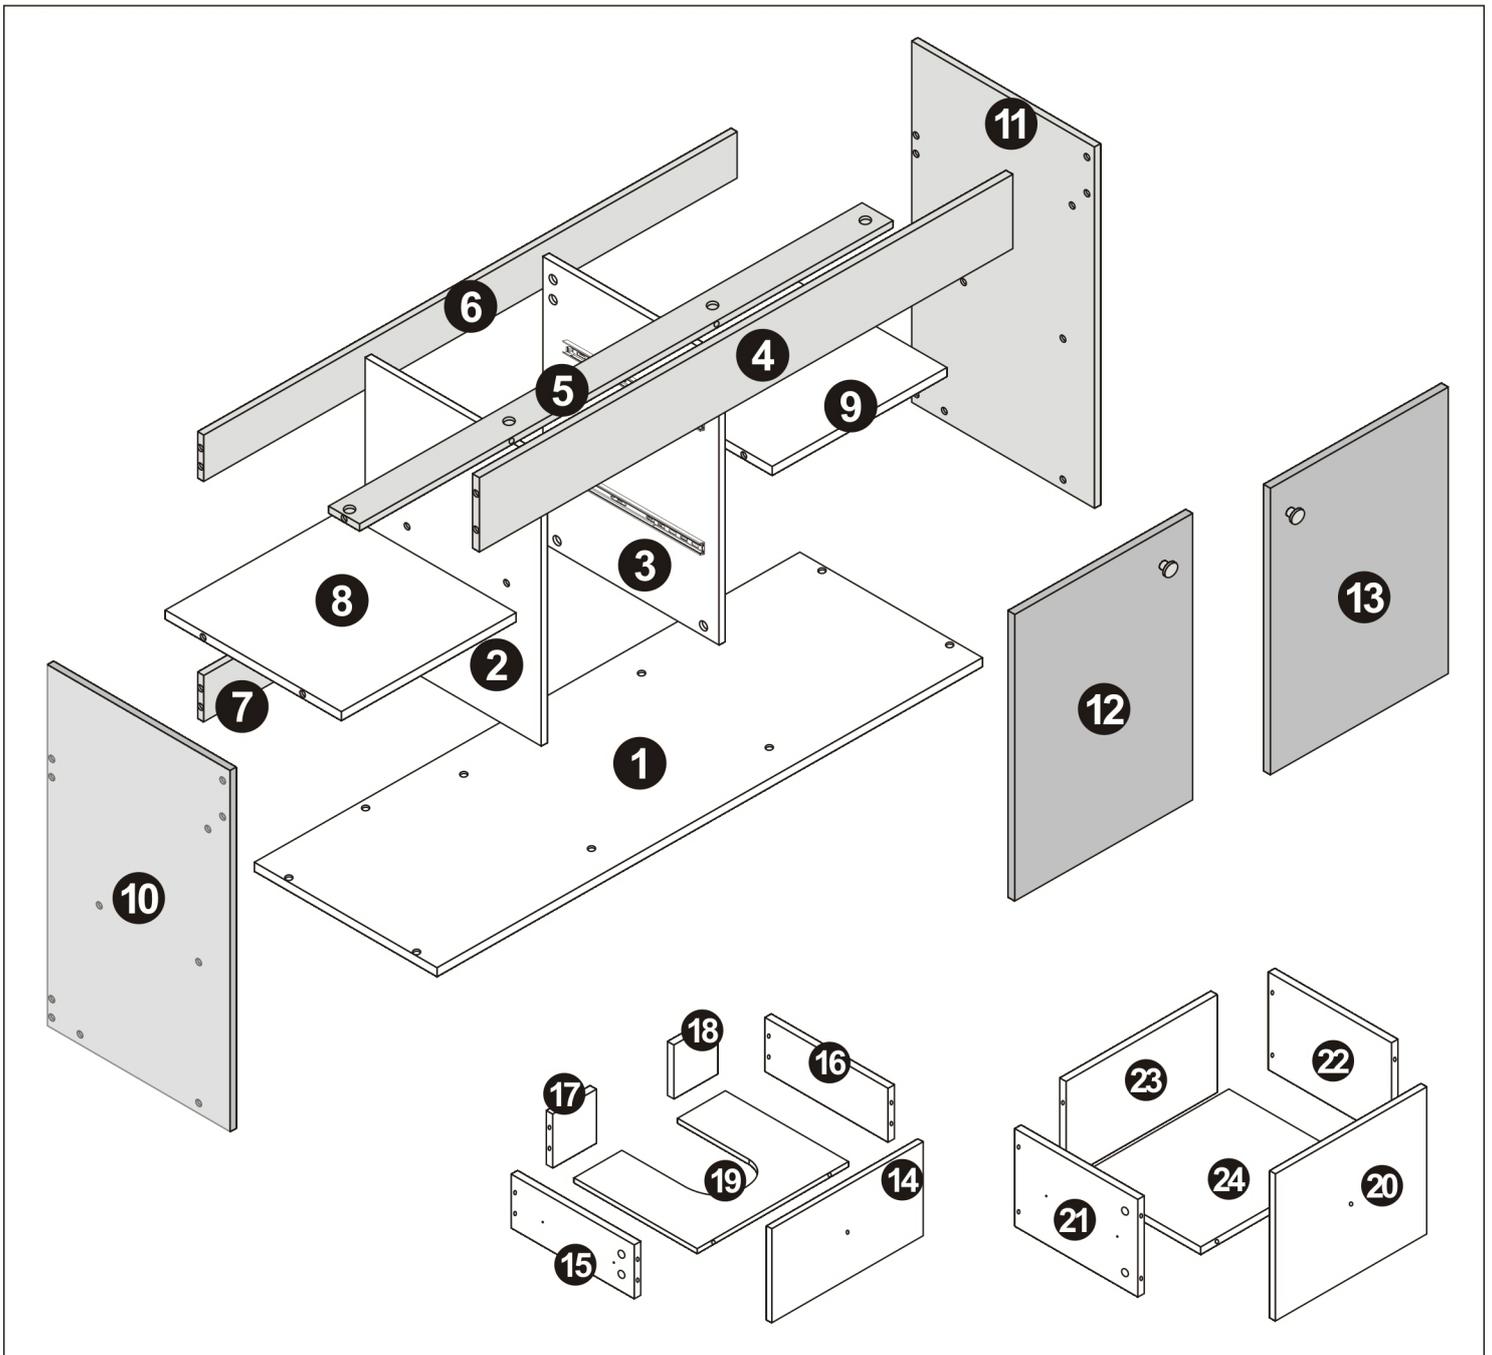


Disassembly and installation of accessories

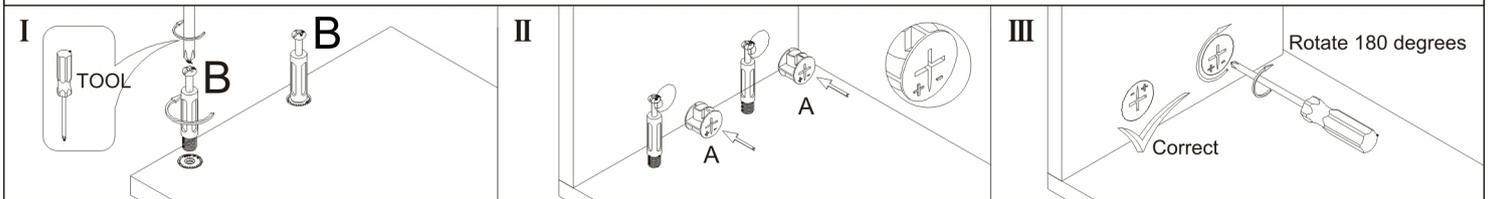

A 52PCS  15*10mm	B 52PCS  6*28mm	C 76PCS  3.5*14mm	D 20PCS  3.5*35mm	E 4PCS  4*20	F 4PCS  Handles	G 4PCS  Sponge Mat	H 4PCS  Mid bend	
I 2PCS  Expansion screw	J 2PCS  Corner code	K 2PCS  Three-section Rail	L 4PCS  Hardware Feet	M 1PCS  Hardware Feet				

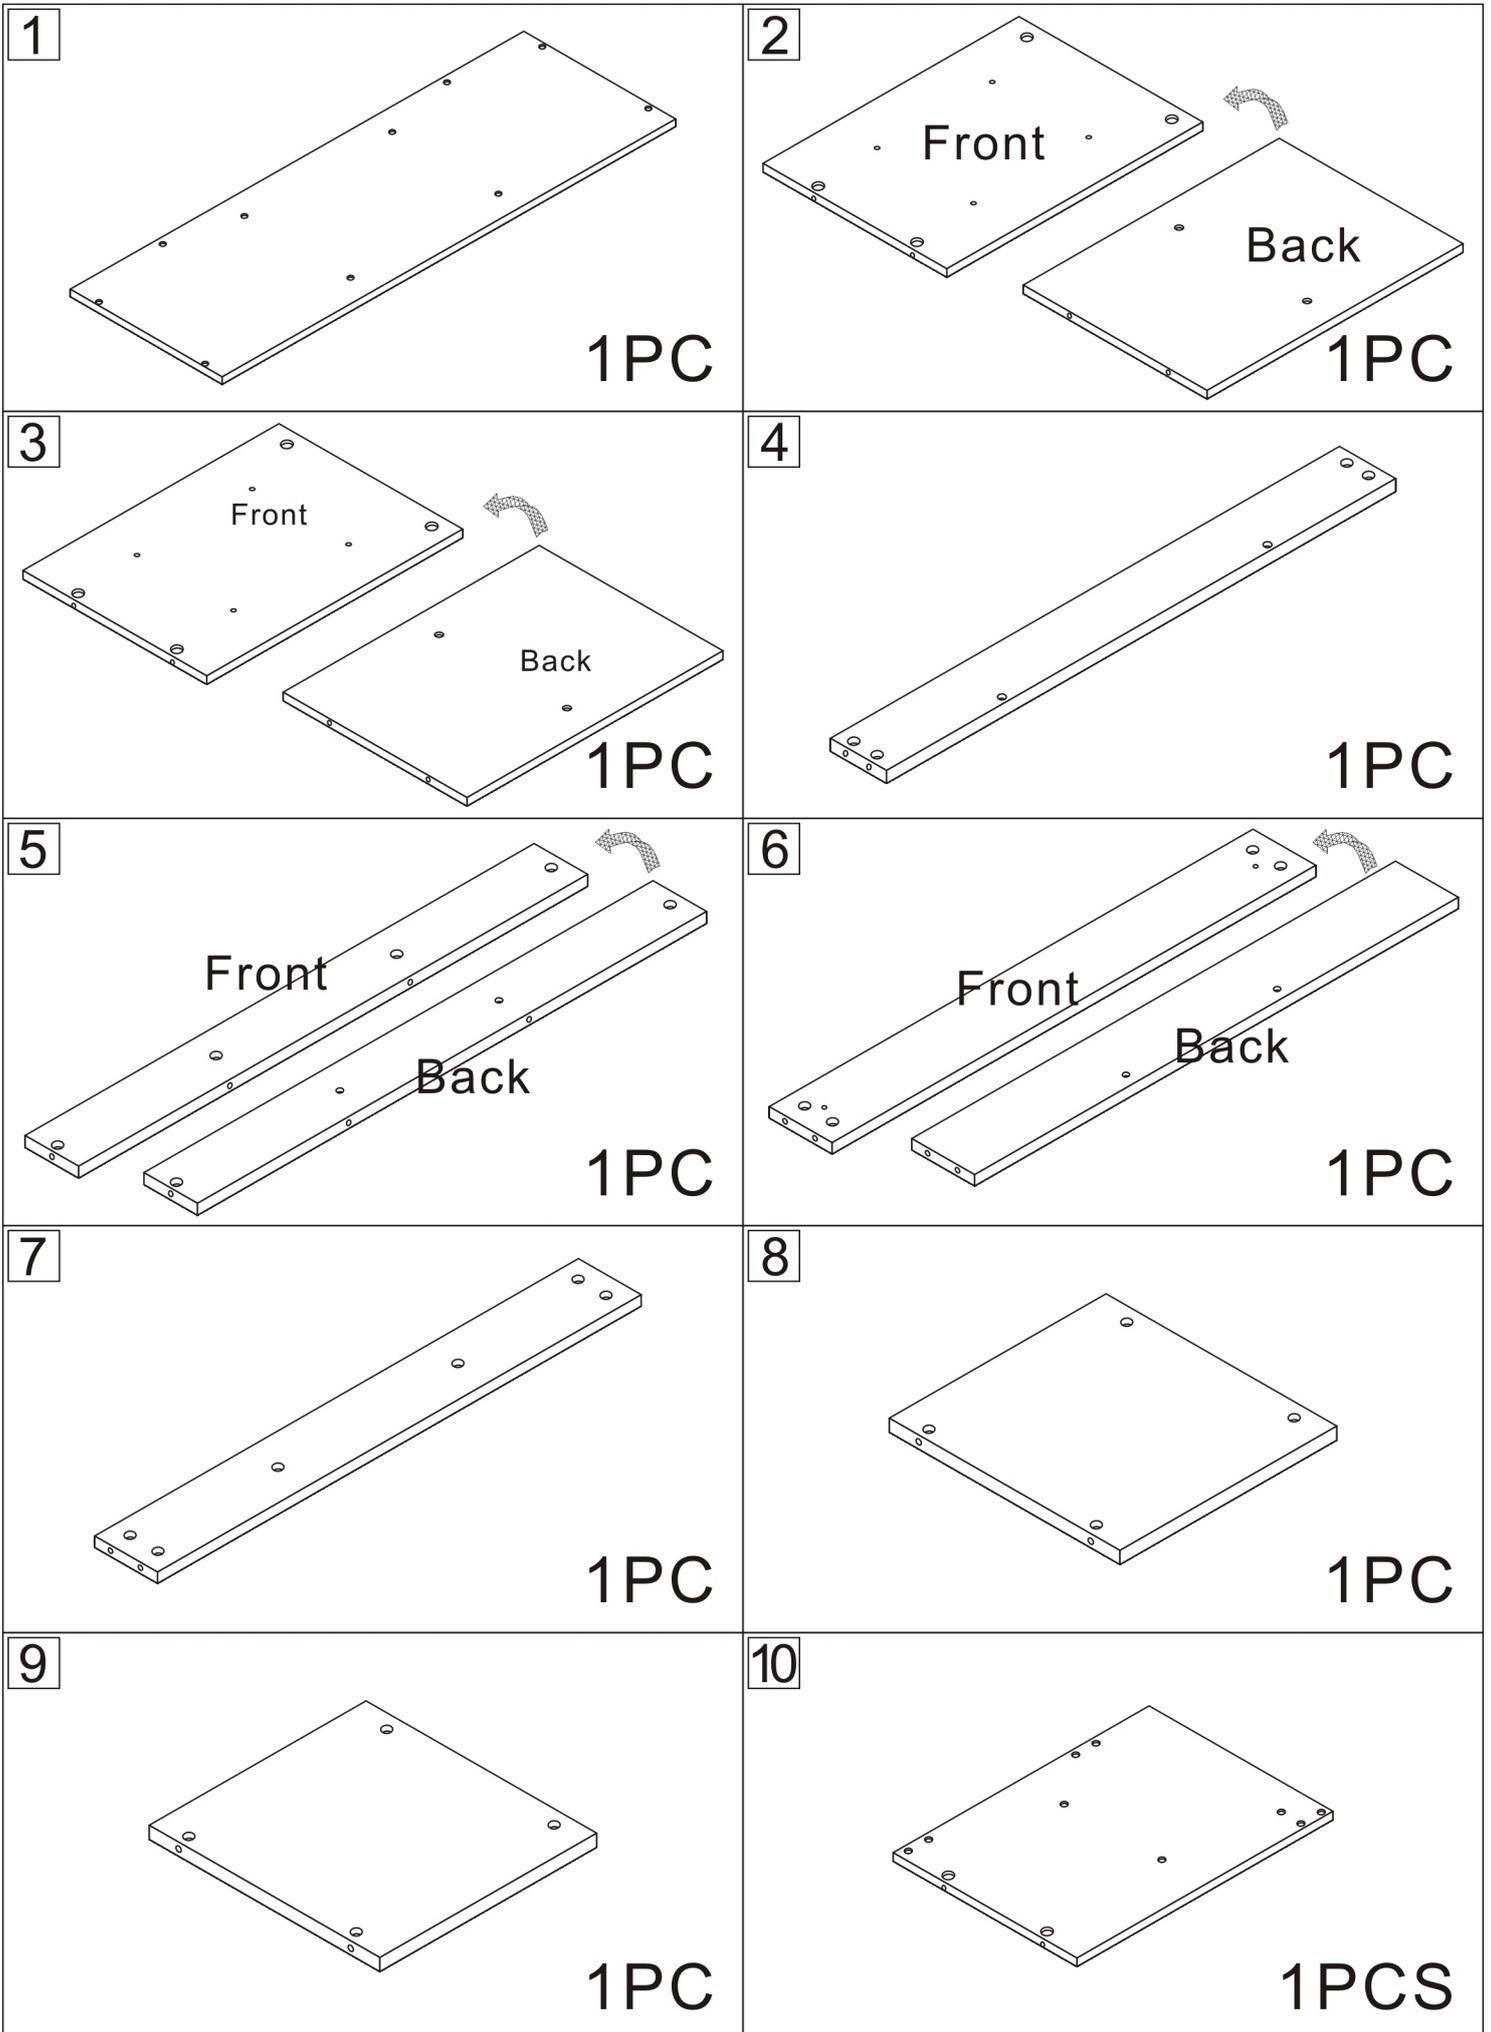


11

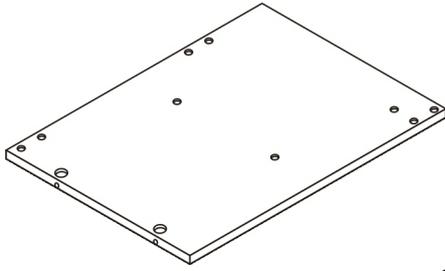


1PC

12

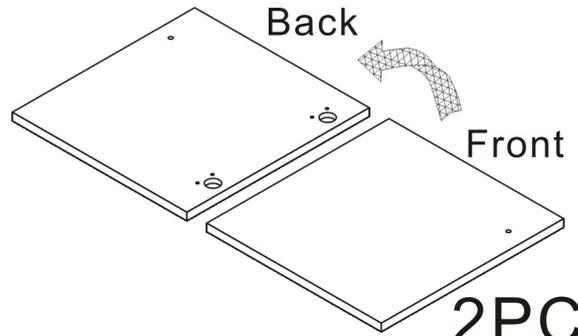


2PCS

13

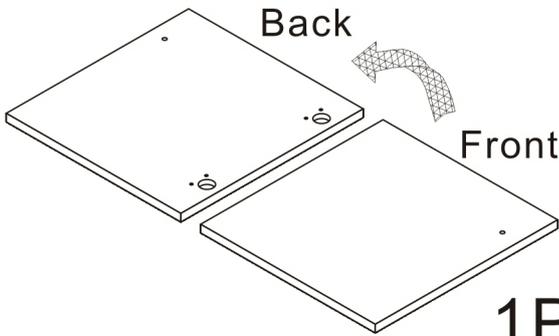


1PC

14

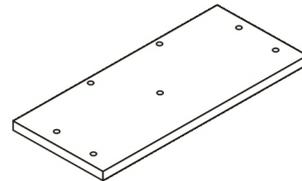


1PC

15

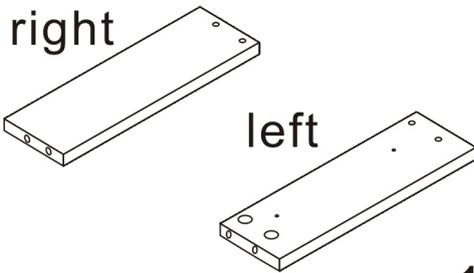


1PC

16

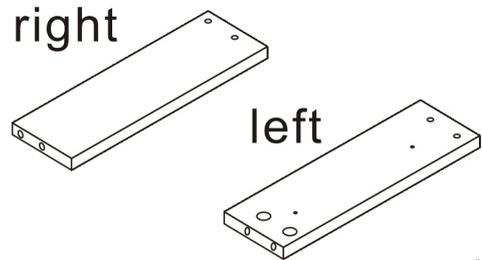


1PC

17




1PC

18




1PC

19

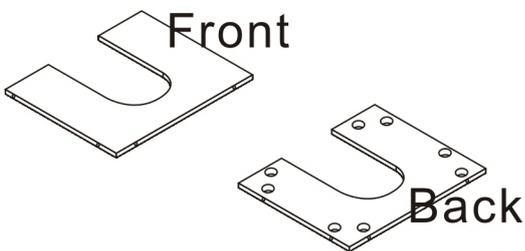


1PC

20

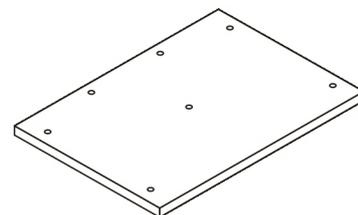


1PC

21

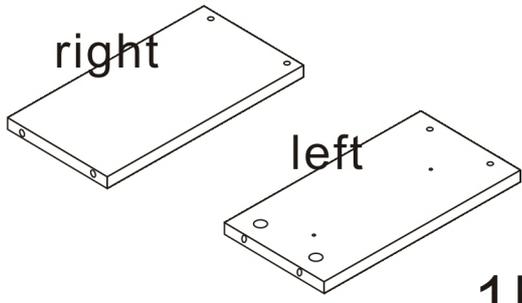


1PC

22

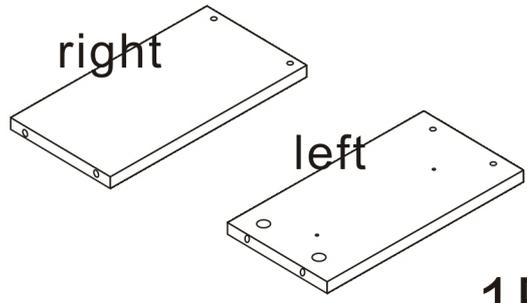


1PC

23

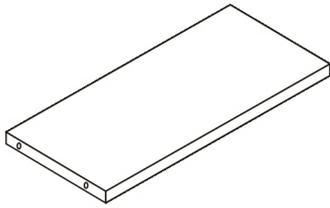











1PC

24

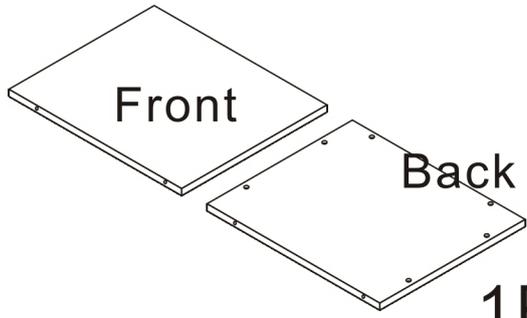


1PC

1

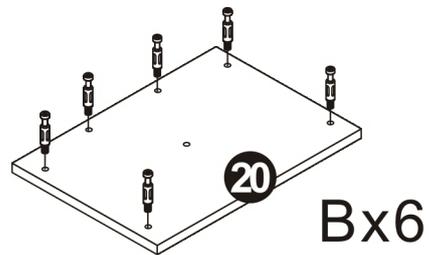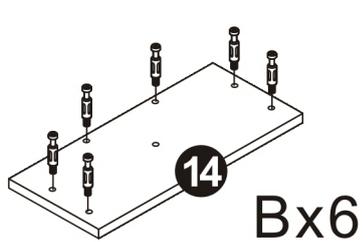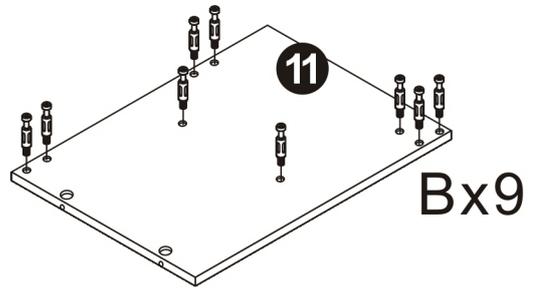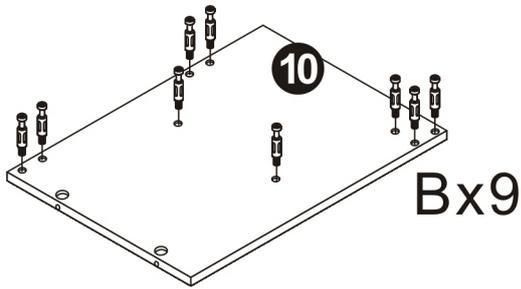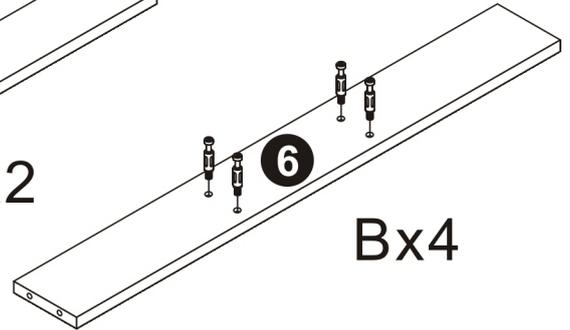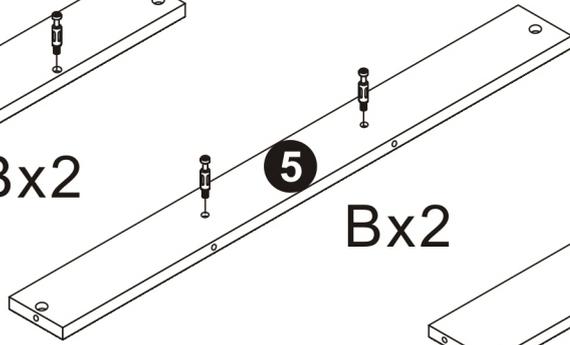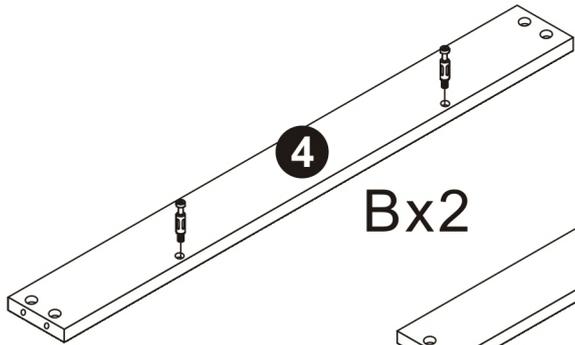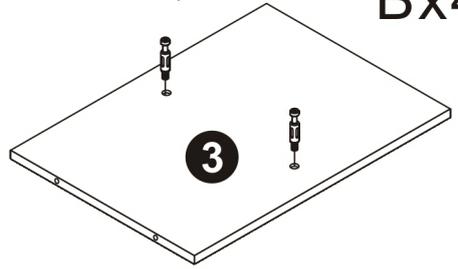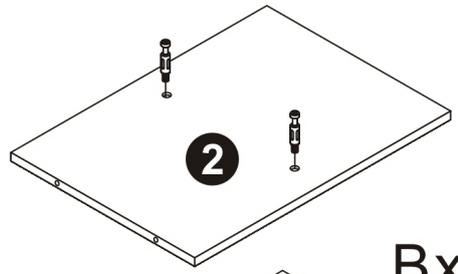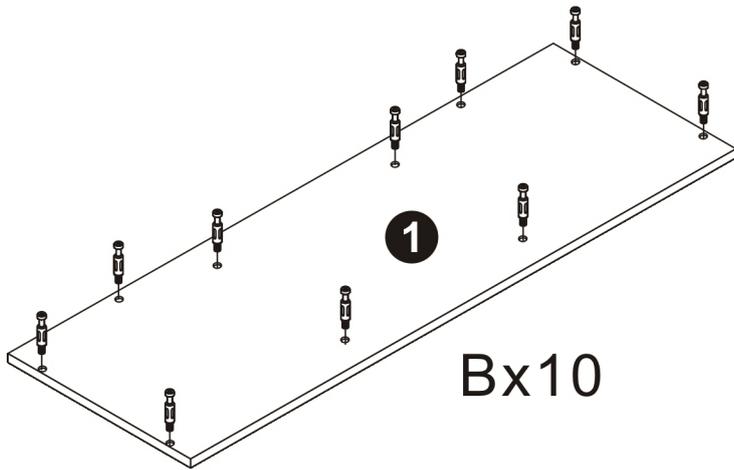


B	52PCS
	
6*28mm	

2

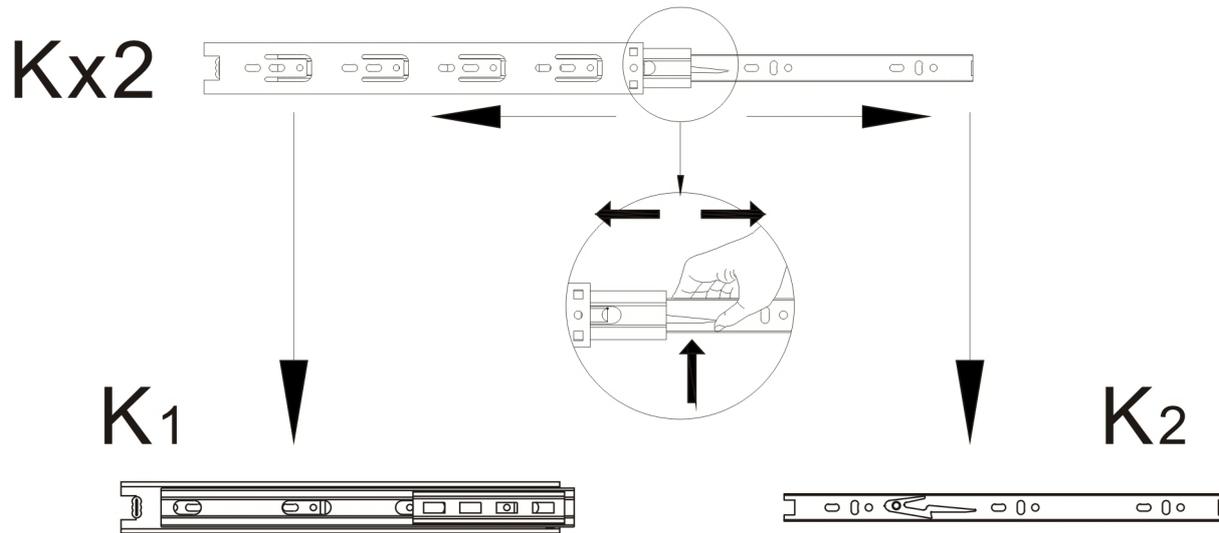

K₁	2PCS
	
Three-section Rail	


3

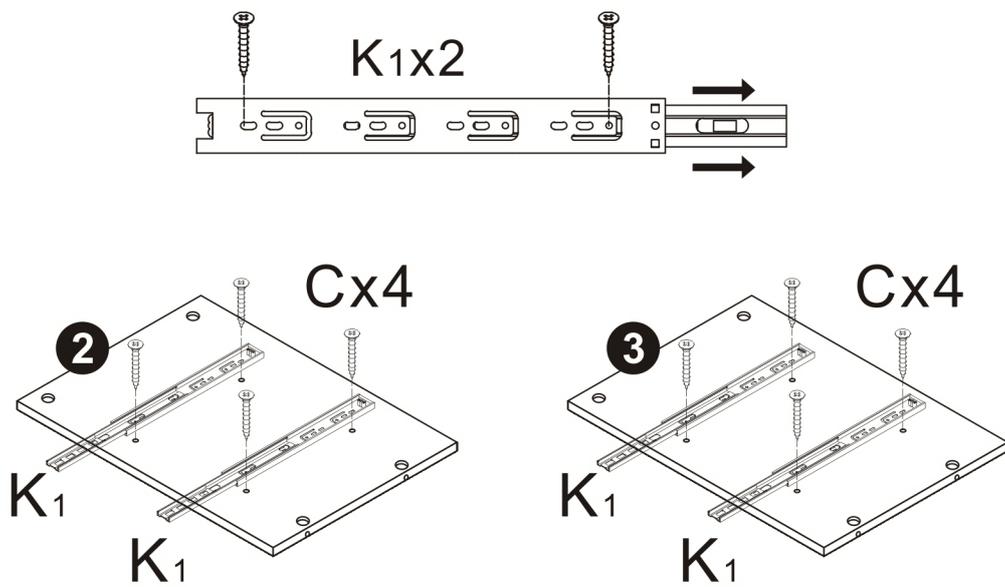

C	8PCS
	
3.5*14mm	


K₁	2PCS
	
12 inch Three-section Rail	

4

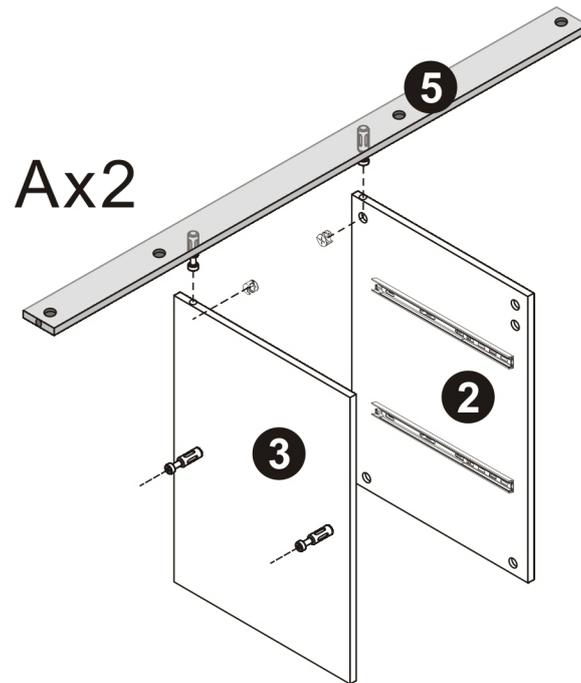


A	2PCS
	
15*10mm	

5

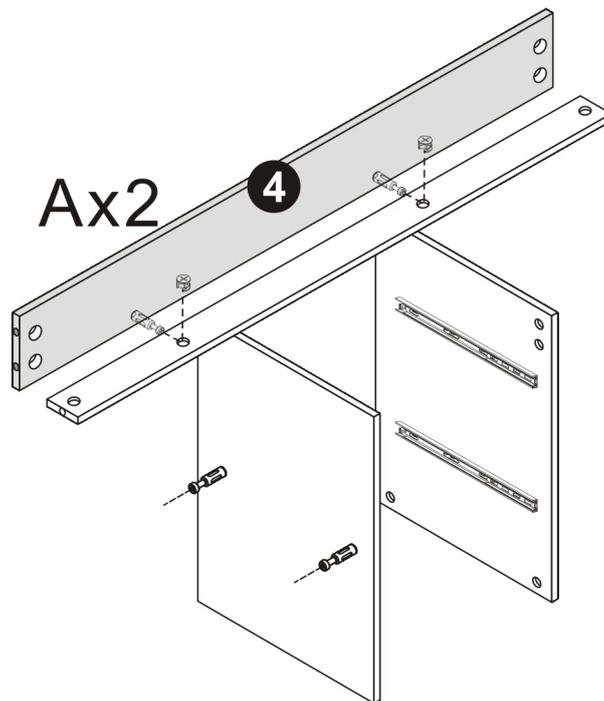


A	2PCS
	
15*10mm	

6

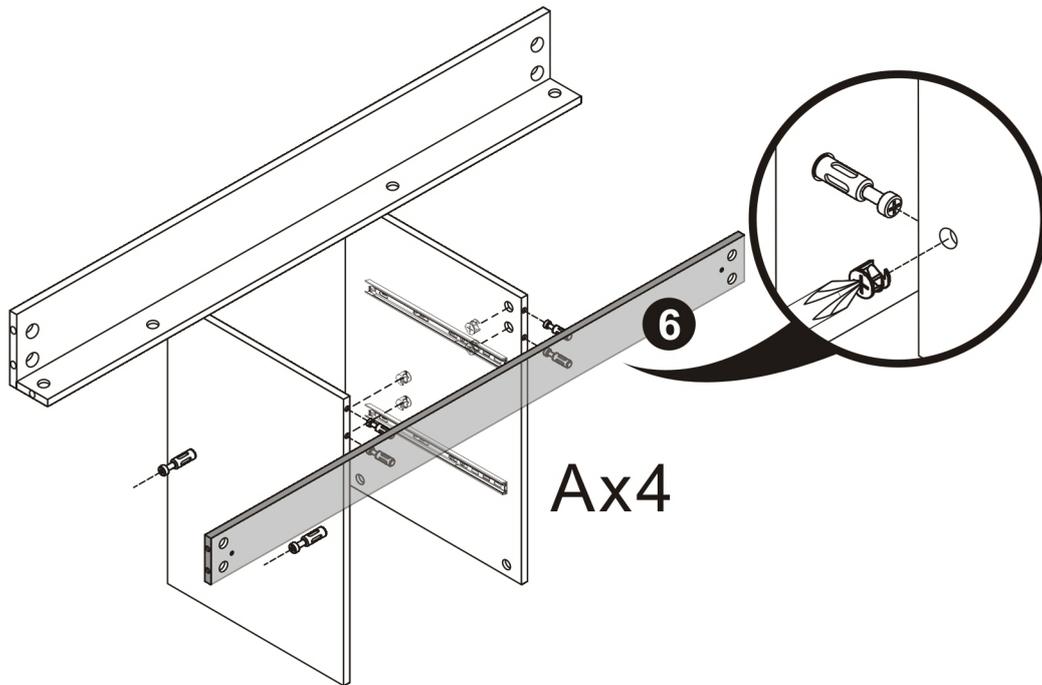


A	4PCS
	
15*10mm	

7

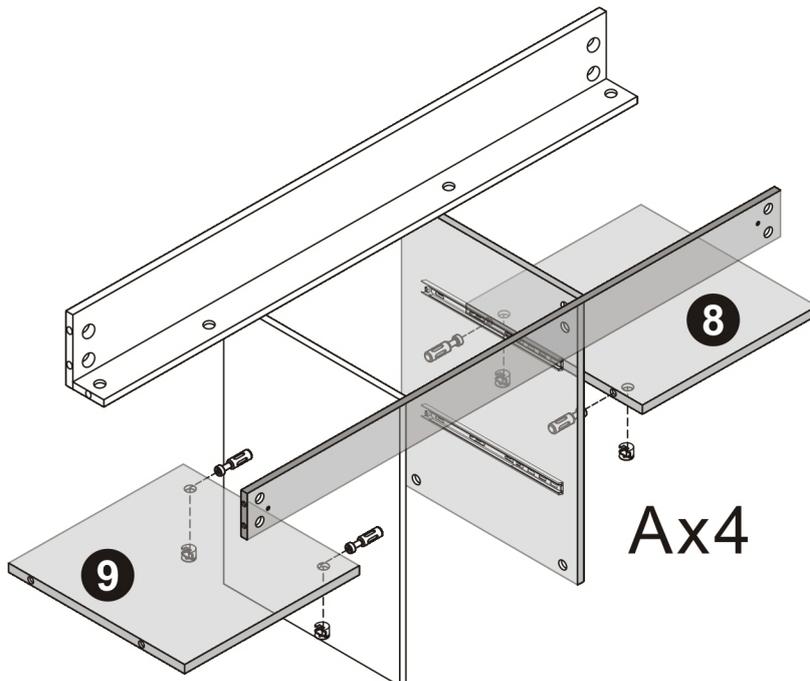


A	4PCS
	
15*10mm	

6

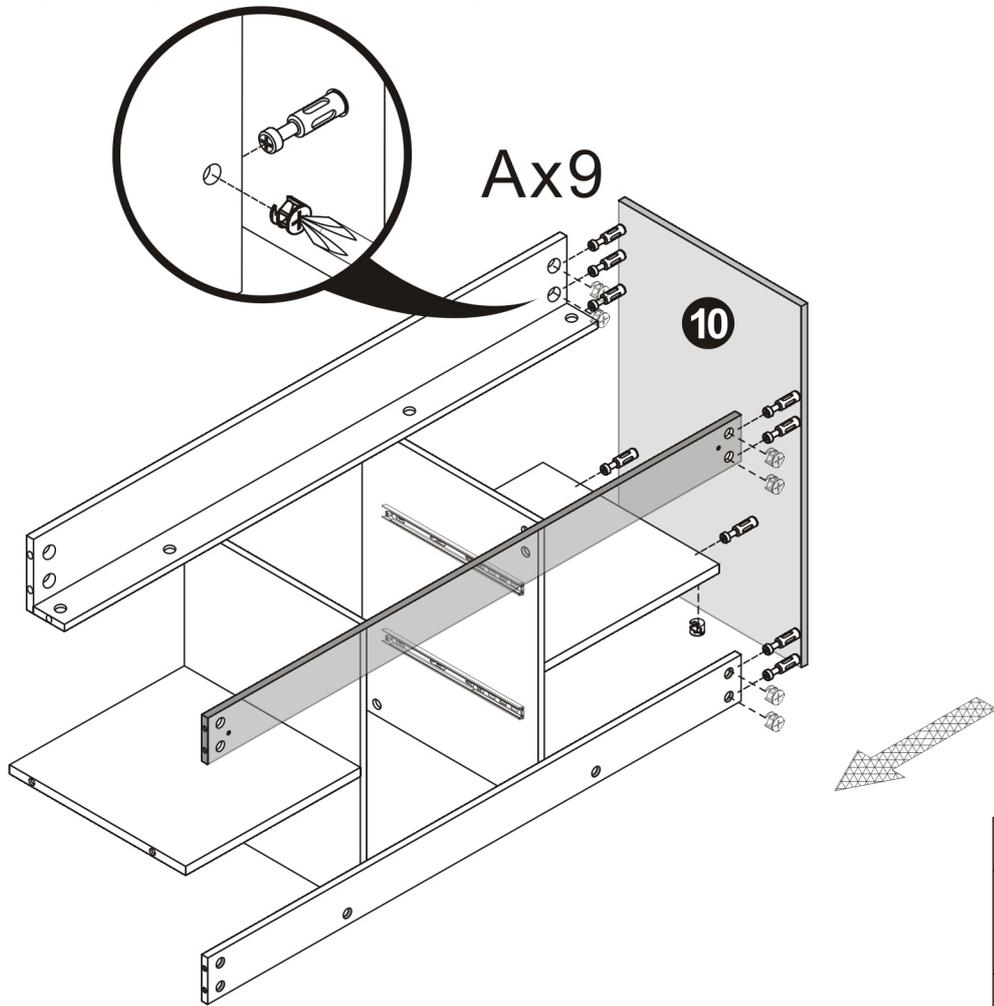


A	9PCS
	
15*10mm	

7

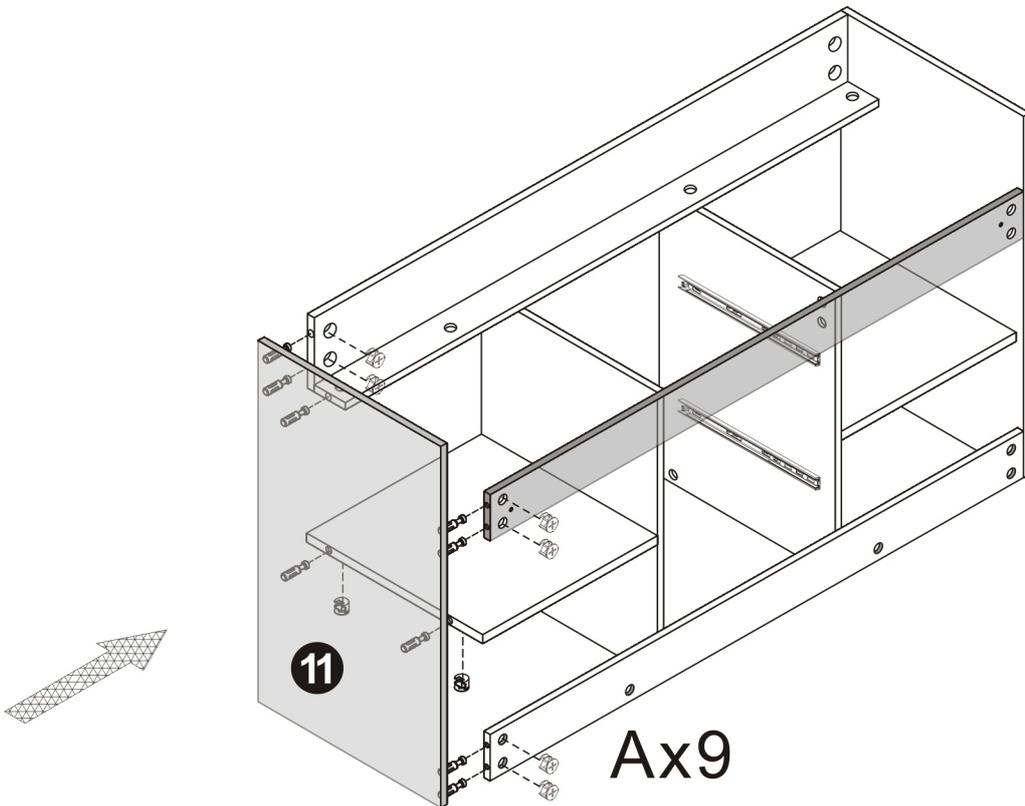


A	9PCS
	
15*10mm	

6

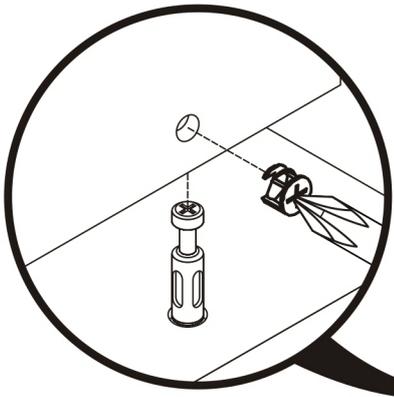


Ax10

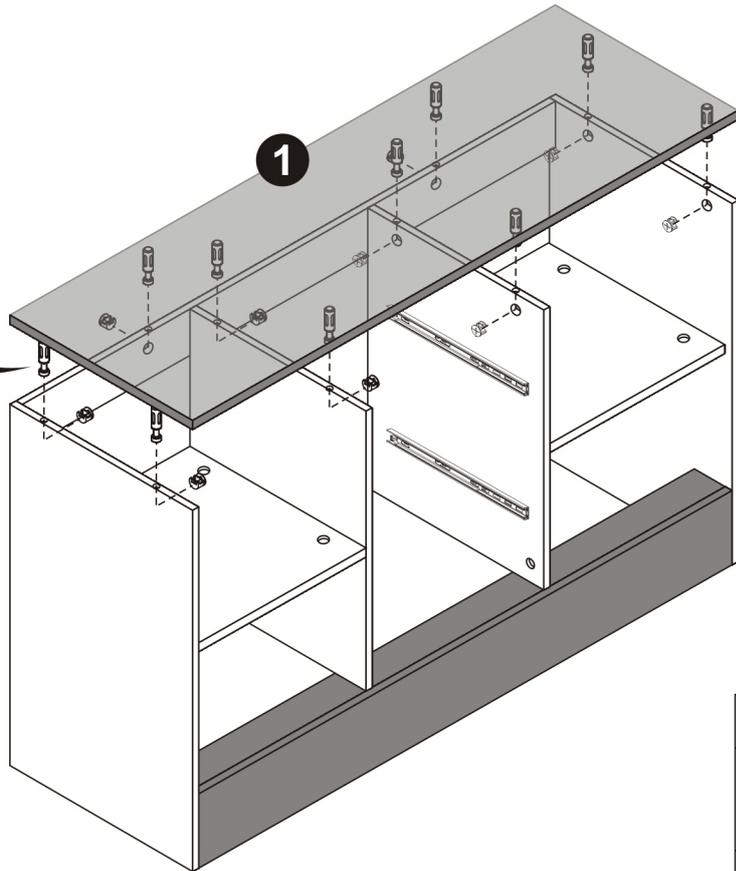

A	10PCS
15*10mm	


7

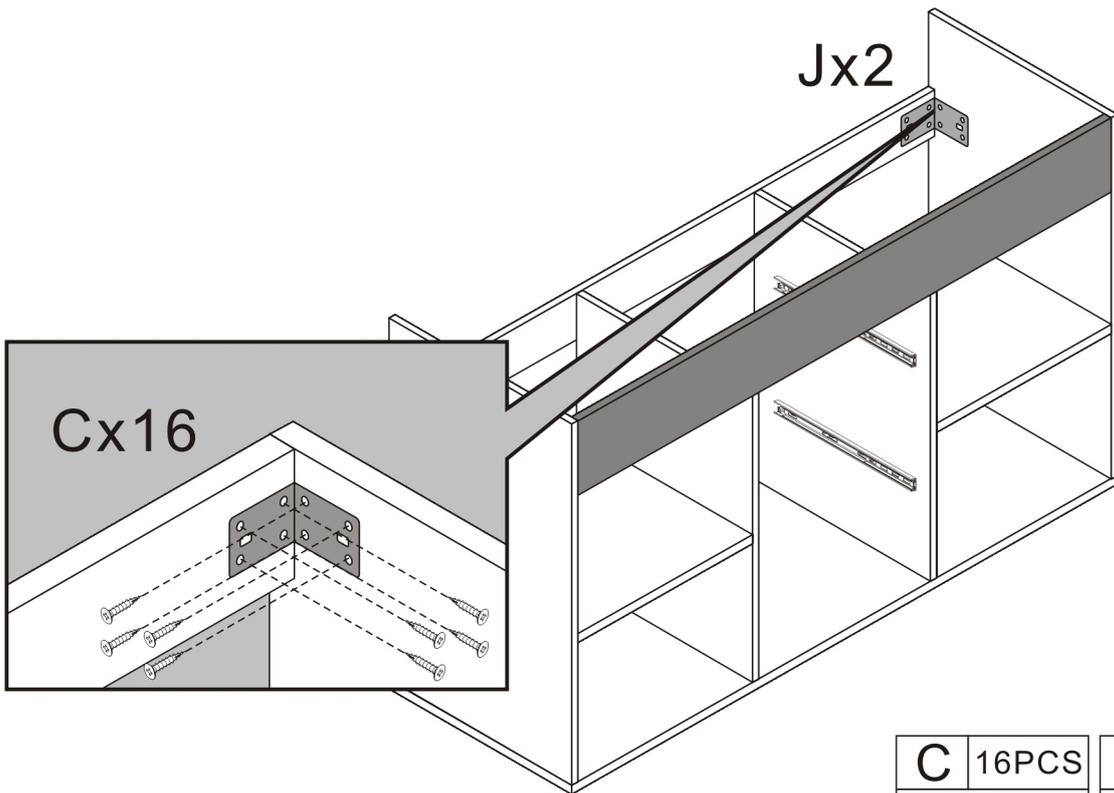


C	16PCS	J	2PCS
3.5*14mm		Corner code	


10

Hx2
Cx4

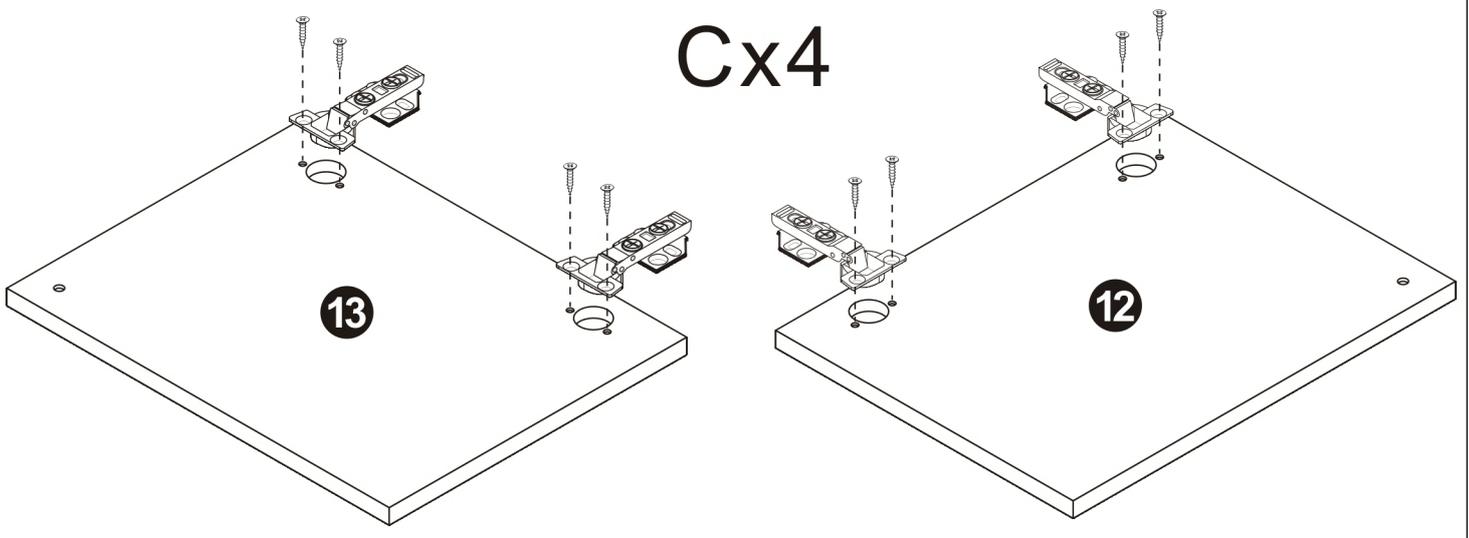

C 8PCS	H 4PCS
	
3.5*14mm	Mid bend

11

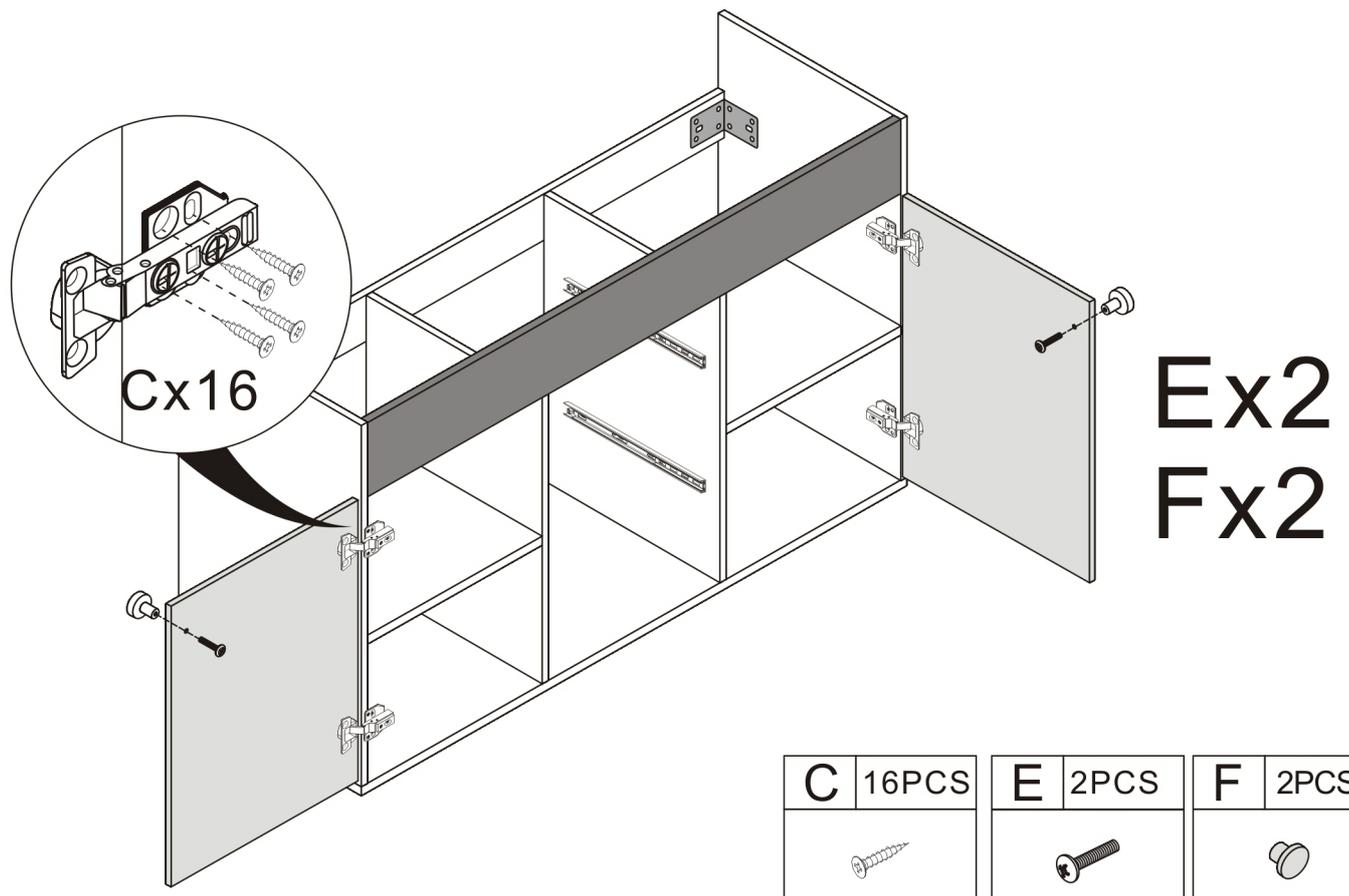


C 16PCS	E 2PCS	F 2PCS
		
3.5*14mm	4*20	Handles

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

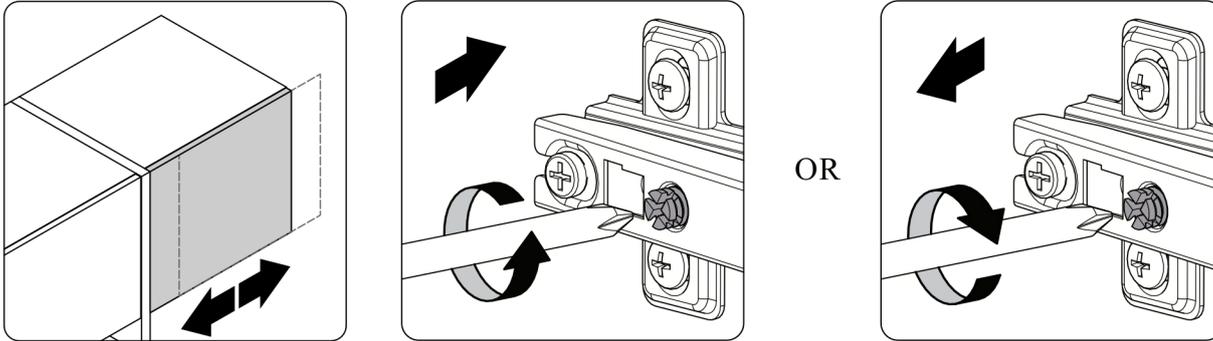


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

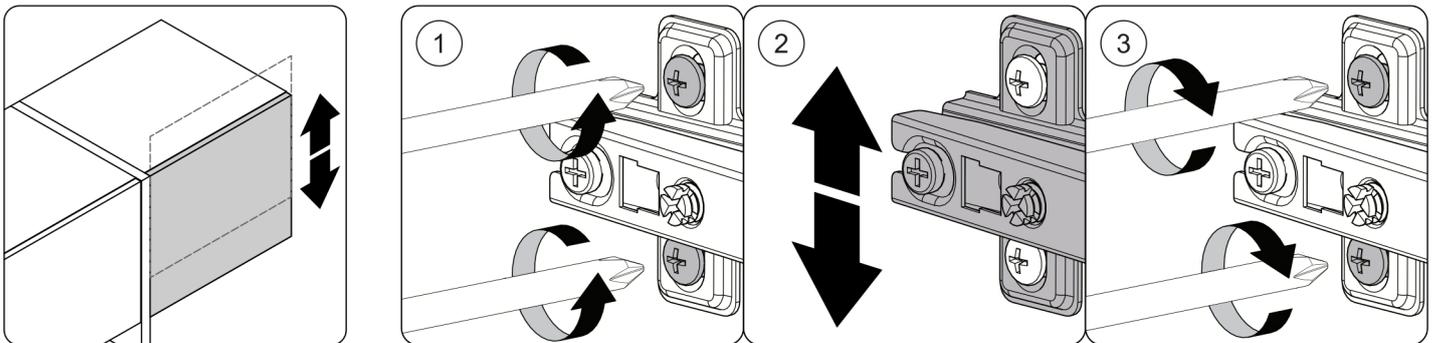

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

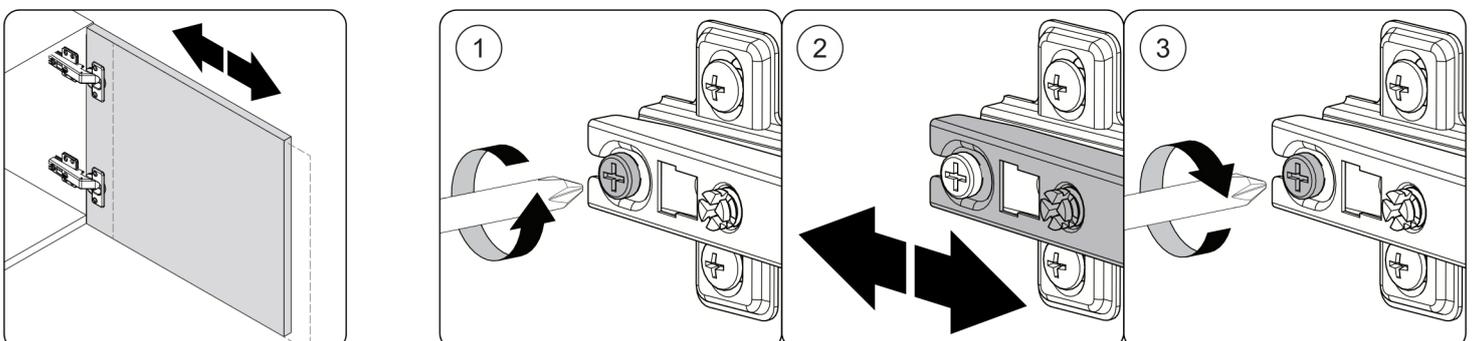


14

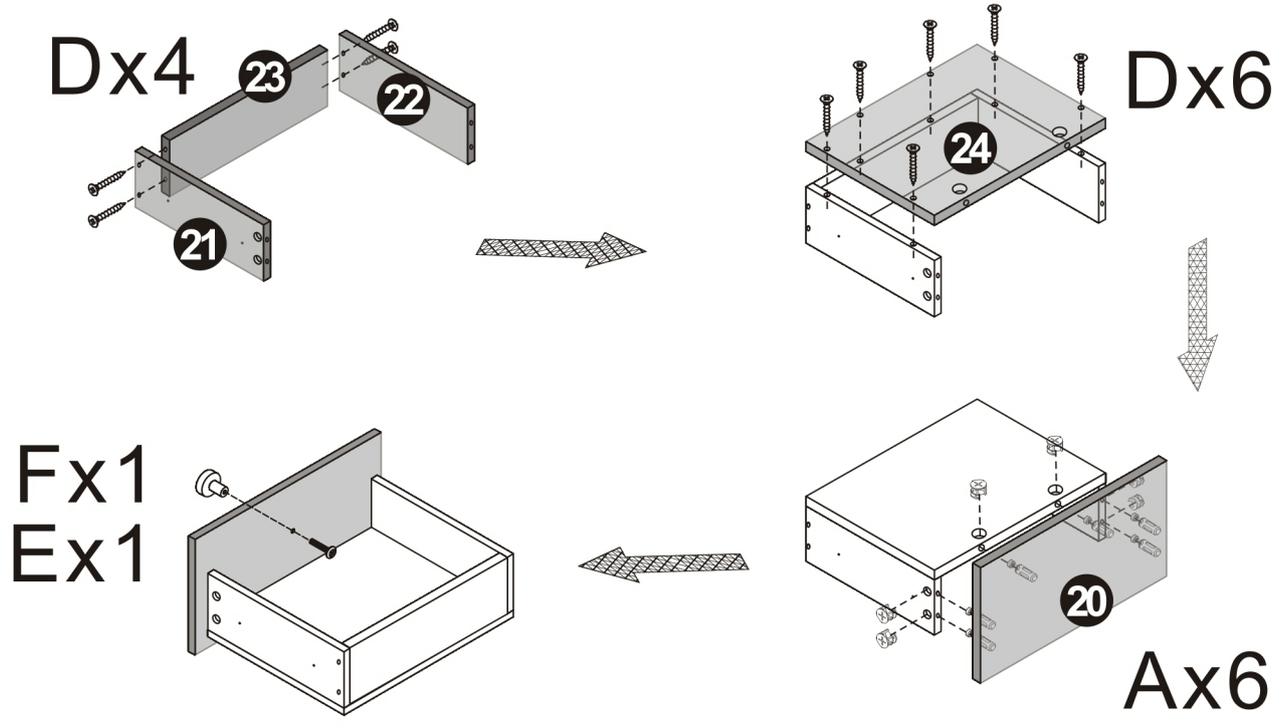



A	6PCS	D	10PCS	E	1PCS	F	1PCS
15*10mm		3.5*35mm		4*20		Handles	

15

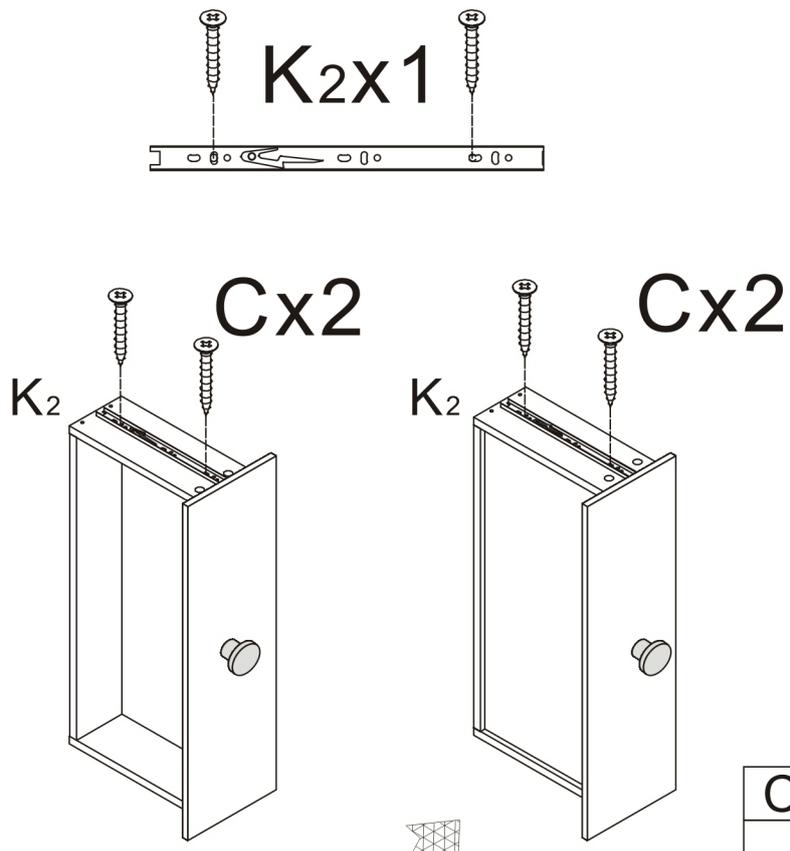



C	4PCS	K	1PCS
3.5*14mm		Three-section Rail	

Dx4

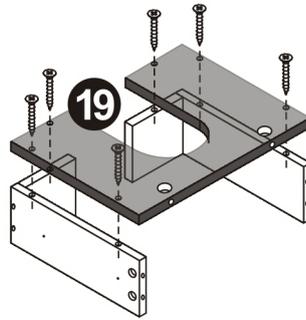
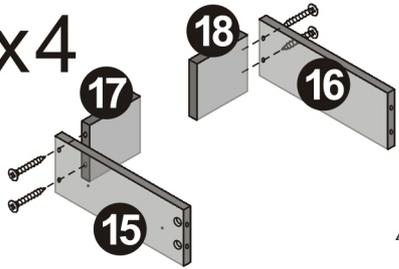


Dx6



Ex1
Fx1

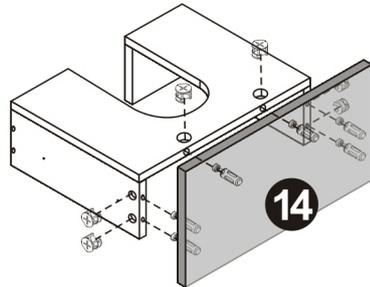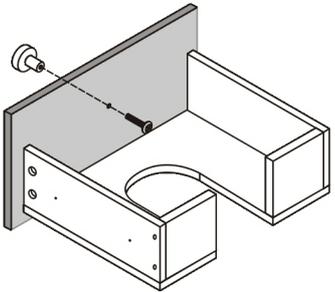

Ax6

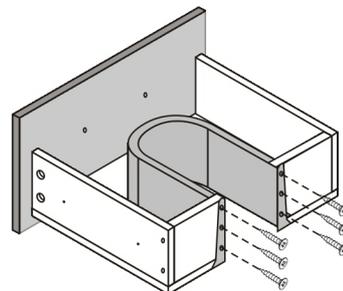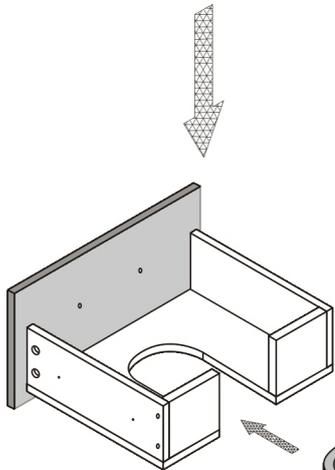


Cx6

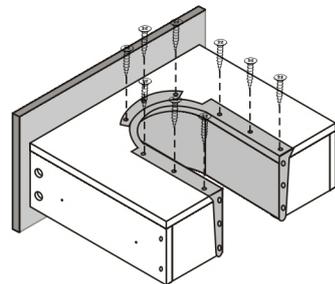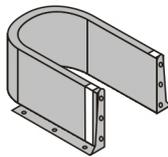


Cx9

Kx2
Cx4

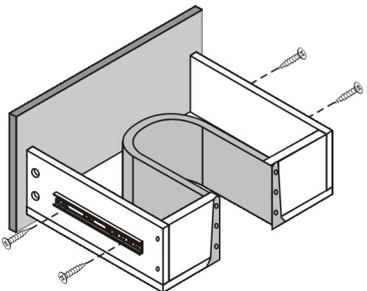

A 6PCS	C 19PCS	D 10PCS	E 1PCS	F 1PCS	K 2PCS
					
15*10mm	3.5*14mm	3.5*35mm	4*20	Handles	Three-section Rail



17

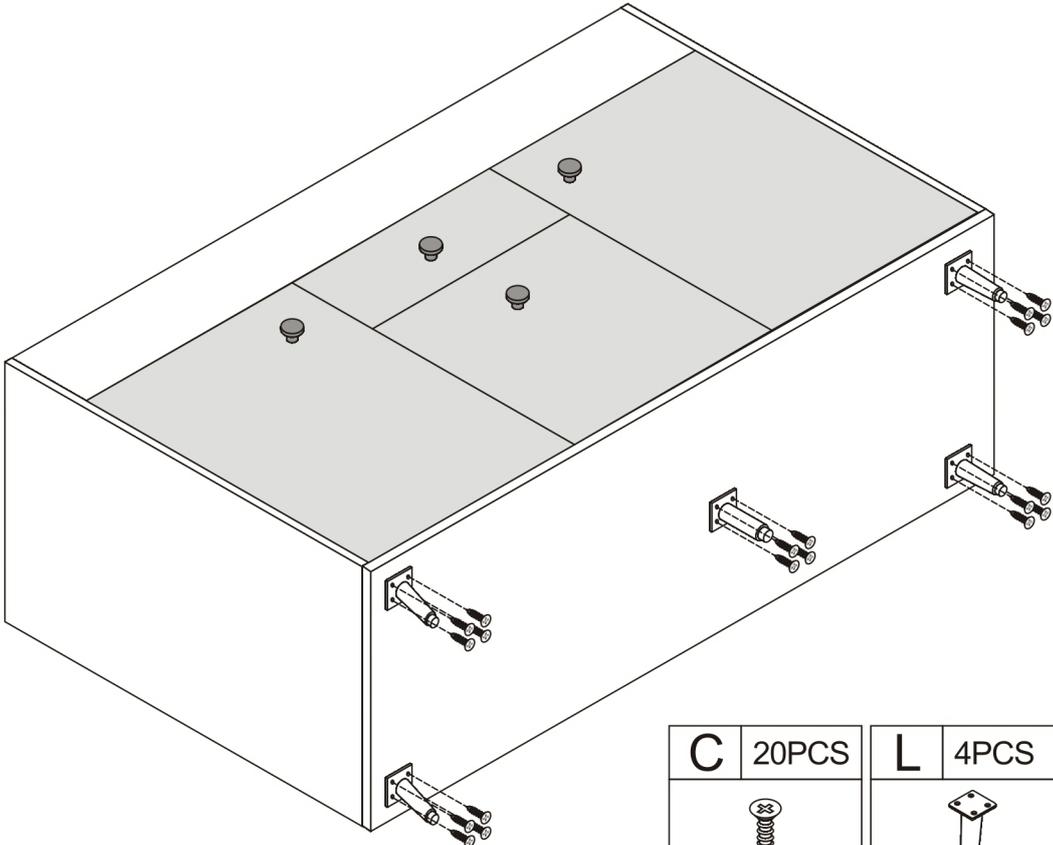


Cx20
Lx4
Mx1


C	20PCS	L	4PCS	M	1PCS
					
3.5*14mm		Hardware Feet		Hardware Feet	

18

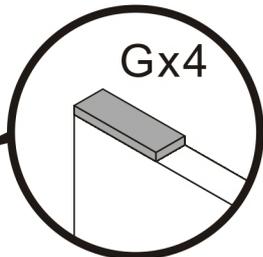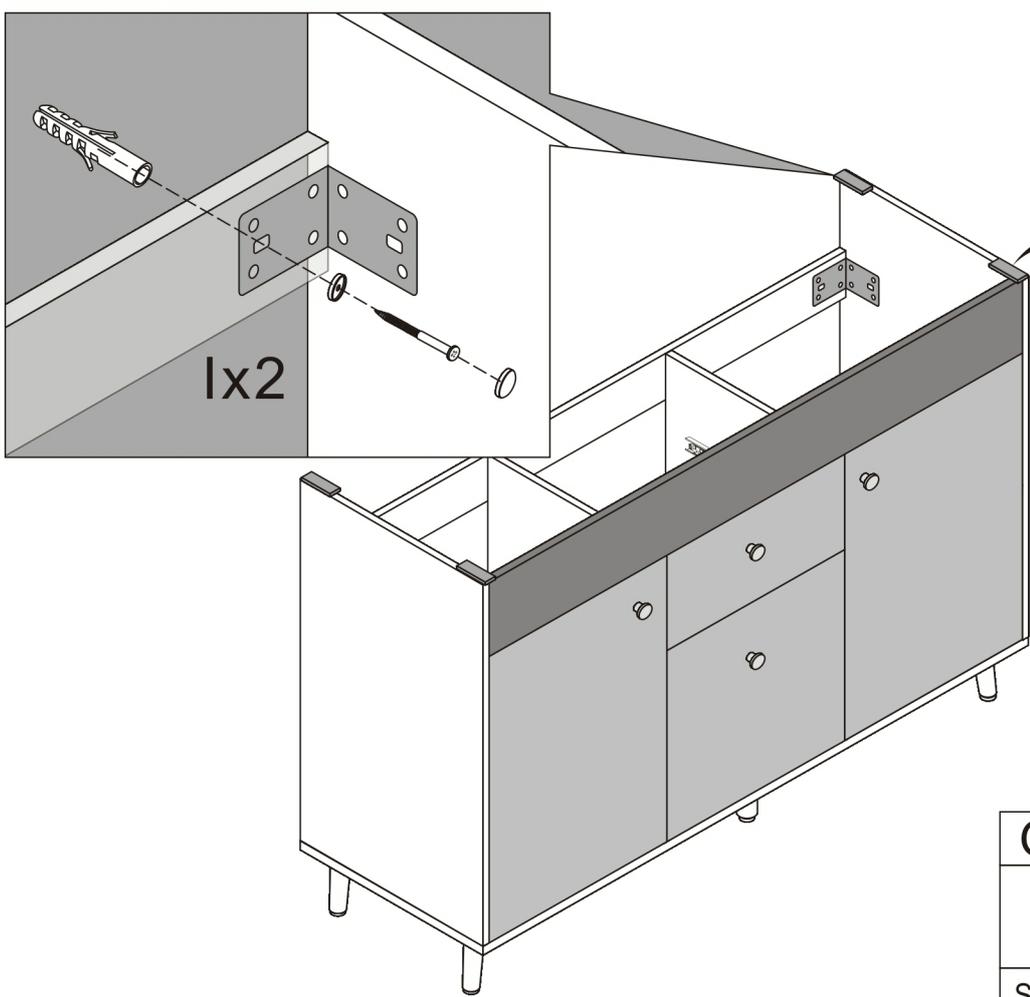


G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

17

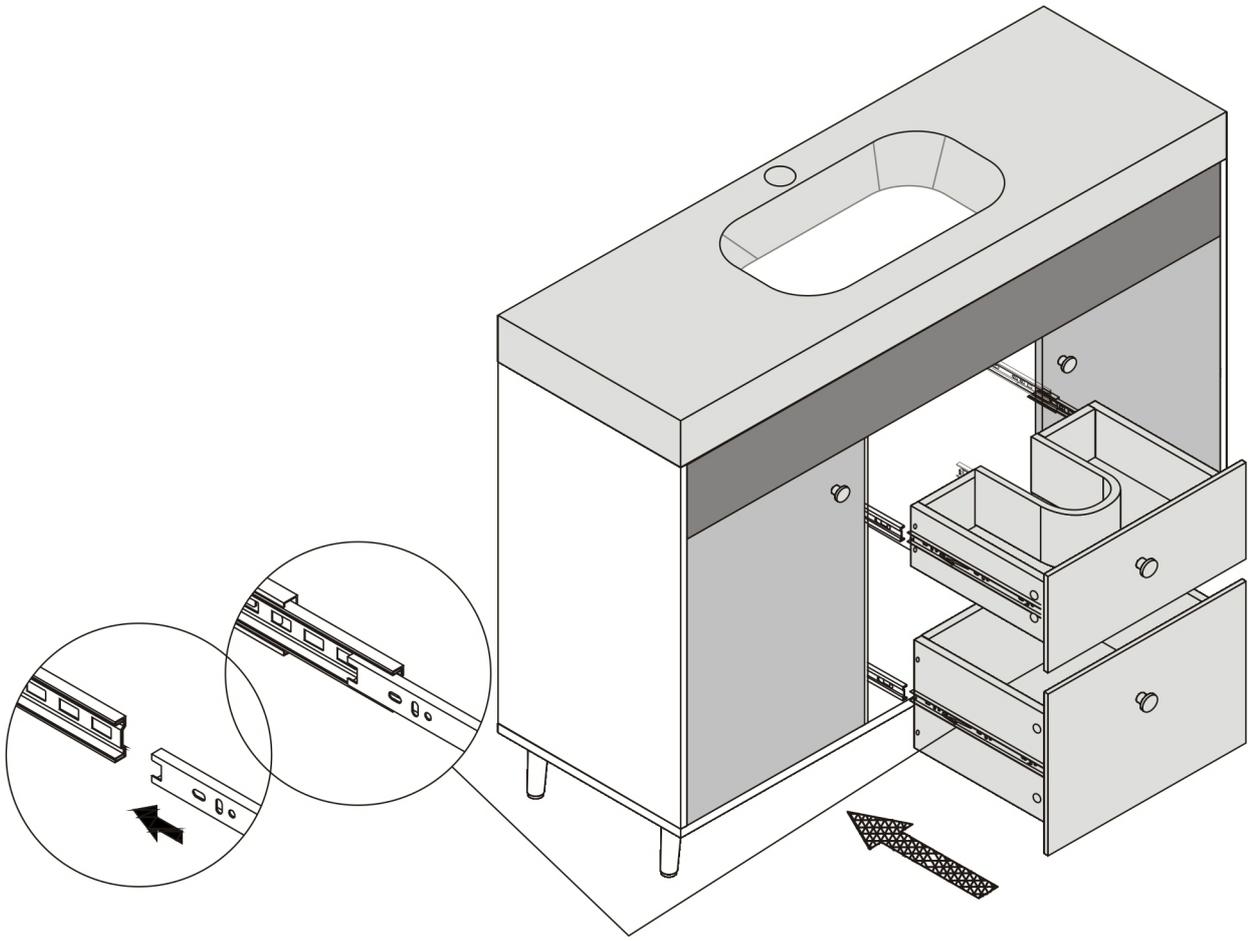

18

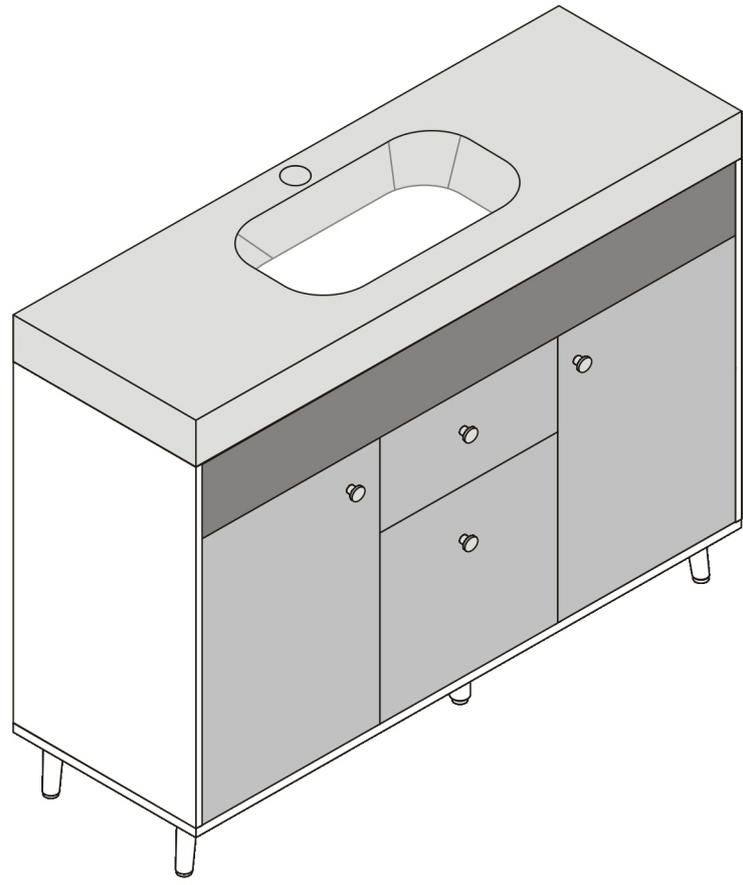

OK