


# ASSEMBLY INSTRUCTION

## N729P396832K

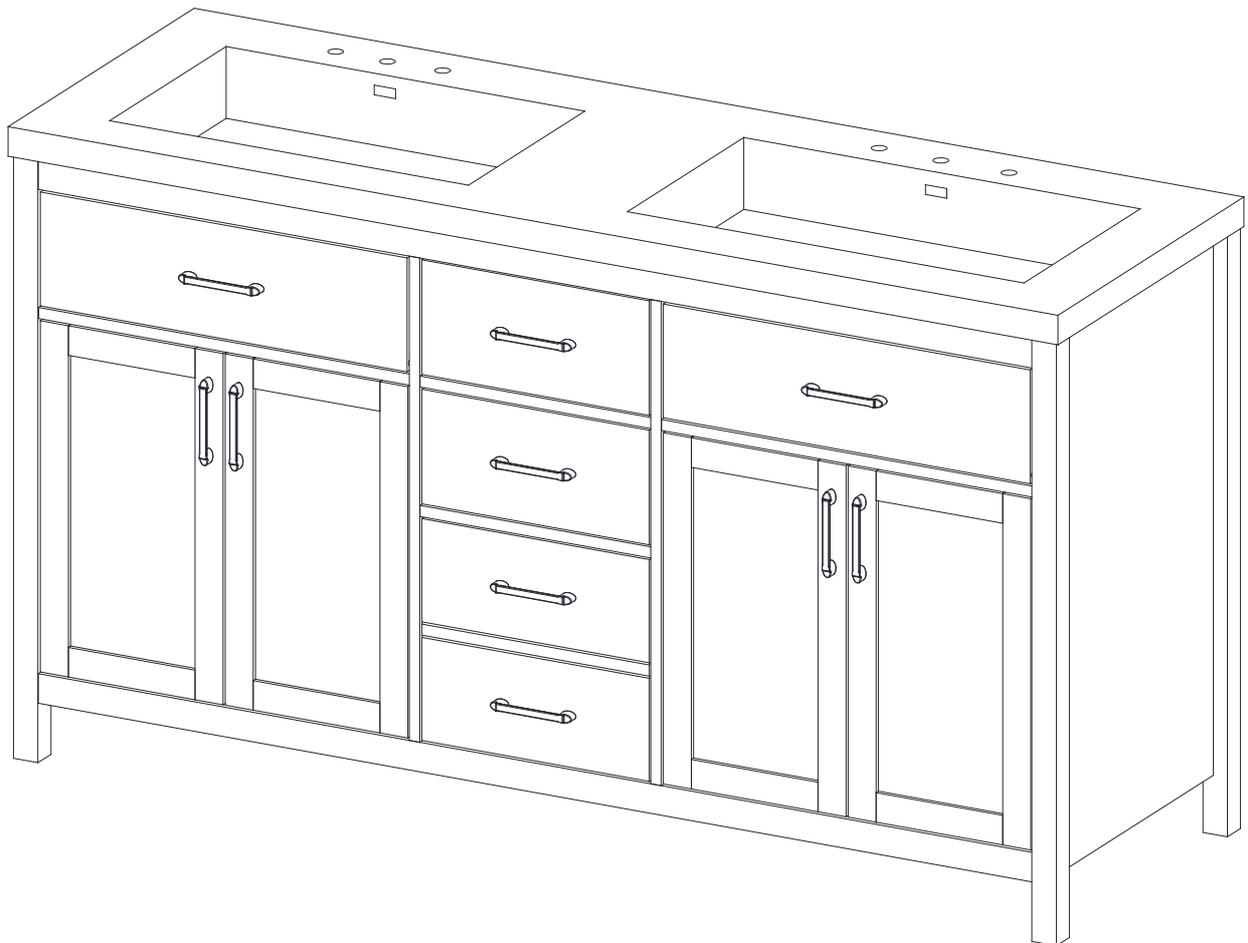

For assembly video instructions, please contact the seller.











# Before Installation








Important-Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions

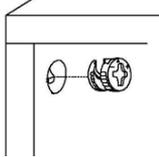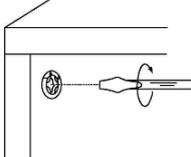
		Diagram A Insert Cam Bolt into hole as shown in diagram A.
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
		ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

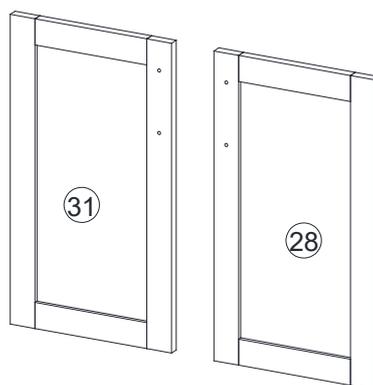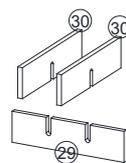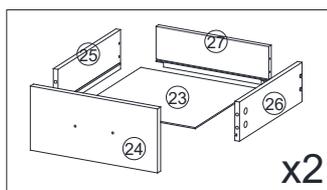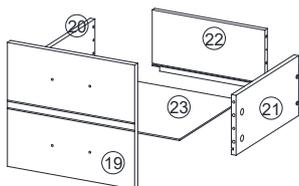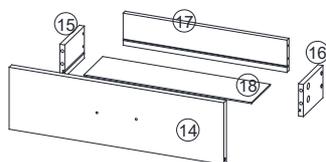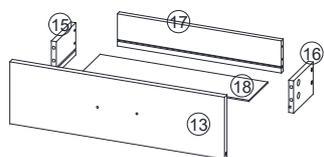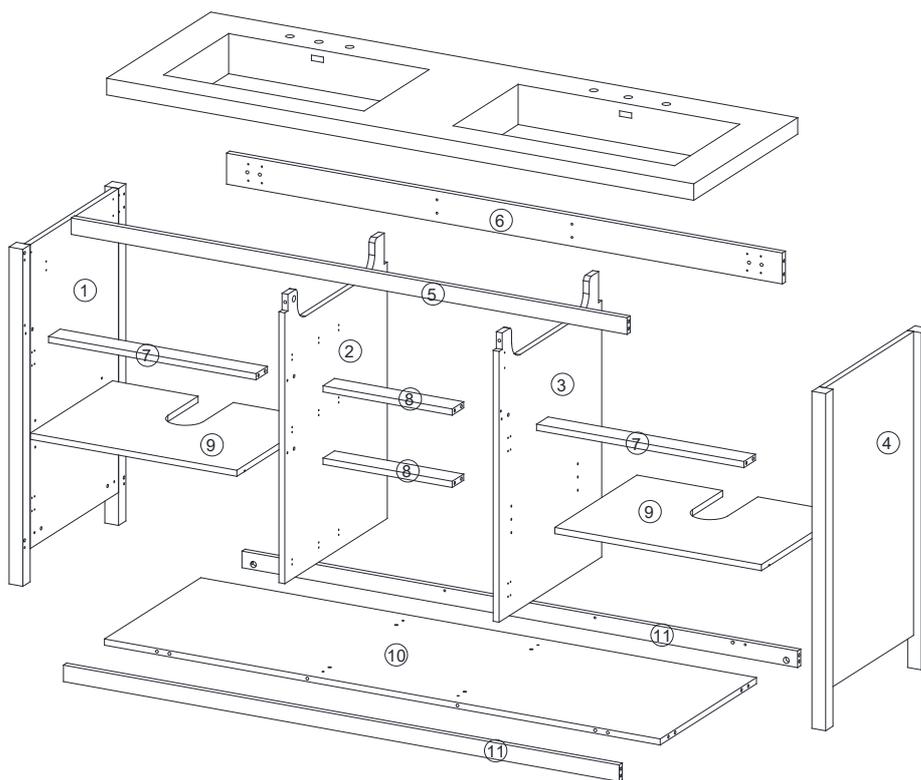


# Box 1 : N729P396832K

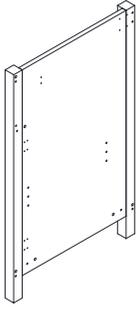


① x 1

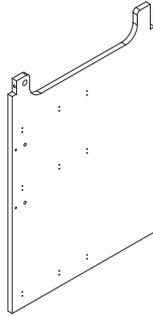

② x 1

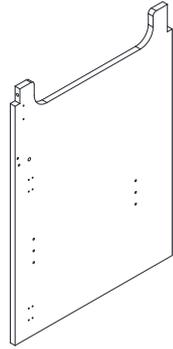


③ x 1

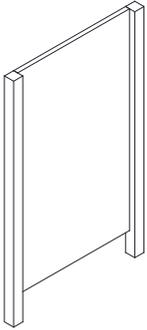


④ x 1




⑤ x 1




⑥ x 1




⑦ x 2



⑧ x 2

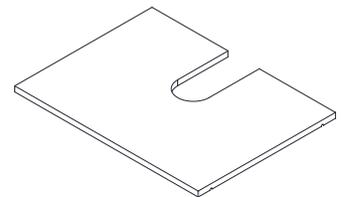


⑨ x 2



⑩ x 1















⑪ x 2










⑫ x 1


# Box 1 : N729P396832K









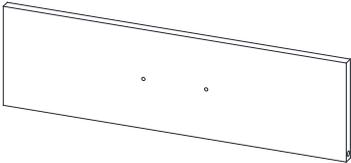
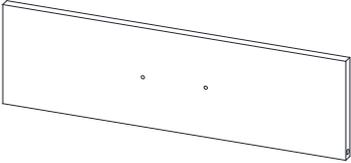
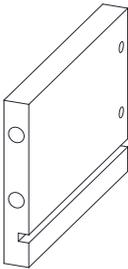
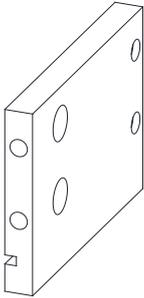
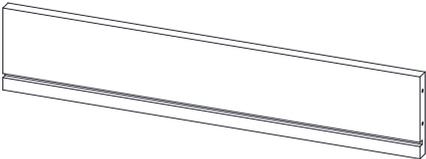

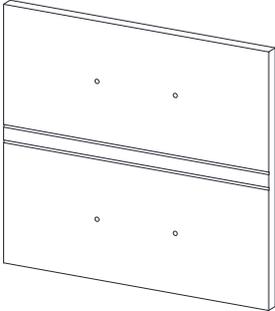
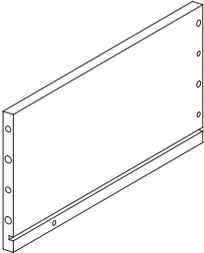
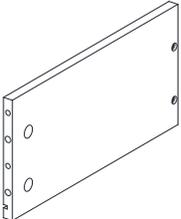
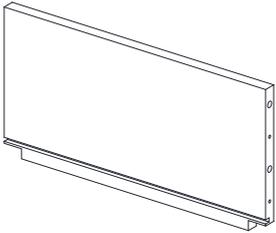

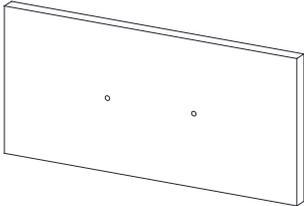
		
<p>⑬ x 1</p>	<p>⑭ x 1</p>	<p>⑮ x 2</p>
		
<p>⑯ x 2</p>	<p>⑰ x 2</p>	<p>⑱ x 2</p>
		
<p>⑲ x 1</p>	<p>⑳ x 1</p>	<p>㉑ x 1</p>
		
<p>㉒ x 1</p>	<p>㉓ x 3</p>	<p>㉔ x 2</p>

# Box 1 : N729P396832K

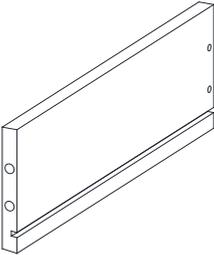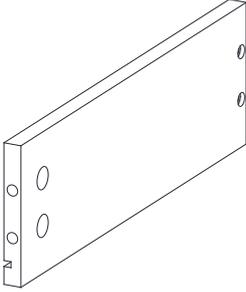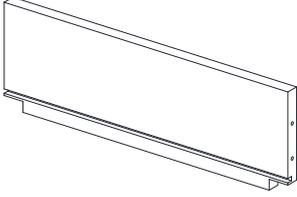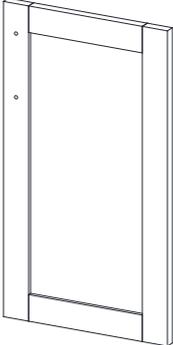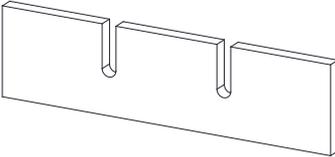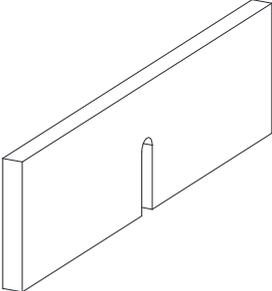
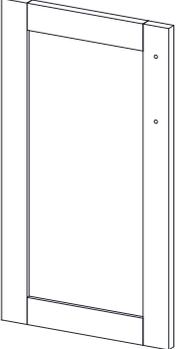
		
②⑤ x2	②⑥ x2	②⑦ x2
		
②⑧ x2	②⑨ x1	③⑦ x2
		
③① x2		

# Box 2 : N729P285543K



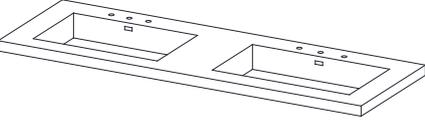
		

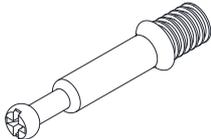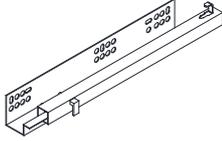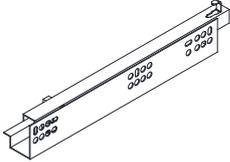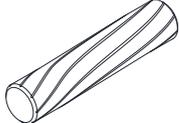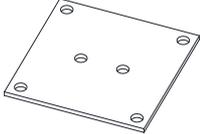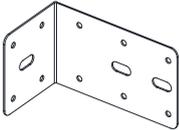 Φ6X35mm	 Φ15X10mm	 Φ 8x30MM	 M4x35MM
A x 52+3	B x 52+3	C x 22+2	D x 30+2
 M3x12MM	 F x 2	 G x 3	 H x 3
E x 16+1	F x 2	G x 3	H x 3
 I x 2	 M3x16MM	 M4x14MM	 Φ 8x50MM
I x 2	J x 4	K x 60+3	L x 2
 M x 1	 N x 1	 O x 2	 P x 2
M x 1	N x 1	O x 2	P x 2
 Q x 8	 R x 10	 M4x18MM	 T x 4
Q x 8	R x 10	S x 20+2	T x 4
 Φ 6x30MM	 V x 4	 W x 2	 X x 1
U x 8	V x 4	W x 2	X x 1
 M6x60MM	 Z x 4	 M3.5x14MM	 b x 8
Y x 4	Z x 4	a x 54+3	b x 8
 c x 1			
c x 1			






# Step 1

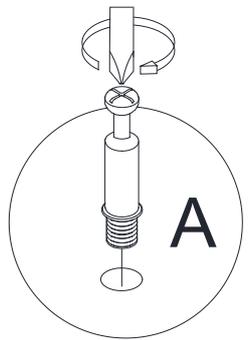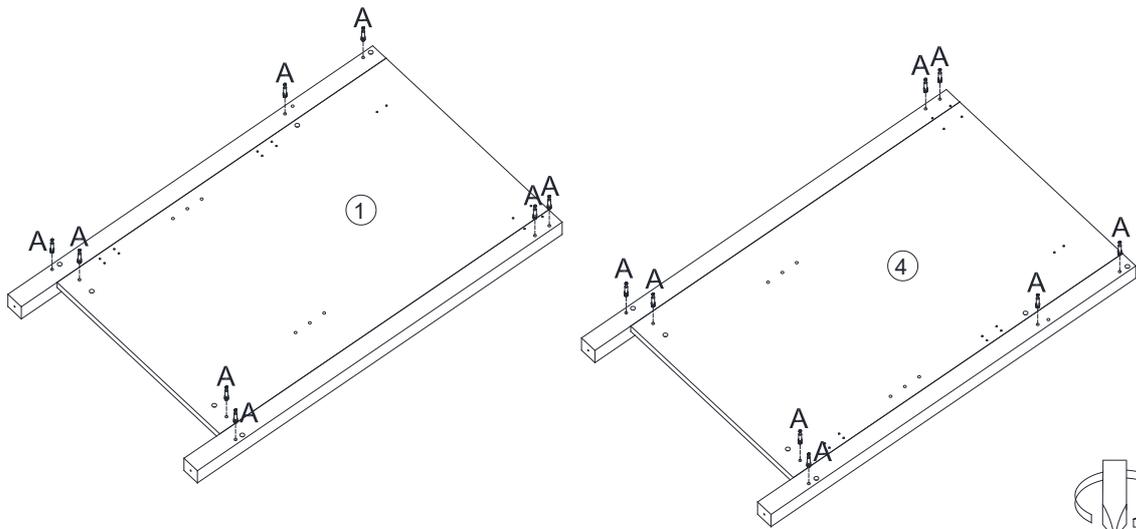






# Step 2

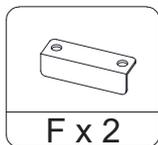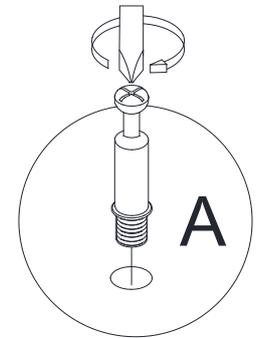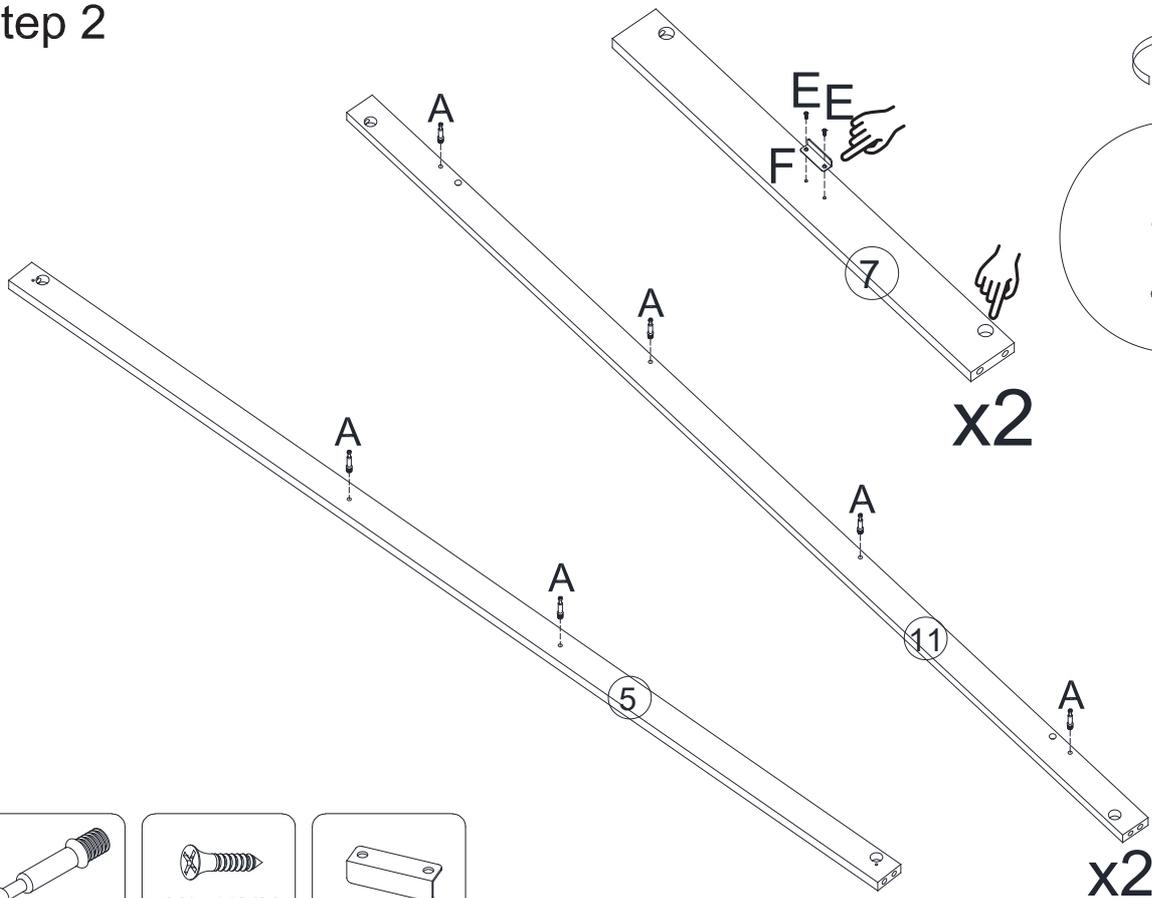



### Step 3

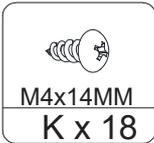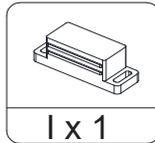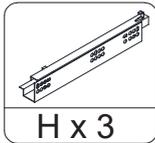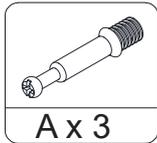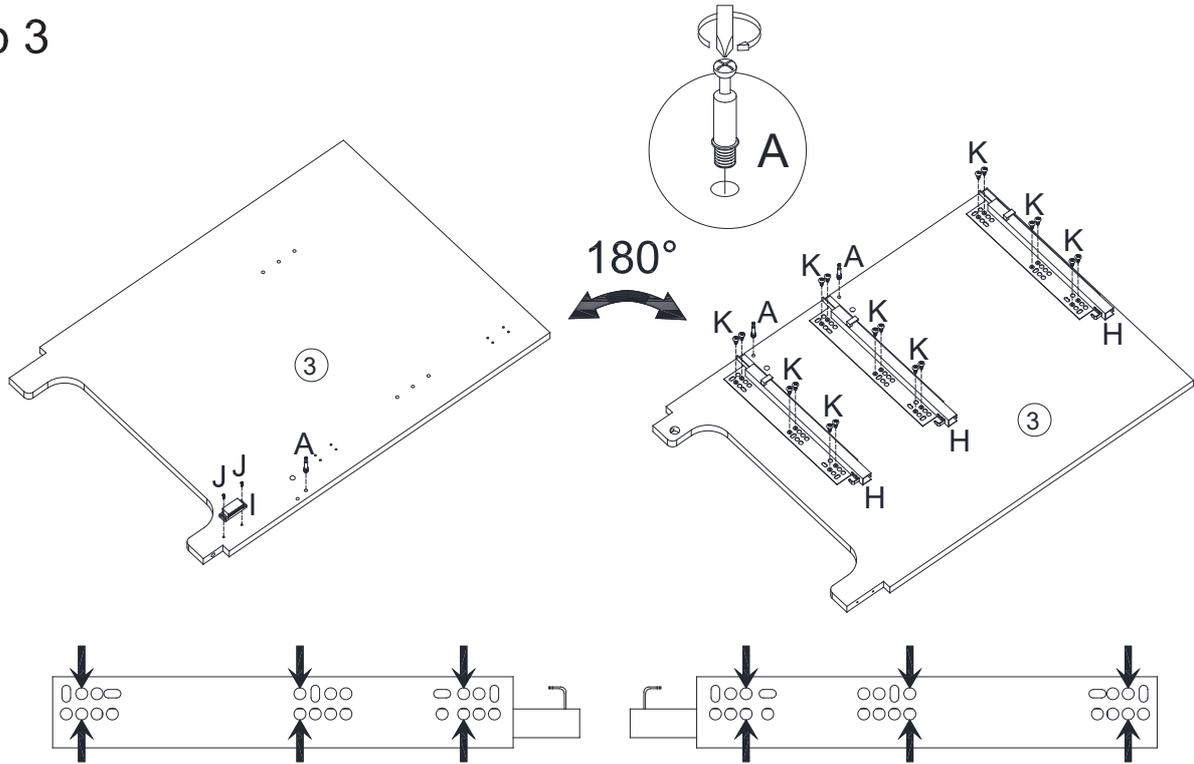





### Step 4

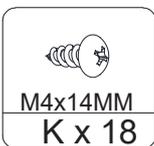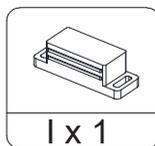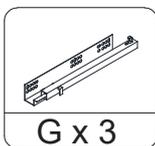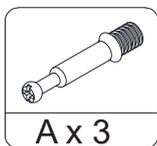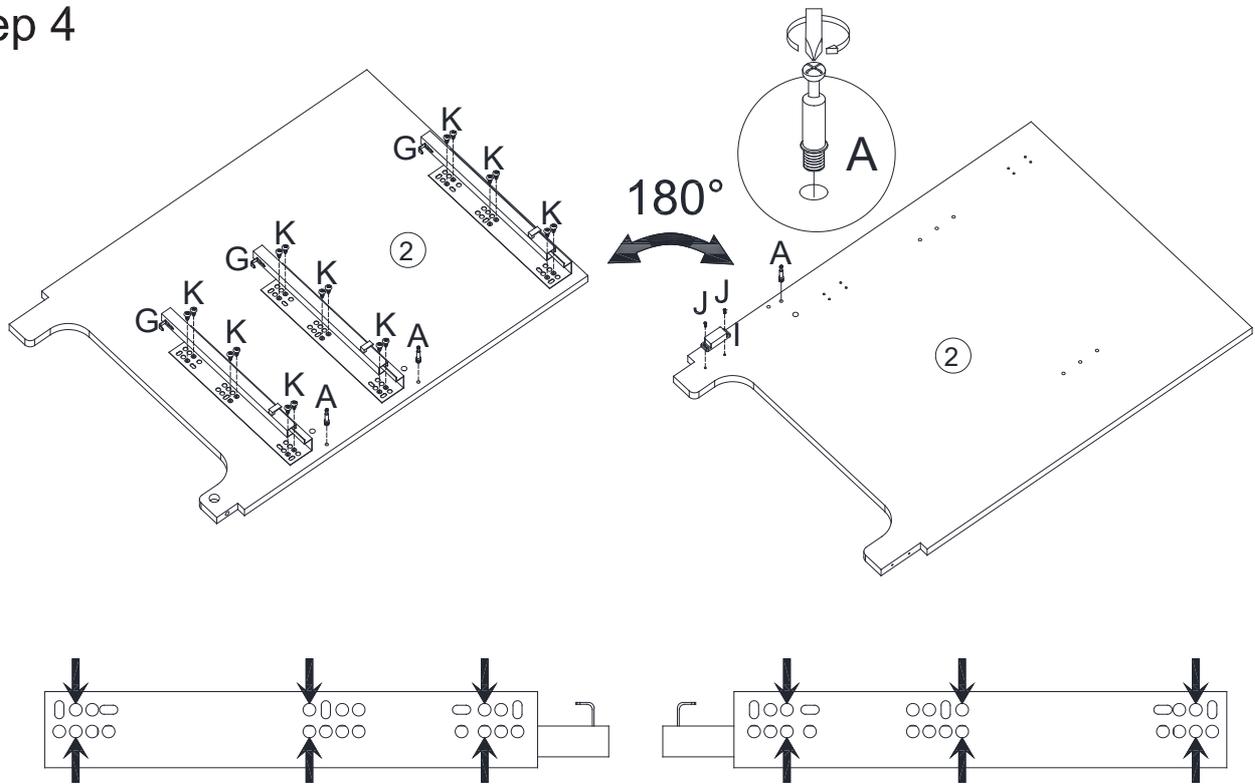





## Step 5

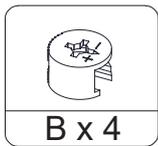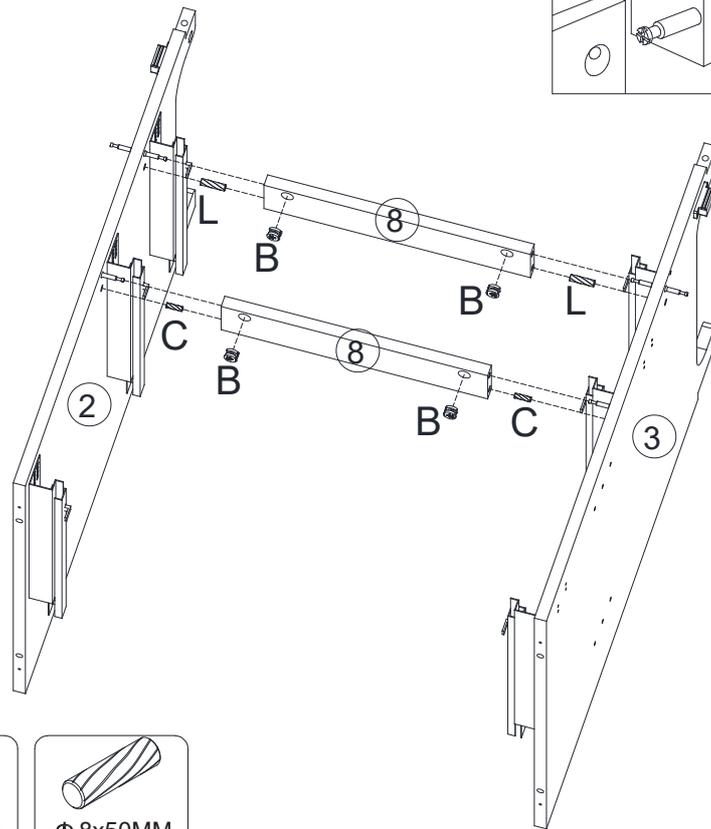






## Step 6

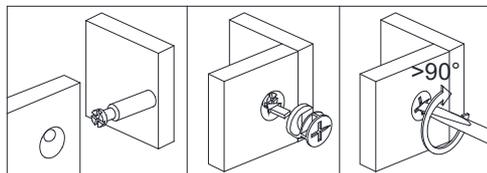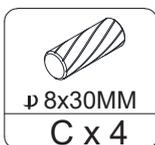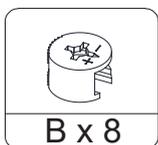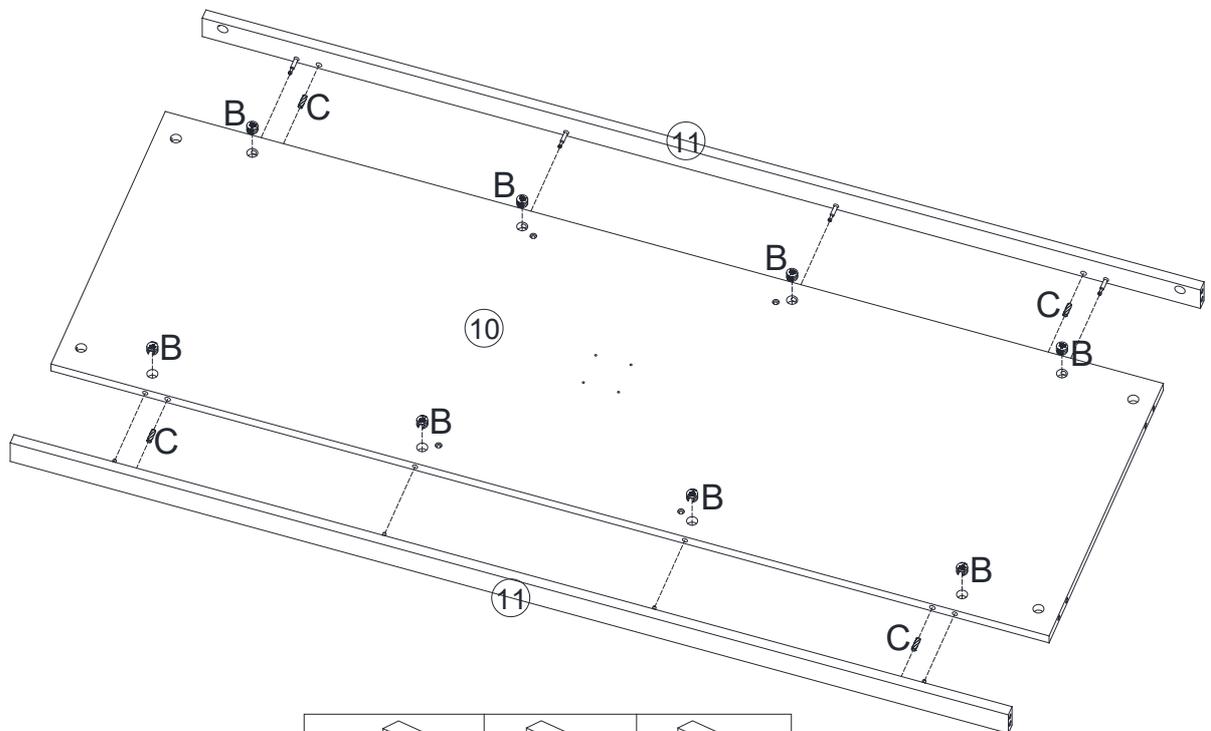




## Step 7

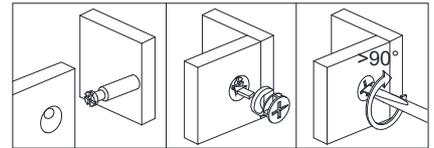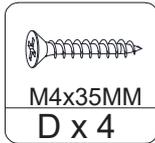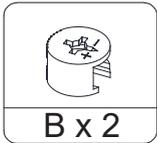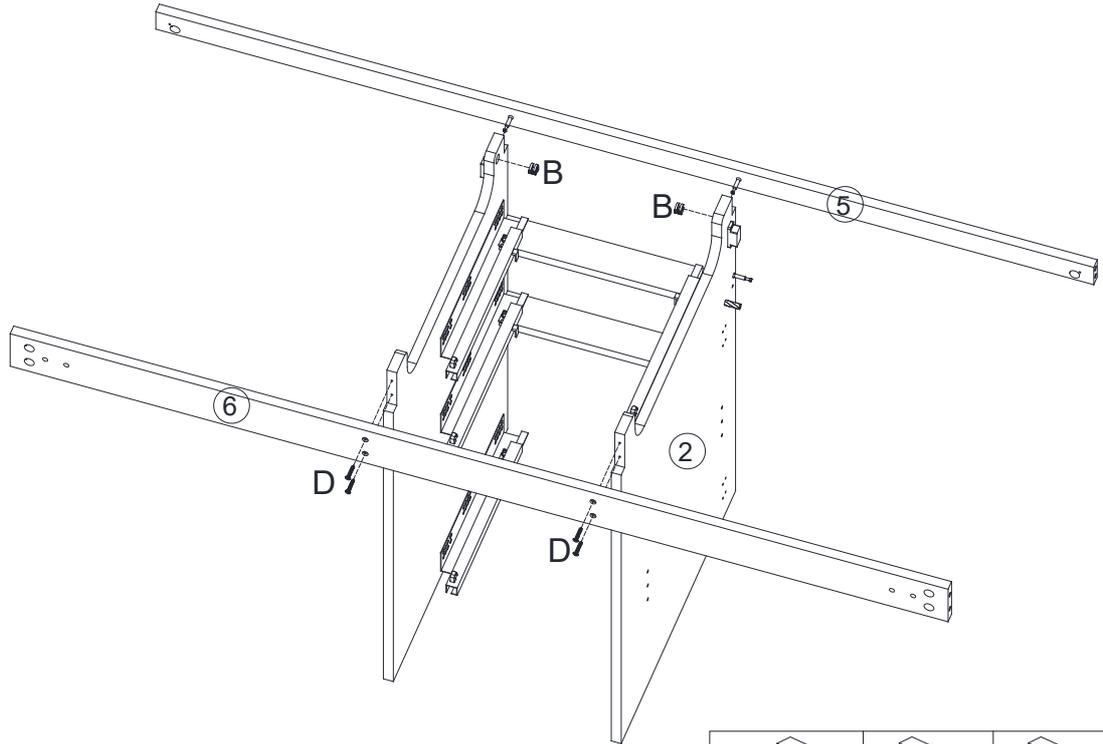









## Step 8

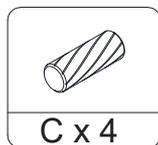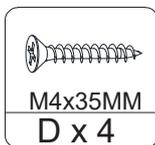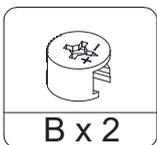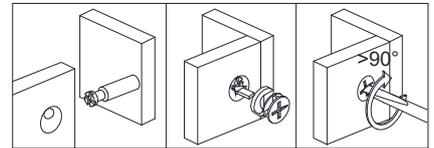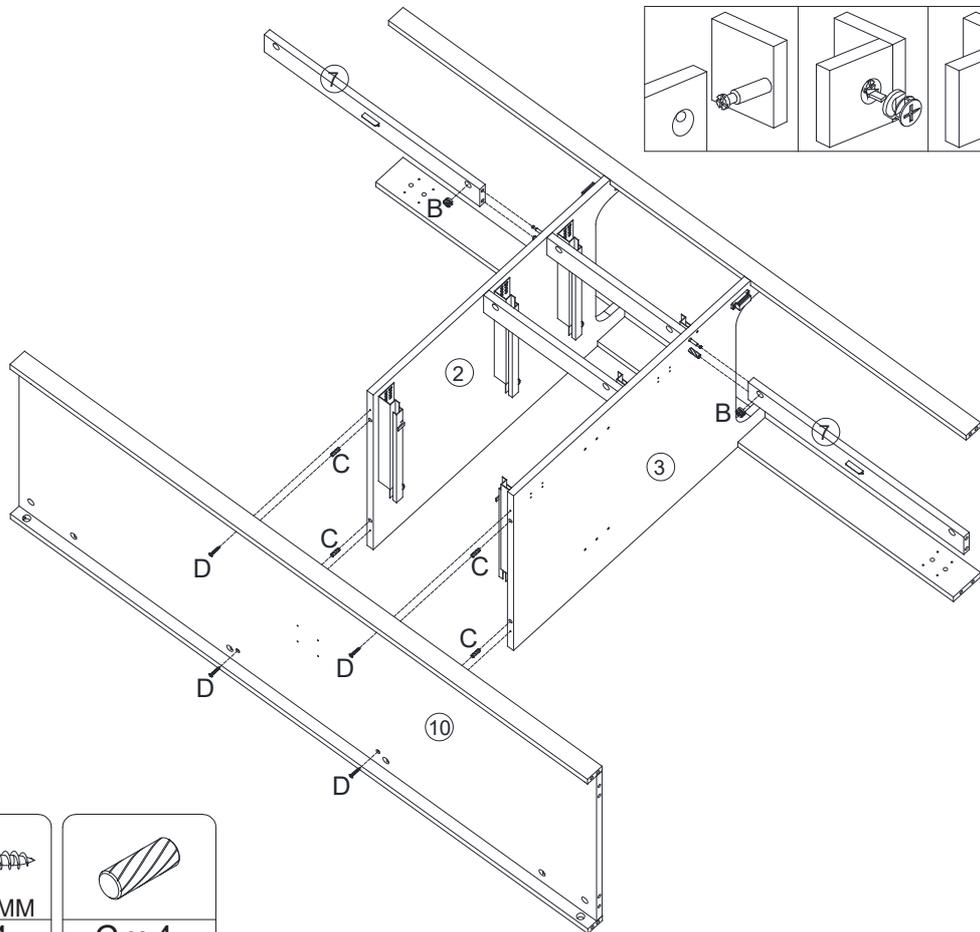





# Step 9

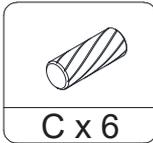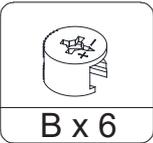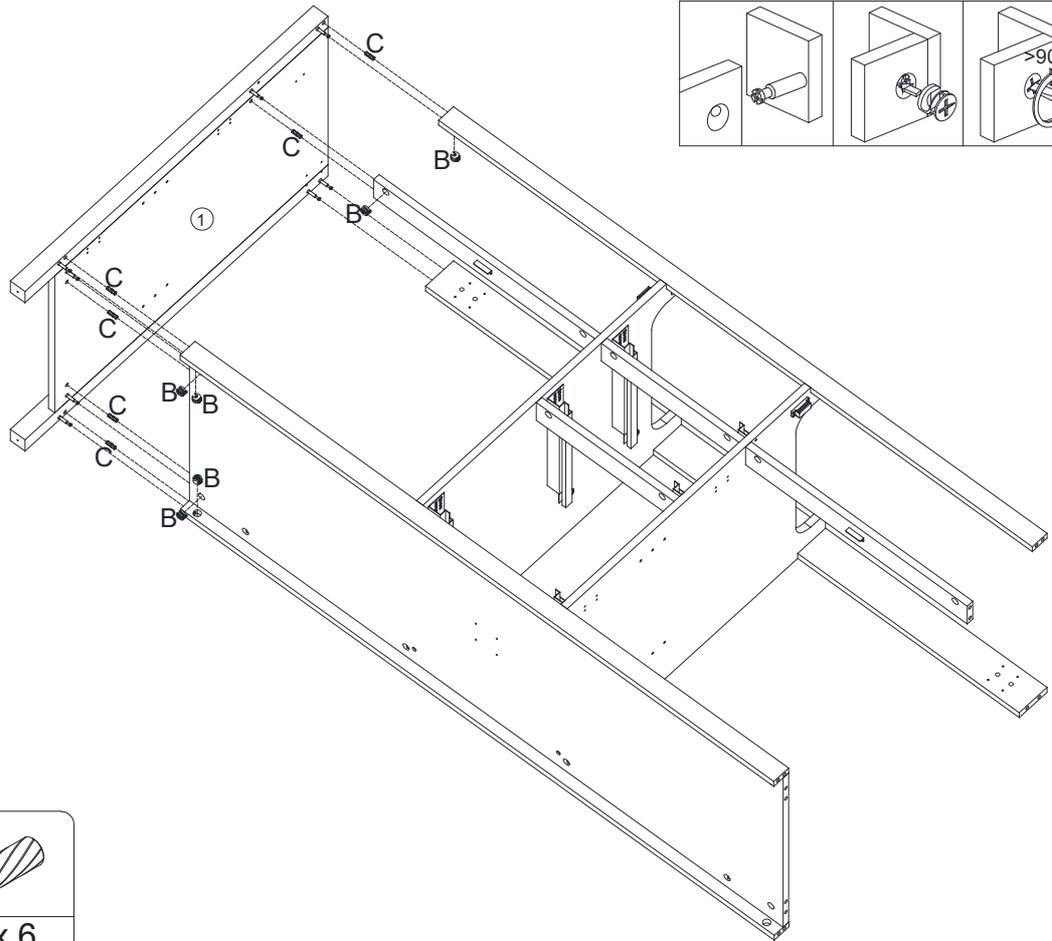




# Step 10

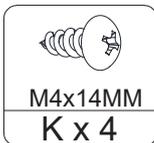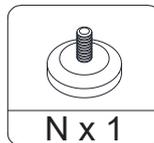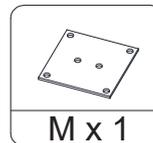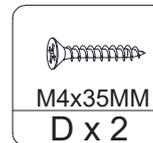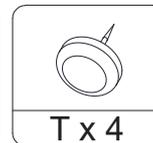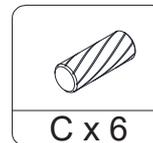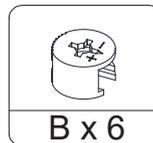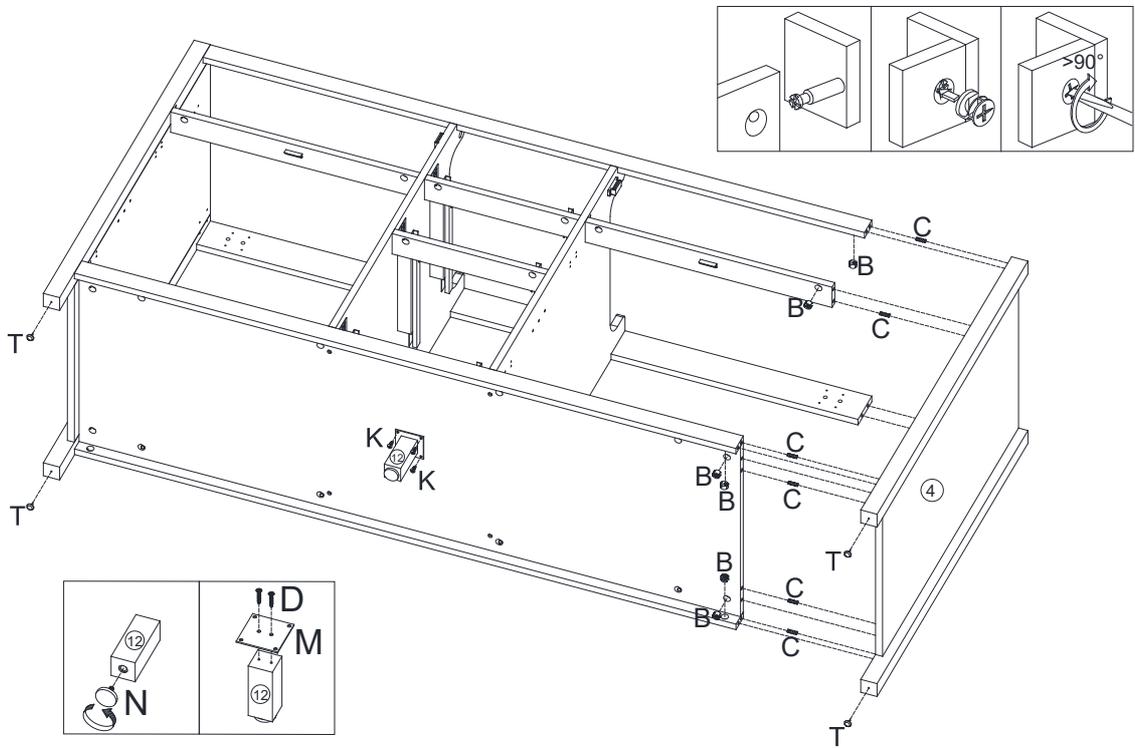



## Step 11

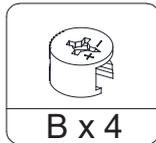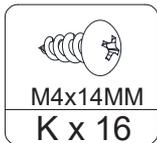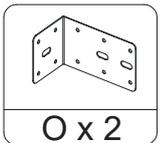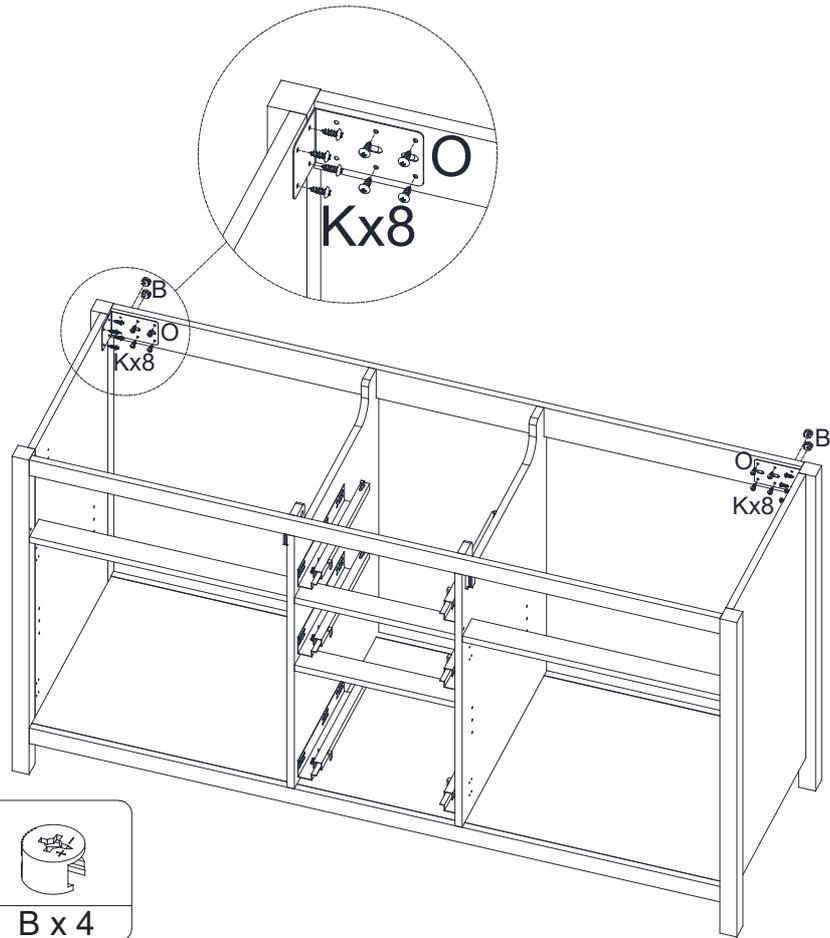


## Step 12

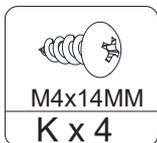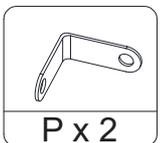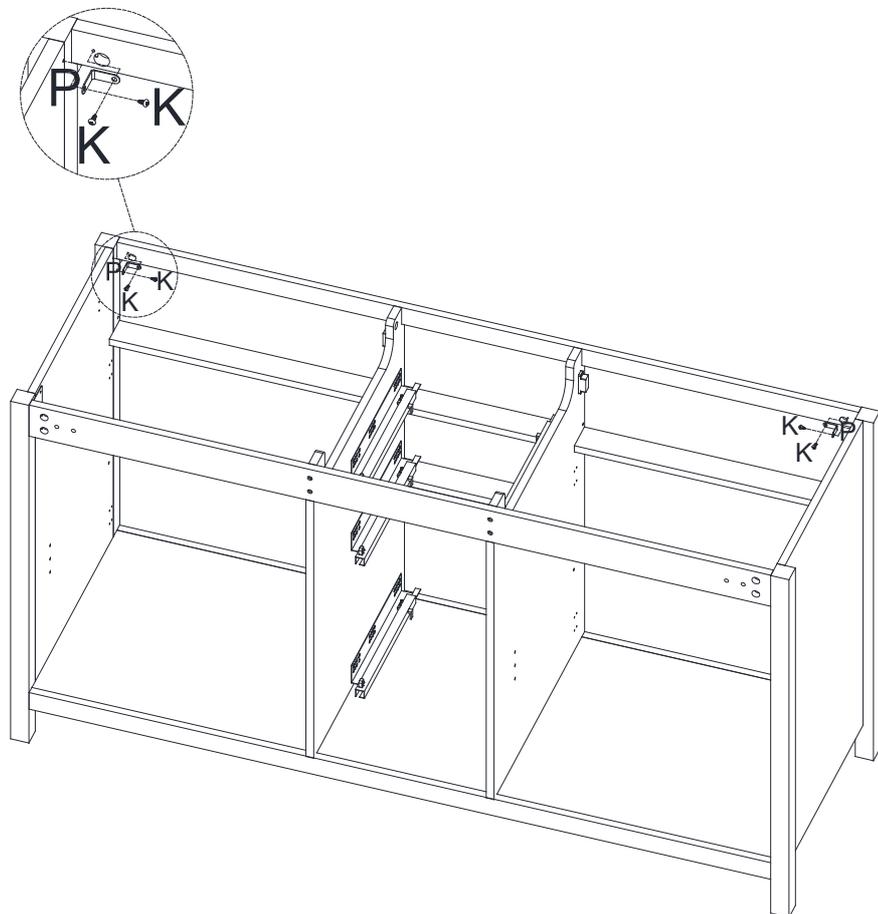



## Step 13

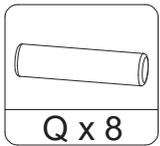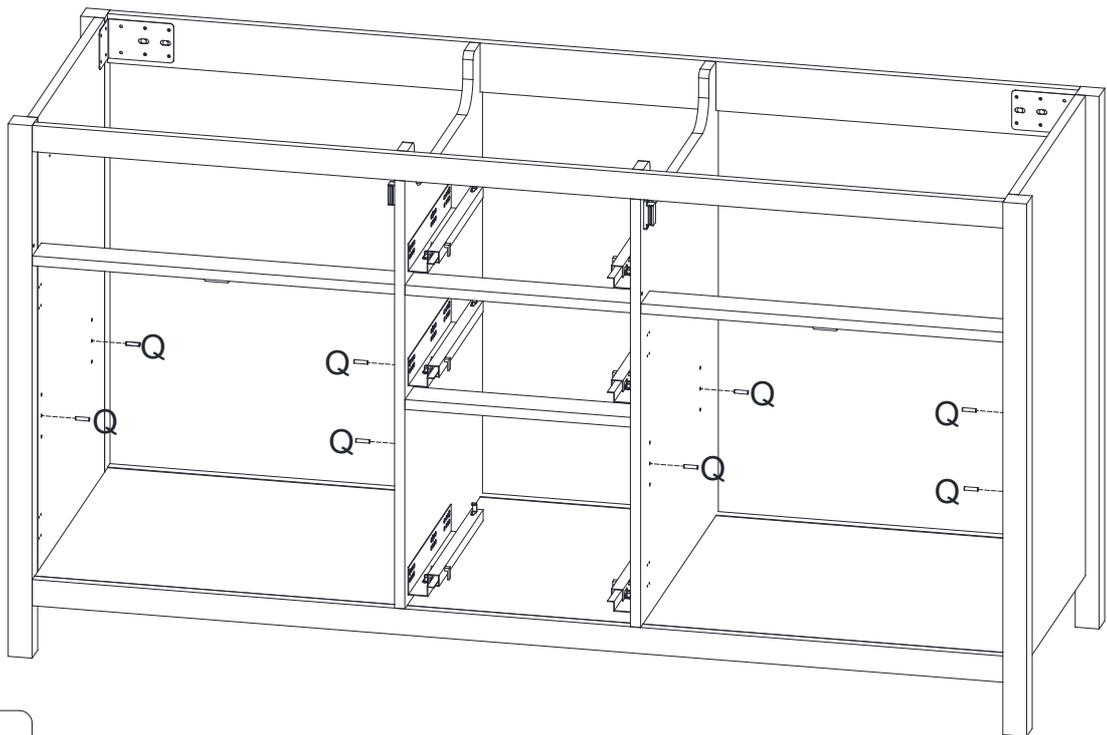


## Step 14




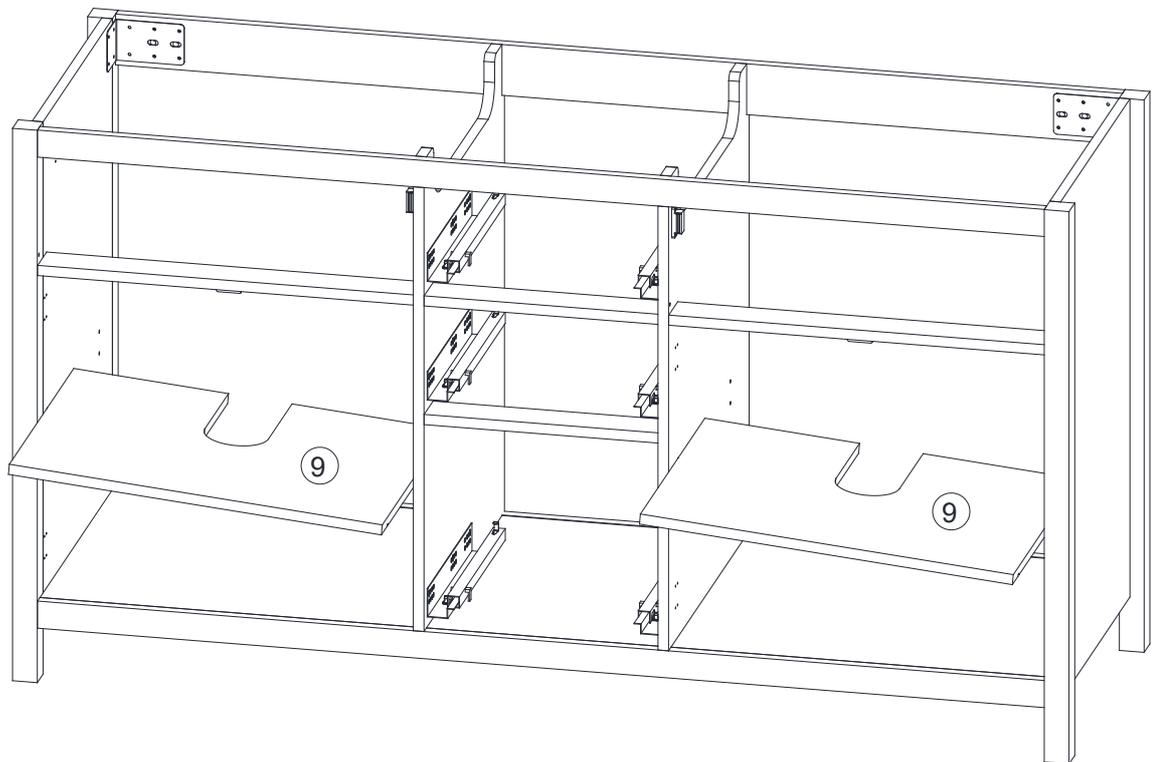


# Step 15

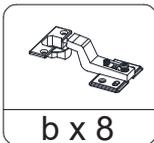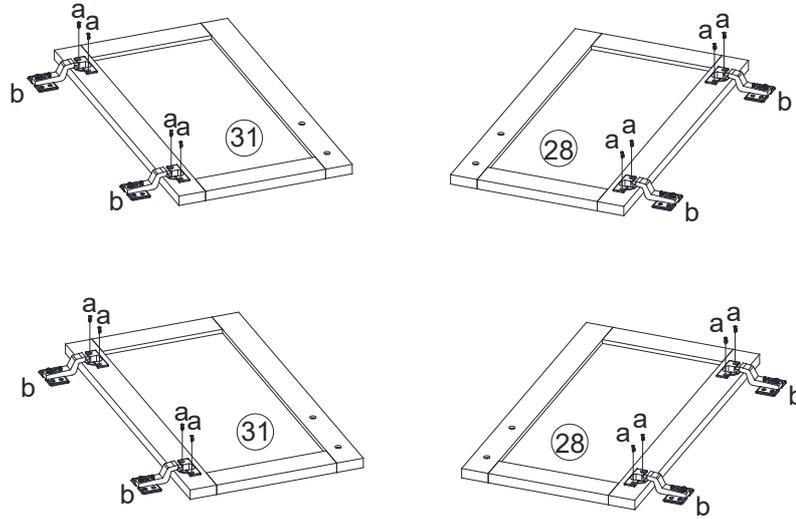



# Step 16

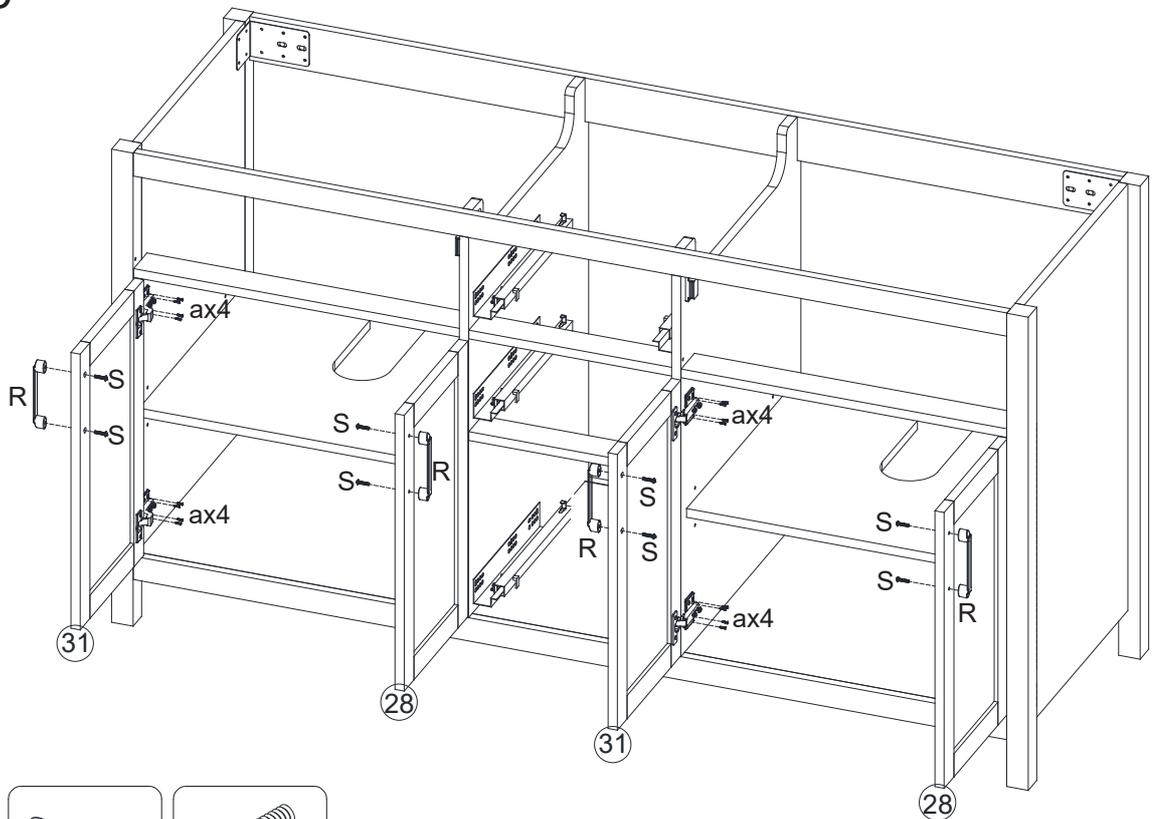

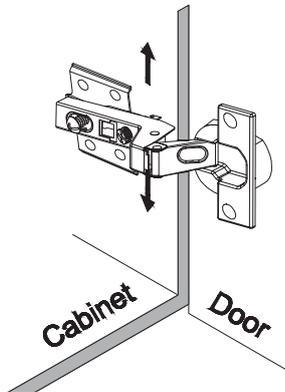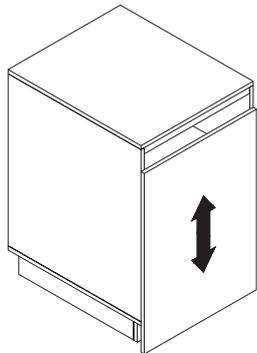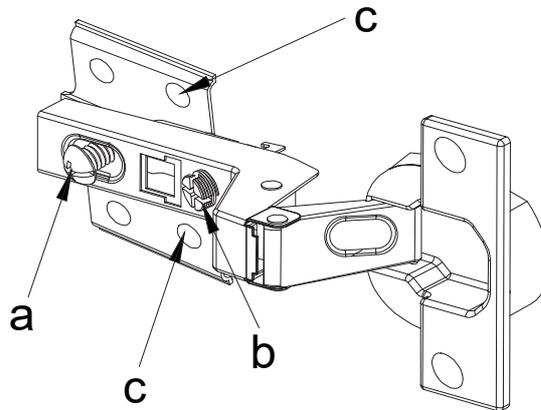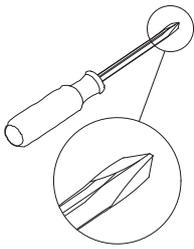



### To adjust the vertical height.

Loosen the four screws "c" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

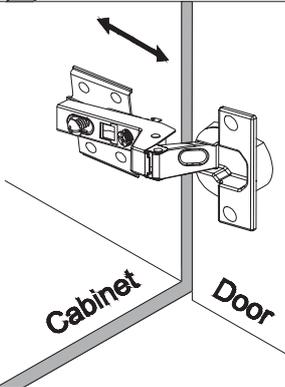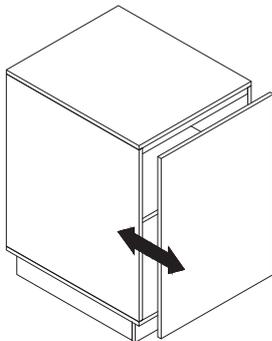

### To adjust depth.


Loosen screw "a" and adjust door, if the door can not be adjusted, please loosen screw "b", then try again. Tighten screw "a" and "b".

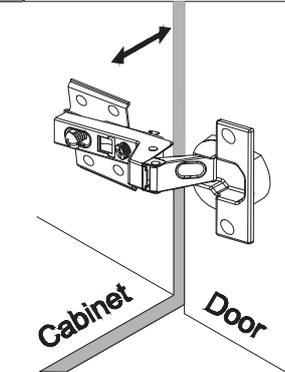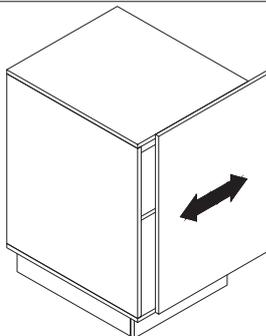

### To adjust side ways.



Turning the screw "b" on BOTH hinges on each door.

## Step 17

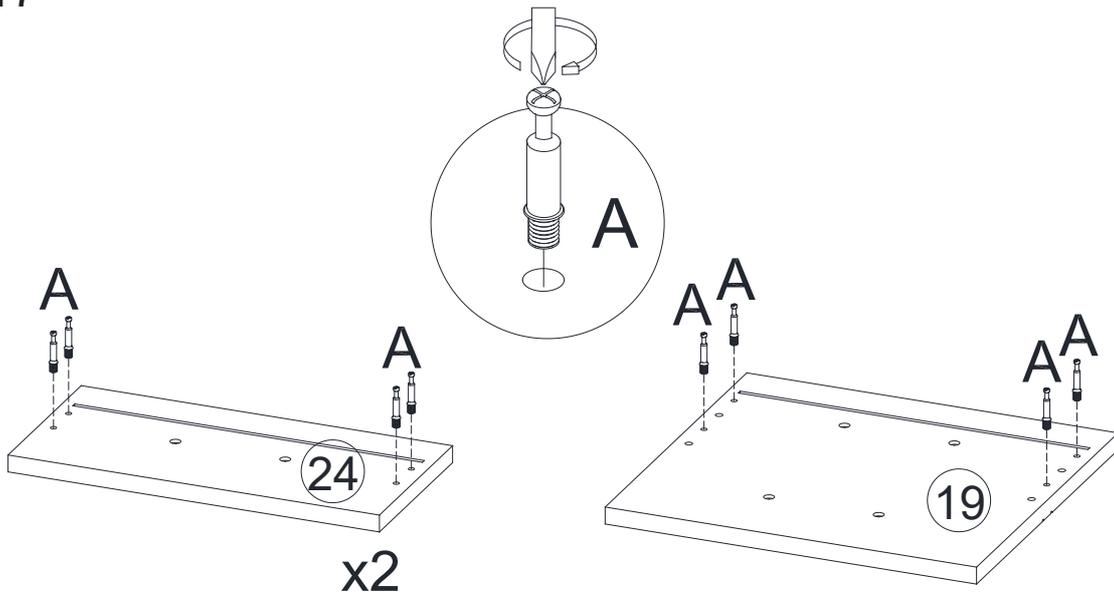

A x 12

## Step 18

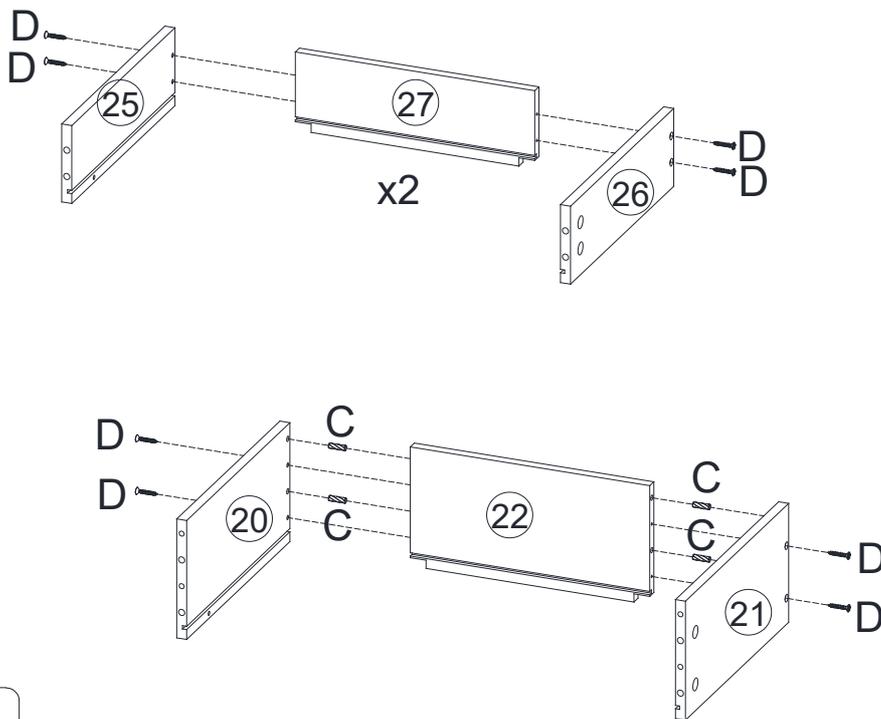


M4x35MM  
D x 12






Φ 6x30MM  
U x 4


## Step 19

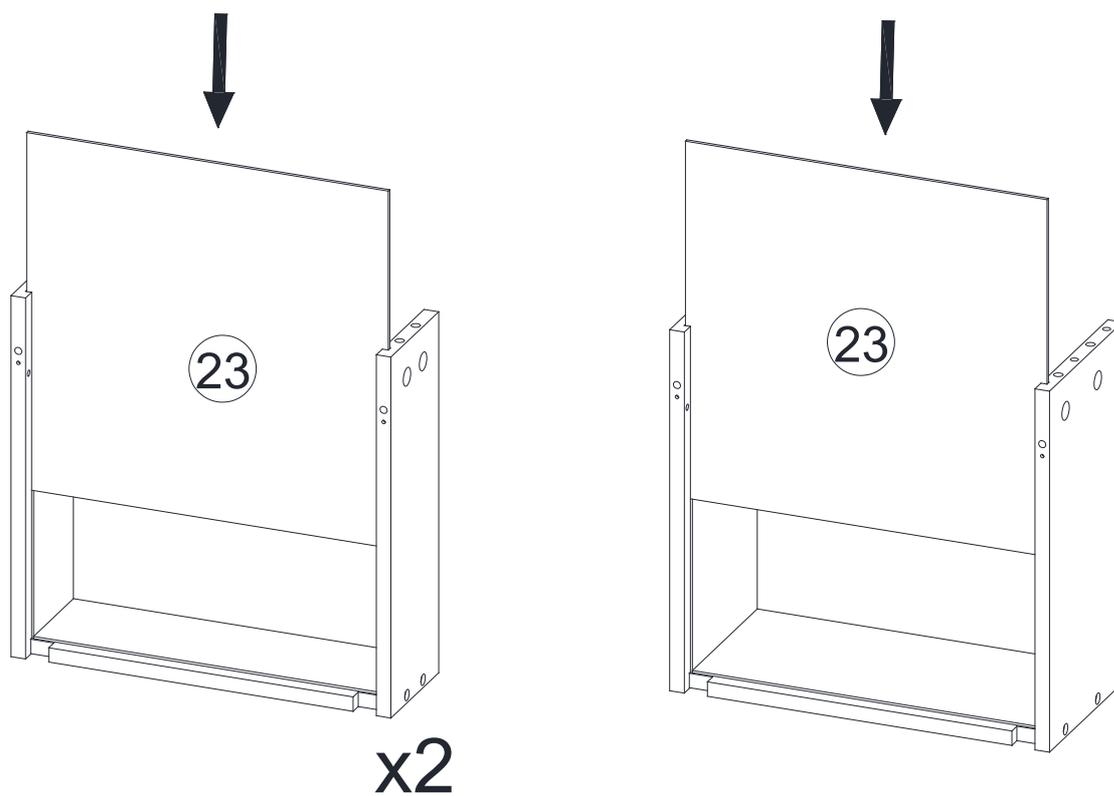



## Step 20

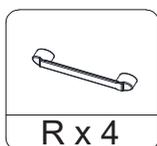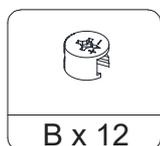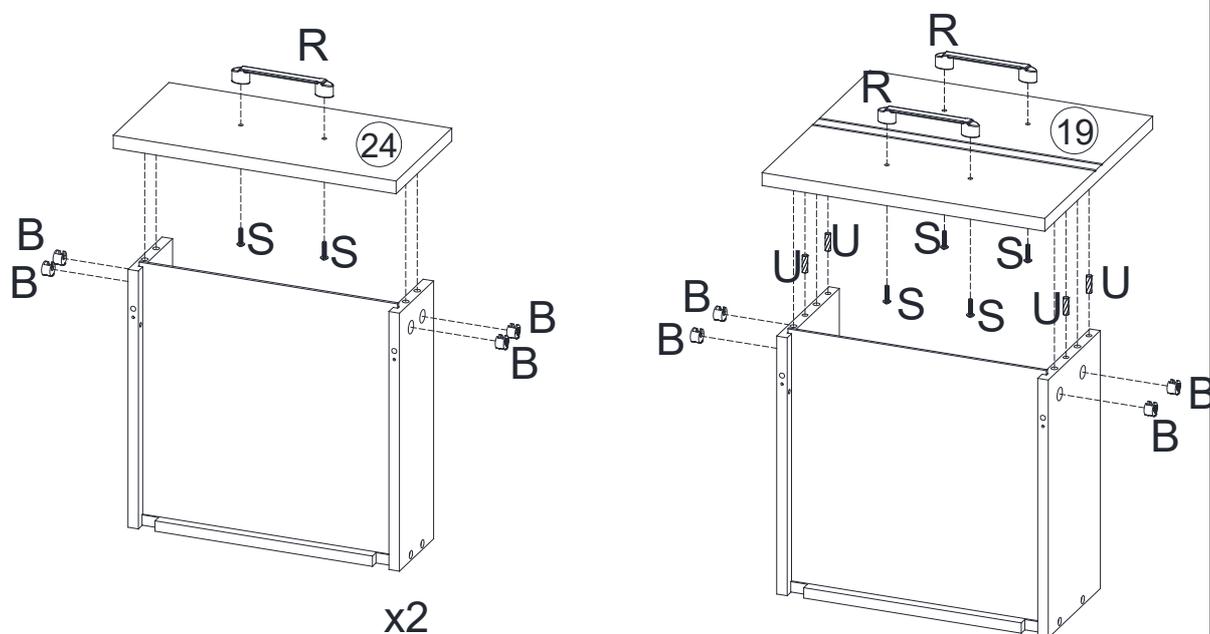

## Step 21





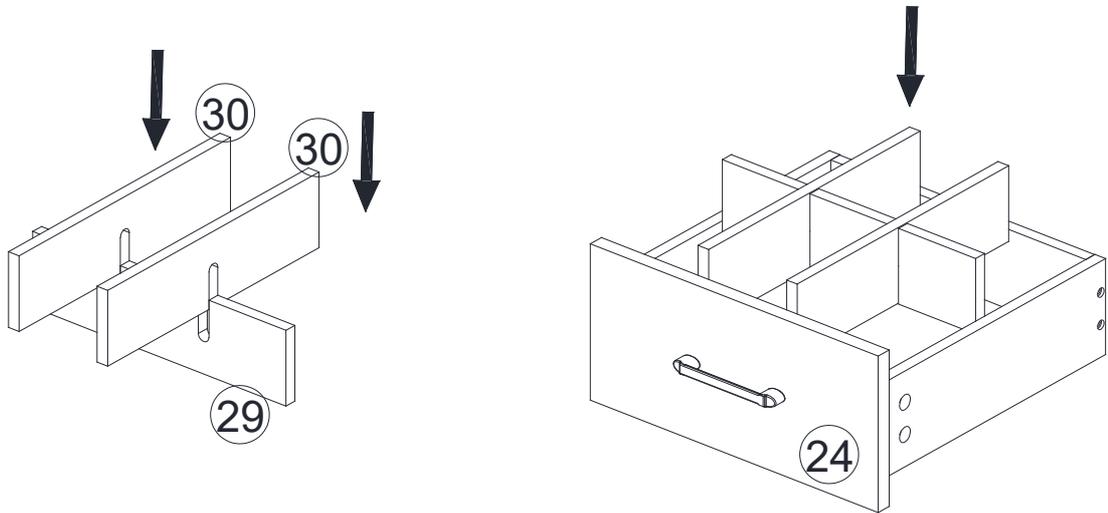


## Step 22

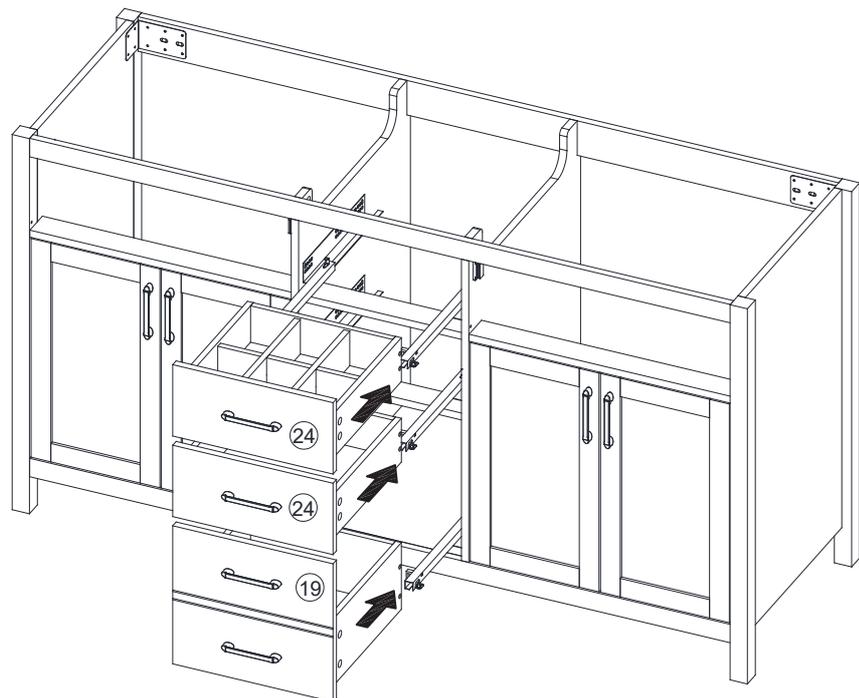
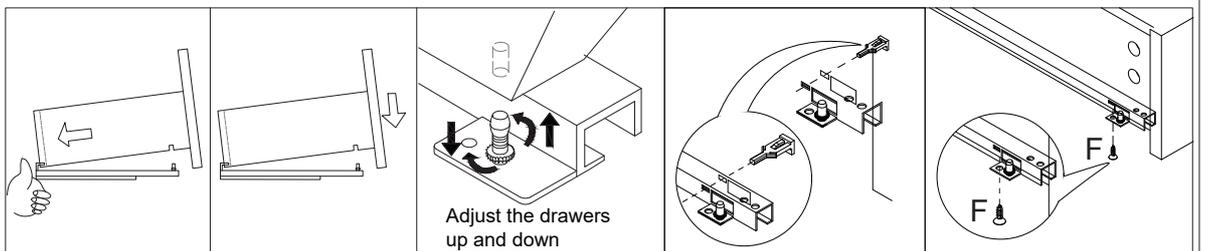


M3.5x14MM  
a x 6


## Step 22

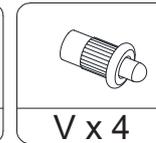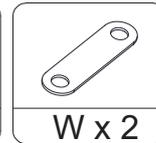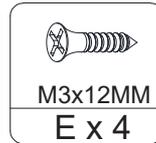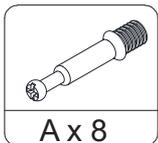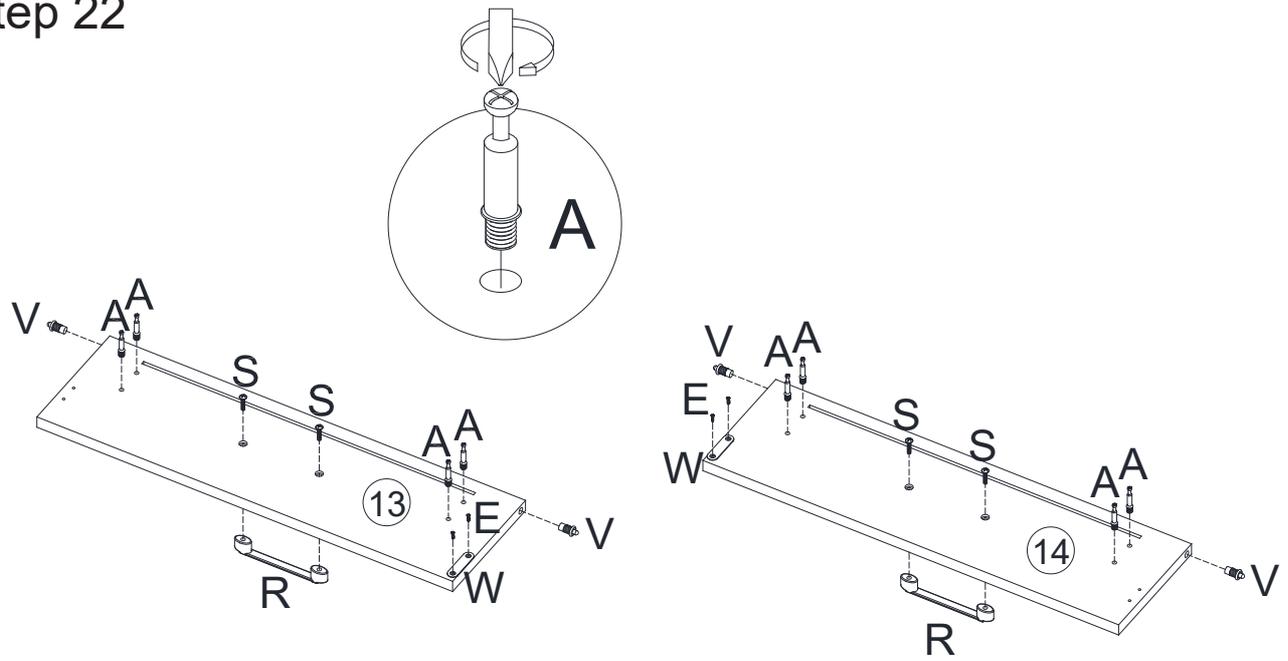





## Step 23

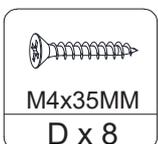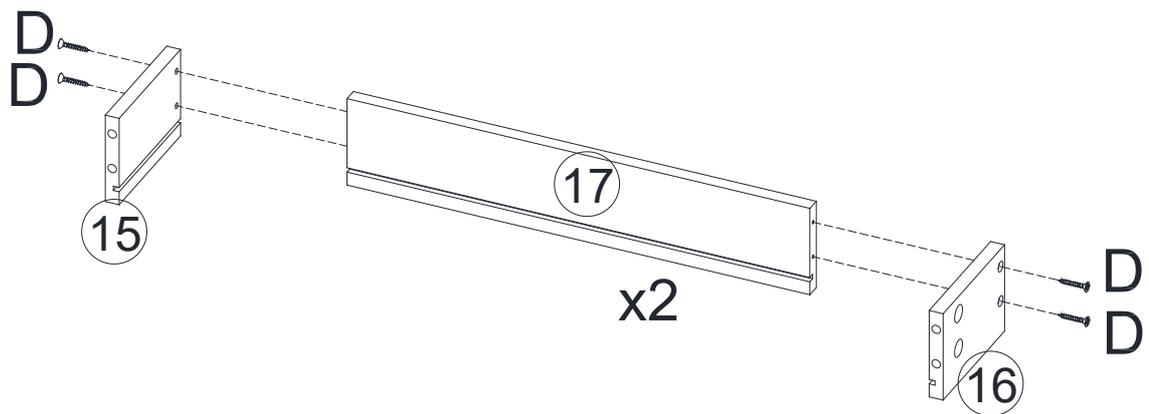


# Step 24

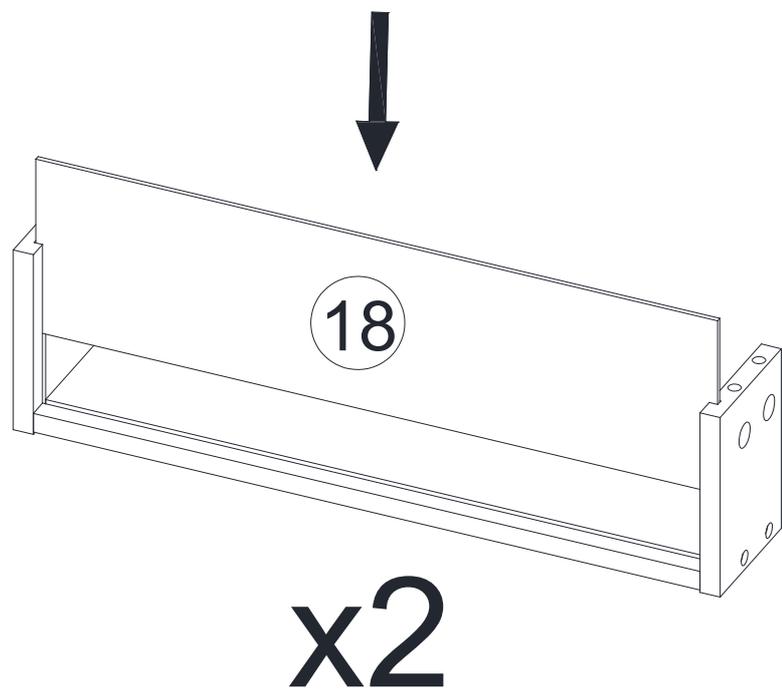





# Step 26

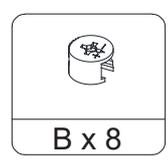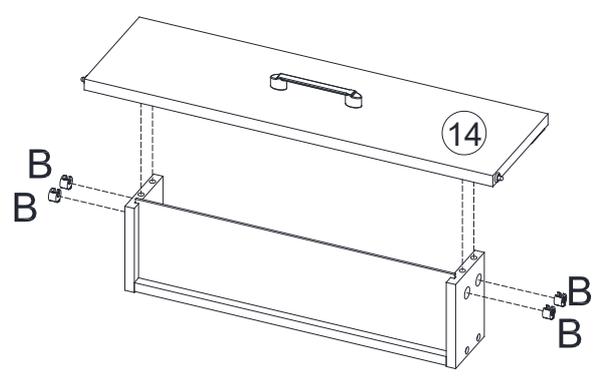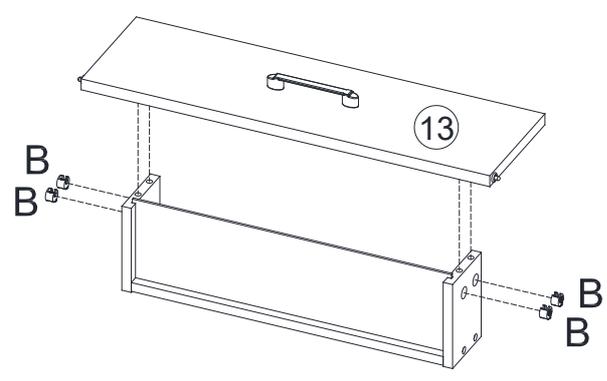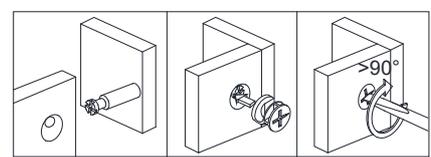




## Step 27

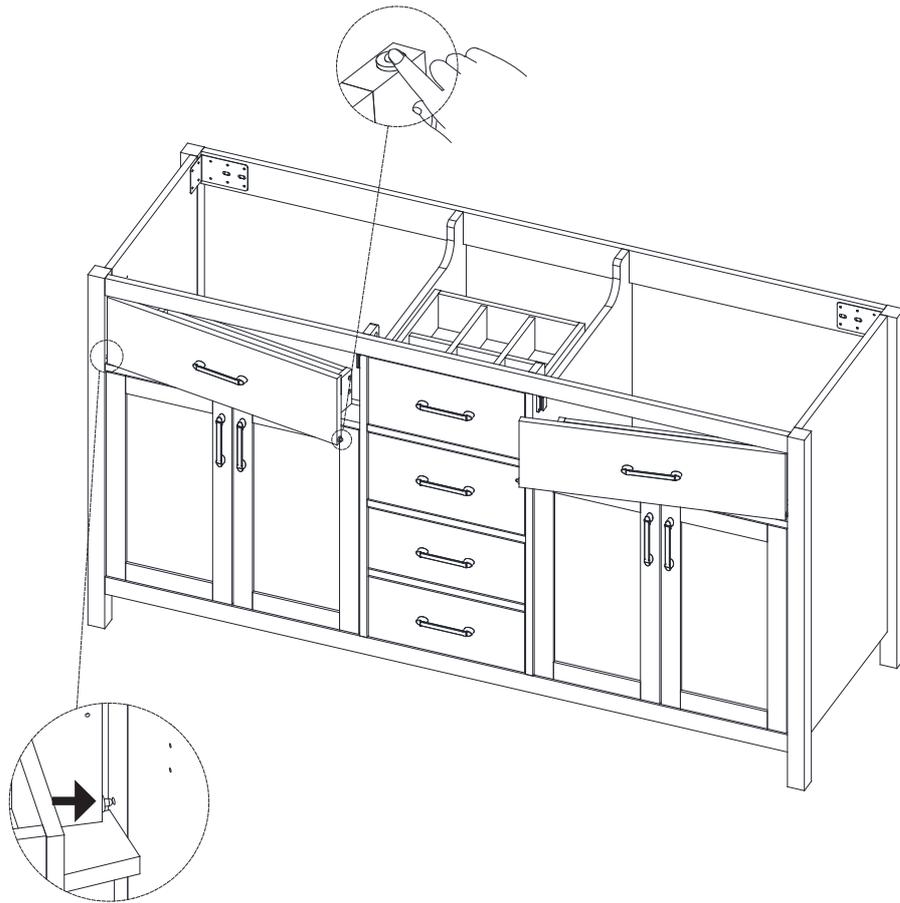

## Step 28

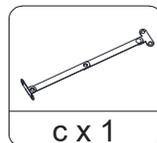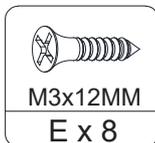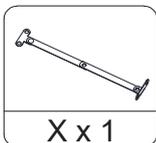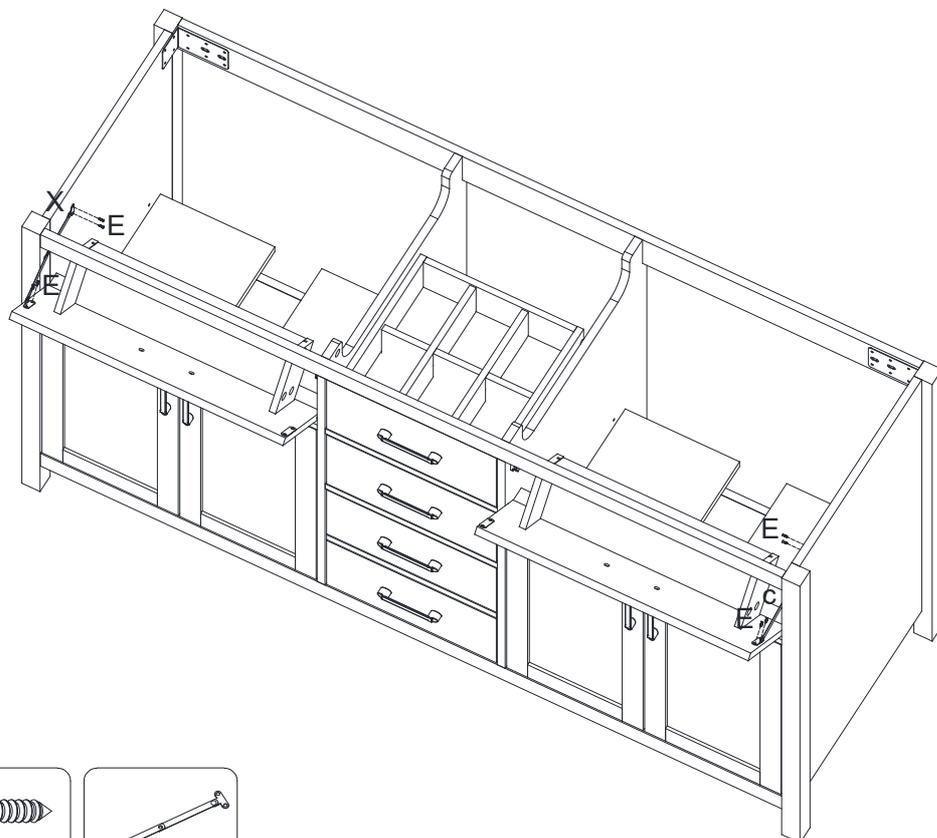

# Step 29

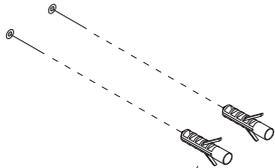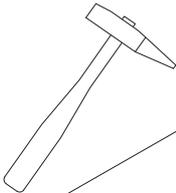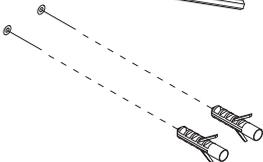

Z x 4

# Step 30

# WALL

