CROSLEY

FURNITURE

Linen Storage Cabinet

CF7029

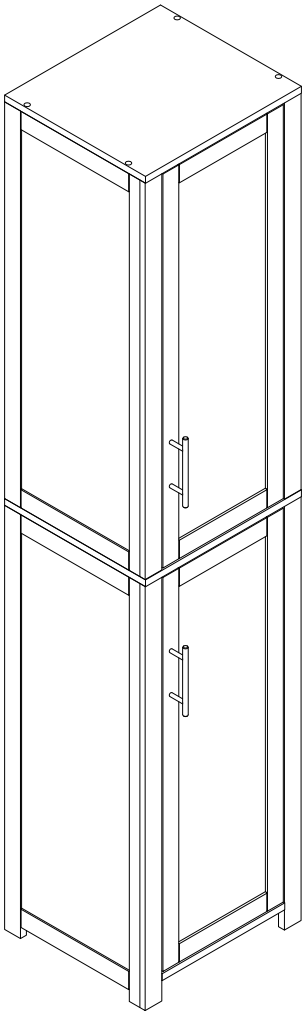

PART LIST

A2 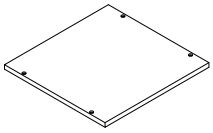	B2	C2 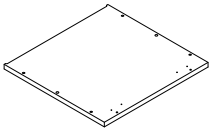	D2 	E2 
Top Panel 1 PC	Upper Panel 2 PCS	Middle Panel 1 PC	Lower Left Panel 1 PC	Lower Right Panel 1 PC
F2 	G2 	H2 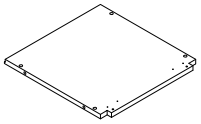	I2 	J2 
Door Panel 1 PC	Door Panel 1 PC	Bottom Panel 1 PC	Back Panel 2 PCS	Adjustable Shelf 4 PCS

HARDWARE LIST

#1  Ø1/4"*1"	#2  Ø8*30mm	#3 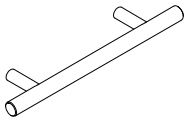	#4 Ø4*22mm	#5
Bolt 16 PCS (Extra 1)	Wood Dowel 12 PCS (Extra 1)	Handle 2 PCS	Round Head Bolt 4 PCS (Extra 1)	Shelf Holder 16 PCS (Extra 1)
#6 	#7  Ø3*16mm	#8 Ø3*12mm	#9 	#10
Magnet 4 PCS	Screw 8 PCS (Extra 1)	Round Head Screw 32 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach magnets (part #6) to panels (parts A2, C2 & H2) using screws (part #7) and phillips head screwdriver.

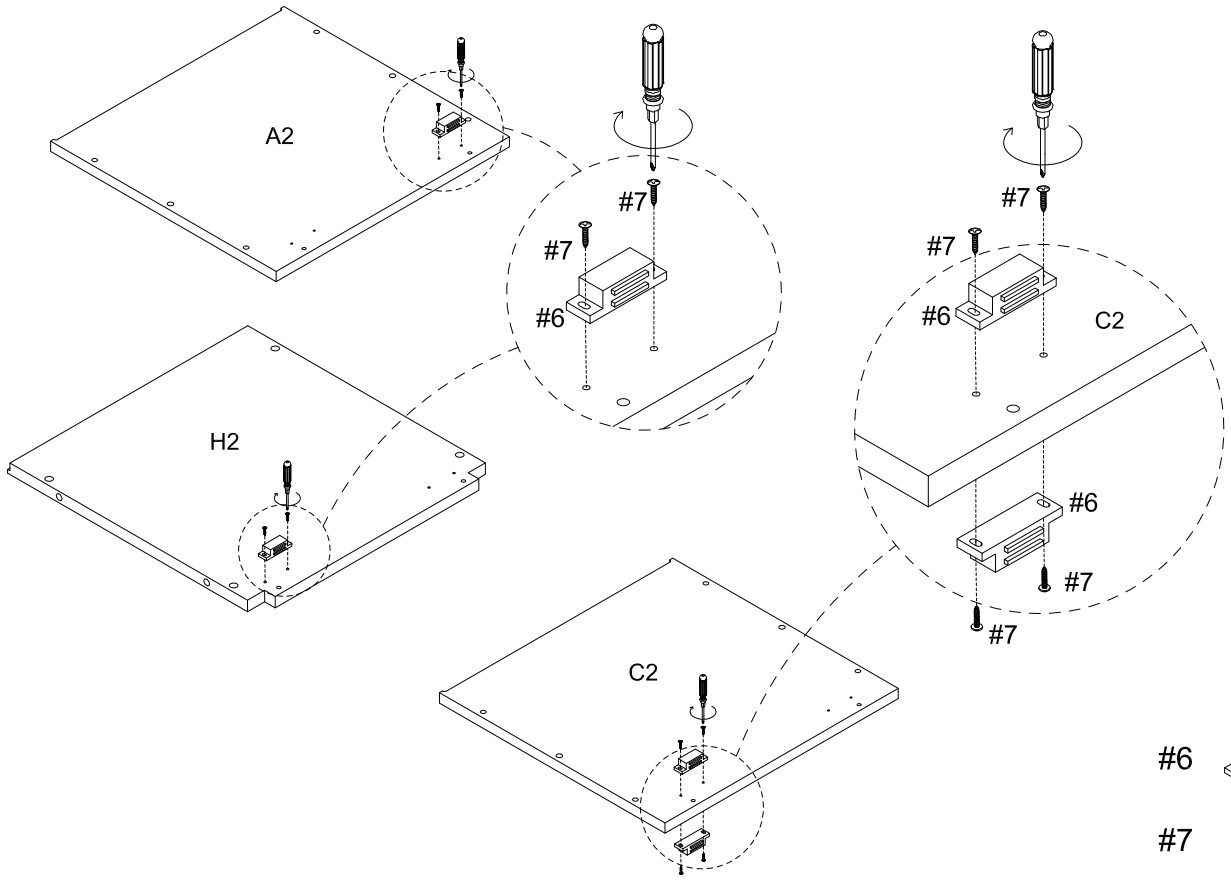

#6 x 4

#7 x 8

Step 2. Attach handles (part #3) to doors (parts F2 & G2) using round head bolts (part #4) and phillips head screwdriver.

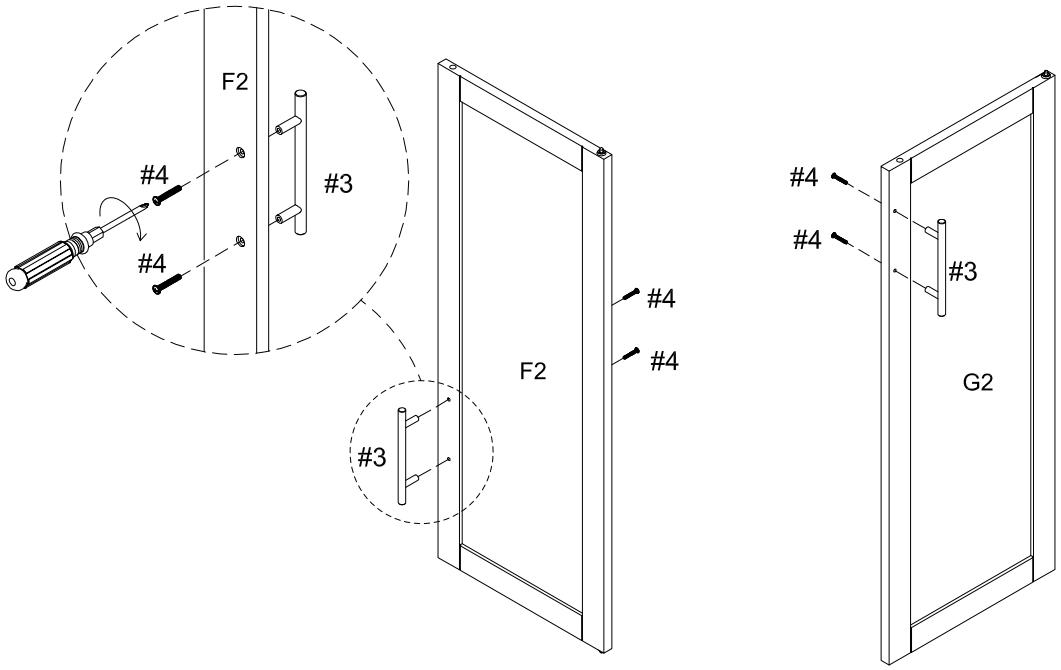

#3 x 2

#4 x 4

Step 3. Attach upper panels (part B2) to top panel (part A2) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).

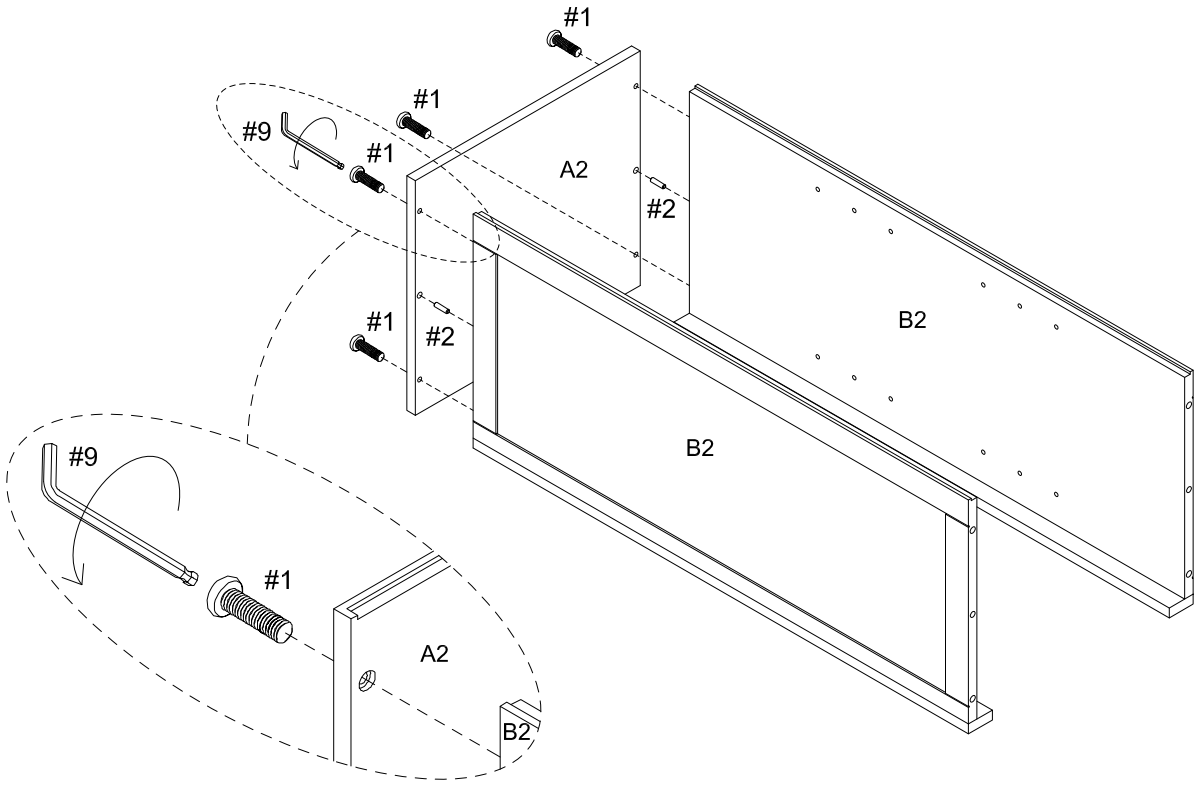

#1 x 4

#2 x 2

#9 x 1

Step 4. Attach middle panel (part C2) to upper panels (part B2) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).

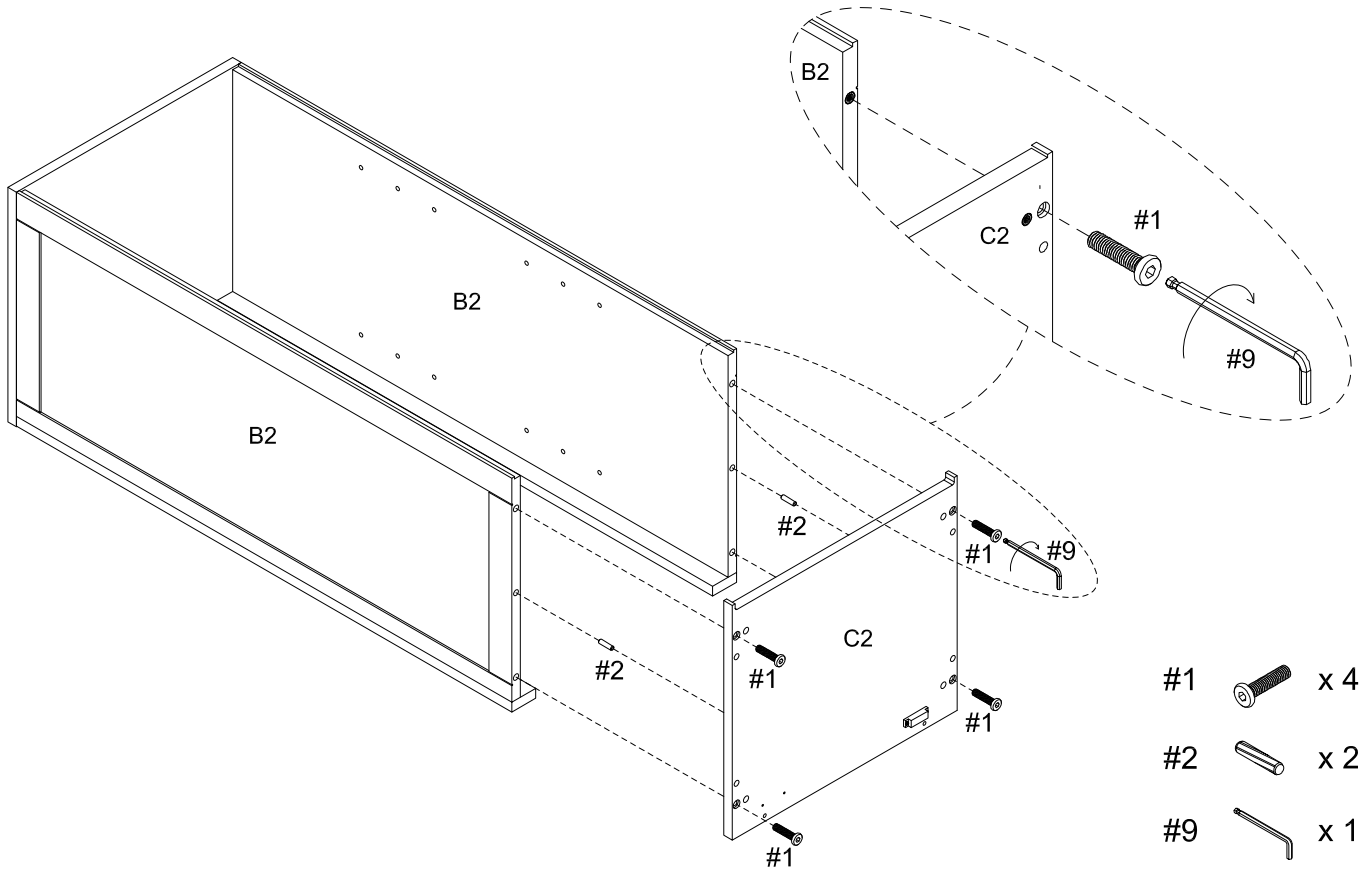

#1 x 4

#2 x 2

#9 x 1

Step 5. Attach lower right panel (part E2) to middle panel (part C2) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).

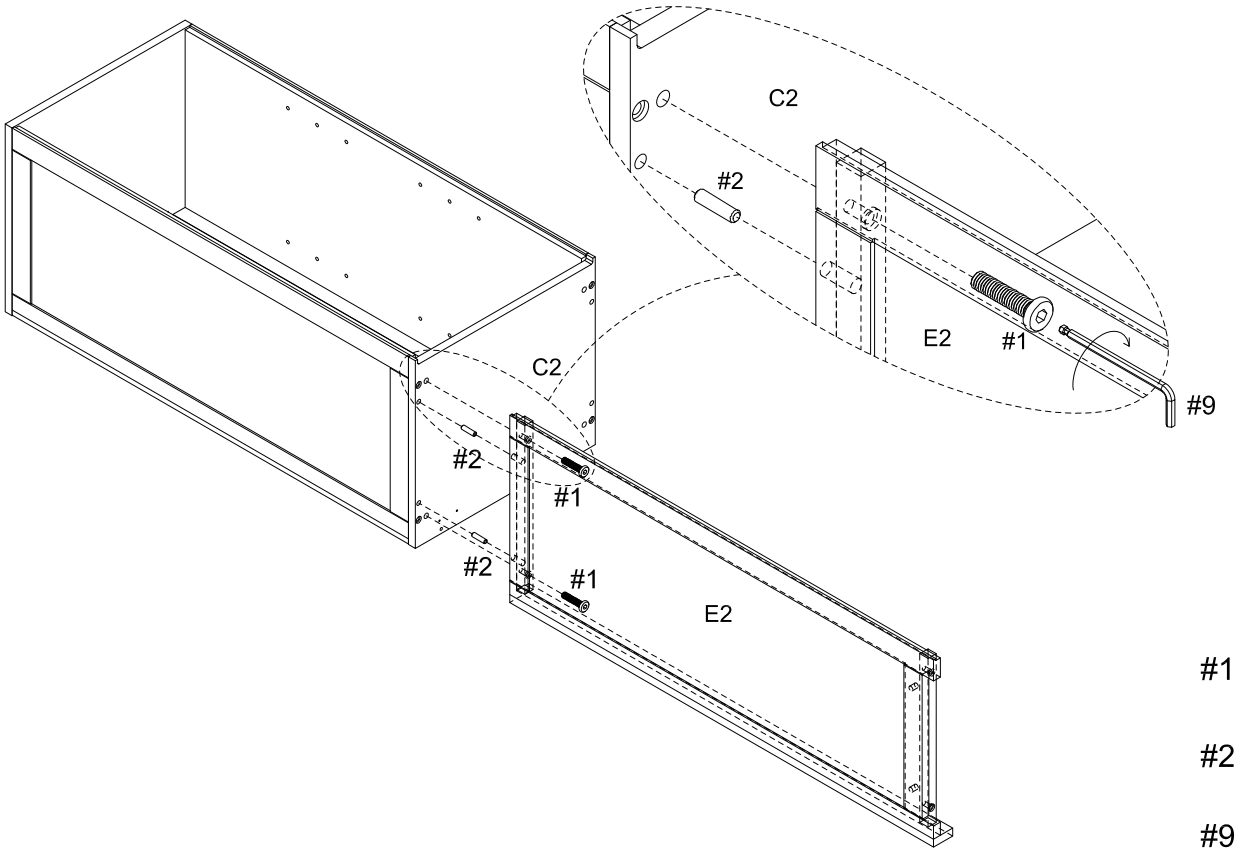

#1 x 2

#2 x 2

#9 x 1

Step 6. Attach bottom panel (part H2) to lower right panel (part E2) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).

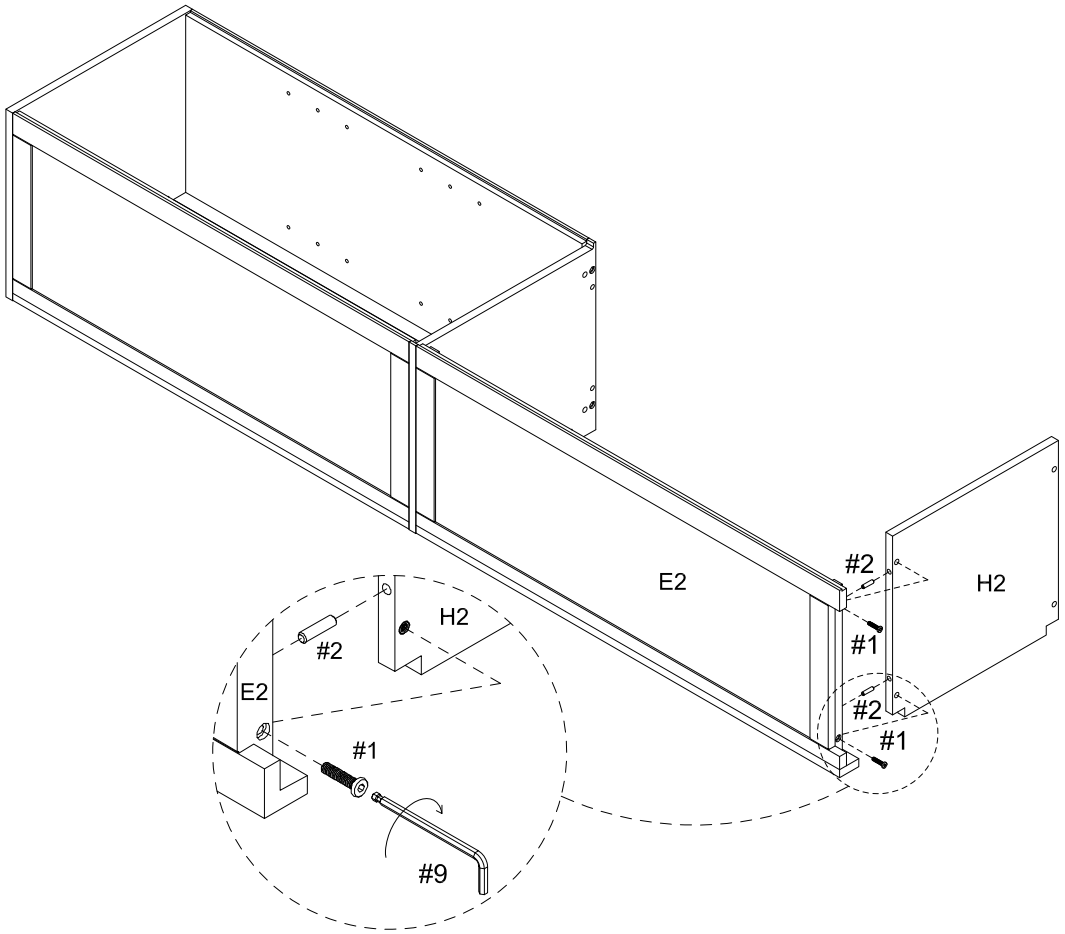

#1 x 2

#2 x 2

#9 x 1

Step 7. Attach lower left panel (part D2) to panels (parts C2 & H2) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).

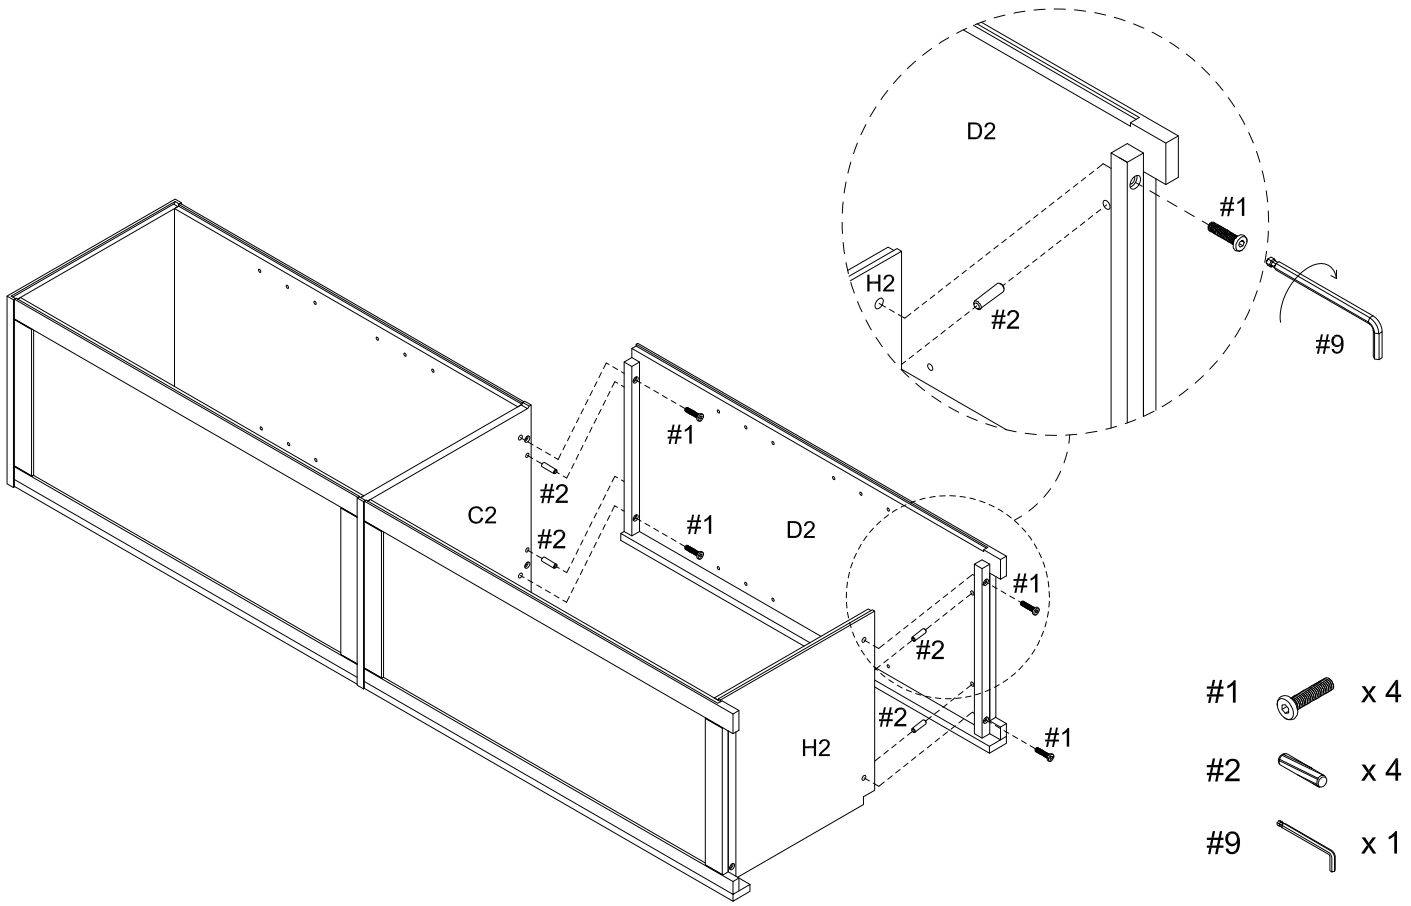

Step 8. Attach back panels (part I2) to assembled unit (parts A2, B2, C2, D2, E2 & H2) using round head screws (part #8) and phillips head screwdriver.

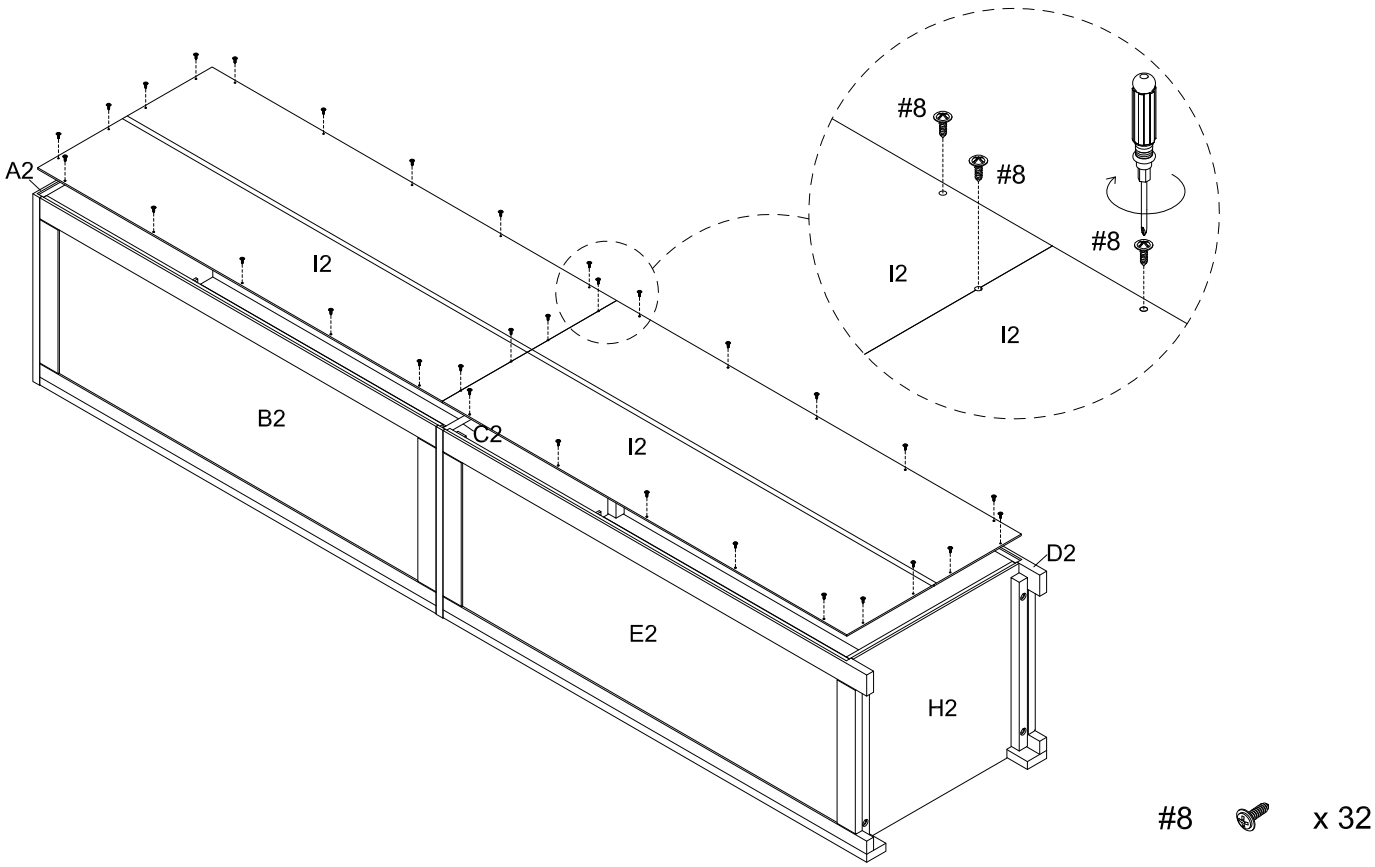

Step 9. There are two options for door panels (parts F2 & G2). Attach door panels (parts F2 & G2) by placing bottom pin hinge (pre-installed in door) to middle panel (part C2) and bottom panel (part H2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A2) and middle panel (part C2).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

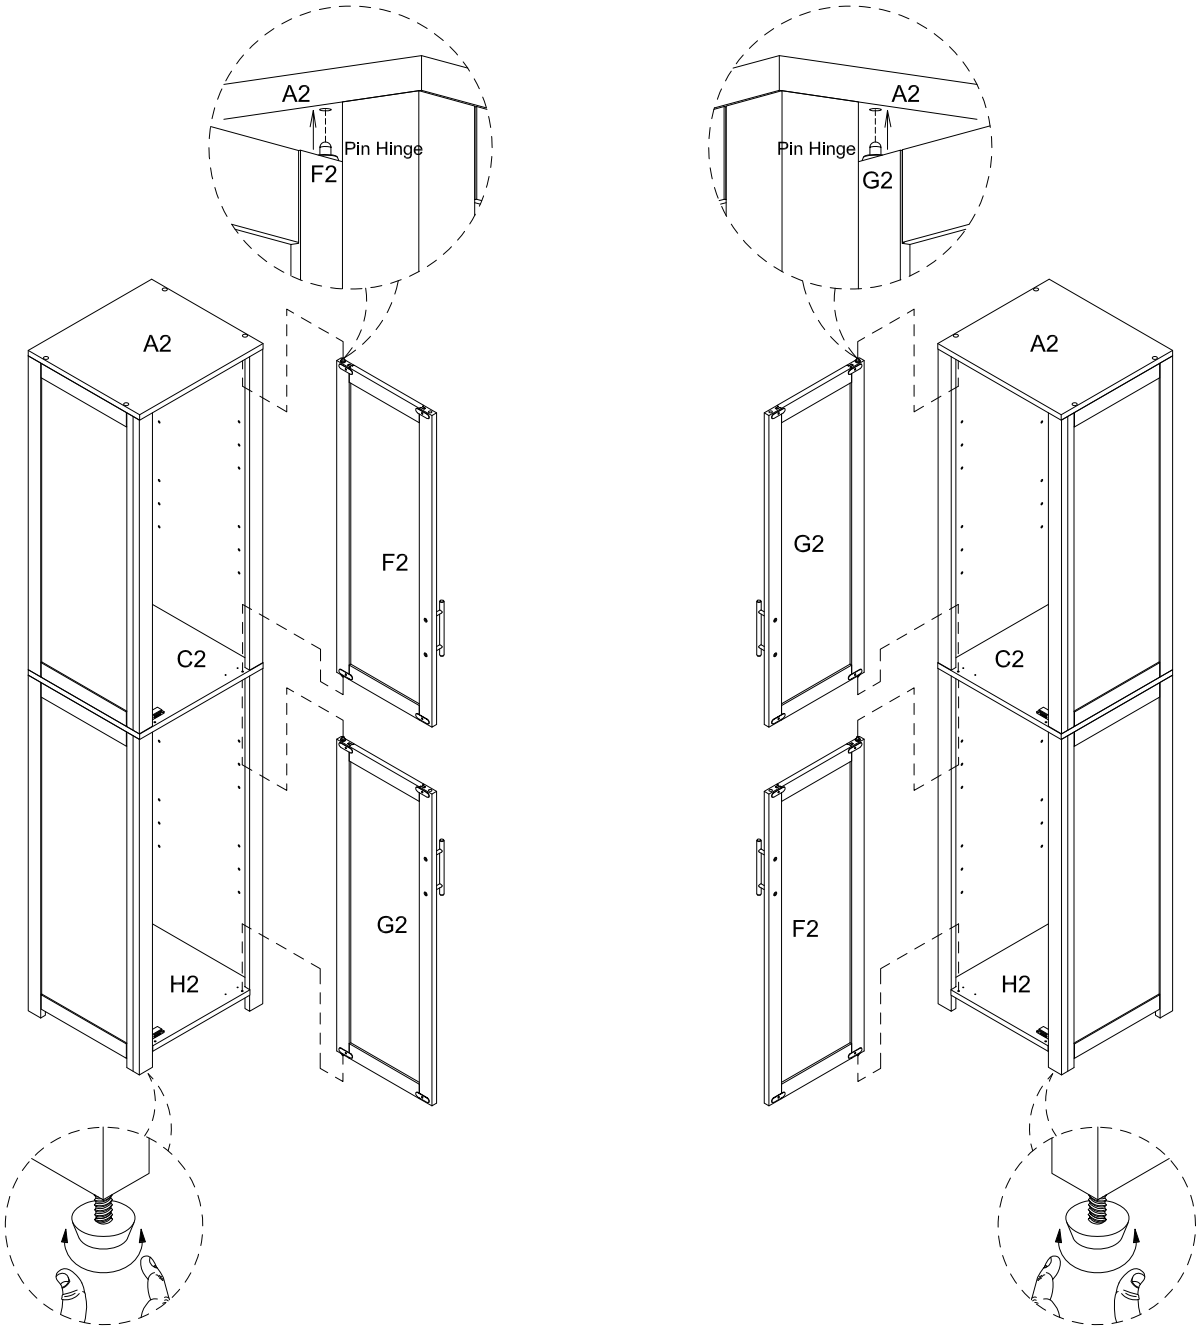

Step 10. Insert shelf holders (part #5) into desired position and slide adjustable shelves (parts J2) into place.

Important: Safety strap kit (part #10) must be installed to prevent tipping, damage and/or injury.

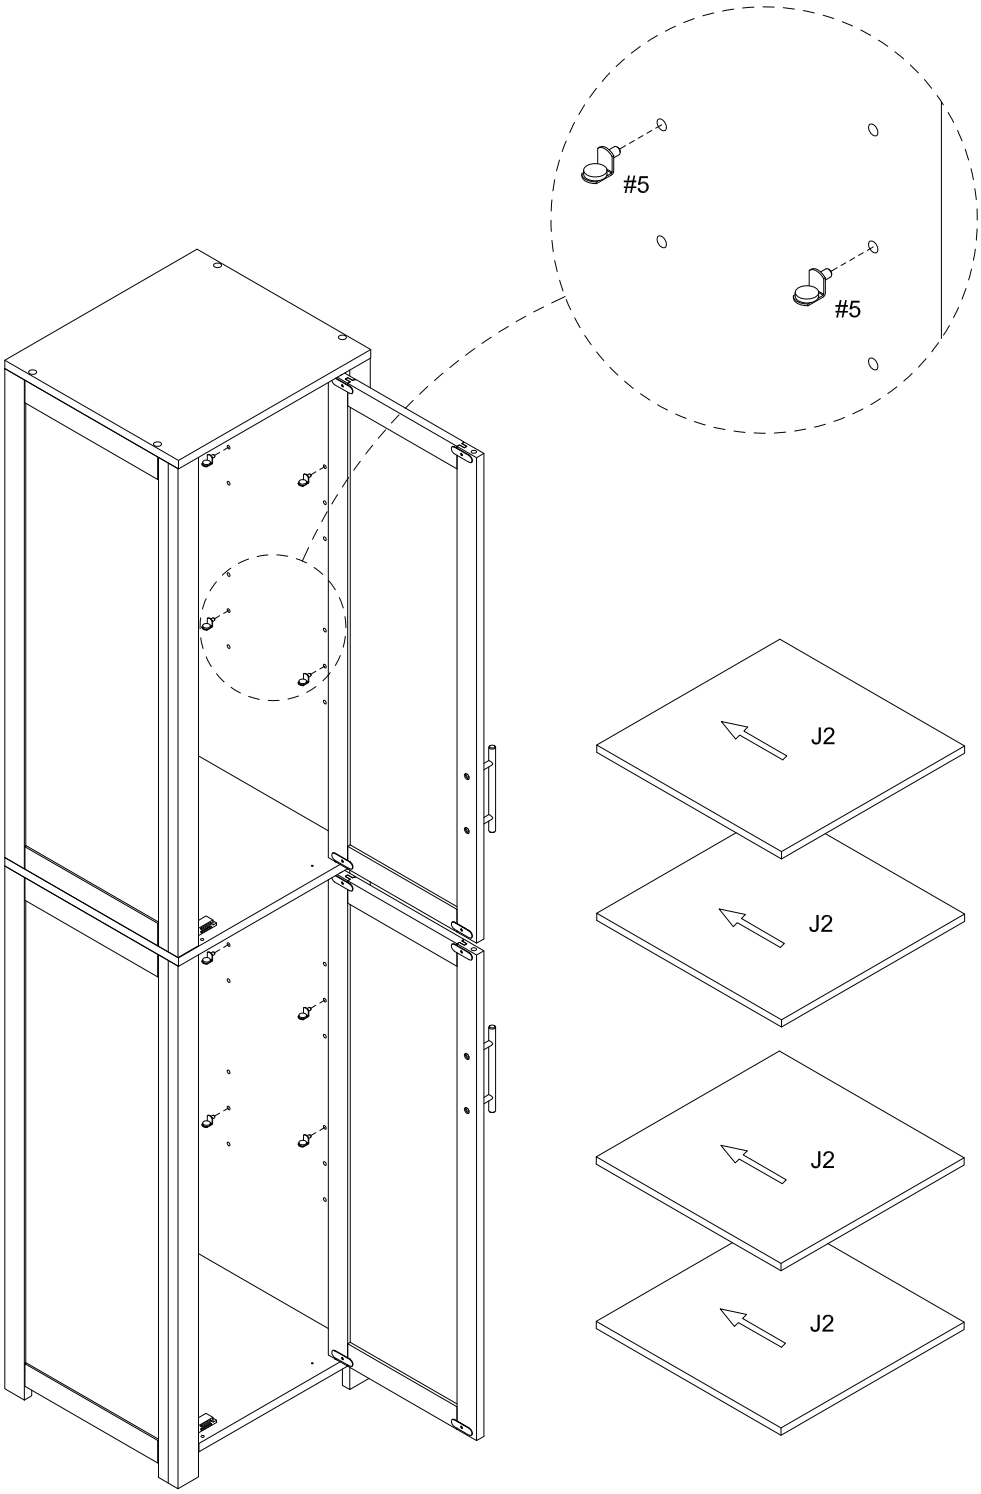

#5 x 16

#10	A	B	C	D	E
	1-1/2"xØ4xD8		5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.
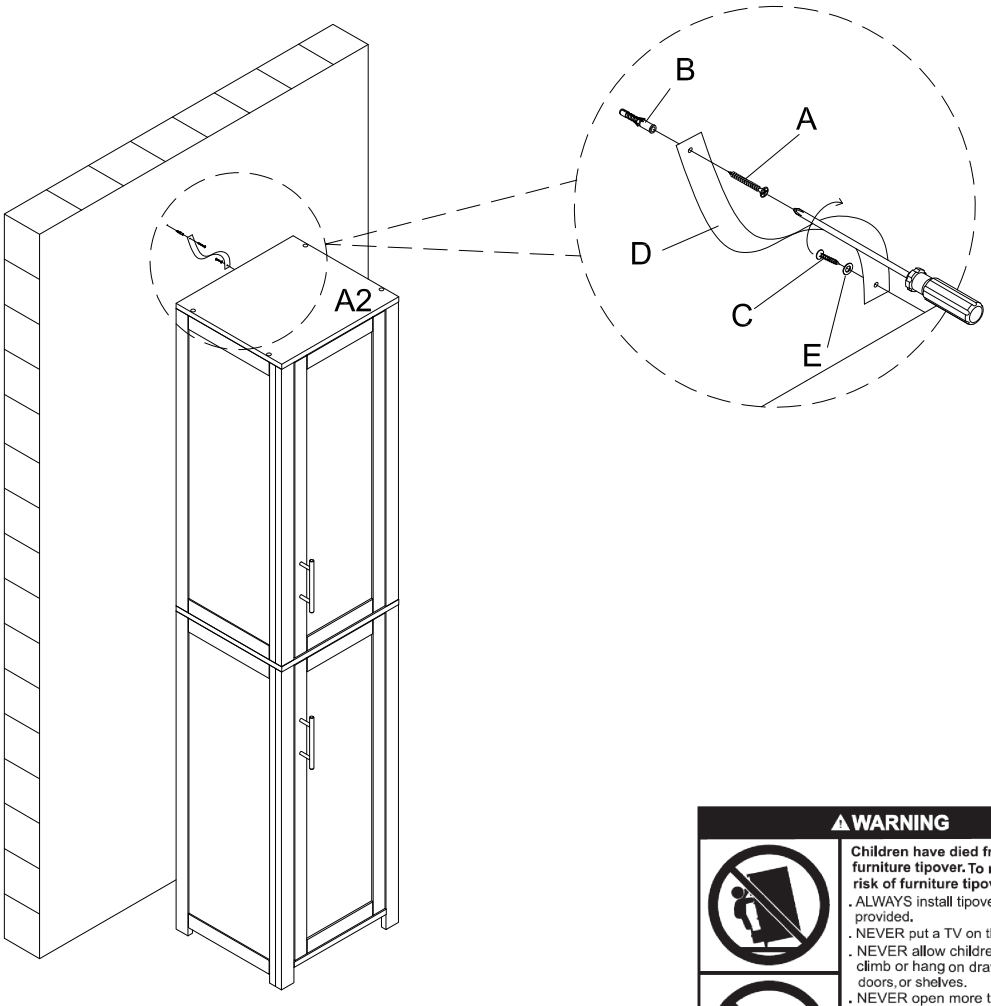
Note: This item is not intended for clothing storage use.