




Assembly Instructions



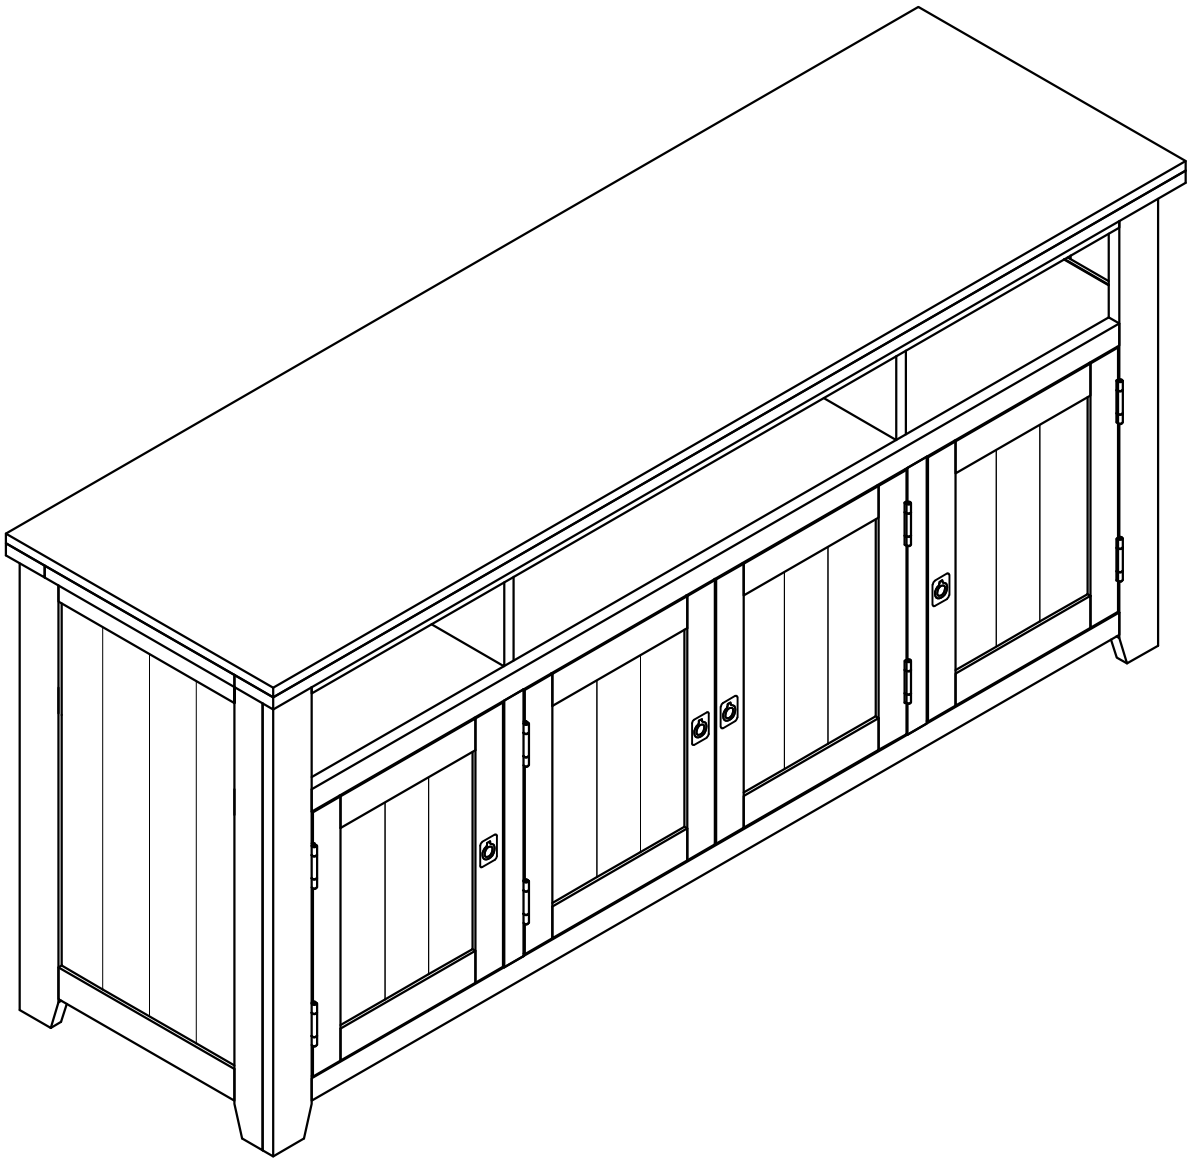


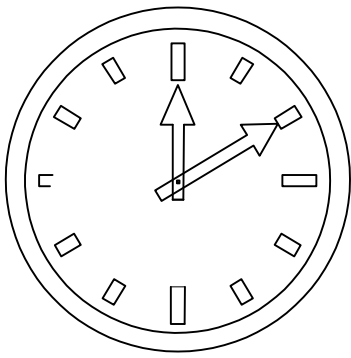


10 min

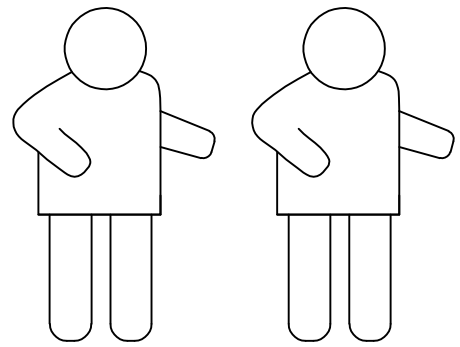



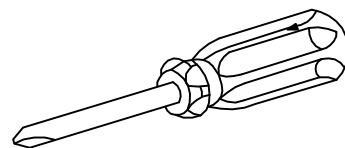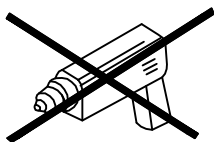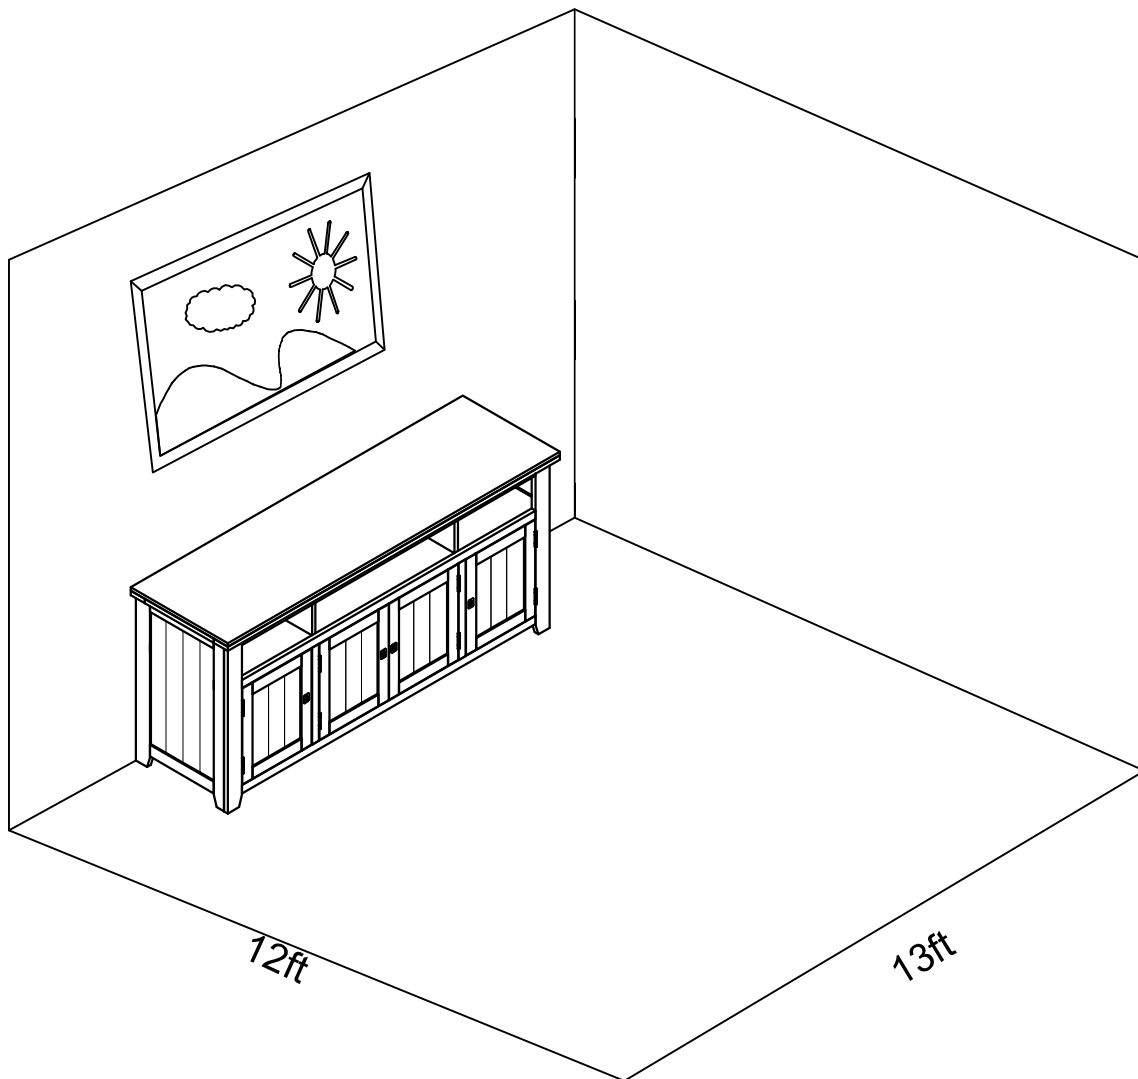


Two People Required

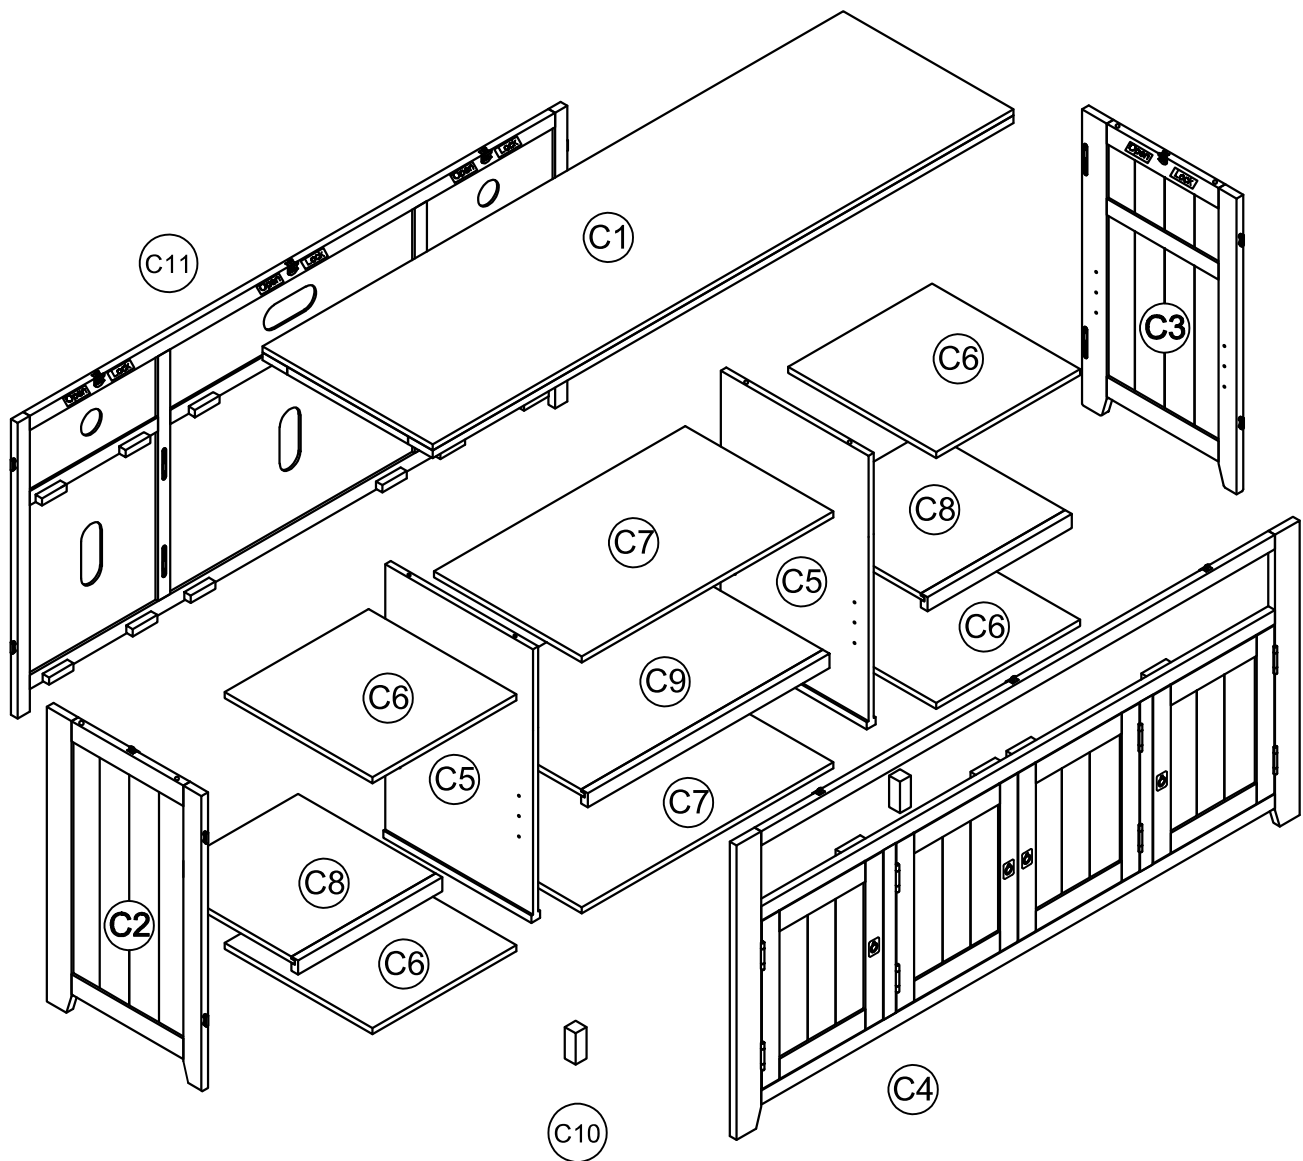

Phillips Head




<p>A</p>  <p>Ø8x30 (mm) 8pcs</p>	<p>B</p>  <p>12pcs</p>	<p>C</p>  <p>Ø3.5x15 (mm) 12pcs</p>	<p>D</p>  <p>Ø8x20 (mm) 8pcs</p>
---	---	--	---

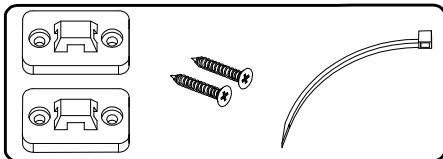


ANTI-TIP SET


1

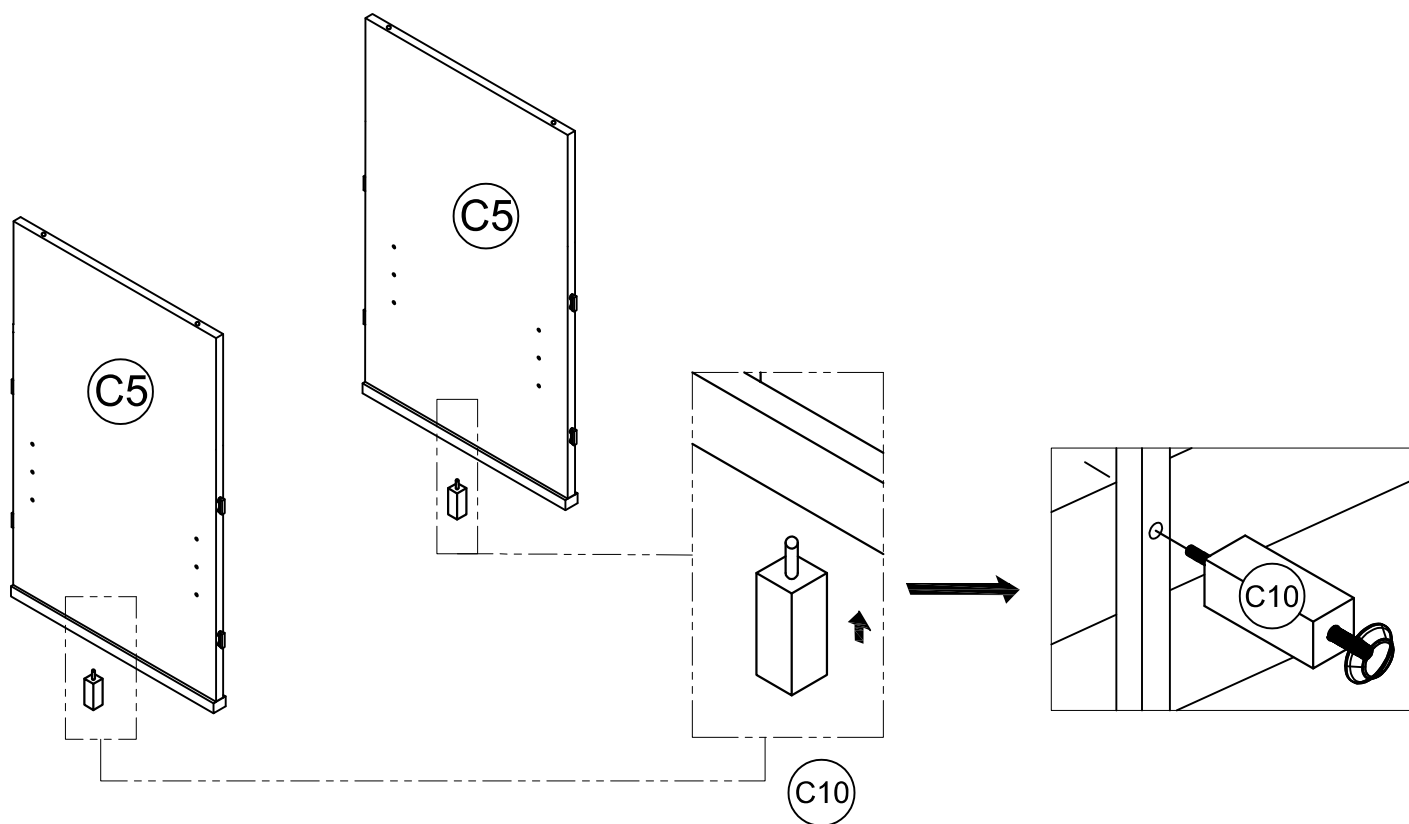


2

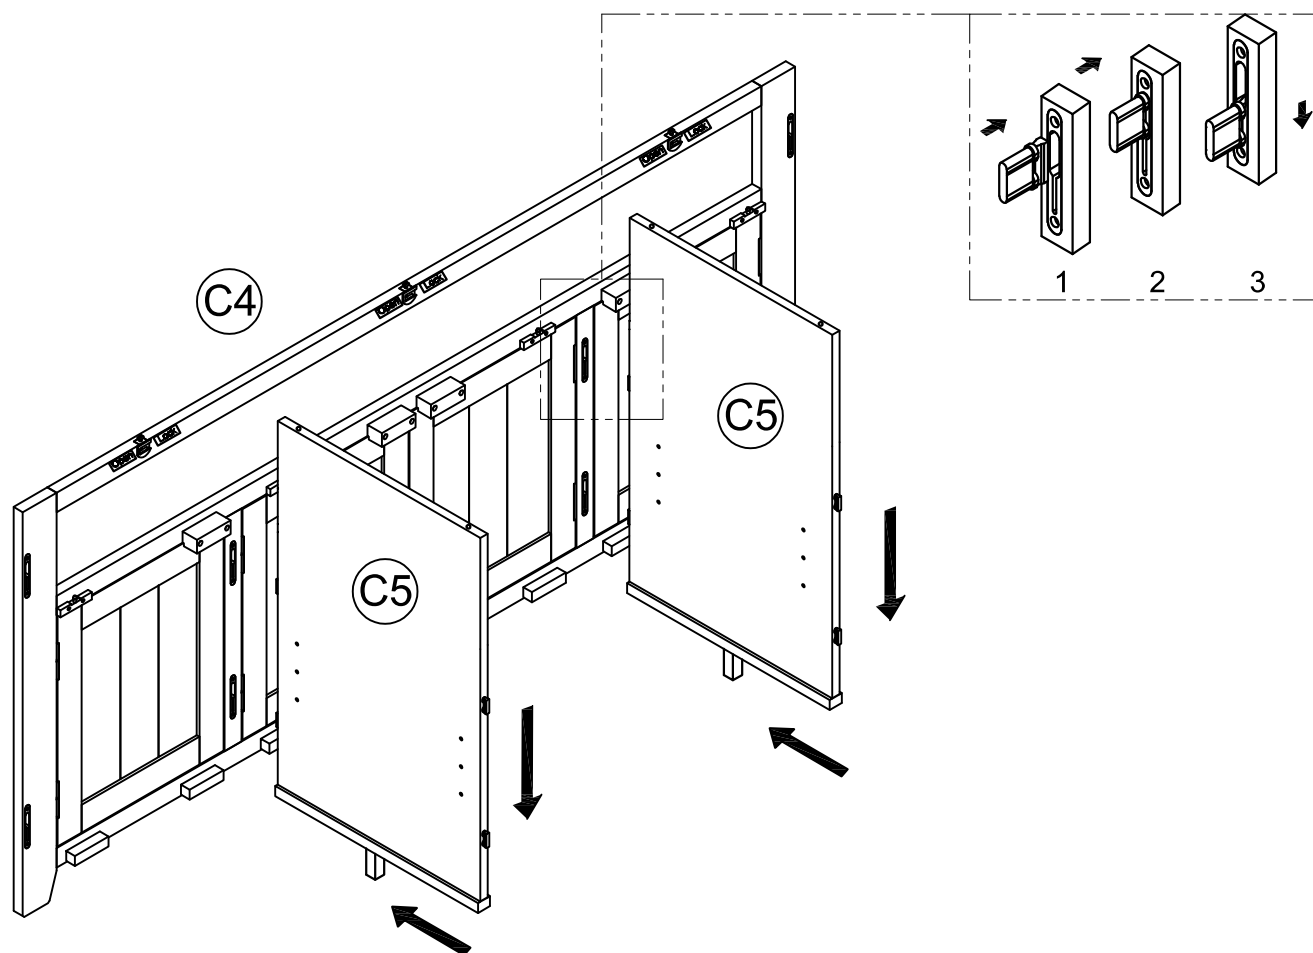

3

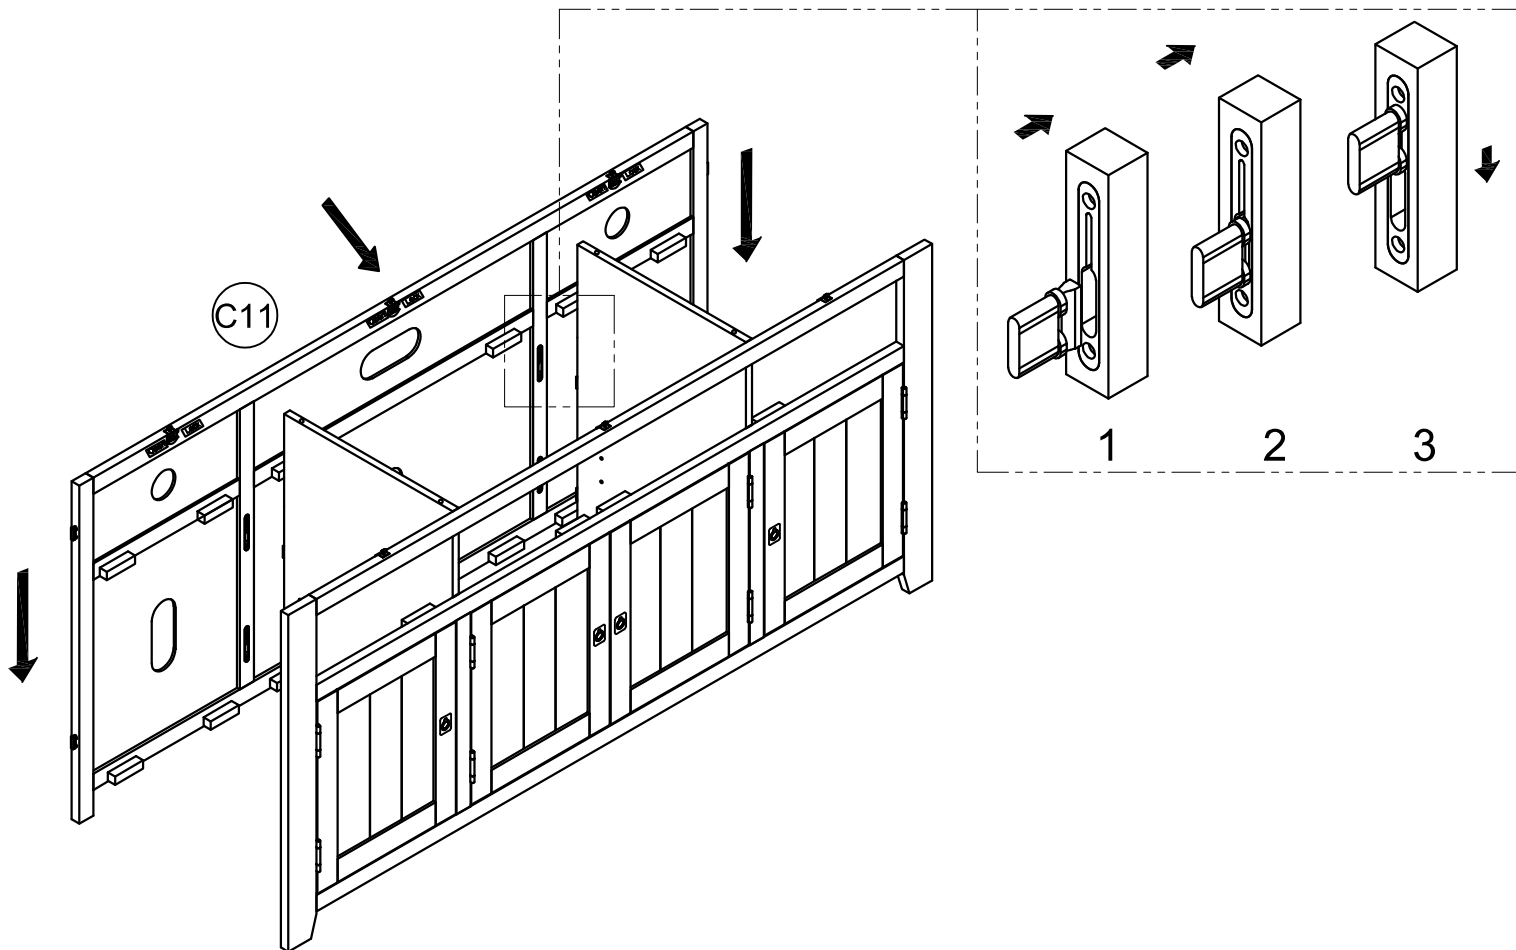


4

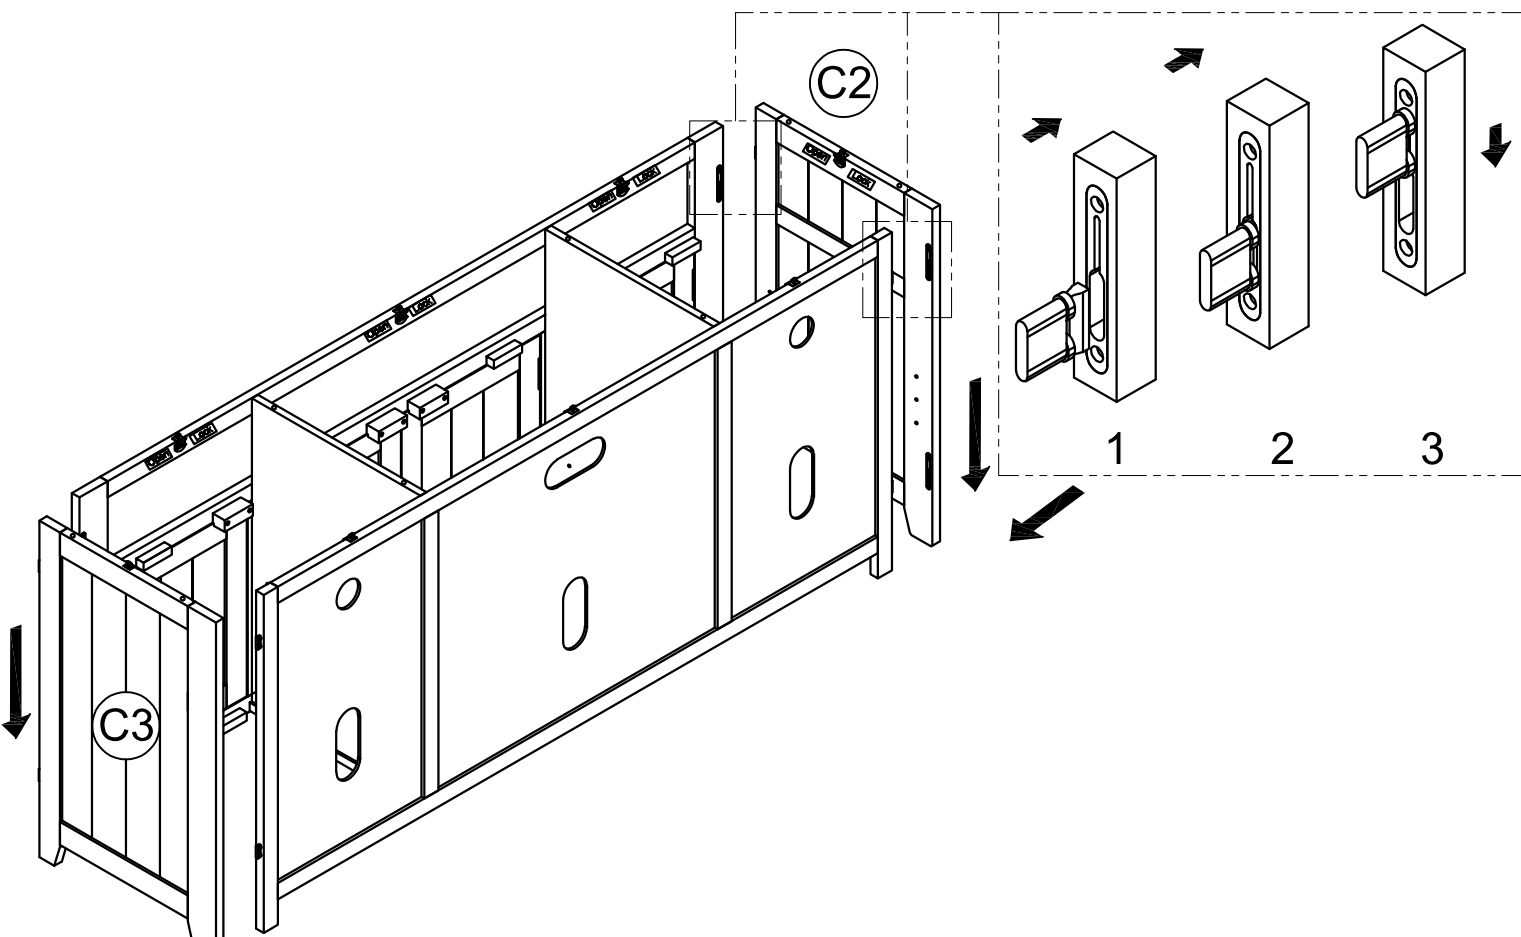


5

Dx8

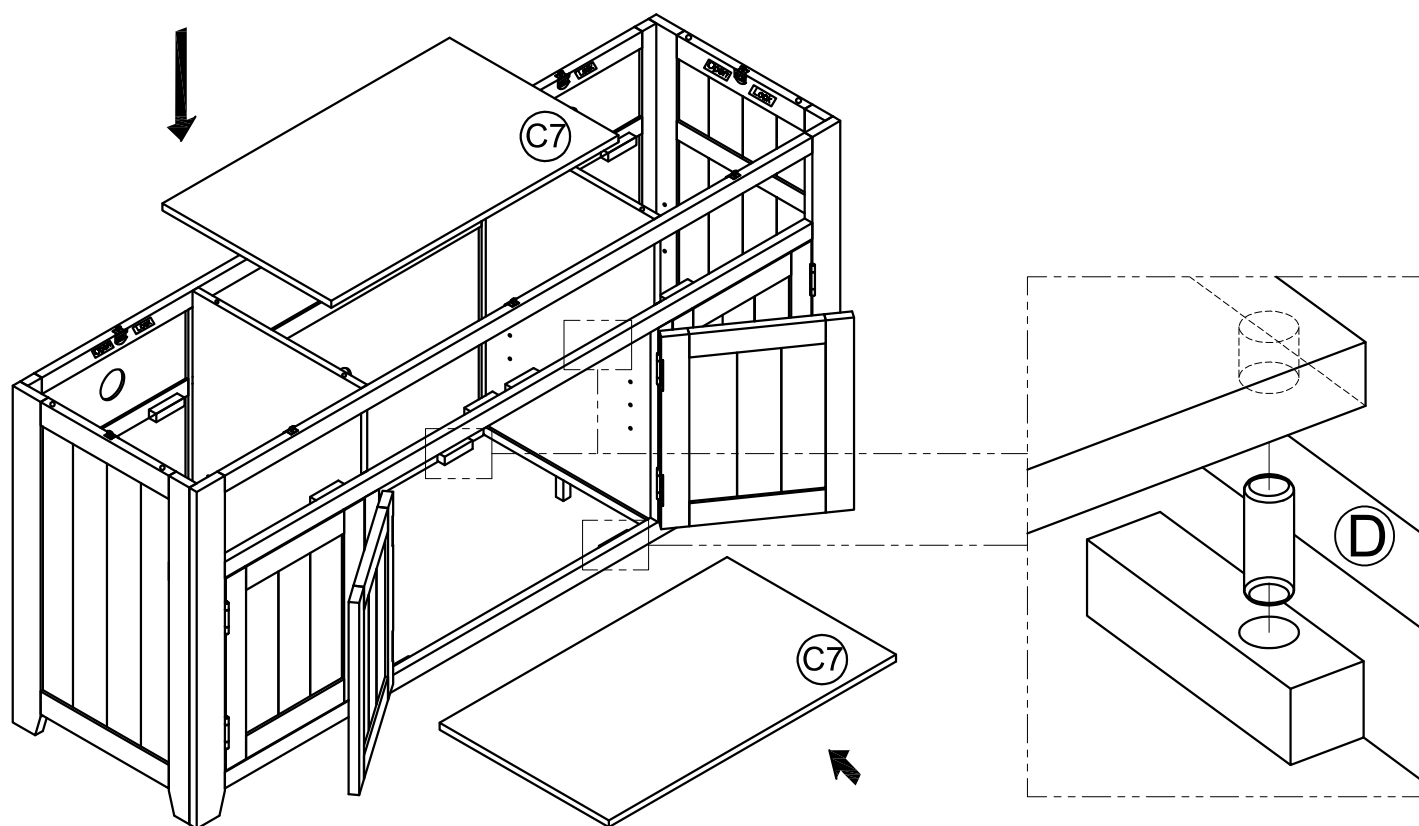

6


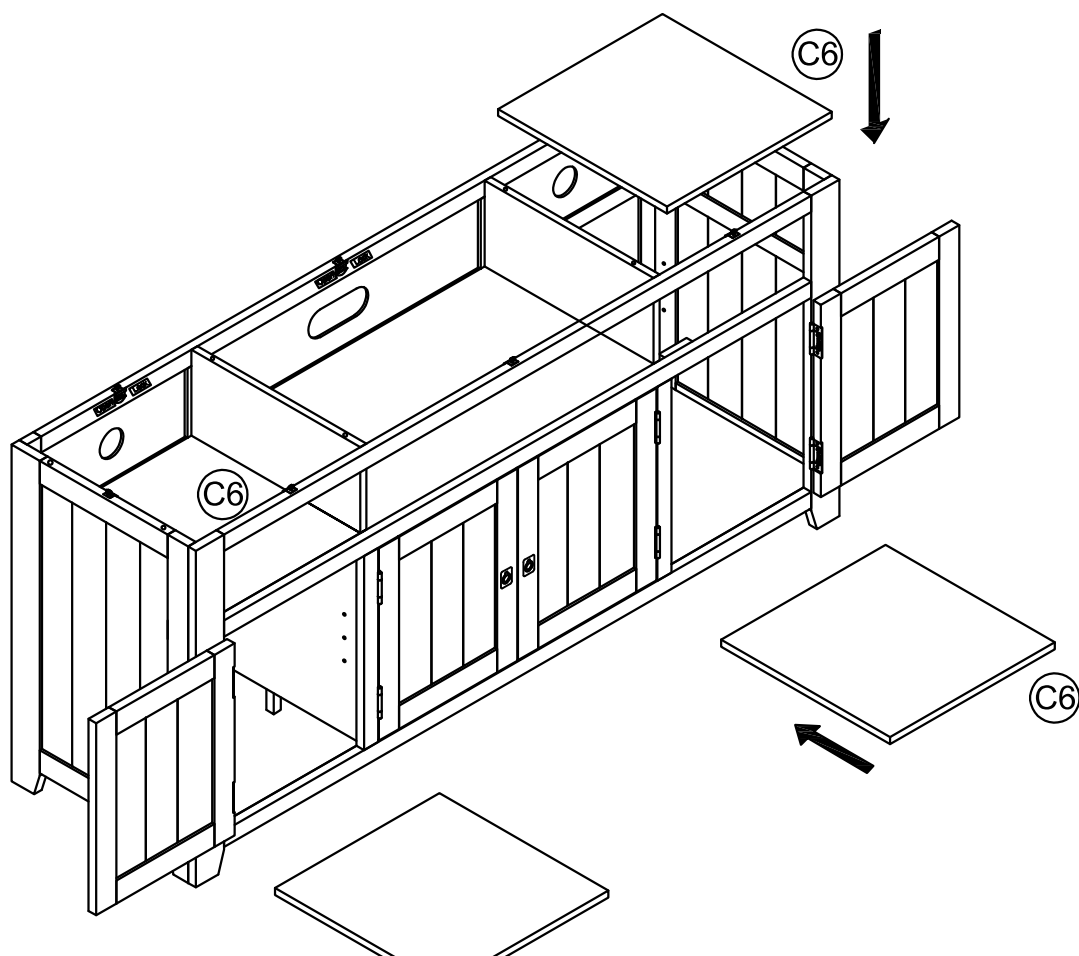


7

Bx4



Cx4

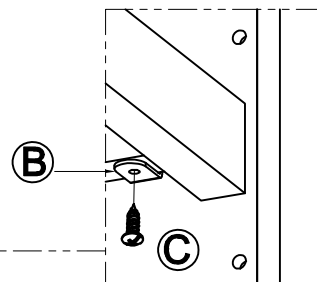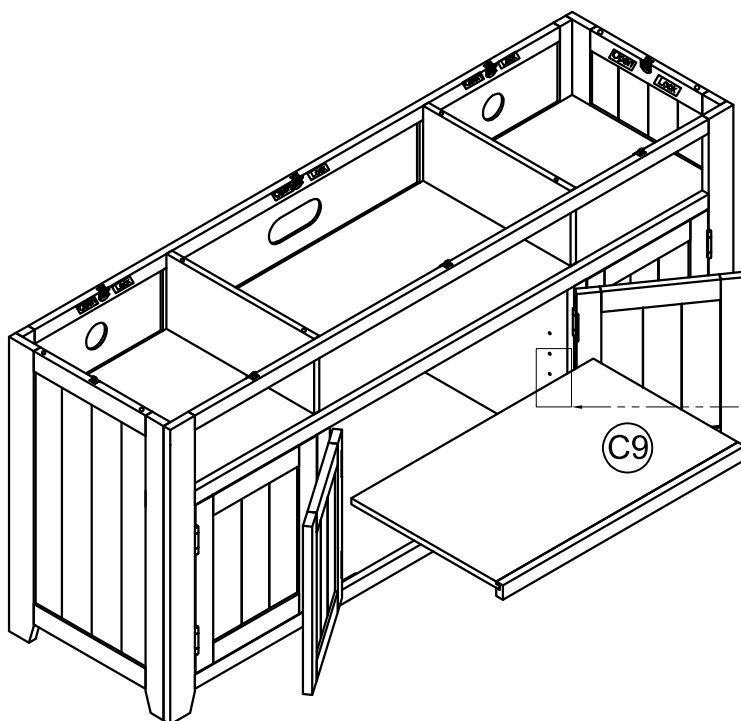



Ensure that rail support is positioned under wood molding

8

Bx8






Cx8

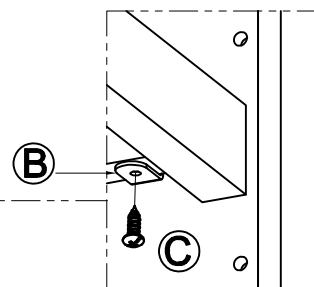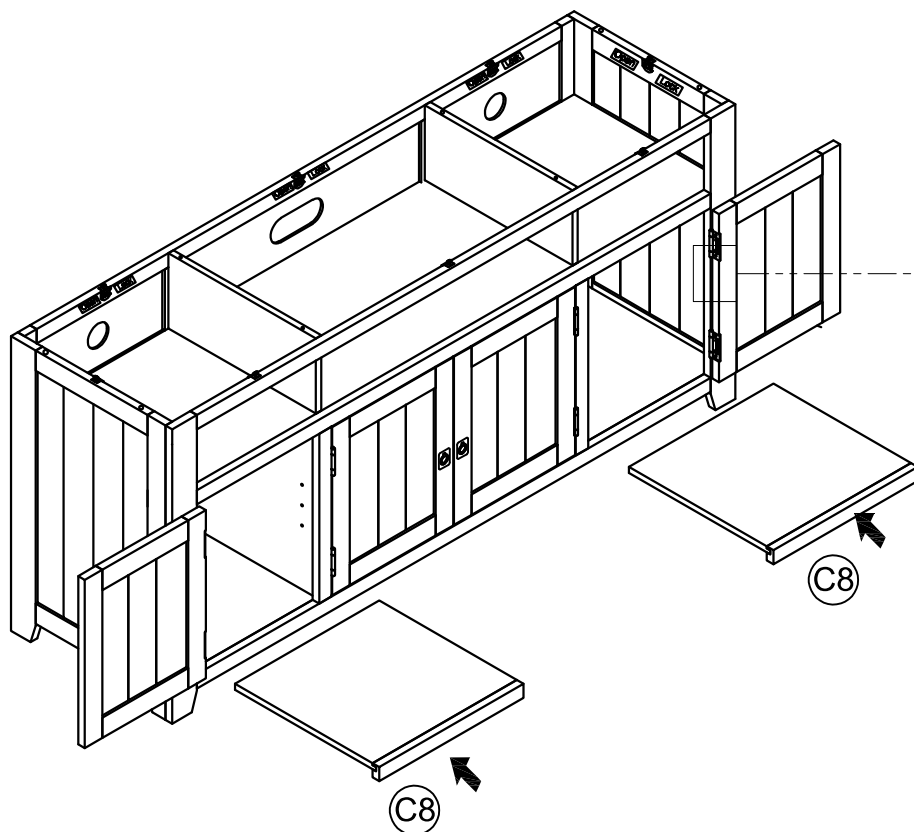




Ensure that rail support is positioned under wood molding

9


Ax8

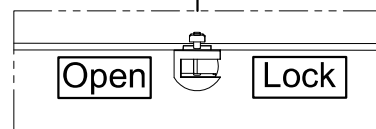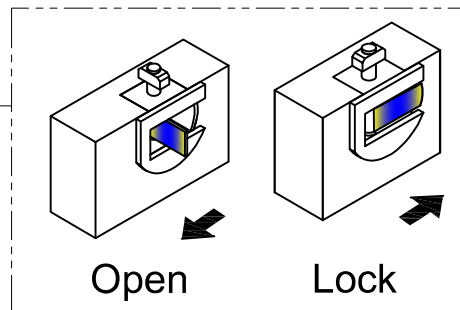
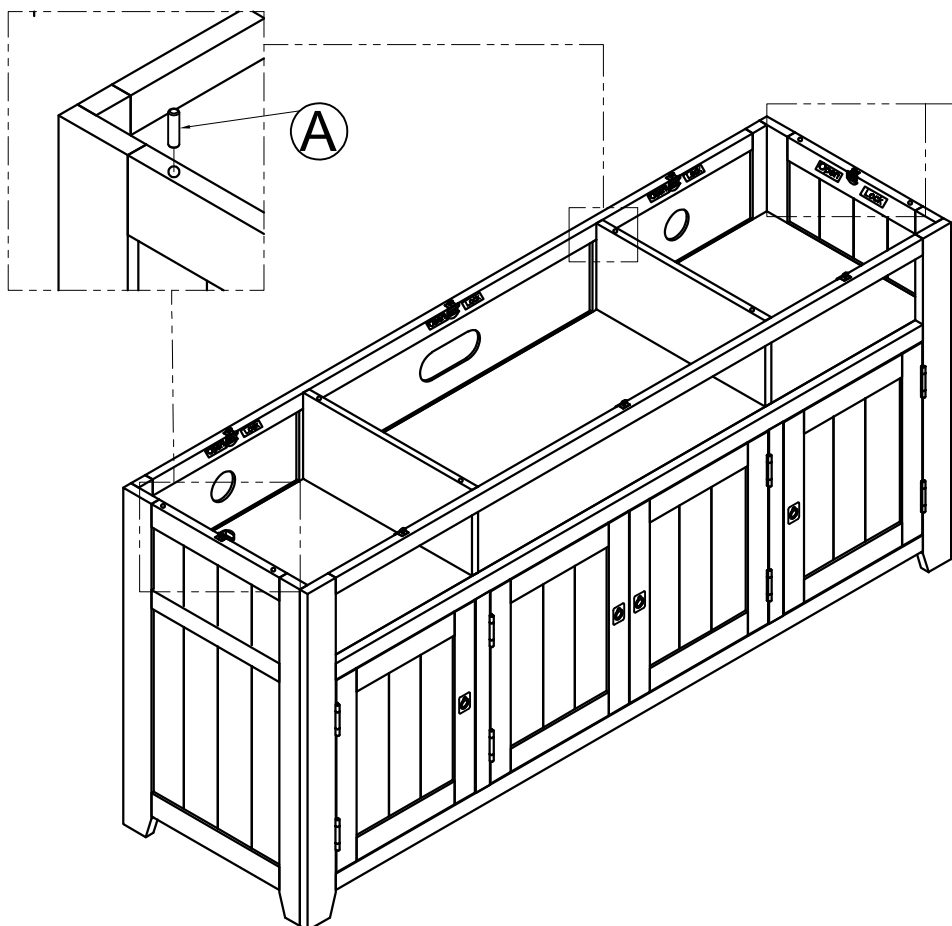


Make sure all latches are in the open position before installing Top Panel (C1)

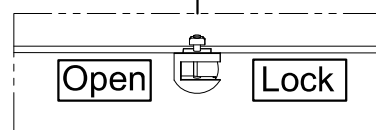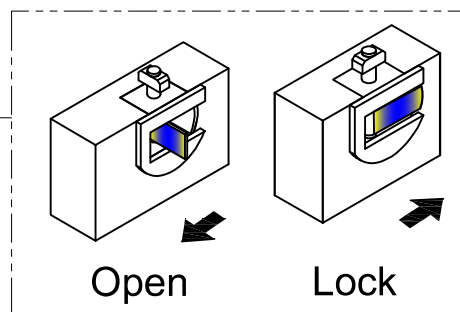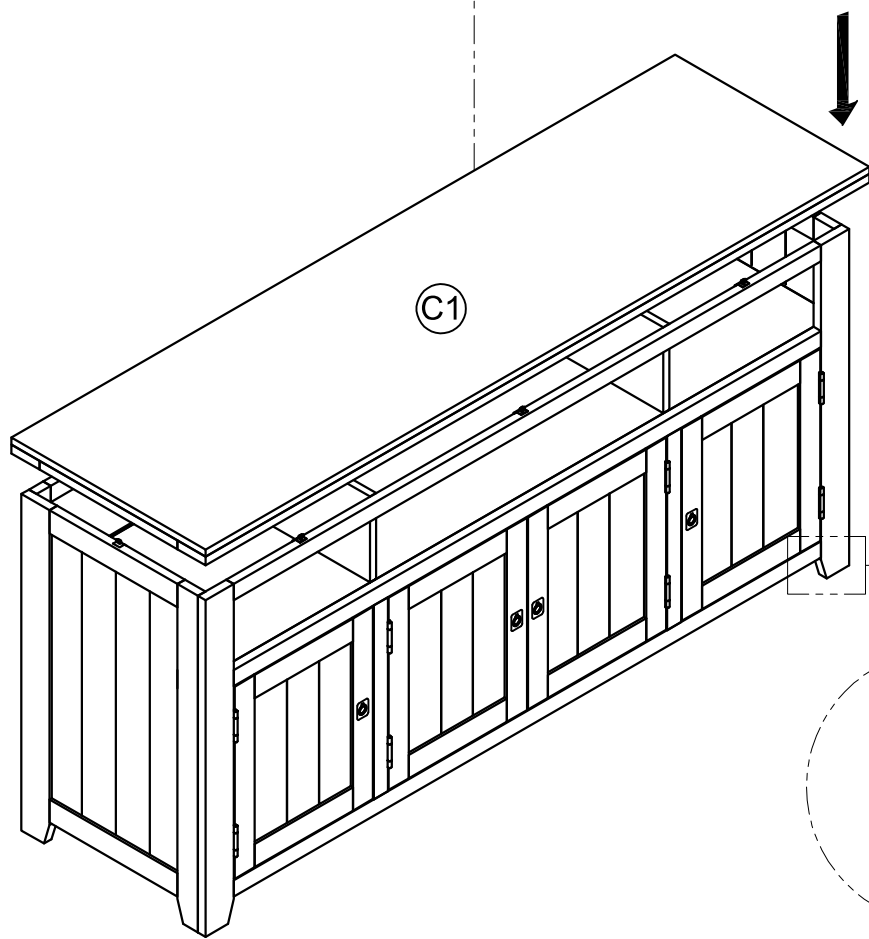


Make sure all 8 latches are in the locked position

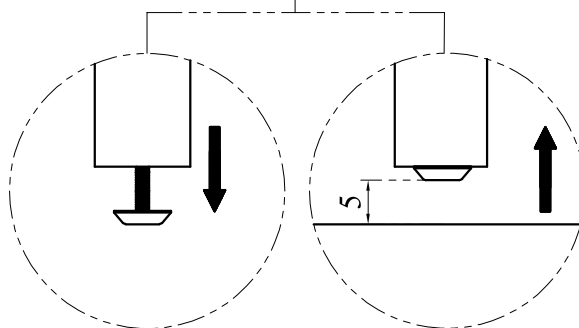

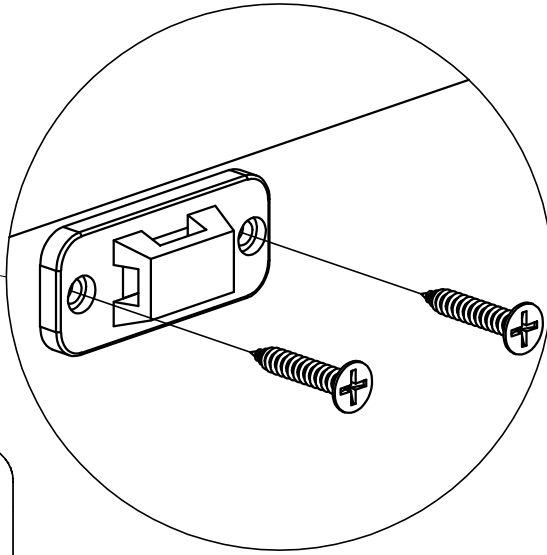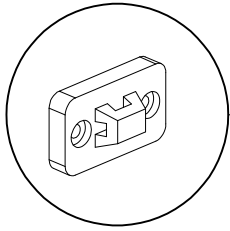

NOTE: As wall materials vary, screws for attaching to wall are not included. For advice on suitable screw systems, contact your local hardware / home improvement store.

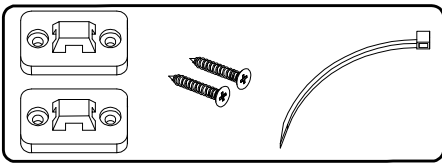

ANTI-TIP SET

