

ASSEMBLY INSTRUCTIONS

BM159219



ITEM: BM159219

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

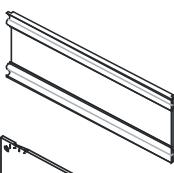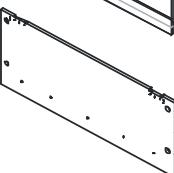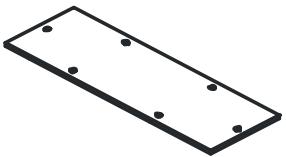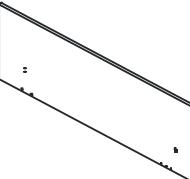A	FRONT PANEL		1 PC
B	BACK PANEL		1 PC
C	LEFT SIDE		1 PC
D	RIGHT SIDE		1 PC
E	BOTTOM PANEL		1 PC
F	TOP PANEL		1 PC
G	LEG		4 PCS
H	LEFT ADHESIVE FLANNELETTE		1 PC

ITEM: **BM159219**


ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

| RIGHT ADHESIVE
FLANNELETTE  1 PC




J LONG ADHESIVE FLANNELETTE 1 PC

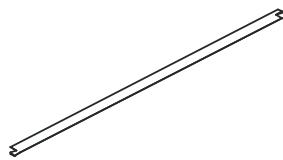


ITEM: **BM159219**


ASSEMBLY INSTRUCTIONS

HARDWARE IDENTIFICATION

1	CMA BOLT (Ø7 x 35mm SR)		14 PCS
2	CAM LOCK (Ø25 x 11mm SR)		14 PCS
3	CAM LOCK COVER (Ø30 x 10mm)		14 PCS
4	WOOD DOWEL (Ø8 x 30mm)		22 PCS
5	HINGE (76 x 1.6mm)		2PCS
6	SCREW (Ø6 x 1/2" BLK)		24 PCS
7	LID SUPPORT (160 x 30 x 16mm)		2 PCS
8	SCREW (Ø7 x 1-1/8" RBW)		8 PCS

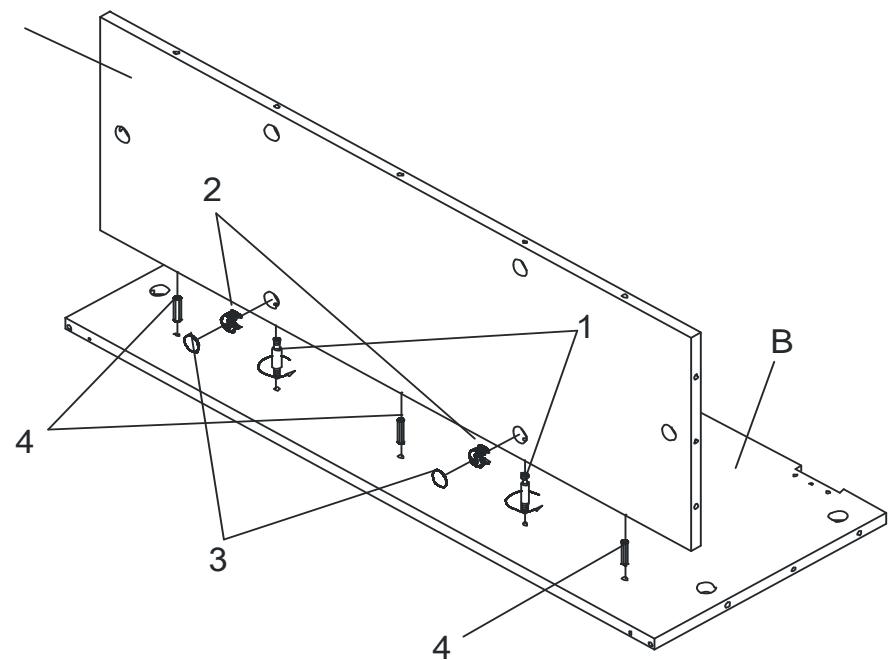


STEP 2

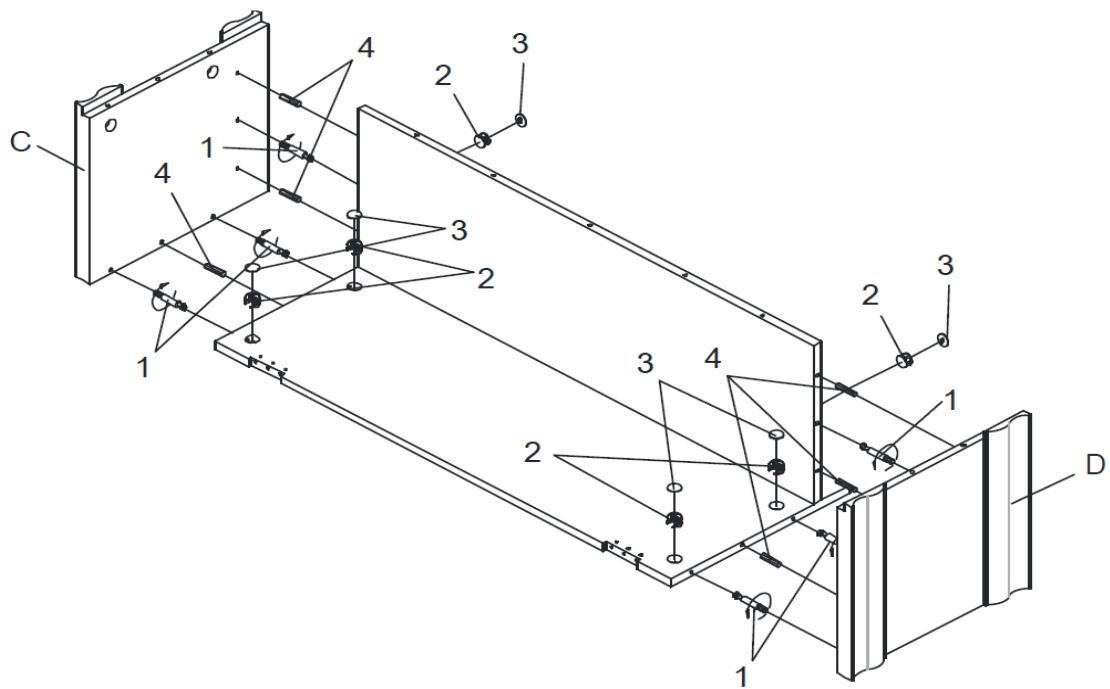


ITEM: **BM159219**

ASSEMBLY INSTRUCTIONS
STEP 3

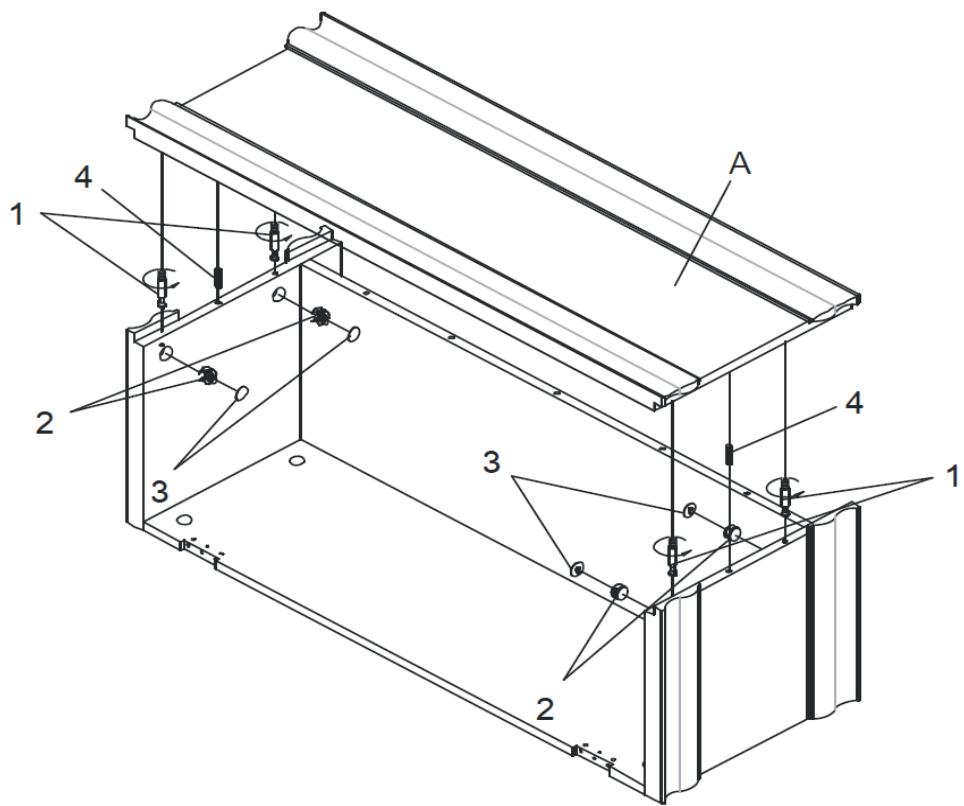


STEP 4

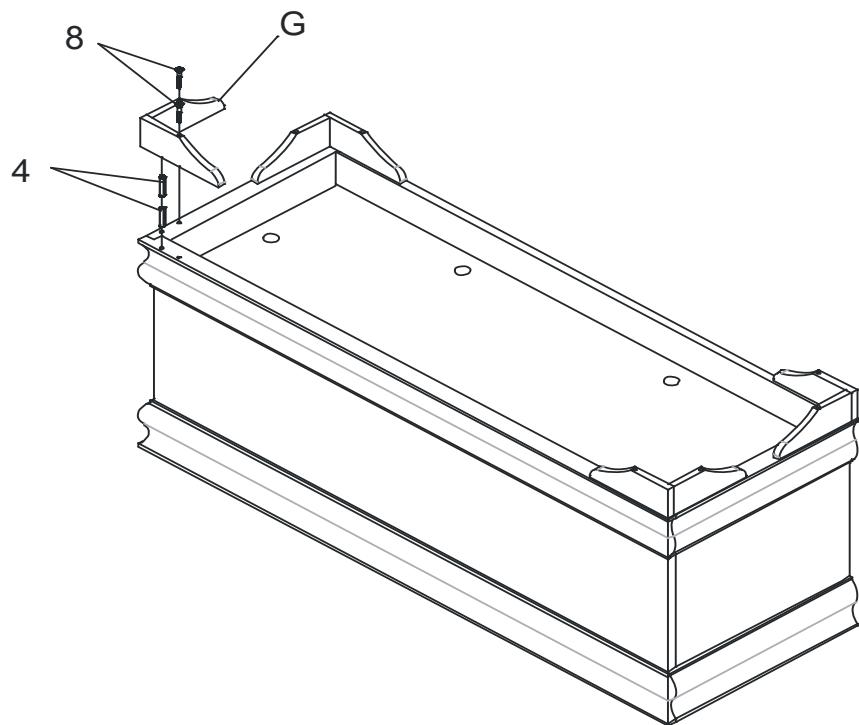


ITEM: **BM159219**

ASSEMBLY INSTRUCTIONS
STEP 5

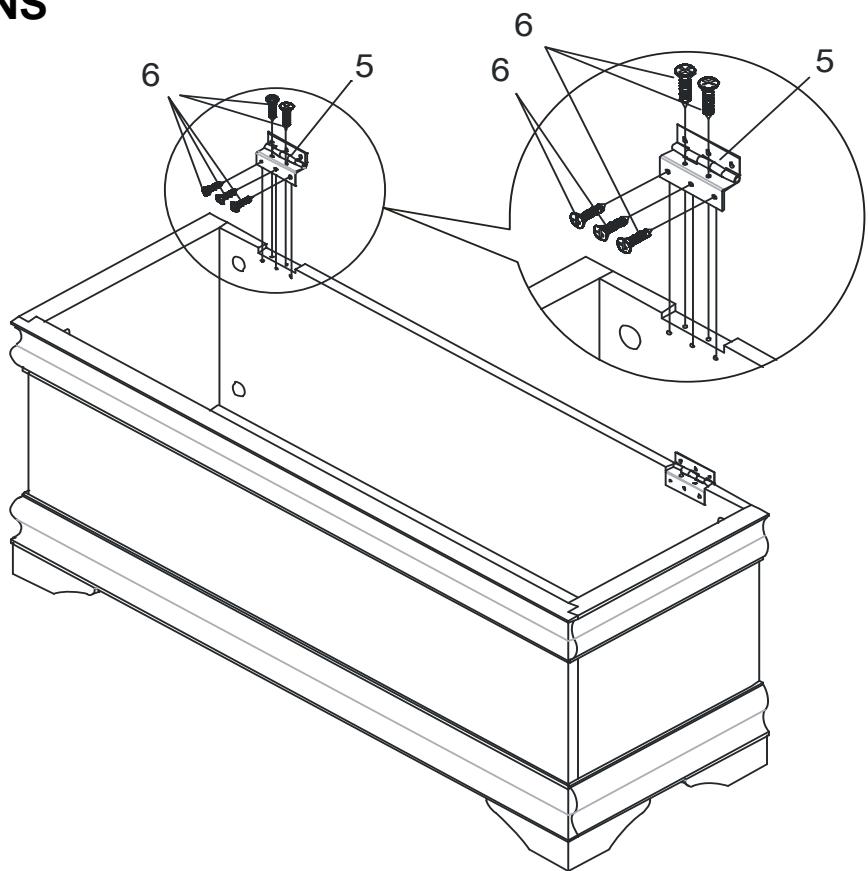


STEP 6

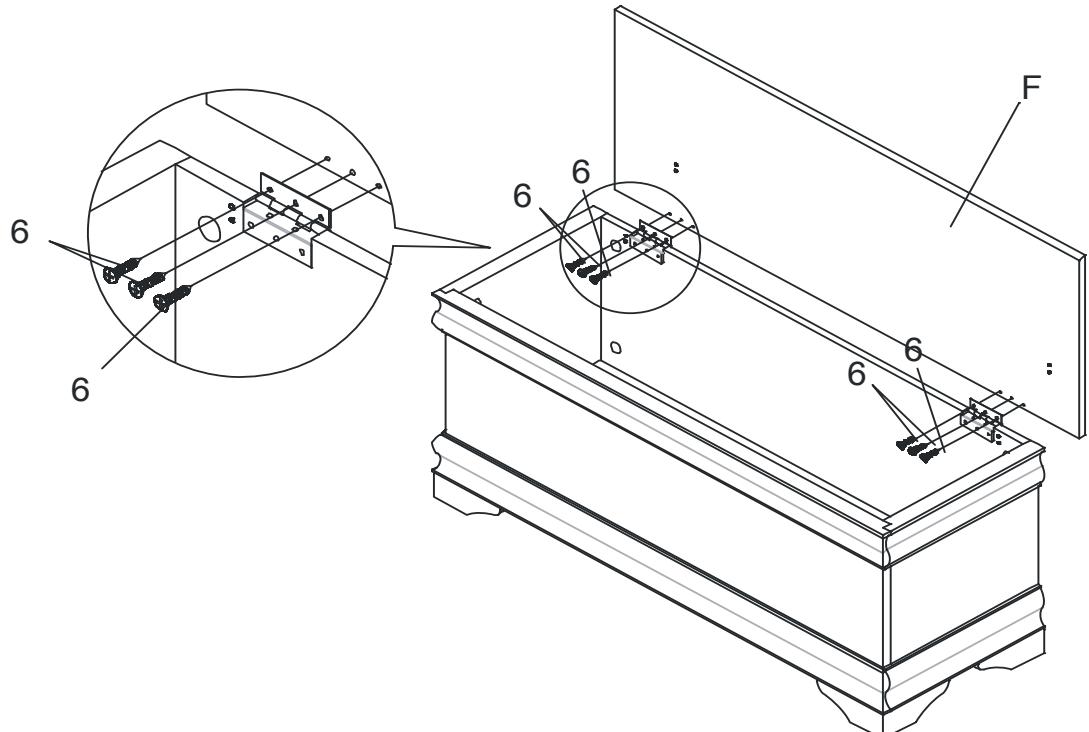


ITEM: **BM159219**

ASSEMBLY INSTRUCTIONS
STEP 7


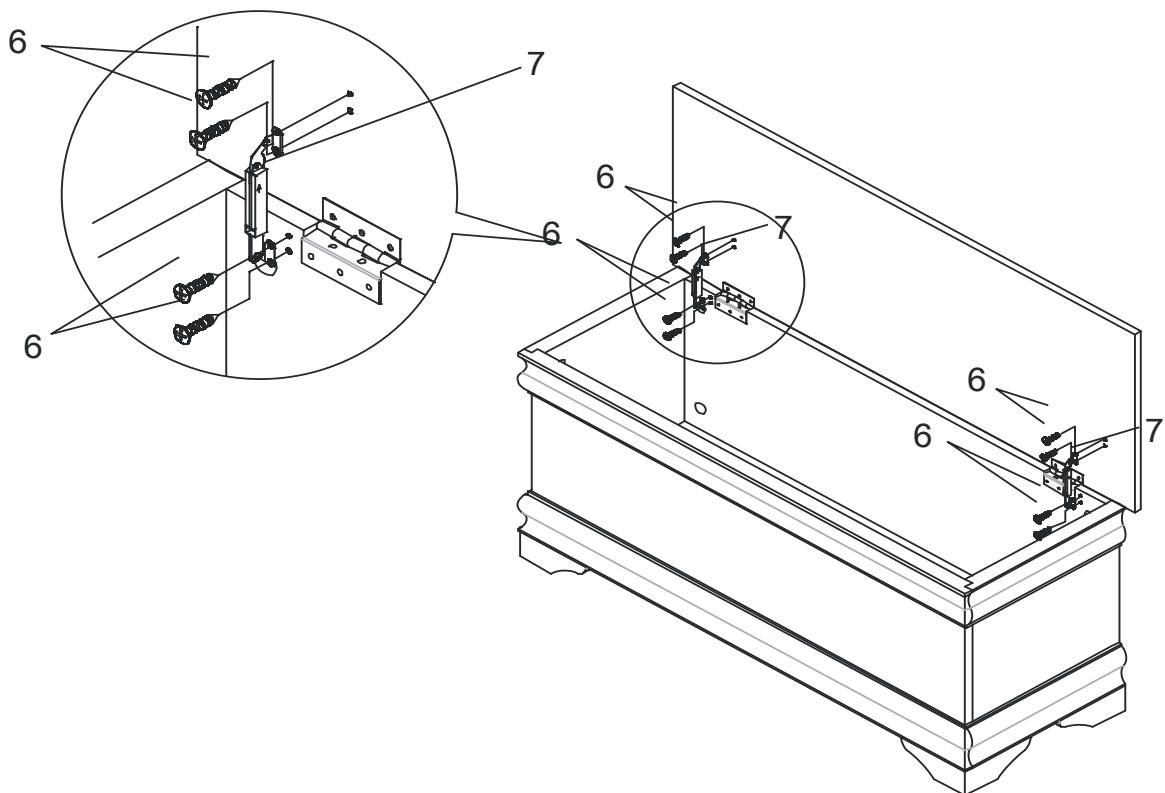


STEP 8

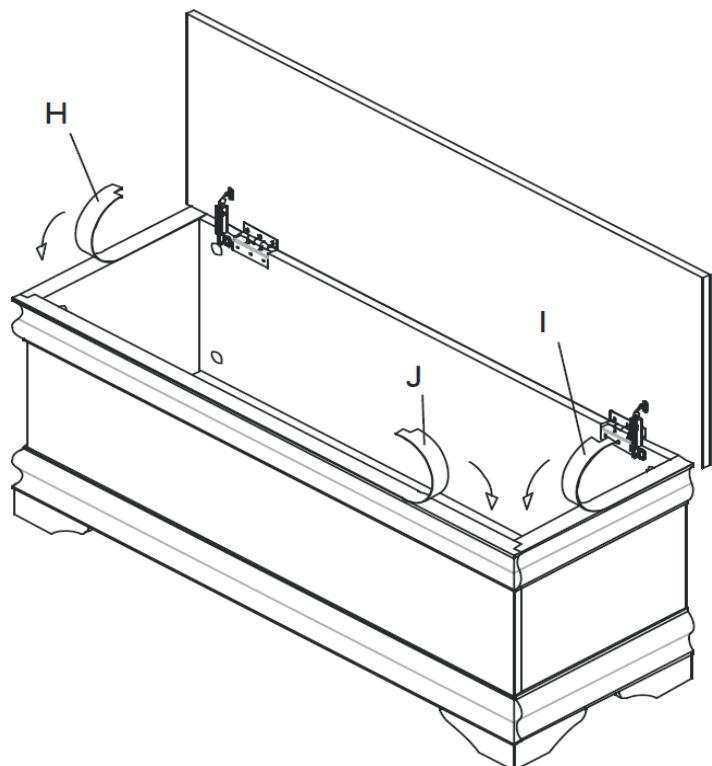


ITEM: **BM159219**

ASSEMBLY INSTRUCTIONS
STEP 9
COMPLETE

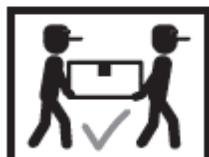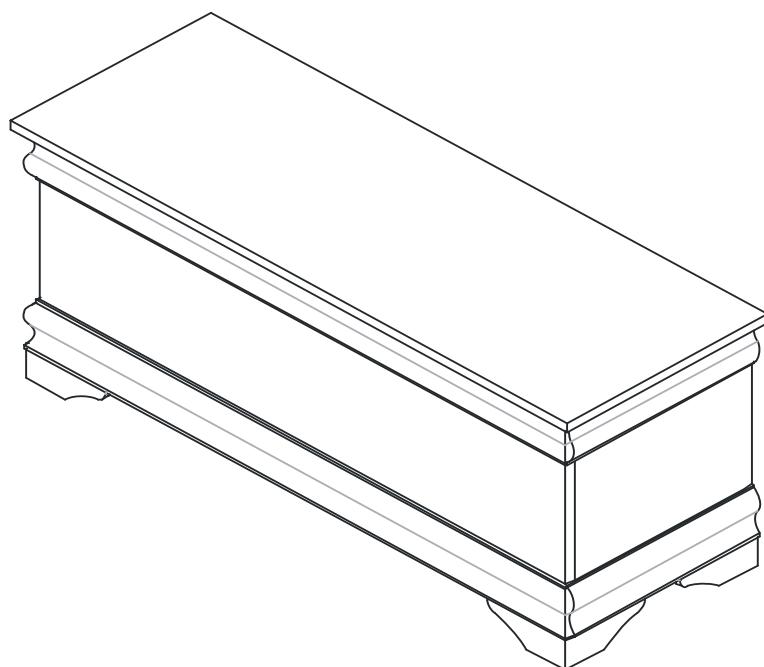

ITEM:BM159219

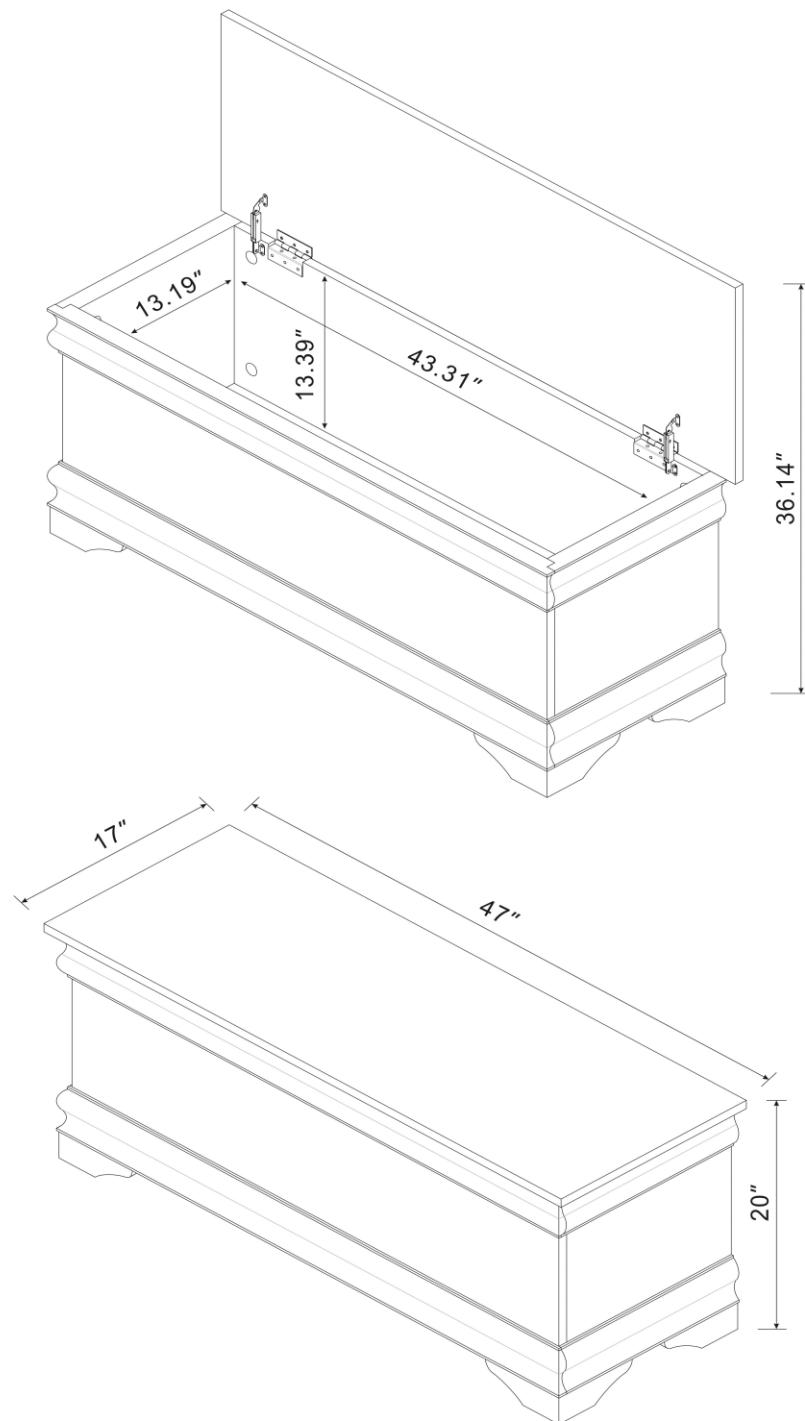

Note : Dimension tolerance $\pm 5\%$