


These instructions are for fitting a Swash bidet toilet seat onto an existing toilet.


## How to measure for a Swash toilet seat

1

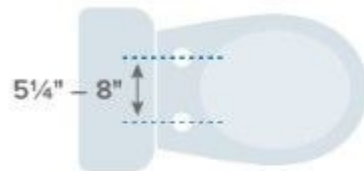


Measure the **distance between the bolt holes**. The space must be between 5 1/4 inches and 8 inches.

2

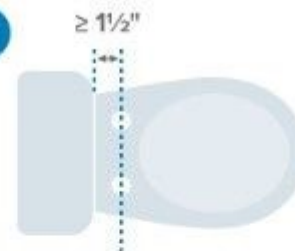

≥ 1 1/2" from center

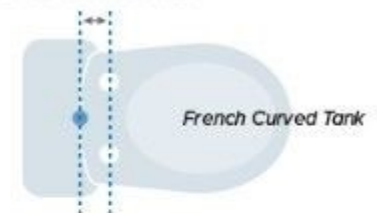

Measure the **distance from the center of the bolt holes to the toilet tank** to ensure proper clearance. There must be at least 1 1/2 inches of clearance.\*

3

