




MANHATTAN
COMFORT


888-230-2225
help@manhattancomfort.com

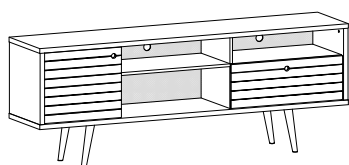


Liberty TV Stand 70.86

Model # 202AMC6, 202AMC63, 202AMC64, 202AMC69, 202AMC9, 202AMC93, 202AMC94, 202AMC96


INCLUDED IN THE PACKAGE

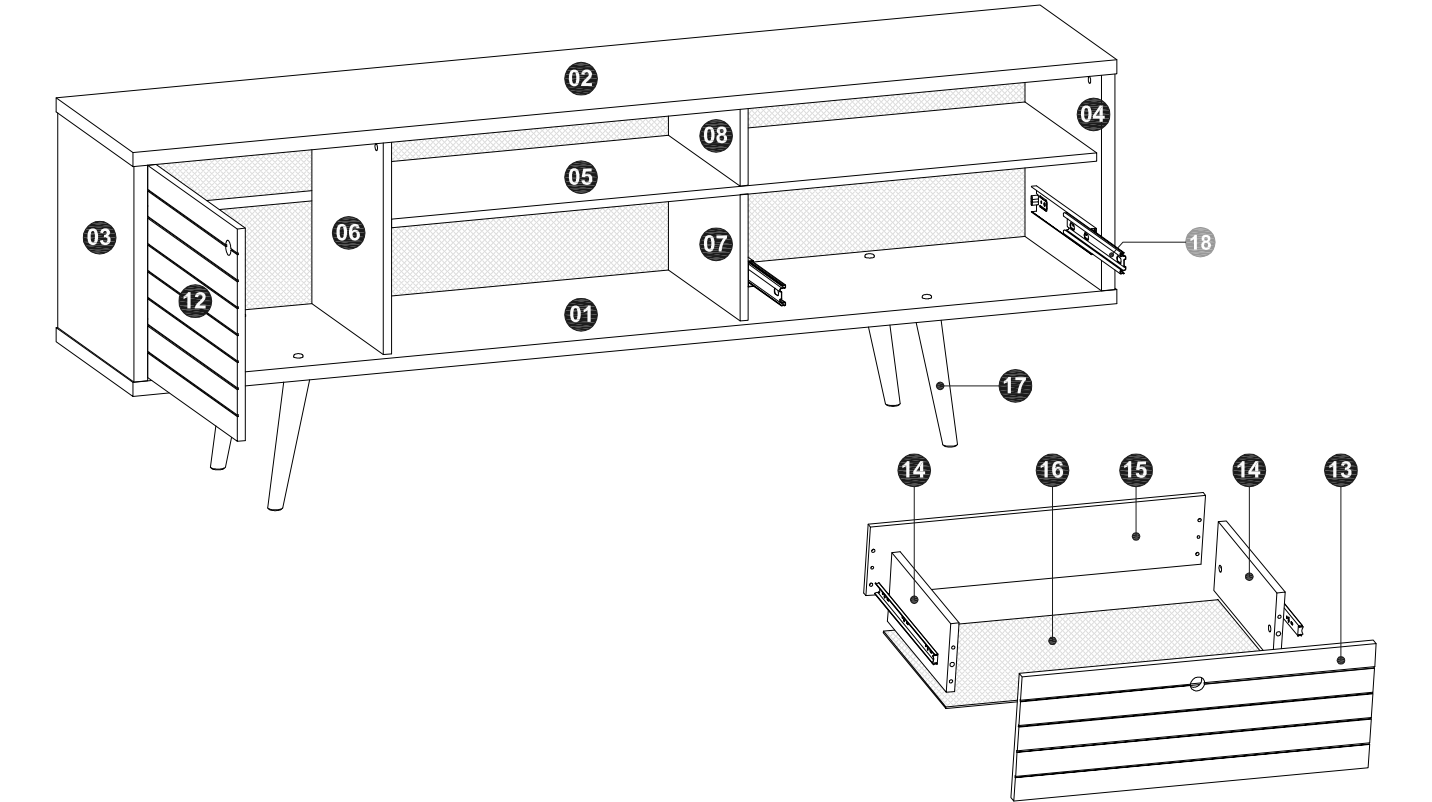

REAR VIEW

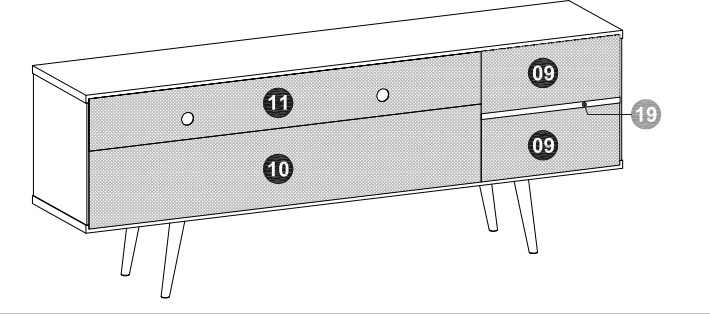



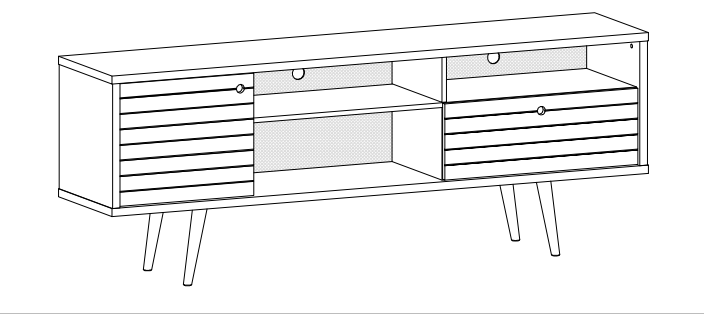

FRONT VIEW
















n.° ID	Parts Identification (Description)	Quantity
01	Base	1
02	Top Panel	1
03	Left Side Panel	1
04	Right Side Panel	1
05	Shelf	1
06	Left Partition	1
07	Lower Right Partition	1
08	Upper Right Partition	1
09	Left Back Panel	2
10	Lower Right Back Panel	1
11	Upper Right Back Panel	1
12	Door	1
13	Front of the Drawer	1
14	Side Panel of the Drawer	2
15	Rear Panel of the Drawer	1
16	Base of the Drawer	1
17	Wood Feet	4
18	Telescopic drawer slide 300mm (pair)	1
19	Plastic Profile "H" 465mm	1


TOOLS NEEDED

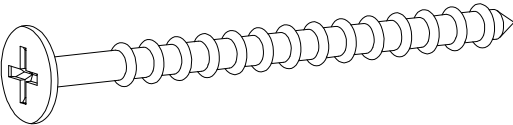  	
--	---

INCLUDED IN THE PACKAGE

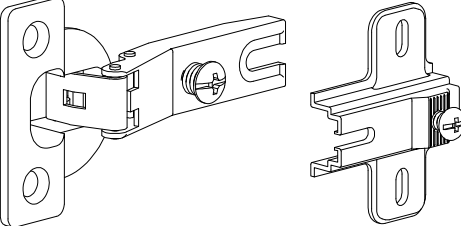
A 4x 	B 4x 	C 32x 
D 9x 	E 15x 	F 15x 
G 12x 	H 18x 	I 62x 
J 2x 	K 8x 	L 13x 
M 4x 		

STEP 1

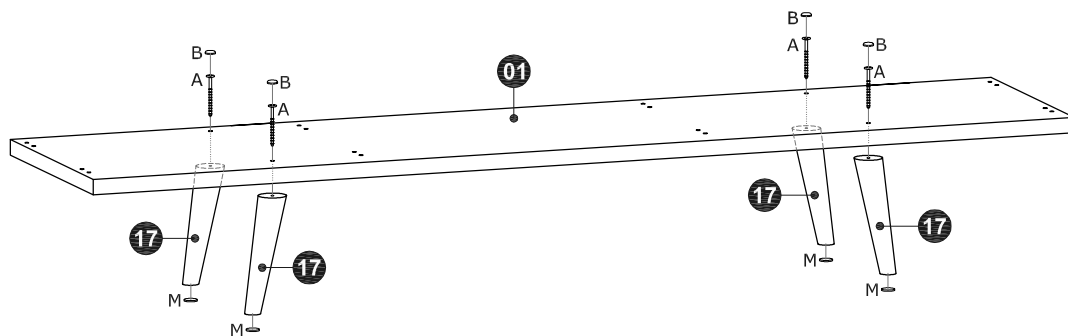


- Fix the feet (17) under the Base (01) with bolts (A).
- Apply the protective felt (M) on bottom of the feet (17).
- Apply the plastic covers (B) on top of the bolts (A).

STEP 2

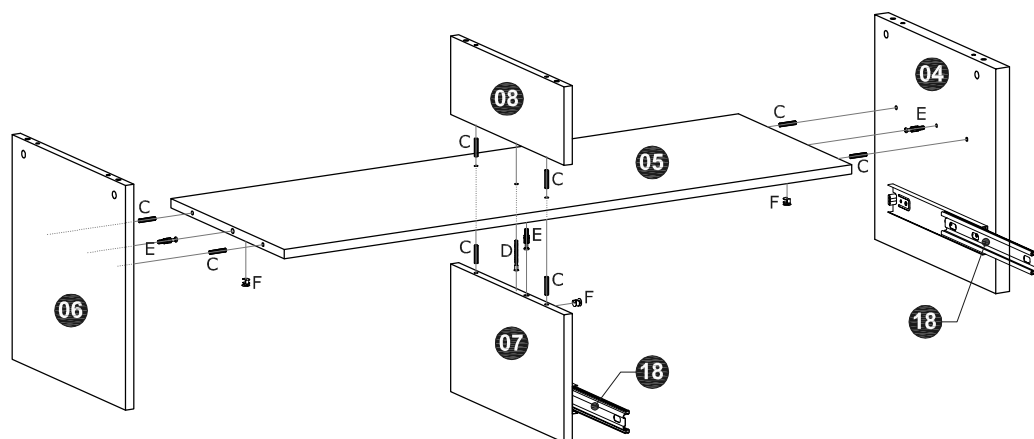


- Connect Partition (08) onto Shelf (05) with dowels (C) and bolt (D).
- Connect parts (04), (06) and (07) into the Shelf (05) with dowels (C) and Minifix hardware (E + F).

STEP 3

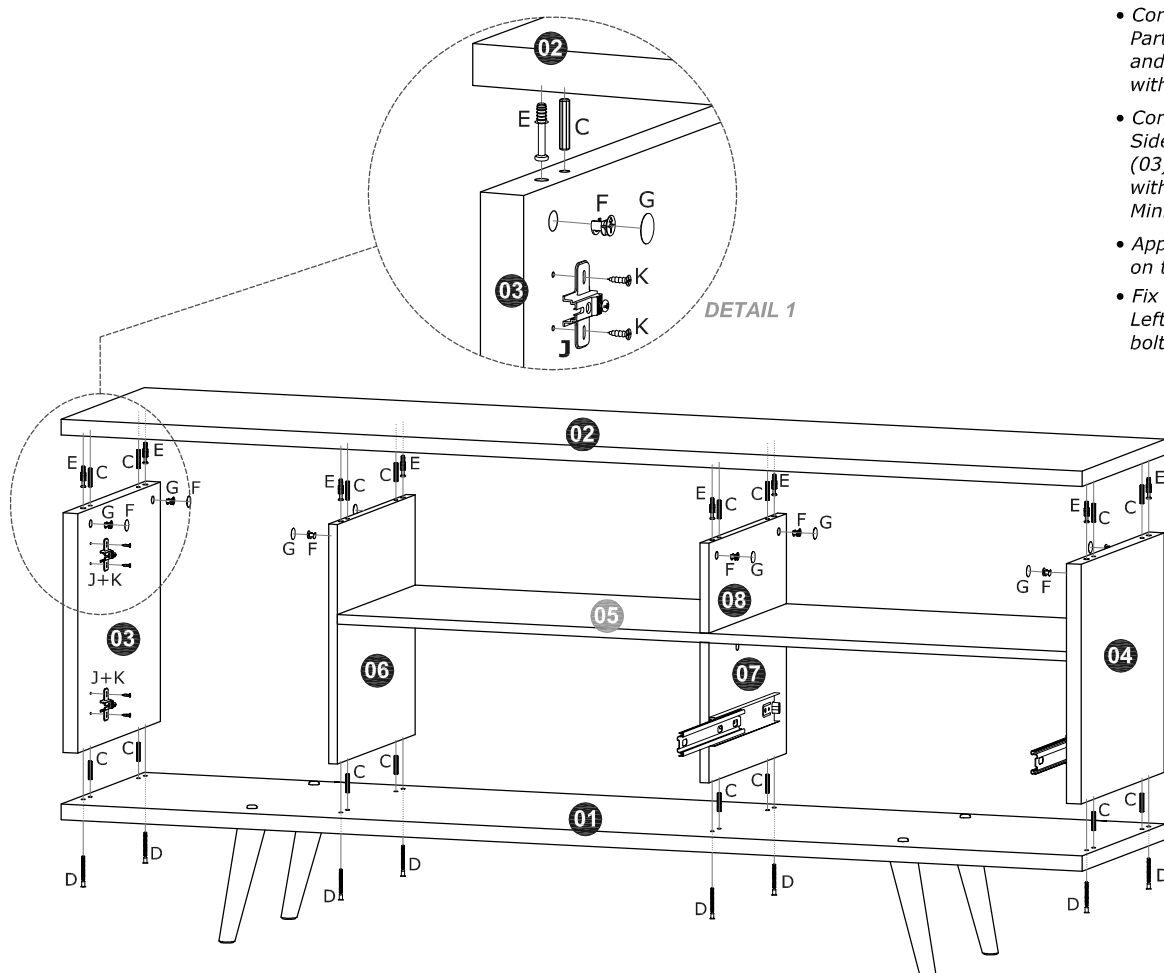


- Connect Side Panels and Partitions (03), (04), (06) and (07) onto Base (01) with dowels (C) and bolts (D).
- Connect Top Panel (02) onto Side Panels and Partitions (03), (04), (06) and (08) with dowels (C) and Minifix hardware (E + F).
- Apply adhesive covers (G) on the minifix hardware (F).
- Fix hinge connector in the Left Side Panel (03) with bolts (K), as in DETAIL 1.

STEP 4

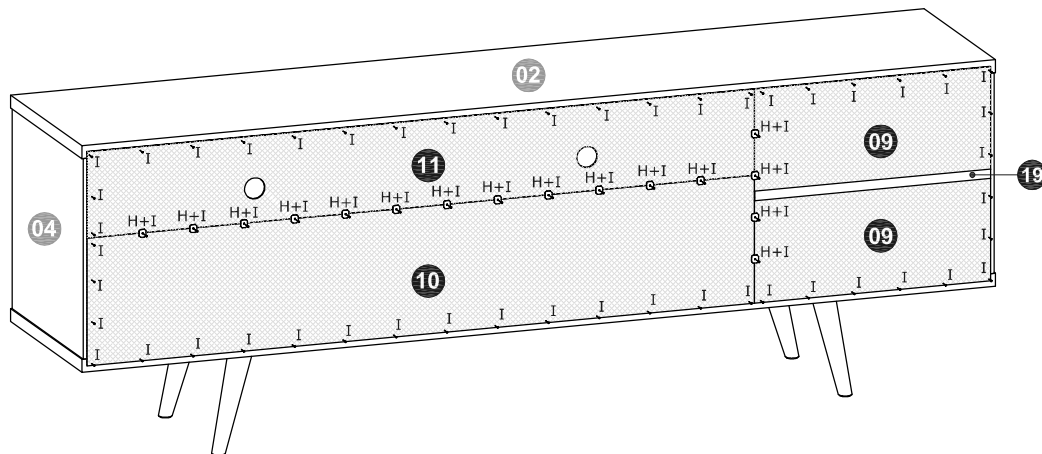

- Connect Back Panels (09), (10) and (11) with nails (I), metallic plates (H) and profile (19).


STEP 5

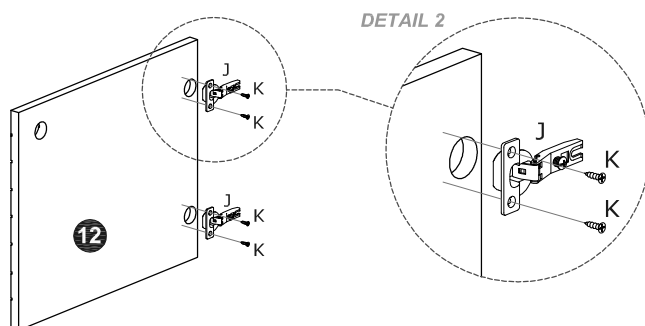

Preparing the Door:

- Fix the hinges (J) in the Door (12) with bolts (K).


STEP 6

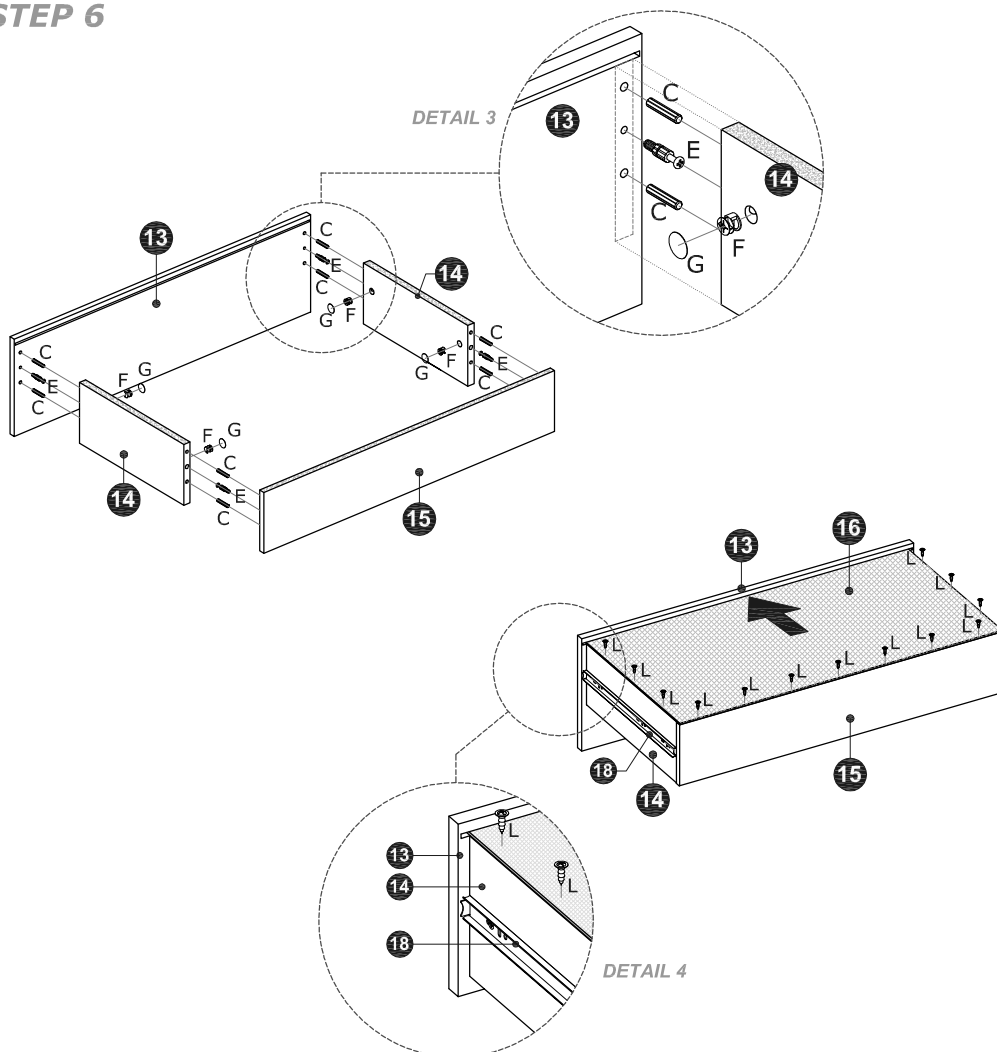

Preparing the Drawer:

- Connect parts (13), (14) and (15) with dowels (C) and Minifix hardware (E + F), as DETAIL 3.
- Apply adhesive covers (G) on the minifix hardware (F).
- Place the Base (16) into the channel in the Front (13), to align the edges with the Side panel (14), and apply bolts (L) to fix it.

STEP 7

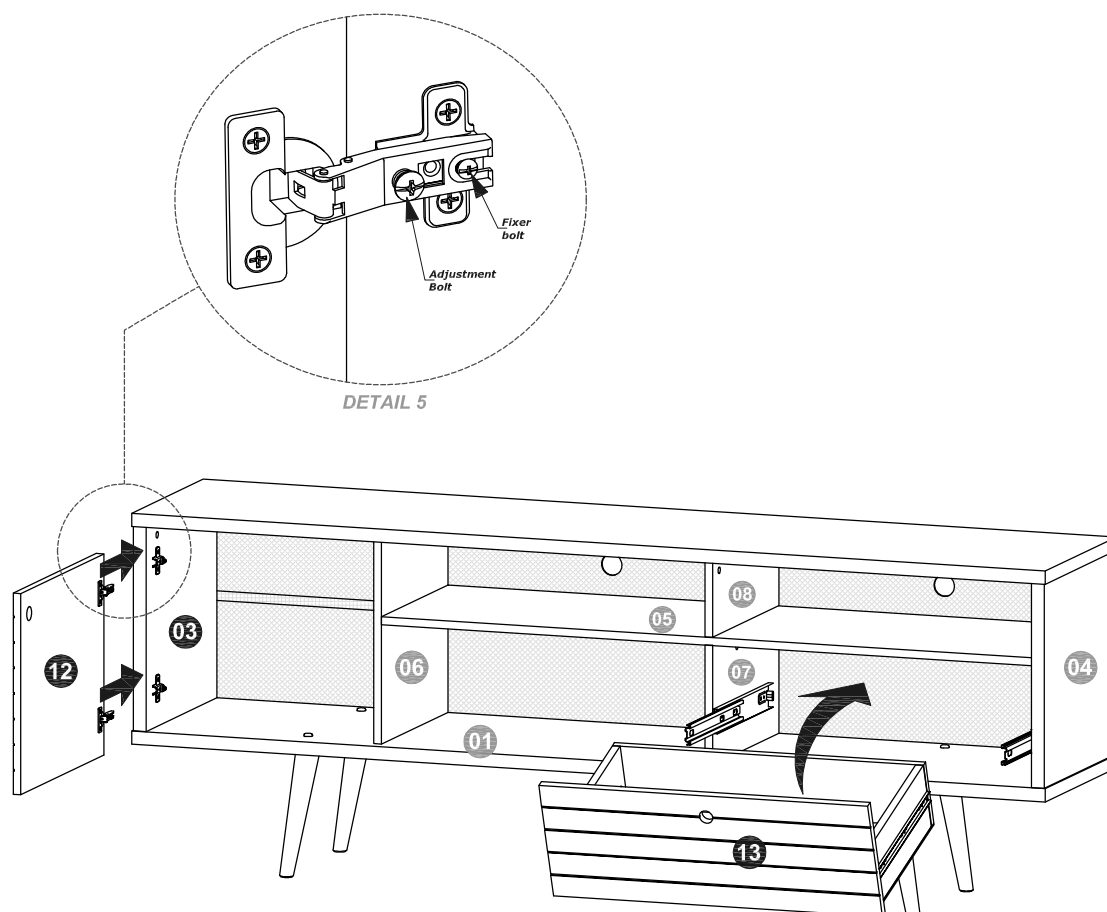

- Install the drawer, fitting it so that the metallic slides slide smoothly.

Installing the Door (12):

- Insert the hinges from the door (12) onto the connector on the Side Panel (03). The connector includes 2 bolts. Use the adjustment and fixer bolts on the insert to tighten, adjust and align the door.