

Please unscrew all hardware from cushion before assembly.
Por favor de destornillar todos los tornillos del cojín antes de ensamblar la silla.

- MODEL:





B8401
B8801
B7201
B7206
HS350

B7301
B8106
B8501
B7901
B7306
HS450


B7906
B7701
B7706
B7641
B7741
HS1050

B7501
B7506
B8101
B8506
B7601
B8316

B8306
B7806
B8811
B7801
RC01
B7551

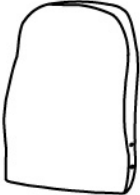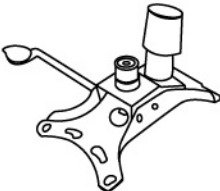(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Back	Seat	Right & Left Arm
(4)x 1	(5)x1	(6)x1
		
Mechanism	Gas Lift	Base
(7)x 5	(A)*8  M6*18 ARM SCREW (B)*8  ARM CAP (C)*4  M8*22 MECHANISM SCREW	
		
Casters		


1

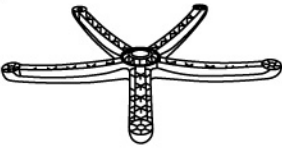


PUSH IN
 *You may use a mallet if necessary.




2

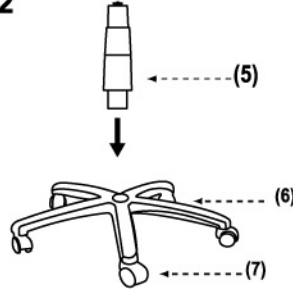


3

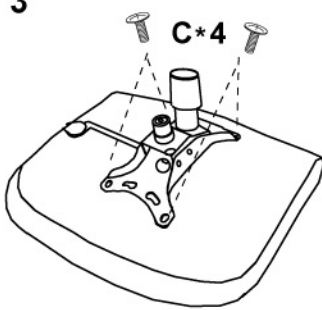


4

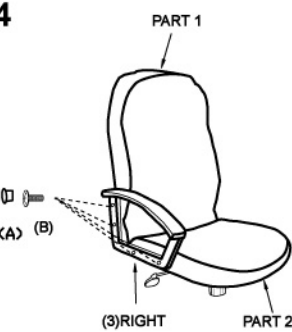


5

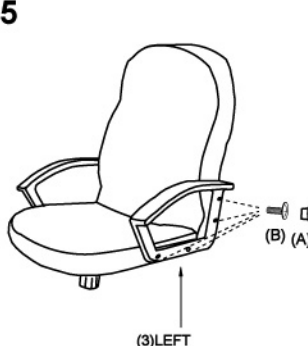

6

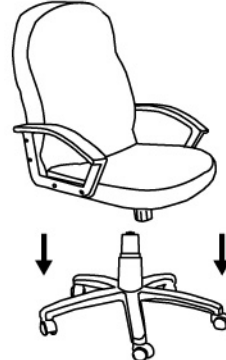

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

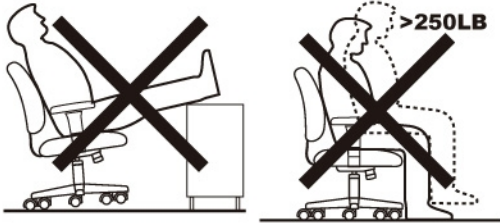

Customer Service Hotline: 1-800-593-1888
For further assembly instructions,
please visit our website at www.bosschair.com