

Please unscrew all hardware from cushion before assembly.

Por favor de destornillar todos los tornillos del cojín antes de assamblar la silla.

MODEL: 1616

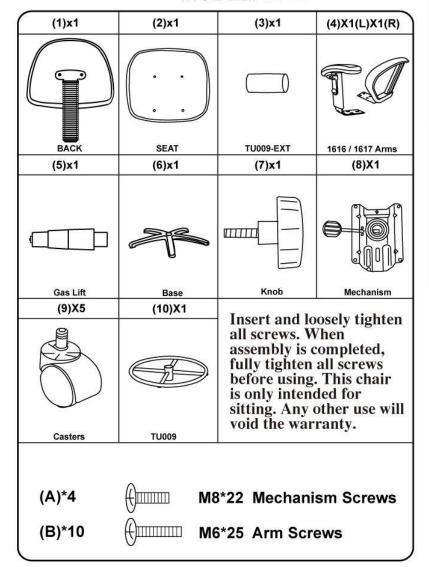

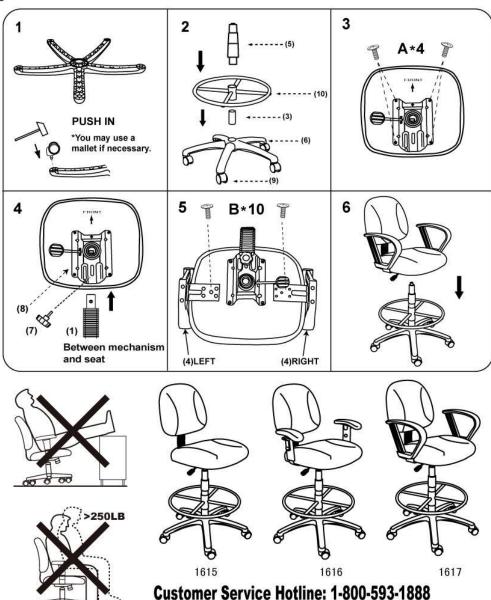

For further assembly instructions, please visit our website at www.bosschair.com