


ASSEMBLY INSTRUCTION

CHELSEA NOOK CORNER UNIT MODEL #90366WAL-01-KD-U

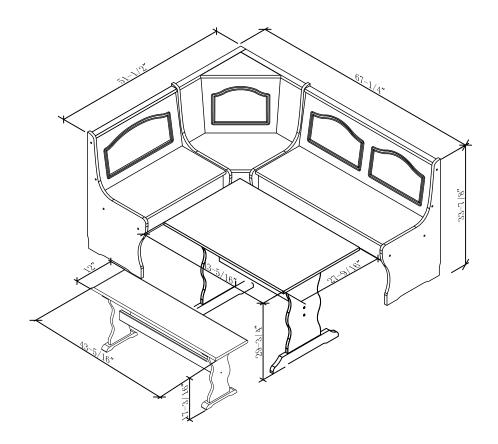

WE ARE HERE TO HELP!

WE DO OUR BEST TO INSURE THAT YOUR FURNITURE ARRIVES IN EXCELLENT CONDITION. IN THE EVENT THAT A PART IS DAMAGED OR MISSING, LINON HOME DECOR WILL BE HAPPY TO PROVIDE YOU WITH REPLACEMENT PARTS, AT NO CHARGE, WITHIN 30 DAYS OF PURCHASE, PROVIDING THE PARTS ARE AVAILABLE IN OUR WAREHOUSE AND THE ITEM PURCHASED IS PART OF OUR CURRENT INVENTORY. IN ORDER TO RECEIVE SPARE PARTS, AT NO CHARGE, YOU MUST PROVIDE PROOF OF PURCHASE WITHIN 30 DAYS.

IF YOU NEED ASSISTANCE WITH ASSEMBLY OR REPLACEMENT PARTS, PLEASE CALL LINON CUSTOMER SERVICE, PRIOR TO RETURNING THE ITEM TO THE STORE.

OUR OFFICE IS OPEN MONDAY - FRIDAY 9AM - 5PM, EASTERN STANDARD TIME. OUR TOLL FREE CUSTOMER SERVICE NUMBER IS: 1-800-262-1852. OR VISIT OUR WEB SITE <u>WWW.LINON.COM</u> TO ORDER SPARE PARTS AND FOR CARE INSTRUCTIONS ON YOUR NEWLY PURCHASED FURNITURE.

MADE IN CHINA
FOR LINON HOME DECOR PRODUCTS INC BY CH46



HARDWARE PACKAGE COUNT (CORNER BENCH)

OPEN HARDWARE PACKAGE ON A FLAT SURFACE COVERED WITH NEWS-PAPER. COUNT EACH PIECE OF HARDWARE TO MATCH THE QUANTITY NUMBER IN THE HARDWARE IDENTIFICATION COLUMN. CALL CUSTOMER SERVICE IF ANY PARTS ARE MISSING. FOLLOW THE NUMBER IDENTIFICATION WHEN READING THE ASSEMBLY DRAWING ① THROUGH ①

HARDWARE IDENTIFICATION

1		WOOD DOWEL 1-3/16"L (FULL SIZE)	LONG 8X30mm	36
2		SCREW 1-3/8"LONG (FULL SIZE)	5X35mm	4
3		PLASTIC PIN (FULL SIZE)		4
4		SCREW 1"LONG (FULL SIZE)	5X25mm	55
5		SCREW 2"LONG (FULL SIZE)	5X50mm	16
6		WOOD HOLE COVER (FULL SIZE)		8
11);;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;	WOOD SCREW (FULL SIZE)	3.5X15mm	8
12		METAL BRACKET (NOT TO SCALE)		4

IF ANY PARTS ARE MISSING OR DAMAGED IN THIS PACKAGE, LINON HOME DECOR WILL BE HAPPY TO PROVIDE YOU WITH REPLACEMENT PARTS, AT NO CHARGE, WITHIN 30 DAYS OF PURCHASE, PROVIDING THE PARTS ARE AVAILABLE IN OUR WAREHOUSE AND THE ITEM PURCHASED IS PART OF OUR CURRENT INVENTORY. IN ORDER TO RECEIVE SPARE PARTS, AT NO CHARGE, YOU MUST PROVIDE PROOF OF PURCHASE WITHIN 30 DAYS.

CALL US TOLL FREE AT 1-800-262-1852. OR VISIT OUR WEB SITE WWW.LINON.COM TO ORDER SPARE PARTS AND FOR CARE INSTRUCTIONS ON YOUR NEWLY PURCHASED FURNITURE.




SELECT THE LAYOUT OF THE BENCH

THIS ITEM IS REVERSIBLE AND CAN BE INSTALLED EITHER WITH THE LARGE BENCH AT YOUR LEFT HAND SIDE (LEFT SIDE INSTALLATION) OR WITH THE LARGE BENCH AT YOUR RIGHT HAND SIDE (RIGHT SIDE INSTALLATION).


THIS INSTRUCTION IS MADE FOR RIGHT HAND INSTALLATION.

IF YOU SELECT THE LEFT HAND INSTALLATION THEN YOU HAVE TO SWITCH ALL THE PARTS LOCATED AT RIGHT PART (I,K,L,M AND O) TO LEFT PART AND THE PARTS LOCATED AT LEFT PART (B,D,E,G AND P) TO RIGHT PART.

ATTENTION: OUTSIDE LEGS F AND H PLUS CENTRAL PIECES (A,C,J,N,Q AND R) REMAIN UNCHANGED.

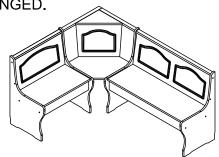

RIGHT SIDE INSTALLATION

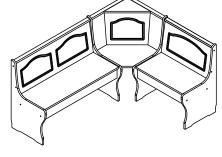


LEFT SIDE INSTALLATION

NOTE: BEFORE STARTING THE ASSEMBLY PROCESS, ALL PARTS SHOULD BE SEPARATED ACCORDING TO THE ITEM THEY BELONG TO, FOR BETTER IDENTIFICATION OF ALL PARTS, PLEASE USE PART IDENTIFICATION LIST BELOW FOR THE CORNER BENCH. THE PART IDENTIFICATION LIST IS SEPARATE ON EACH OF THE INSTRUCTIONS FOR THE NOOK, THE BENCH AND THE TABLE.

PARTS IDENTIFICATION

- A- MIDDLE LEGS(RIGHT AND LEFT) X2
- B- SINGLE BENCH FRONT AND BACK RAILS X2
- C- CENTER BACK PANEL
- D- SINGLE BENCH STORAGE BOTTOM
- E- SINGLE BENCH BACK REST
- F-LEFT OUTSIDE LEG
- G- SINGLE BENCH SEAT COVER
- H- RIGHT OUTSIDE LEG
- I DOUBLE BENCH FRONT AND BACK RAILS X2


- K- DOUBLE BENCH STORAGE BOTTOM
- L- DOUBLE BENCH BACK REST
- M- DOUBLE BENCH SEAT COVER
- N- CORNER SHELF
- O- TOP RAIL FOR DOUBLE BACK REST
- P-TOP RAIL FOR SINGLE BACK REST
- Q-RIGHT CORNER BACK PANEL
- R-LEFT CORNER BACK PANEL
- S-RAIL X6
- T- STRETCHER X5

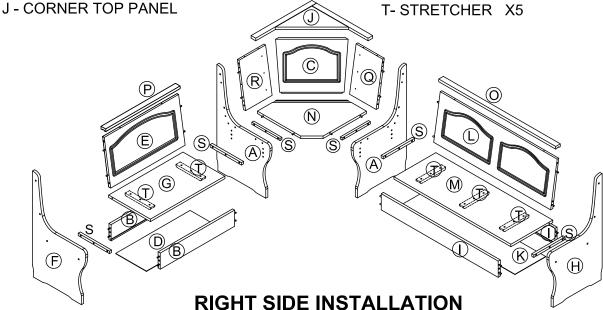



STEP 1)


1.1 INSERT (32) WOOD DOWELS INTO HOLES LOCATED ON EDGES OF THE PART (I,B,E,L,Q,R, N); (4) PLASTIC PIN INTO HOLES LOCATED ON EDGES OF THE PART (G,M); (33) SCREW INTO HOLES LOCATED ON EDGES OF THE PARTS (A,F,H,M,G). AS SHOWN IN FIGURE 1:

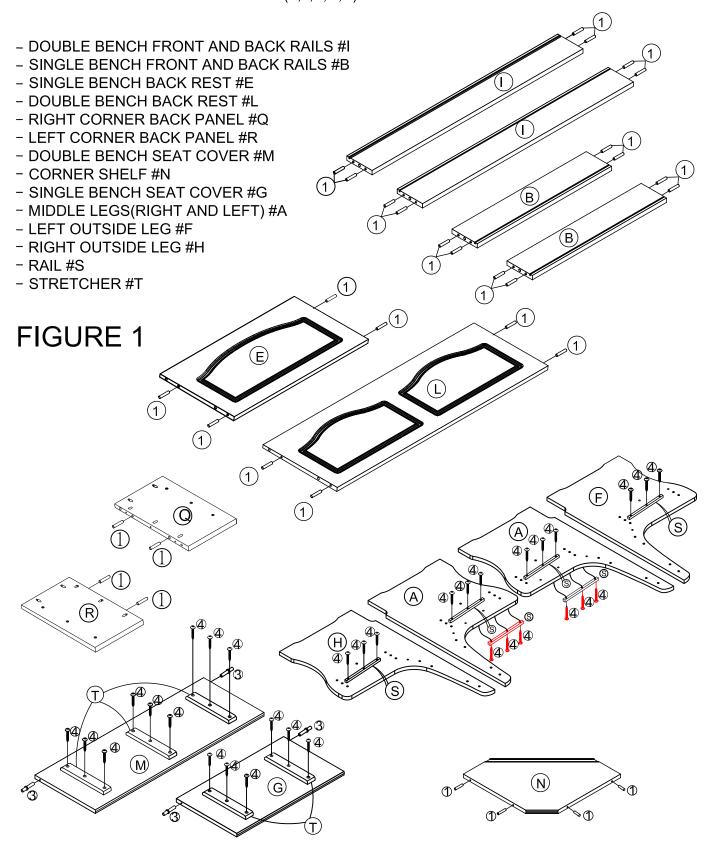



STEP 2)


- 2.1 PLACE MIDDLE LEG #A USING (02) SCREWS 5 ON FLOOR. ATTACH SINGLE BENCH FRONT AND BACK RAILS #B (2X) TO MIDDLE LEG #A, INSERT (02) WOOD DOWEL 1 INTO HOLES LOCATED ON THE MIDDLE LEG #A AND LEFT OUTSIDE LEG #F, AS SHOWN IN FIGURE 2.1
- 2.2 INSERT SINGLE BENCH STORAGE BOTTOM #D THROUGH GROOVE LOCATED ON SINGLE BENCH FRONT AND BACK RAILS #B.AS SHOWN IN FIGURE 2.2
- 2.3 WITH MIDDLE LEG #A PLACED ON FLOOR ATTACH SINGLE BENCH BACK REST #E TO MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USE (02) SCREWS (5) AND PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO SECURE, AS SHOWN IN FIGURE 2.3
- 2.4 REMEMBER THAT LEG #A IS NOT SECURED IN ITS PLACE YET SO HOLDING IT TIGHT TO PARTS #E,#B AND #D, INSERT THE SINGLE BENCH SEAT COVER #G THROUGH GROOVE LOCATED ON SINGLE BENCH BACK RAIL #B AND SINGLE BENCH BACK REST #E, THEN ATTACH LEG #F TO PIECES PREVIOUSLY ATTACHED ON MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USE (04) SCREWS (5) AND PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO SECURE, AS SHOWN IN FIGURE 2.4

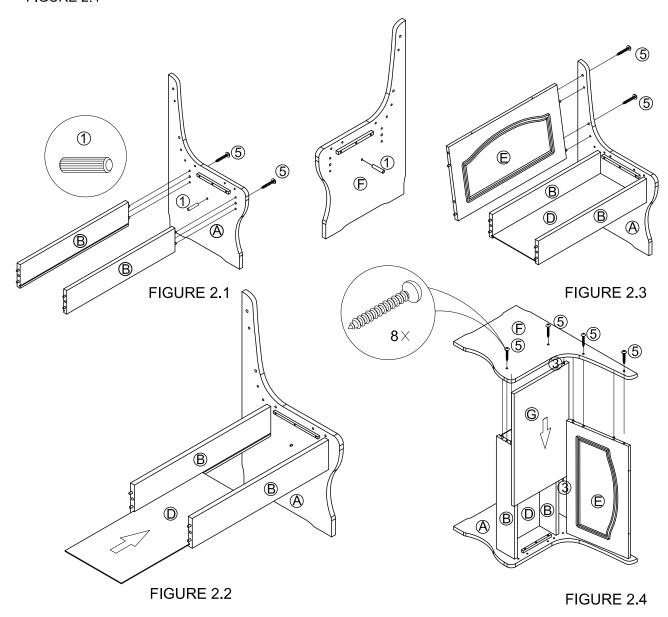



STEP 3)

- 3.1 PLACE MIDDLE LEG #A ON FLOOR. ATTACH DOUBLE BENCH FRONT AND BACK RAILS #I TO MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USING (02) SCREWS SAND PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO SECURE, INSERT (02) WOOD DOWELS INTO HOLES LOCATED ON THE MIDDLE LEG RIGHT #A AND RIGHT OUTSIDE LEG #H. AS SHOWN IN FIGURE 3.1
- 3.2 INSERT DOUBLE BENCH STORAGE BOTTOM #K THROUGH GROOVE LOCATED ON DOUBLE BENCH FRONT AND BACK RAILS #I, AS SHOWN IN FIGURE 3.2
- 3.3 WITH MIDDLE LEG #A PLACED ON FLOOR. ATTACH DOUBLE BENCH BACK REST #L TO MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USING (02) SCREWS⑤AND PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), AS SHOWN IN FIGURE 3.3
- 3.4 REMEMBER THAT LEG #A IS NOT SECURED IN ITS PLACE YET SO HOLDING IT TIGHT TO PARTS #L,#I AND #K, INSERT THE DOUBLE BENCH SEAT COVER #M THROUGH GROOVE LOCATED ON DOUBLE BENCH BACK RAIL #I AND DOUBLE BENCH BACK REST #L, THEN ATTACH LEG #H TO PIECES PREVIOUSLY ATTACHED ON MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USING (04) SCREWS⑤AND PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), AS SHOWN IN FIGURE 3.4

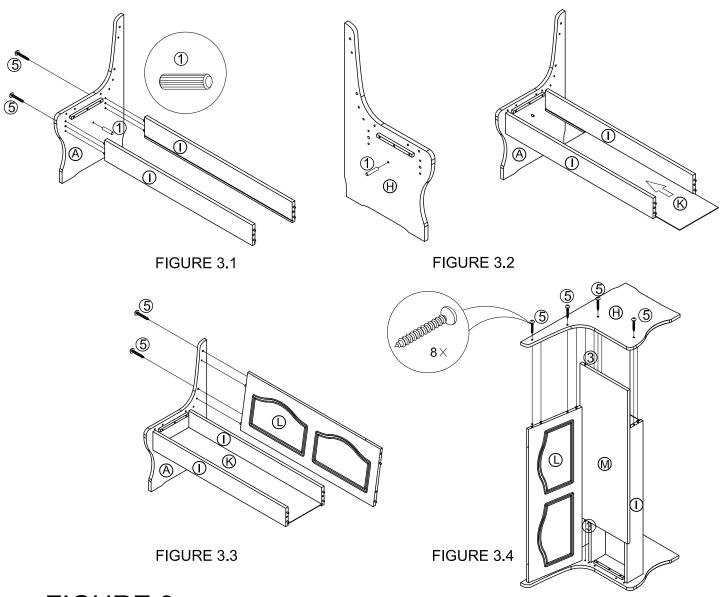



STEP 4)

- 4.1 ATTACH CORNER SHELF #N TO MIDDLE LEGS #A (RIGHT AND LEFT), INSERTING WOOD DOWELS LOCATED ON CORNER SHELF EDGE INTO HOLES LOCATED ON SIDE OF MIDDLE LEGS. SECURE WITH (04) SCREWS@USING PHILLIPS HEAD SCREWDRIVER(NOT PROVIDED). AS SHOWN IN FIGURE 4.
- 4.2 INSERT (08) WOOD HOLE COVERS (6) INTO HOLES LOCATED ON LEFT AND RIGHT OUTSIDE LEGS #F AND #H. AS SHOWN IN FIGURE 4.


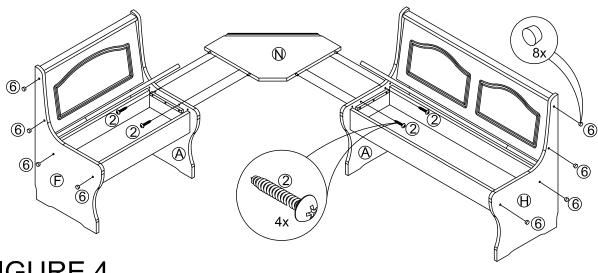


FIGURE 4

STEP 5)


- 5.1 ATTACH LEFT CORNER BACK PANELS #R AND RIGHT CORNER BACK PANEL #Q TO SIDE OF MIDDLE LEGS #A (RIGHT AND LEFT).
- 5.2 SECURE USING (06) SCREWS (AND PHILLIPS HEAD SCREWDRIVER(NOT PROVIDED), AS SHOWN IN FIGURE 5.



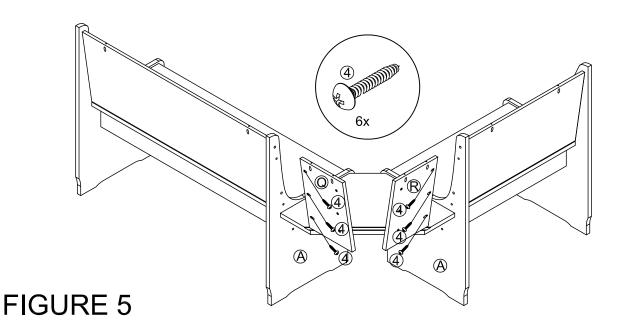


STEP 6)

6.1 CONNECT CENTER BACK PANEL #C WITH CORNER BACK PANEL #Q AND #R. INSERTING (06) SCREWS ④THROUGH HOLES LOCATED UNDERNEATH OF CORNER BACK PANEL #Q AND #R REACHING THE CENTER BACK PANELS #C. THEN INSERTING (02) SCREW ④THROUGH THE PILOT HOLE YOU WILL FIND UNDERNEATH OF CORNER SHELF #N INTO THE CORNER BACK PANEL #Q AND #R, AS SHOWN IN FIGURE 6.

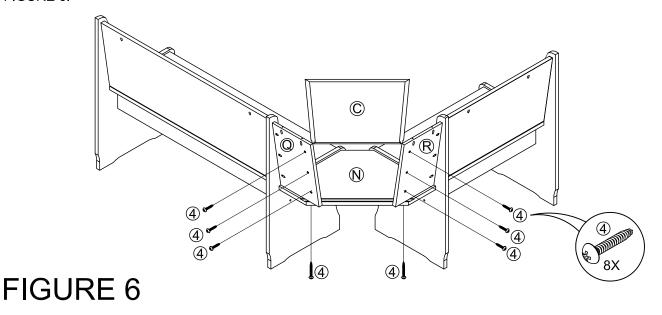

STEP 7)

- 7.1 ATTACH CORNER TOP PANEL #J TO CENTER BACK PANEL #C AND TO RIGHT AND LEFT CORNER BACK PANEL #Q AND #R USING (04) SCREWS (AND PHILLIP HEAD SCREWDRIVER (NOT PROVIDED). AS SHOWN IN FIGURE 7.
- 7.2 ATTACH TOP RAIL FOR SINGLE BACK REST #P TO UPPER EDGE OF SINGLE BENCH BACK REST #E, AND ATTACH TOP RAIL FOR DOUBLE BACK REST #O TO UPPER EDGE OF DOUBLE BACK REST #L USING PRE-DRILLED LOCATED ON BACK OF PANELS #E AND #L AS GUIDE, WITH (04) SCREWS 4 USING PHILLIPS HEAD SCREWDRIVER (NOT PROVIDE), AS SHOWN IN FIGURE 7.

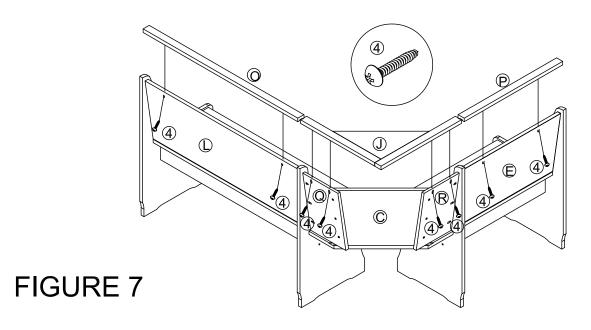



STEP 8)

USING (04) METAL BRACKET 12 AND (08) WOOD SCREWS 11 TO SECURE CONNECTION OF THE CORNER BACK PANEL (#17/#18) AND MIDDLE LEGS (#1), AS SHOWN IN FIGURE 8.


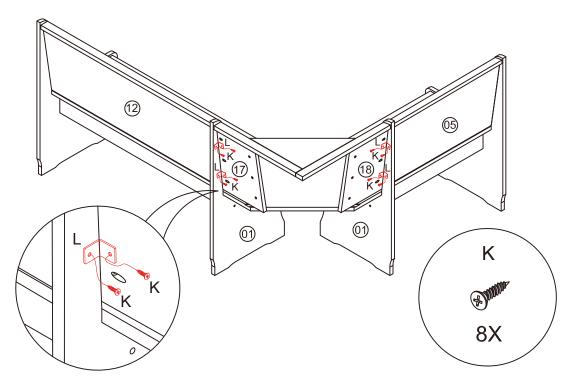


FIGURE 8

USING HELP PLACE THE CORNER BENCH IN ITS FINAL POSITION IN WHICH IT WILL BE USED.



PERIDIOCALLY CHECK ALL CONNECTIONS FOR TIGHTNESS AND FURTHER SECURE IF NEEDED

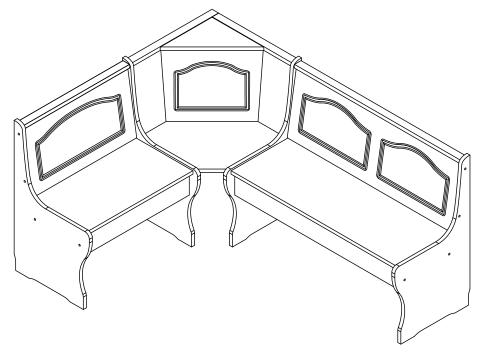

LIMITED 6 MONTHS WARRANTY WHAT IS COVERED

This product is covered under our manufacturer's 6 months limited warranty (Linon Home Décor Products). To ensure your complete satisfaction, this warrants to the original purchaser that the Linon supplied item is free from defects in material and workmanship, as of the date of purchase, and that it will, under normal use and proper care, remain so for six months after the date of purchase.

Replacement of missing or initially defective parts will be sent, at no charge, for a period of 30 days from the date of purchase with valid proof of purchase providing the parts are available in our warehouse and the item purchased is part of our current inventory.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from the customer service center. Labor and material charges to remove or replace parts under this warranty are not covered.

This warranty does not cover: Furniture used for commercial purposes, failures caused by improper installation assembly or by improper care, unreasonable or abusive use, freeze damage, acts of God, rust, purchased parts or return freight and packaging charges. Proof of purchase (dated register receipt) is required for warranty claims.

HOW TO OBTAIN SERVICE

For further information, please contact our customer service department, c/o Linon Home Décor Products, Inc., between 9:00 AM and 5:00 PM Eastern Standard Time, Monday through Friday:

LINON HOME DÉCOR PRODUCTS, INC., CUSTOMER SERVICE DEPARTMENT

- 1) Email address: consumersupport@linon.com
- 2) Toll free number: 1 800 262 1852
- 3) Visit our web site <u>www.Linon.com</u> to order spare parts and for care instructions on your newly purchased furniture.