



original chain

Step 1: Please take out the buckle and screw collarloop from original chain as shown in picture above.



Step 2: Please choose the reasonable chain length that you want to keep, then use pliers and other tools to take apart the chain.



Step 3: Please remove the spare links.




Step 4: Please connect the buckle with chain and screw collarloop together. The installation is finished.

Remarks: After you shorten the chain, we suggest that you twist the spare wires along the chain.



B204

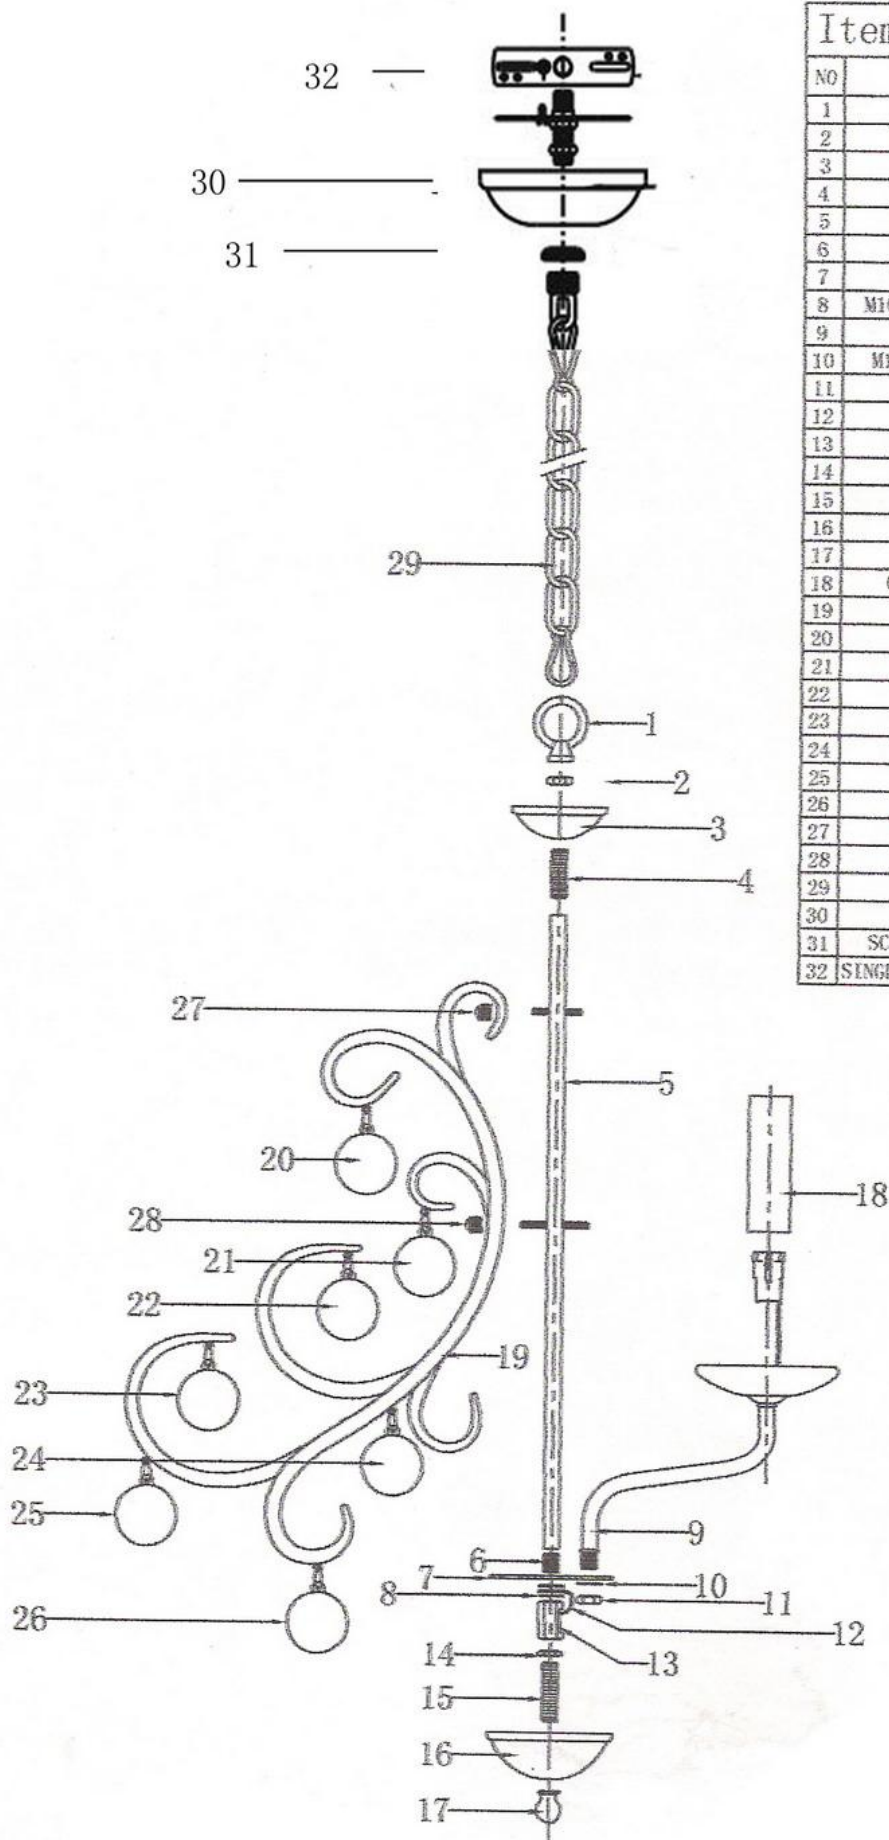

Item number B204

NO	NAME	Quantity
1	LOOP	1PCS
2	M10 HEX NUT	1PCS
3	CAP	1PCS
4	M10 NIPPLE	1PCS
5	ROUND TUBE	1PCS
6	M10 NIPPLE	1PCS
7	FONT	1PCS
8	M10 RUBBER WASHER	2PCS
9	ARM	5PCS
10	M10 RUBBER WASHER	5PCS
11	M10 HEX NUT	5PCS
12	GROUND WIRE	3PCS
13	HICKEY	2PCS
14	M10 HEX NUT	6PCS
15	M10 NIPPLE	1PCS
16	CAP	2PCS
17	FINIAL	1PCS
18	CANDLE SLEEVE	5PCS
19	ARM	5PCS
20	CRYSTAL	5PCS
21	CRYSTAL	5PCS
22	CRYSTAL	5PCS
23	CRYSTAL	5PCS
24	CRYSTAL	5PCS
25	CRYSTAL	5PCS
26	CRYSTAL	5PCS
27	LATHE MADE	5PCS
28	LATHE MADE	5PCS
29	CHAIN	1PCS
30	CANOPY	1PCS
31	SCREW COLLAR LOOP	1PCS
32	SINGLE CROSS MOUNTING	1PCS