




original chain

Step 1: Please take out the buckle and screw collarloop from original chain as shown in picture above.

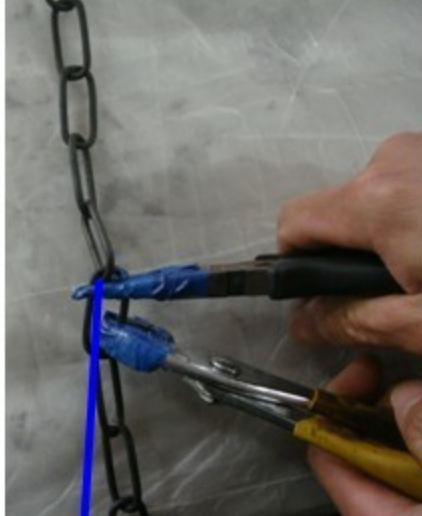

Step 2: Please choose the reasonable chain length that you want to keep, then use pliers and other tools to take apart the chain.



Step 3: Please remove the spare links.




Step 4: Please connect the buckle with chain and screw collarloop together. The installation is finished.

Remarks: After you shorten the chain, we suggest that you twist the spare wires along the chain.



B204

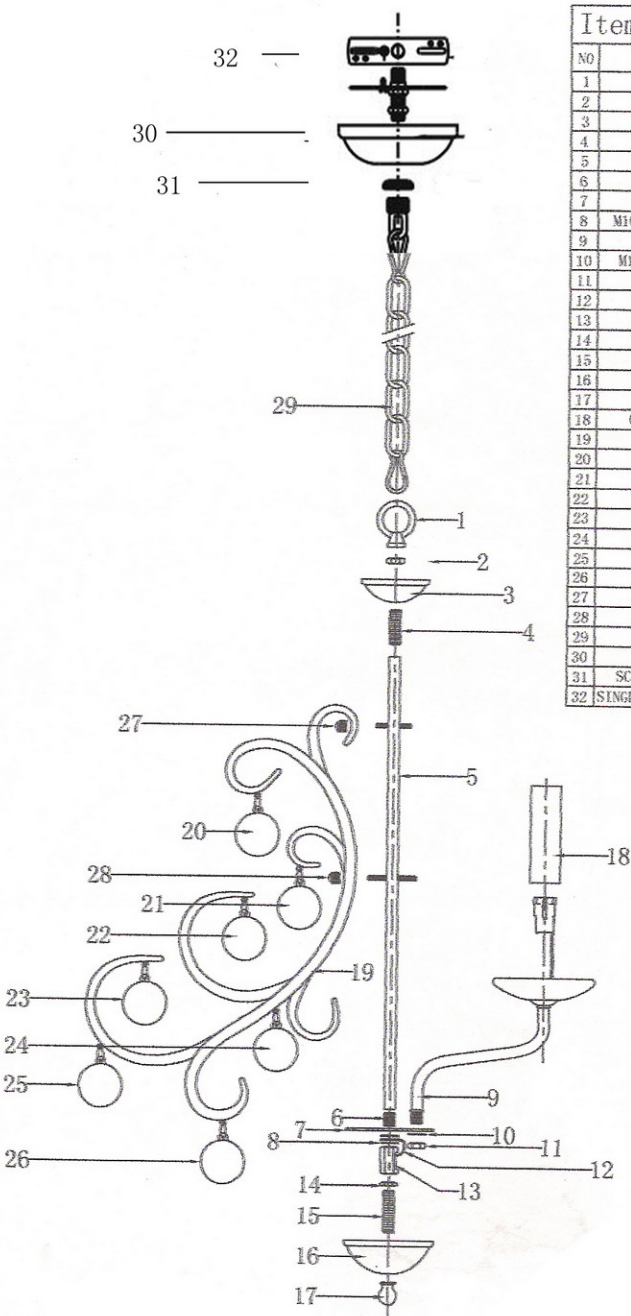

| Item number B204 | | |
|------------------|-----------------------|----------|
| NO | NAME | Quantity |
| 1 | LOOP | 1PCS |
| 2 | M10 HEX NUT | 1PCS |
| 3 | CAP | 1PCS |
| 4 | M10 NIPPLE | 1PCS |
| 5 | ROUND TUBE | 1PCS |
| 6 | M10 NIPPLE | 1PCS |
| 7 | FONT | 1PCS |
| 8 | M10 RUBBER WASHER | 2PCS |
| 9 | ARM | 5PCS |
| 10 | M10 RUBBER WASHER | 5PCS |
| 11 | M10 HEX NUT | 5PCS |
| 12 | GROUND WIRE | 3PCS |
| 13 | HICKEY | 2PCS |
| 14 | M10 HEX NUT | 6PCS |
| 15 | M10 NIPPLE | 1PCS |
| 16 | CAP | 2PCS |
| 17 | FINIAL | 1PCS |
| 18 | CANDLE SLEEVE | 5PCS |
| 19 | ARM | 5PCS |
| 20 | CRYSTAL | 5PCS |
| 21 | CRYSTAL | 5PCS |
| 22 | CRYSTAL | 5PCS |
| 23 | CRYSTAL | 5PCS |
| 24 | CRYSTAL | 5PCS |
| 25 | CRYSTAL | 5PCS |
| 26 | CRYSTAL | 5PCS |
| 27 | LATHE MADE | 5PCS |
| 28 | LATHE MADE | 5PCS |
| 29 | CHAIN | 1PCS |
| 30 | CANOPY | 1PCS |
| 31 | SCREW COLLAR/LOOP | 1PCS |
| 32 | SINGLE CROSS MOUNTING | 1PCS |